



WARNINGS AND CAUTIONS

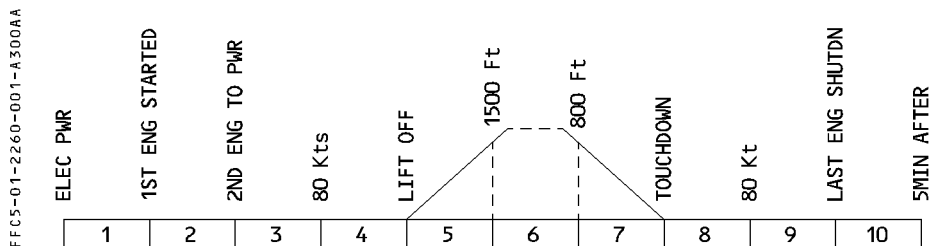

E / WD: FAILURE TITLE conditions	AURAL WARNING	MASTER LIGHT	SD PAGE CALLED	LOCAL WARNINGS	FLT PHASE INHIB	
AP OFF Involuntary disconnection (refer to 1.22.30)	CAVALRY CHARGE	MASTER WARN	NIL	NIL	NIL	
A / THR OFF Involuntary disconnection (refer to 1.22.30)	SINGLE CHIME	MASTER CAUT			1,4,8,10	
WINDSHEAR (NO ECAM message)	SYNTHETIC VOICE "WINDSHEAR" repeated 3 times	NIL		WINDSHEAR on PFDs	2,3,4 8,9	
FM1 or 2 FAULT	NIL			MAP NOT AVAIL on related ND	3,4,5,8	
FM1 + 2 FAULT	SINGLE CHIME	MASTER CAUT		MAP NOT AVAIL on NDs		
A / THR ENG 1 (2) (3) (4) OFF Autothrust is inoperative on one engine.				NIL		3,4,5,8
A/THR LIMITED A/THR is active, the thrust levers are not in the CLB or MCT detent.						all except 6
FCU FAULT Loss of two channels, or complete loss of the FCU.						4,5
REAC W/S DET FAULT Windshear detection function is inoperative.						1,3,4,5 8,10
LOW ENERGY (No ECAM message). Available between 100 and 2000 feet. Thrust must be increased.	SYNTHETIC VOICE "SPEED" repeated 3 times	NIL		NIL	1 to 4 8 to 10	
— ILS Capability downgrade. Conditions required for CAT 3/CAT 2 are no longer fulfilled. (Refer to FCOM 04.05.70). — Mode reversions (refer to 1.22.30).	TRIPLE CLICK				2, 3, 4 5, 8, 9 10	
AUTOLAND (No ECAM message) only available below 200 feet.	NIL	AUTO LAND (red) on glareshield			1, 2, 3, 4, 5, 7, 8, 9, 10	
FM/IR POS DISAGREE msg. A discrepancy is detected between any FM position and any IRS position.	SINGLE CHIME	MASTER CAUT				

WARNINGS AND CAUTIONS

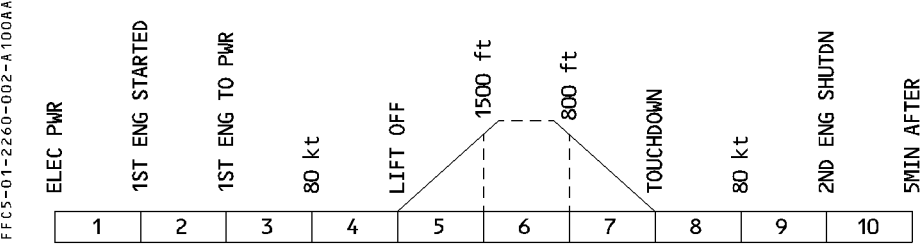

E / WD: FAILURE TITLE conditions	AURAL WARNING	MASTER LIGHT	SD PAGE CALLED	LOCAL WARNING	FLT PHASE INHIB
When GPS primary is lost, the message "GPS PRIMARY LOST" is displayed on ND and PFD.	TRIPLE *	NIL	NIL	ND/MCDU message	2, 3, 4, 5, 8, 9, 10
"NAV FMS/GPS POS DISAGREE" when the FMS 1 or 2 position differs by more than 0.5 minute of latitude or longitude from the GPS 1 or 2 position, this message comes up on ECAM.	SINGLE CHIME	MASTER CAUT		NIL	1, 10

* Only during a non precision approach.

MEMO DISPLAY

FM SWTG is displayed in green, when the FM switching sel is on the BOTH ON 1(2) position.