


CONTROLS AND INDICATORS

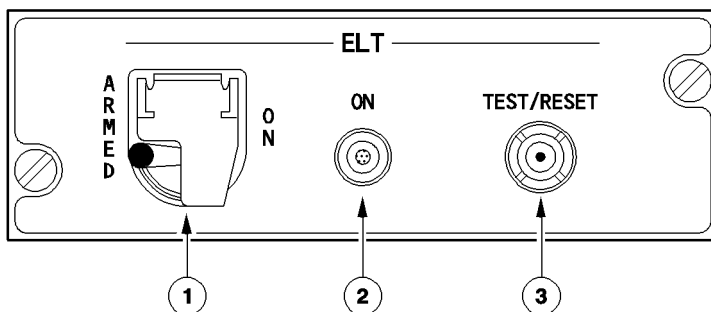

FFCS-01-2335-001-A100AA

① ELT sw

The guard keeps this switch in the ARMED position.

ARMED : In case of impact, the Emergency Locator Transmitter (ELT) transmits an emergency signal (on 121.5, 243 and 406.025 Mhz).

ON : The ELT transmits an emergency signal.

② ON lt

This light comes on amber when the emergency signal is transmitted or during ELT autotest.

③ TEST/RESET pb

Pressing this pushbutton starts the ELT auto test.

Note : If the ELT is triggered by an impact in ARMED mode, pressing this pushbutton resets the ELT and stops the signal transmission.