


DESCRIPTION

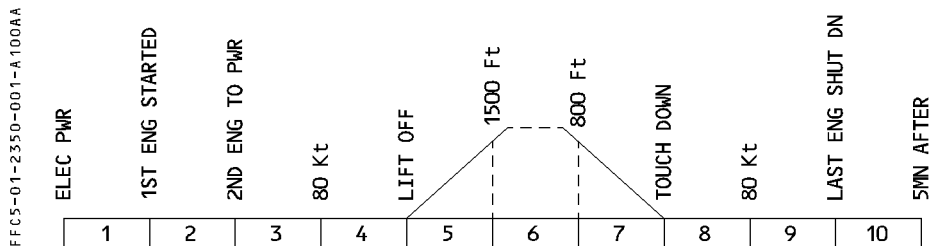

E / WD: FAILURE TITLE conditions	AURAL WARNING	MASTER LIGHT	SD PAGE CALLED	LOCAL WARNING	FLT PHASE INHIB
VHF 1 (2) (3) EMITTING HF 1 (2) EMITTING Transceiver emitting more than 60 s	SINGLE CHIME	MASTER CAUT	NIL	NIL	3,4,5
CIDS 1 + 2 FAULT Total loss of CIDS					
CIDS PA FAULT Loss of passenger address part					
ACARS 1 (2)(1+2) FAULT 					
SATCOM FAULT 	NIL	NIL			1*,3, 4,5 7, 8, 10*
Telephone and ACARS transmissions are lost.	SINGLE CHIME	MASTER CAUT			3,4,5, 7,8
SATCOM DATA FAULT 					
ACARS transmissions via SATCOM are lost. Telephone transmissions are still available.					
SATCOM VOICE FAULT 					
Telephone transmissions are lost, ACARS is still transmitted via SATCOM.					3,4,5 7,8
VHF3 DATA FAULT 					

* The SATCOM FAULT message is inhibited in flight phases 1 and 10, when the IRS are not aligned.

	COMMUNICATIONS WARNINGS AND CAUTIONS		1.23.50	P 2
			SEQ 102	REV 17

MEMO DISPLAY

- Displays “SEAT BELTS” and “NO SMOKING” messages in green, when the corresponding sign on the overhead panel is on.
- Displays “AUDIO SWTG” in green, if the AUDIO SWITCHING selector is not on NORM.
- Displays “PA IN USE” (optional) in green, during passenger address operation.
- Displays “VIDEO IN USE” (optional) in green, during video operation in the cabin.
- Displays “CABIN READY” in green (pulses for 10 seconds, then steady), when a signal is sent from the cabin crew, and in the takeoff and landing memo. ◀
- Displays “TAXI CAMERA” in green, when one of the taxi aid camera system rotary selectors is set to the TAXI position.

In addition, if ACARS is installed, the display shows :

- ACARS VHF 3, VOICE in green, flashes continuously, if VHF 3 is operating in voice mode and ACARS communication is interrupted.
- ACARS MSG in green, if ACARS has received a message from the ground, and a continuous buzzer sounds.
- ACARS STBY in green, if ACARS communications between the aircraft and the ground are lost.
- ACARS CALL in green, when an uplink message requests voice communication.
- ACARS ALERT in green, when an uplink alert message has been received.

If ATSU is installed the displays shows :

- VHF3 VOICE in green, flashes for 10 seconds if VHF3 is operating in voice mode.
- HF : VOICE in green, flashes for 10 seconds if both HF (◀) are operating in voice mode.
- GND HF DATA in green, if HF (◀) is operating in data mode on ground.

If SATCOM is installed, the display shows “SATCOM ALERT” in green, when a message with a priority level below 4 is received from the ground.