


WARNINGS AND CAUTIONS

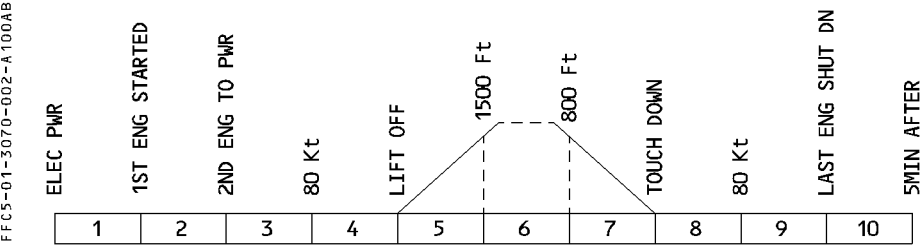

EWD : FAILURE TITLE conditions	AURAL WARNING	MASTER LIGHT	SD PAGE CALLED	LOCAL WARNINGS	FLT PHASE INHIB
ICE DETECTED* ice detected one time by either detector and in FLT ≥ 1500 ft and TAT < 10°C and ENG A. ICE pb at OFF	SINGLE CHIME	MASTER CAUT	NIL	NIL	3,4,5 7,8
SEVERE ICE DETECTED ice detected ten times by either detector and in FLT ≥ 1500 ft and TAT < 10°C and WING A. ICE pb at OFF					
ICE DETECT FAULT Ice detection system is lost					

* Message disappears 100 seconds after selecting the engine or wing anti ice pushbutton ON if the flight crew has not cleared it by pressing the CLR key.