


WARNINGS AND CAUTIONS

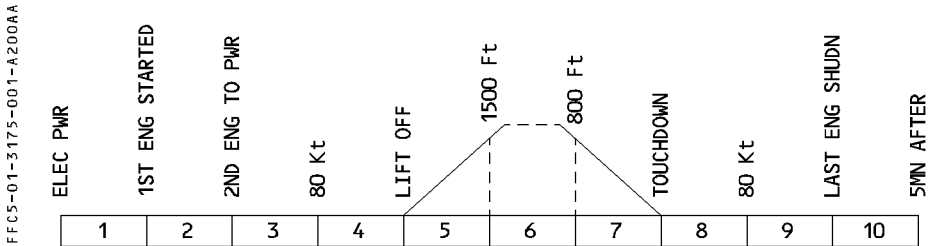

E / WD: FAILURE TITLE conditions	AURAL WARNING	MASTER LIGHT	SD PAGE CALLED	LOCAL WARNINGS	FLT PHASE INHIB			
EIS DMC 1(2)(3) FAULT	SINGLE CHIME	MASTER CAUT	NIL	NIL	4, 5, 7, 8			
DISPLAY DISCREPANCY (EWD, SD, PFD or ND)				Message on related DU	3, 4, 5, 7, 8			
FWC 1(2) FAULT	NIL	NIL		NIL	NIL	NIL		
SDAC 1(2) FAULT						4, 5, 7, 8		
FWC 1+2 FAULT						3, 4, 5, 7, 8		
SDAC 1+2 FAULT	SINGLE CHIME	MASTER CAUT				3 to 8		
DFDR FAULT	NIL	NIL				NIL	NIL	1, 2, 3, 4, 7, 8, 10
FDIU FAULT								3 to 9
ECP FAULT								
OEB/FWC DISCREPANCY FWC1 and FWC2 do not have the same OEBs listed in their OEB reminder database.	SINGLE CHIME	MASTER CAUT				NIL	NIL	
TAIL STRIKE Contact of the rear fuselage with the ground detected								
TAIL STRIKE DET FAULT	NIL	NIL				NIL	NIL	

MEMO DISPLAY

- The ECAM SWTG message is displayed in green, when the ECAM SWTG DMC selector is not in the AUTO position.
- The EFIS SWTG message is displayed in green, either when the CAPT or the F/O's EFIS DMC selector are not in the NORM position.