


WARNINGS AND CAUTIONS

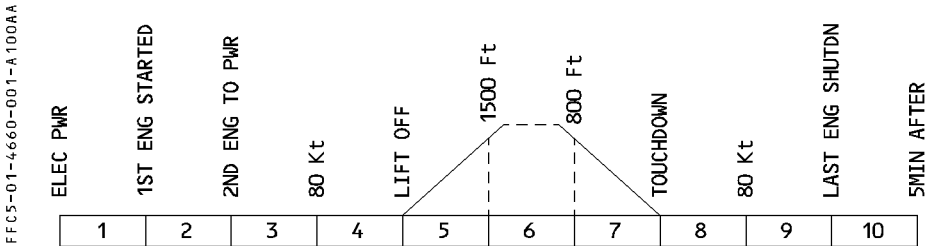

E / WD : FAILURE TITLE conditions	AURAL WARNING	MASTER LIGHT	SD PAGE CALLED	LOCAL WARNIG	FLT PHASE INHIB
ATSU FAULT (Failure at ATSU initialization, if associated with ATSU INIT FAULT ECAM message)	SINGLE CHIME	MASTER CAUTION	NIL	NIL	3, 4, 5, 7, 8
COM NOT AVAIL (When VHF 3 and SATCOM networks are not available)					
COM FAULT (When VHF 3 and SATCOM both faulty)					

MEMO DISPLAY

- DATALINK STBY message is displayed in green, when datalink communication between the aircraft and ground is temporarily lost.
- COMPANY CALL message is displayed in green, when the aircraft receives a message from the ground requesting voice communication on VHF.
- COMPANY MSG message is displayed in green, when the aircraft receives a message from the ground.
- COMPANY ALERT message is displayed in green, when the aircraft receives an uplink alert message, or when an AOC special condition requires a pilot action on the MCDU (depends on AOC programming). This message pulses green for 180 seconds, then remains steady. It is associated with a buzzer for 1 second.

ATC MSG ALERT

	AURAL ALERT	VISUAL ALERT	FLT PHASE INHIBT
ATC MSG alert When a new ATC message arrives from the ground, or a reminder message is automatically presented within the DCDU message file.	RING	"ATC MSG" pushbuttons flashing	3,4,5, 7,8