

GENERAL INFORMATION

- 00.10 ORGANIZATION OF THE MANUAL
- 00.20 LIST OF CODES
- 00.30 LIST OF NORMAL REVISIONS
- 00.30 LIST OF VAA REVISIONS
- 00.35 RECORD OF TEMPORARY REVISIONS
- 00.70 CROSS REFERENCE TABLE
- 00.85 LIST OF MOD/MP/SB AFFECTING THE MANUAL

LOADING

- 01.10 GENERAL
- 01.20 CARGO LOADING
- 01.30 FUEL
- 01.40 WEIGHT and BALANCE

TAKEOFF

- 02.05 INTRODUCTION
- 02.10 GENERAL (TEMPERATURE ENTRY)
- 02.12 MTOW CALCULATION (TEMP. ENTRY)
- 02.14 FLEXIBLE TAKEOFF (TEMP. ENTRY)
- 02.16 GENERAL (WEIGHT ENTRY)
- 02.18 MTOW CALCULATION (WEIGHT ENTRY)
- 02.20 FLEXIBLE TAKEOFF (WEIGHT ENTRY)
- 02.24 QNH/BLEEDS CORRECTION
- 02.25 MINIMUM SPEEDS
- 02.27 DERATED TAKEOFF
- 02.30 QUICK REFERENCE TABLES
- 02.40 NET TAKEOFF FLIGHT PATH

LANDING PERFORMANCE

03.10 LANDING

03.20 USE OF THE AUTOBRAKE SYSTEM

SPECIAL OPERATIONS

04.10 FLUID CONTAMINATED RUNWAY

04.20 FLIGHT WITHOUT CAB PRESSURIZATION

04.25 FLIGHT WITH GEAR DOWN

04.30 HIGH ALTITUDE OPERATION

04.35 FLIGHT OVER MOUNTAINOUS AREA

04.40 THREE ENGINE FERRY FLIGHT

04.50 RVSM

04.51 RNP

04.60 ALL WEATHER OPERATIONS

FLIGHT PLANNING

05.10 GENERAL

05.15 CALCULATION TABLES

05.20 CRUISE LEVEL

05.30 INTEGRATED CRUISE

05.40 QUICK DETERMINATION OF F-PLN

05.50 ALTERNATE

05.60 GROUND DISTANCE/AIR DISTANCE

05.70 FUEL TANKERING