

	Global Table of Contents		4.00.00	P 1
			SEQ 001	REV 14

GENERAL INFORMATION

- 00.10 ORGANIZATION OF THE MANUAL
- 00.20 LIST OF CODES
- 00.30 LIST OF NORMAL REVISIONS
- 00.35 RECORD OF TEMPORARY REVISIONS
- 00.70 CROSS REFERENCE TABLE
- 00.85 LIST OF MOD/MP/SB AFFECTING THE MANUAL

FMGS OVERVIEW

- 01.10 GENERAL

FMGS OPERATIONAL PRINCIPLES

- 02.10 INTRODUCTION
- 02.20 FLIGHT MANAGEMENT PRINCIPLES
- 02.30 FLIGHT GUIDANCE PRINCIPLES

PILOT INTERFACE

- 03.10 INTERFACE VIEWS
- 03.20 MCDU PAGE DESCRIPTION
- 03.30 MCDU MESSAGES
- 03.40 MCDU DATA FORMAT LIST

	Global Table of Contents		4.00.00	P 2
			SEQ 001	REV 14

MULTI PHASE RELATED PROCEDURES

04.10 LATERAL FUNCTIONS

04.20 VERTICAL FUNCTIONS

04.30 OTHER FUNCTIONS

04.40 LONG RANGE

04.50 ACARS FUNCTION

FLIGHT PHASE RELATED PROCEDURES

05.05 INTRODUCTION

05.10 COCKPIT PREPARATION

05.15 BEFORE PUSH BACK OR START

05.20 TAXI

05.30 TAKEOFF

05.40 CLIMB

05.50 CRUISE

05.60 DESCENT

05.70 APPROACH

05.80 GO AROUND

IRREGULARITIES

06.10 DEGRADED MODE OF OPERATION

06.20 ABNORMAL PROCEDURES

06.30 CROSSLOAD OF NAV DATABASE

06.40 FMGC RESPONSE TO FAILURE CASES