

	EMERGENCY EQUIPMENT CONTENTS	1.07.00		
		P 1	001	
				DEC 96

AA

1.07.00 CONTENTS

1.07.10 GENERAL

1.07.20 OXYGEN SYSTEM

R 20.1 DESCRIPTION

R 20.2 CONTROLS

R 20.3 ELECTRICAL SUPPLY/SYSTEM MONITORING

R 20.4 SCHEMATICS

1.07.30 EMERGENCY EVACUATION

	EMERGENCY EQUIPMENT GENERAL	1.07.10		
		P 1/2	001	
				DEC 96

AA

The aircraft is equipped with fire fighting, oxygen and first aid equipment, placed throughout the cabin, readily available for use in emergency.

The emergency lighting system provides aircraft illumination when all other electrical power sources are no longer available.

COCKPIT

Each crew member station is provided with :

- life jacket
- smoke goggles
- quick donning oxygen mask supplied with gaseous oxygen from one rechargeable bottle

A portable fire extinguisher and a fire axe are located at the bottom of the electric rack. Depending on versions, a smoke hood, located behind left crew member station, is available for crew member use.

One plug type hatch located in the cockpit roof is provided as an emergency exit for the cockpit crew. One escape rope is located in a compartment on top of the electric rack near the exit. Steps are provided for hatch access in the corridor RH side.

CABIN


The emergency equipment is strategically distributed throughout the cabin and stowed adjacent to the two cabin attendant stations.

It contains :

- portable fire extinguishers
- protective breathing equipments
- first aid kit
- crash axe
- life vests (stowed under each passenger seat and at the cabin crew stations)
- oxygen supply for passengers

 A320neo F.C.O.M.	EMERGENCY EQUIPMENT		1.07.10		
			P 3/4	200	
	GENERAL				JUN 97

SCHEMATICS

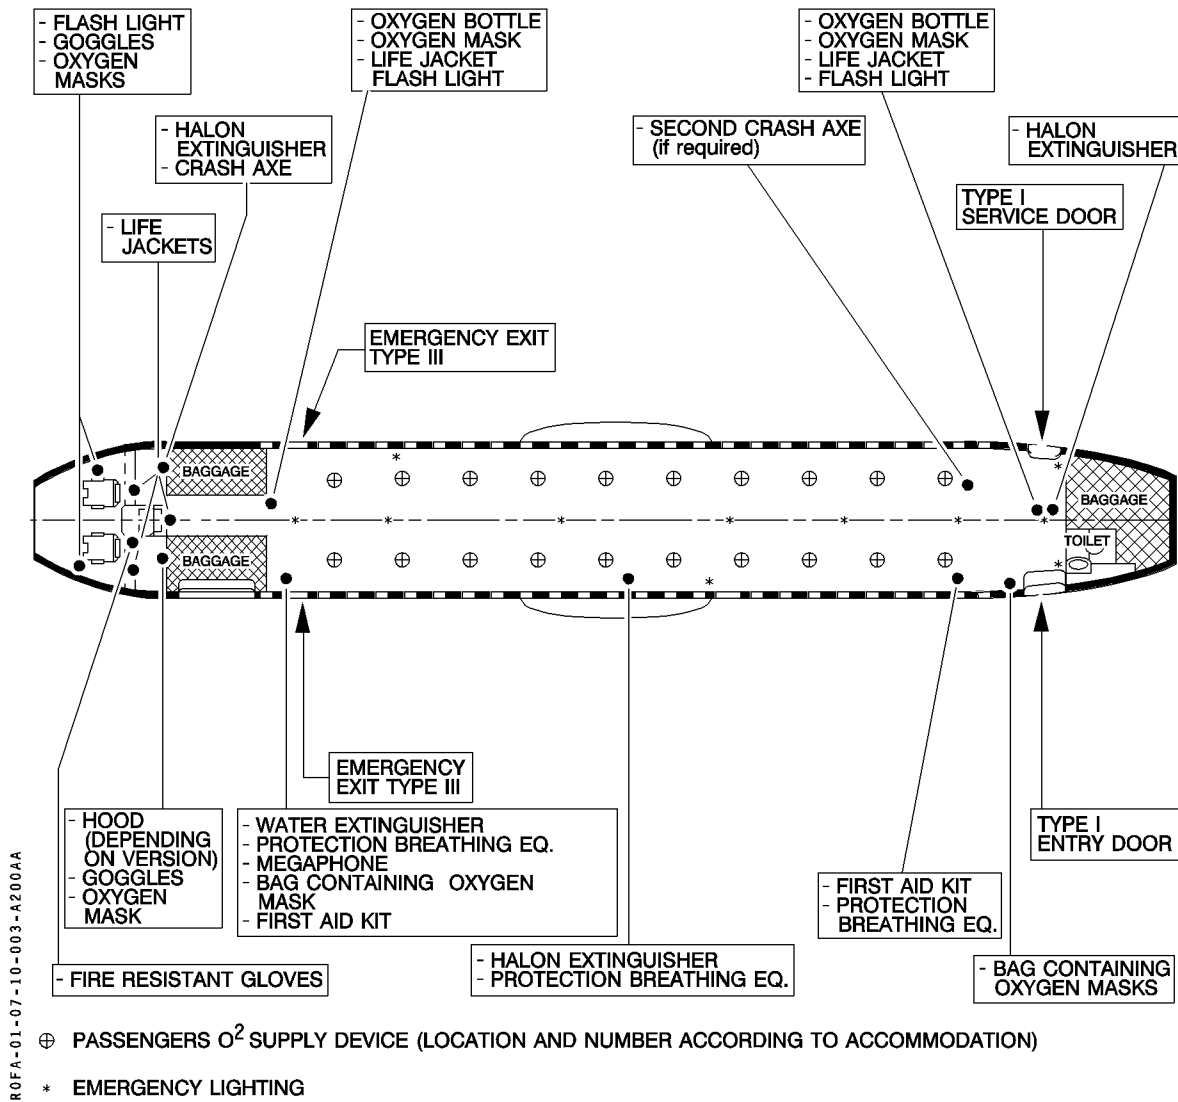

	EMERGENCY EQUIPMENT	1.07.20		
		P 1	050	
	OXYGEN SYSTEM			JUL 99

AA

20.1 DESCRIPTION

(See schematic p 7/8)

The system consists of a main system supplying the cockpit crew and the passengers and two portable units for the cabin attendants.

A high pressure cylinder of 2180 l (77 cu.ft) capacity, supplies oxygen to the distribution system. Nominal charge pressure of 1850 PSI is reduced to 78 PSI in the distribution system. A discharge part is provided to face overpressures.

CREW MEMBERS (See schematic p 9/10)

The quick donning masks are stowed in readily accessible containers adjacent to each crew member seat. The mask harness inflates automatically when the mask is pulled out of the container and it can easily be donned with one hand. A mask mounted diluter demand regulator provides dilution and emergency pressure control :

- In case of pressure drop, with the dilution control in the N (normal) position, diluted oxygen is provided to 3 cockpit crew for a duration of 120 mn at demand flow (10 minutes to descend from 25 000 ft to 13 000 ft and continuation of flight between 13 000 ft and 10 000 ft for 110 minutes).
- In case of smoke or noxious gas emission, with the dilution control in the 100 % position, oxygen is provided to 3 cockpit crew for a duration of 15 minutes at demand flow.

CABIN ATTENDANT PORTABLE UNITS

- two 120 l (4.25 cu ft) portable oxygen bottles are stowed under the cabin attendant seats. They permit a continuous diluted flow to both cabin attendants at 13 000 ft for a duration of 30 mn. Each of these bottles is equipped with a diluted oxygen mask.
- Protective breathing equipments are located in the baggage box of the cabin.

PASSENGERS

The main system provides passenger protection through a PAX SUPPLY valve. It controls flow to oxygen masks installed under the hat racks.


- Oxygen system capability allows to supply 25 % of the passengers with a continuous diluted flow for a duration of 30 mn in case of pressure drop (4 minutes to descend from 25 000 ft to 13 000 ft, 26 minutes to continue the flight between 13 000 ft and 10 000 ft) in addition to the cockpit crew 120 minutes consumption.

 ATR 72 F.C.O.M.	EMERGENCY EQUIPMENT	1.07.20		
		P 2	001	
	OXYGEN SYSTEM			DEC 96

AA

20.2 CONTROLS

OXYGEN PANEL

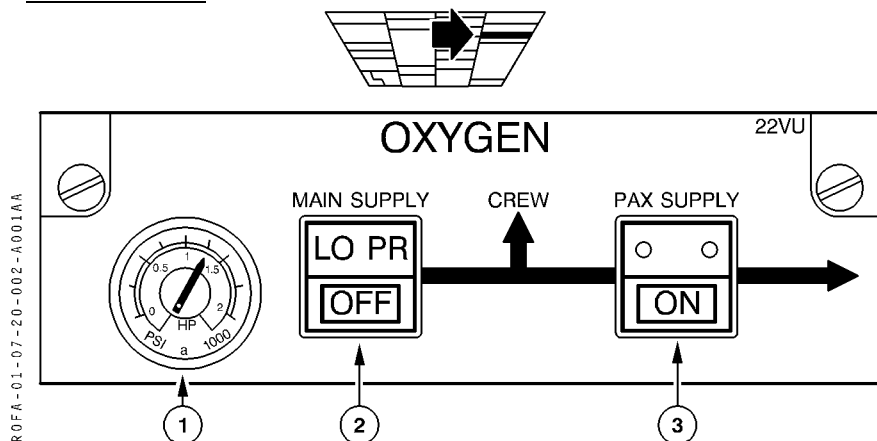



- ① **HP ind.**
Oxygen bottle pressure is displayed in PSI X 1000.
The scale is marked by a red arc from 0 to 85 PSI and by a green arc from 85 to 2025 PSI.
If preflight pressure is below 1400 PSI, quantity must be checked to be adequate for intended flight (refer FCOM 2.01.05).
- ② **MAIN SUPPLY pb**
Controls the low pressure supply solenoid valve.
pb pressed in : The valve is open, low pressure oxygen is supplied to the cockpit crew oxygen masks.
OFF : (pb released) the valve is closed. OFF illuminates white.
LO PR : illuminates amber and the CCAS is activated when a low pressure (below 50 PSI) is detected in the low pressure distribution circuit.
- ③ **PAX SUPPLY pb**
ON : (pb pressed in) Passengers supply valve is open. ON illuminates blue.
pb released : Passengers supply valve is closed.

	EMERGENCY EQUIPMENT		1.07.20		
	OXYGEN SYSTEM		P 3	001	
					DEC 96

AB

COCKPIT CREW OXYGEN MASK

ROFA-01-07-20-003-A001AA

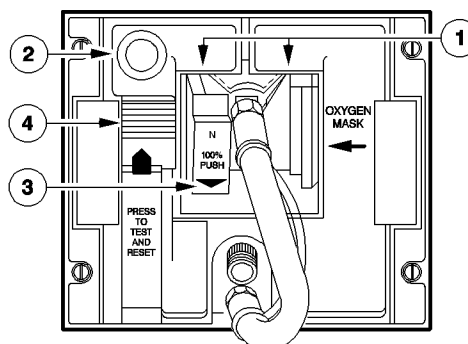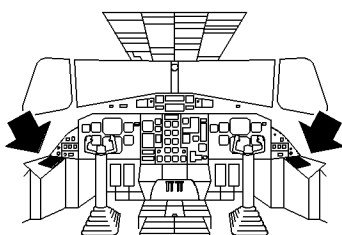

The cockpit crew oxygen masks are of the quick donning inflatable harness type, stowed in a container at each crew station. It can be donned with one hand. A regulator is incorporated in the mask.

① Release clips

Squeezing the red release clips unlocks the container doors. It also enables automatic inflation of mask harness, provided that pb 4 is held in TEST position or mask is extracted from container. The blinker momentarily displays a yellow cross.

② Blinker

Displays a yellow cross when there is oxygen flow, and black when there is no oxygen flow.

③ N/100% rocker

Controls the selection of normal or 100% oxygen for mask delivery. It is locked in the 100% position by the UNLOCK rocker.

- 100% The mask delivers 100% undiluted oxygen.
- N The mask delivers diluted oxygen.

④ TEST/RESET pb

Permits a test of oxygen flow without removing the mask from the container. It is springloaded to the RESET position.

TEST provided MAIN SUPPLY pb is selected ON, oxygen flows through the mask. The blinker momentarily displays yellow cross, and the flow is audible.

A lengthened hose is provided on the observer mask enabling access to the cargo with the mask.

RECOVERING BOOMSET/MICRO FUNCTION WHEN THE OXYGEN MASK IS OUT OF ITS CONTAINER :

Oxygen mask remaining out of its container :

- Close the oxygen mask container doors.
- Press the test push button in front of the container and release it, yellow cross disappears).


The boomset/micro function is now recovered.

Note : If the pilot wishes to use the oxygen mask again and recover the mask micro, it just has to open the container doors.

	EMERGENCY EQUIPMENT		1.07.20		
	OXYGEN SYSTEM		P 4	001	
					DEC 96

AA

UNDERSIDE OF REGULATOR

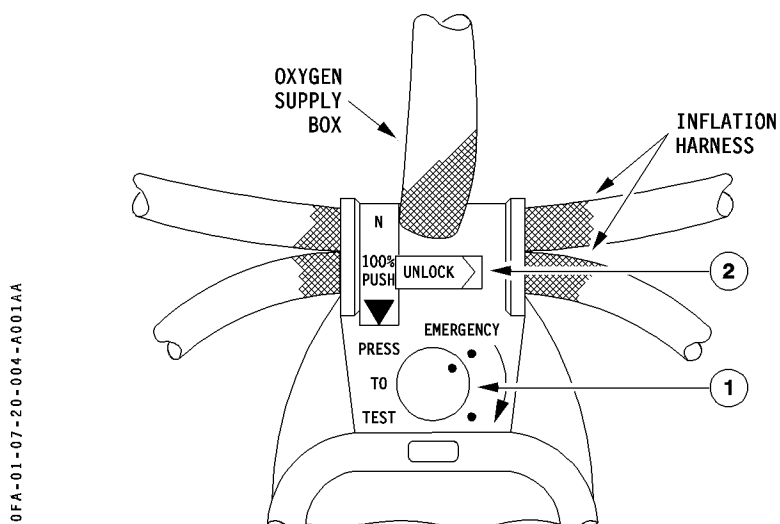

① EMERGENCY selector

Activates pressurization of mask delivery flow when the N/100% rocker is at 100%. Rotation of the selector in direction of the arrow gradually increases delivery pressure from zero to full pressure. When pressed for test, full delivery pressure is supplied.

② UNLOCK rocker

Locks N/100% rocker at 100% position. When pressed, the rocker is released.

	EMERGENCY EQUIPMENT OXYGEN SYSTEM	1.07.20		
		P 5/6	001	
				DEC 96

AA

20.3 ELECTRICAL SUPPLY/SYSTEM MONITORING

ELECTRICAL SUPPLY

EQUIPMENT	DC BUS SUPPLY (C/B)
Oxygen control unit power supply	DC ESS BUS (on lateral panel OXY CTL UNIT PWR SUPPLY)
Pressure ind. and alert	DC ESS BUS (on lateral panel PRESS IND and CAUTION)

SYSTEM MONITORING


The following condition is monitored by visual and aural alerts :

- Low pressure (below 50 psi) in the LP distribution circuit.
 - See OXYGEN LO PR procedure in chapter 2.05.12.

	EMERGENCY EQUIPMENT OXYGEN SYSTEM	1.07.20		
		P 7/8	001	
				SEP 04

AA

20.4 SCHEMATICS

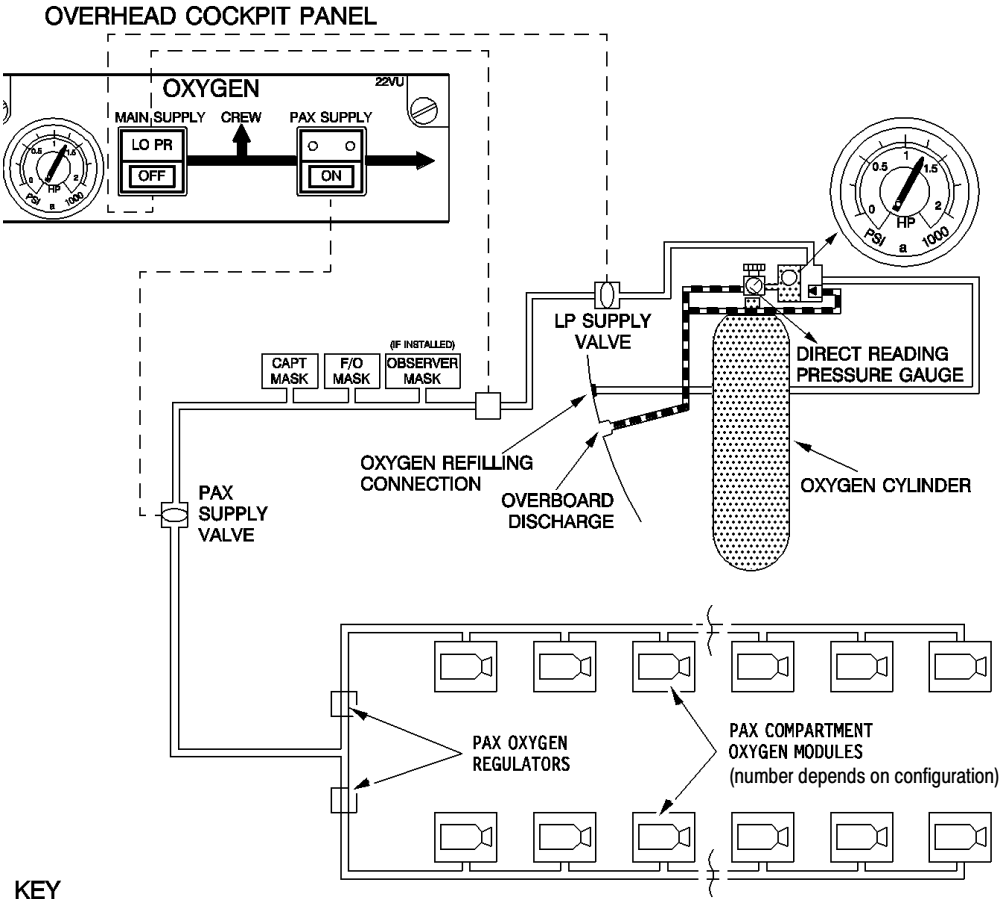


- KEY**
- HIGH PRESSURE
 - OVER PRESSURE
 - == LOW PRESSURE

R

 ATR 72 F.C.O.M.	EMERGENCY EQUIPMENT		1.07.20		
			P 9/10	001	
	OXYGEN SYSTEM				DEC 96

AA

MASK SETTING

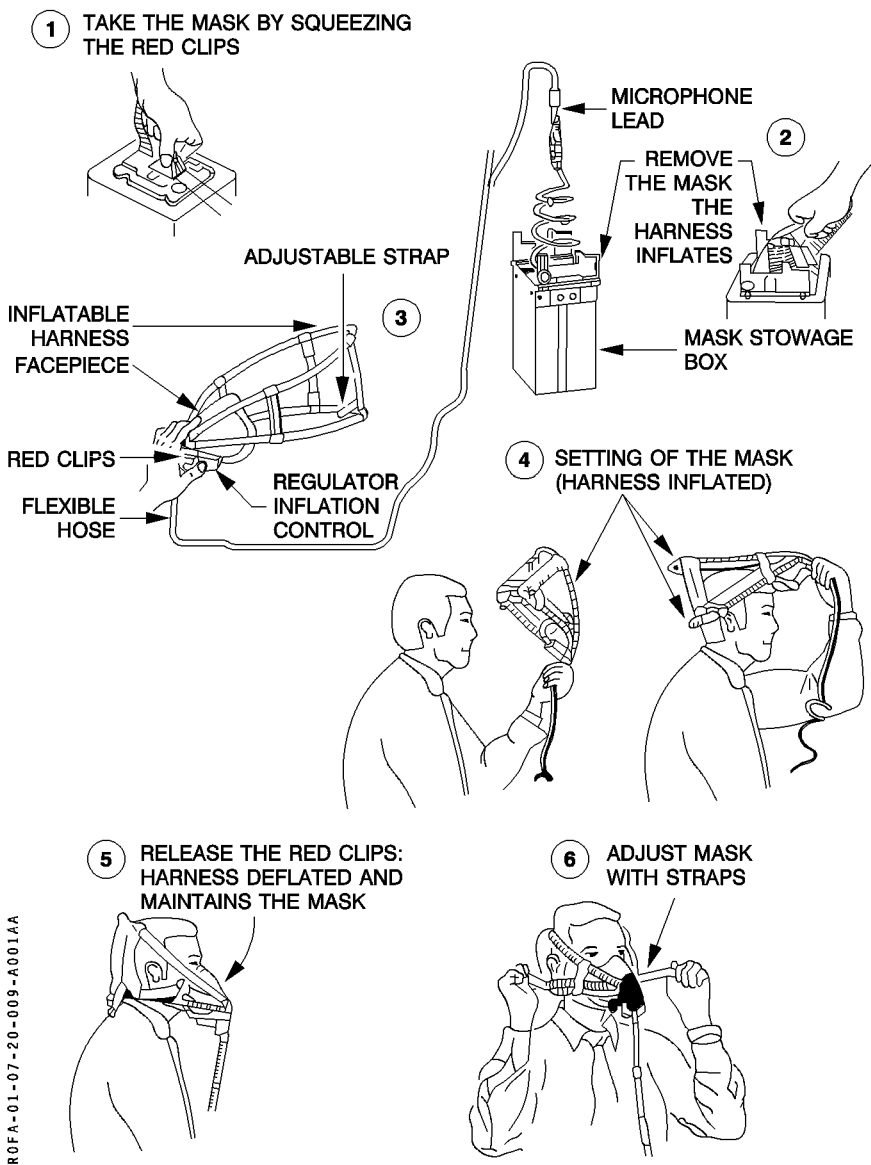


ROFA-01-07-20-009-A001AA

	EMERGENCY EQUIPMENT		1.07.30		
	EMERGENCY EVACUATION		P 1	370	
					SEP 03


AA

EMERGENCY EVACUATION IN CASE OF DITCHING


(A) EMERGENCY EXIT

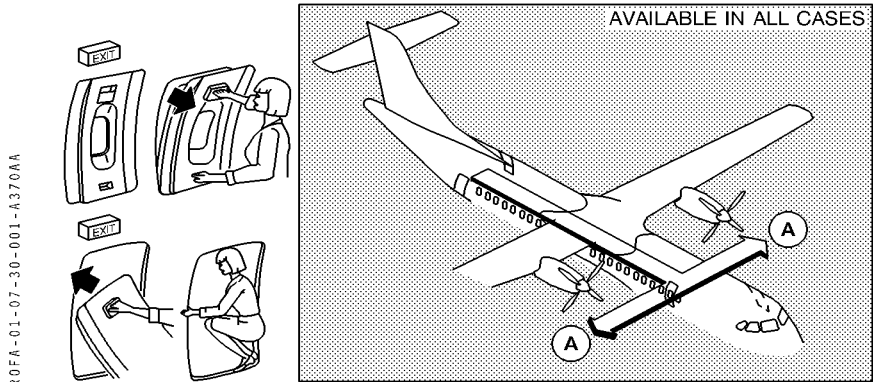

(B) SERVICE DOOR

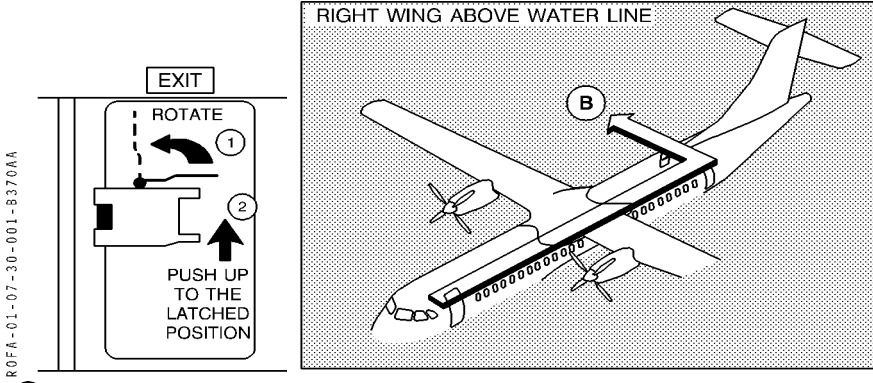

(C) PASSENGER/CREW DOOR

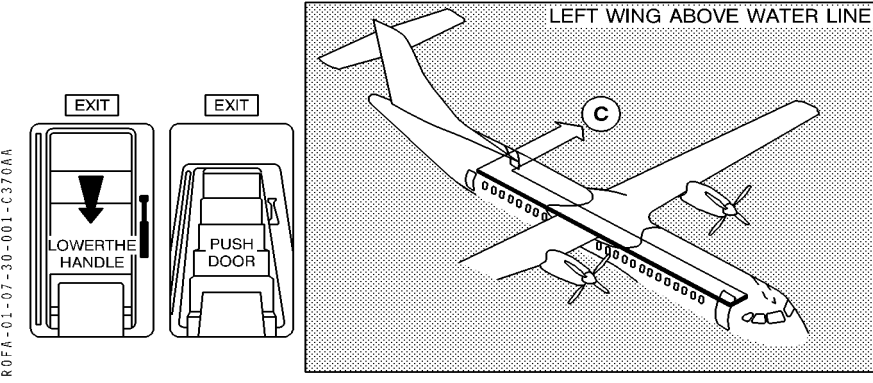


R **Note :** Be sure that safety pin is removed.

	EMERGENCY EQUIPMENT		1.07.30	
	EMERGENCY EVACUATION		P 2	370
				JUL 99

AA


EMERGENCY EVACUATION IN CASE OF FORCED LANDING

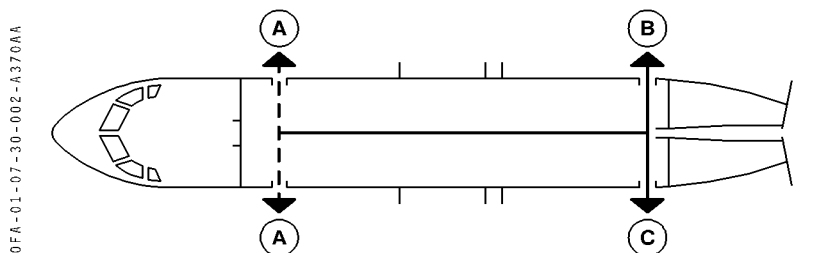


A EMERGENCY EXIT



B SERVICE DOOR

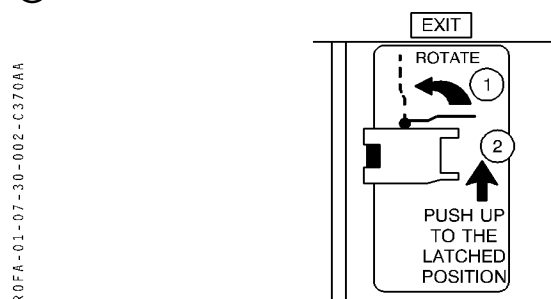

C PASSENGER/CREW DOOR

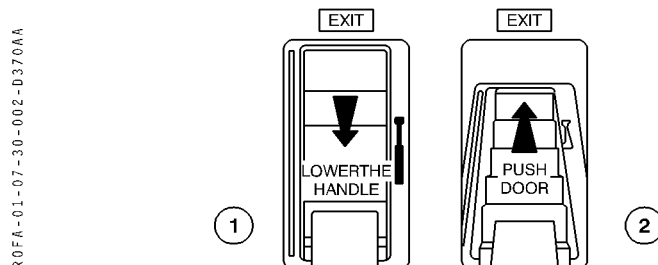

Note : Be sure that safety pin is removed.