

G500H

Pilot's Guide



© 2010-2019 Garmin Ltd. or its subsidiaries. All rights reserved.

Except as expressly provided herein, no part of this manual may be reproduced, copied, transmitted, disseminated, downloaded or stored in any storage medium, for any purpose without the express written permission of Garmin. Garmin hereby grants permission to download a single copy of this manual and of any revision to this manual onto a hard drive or other electronic storage medium to be viewed for personal use, provided that such electronic or printed copy of this manual or revision must contain the complete text of this copyright notice and provided further that any unauthorized commercial distribution of this manual or any revision hereto is strictly prohibited.

Garmin®, FliteCharts®, and SafeTaxi® are registered trademarks of Garmin Ltd. or its subsidiaries. GDU™ and SVT™ are trademarks of Garmin Ltd. or its subsidiaries. These trademarks may not be used without the express permission of Garmin.

NavData® is a registered trademark of Jeppesen, Inc.; ChartView™ is a trademark of Jeppesen, Inc.; SkyWatch® and Stormscope® are registered trademarks of L-3 Communications; Sirius, XM, and all related marks and logos are trademarks of SiriusXM Radio Inc.; Iridium® is a registered trademark of Iridium Communications Inc.; Canadian radar data provided by Environment Canada; United States radar data provided by NOAA; European radar data collected and provided by Meteo France.

This part shall comply with Garmin Banned and Restricted Substances document, P/N 001-00211-00.

Visit flyGarmin.com for aviation product support.

URL: <https://fly.garmin.com/fly-garmin/support/>

Visit Garmin's website for [aviation limited warranty](https://www.garmin.com/en-US/legal/aviation-limited-warranty) information.

URL: <https://www.garmin.com/en-US/legal/aviation-limited-warranty>



WARNING: Navigation and terrain separation must NOT be predicated upon the use of the terrain function. The G500H Terrain Proximity feature is NOT intended to be used as a primary reference for terrain avoidance and does not relieve the pilot from the responsibility of being aware of surroundings during flight. The Terrain Proximity feature is only to be used as an aid for terrain avoidance and is not certified for use in applications requiring a certified terrain awareness system. Terrain data is obtained from third party sources. Garmin is not able to independently verify the accuracy of the terrain data.



WARNING: The displayed minimum safe altitudes (MSAs) are only advisory in nature and should not be relied upon as the sole source of obstacle and terrain avoidance information. Always refer to current aeronautical charts for appropriate minimum clearance altitudes.



WARNING: The Garmin G500H has a very high degree of functional integrity. However, the pilot must recognize that providing monitoring and/or self-test capability for all conceivable system failures is not practical. Although unlikely, it may be possible for erroneous operation to occur without a fault indication shown by the G500H. It is thus the responsibility of the pilot to detect such an occurrence by means of cross-checking with all redundant or correlated information available in the cockpit.



WARNING: The altitude calculated by GPS receivers is geometric height above Mean Sea Level and could vary significantly from the altitude displayed by pressure altimeters, such as the output from the GDC 74H Air Data Computer, or other altimeters in aircraft. GPS altitude should never be used for vertical navigation. Always use pressure altitude displayed by the G500H PFD or other pressure altimeters in aircraft.



WARNING: Do not use outdated database information. Databases used in the G500H system must be updated regularly in order to ensure that the information remains current. Pilots using an outdated database do so entirely at their own risk.



WARNING: Do not use basemap (land and water data) information for primary navigation. Basemap data is intended only to supplement other approved navigation data sources and should be considered as an aid to enhance situational awareness.



WARNING: Traffic information shown on the G500H Multi Function Display is provided as an aid in visually acquiring traffic. Pilots must maneuver the aircraft based only upon ATC guidance or positive visual acquisition of conflicting traffic.



WARNING: Do not use data link weather information for maneuvering in, near, or around areas of hazardous weather. Information contained within data link weather products may not accurately depict current weather conditions.



WARNING: Do not use the indicated data link weather product age to determine the age of the weather information shown by the data link weather product. Due to time delays inherent in gathering and processing weather data for data link transmission, the weather information shown by the data link weather product may be significantly older than the indicated weather product age.



WARNING: For safety reasons, G500H operational procedures must be learned on the ground.



WARNING: To reduce the risk of unsafe operation, carefully review and understand all aspects of the G500H Pilot's Guide. Thoroughly practice basic operation prior to actual use. During flight operations, carefully compare indications from the G500H to all available navigation sources, including the information from other NAVAIDs, visual sightings, charts, etc. For safety purposes, always resolve any discrepancies before continuing navigation.



WARNING: Never use the G500H to attempt to penetrate a thunderstorm. Both the FAA Advisory Circular, Subject: Thunderstorms, and the Airman's Information Manual (AIM) recommend avoiding "by at least 20 miles any thunderstorm identified as severe or giving an intense radar echo."



WARNING: With a GRS 77/GDC 74 installation, exceeding 200° per second in pitch or roll may invalidate AHRS attitude provided to the GDU 620. Exceeding 450 KIAS may invalidate ADC information provided to the GDU 620. With a GSU 75/GRS 79/GDC 72 installation, exceeding 225° per second in pitch or roll may invalidate AHRS attitude provided to the GDU 620. Exceeding 435 KIAS may invalidate ADC information provided to the GDU 620.



WARNING: Do not use Terrain-HSVT information for primary terrain avoidance. Terrain-HSVT is intended only to enhance situational awareness.



WARNING: Because of anomalies in the earth's magnetic field, operating the G500H within the following areas could result in loss of reliable attitude and heading indications. North of 72° North latitude and south of 70° South latitude. An area north of 65° North latitude and between longitude 75° West and 120° West. An area north of 70° North latitude and between longitude 70° West and 128° West. An area north of 70° North latitude and between longitude 85° East and 114° East. An area south of 55° South latitude between longitude 120° East and 165° East.



CAUTION: FIS-B information is to be used for pilot planning decisions and pilot near-term decisions focused on avoiding areas of inclement weather that are beyond visual range or where poor visibility precludes visual acquisition of inclement weather. FIS-B weather and NAS status information may be used as follows:

- To promote pilot awareness of own ship location with respect to reported weather, including hazardous meteorological conditions, NAS status indicators, and enhance pilot planning decisions and pilot near-term decision-making.

- To cue the pilot to communicate with the Air Traffic Control controller, Flight Service Station specialist, operator dispatch, or airline operations control center for general and mission critical meteorological information, NAS status conditions, or both.

FIS-B information, including, weather information, NOTAMs, and TFR areas, are intended for the sole purpose of assisting in long- and near-term planning decision making. The system lacks sufficient resolution and updating capability necessary for aerial maneuvering associated with immediate decisions.



CAUTION: The United States government operates the Global Positioning System and is solely responsible for its accuracy and maintenance. The GPS system is subject to changes which could affect the accuracy and performance of all GPS equipment. Portions of the Garmin G500H utilize GPS as a precision electronic NAVigation AID (NAVAID). Therefore, as with all NAVAIDS, information presented by the G500H can be misused or misinterpreted and, therefore, become unsafe.



CAUTION: The Garmin G500H does not contain any user-serviceable parts. Repairs should only be made by an authorized Garmin service center. Unauthorized repairs or modifications could void both the warranty and the pilot's authority to operate this device under FAA/FCC regulations.



CAUTION: The G500H PFD and MFD displays use a lens coated with a special anti-reflective coating that is very sensitive to skin oils, waxes, and abrasive cleaners. **CLEANERS CONTAINING AMMONIA WILL HARM THE ANTI-REFLECTIVE COATING.** It is very important to clean the lens using a clean, lint-free cloth and an eyeglass lens cleaner that is specified as safe for anti-reflective coatings.



NOTE: Interference from GPS repeaters operating inside nearby hangars can cause an intermittent loss of attitude and heading displays while the aircraft is on the ground. Moving the aircraft more than 100 feet away from the source of the interference should alleviate the condition.



NOTE: Do not rely solely upon data link services to provide Temporary Flight Restriction (TFR) information. Always confirm TFR information through official sources such as Flight Service Stations or Air Traffic Control.



NOTE: All visual depictions contained within this document, including screen images of the G500H bezel and displays, are subject to change and may not reflect the most current G500H system. Depictions of equipment may differ slightly from the actual equipment.



NOTE: This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



NOTE: Terrain data is not displayed when the aircraft latitude is greater than 75° North or 60° South.



NOTE: This product, its packaging, and its components contain chemicals known to the State of California to cause cancer, birth defects, or reproductive harm. This notice is being provided in accordance with California's Proposition 65. If you have any questions or would like additional information, please refer to our web site at www.garmin.com/prop65.



NOTE: *Terrain-HSVT is standard when the Garmin Synthetic Vision Technology (SVT) option is installed.*



NOTE: *Do not use SafeTaxi, FliteCharts, or Chartview functions as the basis for ground maneuvering. SafeTaxi, FliteCharts, and Chartview functions have not been qualified to be used as an airport moving map display (AMMD). SafeTaxi, FliteCharts, and Chartview are intended to improve pilot situational awareness during ground operations and should only be used by the flight crew to orient themselves on the airport surface.*

Foreword	Record of Revisions		
	Revision	Date	Description
Sec 1 System	M	03/2018	Update reflects software v7.36 upgrade.
	L	10/2018	Update reflects software v7.30 upgrade.
	K	10/2016	Update reflects software v7.12 upgrade.
	J	10/2015	Update reflects software v7.01 upgrade.
Sec 2 PFD	H	03/2015	Added chart information.
	G	02/2015	Update reflects software v7.00 upgrade.
	F	01/2012	Revised additional feature information in section 5.
Sec 3 MFD	E	12/2011	Revised obstacle description on page A-4.
	D	08/2011	Update reflects software v6.00 upgrade.
	C	11/2010	Update reflects software v4.00 and v5.00 upgrades.
Sec 4 Hazard Avoidance	B	04/2010	Added speed tape marking information.
	A	01/2010	Product release.
Sec 5 Additional Features			
Sec 6 Annun. & Alerts			
Sec 7 Symbols			
Sec 8 Glossary			
Appendix A			
Index			

AOPA Airport Directory

AOPA MEMBERSHIP PUBLICATIONS, INC. AND ITS RELATED ORGANIZATIONS (HEREINAFTER COLLECTIVELY "AOPA") EXPRESSLY DISCLAIM ALL WARRANTIES, WITH RESPECT TO THE AOPA INFORMATION INCLUDED IN THIS DATA, EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. THE INFORMATION IS PROVIDED "AS IS" AND AOPA DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING ITS ACCURACY, RELIABILITY, OR OTHERWISE. UNDER NO CIRCUMSTANCES INCLUDING NEGLIGENCE, SHALL AOPA BE LIABLE FOR ANY INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES THAT RESULT FROM THE USE OR INABILITY TO USE THE SOFTWARE OR RELATED DOCUMENTATION, EVEN IF AOPA OR AN AOPA AUTHORIZED REPRESENTATIVE HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. USER AGREES NOT TO SUE AOPA AND, TO THE MAXIMUM EXTENT ALLOWED BY LAW, TO RELEASE AND HOLD HARMLESS AOPA FROM ANY CAUSES OF ACTION, CLAIMS OR LOSSES RELATED TO ANY ACTUAL OR ALLEGED INACCURACIES IN THE INFORMATION. SOME JURISDICTIONS DO NOT ALLOW THE LIMITATION OR EXCLUSION OF IMPLIED WARRANTIES OR LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Hazard Avoidance	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	

Contents

Foreword

	1	System Overview	1-1
Sec 1 System	1.1	System Description.....	1-1
	1.1.1	Standard System Line Replaceable Units	1-3
	1.1.2	Optional Line Replaceable Units.....	1-9
	1.2	System Power Up.....	1-13
Sec 2 PFD	1.3	International Geomagnetic Reference Field.....	1-15
	1.4	System Operation.....	1-16
	1.4.1	Pilot Controls	1-16
	1.4.2	Using the Soft Key Controls	1-20
Sec 3 MFD	1.4.3	Using the Page Menus.....	1-20
	1.4.4	System Settings	1-22
	1.4.5	Display Backlighting	1-25
Sec 4 Hazard Avoidance	2	Primary Flight Display.....	2-1
	2.1	PFD Soft Keys.....	2-2
Sec 5 Additional Features	2.2	Airspeed Indicator.....	2-6
	2.2.1	Markings.....	2-8
	2.2.2	Reference Speeds	2-8
	2.3	Attitude Indicator.....	2-9
Sec 6 Annun. & Alerts	2.3.1	Extreme Attitude	2-11
	2.4	Altimeter	2-13
	2.4.1	Setting the Altitude Bug and Alerter	2-13
Sec 7 Symbols	2.4.2	Altitude Alerting.....	2-14
	2.4.3	Vertical Navigation (VNAV) Altitude Constraints (Software v7.30 or Later)	2-15
	2.4.4	Changing Barometric Setting	2-16
Sec 8 Glossary	2.4.5	Minimum Descent Altitude/Decision Height Alerting	2-16
	2.5	Vertical Speed Indicator.....	2-19
	2.5.1	Setting the Vertical Speed Indicator Bug	2-20
Appendix A	2.6	Horizontal Situation Indicator	2-21
	2.6.1	Setting the Heading Bug.....	2-22
	2.6.2	Turn Rate Indicator	2-23
Index	2.7	Course Deviation Indicator	2-24
	2.7.1	CDI/VDI Preview.....	2-24
	2.7.2	Changing CDI Sources	2-25

2.7.3	Changing CDI Course	2-26	Foreword
2.7.4	Vertical Deviation Indicator	2-26	
2.7.5	Auto-Slewing	2-28	
2.8	Supplemental Flight Data	2-31	System Sec 1
2.8.1	Bearing Pointers	2-31	
2.8.2	Temperature Display	2-32	
2.8.3	Wind Vectors	2-33	PFD Sec 2
2.8.4	DME Indication	2-33	
2.8.5	Marker Beacon Annunciations	2-34	
2.8.6	Miscompare Annunciations	2-34	MFD Sec 3
2.9	Attitude Sync	2-36	
2.10	Radar Altimeter	2-37	
2.11	PFD Units	2-40	Avoidance Hazard Sec 4
3	Multi-Function Display	3-1	
3.1	Navigation Map Pages	3-2	
3.1.1	Default Navigation Map Page	3-3	Additional Features Sec 5
3.1.2	Map Overlay Icons	3-3	
3.1.3	Selecting Page Options	3-4	
3.1.4	Changing the Navigation Map Range	3-4	Annun. & Alerts Sec 6
3.1.5	Decluttering Map Pages	3-4	
3.1.6	Panning	3-5	
3.1.7	Selecting Items on the Map	3-6	Symbols Sec 7
3.1.8	Measuring Distances	3-7	
3.1.9	Customizing Navigation Map Pages	3-8	
3.1.10	Map Setup	3-8	Glossary Sec 8
3.1.11	Split Screen (Optional)	3-26	
3.2	Aux Mode Pages	3-27	
3.2.1	System Settings	3-27	Appendix A
3.2.2	SiriusXM Information (Optional)	3-39	
3.2.3	SiriusXM Entertainment Radio (Optional)	3-40	
3.2.4	System Status	3-41	Index
3.2.5	ADS-B/FIS-B Status (Optional)	3-48	
3.2.6	External Video (Optional)	3-49	
3.2.7	Position Reporting (Optional)	3-54	
3.2.8	Iridium Phone Operation (Optional)	3-57	
3.3	Flight Plan Pages	3-65	
3.3.1	Active Flight Plan Page	3-65	

	3.3.2	Waypoint Information Page	3-68
	3.3.3	Charts Page (Optional)	3-75
4		Hazard Avoidance	4-1
4.1		Terrain Configurations.....	4-2
4.1.1		Terrain System Self-Test	4-3
4.2		Terrain Proximity	4-4
4.2.1		Terrain Proximity Limitations	4-5
4.2.2		Terrain System Status.....	4-5
4.2.3		Displaying Terrain Proximity	4-6
4.2.4		Terrain Proximity Symbols	4-9
4.3		External H-TAWS.....	4-12
4.4		Terrain-HSVT (Optional).....	4-13
4.4.1		Terrain-HSVT Page 120° Arc or 360° Rings	4-14
4.4.2		Terrain-HSVT Page Aviation Data	4-15
4.4.3		Inhibiting/Enabling Terrain-HSVT Alerting	4-16
4.4.4		Terrain-HSVT Reduced Protection Mode	4-17
4.4.5		Synthetic Vision Alerts and Annunciations.....	4-19
4.4.6		Mute Caution Alerts	4-21
4.4.7		SVT Alerts when Terrain is Inhibited.....	4-22
4.5		Traffic Systems	4-23
4.5.1		TAS/TCAS 1 Traffic (Optional)	4-23
4.5.2		TIS Traffic (Optional)	4-30
4.5.3		ADS-B Traffic (Optional)	4-38
4.6		XM WX Satellite Weather (Optional).....	4-44
4.6.1		Using XM WX Satellite Weather Products	4-44
4.6.2		Customizing the XM WX Satellite Weather Map	4-45
4.6.3		XM Weather Symbols and Product Age	4-47
4.6.4		XM Weather Legends	4-49
4.6.5		XM NEXRAD	4-51
4.6.6		XM Weather Page Map Orientation.....	4-54
4.6.7		NEXRAD Data Viewing Range.....	4-55
4.6.8		NEXRAD Legend.....	4-56
4.6.9		NEXRAD Source	4-57
4.6.10		XM Echo Tops	4-58
4.6.11		XM Cloud Tops.....	4-60
4.6.12		XM WX Satellite Lightning	4-62
4.6.13		XM SIGMETs and AIRMETs	4-63

4.6.14	XM PIREPs	4-65	
4.6.15	XM METARs	4-66	
4.6.16	XM Winds Aloft	4-68	
4.6.17	XM Surface Analysis and City Forecast	4-70	
4.6.18	XM County Warnings.....	4-72	
4.6.19	XM TFRs.....	4-73	Sec 1 System
4.6.20	XM Cell Movement.....	4-75	
4.6.21	XM AIREPs	4-77	
4.6.22	XM Cyclone.....	4-79	Sec 2 PFD
4.6.23	XM Freezing Level	4-80	
4.6.24	XM Icing	4-81	
4.6.25	XM Turbulence	4-82	Sec 3 MFD
4.7	Garmin Connex Satellite Services (Optional)	4-83	
4.7.1	Connex Weather Registration	4-84	
4.7.2	Using GFDS Satellite Weather Products	4-86	
4.7.3	Customizing the Weather Map.....	4-86	Sec 4 Hazard Avoidance
4.7.4	GFDS Data Request	4-88	
4.7.5	Weather Page Map Orientation.....	4-94	
4.7.6	Precipitation Data Viewing Range	4-95	Sec 5 Additional Features
4.7.7	PRECIP Legend.....	4-96	
4.7.8	GFDS Infrared Satellite Data Viewing Range	4-97	
4.7.9	Data Link Lightning Data Viewing Range.....	4-98	Sec 6 Annun. & Alerts
4.7.10	SIGMETs and AIRMETs	4-99	
4.7.11	AIREP/PIREP.....	4-101	
4.7.12	METARs	4-103	Sec 7 Symbols
4.7.13	Winds Aloft	4-106	
4.7.14	GFDS TFRs.....	4-108	
4.8	FIS-B Weather (Optional).....	4-109	
4.8.1	NEXRAD Abnormalities.....	4-110	Sec 8 Glossary
4.8.2	NEXRAD Limitations	4-110	
4.8.3	NEXRAD Intensity.....	4-110	
4.8.4	NEXRAD	4-111	Appendix A
4.8.5	NEXRAD Weather Setup	4-111	
4.9	Stormscope.....	4-126	
5	Additional Features (Optional)	5-1	Index
5.1	FliteCharts and ChartView.....	5-2	
5.1.1	ChartView (Optional).....	5-3	

Foreword	5.1.2	FliteCharts.....	5-4
	5.1.3	Determining Chart Database Type, Coverage, and Currency	5-5
	5.1.4	Selecting a Chart.....	5-7
	5.1.5	Using Charts	5-12
	5.2	SafeTaxi	5-18
Sec 1 System	5.2.1	Using SafeTaxi	5-19
	5.2.2	SafeTaxi Cycle Number and Revision	5-21
	5.3	SiriusXM Satellite Radio Entertainment.....	5-22
Sec 2 PFD	5.3.1	Activating SiriusXM Satellite Radio Services.....	5-22
	5.3.2	SiriusXM Satellite Radio Information	5-23
	5.3.3	SiriusXM Satellite Radio Entertainment	5-25
	5.3.4	GDL 69/69A Data Link Receiver Troubleshooting.....	5-30
Sec 3 MFD	5.4	Helicopter Synthetic Vision Technology (Optional).....	5-31
	5.4.1	HSVT Operation.....	5-32
	5.4.2	Activating and Deactivating HSVT	5-33
Sec 4 Hazard Avoidance	5.4.3	HSVT Features	5-34
	5.5	GFC 600H Operation	5-43
	5.5.1	Heading Select Mode	5-43
Sec 5 Additional Features	5.5.2	Altitude Capture.....	5-43
	5.5.3	Vertical Speed Control	5-43
	5.5.4	Selected Airspeed	5-43
Sec 6 Annun. & Alerts	5.5.5	FCS Navigation.....	5-43
	5.5.6	Flight Director Display.....	5-44
	5.5.7	Autopilot Mode Annunciations.....	5-44
Sec 7 Symbols	6	Annunciations and Alerts.....	6-1
	6.1	Alerts	6-1
	6.2	System Status	6-17
Sec 8 Glossary	7	Symbols.....	7-1
	7.1	Map Page Symbols.....	7-1
	7.2	SafeTaxi Symbols.....	7-2
Appendix A	7.3	Traffic Symbols.....	7-2
	7.4	Basemap Symbols	7-4
	7.5	Map Tool Bar Symbols.....	7-5
Index	7.6	Ownship Symbols.....	7-6
	7.7	Miscellaneous Symbols.....	7-6
	8	Glossary	8-1
	Appendix A	Databases	A-1

A.1 SD Card Use and DatabasesA-1

 A.1.1 Aviation DatabasesA-3

 A.1.2 Garmin DatabasesA-5

Index..... B-1

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

This page intentionally left blank

1 SYSTEM OVERVIEW

1.1 System Description

This section provides an overview of the G500H Avionics Display System. The G500H system is an integrated display system that presents primary flight instrumentation, navigation, and a moving map to the pilot through large-format displays.

In normal operating mode, the Primary Flight Display (PFD) presents graphical flight instrumentation (attitude, heading, airspeed, altitude, vertical speed), replacing the traditional flight instrument cluster. The Multi-Function Display (MFD) normally displays a full-color moving map with navigation information, as well as supplemental data.

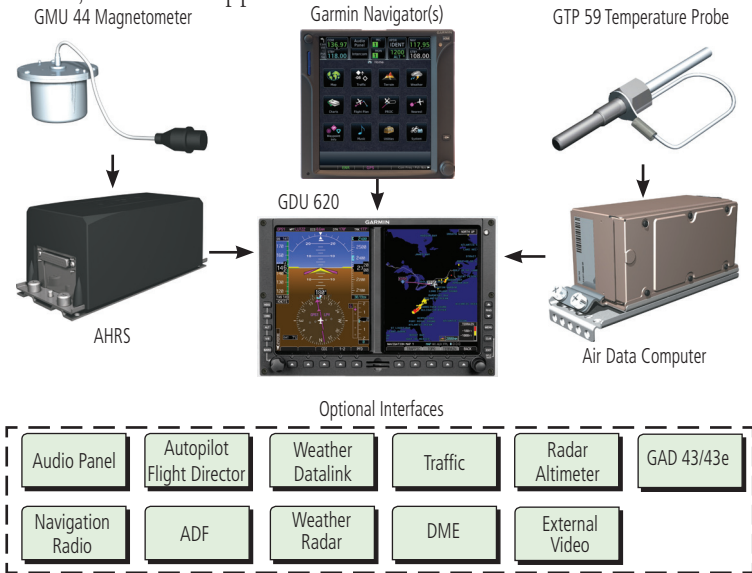


Figure 1-1 G500H System (LRU Configuration)

The system consists of the following Line Replaceable Units (LRUs):

- **GDU 620** Primary Flight Display (PFD) and Multi Function Display (MFD)
- **Air Data Computer** (ADC)
- **Attitude and Heading Reference System** (AHRS)
- **GNS 480, CNX 80, GNS 400W series, GNS 500W series, GTN 600 series, GTN 700 series**, or a compatible GPS Navigator
- **Temperature Probe** (such as the GTP 59)
- **GMU 44** Magnetometer
- **GEA 71** Engine/Airframe Unit

Interfaces to various other rotorcraft systems and equipment are supported, including:

- **GAD 43/43e** Adapter
- **GDL 69/69A** Satellite Data Link Receiver
- **GDL 88H / GTX 345** ADS-B Transceiver
- **GSR 56** Satellite Data Link Receiver
- **COM/NAV** - Garmin GTR/GNC or SL30 COM/NAV radios, or selected third-party radios
- **Autopilot/Flight Director**
- **ADF**
- **Garmin GTS or GTX** traffic awareness systems, or selected third-party devices
- **Audio Panel**
- **Garmin GWX** radar systems or selected third-party radars
- **Radar Altimeter**
- **Video Sources**
- **Stormscope**

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

1.1.1 Standard System Line Replaceable Units

This guide covers the operation of the GDU 620 display as integrated in the G500H system. The G500H Avionics Display System is an avionics suite designed to replace the traditional flight instrument cluster. The system combines primary flight instrumentation, navigational information, and a moving map all displayed on dual color screens. The G500H system is composed of sub-units or Line Replaceable Units (LRUs). LRUs have a modular design, which greatly eases troubleshooting and maintenance of the G500H system. A failure or problem can be isolated to a particular LRU, which can be replaced quickly and easily. Each LRU has a particular function, or set of functions, that contributes to the system's operation.

1.1.1.1 GDU 620

The GDU 620 has dual VGA (640 x 480 pixels) 6.5 inch LCD displays. The right side of the GDU is a PFD and the left side is the MFD. In some models or installations, the PFD and MFD and their controls are switched to the other side. The MFD shows a moving map, flight plan, weather, and other supplemental data. The PFD shows primary flight information, in place of traditional Pitot-static and gyroscopic systems and also provides a Horizontal Situation Indicator (HSI) for navigation.



Figure 1-2 GDU 620 PFD and MFD

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Avoidance	Sec 4
Hazard	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	

1.1.1.2 Air Data Computer

The Air Data Computer (ADC) compiles information from the Pitot-static system and an Outside Air Temperature (OAT) sensor. The ADC provides pressure altitude, airspeed, vertical speed, and OAT information to the G500H system. The ADC communicates with the GDU 620 and AHRS using an ARINC 429 digital interface.

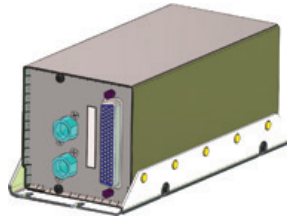


Figure 1-3 Air Data Computer

1.1.1.3 Attitude Heading Reference System



NOTE: Aggressive maneuvering while AHRS is not operating in normal mode may degrade AHRS accuracy.

The Attitude and Heading Reference System (AHRS) unit provides rotorcraft attitude information to the G500H display. The unit contains advanced accelerometers and rate sensors and interfaces with both the ADC and the GMU 44 magnetometer. The AHRS utilizes GPS data forwarded from the GDU 620. Attitude and heading information is sent to the GDU 620 using an ARINC 429 digital interface.



Figure 1-4 AHRS

The International Geomagnetic Reference Field (IGRF) model is contained in the AHRS and is updated once every five years. The IGRF model is part of the Navigation Database. At system power-up, the IGRF models in the AHRS and the Navigation Database are compared. If the IGRF model in the AHRS is out of date, the user is prompted to update. The prompt will appear after the G500H splash screen is acknowledged on the MFD.

Attitude and heading information is displayed on the PFD when the AHRS receives appropriate combinations of information from the external sensor inputs.

AHRS Inputs			AHRS Mode	AHRS Outputs	
GPS	Magnetometer	Air Data		Attitude	Heading
Available	Available	Available/Unavailable	Normal	Available	Available
Available	Unavailable	Available	No Mag	Available	GPS Track
Available	Unavailable	Unavailable	No Air/No Mag	Available	GPS Track
Unavailable	Available	Available	No GPS	Available	Available
Unavailable	Unavailable	Available	No Mag	Available*/Unavailable	Unavailable
Unavailable	Available	Unavailable	Fail	Unavailable	Unavailable
Unavailable	Unavailable	Unavailable	Fail	Unavailable	Unavailable

* - GSU 75 only.

Table 1-1 AHRS Operation

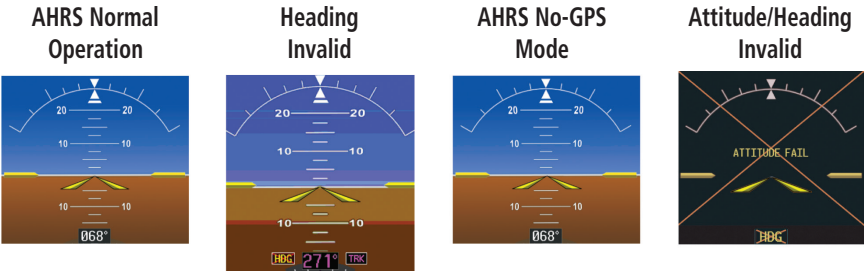


Figure 1-5 AHRS Operation

Loss of GPS, magnetometer, or air data inputs is communicated to the pilot by message advisory alerts. For specific AHRS alert information, refer to Section 6 on page 6-1. Any failure of the internal AHRS inertial sensors results in loss of attitude and heading information. This is indicated by red “X” flags over the corresponding flight instruments.

A maximum of two GPS inputs are provided to the AHRS. If GPS information from one of the inputs fails, the AHRS uses the remaining GPS input and an alert message is issued to inform the pilot. If both GPS inputs fail, the AHRS will continue to provide attitude and heading information to the PFD as long as magnetometer and airspeed data are available and valid.

If the magnetometer input fails, the AHRS continues to output valid attitude information and GPS Track information is used. However, the PFD heading display is flagged as invalid with a red “X” and TRK is annunciated to the right of the Track value in magenta. The Track value color changes from white to magenta.



NOTE: *In this case, the magnetic standby compass and GPS ground track can be used to keep the rotorcraft on the desired heading.*

Map orientations change from HDG UP to TRACK UP and Map orientations will change back to HDG up when heading is restored.

When heading fails, the heading bug is not removed and the GDU continues driving the autopilot heading error output using track in place of heading.



Figure 1-6 Track Mode shown as Active when Heading Info has Failed

Failure of the air data input has no effect on the AHRS output while AHRS is receiving valid GPS information. Invalid or unavailable airspeed data, in addition to complete GPS failure, results in loss of all attitude and heading information.



NOTE: Fastest AHRS alignment is achieved with the rotorcraft stationary and with all AHRS inputs valid (3-D GPS position, magnetometer, and air data). During initial power up on the ground, no GPS position and/or magnetic anomalies are common. If the rotorcraft is moved prior to AHRS alignment, alignment may be delayed until after a valid 3-D GPS position is available.



NOTE: During in-flight alignment of the AHRS, minimize rotorcraft maneuvering. The AHRS will align with shallow banking and pitch angles (less than 20° of roll or 5° of pitch). AHRS alignment may not be possible during more aggressive maneuvers.

Heading Considered Unreliable

When the AHRS signals that a heading is unreliable or in recovery, indications are displayed on the PFD. These indications are automatically removed once the heading alignment is corrected.



NOTE: Depending on the AHRS type and the magnitude of the heading error, the displayed indication may change directly from unreliable to reliable.

AHRS Signal	Displayed Indication
Heading unreliable	The current heading value changes from white to amber.
Heading recovery in progress	The Align Aircraft (ALN) indication appears to the left of the heading.
Heading reliable	Current heading value turns white.

Table 1-2 AHRS Signals and Indications

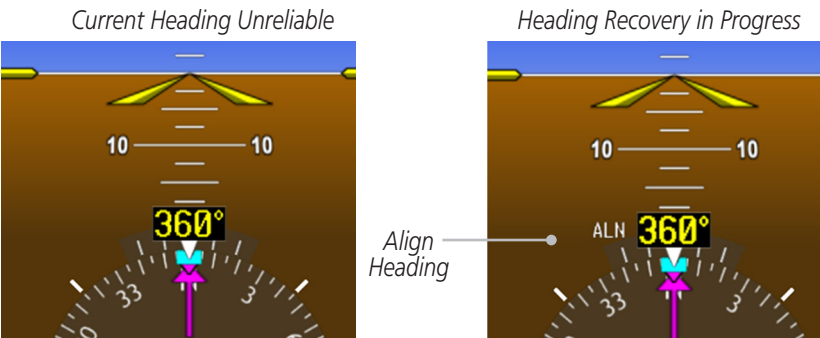


Figure 1-7 AHRS Heading Indications

1.1.1.4 GMU 44

The GMU 44 magnetometer senses the earth's magnetic field. Data is sent to the AHRS for processing to determine rotorcraft magnetic heading. This unit receives power directly from the AHRS and communicates with the AHRS using a RS-485 digital interface.



Figure 1-8 GMU 44 Magnetometer

1.1.1.5 GTP 59

The GTP 59 temperature probe provides Outside Air Temperature (OAT) data to the ADC.

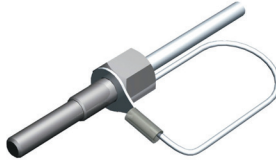


Figure 1-9 GTP 59 Temperature Probe

1.1.1.6 Garmin Navigator Interface

The G500H system requires connection to at least one external Garmin WAAS GPS navigator, such as the 400W/500W series, GTN 600/700 series, or GNS 480.

1.1.2 Optional Line Replaceable Units

A variety of LRUs are available to expand and enhance the G500H system.

1.1.2.1 GDL 88H

The GDL 88H is a remotely mounted ADS-B transceiver. There are four models of the GDL 88H. Models with a single bottom mounted UAT antenna meet TSO C154c Class A1S and are available with or without an internal GPS/SBAS receiver. Models with one top mounted and one bottom mounted antenna meet TSO C154c Class A1H and are also available with or without an internal GPS/SBAS receiver.

1.1.2.2 GTX 345

The GTX 345 is a combined mode S/ES transponder and ADS-B transceiver. Mode S/ES models have an optional internal GPS/SBAS receiver.

The GDU only displays ADS-B information, it does not control the GTX.

1.1.2.3 Weather Radar

The Garmin GWX system, or selected 3rd party radar, provides airborne weather and ground mapped radar data to the MFD.

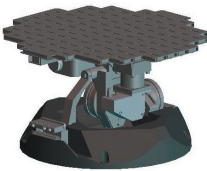


Figure 1-10 GWX 68 Weather Radar

1.1.2.4 Stormscope



NOTE: Refer to the *WX-500 Pilot's Guide* for a detailed description of the *WX-500 Stormscope*.

The WX-500 Stormscope Weather Mapping Sensor is a passive weather avoidance system that detects electrical discharges associated with thunderstorms within a 200 NM radius of the rotorcraft. The Stormscope measures relative bearing and distance of thunderstorm-related electrical activity and reports the information to the display. **Interfaces are currently only available for the WX-500 Stormscope System.**

1.1.2.5 GSR 56

The GSR 56 is an Iridium satellite transceiver that supports voice telephone calls, rotorcraft position reporting, and world wide weather products.

1.1.2.6 GDL 69/69A

The GDL 69/69A is a SiriusXM Satellite Radio Data Link Receiver that receives broadcast weather data. The GDL 69A is the same as the GDL 69 with the addition of a SiriusXM Satellite Radio audio entertainment receiver. Weather data and control of audio channel and volume is displayed on the MFD, via a High-Speed Data Bus (HSDB) Ethernet connection. The GDL 69A is also interfaced to an audio panel for distribution of the audio signal. A subscription to the SiriusXM Satellite Radio service is required to enable the GDL 69/69A capability. Subscription information is available at: <http://www.garmin.com/xm/>.



Figure 1-11 GDL 69/69A SiriusXM Satellite Radio Data Link Receiver

1.1.2.7 GAD 43/43e

The GAD 43 is an adapter that converts AHRS digital pitch, roll, heading and yaw rate data into analog signals used by autopilot systems. The GAD 43 is installed remotely between the AHRS and an existing autopilot. The analog signals from the GAD 43 mimic those of spinning-mass gyros that provide data to the autopilot and allow the gyro to be replaced by the AHRS and GAD 43 combination.

The GAD 43e performs the same functions as the GAD 43, but adds support for additional interfaces to various rotorcraft systems. The GAD 43e supports interfaces to various autopilots (for altitude preselect and vertical speed control), analog NAV radios, DME, analog radar altimeters, marker beacons, and ADF receivers.



Figure 1-12 GAD 43/43e AHRS Adapter

1.1.2.8 GTX 330/330D/335



NOTE: GTX 330/330D/335 can also be used to display traffic information on the GDU 620.

The GTX 330/330D/335 is a solid-state transponder that provides Modes A, C, and S functions. The transponder provides traffic information to the display through an ARINC 429 digital interface. In the following figure, the GTX 330/330D Mode S Transponder is shown as typical.



Figure 1-13 GTX 330/330D Mode S Transponder

1.1.2.9 GEA 71

The GEA 71 receives and processes signals from the engine and airframe sensors.



Figure 1-14 GEA 71

1.1.2.10 GFC 600H

Foreword



CAUTION: *Do not use the GMC 605H USB port in flight. The port is not designed to provide power or data to external consumer devices such as smart phone, cameras, or tablets.*

Sec 1
System

The GFC 600H is a high performance, attitude-based AFCS that supports an extensive set of operating modes and safety features. Supported functions vary by installation. The GFC 600H provide the following main operating functions:

Sec 2
PFD

- **Attitude Hold (ATT)** - When in ATT, the GFC 600H system holds pitch/roll attitude.

Sec 3
MFD

- **Flight Director (FD)** - The FD function provides pitch and roll commands to achieve lateral and/or vertical control objectives. If the system is not coupled to the FD command, pitch and roll commands are displayed on the PFD as command bars. When the flight director is active, the pitch and roll commands can be hand-flown by the pilot. When the AFCS is coupled, the servos drive the flight controls to follow the commands issued by the flight director.

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

- **Yaw Axis Control** - The optional yaw function compensates for collective/yaw axis coupling, assists with dutch roll damping, provides turn coordination, and assists in maintaining heading in a hover. If installed the YD comes on when the autopilot is engaged. It can be turned on/off independent of the autopilot and may be used during normal hand-flying maneuvers.

Sec 6
Annun.
& Alerts

Sec 7
Symbols

- **Limit Cue** - The Limit Cue function provides a soft barrier to keep the aircraft within the operating envelope.

Sec 8
Glossary

Appendix A

Index

1.2 System Power Up



NOTE: See the Rotorcraft Flight Manual (RFM) for specific procedures concerning avionics power application and emergency power supply operation.



NOTE: Refer to Section 6 for system-specific annunciations and alerts.

The G500H System is integrated with the rotorcraft electrical system and receives power directly from electrical buses. The GDU 620 and supporting sub-systems include both power-on and continuous built-in test features that exercise the processor, memory, external inputs, and outputs to ensure safe operation.

During system initialization, test annunciations are displayed. All system annunciations should disappear typically within the first 30 seconds after power-up. Upon power-up, bezel key backlights also become momentarily illuminated on the GDU 620 display bezel.

On the PFD, the AHRS begins to initialize and “AHRS ALIGN: Keep Wings Level” is displayed. The AHRS should display valid attitude and heading fields typically within the first minute and a half after power-up. The AHRS can align itself during level flight.



NOTE: Fastest AHRS alignment is achieved with the rotorcraft stationary and with all AHRS inputs valid (3-D GPS position, magnetometer, and air data). During initial power up on the ground, no GPS position and/or magnetic anomalies are common. If the rotorcraft is moved prior to AHRS alignment, alignment may be delayed until after a valid 3-D GPS position is available.



NOTE: During in-flight alignment of the AHRS, minimize rotorcraft maneuvering. The AHRS will align with shallow banking and pitch angles (less than 20° of roll or 5° of pitch). AHRS alignment may not be possible during more aggressive maneuvers.

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

When the MFD powers up, the splash screen displays the following information:

- Software version and part number
- Basemap database version
- Terrain database version
- Obstacle database expiration date
- Aviation database expiration date
- Airport directory database expiration date
- Chart database status

Current databases display in white. Databases display in yellow if expired, not yet effective, or current GPS date/time is unavailable.



Figure 1-15 System Startup Pages

1.3 International Geomagnetic Reference Field

The IGRF (International Geomagnetic Reference Field) model is contained in the AHRS and is only updated once every five years. The IGRF model is part of the Navigation Database. At system power-up, the IGRF models in the AHRS and in the Navigation Database are compared, and if the IGRF model in the AHRS is out of date, the user is prompted to update the IGRF model in the AHRS. After the G500H splash screen is acknowledged on the MFD, the following update message appears.

For GRS 77/79:

GRS MV DB UPDATE AVAILABLE:
UPDATE AS FOLLOWS?
yyyy to yyyy
###-####-## to ###-####-##

For GSU 75:

GSU AHRS MV DB UPDATE AVAILABLE:
UPDATE AS FOLLOWS?
yyyy to yyyy
###-####-## to ###-####-##

To initiate the update process, follow the on-screen instructions.

- 1. When the Update message appears, press the ENT key with OK highlighted. To update at another time, turn the Large knob to highlight Cancel and then press ENT.

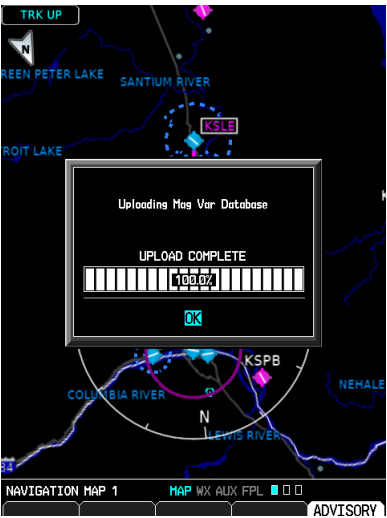


Figure 1-16 GRS MV DB Update

- 2. After the update is complete, press the ENT key to continue normal operation.

1.4 System Operation



NOTE: For detailed descriptions of all alerts and annunciations, refer to Section 6 on page 6-1.

1.4.1 Pilot Controls

The GDU 620 controls have been designed to simplify operation of the system and minimize workload and the time required to access functionality. Controls are located on the PFD and MFD bezels and are comprised of a PFD knob, MFD dual concentric knobs, bezel keys, and soft keys.

1.4.1.1 PFD Knob

Pressing the **PFD** knob performs the default action for the selected mode. For details, refer to the PFD Bezel Keys section.



Figure 1-17 Selection Modes Adjusted with the PFD Knob



NOTE: After 10 seconds of inactivity in another mode, the **PFD** knob selected mode will revert to Heading mode.

1. Press the desired PFD mode selection key (**HDG**, **CRS**, **ALT**, **V/S**, or **BARO**). A window will be displayed near the upper left corner of the HSI showing the current value for that mode.
2. Turn the **PFD** knob to select the desired value.

1.4.1.2 PFD Bezel Keys

Heading (HDG)

Selects Heading Select mode. This is the default mode for the **PFD** knob. Pressing the **PFD** knob in Heading mode will center the Heading Bug on the current Heading. Set the heading bug on the HSI by turning the **PFD** knob after pressing the **HDG** key.

Course (CRS)

Selects Course Select mode. Pressing the **PFD** knob in Course mode will center the CDI for a VOR or GPS OBS course.

Altimeter (ALT)

Selects Altitude Select mode. Pressing the **PFD** knob in Altitude Select mode will enter the current altitude in the Altitude Select window. Set the Altitude Bug by turning the **PFD** knob after pressing the **ALT** key.

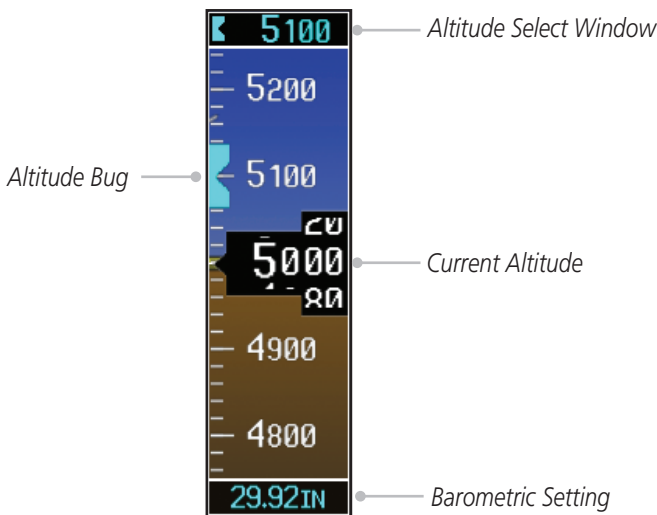


Figure 1-18 Pressing PFD Knob Sets Altitude Select to Current Altitude

Vertical Speed (V/S)

Selects Vertical Speed (V/S) mode. Pressing the **PFD** knob in V/S mode will synchronize the bug to the current vertical speed.

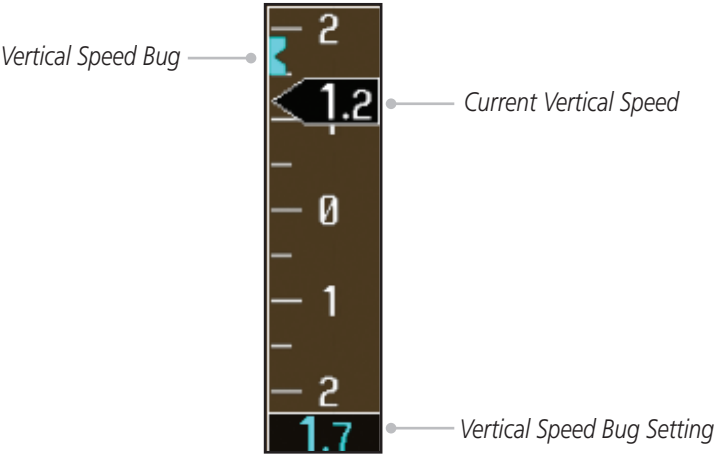


Figure 1-19 Pressing V/S Knob Sets Vertical Speed Bug to Current Vertical Speed

For helicopters with vertical speed operating limitations, red bands showing Vertical Speed Maximum and Minimum ranges will be shown on the left side of the Vertical Speed tape. When the Vertical Speed Indicator is in one of the red ranges, the background color of the Vertical Speed Indicator will turn red.

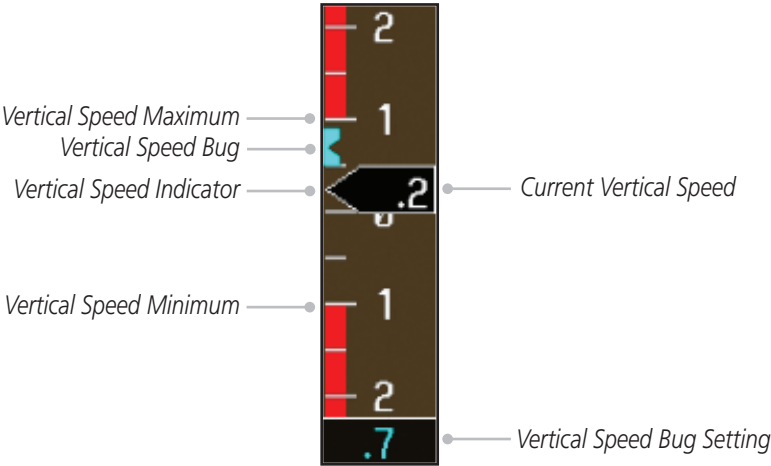


Figure 1-20 Vertical Speed Warning Indication

Barometer (BARO)

Selects Barometric Setting Select mode. Pressing the **PFD** knob in Baro mode toggles between standard pressure (29.92 in/1013 mb) and the previously selected value.

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

1.4.1.3 MFD Knobs

The MFD knobs are for navigating and selecting information on the MFD pages. More details are provided in the MFD section.

Small (Inner) MFD Knob

Selects a specific page within a page group. Pressing the small **MFD** knob turns the selection cursor ON and OFF. When the cursor is ON, data may be entered in the applicable window by turning the small and large **MFD** knobs. In this case, the large **MFD** knob moves the cursor on the page and the small **MFD** knob selects individual characters or values for the highlighted cursor location.

Large (Outer) MFD Knob

Selects the MFD page group. When the cursor is ON, the large **MFD** knob moves the cursor to highlight available fields.

1.4.1.4 MFD Bezel Keys

Range (RNG)

Pressing the Range arrow keys changes the range on the Map pages. The Up arrow zooms out. The Down arrow zooms in. The keys also aid in scrolling up and down text pages.

Menu

Displays a context-sensitive list of options. This list allows the user to access additional features or make setting changes that relate to particular pages.

Enter (ENT)

Validates or confirms a menu selection or data entry.

Clear (CLR)

Erases information, cancels entries, or removes page menus. Pressing and holding the **CLR** key displays the Navigation Map 1 page.

1.4.2 Using the Soft Key Controls

The soft keys are located along the bottoms of the displays. The soft key labels shown depend on the soft key level or page being displayed. The bezel keys below the soft keys can be used to select the appropriate soft key.

MFD functions indicated by the soft key labels vary depending on the page selected and are located at the bottom of the MFD display. Press the soft key located directly below the soft key label. To select the function indicated on the soft key label, press the soft key directly below the label.

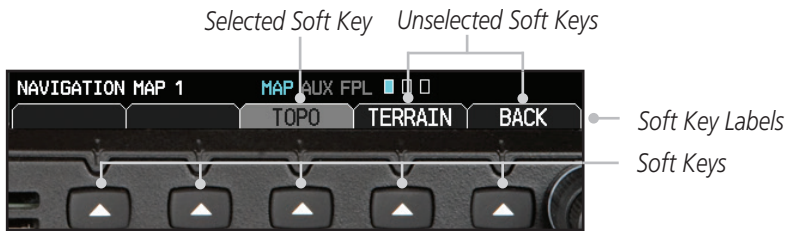


Figure 1-21 MFD Soft Key Layout

1.4.3 Using the Page Menus

The GDU 620 has a dedicated **MENU** key that when pressed displays a context-sensitive list of options for functions in the MFD. This options list allows the user to access additional features or make settings changes which specifically relate to the currently displayed window/page. There is no all-encompassing menu. Some menus provide access to additional submenus that are used to view, edit, select, and review options. Menu display “No Options” when there are no options for the window/page selected. Soft key presses do not display menus or submenus.

1.4.3.1 Navigating within a Menu

1. Press the **MENU** key to display the menu.
2. Turn the small or large **MFD** knob to scroll through a list of available options (a scroll bar always appears to the right of the window/box when the option list is longer than the window/box).
3. Press the **ENT** key to select the desired option.
4. Press the **CLR** key or **MFD** knob to remove the menu and cancel the operation.

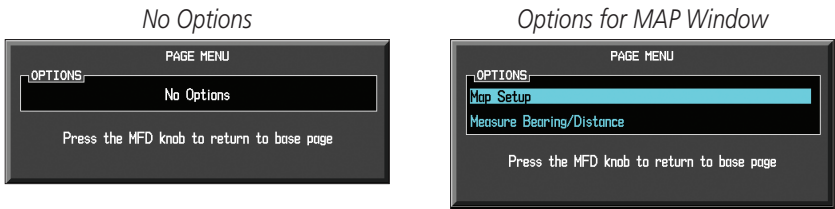


Figure 1-22 Page Menu Examples

1.4.4 System Settings

G500H system settings are managed from the Aux Mode System Setup Page. For details on how to change settings, refer to section 3.2.

- 1. From the first AUX page, press the small **MFD** knob and turn the large **MFD** knob to highlight the desired value.
- 2. Turn the small **MFD** knob to select ON or OFF.
- 3. Press **ENTER** to save the setting.

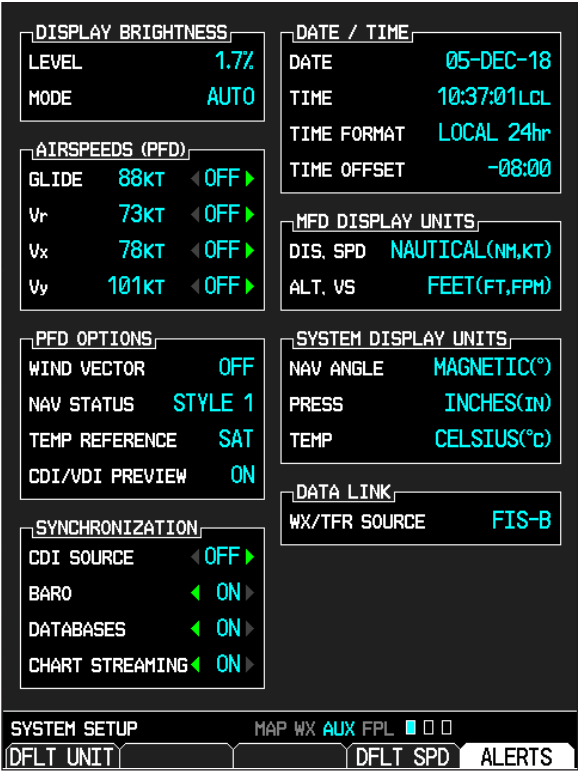


Figure 1-23 System Setup Page

Category	Settings	Affected Quantities	Exceptions	
Display Brightness	Level Mode	Brightness levels on the PFD and MFD		Foreword
Airspeeds	Glide (or REF) V_R V_X (OR V1) V_Y (OR V2)	Reference markers on PFD airspeed tape		Sec 1 System
Synchronization	CDI Source - On/Off BARO - On/Off Databases - On/Off Chart Streaming - On/Off	CDI Source, BARO Correction, Databases, and Charts	Not available in all installations.	Sec 2 PFD
PFD Options (Wind Vector)	Off, Style 1 - Style 4	PFD wind vector display format.		Sec 3 MFD
(NAV Status)	Style 1 - 2	Location of GPS navigation data.	Nav Status option not available in all installations.	Sec 4 Hazard Avoidance
Date/Time	Date Time Time Format Time Offset			Sec 5 Additional Features
CDI Preview	On/Off			Sec 6 Annun. & Alerts
Temperature Reference	SAT, TAT, ISA			Sec 7 Symbols
Distance and Speed	Imperial (SM, MPH) Metric (KM, KPH) Nautical (NM, KT)	Bearing distances (info window) Distance (info window) Flight plan distances Map ranges DIS field (Navigation Status Box) All distances on MFD All speeds on MFD	Airspeed Indicator True Airspeed Wind speed vector Map range (Traffic Page, Terrain Proximity Page)	Sec 8 Glossary Appendix A Index

Foreword
Sec 1 System
Sec 2 PFD
Sec 3 MFD
Sec 4 Hazard Avoidance
Sec 5 Additional Features
Sec 6 Annun. & Alerts
Sec 7 Symbols
Sec 8 Glossary
Appendix A
Index

Category	Settings	Affected Quantities	Exceptions
Altitude and Vertical Speed	Feet Meters	All elevations on MFD	Altimeter Vertical Speed Indicator
Navigation Angle	Magnetic (North) True (North)	Heading Course Bearing Track Desired Track	
Barometric Setting	Inches (in) Hectopascals (hpa)	Barometric pressure on PFD	
Temperature	Celsius Fahrenheit	All temperatures on PFD	
Data Link (WX/TFR Source)	SiriusXM FIS GFDS	Select weather source.	

Table 1-3 Display Units Settings (System Setup Page)

1.4.5 Display Backlighting

The backlighting of the PFD and MFD displays and bezel keys can be adjusted automatically or manually. The default setting (automatic backlighting adjustment) uses the photocell located at the top right corner of the bezel to automatically adjust for ambient lighting conditions. Photocell calibration curves are configured by the installer to optimize display appearance through a broad range of cockpit lighting conditions. Display backlighting adjustment can be manually controlled using the rotorcraft's existing instrument panel dimmer bus or performing the following procedures.

1.4.5.1 Backlighting Adjustment

1. From the first AUX page, press the small **MFD** knob to highlight the DISPLAY BRIGHTNESS, MODE box.
2. Turn the small **MFD** knob to select the desired brightness Level and then press **ENTER**.

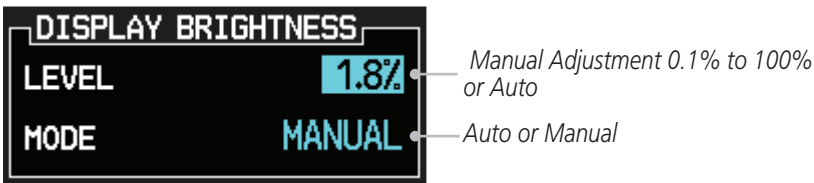


Figure 1-24 Display Brightness Adjustment

3. Turn the large **MFD** knob to highlight the MODE field. Turn the small **MFD** knob to select AUTO or MANUAL and then press **ENT**.

This page intentionally left blank

2 PRIMARY FLIGHT DISPLAY

Functions on the Primary Flight Display (PFD) are accessed by using the bezel keys on the side of the PFD and the soft keys below the PFD.

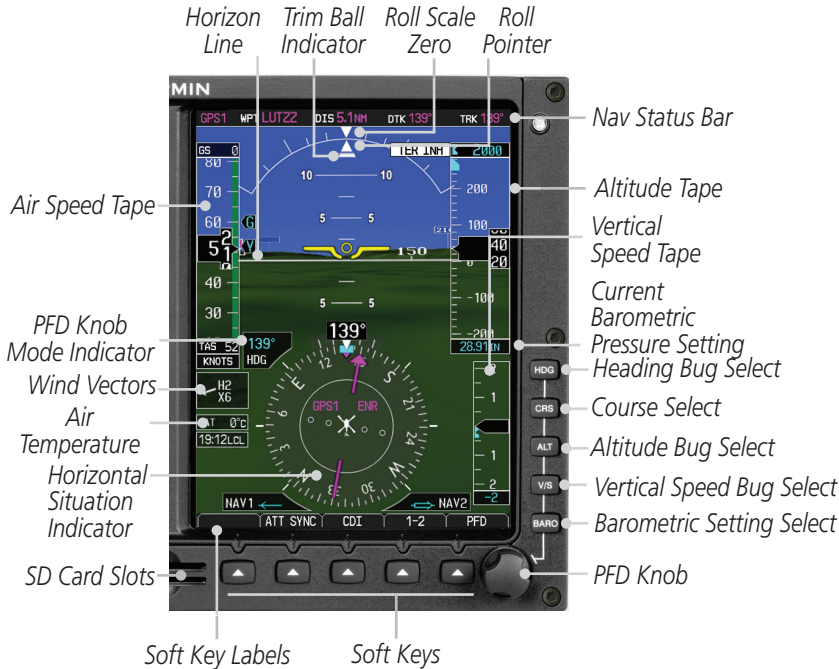


Figure 2-1 PFD Description (Ground Pointer Mode)

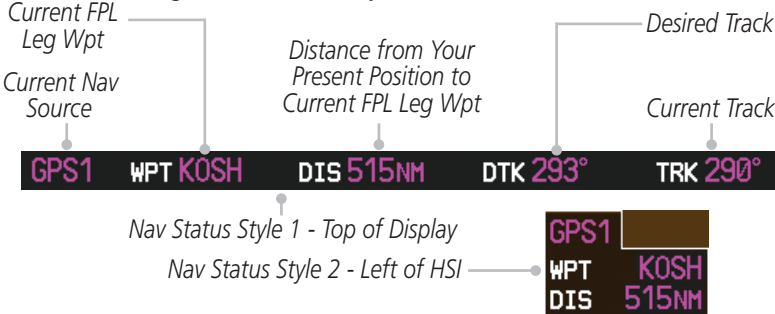


Figure 2-2 PFD Nav Status Bar Description



NOTE: When navigating to a waypoint very far away, the DTK, CRS, and TRK values displayed on the GDU 620 may differ from those displayed on the navigator, however the CDI is correct and is the primary means of navigation. This is because the GDU 620 applies magnetic variation corrections for the current rotorcraft location, but some navigators apply magnetic variation correction for the waypoint location.

2.1 PFD Soft Keys

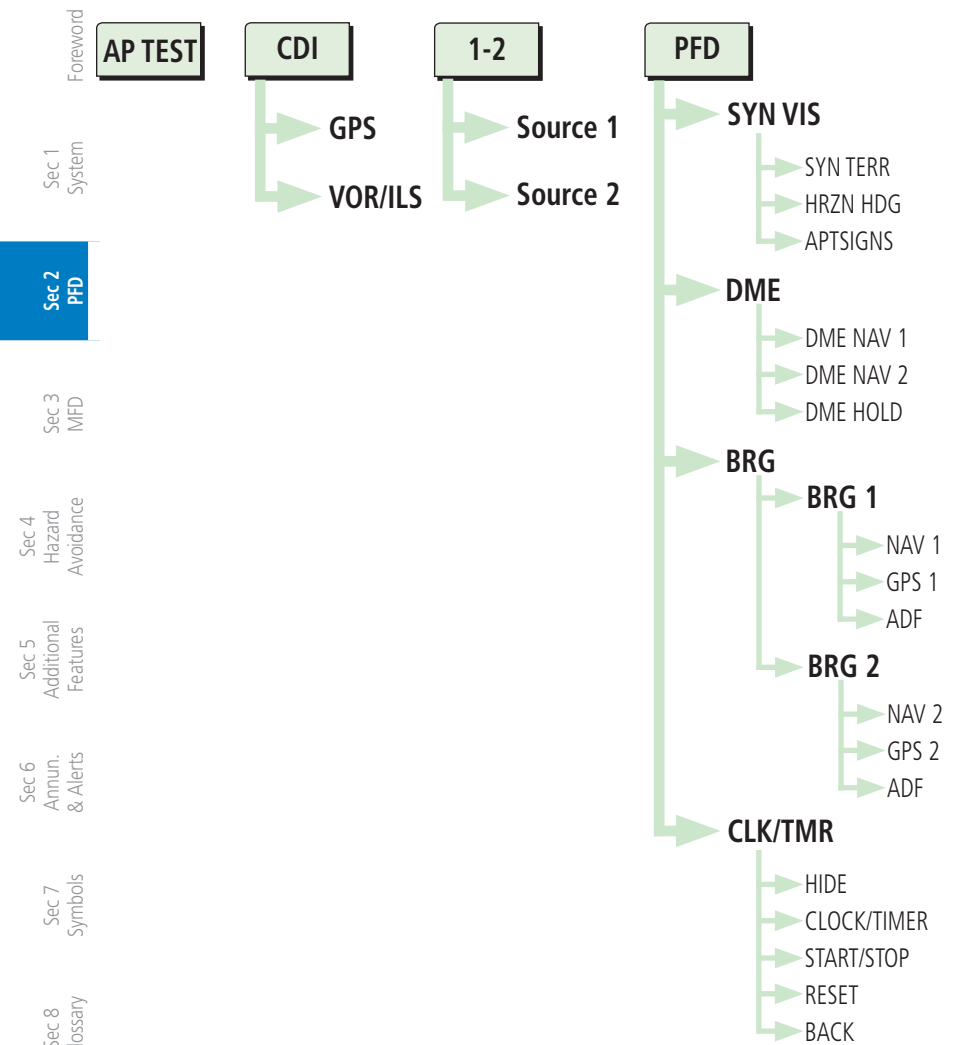


Figure 2-3 PFD Soft Key Diagram

The soft keys are located along the bottom of the displays below the soft key labels. The soft key labels shown depend on the soft key level or page being displayed. The soft keys can be used to select the appropriate soft key function.

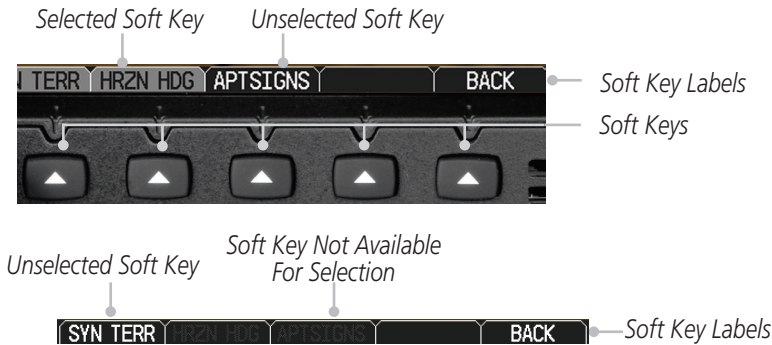


Figure 2-4 PFD Soft Key Layout

When a soft key is selected, its color changes to black text on gray background and remains this way until it is turned off, at which time it reverts to white text on black background. When a soft key function is disabled, the soft key label is subdued (dimmed).



NOTE: *If a soft key is pressed and held for longer than 1 second, it is ignored.*

AP Test

The **AP TEST** soft key is available if the GAD 43 is used to provide attitude information to an autopilot. The AP TEST soft key disengages the autopilot as part of the GAD 43 test.

CDI

The **CDI** soft key toggles between the selection of GPS or VOR/LOC as the active navigation source. In a single GDU 620 system, the GDU CDI soft key will change the source in the connected navigator and making a source change in the navigator will be reflected in the GDU 620. In a dual GDU 620 system, the CDI keys in the navigator will be disabled.

1-2

The **1-2** soft key toggles between the available receivers for selected navigation source (i.e. GPS1 and GPS2 or VOR/LOC1 and VOR/LOC2). This soft key will only be present if the system is configured for a second GPS or VOR/LOC.

PFD

Pressing the **PFD** soft key displays the **SYN VIS**, **DME**, **BRG**, and **BACK** soft keys. The **DME** and **SYN VIS** soft keys will only be present if the system is configured for these features.

BRG1

The **BRG1** soft key cycles through the available bearing 1 indicator modes (NAV1, GPS1, ADF, or None).

BRG2

The **BRG2** soft key cycles through the available bearing 2 indicator modes (NAV2, GPS2, ADF, or None). This soft key will only be present if the system is configured for a second GPS or VOR/LOC.

DME

The **DME NAV** soft keys select the DME submenu. For some installations, the **DME NAV** soft keys simply toggle the DME display on/off as the submenu options will not exist. The availability of the DME controls vary based on the installation.

The **DME NAV** soft keys select NAV 1 or 2 as the DME tuning source. If this soft key is pressed again when already selected, the DME display is removed from the PFD. Not all installations will have both NAV1 and NAV2 soft keys.

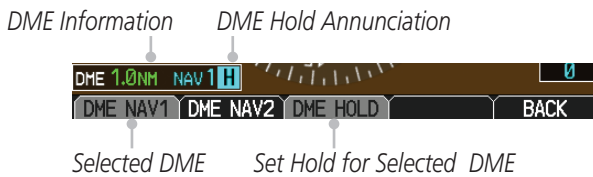


Figure 2-5 DME Soft Keys

DME HOLD

*DME HOLD activates/deactivates the DME tuning hold function. DME HOLD may be selected for either DME NAV 1 or DME NAV 2. The Hold function is automatically canceled when switching between NAV1 and NAV2 tuning sources. Not all installations will have the **DME HOLD** soft key.*

SYN VIS

The **SYN VIS** soft key is available if Synthetic Vision Technology is installed. It enables Synthetic Vision and displays the associated soft keys.

SYN TERR

The **SYN TERR** soft key is available if Synthetic Vision Technology is installed and enables synthetic terrain depiction.

HRZN HDG

The **HRZN HDG** soft key is available if Synthetic Vision Technology is installed. Pressing this key enables horizon heading marks and digits.

APTSIGNS

The **APTSIGNS** soft key is available if Synthetic Vision Technology is installed and enables airport sign posts for airports. Only heliports in the current flight plan are shown.

CLK/TMR

The Clock/Timer function displays a clock or timer window in the lower left corner of the PFD.

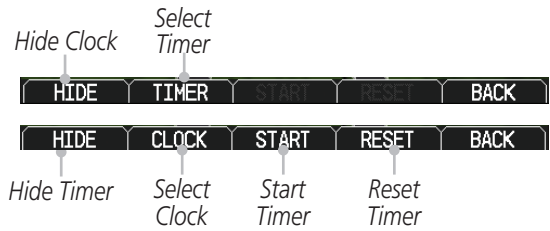


Figure 2-6 Clock and Timer Functions

BACK

The **BACK** soft key returns to the previous soft key menu.

2.2 Airspeed Indicator

The Airspeed Indicator displays airspeed on a rolling number gauge using a moving tape. The numeric labels and major tick marks on the moving tape are marked at intervals of 10 units, while minor tick marks on the moving tape are indicated at intervals of five units. Speed indication starts at 20 knots, regardless of the displayed units.



NOTE: *Airspeed units (KTS, MPH, KPH) are configured to match the approved units for the installation.*

The Airspeed Indicator provides Indicated Airspeed, True Airspeed, and Ground Speed. The Airspeed Trend Indicator shows what the airspeed will be in six seconds, if the current acceleration is maintained. The actual airspeed is displayed inside the black pointer.

The Airspeed Trend Vector is a vertical, pink/magenta line, extending up or down on the airspeed scale, shown to the right of the color-coded speed range strip. The end of the trend vector corresponds to the predicted airspeed in six seconds if the current acceleration is maintained. If the trend vector crosses into the overspeed range, the text of the digital airspeed readout changes to yellow. The trend vector is absent if the speed remains constant or if any data needed to calculate airspeed is not available due to a system failure.

When interfaced to the GFC 600H, the Vne Power-on and Power-off indications adjust to reflect the current Vne at the current altitude. Cold weather adjustments are not compensated for in the variable Vne depiction. Refer to aircraft specific flight manual supplements for additional details and limitations regarding the variable Vne indications.

Foreword
Sec 1 System
Sec 2 PFD
Sec 3 MFD
Sec 4 Hazard Avoidance
Sec 5 Additional Features
Sec 6 Annun. & Alerts
Sec 7 Symbols
Sec 8 Glossary
Appendix A
Index

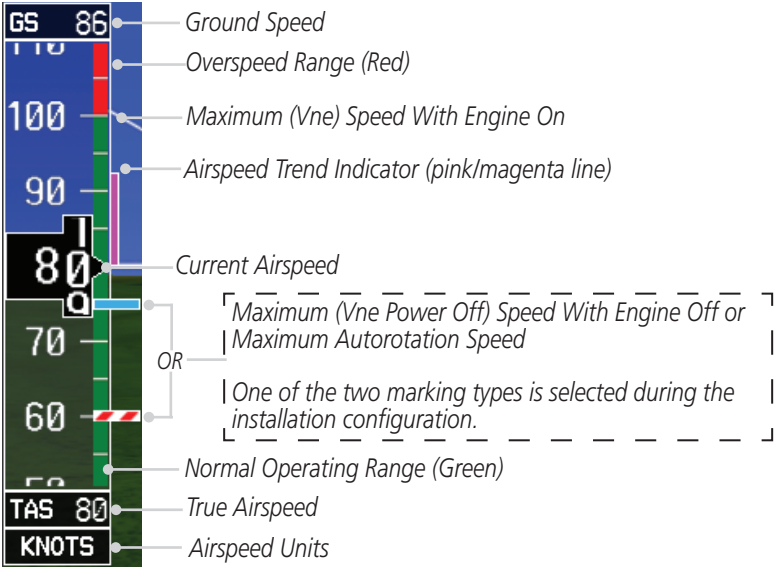


Figure 2-7 Airspeed Tape

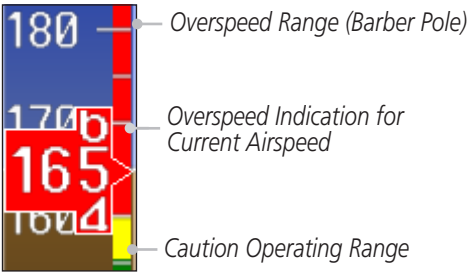


Figure 2-8 Overspeed Indication

The selected airspeed bug only displays when IAS mode is engaged on the GFC 600H.



Figure 2-9 Selected Airspeed Bug

2.2.1 Markings

A color-coded speed range strip is located on the moving tape. The colors are configured to match the approved markings for the installation. Refer to the RFM/POH.



NOTE: The actual colors and patterns of the airspeed tape may vary by installation. See your RFM/POH for more details.

2.2.2 Reference Speeds

V-speeds (Glide and V_y) default values are set during the installation process, but can be changed and turned on/off from the System Setup page on the first page of the Aux page group. When active (on), the V-speeds are displayed at their respective locations to the right of the airspeed scale.

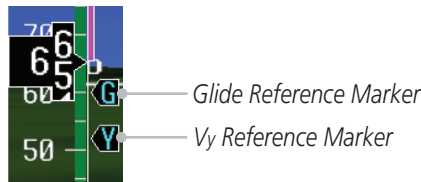


Figure 2-10 Reference Speeds

2.3 Attitude Indicator

Attitude information is displayed over a virtual blue sky and brown ground with a white horizon line. The Attitude Indicator displays pitch, roll, and slip/skid information.

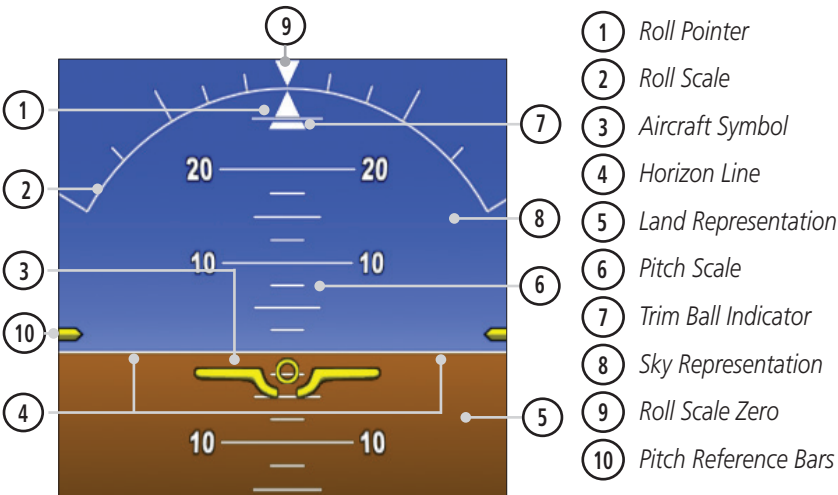


Figure 2-11 Attitude Indicator

The horizon line is part of the pitch scale. Above and below the horizon line, major pitch marks and numeric labels are shown for every 10°, up to 80°. Minor pitch marks are shown for intervening 5° increments, up to 25° below and 45° above the horizon line. Between 20° below to 20° above the horizon line, minor pitch marks occur every 2.5°.

Angle of bank is indicated by the position of the pointer on the roll scale. Major tick marks are 30° and 60° and minor tick marks are 10°, 20°, and 45° are shown to the left and right of the zero.

The Trim Ball Indicator is the bar beneath the roll pointer. The indicator moves with the roll pointer and moves laterally away from the pointer to indicate lateral acceleration. Trim is indicated by the location of the bar relative to the pointer. One bar displacement (as shown below) is equal to one ball displacement on a traditional Trim Ball Indicator.

Foreword
Sec 1 System
Sec 2 PFD
Sec 3 MFD
Sec 4 Hazard Avoidance
Sec 5 Additional Features
Sec 6 Annun. & Alerts
Sec 7 Symbols
Sec 8 Glossary
Appendix A
Index



Figure 2-12 Trim Indication

Ground/Sky Pointer mode is configured during installation and can not be changed by the pilot.

In a rotorcraft with an Attitude Indicator that has a Ground Pointer, the pointer above the Roll Scale shifts with the roll or bank angle of the rotorcraft to keep the Roll Scale Zero Pointer pointing towards the ground.



Figure 2-13 Attitude Indicator with a Ground Pointer Configuration in a Left Turn

In a rotorcraft with an Attitude Indicator that has a Sky Pointer, the pointer below the roll scale shifts with the roll or bank angle of the rotorcraft to keep the Roll Pointer pointing towards the sky.

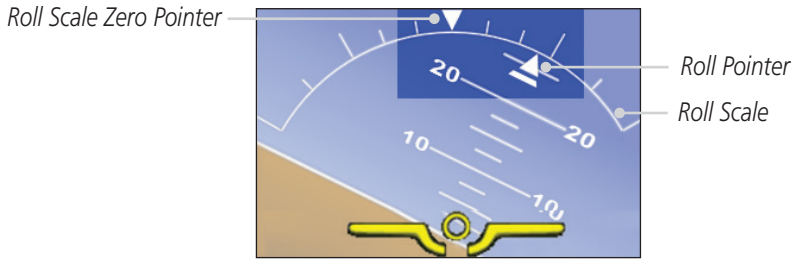


Figure 2-14 Attitude Indicator with a Sky Pointer Configuration in a Left Turn
Figure 2-15

2.3.1 Extreme Attitude

Extreme attitude is defined as a roll greater than 65° left or right, 30° pitch up, or 20° pitch down. Red chevrons are displayed at greater than 50° pitch up and 30° pitch down. The PFD will declutter when the rotorcraft enters an extreme attitude. Only the primary functions will be displayed in these situations.

The following information is removed from the PFD (and corresponding soft keys are disabled) when the rotorcraft is in an unusual attitude:

- BARO and Radar Altimeter Minimums
- Clock/Timer Field
- DME Field
- Fast/Slow Indicator
- Flight Director Command Bars
- GPSS Annunciation
- Knob Mode Annunciation
- Marker Beacon Annunciation
- NAV Status
- Outside Air Temperature
- Radar Altimeter Digital Readout
- Selected Altitude, Barometer Setting, and Selected Vertical Speed
- TAS Airspeed and Airspeed Units
- Traffic and Terrain Annunciations
- Vertical Course Deviation Indicator and Glideslope Annunciation
- Wind Field



Figure 2-16 Extreme Pitch Indication

Foreword

System
Sec 1

PFD
Sec 2

MFD
Sec 3

Hazard
Avoidance
Sec 4

Additional
Features
Sec 5

Annun.
& Alerts
Sec 6

Symbols
Sec 7

Glossary
Sec 8

Appendix A

Index

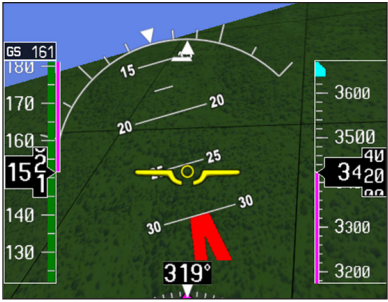


Figure 2-17 Extreme Pitch Indication Nose Down

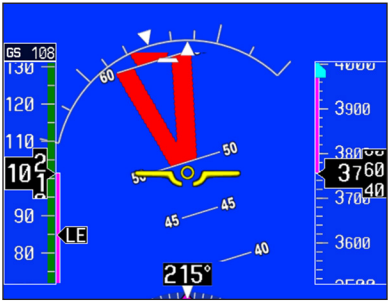


Figure 2-18 Extreme Pitch Indication Nose Up

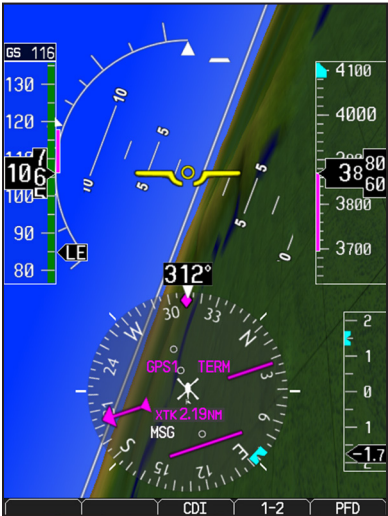


Figure 2-19 Extreme Roll Indication with Display Declutter

2.4 Altimeter

The altimeter displays the current altitude, altitude trend, altitude bug setting, altitude bug, and the current BARO setting.

The Altitude Trend Vector is a vertical, magenta line, extending up or down on the left side of the Altitude scale. The end of the trend vector corresponds to the predicted altitude in six seconds if the current vertical speed is maintained.

The Altitude Bug is displayed at the selected Altitude Bug setting. A portion of the Altitude Bug will be displayed at the top or the bottom of the altitude tape if the selected Altitude Bug is off of the tape.

When an optional Radar Altimeter is installed, the altitude received from the radar altitude will be displayed on the PFD. For details, refer to the Radar Altimeter section.

2.4.1 Setting the Altitude Bug and Alerter

Normally the altitude alerter only allows selection of altitudes in 100 foot increments. When a value other than 100 feet is set for the minimums value, it becomes a selectable value in the altitude alerter.

1. Press the **ALT** key to activate Altitude mode.
2. Turn the **PFD** knob to move the Altitude Bug to a desired altitude.
OR
3. Press the center of the **PFD** knob to set the selected altitude to the current altitude.

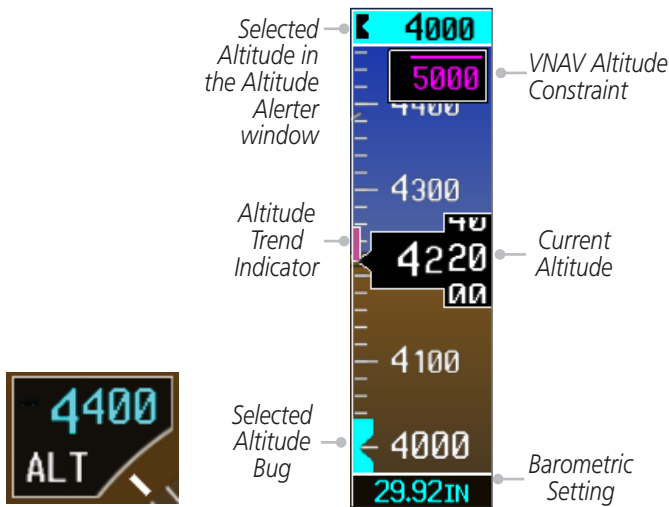


Figure 2-20 Altimeter

2.4.2 Altitude Alerting

The Altitude Alerting function provides the pilot with visual and aural alerts (if interfaced to an audio panel) when approaching the Selected Altitude. Whenever the Selected Altitude is changed, the Altitude Alerter is reset.



NOTE: The Altitude Alerter function may be disabled in some installations. When the Altitude Alerter is disabled, pressing the **ALT** key will result in an **ALT KEY INOP** message.

The following occur when approaching the Selected Altitude:

- Upon passing through 1,000 feet of the Selected Altitude, the Selected Altitude (shown above the Altimeter) changes to black text on a light blue background, and flashes for five seconds. An audio alert may be generated, if configured.
- When the rotorcraft passes within 200 feet of the Selected Altitude, the Selected Altitude changes to light blue text on a black background and flashes for five seconds and an aural tone may be generated, if configured.
- After reaching the Selected Altitude, if the pilot flies outside the deviation band (beyond ± 200 feet of the Selected Altitude), the Selected Altitude changes to yellow text on a black background, flashes for five seconds, and an aural tone is generated.

Within 1,000 ft



Within 200 ft



Deviation of ± 200 ft



Figure 2-20 Altitude Alerting Visual Annunciations

Foreword

System
Sec 1

PFD
Sec 2

MFD
Sec 3

Hazard
Avoidance
Sec 4

Additional
Features
Sec 5

Annun.
& Alerts
Sec 6

Symbols
Sec 7

Glossary
Sec 8

Appendix A

Index



NOTE: The aural tone when approaching the selected altitude may be configured at installation for either 200 feet or 1,000 feet. The tone when deviating from the selected altitude always occurs at 200 feet.

2.4.3 Vertical Navigation (VNAV) Altitude Constraints (Software v7.30 or Later)

VNAV altitude constraints display when vertical navigation guidance is received from a GTN 650/750 with software v6.50 or later. Altitudes are manually entered in the GTN or retrieved from the published altitudes in the navigation database. Altitude constraints are displayed in feet mean sea level (MSL) values to the nearest hundred. An altitude constraint in feet above ground level (AGL) is supported for airports.

Visual Annunciation	Description
	Indicates the aircraft must be at or above displayed altitude.
	Indicates the aircraft must be at or below displayed altitude.
	Indicates the aircraft must be at displayed altitude.

Table 2-22 Vertical Speed Settings

2.4.4 Changing Barometric Setting

The Barometric Setting affects the altitude values shown on the PFD. Barometric pressure units may be displayed as either inches (in) or hectopascals (hpa). For more details, refer to *System Display Units* in section 3.

1. Press the **BARO** key to activate Baro mode.
 2. Turn the **PFD** knob to increase or decrease the altimeter setting.
- OR
3. Press the **PFD** knob while in Baro mode to toggle between Standard Pressure (29.92 in) and the currently selected barometric setting.



Figure 2-23 Barometric Setting

2.4.4.1 Baro-Corrected Altitude Versus GPS-MSL Altitude

Baro-corrected altitude (or indicated altitude) is derived by adjusting the altimeter setting for local atmospheric conditions. The most accurate baro-corrected altitude can be achieved by frequently updating the altimeter setting to the nearest reporting station along the flight path. However, because actual atmospheric conditions seldom match the standard conditions defined by the International Standard Atmosphere (ISA) model (where pressure, temperature, and lapse rates have fixed values), it is common for the baro-corrected altitude (as read from the altimeter) to differ from the GPS-MSL altitude. This variation results in the aircraft's true altitude differing from the baro-corrected altitude.

2.4.5 Minimum Descent Altitude/Decision Height Alerting

For altitude awareness, a barometric Minimum Descent Altitude (MDA) or Decision Height (DH) alert can be displayed on the PFD. The values are set in the Active Flight Plan page or from the Charts page menu. When active, the minimum descent altitude setting is displayed in the minimums box at the bottom left of the altitude tape.



NOTE: The Altitude Minimums Alerting Bug appears parked at the bottom of the altitude tape as soon as a value is set in the minimums alerter. The bug will unpark and start to move up the tape as soon as the altitude is within the range of the tape. The bug is reset when power is cycled.

The following visual annunciations occur when approaching the MDA/DH:

- The minimums box displays the altitude in cyan text. When in range, the minimums bug displays in cyan on the altitude tape. A portion of the altitude minimums bug will be displayed at the bottom of the altitude tape if the selected altitude minimums bug is off of the tape.
- When the rotorcraft is within 100 feet of the selected altitude setting, the bug and text turn white.
- Once the rotorcraft reaches the selected altitude minimums setting, the bug and the altitude text turn yellow and the aural “Minimums, minimums” alert is made one time. The text remains in yellow until the rotorcraft altitude is more than 50 feet above the set altitude minimum value.



Figure 2-24 Barometric MDA/DH - Alerting Visual Annunciations

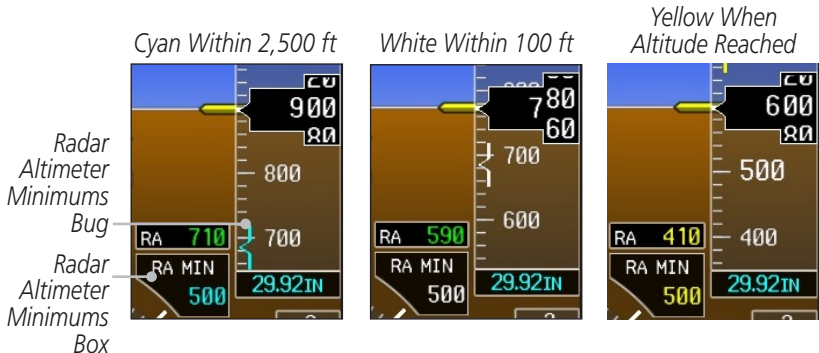


Figure 2-25 Radar Altimeter - Alerting Visual Annunciations

Foreword
Sec 1 System
Sec 2 PFD
Sec 3 MFD
Sec 4 Hazard Avoidance
Sec 5 Additional Features
Sec 6 Annun. & Alerts
Sec 7 Symbols
Sec 8 Glossary
Appendix A
Index

Alerting is inhibited while the rotorcraft is on the ground and until the rotorcraft reaches 150 feet above the selected Minimum Altitude. In dual installations, the minimums alerting altitude value may be set from either GDU 620 and will be synchronized on both units.

Setting the Altitude Minimums Bug is performed on either the FPL - Active Flight Plan page or the FPL - Charts page.

For information about setting the Altitude Minimums Bug on the Active Flight Plan page, refer to section 3 - MFD - Flight Plan Pages.

For information about setting the Altitude Minimums Bug on the Charts page, refer to section 5 - Additional Features - Charts Menu Selections.



NOTE: *If you highlight the minimums Altitude field and hit the CLR key, it will turn the minimums alerting functionality off.*

2.5 Vertical Speed Indicator

Vertical speed (V/S) data is presented on the bottom right of the PFD. A Vertical Speed bug and a bug setting are also available.

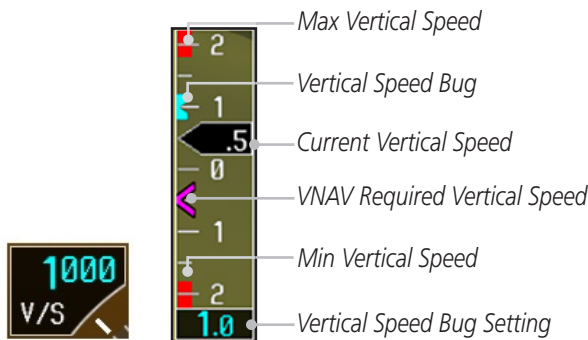


Figure 2-26 Vertical Speed (V/S) Tape and Window

The Vertical Speed Indicator (VSI) displays the rotorcraft vertical speed using a non-moving tape. The tape can be scaled at $\pm 2,000$, $\pm 3,000$, or $\pm 4,000$ fpm as set by the installer. Major gradations are every 1,000 fpm and minor gradations every 500 fpm. The current vertical speed is displayed in the pointer along the tape. Digits appear in the pointer when the climb or descent rate is greater than 100 fpm. If the rate of ascent/descent exceeds the vertical speed displayed on the tape, the pointer appears at the corresponding edge of the tape and the rate appears inside the pointer. The Vertical Speed Indicator range determines the airspeed tape range and altitude tape range.

VSI (set by installer)	Airspeed Tape Range	Altitude Tape Range
± 2000 fpm	60 kts	500 ft
± 3000 fpm	70 kts	600 ft
± 4000 fpm	80 kts	700 ft

Table 2-27 Vertical Speed Settings

2.5.1 Setting the Vertical Speed Indicator Bug

1. Press the **V/S** key to move the knob focus to the Vertical Speed Bug.
2. Turn the **PFD** knob to change the Vertical Speed Bug.
3. Press the center of the **PFD** knob to set the Vertical Speed value to the current vertical speed.

With an installed GFC 600H system, if the autopilot is not in V/S mode and the V/S key is pressed, a message displaying “KEY INOP V/S” appears.



Figure 2-28 Key Inop V/S Window

2.6 Horizontal Situation Indicator

The Horizontal Situation Indicator (HSI) displays a rotating compass card in a heading-up orientation. Letters indicate the cardinal points and numeric labels occur every 30°. Major tick marks are at 10° intervals and minor tick marks at 5° intervals. A digital reading of the current heading appears on top of the HSI, and the current ground track is represented on the HSI by a magenta diamond. The HSI also presents turn rate, course deviation, bearing, and navigation source information. The MSG annunciation will be shown in the HSI when an unacknowledged message is present on the selected navigator. When the message is acknowledged, the MSG annunciation will clear.

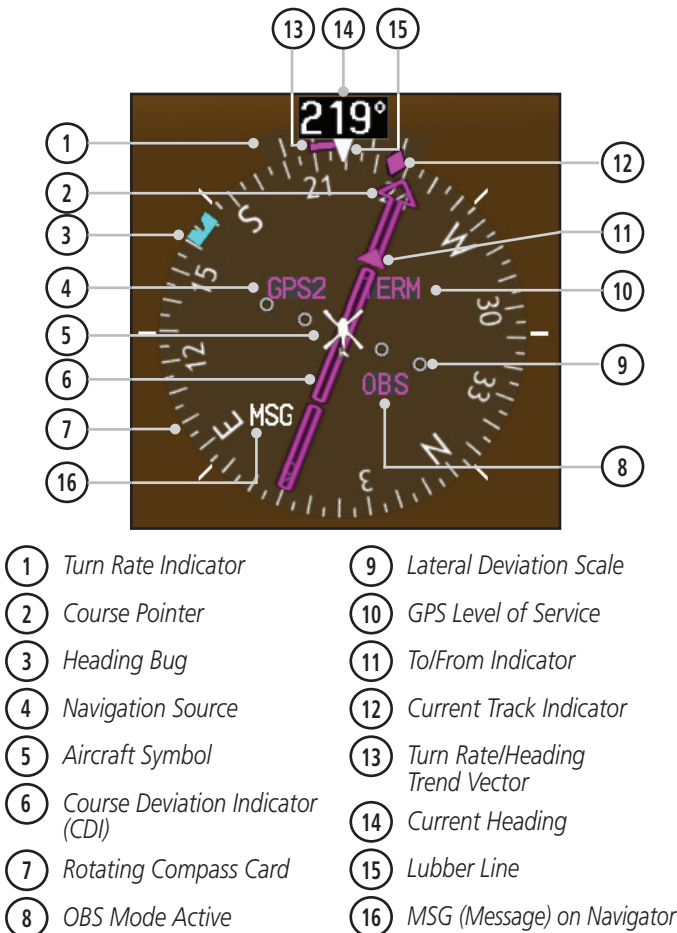


Figure 2-29 Horizontal Situation Indicator (HSI)

The 360° HSI contains a Course Deviation Indicator (CDI), with a Course Pointer, To/From Indicator, and a sliding deviation bar and scale. The course pointer is a single line arrow (GPS1, VOR1, and LOC1) or a double line arrow (GPS2, VOR2, and LOC2) which points in the direction of the set course. “LOC” will automatically be displayed if a localizer frequency is tuned. The To/From arrow rotates with the course pointer and is displayed when the active NAVAID is received.

2.6.1 Setting the Heading Bug

The Selected Heading is shown to the upper left of the HSI for 10 seconds after being adjusted. The light blue bug on the compass rose corresponds to the Selected Heading.



NOTE: The current heading will have a “T” to the right of the heading value when the Nav Angle is set to True in the System Setup page of the Aux page group.



Figure 2-30 Heading Bug Setting

1. Press the **HDG** key to activate HDG mode.
 2. Turn the **PFD** knob to change the Heading Bug.
- OR
3. Press the **PFD** knob in HDG mode to set the Heading Bug to the current heading.

2.6.2 Turn Rate Indicator

The Turn Rate Indicator is located directly above the rotating compass card. Tick marks to the left and right of the lubber line denote half-standard and standard turn rates. A magenta Turn Rate Trend Vector shows the current turn rate. The end of the trend vector gives the heading predicted in six seconds, based on the present turn rate. A standard-rate turn is shown on the indicator by the trend vector stopping at the standard turn rate tick mark, corresponding to a predicted heading of 18° from the current heading. At rates greater than 4° per second, an arrowhead appears at the end of the magenta trend vector and the prediction is no longer valid.



Figure 2-31 Turn Rate Indicator and Trend Vector

2.7 Course Deviation Indicator

The Course Deviation Indicator (CDI) moves left or right from the course pointer along a lateral deviation scale to display rotorcraft position relative to the course. If the course deviation data is not valid, the CDI is not displayed.

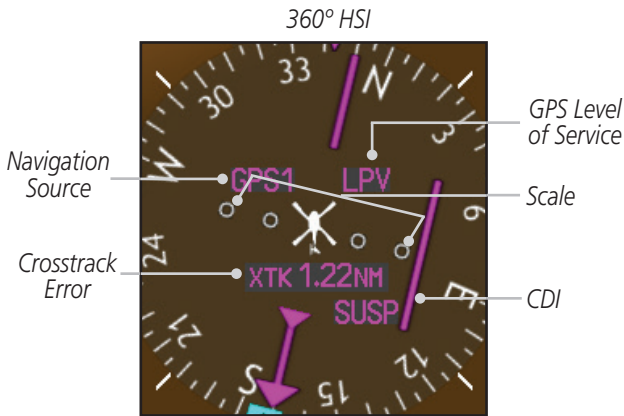


Figure 2-32 Course Deviation Indicator

NOTE: The ILS Localizer and Glideslope deviation indicators will indicate full-scale deflection for the GNS 480 navigator at the second dot. The GNS 400W/500W series navigators will indicate full-scale deflection at the edge of the display.

2.7.1 CDI/VDI Preview

When selected, CDI/VDI Preview displays the upcoming VOR/LOC approach in gray. CDI preview displays as gray hollow lines. Course angle and source displays in gray text. CDI preview displays for VLOC, LOC Backcourse, Glideslope, and Glidepath. It is not shown for GPS approaches.



Preview On



Preview Off

Figure 2-33 CDI/VDI Preview

2.7.2 Changing CDI Sources

The CDI can display two sources of navigation: GPS or NAV (VOR, and LOC). Color indicates the current navigation source: magenta (for GPS) or green (for VOR and LOC). The full-scale limits for the CDI are defined by a GPS-derived distance when coupled to GPS. When coupled to a VOR or localizer (LOC), the CDI has the same angular limits as a mechanical CDI. If the CDI exceeds the maximum deviation on the scale (two dots) while coupled to GPS, the crosstrack error (XTK) is displayed below the white rotorcraft symbol.

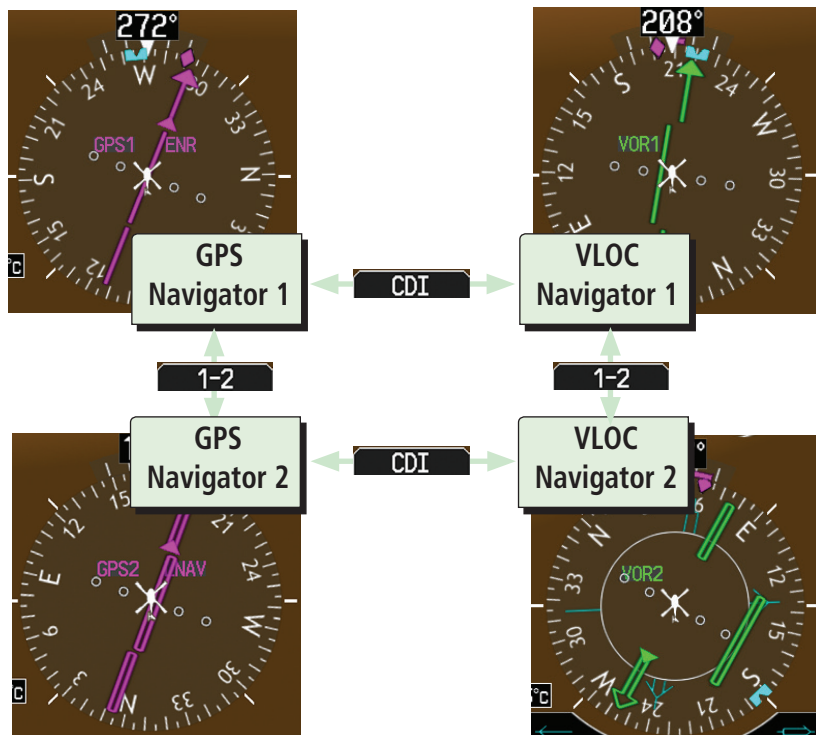


Figure 2-34 CDI Navigation Sources

1. Press the **CDI** soft key to toggle between GPS and VOR/LOC source type.
2. Press **1-2** soft key to toggle between the 1 and 2 navigators of the GPS or VOR/LOC sources.
3. Verify the navigation source by the indication on the HSI and in the upper left corner of the PFD.



NOTE: The selected navigator is the active navigator for all PFD and MFD operations, except for the supplemental bearing pointers.

2.7.3 Changing CDI Course

The Selected Course is shown to the upper left of the HSI for 10 seconds after being adjusted.



Figure 2-35 Course Setting

1. Press the **CRS** key to activate Course mode.
 2. Turn the **PFD** knob to change the Course values.
- OR
3. Press the **PFD** knob to set a Course that will center the CDI to the VOR station or waypoint if in GPS OBS mode.

2.7.4 Vertical Deviation Indicator

The Vertical Deviation (Glideslope) Indicator (VDI) appears to the left of the VSI whenever an ILS frequency is tuned in the active NAV field. A green diamond acts as the VDI Indicator, like a glideslope needle on a conventional indicator. If a localizer frequency is tuned and there is no glideslope signal, “NO GS” is annunciated. The glideslope on an ILS approach hides if the current track is more than 90° from the selected course. This prevents the glideslope from being displayed during localizer backcourse approaches.

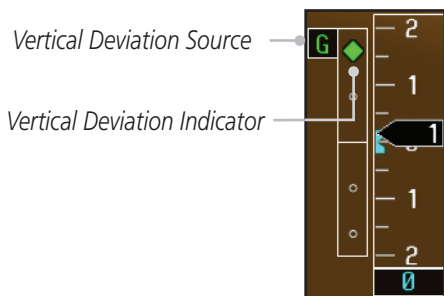


Figure 2-36 Vertical Deviation Indicator (ILS Source)

The vertical deviation is similar to the glideslope for GPS approaches supporting WAAS vertical guidance (LNAV+V, L/VNAV, LPV, LP+V). When an approach of this type is loaded into the flight plan and GPS is the selected navigation source, the Vertical Deviation Indicator appears as a magenta diamond. If the approach type downgrades to LNAV past the final approach fix (FAF), or the approach only supports LNAV service, “NO GP” is annunciated.

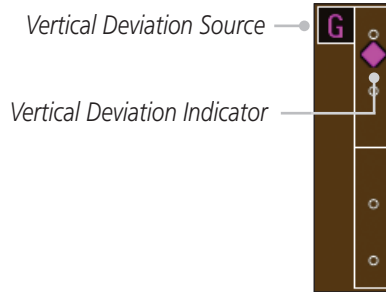


Figure 2-37 Vertical Deviation Indicator (GPS Source)

The VDI displays as a magenta chevron when VNAV guidance is received from a GTN 650/750 with software v6.50 or later. This feature is available on GDU 620s with software v7.30 or later.

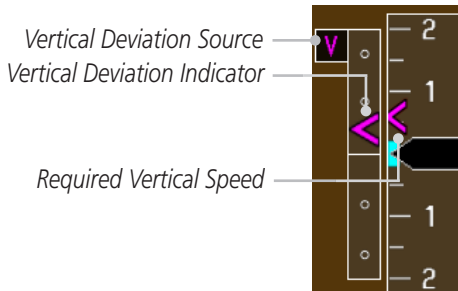
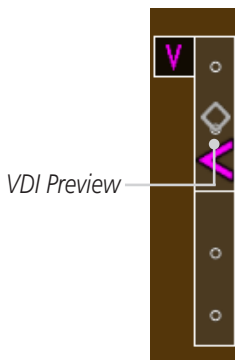


Figure 2-38 Vertical Deviation Indicator (VNAV)

When selected, CDI/VDI preview displays upcoming vertical navigation. VDI preview displays as a gray hollow diamond. VDI preview displays for Glideslope and Glidepath. If a Top of Descent alert is received from the GTN, the V blinks for 10 seconds.


Figure 2-39 VDI Preview

2.7.5 Auto-Slewing

The G500H system is designed to interface with GPS navigator units and also manage up to four different CDI course pointers (GPS1, NAV1, GPS2, NAV2) independently. The G500H will automatically slew the NAV course pointer to the correct final approach course when a ILS, LOC, LOC BC, LDA or SDF approach is active in the GPS navigator and the appropriate frequency is in the active window in the navigator. The G500H will Auto-Slew the HSI course pointer for an ILS, LOC, LOC BC, LDA, or SDF approach when the steps below are completed in the following order:

1. The desired approach is selected and activated in the navigator (this can be verified by the approach waypoints appearing on the GDU620 MFD Nav Map Page or FPL Page).
2. The appropriate frequency is the active frequency in the navigator.
3. The CDI selection on the GDU 620 is changed to NAV course pointer for the active navigator.



NOTE: If the NAV course pointer is displayed for the active navigator when the approach is activated and the localizer frequency is tuned, the pilot will need to switch to another CDI source and then back to NAV for the course pointer to Auto-Slew.

For example, if NAV1 is currently selected, the pilot must:

press the CDI soft key twice: NAV1>GPS1>NAV1

OR

press the 1-2 soft key twice: NAV1>NAV2>NAV1



NOTE: For LOC BC approaches, the course pointer will slew 180° from the inbound course.

Example of activating Auto-Slewing in the G500H:




Figure 2-40 Auto-Slewing HSI with ILS Loaded (Shown with Corresponding Approach Plate)

1. The rotorcraft is flying vectors to final on an active ILS approach, with the appropriate approach in the GPS navigator.
2. The appropriate ILS frequency must be activate in the navigator.
3. Verify that the waypoints for the approach are displayed on the Nav Map Page or the FPL Page of the MFD.
4. Upon approaching the final course, select LOC on the HSI.



NOTE: If auto CDI switching is active on the GPS unit, the GPS will force the GPS/GDU 620 to NAV when the rotorcraft is close to the LOC course.

5. The CDI and course pointer will change from magenta to green and the pointer will move, or slew, to the final approach course (or 180° from the final approach course for LOC BC approaches).

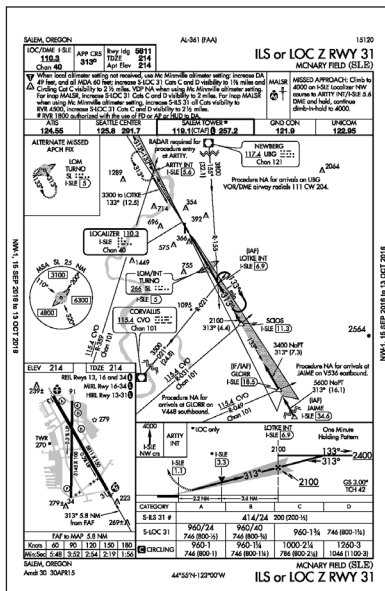

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts


Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

Course Pointer slewed to
313° for the Backcourse
to Runway 13

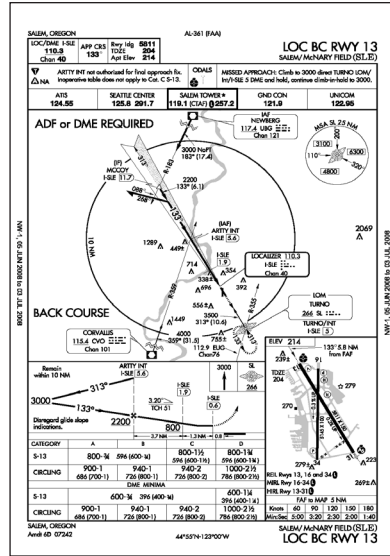

**Figure 2-41 Auto-Slewing HSI with Localizer Backcourse Loaded
(Shown with Corresponding Approach Plate)**

2.8 Supplemental Flight Data

2.8.1 Bearing Pointers

Two Bearing Pointers can be displayed on the HSI for NAV and GPS sources. The pointers are light blue and are single- (BRG1) or double-lined (BRG2); an icon is shown in the respective information window to indicate the pointer type. The system must be configured for a second navigation source to show the BRG2 selection.

When a Bearing Pointer is displayed, its associated information window is also displayed.

The Bearing Information windows are displayed to the lower sides of the HSI and show:

- Bearing source (GPS, NAV, or ADF)
- Pointer icon (BRG1 = single line, BRG2 = double line)

The Bearing Pointer is removed from the HSI if:

- The NAV radio is not receiving the tuned VOR station
- The NAV radio is tuned to a Localizer frequency
- GPS is the bearing source and an active waypoint is not selected
- ADF is selected and a signal is not received (if you have an ADF that supports a valid flag then the bearing pointer will be removed. If your ADF system does not include a valid flag then the bearing pointer will still be displayed, regardless of ADF signal validity.)

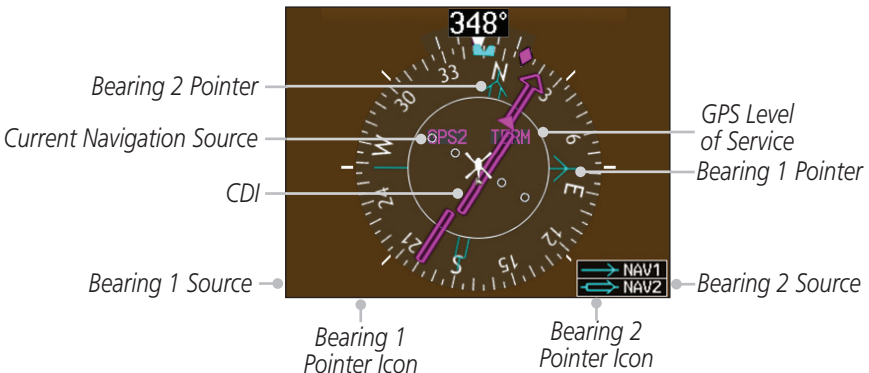


Figure 2-42 HSI with Bearing Information

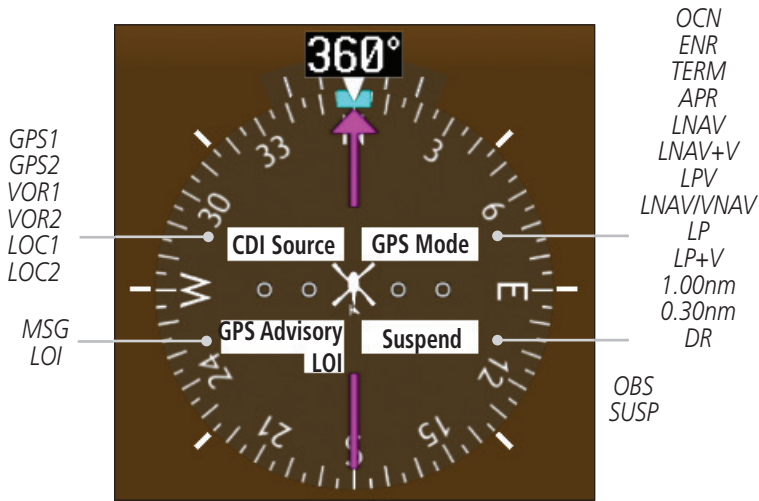


Figure 2-43 PFD HSI Annunciations

1. Press the **PFD** soft key to display the navigation source keys.
2. Press the **BRG 1** or **BRG 2** soft keys to toggle between the available Nav receivers of the selected source, e.g., GPS, NAV, or ADF.

NOTE: The Bearing Line for navigation source 1 (BRG1) will be a single line. The Bearing Line for navigation source 2 (BRG2) will be a double line.

2.8.2 Temperature Display

The outside air temperature is displayed to the left of the HSI. The air data computer calculates the temperature based on temperature probe and Pitot-static inputs. The units (°C or °F) and temperature reference are selected on the AUX – SYSTEM SETUP page. The temperature reference can be selected to one of the following choices:

- Static Air Temperature (SAT) – This is the calculated temperature of the stationary (static) outside air. Conceptually, this is the temperature that would be read on a thermometer floating stationary at the current location.
- Total Air Temperature (TAT) – This is the calculated temperature of the outside air as it moves past the rotorcraft, including the rise in temperature due to air compression and friction at the current airspeed.
- Difference from International Standard Atmosphere (ISA) – This is the difference between SAT and standard (ISA) temperature at the current altitude. This provides an indication of how much warmer/colder the temperature is from a standard atmosphere.



Figure 2-44 HSI Outside Air Temperature

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

2.8.3 Wind Vectors

When selected, wind vector information is displayed in a window on the PFD to the left of the HSI. The Wind Vector style is configured in the Aux Mode System Setup page. When the airspeed is less than 20 knots, the Wind Vector window will indicate “No Wind Data.”



Figure 2-45 Wind Vector with No Wind Data

Four styles are available as shown below.



Figure 2-46 Wind Vector Style

2.8.4 DME Indication

When selected, DME information is displayed in a window in the lower left corner of the PFD. The distance to the station and the Nav source used are shown.

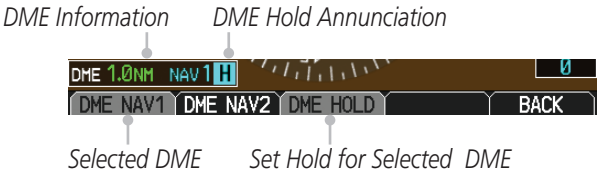


Figure 2-47 DME Indication



NOTE: The capability of providing DME information requires installation of the GAD 43e.

2.8.5 Marker Beacon Annunciations

A visual annunciation of marker beacons will be shown on the display when the rotorcraft flies over a marker beacon. The marker beacon annunciation will appear to the left of the altitude tape below the terrain annunciator on the PFD.

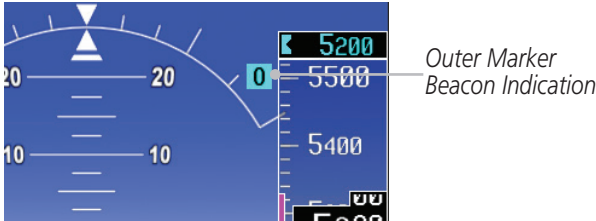


Figure 2-48 Marker Beacon Location

Current Beacon	Icon (Standard)	Icon (Blink)
Inner Marker		
Middle Marker		
Outer Marker		

Table 2-49 Marker Beacons

2.8.6 Miscompare Annunciations

Miscompare annunciations are capable of being displayed on the PFD if the miscompare Monitor is enabled during the installation configuration.


Messages will appear in the MFD alerts window if monitors are enabled and required data is not present.

A miscompare condition is triggered if the difference between the data reported by GDU 1 and GDU 2 exceeds the threshold described in the following table for at least one second.

Parameter	Range of Trigger	Threshold
Altitude	ALL	200 ft
Indicated Airspeed	Both IAS < 35 kts	Inhibited
Indicated Airspeed	Either IAS >= 35 kts	10 kts
Indicated Airspeed	Either IAS >= 80 kts	7 kts
Pitch	ALL	5°
Roll	ALL	6°

Table 2-50 Miscompare Conditions

A “MISCOMP” annunciation is displayed on the airspeed tape if a miscompare condition exists for indicated airspeed. A “MISCOMP” annunciation is displayed on the altitude tape if a miscompare condition exists for altitude. A “PITCH MISCOMP” annunciation is displayed over the pitch ladder if a miscompare condition exists for pitch and not roll. A “ROLL MISCOMP” annunciation is displayed over the pitch ladder if a miscompare condition exists for roll and not pitch. An “ATTITUDE MISCOMP” annunciation is displayed over the pitch ladder if a miscompare condition exists for both pitch and roll.

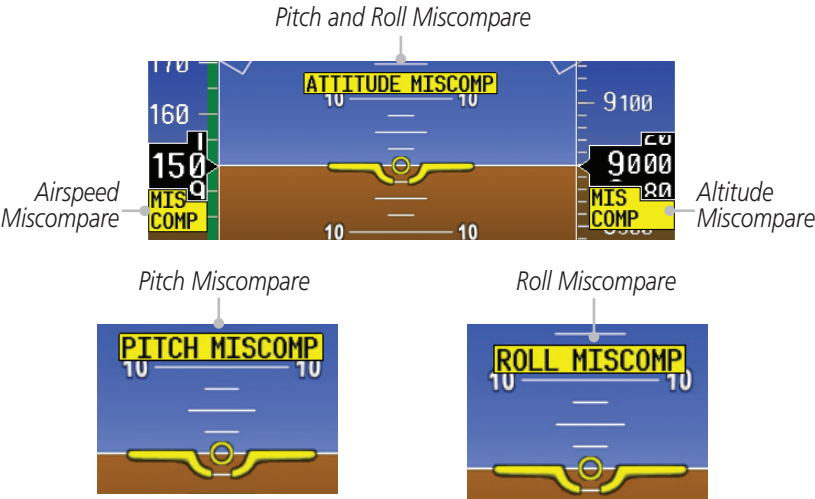

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

2.9 Attitude Sync

The ATT SYNC soft key toggles the miniature rotorcraft symbol between the absolute pitch reference and the horizon line at the time the soft key is pressed. Use of Attitude (ATT) Sync function moves the miniature rotorcraft to the horizon line and allows rotorcraft attitude to be controlled with more precision and less effort. When the ATT Sync function is active small reference marks are shown on the sides of the attitude indicator that show the absolute pitch reference. The miniature rotorcraft symbol cannot be synchronized to the horizon line if the pitch attitude is greater than $\pm 8^\circ$.

Pressing the **ATT SYNC** soft key will synchronize the rotorcraft symbol on the PFD to the horizon line. The **ATT SYNC** soft key will not be available for selection until the rotorcraft is near a level pitch attitude (within $\pm 8^\circ$).

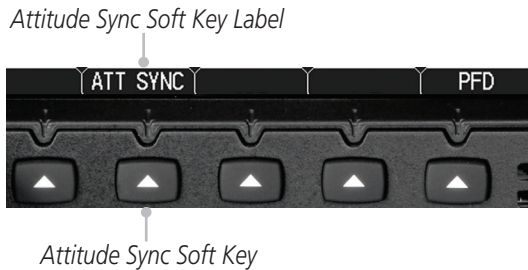


Figure 2-52 Before Attitude Sync Selected



Figure 2-53 Before Attitude Sync Selected



Figure 2-54 After Attitude Sync Selected

2.10 Radar Altimeter

When an optional Radar Altimeter is installed, the altitude received from the radar altitude will be displayed on the PFD.



NOTE: See the Radar Altimeter documentation for details on the radar altimeter performance and limitations.

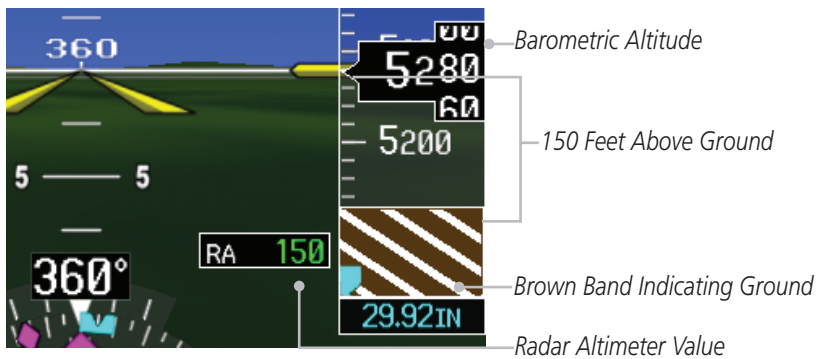


Figure 2-55 Radar Altimeter Display - 150 ft RA Altitude

When the radar altitude is 0, the brown band will be level with the altitude tape pointer. As the radar altitude increases above 0, the brown band will move down the tape in an amount equal to the current radar altitude.

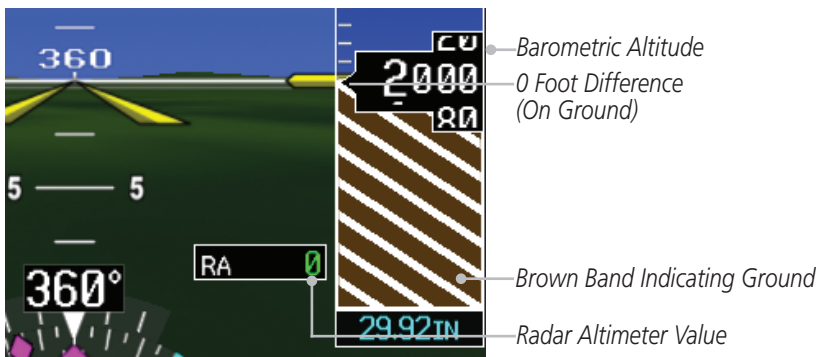


Figure 2-56 Radar Altimeter Display - 0 ft RA Altitude

The Radar Altimeter self-test process will be annunciated on the PFD above the Radar Altimeter altitude value. The self-test is a wiring test to indicate communication between the GDU and the Radar Altimeter. The self-test will be cancelled after 15 seconds, the Test key is pressed again, or you leave the System Setup page.



NOTE: *Not all Radar Altimeters have the TEST function.*

1. Turn the large **MFD** knob to Aux mode and then turn the small **MFD** knob to the System Setup page.
2. Press the **RA TEST** key. "RA TEST" will be annunciated above the Radar Altimeter value. The Radar Altimeter value will show a certain number to indicate that communication is taking place between the Radar Altimeter and the GDU. See your Radar Altimeter documentation for the appropriate value.



Figure 2-57 Radar Altimeter Test Annunciation

3. Press the **RA TEST** key again to stop the self-test.
4. If the unit fails the self-test, the RA value will not match the expected value. The "RA FAIL" annunciation will appear on the PFD when the GDU is not receiving any Radar Altimeter data. RA FAIL is not related to the self-test.



Figure 2-58 Radar Altimeter Failure Annunciation

Radar Altimeter Configurations

Depending on the installation, the pilot will have one of the following options.

1. BARO or RAD ALT minimums altitude alert, pilot selectable.
 - The minimums alerting value is defaulted OFF with a setting of 0 feet.
 - The pilot can select alerts ON or OFF and can select the alert altitude based on either barometric or radar altitude.
 - The alert upon descending through the selected altitude is the aural "Minimums, minimums" callout.
 - The altitude required to arm the alerting is 150 feet above the selected altitude.

Additionally, the unit may be configured by the installer for the following alerts.

- An aural "One Hundred Feet" alert is always provided when descending through 100 ft radar altitude.
- An alert will arm as soon as the radar altitude is above 100 feet.

2. RAD ALT only altitude alert, pilot selectable.

- The alerting value is defaulted ON with a setting of 200 feet.
- The pilot can select alerts ON or OFF, and select the alert altitude based on radar altitude.
- The alert upon descending through the selected altitude is a unique tone.
- The altitude required to arm the alerting is 50 feet above the selected altitude.

Additionally, the unit may be configured by the installer for the following alerts.

- An aural “One Hundred Feet” alert is always provided when descending through 100 ft radar altitude.
- An alert will arm as soon as the radar altitude is above 100 feet.

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

2.11 PFD Units

PFD units may be set to standard or metric units by the installer. The MFD units may still be selected by the user in the System Setup page of Aux mode.

Foreword	
Sec 1 System	
Sec 2 PFD	
Sec 3 MFD	
Sec 4 Hazard Avoidance	
Sec 5 Additional Features	
Sec 6 Annun. & Alerts	
Sec 7 Symbols	
Sec 8 Glossary	
Appendix A	
Index	

3 MULTI-FUNCTION DISPLAY

The Multi-Function Display (MFD) presents a color moving map with navigation information. Moving map information is shown on the two Navigation Map pages and the optional Weather (WX) pages. The Navigation Map displays aviation data (e.g., airports, VORs, airways, airspace), geographic data (e.g., cities, lake, highways, borders), topographic data (map shading indicating elevation), and hazard data (e.g., traffic, terrain, weather). The map options set for Navigation Map page 1 are used as the default settings for the optional Weather (WX) pages. Which data is displayed can be controlled by the DCLTR soft key and map page MENU selections. The Navigation Map can be oriented four different ways: North Up (NORTH UP), Track Up (TRACK UP), Desired Track Up (DTK UP), or Heading Up (HDG UP).

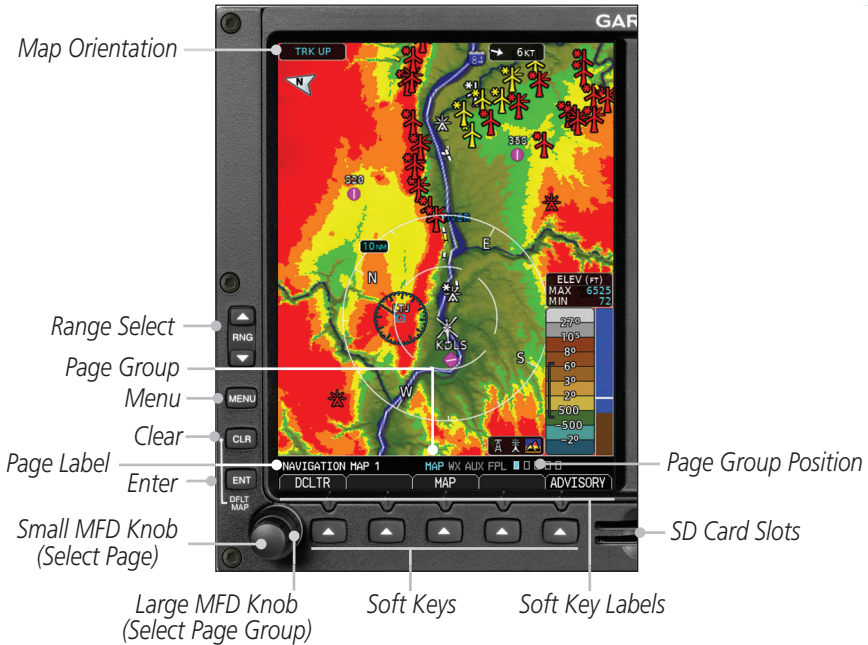


Figure 3-1 MFD Description

The nose of the rotorcraft icon is placed on the Navigation Map at the location corresponding to the calculated present position. The rotorcraft position and the flight plan legs are based on information received from the currently selected GPS navigator. The leg of the active flight plan currently being flown is shown as a magenta line on the navigation map. The other legs are shown in white.

There are map ranges available, from 500 feet to 500 NM. The range is now indicated in the box on the range ring at the 11 o'clock position relative to the ownship. To change the map range on any map, press the **RNG** keys on the right side of the bezel.

3.1 Navigation Map Pages

Map displays are used extensively in the GDU 620 to provide situational awareness in flight. The following information can be displayed on the Navigation Map Pages:

- Airports, NAVAIDs, airspace, airways, land data (highways, cities, lakes, rivers, borders, etc.) with names
- Map Pointer information (distance and bearing to pointer, location of pointer, name, and other pertinent information)
- Map range
- Wind direction and speed
- Map orientation
- Icons for enabled map features
- Aircraft icon (representing present position)
- Nav range ring
- Flight plan legs
- Track vector
- Topography scale
- Topography data
- XM NEXRAD Weather
- XM Lightning
- XM Storm Cells
- Traffic
- Stormscope
- Top of Climb
- Terrain data (includes terrain, obstacles, and power lines)

For details about the symbols used on the MFD, refer to section 7.



NOTE: Page Group and Page are shown at the bottom of the MFD.



Figure 3-2 Page Group and Page Locator

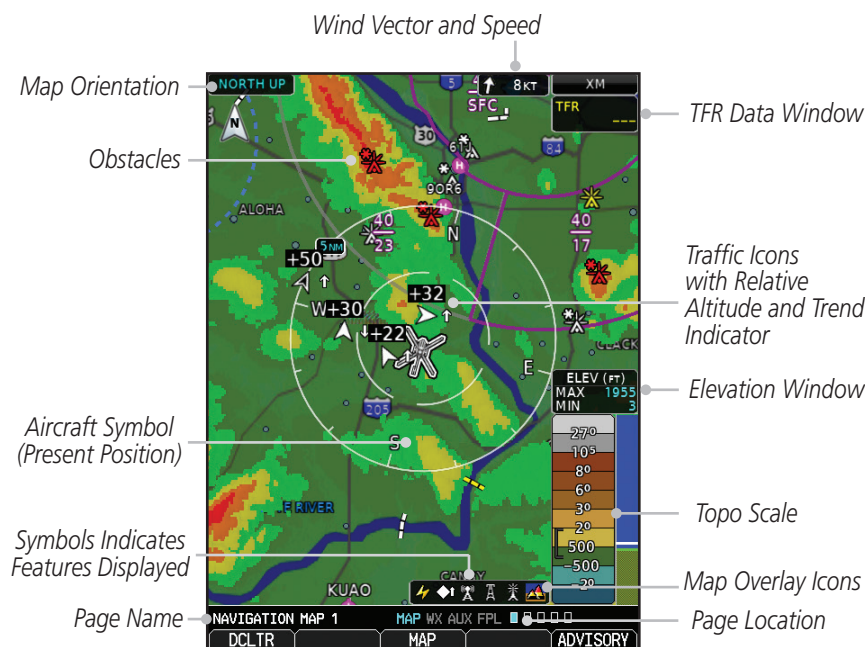


Figure 3-3 MFD Map Description

3.1.1 Default Navigation Map Page

While on any page of the MFD, you may easily return to the first Navigation Map page of the Map group by pressing and holding the **CLR** key to return to the first page (Home Page) of the Map group.

3.1.2 Map Overlay Icons

Overlay icons are displayed to indicate data that will be depicted on the map pages. The icons are shown in the following figure. If the icon is not displayed, either the menu selection is not ON to display the data or the display range makes the data ineligible for display. If the icon has a white X over it then the data is selected ON and the zoom scale is correct, but the underlying data is not available for some reason. All of the icons may not be displayed at the same time. In some cases if one feature is selected, another icon and feature may be disabled. The pilot should check the dedicated page for the feature that the icon represents to determine why the data is not available for display (e.g., fail, standby).

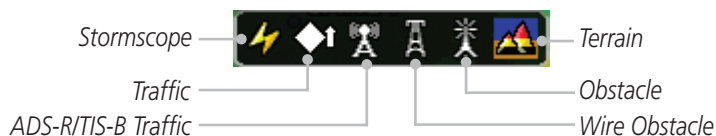


Figure 3-4 Map Overlay Icon Samples

3.1.3 Selecting Page Options

1. Change the fields or the setup of a page by pressing the **MENU** key and make the necessary adjustments with the **MFD** knobs.
2. Turn the large **MFD** knob to select desired item.
3. Turn the small **MFD** knob to change the highlighted value.
4. Press **ENT** to accept the displayed value.
5. Press the small **MFD** knob to cancel selection or to end editing.

3.1.4 Changing the Navigation Map Range

The Range (RNG) keys on the right side of the bezel are used to change the map display range. Pressing the  **RNG** key will zoom out (increasing the displayed map range) and pressing the  **RNG** key will zoom in (decreasing the displayed map range). The Map Range is shown on the outer range ring. The map ranges available are from 250 feet to 500 NM.

3.1.5 Decluttering Map Pages

The Map Declutter feature allows the pilot to progressively step through four levels of decluttering to remove map information. The declutter level is displayed in the **DCLTR** soft key.



Figure 3-5 Map Declutter Soft Key

1. There are four levels of decluttering. DCLTR (0) shows the most detail. DCLTR-3 removes the most detail.
2. While viewing one of the Navigation Map pages, press the **DCLTR** soft key. Each successive press of the **DCLTR** soft key will toggle through the declutter levels. In the following table, features marked with a “•” are shown at the indicated Declutter Level. Features shown at level 0 will be displayed at all Declutter levels.



NOTE: Traffic is automatically decluttered from Nav Map pages when the map scale is above 40 NM.

Feature	0	1	2	3	Feature	0	1	2	3
Airways	•				Intersections	•	•		
Land/Country Text	•				Tower	•	•		
Large City	•				TRSA	•	•		
Medium City	•				ADIZ	•	•		
Small City	•				Alert Areas	•	•		
Small Town	•				Caution Areas	•	•		
Freeways	•				Danger Areas	•	•		
Highways	•				Warning Areas	•	•		
Roads	•				Large Airports	•	•	•	
Railroads	•				Medium Airports	•	•	•	
Political Boundaries	•				Prohibited Areas	•	•	•	
Traffic Symbols	•				MOAs	•	•	•	
Lat/Lon Grids	•	•			Runway Labels	•	•	•	
VORs	•	•			Lightning Strike Data	•	•	•	
VRPs	•	•			NEXRAD Data	•	•	•	
NDBs	•	•			River/Lake Names	•	•	•	•
Class B Airspace	•	•			Traffic Labels	•	•	•	•
Class C Airspace	•	•			Water Detail	•	•	•	•
Class D Airspace	•	•			Active FPL Legs	•	•	•	•

Table 3-6 Features Shown at Each Decluttering Level

3.1.6 Panning

The Panning Map Page function allows you to move the map beyond its current limits without adjusting the map scale and to examine information at the pointer location. When you select the panning function — by pressing the small **MFD** knob — a target pointer flashes on the map display. A window also appears at the top of the map display showing the latitude/longitude position of the pointer, the ETE from your present position to the pointer, elevation at the pointer, and bearing and distance to the pointer from your present position.

Information is related
to the tip of the pointer

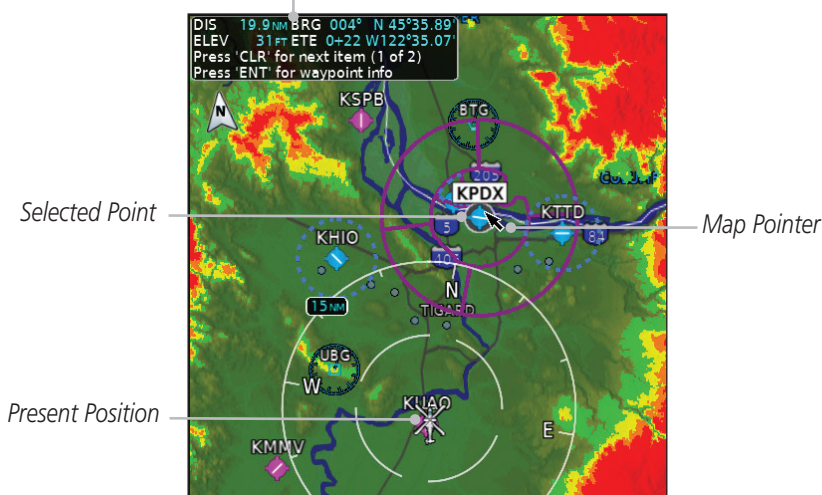


Figure 3-7 Navigation Map Pointer Location Information

1. While viewing a Map, press the small **MFD** knob. A flashing pointer will appear in the tip of the ownship symbol. As the arrow is moved, the measured information is referenced to the tip of the arrow.

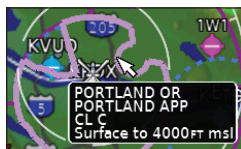


Figure 3-8 Navigation Map Initial Pointer Location

2. Turn the large **MFD** knob to move the cursor horizontally. Turn the small **MFD** knob to move the cursor vertically.
3. Press the small **MFD** knob again to cancel panning. The display will return to the previous map view.

3.1.7 Selecting Items on the Map

When the target pointer is placed on an object, the name of that object is highlighted (even if the name wasn't originally displayed on the map). This feature applies to airports, NAVAIDs, user-created waypoints, roads, lakes, rivers — just about everything displayed on the map except route lines. When an airport, NAVAID, or user waypoint is selected on the map display, you can review information about the item.

1. While viewing the Navigation Map pages of the Map page group, press the small **MFD** knob to activate panning.
2. Move the cursor with the small and large **MFD** knobs to highlight a feature.
3. Press **ENT** to display information about the highlighted feature.
4. Press one of the soft keys for details of the selected topic.
5. Press the small **MFD** knob again to return to panning.

3.1.8 Measuring Distances

The Measure Bearing/Distance function provides a quick and easy method to determine the bearing and distance between any two points on the Navigation Map.

1. While viewing one of the Navigation Map pages of the Map page group, press **MENU**.
2. Turn the large or small **MFD** knobs to highlight Measure Bearing/Distance and then press **ENT**.




Figure 3-9 Navigation Map Measure Distance Function

3. Your present position will be marked as the starting reference point. To choose a different starting reference point, turn the large or small **MFD** knobs to desired point and press **ENT**.



Figure 3-10 Measure Distance Starting Reference Point

4. Turn the large or small **MFD** knobs to move the cursor to a reference point. The distance and bearing is displayed at the top of the display.

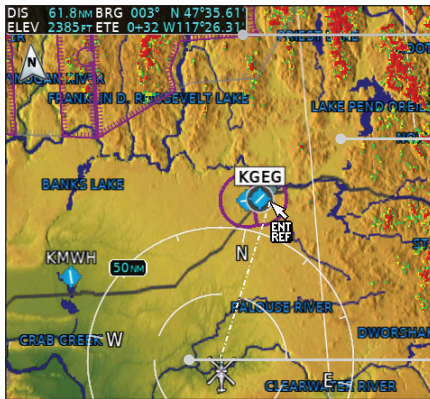

Ending Reference Point position

Ending Reference Point

Starting Reference Point

Figure 3-11 Bearing/Distance Measurement

5. Press the small **MFD** knob to stop measuring.

3.1.9 Customizing Navigation Map Pages

The Navigation Map pages are customized by selecting options from the Page Menu. The Page Menu options include choices for Map Setup and Measure Bearing/Distance. The Map Setup choice covers selections for Map, Weather, Traffic, and Aviation depending on the installed equipment of a given rotorcraft.

3.1.10 Map Setup

The Map Setup selection from the Page Menu allows you to select which data will be displayed on the map.

1. While viewing one of the Navigation Map pages of the Map page group, press the **MENU** key to display the Navigation Map Page Menu.



Figure 3-12 Navigation Map Page Menu

2. With the cursor flashing on the Map Setup option. Press the **ENT** key to display the Map Setup Menu.

3. Use the large and small **MFD** knobs to select the Group (Map, Weather, Traffic, or Aviation) and press **ENT** to allow editing of the selected group. The groups shown depend on the features available for equipment installed in your rotorcraft.



Figure 3-13 Navigation Map Page Menu Map Group Selection

4. Press the small **MFD** knob to return to the Navigation Map Page.

Map Group		Weather Group (optional)		Traffic Group (optional)		Aviation Group	
Menu Item	Settings	Menu Item	Settings	Menu Item	Settings	Menu Item	Settings
Orientation	Direction	NEXRAD Viewing Range	Off/Range	Traffic	Off All Traffic TA/PA TA Only	Safe Taxi Viewing Range	Off/Range
North Up At	Off/Range	NEXRAD Cell Mov	Off/Range			Rwy Extension Range	Off/Range
Auto Zoom	On/Off	NEXRAD Legend	On/Off			INT/NDB Viewing Range *	Off/Range
Land Data	On/Off	NEXRAD Source	US/Canada CONUS/ Regional/ Combined ***			VOR Viewing Range*	Off/Range
Track Vector Length	Off/Time	XM Ltng	Off/Range			Class B/ TMA *	Off/Range
Wind Vector	On/Off	Stormscope Viewing Range	Off/Range			Class C/ TCA *	Off/Range
Enhanced Range Ring	On/Off	Stormscope Strike/Cell Mode	Strike/Cell			Class D *	Off/Range

Map Group		Weather Group (optional)		Traffic Group (optional)		Aviation Group	
Menu Item	Settings	Menu Item	Settings	Menu Item	Settings	Menu Item	Settings
Topo Data	On/Off	PRECIP Data Viewing Range	Off/Range			Restricted*	Off/Range
Topo Scale	On/Off	PRECOP Legend	On/Off			MOA (Military)*	Off/Range
Terrain Data	On/Off	DL LTNG Data Viewing Range	Off/Range			Other/ADIZ *	Off/Range
Obstacle Viewing Range	Off/Range					TFR *	Off/Range
Power Line Viewing Range	Off/Range					Airways	Off/Modes
Lat/Lon Viewing Range	Off/Range					Smart Airspace	On/Off
Field of View**	On/Off					Show Airspaces	All/Altitude
Selected Alt Range Arc	On/Off					Airspace Labels	On/Off
						VRP Viewing Range	Off/Range

* - shown if the Aviation database is current. ** - shown if Synthetic Vision is available. *** - shown if FIS-B is NEXRAD weather source.

Table 3-14 Navigation Map Page Menu Selections

3.1.10.1 Map Feature Options

Choose the options to determine the values for display on each Navigation Map. The options you save will be retained until changed. The options may be selecting by using the following procedure:

1. While viewing the Navigation Map 1 or 2 of the Map page group, press the **MENU** key. With Map Setup highlighted, press **ENT**. With the Map Group active, turn the large **MFD** knob to highlight the desired option.

2. Turn the small **MFD** knob to change the highlighted value.
3. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

Map Orientation

The Orientation option sets the orientation of the Navigation Map.



Figure 3-15 Navigation Map Orientation

North Up At

The North Up At option allows you to select the map range where at and above the selected value the Map Orientation will automatically change to North Up. For example, with the 500 NM value selected and the map range of the MFD is 500 NM or more, the map orientation will automatically become North Up.

Auto Zoom

With a valid flight plan, the Auto Zoom feature will automatically change the Navigation Map range depending on the distance to the next waypoint in the flight plan. If enabled, it will also automatically zoom to the SafeTaxi zoom range when the rotorcraft is on the ground. Auto Zoom can be overridden at any time by manually zooming with the **RNG** keys or enabling OBS mode. Auto Zoom is re-enabled during any one of the following conditions:

- The active waypoint changes during flight. (This does not include hovering.)
- The rotorcraft lands, or is between local and en-route modes.
- OBS mode is disabled.
- The Navigation Map's Auto Zoom setting is changed.

Land Data

The Land Data option selects whether detailed land features, such as rivers, roads, cities, are displayed. Topo features, traffic, terrain, and will still be displayed, even with Land Data turned off.

Track Vector Length

When turned on, the Track Vector Length option will show a dashed line and arrow extending from the rotorcraft icon illustrating the current Track and the distance the rotorcraft will travel in the selected time.

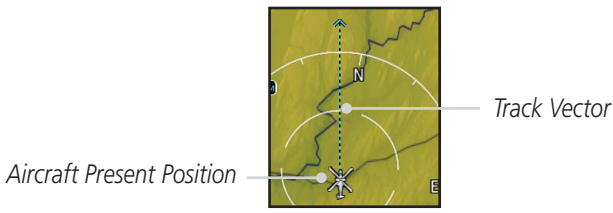


Figure 3-16 Navigation Map Track Vector

Wind Vector

The Wind Vector option when turned on will show a box in the top right corner of the MFD indicating the wind direction and speed.



Figure 3-17 Navigation Map Wind Vector Display

Foreword



Figure 3-18 Navigation Map Range Ring

Topo Data

Sec 4
Hazard
avoidance



Figure 3-19 Navigation Map Topo Data



Topo Scale

The Topo Scale option selects whether the elevation scale for topographical features on the Navigation Map is displayed. The scale will be located on the right side of the display.

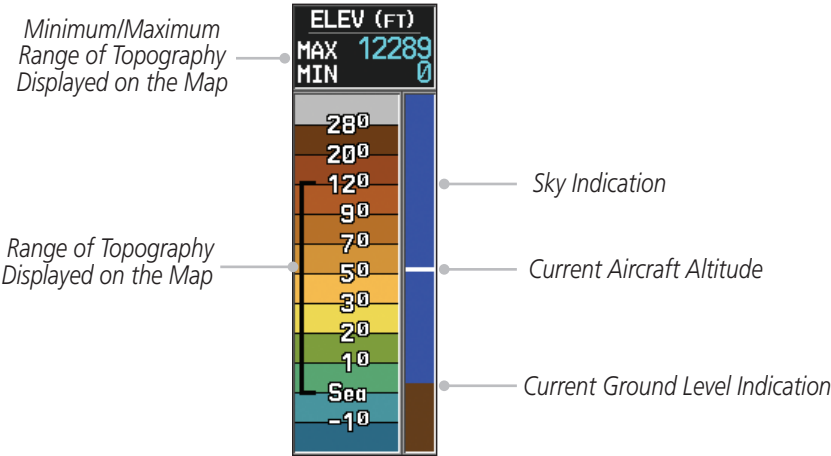


Figure 3-20 Navigation Map Topo Scale

Terrain Data

The Terrain Data option selects whether Terrain Data is shown on the Navigation Map. The Terrain Data Icon  will be shown when Terrain has been selected.

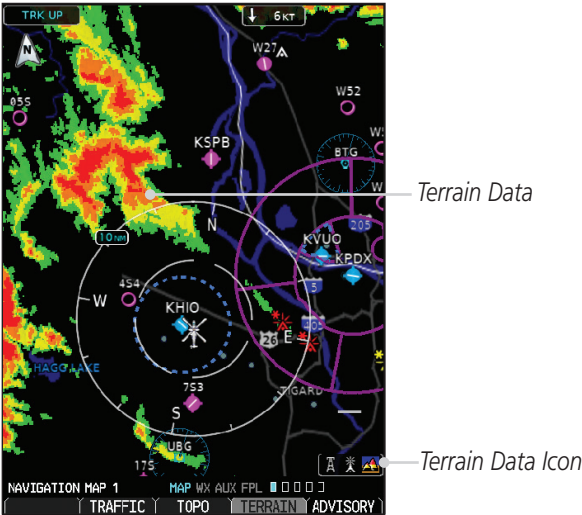


Figure 3-21 Navigation Map Terrain Data

Obstacle Data Viewing Range

The Obstacle Data Viewing Range option selects whether the Obstacle Data is shown on the Navigation Map. Obstacles will be shown at and below the selected map range. Map ranges above this value will not show the Obstacle Data.

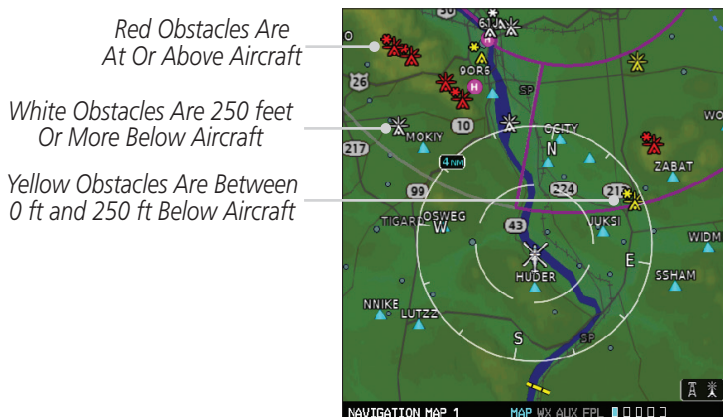


Figure 3-22 Navigation Map Obstacle Data

Obstacle databases created for software version 7.00 or later may include HOT lines depending on the type of obstacle database installed. Hazardous Obstacle Transmission (HOT) Lines are power lines that have been identified as a potential hazard to rotorcraft. The installed obstacle database type can be verified on the System Status page. Power line data is available for the contiguous United States as well as small parts of Canada and Mexico.

System Sec 1

Sec 2
PFD



Sec 4 Hazard Avoidance

Sec 5 Additional Features

Sec 6 Annu. & Alerts



Sec 8
Glossary

Appendix A

index

Selected Altitude Range Arc

The range to altitude arc may be selected for display on the MFD navigation map to predict where the ownship will be when it reaches the altitude selected on the altitude alerter on the PFD. The distance from the ownship to the arc is based on ground speed, baro altitude, selected altitude, and vertical speed. The arc is shown when the rotorcraft is moving toward the selected altitude at a vertical speed of at least 150 feet per minute. Depending on the zoom range and lateral distance, the arc disappears when near the ownship icon.



Figure 3-25 Selected Altitude Range Arc

3.1.10.2 Weather Feature Options (Optional)



NOTE: For steps on how to select a weather source, refer to section "3.1.10.1 Map Feature Options" on page 3-10.

The Weather group selection from the Map Setup Page Menu allows you to customize the NEXRAD Viewing Range, NEXRAD Cell Movement, and Lightning Viewing range. Weather is an optional feature that requires a GDL 69/69A and a SiriusXM WX Satellite Weather subscription, or other weather product (such as GFDS).

1. While viewing the Navigation Map 1 or 2 page of the Map page group, press the **MENU** key to display the Navigation Map Page Menu.



Figure 3-26 Navigation Map Page Menu

2. With the cursor flashing on the Map Setup option, press the **ENT** key to display the Map Setup Menu.
3. Use the large and small **MFD** knobs to select the Weather Group and press **ENT** to allow editing of the selected group. The groups shown depend on the features available for equipment installed in your rotorcraft.



Figure 3-27 Navigation Map Page Menu Weather Group Selection

4. Press the small **MFD** knob to return to the Navigation Map Page.

NEXRAD Data Viewing Range

The NEXRAD Viewing Range option selects whether the NEXRAD weather products is shown on the MFD. NEXRAD weather products will be shown at and below the selected map range. When Off is selected, NEXRAD weather will not be shown. Map ranges above the selected value will not show the NEXRAD weather products. Where 100 NM is selected, the NEXRAD weather products will be shown at map ranges of 100 NM and lower.

NEXRAD Cell Movement

The NEXRAD Cell Movement option selects whether NEXRAD Cell Movement is shown on the Navigation Map.

NEXRAD Legend

The NEXRAD Legend selection provides the option of displaying an abbreviated version of the NEXRAD legend in the top right region of the MFD.

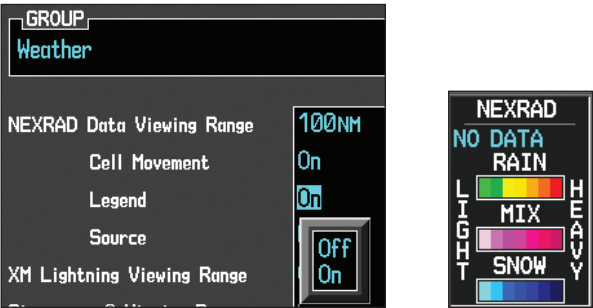


Figure 3-28 NEXRAD Legend Selection

Datalink Lightning Viewing Range

The Lightning Viewing Range option selects whether the datalink provided Lightning weather products is shown on the Navigation Map. Lightning weather products will be shown at and below the selected map range. When Off is selected, Lightning weather will not be shown. Where 100 NM is selected, Lightning symbols will be shown at map ranges of 100 NM and lower.

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Avoidance	Sec 4
Hazard	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	

XM/FIS-B NEXRAD Source

The XM or FIS-B NEXRAD Source selection allows the choice of the available sources for NEXRAD weather products.

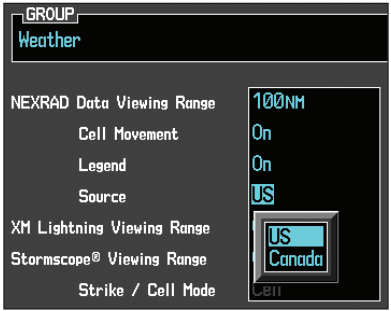


Figure 3-29 NEXRAD Weather Source Selection

Stormscope Viewing Range

The Stormscope Viewing Range option selects Stormscope cells or strikes are shown on the Navigation Map. Products will be shown at and below the selected map range. When Off is selected, cells or strikes will not be shown. Where 100 NM is selected, symbols will be shown at map ranges of 100 NM and lower.



NOTE: The selected lightning display type, cell or strike, will be shown the same on both the Stormscope and the Map pages.



NOTE: Stormscope data is displayed on the Map Page only if rotorcraft heading is available.



NOTE: The G500H will display Stormscope data with or without a heading source. If no heading source is available, the display will indicate this by placing HDG N/A in the upper right portion of the display. If no heading is available, the pilot must clear the strikes after each heading change.

Strike/Cell Mode

When the Stormscope Viewing Range option has a range greater than zero, the Stormscope cells or strikes option is made available and can determine which type are shown on the Navigation Map.

3.1.10.3 Traffic Feature Options (Optional)

The Traffic group selection from the Map Setup Page Menu allows you to customize the display of traffic on the Navigation Map. The Traffic function requires the installation of a compatible traffic device.



NOTE: As a decluttering function, traffic labels will not be drawn when the map scale is above 15 NM and traffic symbols will not be drawn when the map scale is above 40 NM.

Traffic Selection	Display Result
Off	No traffic displayed
All Traffic	All types of traffic displayed
TA/PA	Traffic Alerts and Proximity Alerts displayed
TA Only	Traffic Alerts Only displayed

Table 3-30 Navigation Map Traffic Display Options



Figure 3-31 Navigation Map Page Menu Traffic Options

1. While viewing the Navigation Map Setup page and the Traffic Group active, turn the large **MFD** knob to highlight the Traffic options.
2. Turn the small **MFD** knob to change the highlighted value.
3. Press **ENT** to accept the displayed value.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

When the Traffic overlay is active on a Map page, a Traffic icon will be displayed on the Map page where it is selected.



Figure 3-32 Navigation Map Traffic Overlay

3.1.10.4 Aviation Feature Options

The Aviation group selection from the Map Setup Page Menu allows you to customize the display of SafeTaxi information, Runway Extensions, Intersection/NDB locations, VOR locations, and TFR icons on the Navigation Map.



Figure 3-33 Navigation Map Page Menu Aviation Group Selection

SafeTaxi Viewing Range

The SafeTaxi viewing range option selects the range at which SafeTaxi information is shown on the Navigation Map. SafeTaxi will be shown at and below the selected map range. When Off is selected, SafeTaxi information will not be shown. Where 1 NM is selected, the SafeTaxi information will be shown at map ranges of 1 NM and lower.

Runway Extension Range

The Runway Extension Range option selects the whether Runway Extensions is shown for the flight plan destination airport runway. Runway Extensions will be shown at and below the selected map range and will extend 10 NM. When Off is selected, Runway Extensions will not be shown.

INT/NDB Viewing Range

The INT/NDB viewing range option selects whether Intersection and NDB information is shown on the Navigation Map. Intersection and NDB information will be shown at and below the selected map range. When Off is selected, the information will not be shown.

VOR Viewing Range

The VOR viewing range option selects whether VOR information is shown on the Navigation Map. VOR information will be shown at and below the selected map range. When Off is selected, the information will not be shown.

Class B/TMA Airspace Viewing Range

The Class B/TMA airspace viewing range option selects whether Class B/TMA airspace information is shown on the Navigation Map. Class B/TMA airspace information will be shown at and below the selected map range. When Off is selected, the information will not be shown. Where 100 NM is selected, Class B/TMA airspace information will be shown at map ranges of 100 NM and lower.

Class C/TCA Airspace Viewing Range

The Class C/TCA airspace viewing range option selects whether Class C/TCA airspace information is shown on the Navigation Map. Class C/TCA airspace information will be shown at and below the selected map range. When Off is selected, the information will not be shown. Where 100 NM is selected, Class C/TCA airspace information will be shown at map ranges of 100 NM and lower.

Class D Airspace Viewing Range

The Class D airspace viewing range option selects whether Class D airspace information is shown on the Navigation Map. Class D airspace information will be shown at and below the selected map range. When Off is selected, the information will not be shown. Where 100 NM is selected, Class D airspace information will be shown at map ranges of 100 NM and lower.

Restricted Airspace Viewing Range

The Restricted airspace viewing range option selects whether the map range is shown on the Navigation Map. Restricted airspace information will be shown at and below the selected map range. When Off is selected, the information will not be shown. Where 100 NM is selected, Restricted airspace information will be shown at map ranges of 100 NM and lower.

MOA (Military) Viewing Range

The MOA (Military) viewing range option selects whether MOA (Military) information is shown on the Navigation Map. MOA airspace information will be shown at and below the selected map range. When Off is selected, the information will not be shown. Where 100 NM is selected, MOA airspace information will be shown at map ranges of 100 NM and lower.

Other/ADIZ Airspace Viewing Range

The Other/ADIZ airspace viewing range option selects whether Other/ADIZ airspace information is shown on the Navigation Map. Other/ADIZ airspace information will be shown at and below the selected map range. When Off is selected, the information will not be shown. Where 100 NM is selected, Other/ADIZ airspace information will be shown at map ranges of 100 NM and lower.

TFR Viewing Range (Optional)

The Temporary Flight Restriction (TFR) viewing range option selects whether TFR information is shown on the Navigation Map. TFR information will be shown at and below the selected map range. When Off is selected, the information will not be shown. Where 100 NM is selected, TFR information will be shown at map ranges of 100 NM and lower. This optional feature requires an active data link receiver. TFRs are provided through the datalink. Some TFRs may exist that are not available to the datalink provider and as such will not be displayed.

Airways

The Airways option allows you to select the airways that are shown on the Navigation Map. All, Low only, and Hi only Airways may be selected. When Off is selected, airways will not be shown.


Smart Airspace

The Smart Airspaces selection filters airspaces to show the ones appropriate for your altitude. Garmin’s Smart Airspace feature aids visual clarity on-screen by de-emphasizing airspace that’s well above or below the rotorcraft’s current altitude. The vertical separation is 1,000 feet at sea level and the vertical separation will gradually increase to 2,000 feet until the rotorcraft reaches 10,000 feet. Anything above 10,000 feet keeps the 2,000 feet vertical separation.



NOTE: *Smart Airspace only changes the depiction of the airspace on the moving map display. It does not alter the Airspace Alerts that can be set on the System-Alerts portion of the system.*

Smart Airspaces - De-Emphasized

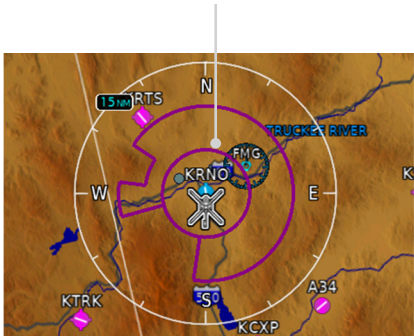

Smart Airspaces - Emphasized (On)



**Figure 3-34 Display of Smart Airspaces
(Airspace Borders Grayed When Emphasized)**

Visual Reporting Points

The Visual Reporting Points (VRPs) viewing range option selects whether VRP information is shown on the Navigation Map. VRP information will be shown at and below the selected map range. When Off is selected, the information will not be shown. Where 15 NM is selected, the VRPs will be shown for map ranges at and below 15 NM.

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Avoidance	Sec 4
Hazard	Sec 5
Additional Features	Sec 6
Annun.	Sec 7
& Alerts	Sec 8
Symbols	Appendix A
Glossary	Index

3.1.11 Split Screen (Optional)

External Video is an optional function that displays video provided by an externally mounted video source on the rotorcraft. The Map Display setup will reflect the setup for MAP PAGE 1 except that TERRAIN, TOPO, and TRAFFIC can be turned on and off separately on this page.

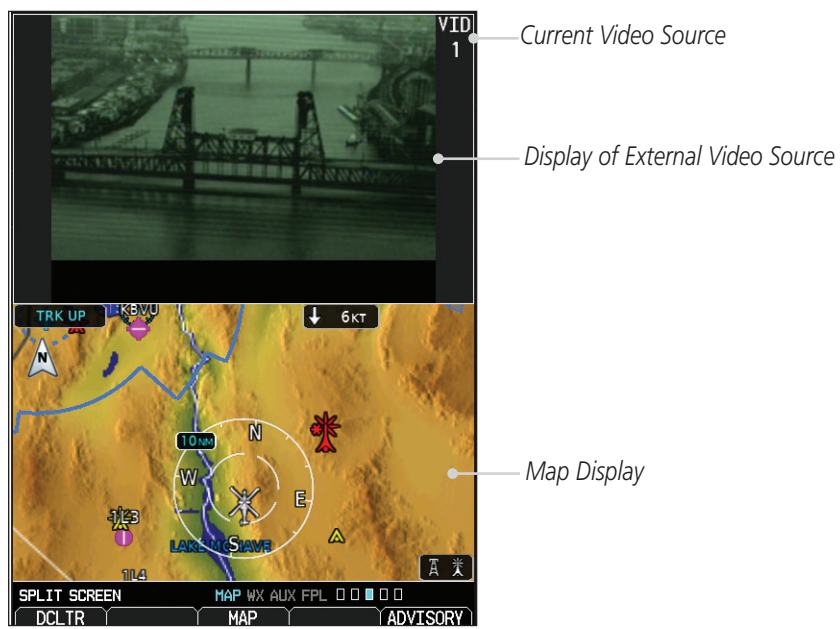


Figure 3-35 External Video

1. While viewing the Map function, turn the small **MFD** knob to the third Navigation Map page.
2. The External Video page will show the external video on the top half of the MFD and a Navigation Map will be shown on the lower half.
3. To select the other external video source, press the **MENU** key.
4. Turn the large or small **MFD** knobs to highlight the Video selection and then press **ENT**.

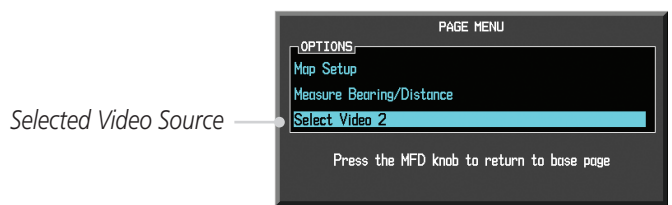


Figure 3-36 Aux Mode System Setup Page Menu

3.2 Aux Mode Pages

The Aux mode provides pages for System Setup, XM Information (if installed), and system Status.

3.2.1 System Settings

G500H system settings are managed from the Aux Mode System Setup Page. The following settings can be changed:

- Display Brightness (Mode and Level)
- Airspeeds (Glide, V_R , V_X , and V_Y)
- PFD Options (Wind Vector, Nav Status, Temp Reference, and CDI/VDI Preview)
- Dual Unit Synchronization (CDI, Baro, and some Databases)
- Date/Time (Date, Time, Time Format, and Time Offset)
- MFD Display Units (Distance/Speed and Altitude/Vertical Speed)
- System Display Units (Navigation Angle Reference, Pressure Units, and Temperature Units)
- Data Link (FIS, XM, GFDS)
- CDI/VDI Preview (On, Off)

DISPLAY BRIGHTNESS LEVEL 1.7% MODE AUTO	DATE / TIME DATE 24-NOV-14 TIME 20:54:40 LCL TIME FORMAT LOCAL 24hr TIME OFFSET -00:00
AIRSPEEDS (PFD) GLIDE 88KT V_R 60KT V_X 69KT V_Y 88KT	MFD DISPLAY UNITS DIS. SPD NAUTICAL(NM,KT) ALT. VS FEET(FT,FPM)
PFD OPTIONS WIND VECTOR OFF NAV STATUS STYLE 1 TEMP REFERENCE SAT CDI/VDI PREVIEW ON	SYSTEM DISPLAY UNITS NAV ANGLE MAGNETIC(°) PRESS INCHES(IN) TEMP CELSIUS(°C)
SYNCHRONIZATION CDI OFF BARO ON DATABASES OFF	DATA LINK WX/TFR SOURCE XM
SYSTEM SETUP MAP WX AUX FPL ☐ ☐ ☐ ☐ ☐ ☐ ☐ ☐	
DFLT UNIT RA TEST DFLT SPD ADVISORY	

Figure 3-37 Aux Mode System Setup Page

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

The default values set by the installer during installation are restored by using the Page Menu options or soft keys. The Restore Unit Defaults menu selection and the **DFLT UNIT** soft key restores the default MFD Display and System Display Units settings. The Restore Airspeed Defaults menu selection or **DFLT SPD** soft key restores the default PFD Airspeeds settings.

The **RA TEST** soft key activates the Radar Altimeter test mode. See the Radio Altimeter section in section 2 for details.



NOTE: *Not all Radar Altimeters have the TEST function.*

1. While viewing the Aux mode System Setup page, press the **MENU** key.



Figure 3-38 Aux Mode System Setup Page Menu

2. Turn the large or small **MFD** knobs to highlight the desired selection and then press **ENT**.

3.2.1.1 Display Brightness

Display brightness mode may be set to manual or automatic. The automatic mode will set the display brightness based on the ambient light. The manual mode allows the setting of display brightness between 0 and 100%.

1. Turn the large **MFD** knob to reach the AUX page group. Press the small **MFD** knob to activate the cursor.
2. The Level will be highlighted. Turn the small **MFD** knob to select the Display Brightness Level and then press **ENT**.



Figure 3-39 Aux Mode Display Brightness Level Selection

3. If the Level was changed, Manual will be selected. Press the cursor to save the settings. If you press **ENT** the Mode setting will be highlighted.
4. With the Mode value highlighted, turn the small **MFD** knob to select Auto or Manual and then press **ENT**.

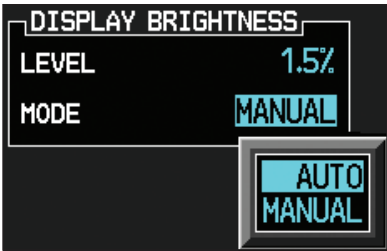


Figure 3-40 Aux Mode Display Brightness Mode Selection

Foreword
Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

3.2.1.2 Airspeed Reference Marks

The airspeed reference marks for the PFD are adjusted with this function. A marker will appear on the PFD Airspeed tape at the selected speed when the value is set to ON. Default reference airspeeds are set during installation. When power is cycled, the values you set will be reset to the default values.



NOTE: When power is cycled, the Airspeed Reference values are reset. During preflight, the Airspeed Reference values should be checked and set appropriately for the current rotorcraft configuration and performance.

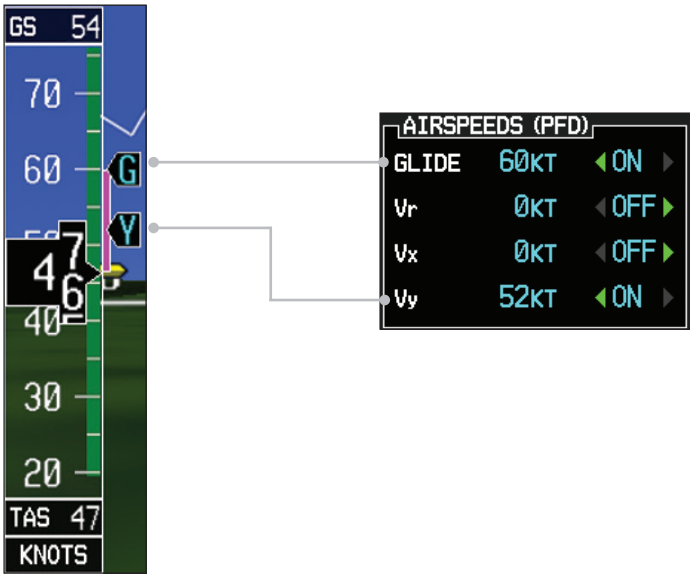


Figure 3-41 Airspeed References shown on PFD when activated

3.2.1.3 PFD Options - Wind Vector

When selected, wind vector information is displayed on the PFD to the left of the HSI. Four styles are available.

1. While viewing the System Setup page of the AUX page group, press the small **MFD** knob to activate the cursor. Turn the large **MFD** knob to highlight the desired Wind Vector value.
2. Turn the small **MFD** knob to select the style and press **ENT**.

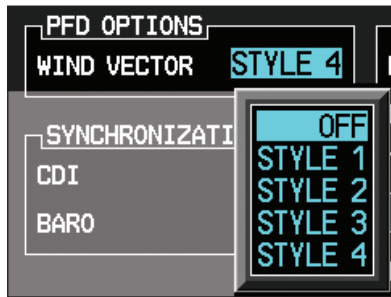


Figure 3-42 Wind Vector Style

3. When a Wind Vector style is selected, a Wind Vector box with the chosen style will be displayed to the left of the HSI on the PFD. When OFF is selected, the Wind Vector box will not be displayed.

3.2.1.4 PFD Options - Nav Status

When selected, Nav Status information is displayed on the PFD either on the top of the display (Style 1) or to the left of the HSI (Style 2).

1. While viewing the System Setup page of the AUX page group, press the small **MFD** knob to activate the cursor. Turn the large **MFD** knob to highlight the desired Nav Status value.
2. Turn the small **MFD** knob to select the style and press **ENT**.

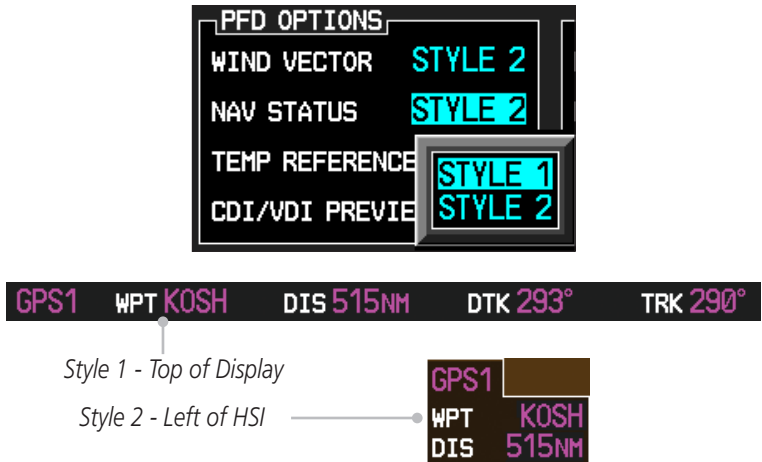


Figure 3-43 Nav Status Style

3. After the Nav Status style is selected, the chosen style will be displayed on the PFD.



NOTE: Nav Status option is not available for all installations.

3.2.1.5 CDI/VDI Preview

1. While viewing the System Setup page of the AUX page group, press the small MFD knob to activate the cursor. Turn the large MFD knob to highlight the CDI/VDI Preview value.
2. Turn the small **MFD** knob to select ON or OFF.
3. Press **ENT**.

3.2.1.6 Temperature Reference

The computer calculates the temperature based on temperature probe and Pitot-static inputs. The units (°C or °F) and temperature reference are selected on the AUX – SYSTEM SETUP page. The temperature reference can be selected to one of the following choices:

- Static Air Temperature (SAT) – This is the calculated temperature of the stationary (static) outside air. Conceptually, this is the temperature that would be read on a thermometer floating stationary at the current location.
- Total Air Temperature (TAT) – This is the calculated temperature of the outside air as it moves past the rotorcraft, including the rise in temperature due to air compression and friction at the current airspeed.
- Difference from International Standard Atmosphere (ISA) – This is the difference between SAT and standard (ISA) temperature at the current altitude. This provides an indication of how much warmer/colder the temperature is from a standard atmosphere.

1. While viewing the System Setup page of the AUX page group, press the small **MFD** knob to activate the cursor. Turn the large **MFD** knob to highlight the desired Temp Reference value.
2. Turn the small **MFD** knob to select the Temp Reference type and press **ENT**.



Figure 3-44 Outside Air Temperature Selection

3.2.1.7 Synchronization

Dual GDU 620 units when connected in the rotorcraft may be set up to communicate and share information by crossfilling or synchronizing information between the two units. A single GDU 620 may be set up to synchronize the database with a navigator.

Crossfill synchronization for CDI and Baro Corrections are selected in the System Setup page of the Aux page group. Database Synchronization is managed in the DB Sync function on the System Status page of the Aux page group.

1. While viewing the first page of the AUX page group, press the small **MFD** knob and turn the large **MFD** knob to highlight CDI SOURCE, BARO, DATABASES, or CHART STREAMING in the Synchronization box in both units.



NOTE: Chart Streaming appears only when the Databases option is turned on.

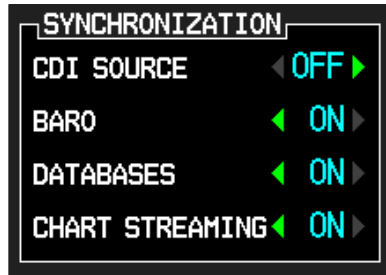


Figure 3-45 Dual Unit Synchronization

2. Turn the small **MFD** knob to select ON or OFF.
3. Press **ENT**.

The following information is always synchronized between both GDU 620 units:

- Selected Altitude
- Selected Heading
- Selected Course
- Selected Vertical Speed
- Airspeed Bug Values
- Airspeed Color Band Values
- System Pressure Units
- System Temperature Units

The following information can be synchronized between GDU 620s, or changed independently, depending on the Crossfill Synchronization Settings:

- Barometric Correction (default ON)
- Selected CDI SOURCE (default OFF)

When Barometric Correction is synchronized, any changes to the Barometric Setting on either GDU will change it on both GDUs.

When the CDI SOURCE is synchronized, any changes to the selected CDI on either GDU will change it on both GDUs. Either pilot can change the OBS course on either GPS. If the pilot selects GPS1 on the CDI and GPS1 is in OBS mode, any course changes will move the OBS on GPS1, GDU1, and GDU2 (if the copilot has GPS1 displayed on the CDI). Similarly, if the pilot selects GPS2 on the CDI and GPS2 is in OBS mode, any course changes will move the OBS on GPS2, GDU1, and GDU2 (if the copilot has GPS2 displayed on the CDI).

AHRS 1 and ADC 1 will only be displayed on GDU1. AHRS2 and ADC2 will only be displayed on GDU2.

The **CDI** soft key toggles between selection of GPS or VOR/LOC as the active navigation source. In a single GDU 620 system, the GDU **CDI** soft key will change the source in the connected navigator and making a source change in the navigator will be reflected in the GDU 620. In a dual GDU 620 system, the **CDI** keys in the navigator are disabled.

3.2.1.8 Date and Time

The Date and Time options allow you to select the time to change UTC time to local time with a time offset.

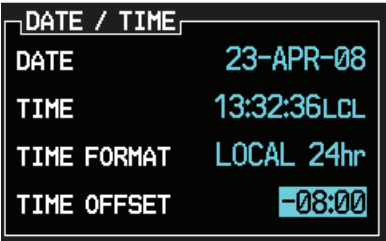


Figure 3-46 Time Format and Offset

Time Zone	Local Standard Time Offset	Local Daylight Savings Time Offset
Atlantic	-4 hours	-3 hours
Eastern	-5 hours	-4 hours
Central	-6 hours	-5 hours
Mountain	-7 hours	-6 hours
Pacific	-8 hours	-7 hours
Alaskan	-9 hours	-8 hours
Hawaiian	-10 hours	-9 hours

Table 3-47 U.S. Time Zone Offsets

1. While viewing the System Setup page of the AUX page group, press the small **MFD** knob to activate the cursor. Turn the large **MFD** knob to highlight Time Format.
2. Turn the small **MFD** knob to select Local 12hr, Local 24hr, or UTC and then press **ENT**. When Local 12 or 24 hr mode is selected, the Time Offset value will then be highlighted.
3. Turn the small **MFD** knob to select the desired offset and then press **ENT**.

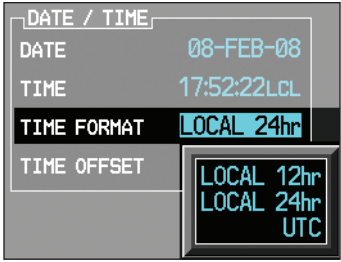


Figure 3-48 Date and Time Values

- A Time Offset may be entered by using the large and small **MFD** knobs to change the values. Press **ENT** after completing any changes.
- Press the small **MFD** knob to exit adjustments.

3.2.1.9 MFD Display Units

The MFD Display Units options allow you to select the units of measurement conventions displayed on the MFD. Distance and Speed selections are Imperial, Metric, or Nautical. Altitude and Vertical speed selections are Feet or Meters. ffc information is always shown in Nautical Miles (distance) and Feet (altitude).

- While viewing the System Setup page of the AUX page group, press the small **MFD** knob to activate the cursor. Turn the large **MFD** knob to highlight the Distance and Speed (DIS, SPD) units of measurement.

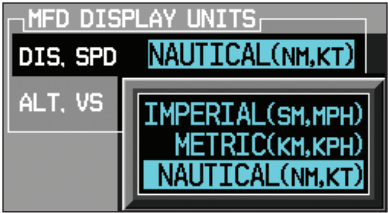


Figure 3-49 Distance and Speed MFD Display Units

- Turn the small **MFD** knob to select Imperial, Metric, or Nautical and then press **ENT**. The Altitude and Vertical Speed units selection will now be highlighted.
- Turn the small **MFD** knob to select Feet or Meters and then press **ENT**.

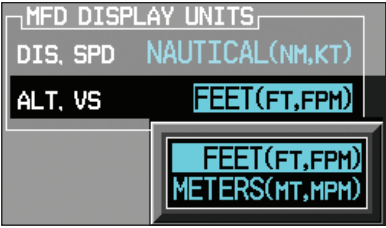


Figure 3-50 Altitude and Vertical Speed MFD Display Units

Foreword

System
Sec 1

PFD
Sec 2

MFD
Sec 3

Avoidance
Sec 4
Hazard

Additional
Sec 5
Features

Annun.
Sec 6
& Alerts

Symbols
Sec 7

Glossary
Sec 8

Appendix A

Index

3.2.1.10 System Display Units

The System Display Units options allows the selection of units to display values for Navigation Angle (Magnetic or True), Barometric Setting (inches or Hectopascals), and Temperature (Fahrenheit or Celsius). Pressing the **DFLT UNIT** soft key will restore the Default Unit settings.

1. While viewing the System Setup page of the AUX page group, press the small **MFD** knob to activate the cursor. Turn the large **MFD** knob to highlight the System Display Units selection titled NAV ANGLE.



CAUTION: The Nav Angle display units (Magnetic or True) must be set to the same type in both the GDU 620 and GPS navigators.

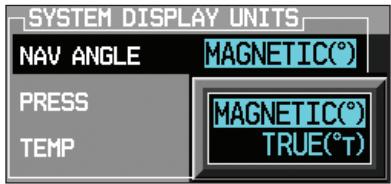


Figure 3-51 Nav Angle System Display Units

2. Turn the small **MFD** knob to select Magnetic or True and then press **ENT**. The Barometric Pressure Setting value will now be highlighted. When True is selected, a "T" will appear to the right of the heading value on the PFD.

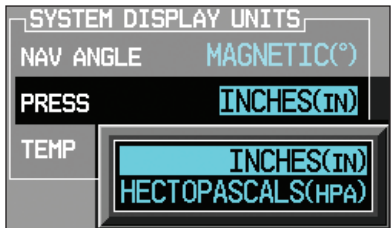


Figure 3-52 Barometric Setting System Display Units

3. Turn the small **MFD** knob to select the Barometric Setting units and then press **ENT**. The Temperature value will now be highlighted.

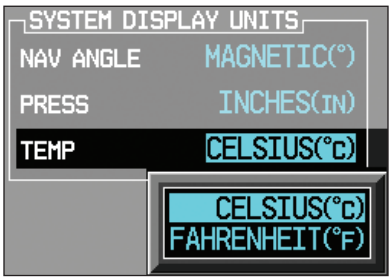


Figure 3-53 Temperature System Display Units

4. Turn the small **MFD** knob to select the Temperature units and then press **ENT**.

3.2.1.11 Data Link

The Data Link WX/TFR Source menu allows users to select the source of weather that is displayed on the MFD. Only the options that are installed will be displayed.

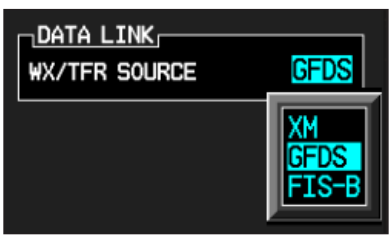


Figure 3-54 WX/TFR Source Options

To select a weather source:

1. Open the System Setup page of the AUX page group.
2. Press the small **MFD** knob to activate the cursor.
3. Turn the large **MFD** knob to highlight the WX/TFR Source field.
4. Turn the small **MFD** knob to select XM, GFDS, or FIS-B, and then press **ENT**.
5. Press the small **MFD** knob to exit adjustments.

3.2.2 SiriusXM Information (Optional)

The Aux mode XM Information page displays information about the SiriusXM Satellite radios, service, and products when the GDL 69/69A is installed and the SiriusXM Satellite Radio service is activated.

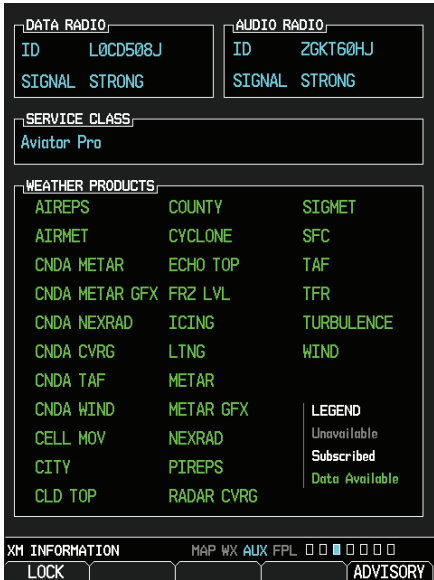


Figure 3-55 SiriusXM Information

3.2.3 SiriusXM Entertainment Radio (Optional)

Audio entertainment is available through the SiriusXM Satellite Radio Service when activated in the optional installation of the GDL 69A. The GDU 620 serves as the display and control head for your remotely mounted GDL 69A. SiriusXM Satellite Radio allows you to enjoy a variety of radio programming over long distances without having to constantly search for new stations. Based on signal from satellites, coverage far exceeds land-based transmissions. When enabled, the SiriusXM Satellite Radio audio entertainment is accessible in Aux Mode.

The information on the SiriusXM Satellite Radio display is composed of four areas: the Active Channel, Available Channels, Category of the highlighted Channel, and the Volume setting. The Active Channel window shows the Channel Name and Number, Artist, Song Title, and Category.

1. Turn the large **MFD** knob to the AUX page group.
2. Turn the small **MFD** knob to the XM Radio page.



Figure 3-56 XM Entertainment Radio

A description of SiriusXM Entertainment Radio is provided in section 5 on page 5-1.

3.2.4 System Status

The System Status Page displays the statuses, serial numbers, and software version numbers for all detected system LRUs. Pertinent information on all system databases is also displayed. Active LRUs are indicated by green check marks; failed LRUs by red “X’s.” Failed LRUs should be noted and a service center or Garmin-authorized dealer informed. Database SYNC allows a database to be synchronized with more than two LRUs (G500H and GTNs) at once.

ACTIVE DATABASES	
AIRPORT DIRECTORY REGION	Worldwide
AIRPORT DIRECTORY CYCLE	14D5
AIRPORT DIRECTORY EFFECTIVE	18-SEP-14
AIRPORT DIRECTORY EXPIRES	13-NOV-14
AVIATION REGION	WORLDWIDE
AVIATION CYCLE	1410
AVIATION EFFECTIVE	18-SEP-14
AVIATION EXPIRES	16-OCT-14
BASEMAP REGION	WORLDWIDE
BASEMAP CYCLE	14M1
BASEMAP VERSION	5.01
CHART CYCLE	1420
CHART TYPE	Jeppesen ChartView
CHART EXPIRES	09-OCT-14
CHART DISABLES	18-DEC-14
OBSTACLE REGION	US & Europe Fixed-Wing
OBSTACLE CYCLE	14B5
OBSTACLE TYPE	OBSTACLE/HOT

DATABASE SYNC			
DATABASE	CYCLE/VER	SRC	STATUS
NOT RECEIVING ANY DATABASES			

SYSTEM STATUS			
DB ACTV	DB SYNC	LRU	ADVISORY
MAP	WX	AUX	FPL
0	0	0	0
0	0	0	0
0	0	0	0
0	0	0	0

LRU INFO		
	STATUS	SERIAL NUMBER VERSION
GDC	✓	45326206 3.02
GDL 69	✓	10653204 3.20.02
GDU 1	✓	320465326 5.00
GDU 2	✓	53063246 5.00
GMU	✓	24203265 2.10
GRS	✓	4630632 2.12
GSR 56	✗	WAITING
GWX	✗	-----

Figure 3-57 LRU and Database Information

1. Turn the large **MFD** knob to the AUX page group.
2. Turn the small **MFD** knob to the System Status page.
3. Press the **LRU** soft key to highlight the first item in the LRU Info window.
4. Turn the small **MFD** knob to scroll through the items in the LRU Info window in case more items are available than are displayed. If more items are available than can be displayed in the window, a scroll bar will show on the right side of the window.
5. Press the **DB ACTV** soft key to display the active databases.
6. Press the **DB SYNC** soft key to display the status of Database SYNC operations. The synchronization happens automatically regardless of whether the soft key is used.

3.2.4.1 Database Sync Operation

Database SYNC allows the G500H to synchronize databases from a single unit. The pilot only needs to update a single database card and the new databases are automatically SYNC'd through the units connected in the cockpit and configured for Database Syncing.

The following databases can be synchronized between using Database SYNC:

- Navigation
- Chartview (when support is added by Jeppesen)
- Obstacle
- FliteCharts
- SafeTaxi
- Basemap
- Airport Directory

When Database SYNC is enabled in the LRUs and a database card is inserted that is created for Database SYNC, the G500H will coordinate with the other LRUs in the cockpit to determine which unit has the newest databases. Once the determination has occurred, the connected LRUs will begin to transfer the databases. This process may take several minutes. Charts are meant to be transferred while in-flight, before the new chart database is effective, as this could take an hour or more. The status of the database transfers to a unit can be viewed in the System Status function on the DB SYNC page. The G500H will display the source of the received databases. If a database transfer is pending, completed, or not authorized, the status will also be indicated.

When the transfer is complete, if there are new and current databases to be used, and if the rotorcraft is stopped and has yet to take-off, the pilot will be prompted with the option to restart the unit that contains the new databases.



NOTE: *This feature is available in SW Versions 7.00, and later.*



NOTE: *Restarting the G500H must only be performed when the rotorcraft is on the ground as navigation and communication from the restarted unit will be lost for a period of time.*

1. With the G500H turned off, insert the database card.
2. Turn the G500H on. The Database SYNC will occur automatically in the background. During the Database SYNC process, normal operation of the G500H is not affected.
3. On the System Status page, press the **DB SYNC** soft key to view the transfer process.

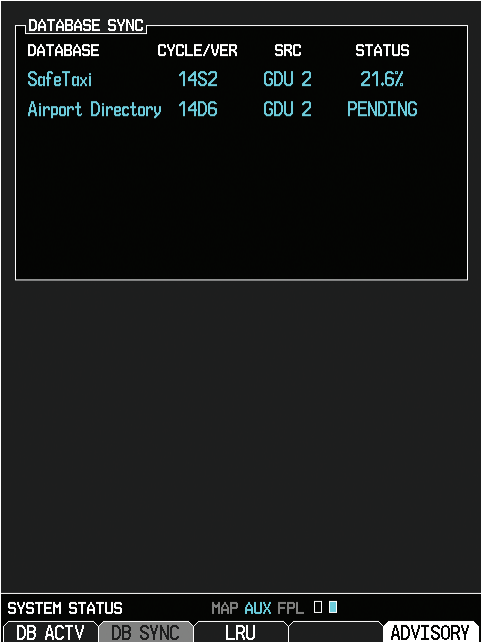


Figure 3-58 One Database Transfer In Process and One Pending



Figure 3-59 Database Transfer Complete



Figure 3-60 Database Transfer Not Authorized and DB Sync Conflict

- Once all of the database transfers have completed, if the G500H determines that at least one of the newly transferred databases is effective and the rotorcraft is on the ground and stopped prior to a flight, a pop-up and confirmation will be presented to restart the unit. No pop-up will appear if the rotorcraft is moving or has been in the air since the unit was turned on.
- Press the **Restart** soft key to continue updating the database.

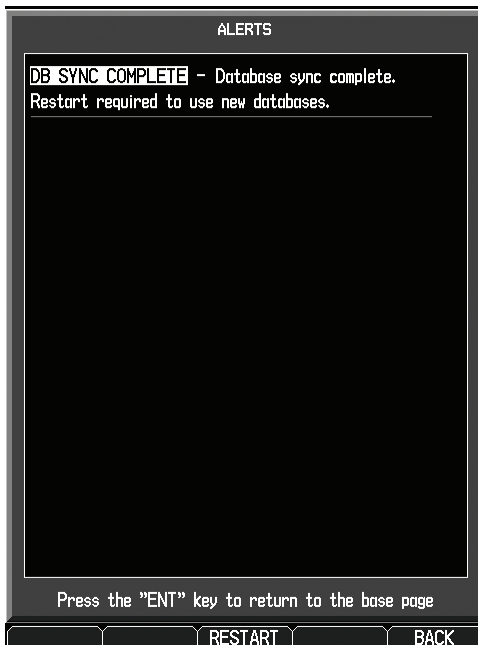


Figure 3-61 System Restart - Step 1



WARNING: The unit will reset and all GPS navigation and moving map functions may be lost while the unit regains GPS position.

3.2.4.2 Resolving Database Conflicts

If the G500H determines that there are multiple LRUs with the newest cycle of a database, but they have different regions or types of that database (i.e., Fixed-wing vs. Rotorcraft navigation database, different regions of the navigation database, or different obstacle database types) then a database conflict will occur. When a database conflict occurs, that database will not be SYNC'd until the pilot resolves the conflict. Initiate the resolve conflicts function on the unit that contains the databases which the pilot wishes to use. These databases will then be sent to other units.

1. Press the **DB SYNC** soft key, and then select the **Resolve Conflicts** function on the LRU with the desired databases.

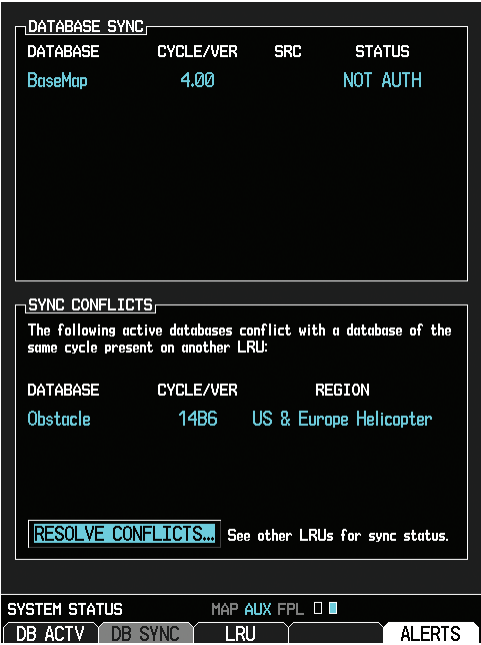


Figure 3-62 Database Conflicts

2. Select **YES** to continue and push the database to all other LRUs.

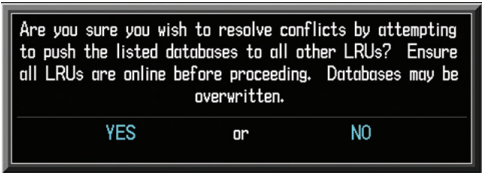


Figure 3-63 Confirm Database Sync

3. Once sync'd, the desired database will be SYNC'd to the other LRUs and "Initiating" will be displayed on the **Sync Conflicts** window.



Figure 3-64 Database Conflicts Resolved (Initiating)

3.2.4.3 Chart Streaming

While the chart database is synchronizing in the background, the GDU will stream individual charts to other compatible displays. This enables all Garmin displays to use the latest chart database information even though the database is currently installed only on a single unit. Chart Streaming will not begin until after the chart database has begun synchronizing.

3.2.5 ADS-B/FIS-B Status (Optional)

When an optional ADS-B/FIS-B receiver is installed, the ADS-B/FIS-B Status page will show the status of satellite communications, FIS-B weather products, and the traffic applications.

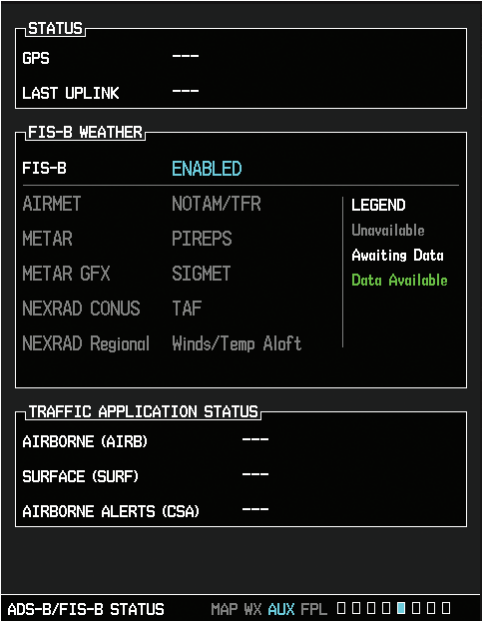


Figure 3-65 ADS-B/FIS-B Status Page

3.2.6 External Video (Optional)

External Video is an optional function that displays video provided by an externally mounted video source on the rotorcraft.

1. Turn the large **MFD** knob to the Aux page group.
2. The External Video page is the first page in the Aux page group.

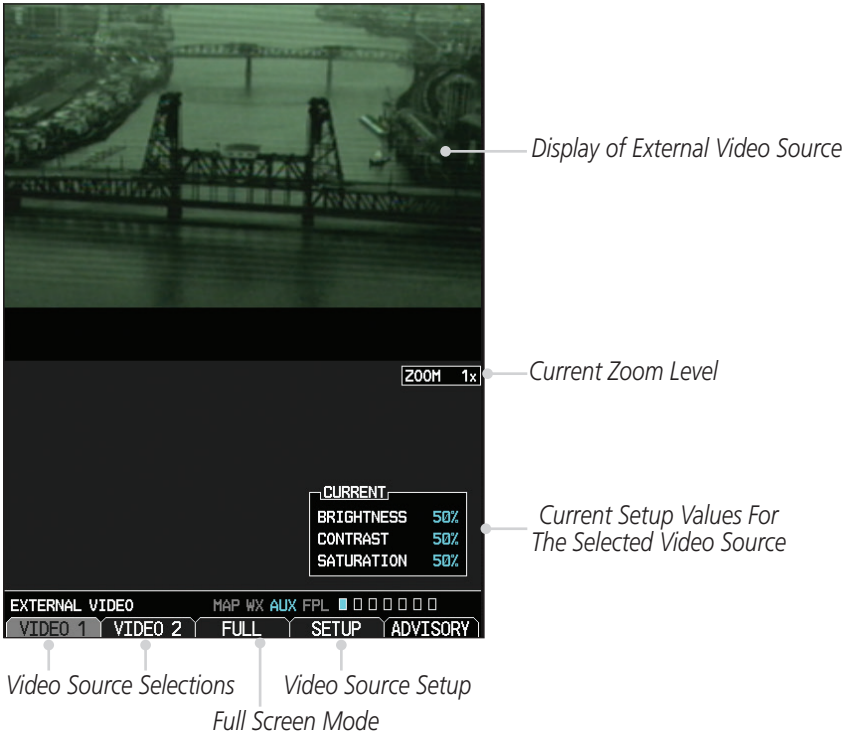


Figure 3-66 External Video

3.2.6.1 Select Video Source

If more than one video source is available, the **Video 1** and **Video 2** soft keys will be available at the bottom of the display.

1. Touch the **Video 1** soft key to select Video 1 source for viewing and setup.
2. Touch the **Video 2** soft key to select Video 2 source for viewing and setup.

3.2.6.2 Zoom

1. While viewing the External Video function, press the **Up Rng Arrow** key to increase the zoom up to 10x magnification. Zoom level is made through digital magnification.
2. Press the **Down Rng Arrow** key to decrease the zoom level down to a minimum of 1x.
3. Pressing the **FULL** soft key toggles between a half and full page view.

3.2.6.3 Panning

1. While viewing the External Video function, press the small **MFD** knob to activate panning.
2. Turn the small **MFD** knob clockwise to pan up (the map will move down).
3. Turn the small **MFD** knob counterclockwise to pan down (the map will move up).
4. Turn the large **MFD** knob clockwise to pan to the right (the map will move left).
5. Turn the large **MFD** knob counterclockwise to pan to the left (the map will move right).
6. Press the small **MFD** knob to exit panning.

3.2.6.4 Setup

The display of each video source is set up individually.

1. While viewing the External Video page, press the soft key for the desired Video source (**Video 1** or **Video 2**).
2. Press the **Setup** soft key.
3. The Current value for Brightness will be selected. Use the following directions for each value.



Figure 3-67 External Video Setup

4. After selecting the desired settings, press the small **MFD** knob or the **Setup** soft key to exit editing.

Brightness Adjustment

- 1. While viewing the External Video page and the desired Video source, press the **Setup** soft key.
- 2. The Current value for Brightness will be selected. Turn the small **MFD** knob to adjust the Brightness value.

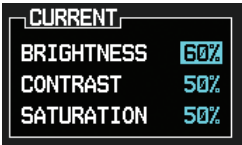


Figure 3-68 External Video Brightness Adjustment

- 3. After selecting the desired setting, turn the large **MFD** knob to highlight the next value or press the small **MFD** knob to exit editing.

Contrast Adjustment

- 1. While viewing the External Video page and the desired Video source, press the **Setup** soft key.
- 2. The Current value for Brightness will be selected. Turn the large **MFD** knob to highlight the Contrast value. Turn the small **MFD** knob to adjust the Contrast value.

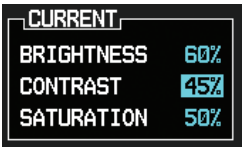


Figure 3-69 External Video Contrast Adjustment

- 3. After selecting the desired setting, turn the large **MFD** knob to highlight the next value or press the small **MFD** knob to exit editing.

Saturation Adjustment

- 1. While viewing the External Video page and the desired Video source, press the **Setup** soft key.
- 2. The Current value for Brightness will be selected. Turn the large **MFD** knob to highlight the Saturation value. Turn the small **MFD** knob to adjust the Saturation value.

Foreword

System
Sec 1

PFD
Sec 2

MFD
Sec 3

Hazard
Avoidance
Sec 4

Additional
Features
Sec 5

Annun.
& Alerts
Sec 6

Symbols
Sec 7

Glossary
Sec 8

Appendix A

Index

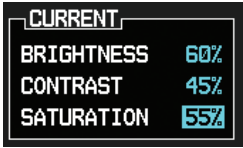


Figure 3-70 External Video Saturation Adjustment

- After selecting the desired setting, press the small **MFD** knob to exit editing.

3.2.6.5 Restore Defaults

The Restore Defaults selection will return the Brightness, Contrast, and Saturation values to their original settings.

- While viewing the External Video page, press the **MENU** key.



Figure 3-71 Restore Video Defaults Menu Selection

- Restore Defaults will be highlighted. Press the **ENT** key.

3.2.6.6 Full Screen

The Full selection allows selection of the part of the video information for display.

1. While viewing the External Video page, press the **FULL** key.

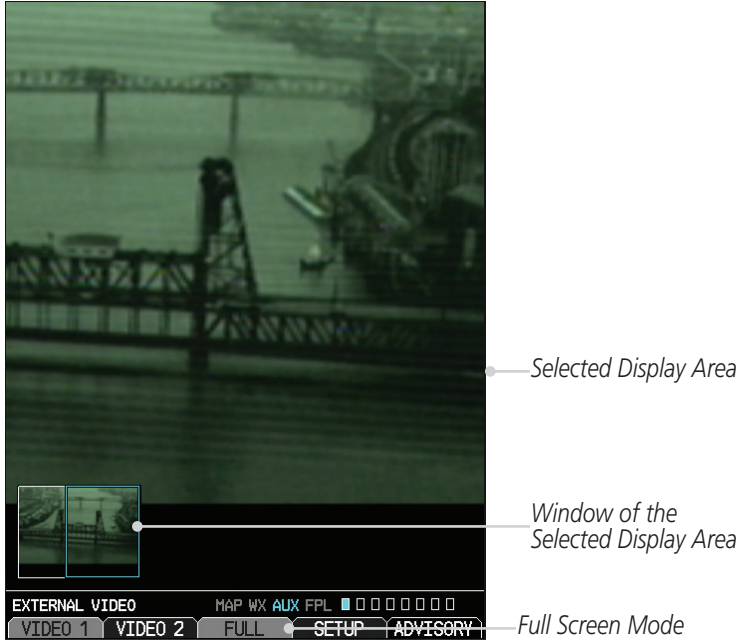


Figure 3-72 Full Video Selection

2. Press the small **MFD** knob to activate the selection window.
3. Turn the large **MFD** key to move the selection window.
4. Press the small **MFD** knob to accept the selected display area shown in the window.

3.2.7 Position Reporting (Optional)

Position Reporting is a system which collects system variables and transmits them over the Iridium® Satellite Network at a given interval through the GSR 56.

3.2.7.1 Status

The Status window shows the time until the next data transmission and the status of the reporting system.



NOTE: The GSR 56 does not report its serial number until 90 seconds after power up of the GDU. As a result, for that period, the product info for the GSR 56 will show "Waiting."

Time Until Transmit

The Time Until Transmit field is a countdown timer that shows the time until the next data transmission. This field is blank when the rotorcraft is on the ground.



Countdown Time Until Transmit

Figure 3-73 Position Reporting Time Until Transmit

Position Reporting Status

Position Reporting will be enabled when the rotorcraft is in the air.

Status	Description
Idle	The reporting system is not using the GSR 56 for reporting at this time.
Initializing	The GSR 56 and its driver are currently initializing.
Transferring	A position report is currently being transmitted.
Unavailable	The GSR 56 is currently not usable by the reporting system.

Table 3-74 Position Reporting Status

3.2.7.2 Report Type

Standard

When the Standard reporting type is used, the Position Reporting Period may be set to Off or Automatic. The Automatic Position Reporting Period can be set to intervals of 2 to 60 minutes.

1. Turn the large **MFD** knob to reach the Aux page group. Turn the small **MFD** knob to reach the Position Reporting page.
2. Press the small **MFD** knob to select the Report Type.
3. Turn the small **MFD** knob to highlight Standard and then press the **ENT** key.

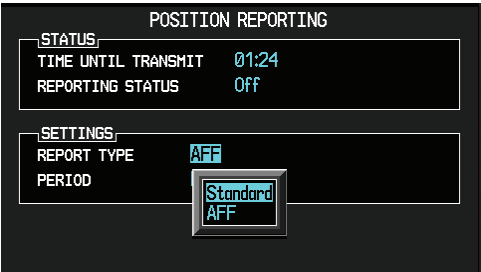


Figure 3-75 Select Standard Reporting

4. The Position Reporting Period type will now be selected. Turn the small **MFD** knob to highlight Off or Automatic and then press the **ENT** key. The Position Reporting Period interval will now be selected.
5. Turn the small **MFD** knob to select the reporting frequency.

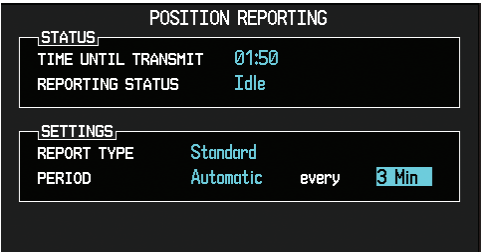


Figure 3-76 Select Standard Reporting Period Frequency

6. Press the small **MFD** knob to exit editing.
7. With the Standard Reporting Type, the reporting period may be manually overridden by pressing the **SEND** soft key to send data.



Figure 3-77 Press SEND to Override the Reporting Period

Automatic Flight Following

The G500H system, when combined with a GSR 56 Iridium datalink, can send position reports that contain data as required by the U.S. Government Automated Flight Following (AFF) system. The GSR 56 account will allow configuration to forward data to the Automated Flight Following system.

- 1. While viewing the Position Reporting function, press the small **MFD** knob to select the Report Type.
- 2. Turn the small **MFD** knob to highlight AFF and then press the **ENT**.

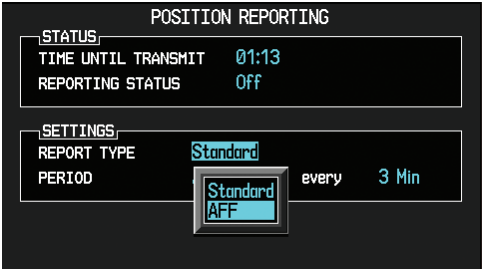


Figure 3-78 Select Automatic Flight Following (AFF) Reporting Type

- 3. Turn the small **MFD** knob to select Off or the default Every 2 Min value.

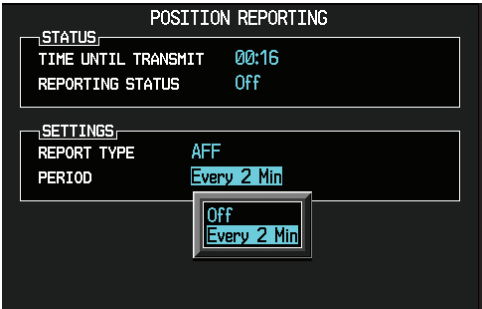


Figure 3-79 Select AFF Reporting Period Frequency

3.2.8 Iridium Phone Operation (Optional)

Optional satellite telephone operation is available through the Iridium satellite system that is interfaced through the Garmin GSR 56.

3.2.8.1 Status

The Status section shows the Call Time, Phone Status, and Call Suppression selected. The Call Time value shows the length of the call time for the current call using the Iridium phone. Phone Status shows the current operating status of the Iridium phone.

Status	Description
Idle	The Iridium phone is not using the GSR 56 for communicating at this time.
Initializing	The GSR 56 and its driver are currently initializing.
Connected	The GSR 56 is connected to the called number.
Connecting Call	The GSR 56 is in the process of connecting to the called number.
Changing Volume	The volume level on the GSR 56 is changing.
Busy	The phone is in use by another service and the call may not be made.
Dialing	The GSR 56 is dialing the called number.
Incoming Call	A call is being made to the GSR 56.
Hanging Up	The GSR 56 is disconnecting from the current call.
Unavailable	The GSR 56 is currently not usable by the Iridium phone system.

Table 3-80 Iridium Phone Status

Call Suppression controls calling when use of the Iridium phone system is allowed.

1. Turn the large **MFD** knob to reach the Aux page group. Turn the small **MFD** knob to reach the Iridium Phone page.
2. Press the small **MFD** knob to select the Call Suppression type.

Status	Description
Off	Call Suppression is turned off. Calls may be transmitted and received through the Iridium phone.
On	Call Suppression is turned on. The incoming call pop-up will not be shown. The call may still be answered on the phone page. Outgoing calls are not affected.
On During APR/ MAPR/TERM	Call Suppression is turned on during Approach, Missed Approach, and Terminal operations. The incoming call pop-up will not be shown. The call may still be answered on the phone page. Outgoing calls are not affected.

Table 3-81 Call Suppression

3. Turn the small **MFD** knob to highlight the desired selection.

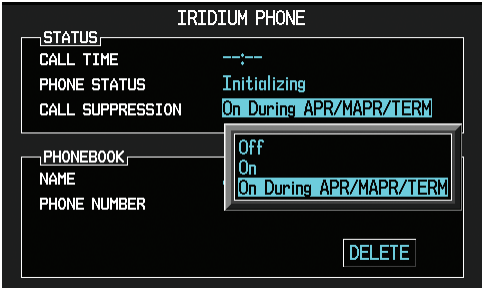


Figure 3-82 Select Call Suppression

4. Press the **ENT** key. Press the small **MFD** knob again to cancel the selection cursor.

3.2.8.2 **Managing the Phone Book**

The Phone Book is stored on the SD card in the bottom slot. The Phone Book will only be available for use when the SD card is in the bottom slot. The Phone Book may hold up to 128 entries. A phone number may be entered and dialed without saving it to the Phone Book. Note that it is necessary to dial a “1,” the area code, and then the number.

Creating Phone Number Names

1. Turn the large **MFD** knob to reach the Aux page group. Turn the small **MFD** knob to reach the Iridium Phone page.
2. Press the small **MFD** knob to activate the cursor and then turn the large **MFD** knob to highlight the Name item in the Phone Book. The Name field will blink.
3. If items already exist in the catalog, turn the large **MFD** knob to select the Phone Book Catalog icon. Then, turn the small **MFD** knob to display the contents of the Phone Book Catalog and highlight the New Entry selection and press **ENT**.



New Entry Selected for Phone Book Catalog Entry

Figure 3-83 New Entry Selected for Phone Book Catalog Entry

4. Turn the small **MFD** knob to select the first character of the name and then turn the large **MFD** knob to select the next character. When the name is complete, press the **ENT** key.

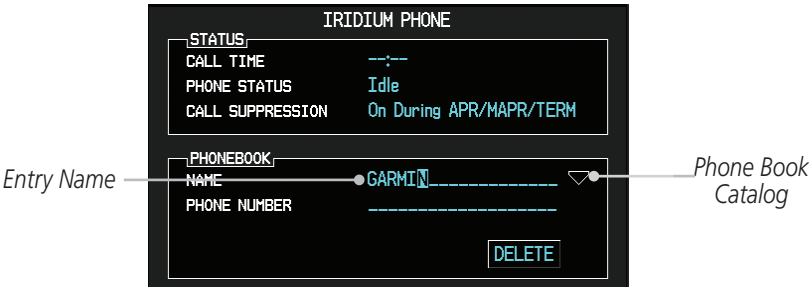


Figure 3-84 Phone Book Name Entry

1. Turn the large **MFD** knob to the Phone Number field. Turn the small **MFD** knob to select the first character of the number and then turn the large **MFD** knob to select the next character. When the number is complete, press the **ENT** key.



1. Numbers may also be entered using the soft keys at the bottom of the display. Press the **Keys** key at the bottom of the display.



- 190-01150-02 Rev. M

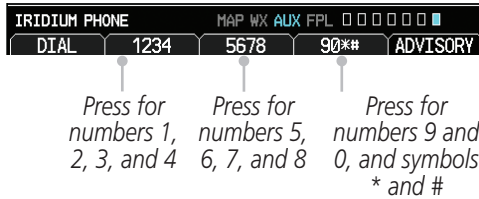


Figure 3-87 Selecting Numeric Groups for Phone Book Number Entry

3. Press the key for the desired number. Repeat as necessary and then press **ENT** when the number is complete.



Figure 3-88 Selecting Individual Numbers for Phone Book Number Entry

Selecting a Phone Book Catalog Entry

1. Press the small **MFD** knob to activate the cursor and then turn the large **MFD** knob to select the Phone Book Catalog icon.

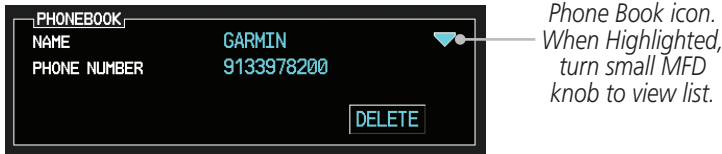


Figure 3-89 Selecting the Phone Book Catalog

2. Turn the small **MFD** knob to display the contents of the Phone Book Catalog and highlight the desired entry.

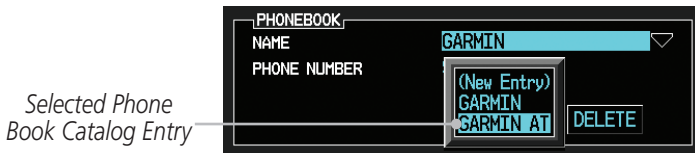


Figure 3-90 Selected Phone Book Catalog Entry

3. Press the **ENT** key. Press the small **MFD** knob again to cancel the selection cursor.

Deleting a Phone Book Catalog Entry

1. Press the small **MFD** knob to activate the cursor and then turn the large **MFD** knob to select the Phone Book Catalog icon.
2. Turn the small **MFD** knob to display the contents of the Phone Book Catalog and highlight the desired entry. Press **ENT** to select the catalog entry.
3. Turn the large **MFD** knob to highlight the **DELETE** key. Press **ENT** to delete the catalog entry. Press the small **MFD** knob again to cancel the selection cursor.

Editing a Phone Book Catalog Entry

1. Press the small **MFD** knob to activate the cursor and then turn the large **MFD** knob to select the Phone Book Catalog icon.
2. Turn the small **MFD** knob to display the contents of the Phone Book Catalog and highlight the desired entry. Press **ENT** to select the catalog entry.
3. Use the large **MFD** and small **MFD** knobs to make changes to the name or number. Press **ENT** to save the changes. Press the small **MFD** knob again to cancel the selection cursor.

3.2.8.3 Phone Volume

Use the Phone Volume controls to adjust the loudness of the phone calls you hear. Volume controls will only be available when the Idle, Connected, or Changing Volume states are displayed.

Adjusting the Phone Volume with the Rotary Knobs

1. While viewing the Iridium Phone page, press the small **MFD** knob and then turn the large **MFD** knob to select the Volume control. The volume bar graph will blink when selected.
2. Turn the small **MFD** knob to set the desired volume level.
3. Press the **ENT** key. Press the small **MFD** knob again to cancel the selection cursor.

Foreword

Sec 1
SystemSec 2
PFDSec 3
MFDSec 4
Hazard
AvoidanceSec 5
Additional
FeaturesSec 6
Annun.
& AlertsSec 7
SymbolsSec 8
Glossary

Appendix A

Index

Adjusting the Phone Volume with the Soft Keys

- 1. While viewing the Iridium Phone page, press the **VOL** key at the bottom of the display.

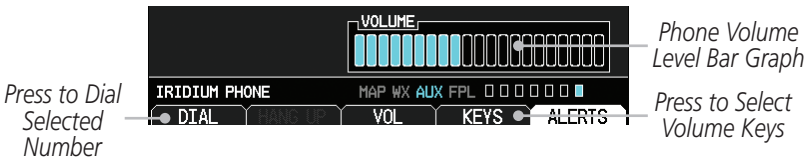


Figure 3-91 Select Soft Keys for Phone Volume Adjustment

- 2. Press the **+** or **-** keys as necessary to adjust the phone volume.

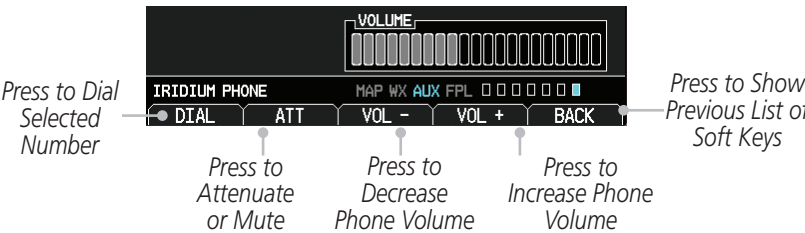


Figure 3-92 Using Soft Keys for Phone Volume Adjustment

- 3. Pressing the **ATT** soft key will attenuate the volume. Press the **ATT** soft key again to return to the previous volume.

3.2.8.4 Making a Phone Call

- 1. While viewing the Iridium Phone page, enter a phone number or select one from the Phone Book catalog.
- 2. Press the **DIAL** key.
- 3. After completing the call, press the **HANG UP** key.

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Avoidance	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	

3.2.8.5 Answering a Phone Call

An incoming phone call will generate a pop-up announcing the call. When a call is accepted, the pop-up will show that the call is connected and the cumulative call time will be shown.

1. When an incoming call is available, press the **ENT** key or the **ANSWER** soft key to answer the call. Or, press the **CLR** key or the **HANG UP** soft key to not answer the call and hang up.

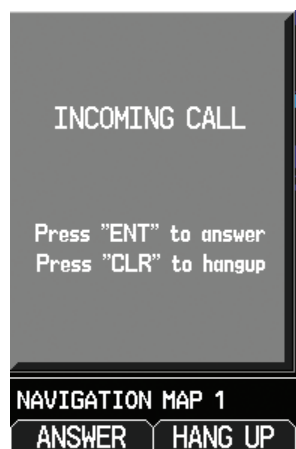


Figure 3-93 Incoming Call Pop-Up

2. After a called is accepted and connected, the connection time will be shown on the pop-up. Press the **ATT** soft key to attenuate the call volume; pressing it again will return to normal volume. Press the **HANG UP** soft key to end the call. Press the **VOL -** or **VOL +** keys to adjust the call volume.

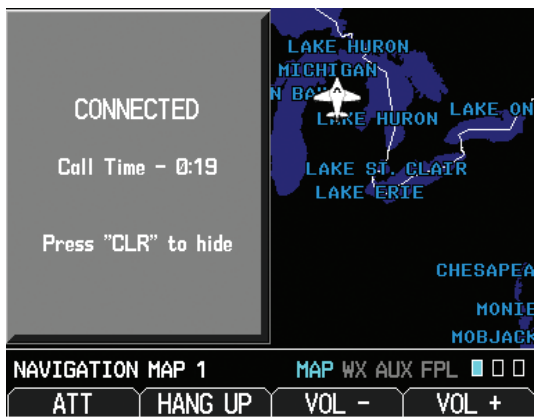


Figure 3-94 Connected Call Pop-Up

3.3 Flight Plan Pages

Use the Flight Plan page group to view details about your flight plan route. The Flight Plan Function shows the Current Flight Plan that is active in the navigation source displayed on the CDI.

3.3.1 Active Flight Plan Page

The Active Flight Plan box shows all of the legs of your flight plan with the current leg indicated in magenta. Listed are each leg with the Desired Track (DTK), Distance (DIS), and Estimated Time of Arrival (ETA) for the legs. METARs are shown for waypoints in the flight plan. In the Minimums window, the source and selected value are shown. See section 2.4.4 on Minimum Descent Altitude (MDA) or Decision Height (DH) in the PFD section and section 3.3.1.3 for more detail. In the Active Leg Info box in the lower part of the display, the Course with beginning and ending waypoints, Active Leg En Route Safe Altitude (ESA), and Route ESA are shown. METAR information is in section 4.

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Avoidance	Sec 4
Hazard	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	

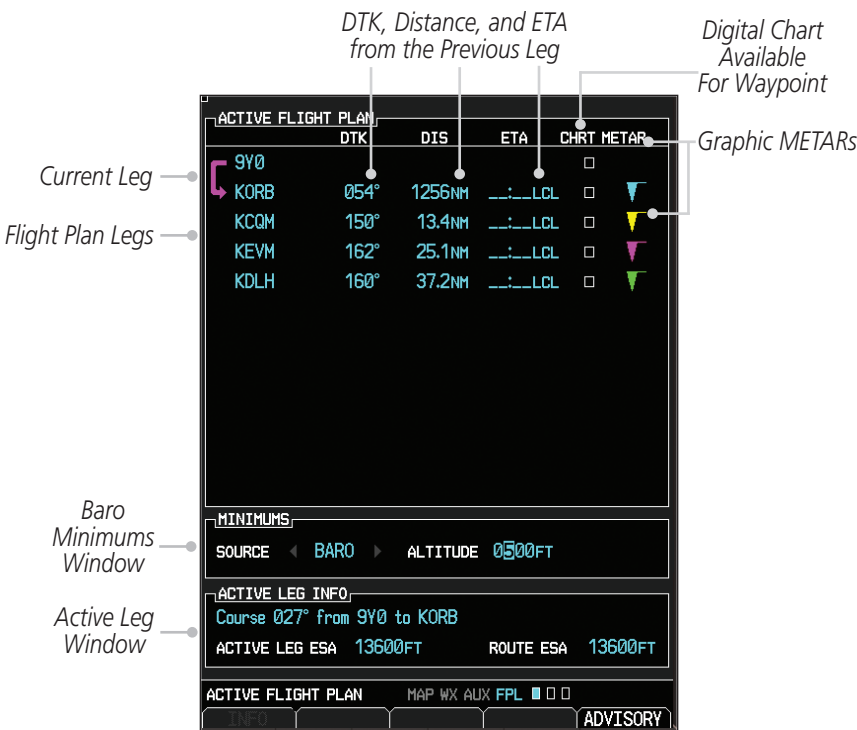


Figure 3-95 Flight Page 1 (Active Flight Plan)

3.3.1.1 Active Flight Plan Detail

The active flight plan is shown on the first page of the Flight Plan page group. Further information may be available for each waypoint as shown by the **INFO** or **WX** soft keys. The **WX** soft key will only appear if a data link receiver is installed and there is a Weather subscription.

1. Press the **MFD** knob and then use the large and small **MFD** knobs to highlight waypoints in the flight plan.
2. Press the **INFO** soft key, if available, to view information about the highlighted waypoint.
3. Press the **WX** soft key, if available, to view XM weather information about the highlighted waypoint.
4. Press the small **MFD** knob to return to the Active Flight Plan page.

3.3.1.2 Active Flight Plan Options

The Active Flight Plan page provides information for the flight plan currently in use for navigation.

To change data fields on the Active Flight Plan Page:

1. While viewing the Active Flight Plan Page of the FPL page group, press **MENU** to display the Active Flight Plan Page Options window.
2. Turn the large **MFD** knob to highlight Change Fields and then press **ENT**.

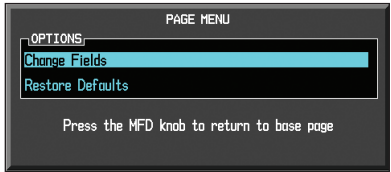


Figure 3-96 Active Flight Plan Page Menu Option Selection

3. Turn the large **MFD** knob to highlight the field you wish to change.

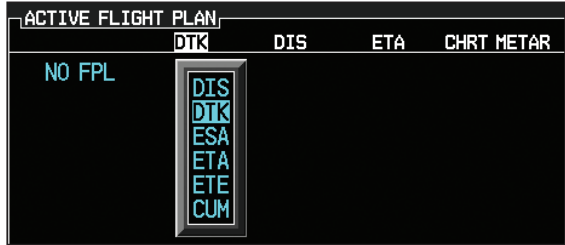


Figure 3-97 Active Flight Plan Page Menu Change Fields Option Selection

4. Turn the small **MFD** knob to select the desired data item and press **ENT**.
5. Press the small **MFD** knob to remove the cursor.

To restore factory default settings for data fields on the Active Flight Plan Page:

1. While viewing the Active Flight Plan Page of the FPL page group, press **MENU** to display the Active Flight Plan Page Options window.
2. Turn the large **MFD** knob to highlight Restore Defaults and then press **ENT**.

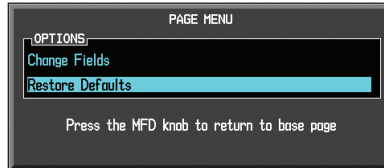


Figure 3-98 Active Flight Plan Page Menu Option Selection to Restore Defaults

3.3.1.3 Setting the Altitude Minimums Alserter

The Altitude Alerting function provides the pilot with visual and aural alerts (if interfaced to an audio panel) when approaching the Selected Altitude. See 2.4.4 Minimum Descent Altitude/Decision Height Alerting section of the PFD section for more details.

1. While viewing the Charts page of the FPL page group, press the **Menu** key. With the Set Minimums item highlighted, press **ENT**.
2. With the Minimums Source highlighted, select the Altitude Minimums Alserter source with small **MFD** knob.



Figure 3-99 Minimums Source Selection

3. Turn the large **MFD** knob to highlight the Altitude Minimums value. Turn the large and small **MFD** knobs to change the Altitude Minimums value.



Figure 3-100 Minimums Altitude Selection

4. Press **ENT** to activate the selected value.

In dual installations, the minimums alerting altitude value may be set from either GDU 620 and will be synchronized on both units.

NOTE: If you highlight the Minimums Altitude field on the FPL page and press the CLR key, it will turn the minimums functionality off.

3.3.2 Waypoint Information Page

The Waypoint Information page provides details about a particular waypoint. You can show a waypoint by selecting it by Ident, Facility Name, or by City. The Map window shows the selected waypoint in the center of the map. The Range keys zoom in and out on the map. The Info window at the bottom of the display shows the Bearing and Distance from your present position to the selected waypoint as well as its region and Lat/Lon coordinates.

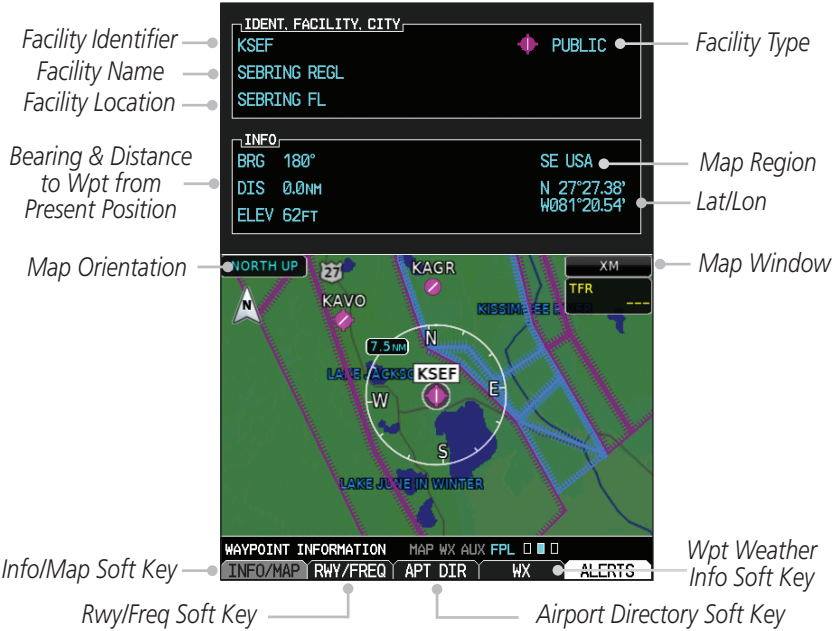


Figure 3-101 Flight Plan Waypoint Information Page

NOTE: Waypoint information is shown on the second page of the Flight Plan page group.

3.3.2.1 Selecting a Waypoint

1. While viewing the Waypoint Information page of the FPL page group, press the **MFD** knob and use the large and small **MFD** knobs to move the cursor to select the identifier for the waypoint.



Figure 3-102 Waypoint Selection

2. Press the **ENT** key to select the waypoint.
- OR
1. While viewing the Waypoint Information page of the FPL page group, press the small **MFD** knob.
2. Turn the small **MFD** knob counterclockwise.

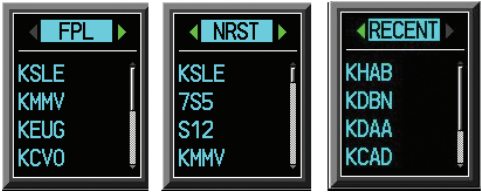


Figure 3-103 Waypoint Category Selection

3. Turn the small **MFD** knob to show FPL, NRST, or RECENT.
4. Turn the large **MFD** knob to highlight the desired airport, and then press **ENT**.



Figure 3-104 Heliport Waypoint Information Page

OR

- While viewing the Nav Map 1 or 2 pages of the MAP page group, press the **MFD** knob and use the large and small **MFD** knobs to move the cursor to highlight the identifier for a waypoint.



Figure 3-105 Waypoint Selection

- Press the **ENT** key to select the waypoint.

3.3.2.2 Waypoint/Runway/Frequency Information Detail

More detailed information about a selected waypoint is available by pressing the **RWY/FREQ** or **APT DIR** soft keys on the Waypoint Information page. The current destination waypoint is the default item shown. You may select a different Ident, Facility, or Location. In the Runway window, you may view information about the runways. In the Frequency window, a scroll bar is shown on the right side of the window when more frequencies are available.

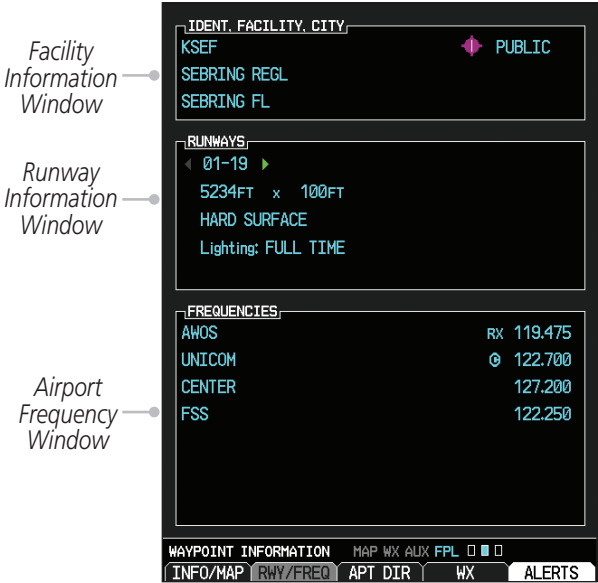


Figure 3-106 Flight Plan Waypoint Info Detail

Ident/Facility/City Selection

The current destination Identifier, Facility Type with icon, Facility Name, and City (location) are shown in the top window of the Flight Plan mode Waypoint Information page. The default is the Nearest airport if there is no active flight plan. New Identifiers may also be selected as shown in section 3.3.2.3.



Figure 3-107 Flight Plan Ident/Facility/City Detail

1. While viewing the Waypoint Information page of the FPL page group, press the **RWY/FREQ**, **APT DIR**, or **WX** soft keys to view information about the waypoint.
2. The current destination Ident, Facility, and City is shown, but may be changed to find information about other choices. Press the small **MFD** knob to activate the cursor. These fields may not be selected if the RWY, APT DIR, or WX pages are selected. If viewing those pages, press the soft key for that page again to return to the Waypoint Information page.
3. Use the large **MFD** knob to highlight the field you wish to change and use the small **MFD** knob to change the value.
4. Press the **ENT** key to save the selected value or press the small **MFD** knob to cancel editing.

Runway Information Selection

Information is provided for each runway showing the following detail: runway number, runway length, surface type, and the frequency for Pilot-Controlled Lighting (PCL).



Figure 3-108 Waypoint Runway Information

1. While viewing the Waypoint Information page of the FPL page group, press the **RWY/FREQ** soft key to view information about the waypoint and press the small **MFD** knob to activate the cursor.
2. Use the large **MFD** knob to highlight the Runway and use the small **MFD** knob to display the available runways.
3. Press the small **MFD** knob to cancel editing.

Facility Frequency Selection

The Frequency window at the bottom of the Waypoint Information page shows the frequencies available for the selected waypoint. A scroll bar is shown on the right side of the Frequency window if more frequencies are available.



Figure 3-109 Waypoint Frequency Information

1. While viewing the Waypoint Information page of the FPL page group, press the **RWY/FREQ** soft key to view information about the waypoint and then press the small **MFD** knob to activate the cursor.
2. Turn the small **MFD** knob to scroll through the available frequencies.
3. Press the small **MFD** knob to exit.

3.3.2.3 Airport Directory

The Airport Directory lists extensive information about the selected airport and the surrounding area. The **RWY/FREQ** and **APT DIR** soft keys are inactive unless the selected waypoint is an airport or heliport.



NOTE: *Airport Directory information comes from a database provided by various 3rd parties. Refer to the Database information in the AUX – SYSTEM STATUS page for details on the installed Airport Directory database.*

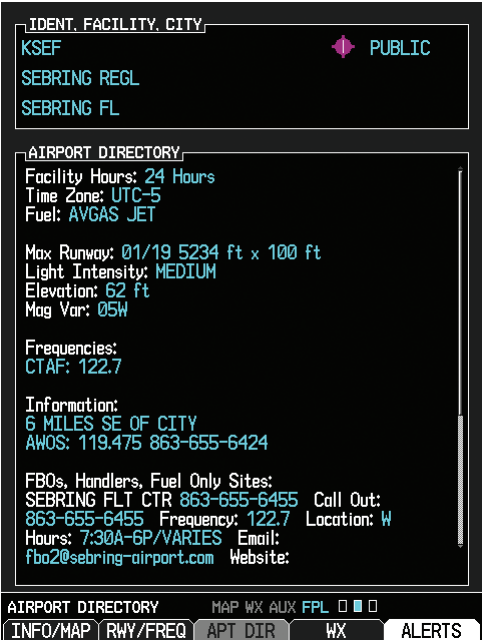


Figure 3-110 Airport Directory Information

1. While viewing the Waypoint Information page of the FPL page group, press the **APT DIR** soft key to view more information about the waypoint.
2. Press the small **MFD** knob to activate the cursor.
3. Use the small or large **MFD** knob to scroll through the information.
4. Press the small **MFD** knob to deactivate the cursor. Press the **APT DIR** soft key again to return to the Waypoint Information page.

3.3.2.4 Waypoint Weather Information (Optional)

The Weather information function is available if a data link receiver is installed and weather information is available for the selected waypoint. METAR and TAF text are displayed on the Waypoint Weather Information Page. Pressing the **WX/NOTAM** soft key will show the weather information page. Highlighting the Product selection and turning the small **MFD** knob will display METAR data, TAF information, and NOTAMs as they are available. NOTAMs are also available when FIS-B is available.

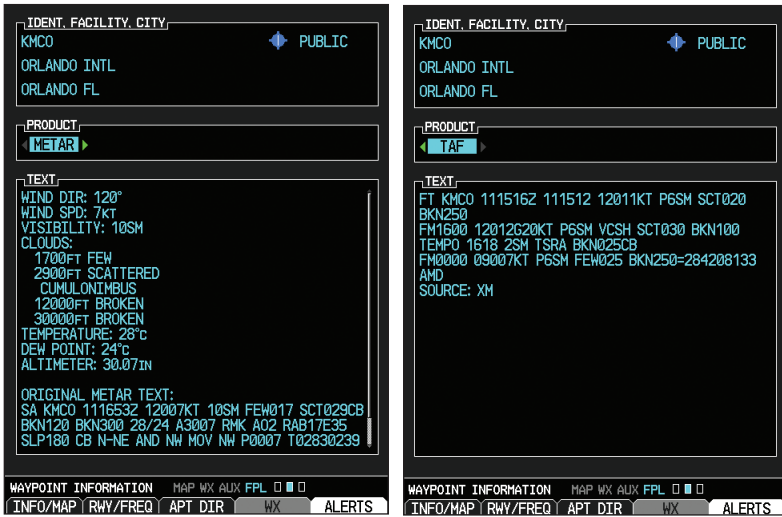


Figure 3-111 Waypoint Weather Information (Textual METARs and TAFs)

1. While viewing the Waypoint Information page of the FPL page group, press the **WX** soft key to view weather information for the waypoint.
2. Use the small **MFD** knob or the large **MFD** knob to scroll through the available information.
3. Press the small **MFD** knob to return to the main Flight Plan page.

3.3.3 Charts Page (Optional)

When the Chart function is available, charts will be shown on the third page of the Flight Plan page group.

For more information, refer to section 5.1.

This page intentionally left blank

4 HAZARD AVOIDANCE

The G500H hazard avoidance features are designed to provide advisory information of potential hazards to flight safety associated with weather, terrain, and air traffic.

This section is divided into the following groups:

Terrain Avoidance

- Terrain Proximity
- Terrain-HSVT (Optional)

Traffic Avoidance

- Traffic Advisory System (Optional)
- Traffic Information Service (TIS)
(Optional - GTX 33/330 Transponder required)
- ADS-B (Optional - ADS-B/FIS-B receiver required)

Weather

- GDL 69/69A XM Satellite Weather (Optional)
- GFDS Weather with the Iridium satellite system through GSR 56 Optional)
- FIS-B Weather with ADS-B/FIS-B receiver (Optional)
- Stormscope (Optional)

Foreword

System
Sec 1

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

4.1 Terrain Configurations

Garmin provides the following terrain awareness and alerting solutions within the G500H environment:

- Terrain-HSVT - Refers to a subset of H-TAWS that meets the terrain alerting requirements outlined in Appendix G of AC 20-167. Terrain-HSVT is a subset of H-TAWS that provides a FLTA functionality, including visual alerting and aural alerting. Terrain-HSVT is provided with the Synthetic Vision functionality and not marketed separately.



NOTE: *Terrain-HSVT is not a fully functional HSVT and does not meet the TAWS TSO-C194 requirements.*

- Terrain-Proximity - Refers to the display of the relative terrain elevations on the moving map. No aural alerts of any type are provided by a Terrain-Proximity configuration.

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

**Sec 4
Hazard
Avoidance**

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

4.1.1 Terrain System Self-Test

During power-up of the GDU 620, the terrain/obstacle database versions are displayed along with a disclaimer. At the same time, the Terrain system self-test begins. A failure message is issued if the terrain test fails (a message will not be issued for Terrain Proximity).

Terrain Configuration	Alert Source			
	PFD Annunciator Text	HSVT Terrain/Obstacle Shading [1]	MFD Terrain/Obstacle Alerts	Aural Callouts
Terrain Proximity w/no other system	-	-	-	-
SVT w/no other system	G500H	G500H	G500H	G500H
Terrain Proximity or SVT w/GNS HTAWS [3] [5]	GNS	-	-	GNS
Terrain Proximity or SVT w/ GTN HTAWS or HTerrain Alerting [2] [3] [4]	GTN	GTN	GTN	GTN
Terrain Proximity or SVT w/3rd-party HTAWS [5]	-	-	-	3rd-party HTAWS

[1] HSVT Terrain/Obstacle shading is only available when HSVT is enabled and displayed.

[2] Some installations with GTN may behave according to the "GNS" row, depending on configuration.

[3] If the GNS or GTN alerting source is not available but Synthetic Vision is enabled, the G500/G600 will revert to the "Synthetic Vision w/no other system" row. An advisory message will indicate when reversion to Terrain-HSVT alerting has occurred.

[4] For GTN HTAWS, GTN v5.10 or later and GDU v7.00 or later are required. (For prior versions, see the "Synthetic Vision w/GNS HTAWS" row.) For GTN HTerrain Alerting, GTN v6.50 or later and GDU v7.30 or later are required.

[5] Prior to GDU v7.00, HSVT Shading and MFD Alerts were generated by the G500H when Synthetic Vision was enabled and a GNS HTAWS or 3rd-party HTAWS was installed and generating the PFD Annunciation and Aural Callouts.

Table 4-1 G500H Terrain Annunciations

GNS/GTN HTAWS may be provided by a GNS 500WT-series or GTN-series navigator with HTAWS. The GNS/GTN HTAWS must be interfaced to the G500H as GPS 1. Each of the terrain awareness configurations are detailed in the following sections.

4.2 Terrain Proximity

Garmin Terrain Proximity is a non-TSO-C194-certified terrain awareness system provided as a standard feature of GDU 620 to increase situational awareness and help reduce controlled flight into terrain (CFIT). Terrain may be displayed on the Map page group Navigation Map and Terrain pages.

Terrain Proximity uses information provided from the GPS receiver to provide a horizontal position and altitude. GPS altitude is derived from satellite measurements. GPS altitude is converted to a Mean Sea Level (MSL)-based altitude (GPS-MSL altitude). GPS-MSL altitude accuracy is affected by factors such as satellite geometry, but it is not subject to variations in pressure and temperature that normally affect pressure altitude devices. GPS-MSL altitude does not require local altimeter settings to determine MSL altitude. Therefore, GPS altitude provides a highly accurate and reliable MSL altitude source to calculate terrain and obstacle alerts.

Terrain Proximity utilizes terrain and obstacle databases that are referenced to mean sea level (MSL). Using the GPS position and GPS-MSL altitude, Terrain Proximity displays a 2-D picture of the surrounding terrain and obstacles relative to the position and altitude of the rotorcraft. In this manner, Terrain Proximity provides awareness of surrounding terrain conditions.

Terrain-Proximity - is a non-TSO-C194 certified terrain awareness system. Do not confuse Terrain Proximity with H-TAWS. H-TAWS is TSO-C194 certified and Terrain Proximity is not. Terrain Proximity does not provide warning annunciations or voice alerts, it only provides color indications on map displays when terrain and obstacles are within a certain altitude threshold from the rotorcraft.

Terrain-HSVT is a non-TSO-C194 certified terrain awareness system. Do not confuse Terrain-HSVT with H-TAWS. H-TAWS is TSO-C194 certified and Terrain-HSVT is not. Terrain-HSVT provides terrain alerting functionality, including visual alerting and aural alerting. Terrain-HSVT is provided with the Synthetic Vision functionality and not marketed separately. Garmin Terrain-HSVT is available in GDU 620 v4.00 or later, when configured for Rotary Wing and Synthetic Vision enabled.

Terrain Proximity requires the following to operate properly:

- The system must have a valid 3-D GPS position solution.
- The system must have a valid terrain/obstacle database.

4.2.1 Terrain Proximity Limitations

Terrain Proximity displays terrain and obstructions relative to the altitude of the rotorcraft. Individual obstructions may be shown if available in the database. However, all obstructions may not be available in the database and data may be inaccurate. Never use this information for navigation or to maneuver to avoid obstacles.

Terrain information is based on terrain elevation information in a database that may contain inaccuracies. Terrain information should be used as an aid to situational awareness. Never use it for navigation or to maneuver to avoid terrain.

Terrain uses terrain and obstacle information supplied by government sources. The displayed information should never be understood as being all-inclusive.



WARNING: *The data contained in the TERRAIN databases comes from government agencies. Garmin accurately processes and cross-validates the data but cannot guarantee the accuracy and completeness of the data.*

4.2.2 Terrain System Status

The Terrain system continually monitors several system-critical items, such as database validity, hardware status, and GPS status. Should the system detect a failure, a failure message will be displayed.

4.2.3 Displaying Terrain Proximity

The Terrain Proximity page is in the Map page group. Terrain is also selectable on the Navigation Map pages.

4.2.3.1 Terrain Proximity Page Display on the Terrain Page

1. Turn the large **MFD** knob to the MAP page group.
2. Turn the small **MFD** knob to the Terrain page.
3. Press the **VIEW** soft key to show the **360°** and **ARC** soft keys.



Figure 4-2 Terrain Page with VIEW Soft Key to reach 360° and 120° Arc Soft Keys

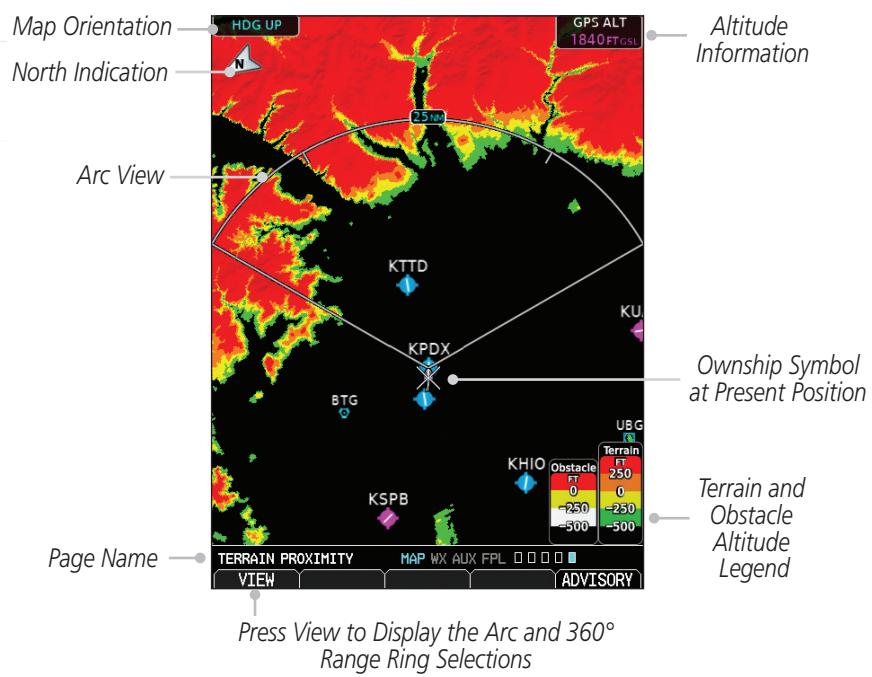


Figure 4-3 Terrain Page with Aviation Data Displayed and 360° View

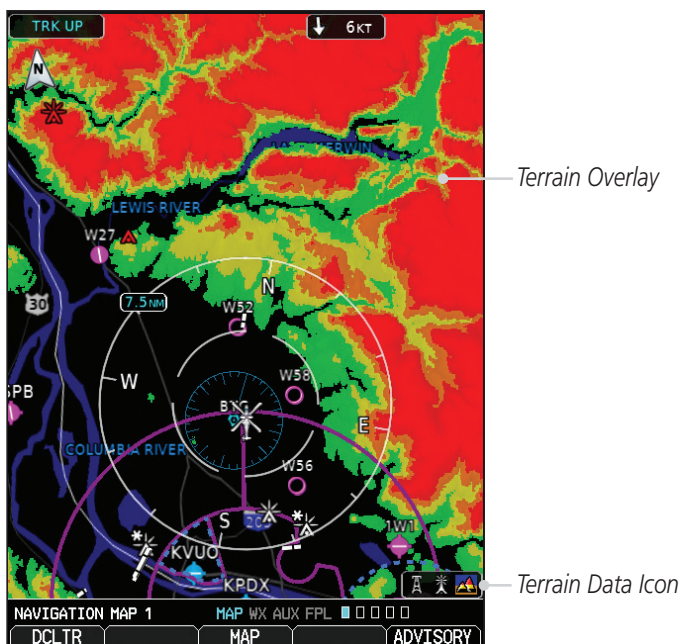


Figure 4-4 Terrain on Navigation Map Page

4.2.3.2 Terrain Proximity Page Display on a Navigation Map Page

1. Turn the large **MFD** knob to the MAP page group.
2. On Navigation Map page 1 or 2, press the **MAP** soft key to show the **TERRAIN** soft key.
3. Press the **TERRAIN** soft key to overlay terrain on the Navigation Map.



NOTE: *Terrain Proximity and NEXRAD are mutually exclusive on the map page.*

4.2.3.3 Terrain Proximity Page 120° Arc or 360° Rings

Select the 120° Arc or 360° rings overlay for the Terrain page with either the 360/Arc soft keys or from the Page Menu.

1. Press the **VIEW** soft key to show the 360 and ARC soft keys.
 2. Press the **360** or **Arc** soft key.
- OR
1. Press **MENU** and the with the View Arc or View 360° selection highlighted press **ENT**.



Figure 4-5 Terrain Page Menu Viewing Selections

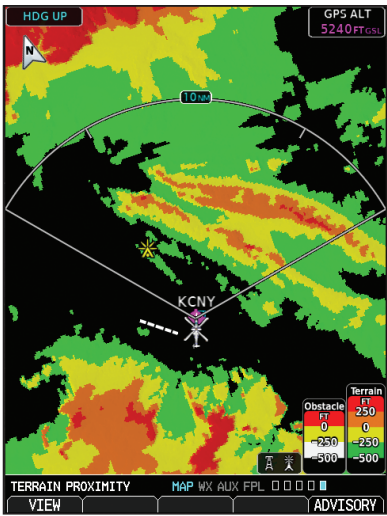
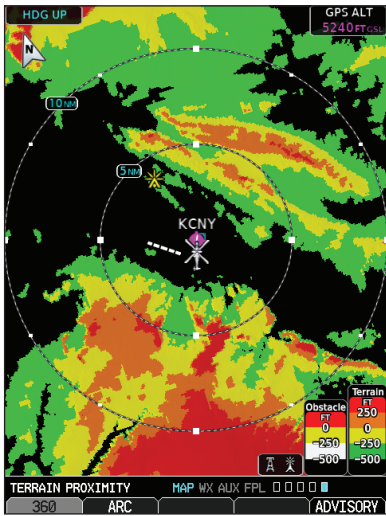


Figure 4-6 Terrain Page with 360° Rings and 120° Arc

4.2.3.4 Terrain Proximity Page Aviation Data

The Page Menu selections allow you to hide or show aviation data overlay on the Terrain page.

1. While viewing the Terrain page of the MAP page group, press **MENU** for Map selections to hide or show aviation data overlay on the Terrain page.

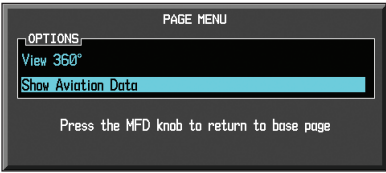


Figure 4-7 Show/Hide Aviation Data on the Terrain Page

2. Press **ENT** to save the highlighted value.

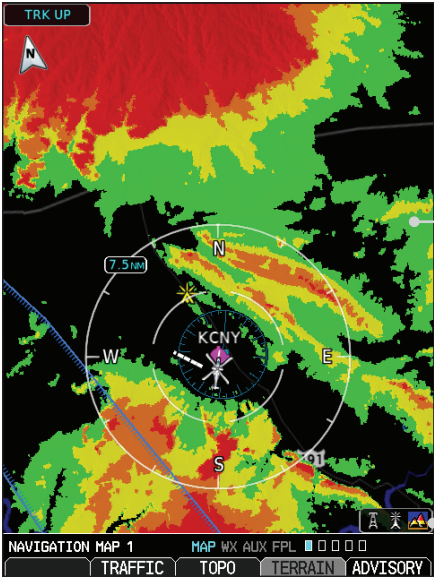


Figure 4-8 Navigation Map Page with Terrain Data Displayed

4.2.4 Terrain Proximity Symbols

Terrain Proximity uses colors and symbols to depict terrain, obstacles, and potential impact points. Amber (caution) and red (warning) indicate terrain and obstacle alerts relative to rotorcraft altitude. These colors adjust automatically as the rotorcraft altitude changes.

Terrain/Obstacle Altitude Legend

The Terrain/Obstacle legend is displayed at the bottom right corner of the Navigation Map. This option is available in the Map page group.



Figure 4-9 Terrain/Obstacle Altitude Legend

Color	Description
Black	Terrain is more than 500 ft below the rotorcraft.
Green	Terrain is between 250 ft below and 500 ft below the rotorcraft
Yellow	Terrain is between 250 ft below and 0 ft above the rotorcraft
Orange	Terrain is between 0 ft above and 250 ft above the rotorcraft
Red	Terrain is more than 250 ft above the rotorcraft

Table 4-10 Terrain Altitude Color Descriptions

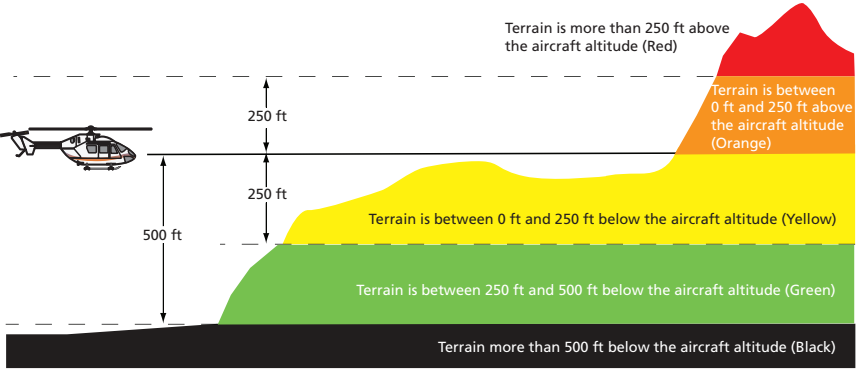


Figure 4-11 Terrain Altitude Colors

Obstacle Icons



NOTE: If an obstacle or terrain cell and the projected flight path of the rotorcraft intersect, the display automatically zooms in to the closest threat location on the Terrain Proximity page.

With the exception of power lines, any number of obstacles within close proximity of each other may display as a group on the Navigation Map. The MFD groups obstacles when they would otherwise overlap at the current zoom scale. When a group is drawn, only the most immediate threat is depicted. An asterisk at the upper left of an obstacle indicates that it is a group. The relative altitude of the highest obstacle in the group determines the asterisk's color.

To view obstacles individually, increase the current zoom scale.

Icon	Description
	Unlighted Obstacle (height is less than 1,000 ft AGL)
	Lighted Obstacle (height is less than 1,000 ft AGL)
	Unlighted Obstacle (height is greater than 1,000 ft AGL)
	Lighted Obstacle (height is greater than 1,000 ft AGL)
	Windmill
	Windmill in Group
	Power Line

Table 4-12 Obstacle Icon Types

Color	Description
Red	Obstacle is at or above current rotorcraft altitude
Yellow	Obstacle is between 250 ft and 0 ft below current rotorcraft altitude
White	Obstacle is 250 ft, or more, below current rotorcraft altitude Obstacles are removed when more than 500 ft below the helicopter

Table 4-13 Obstacle Altitude Color Descriptions

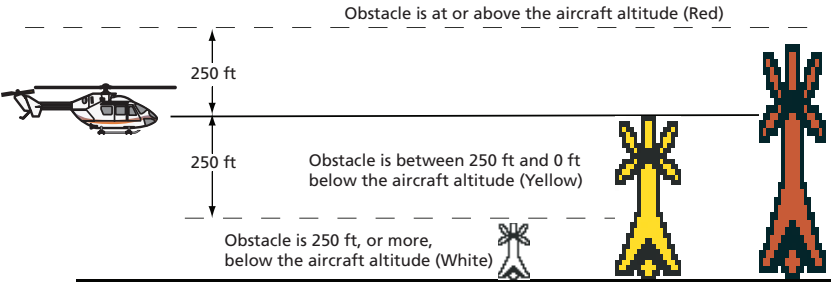


Figure 4-14 Obstacle Altitude Colors

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

4.3 External H-TAWS

If a GNS 500WT-series with HTAWS or a GTN-series with HTAWS or HTerrain Alerting is interfaced as GPS 1, text alerts generated by the GNS/GTN display on the PFD. Other visual alert depictions may appear on the PFD and/or MFD, depending on the configuration. See Section 4.1. Refer to the 400W/500W-series Garmin Optional Displays Pilot's Guide Addendum (p/n 190-00356-30) for more information regarding these alerts.

HTAWS is an alerting system. The system does NOT guarantee successful recovery from a conflict due to factors such as pilot response, rotorcraft performance, and database limitations. No standardized recovery technique is defined as recovery maneuvers may vary. HTAWS shall NOT be used for navigation purposes.

H-TAWS annunciations received from the GNS 400W/500W Series H-TAWS unit will be displayed to the left and aligned with the top of the Altitude Tape on the G500H PFD. A new annunciation will flash for approximately five seconds.

- HTAWS annunciations can only be received from the #1 GNS unit if multiple GNS units are installed.
- If the #1 GNS unit is powered OFF the G500H will revert to Terrain HSVT alerting if equipped with synthetic vision.
- Depending on configuration, some installations with a GTN-series unit generate terrain impact points on the MFD from crossfilled GTN data.

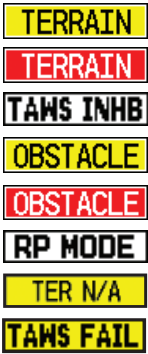


Figure 4-15 H-TAWS Annunciations from a 400W/500W-series Unit

NOTE: H-TAWS Caution Alerts are displayed as black text on a yellow background; H-TAWS Warning Alerts are displayed as white text on a red background.

4.4 Terrain-HSVT (Optional)

Garmin Terrain-HSVT refers to a subset of H-TAWS that meets the terrain alerting requirements outlined in Appendix G of AC 20-167. Terrain-HSVT is a subset of H-TAWS that provides a FLTA functionality with visual alerting and aural alerting. Terrain-HSVT is provided with Garmin Synthetic Vision Technology (SVT™) functionality and not provided separately.

Terrain-HSVT alerting consists of the following alert types:

- Forward Looking Terrain Avoidance (FLTA) Alerting which consists of:
- Required Terrain Clearance (RTC) / Required Obstacle Clearance (ROC) Alerting
- Imminent Terrain Impact (ITI) / Imminent Obstacle Impact (IOI) Alerting

Terrain-HSVT is available in G500H GDU 620 SW version 4.00, and later.

Terrain-HSVT utilizes terrain and obstacle databases that are referenced to mean sea level (MSL). Using the GPS position and GPS-MSL altitude, Terrain-HSVT displays a 2-D picture of the surrounding terrain and obstacles relative to the position and altitude of the rotorcraft. The GPS position and GPS-MSL altitude are used to calculate and “predict” the rotorcraft’s flight path in relation to the surrounding terrain and obstacles. In this manner, Terrain-HSVT can provide advanced alerts of predicted dangerous terrain conditions. Detailed alert modes are described later in this section.

To function properly Terrain-HSVT requires the use of databases specific to helicopters and Terrain-HSVT. The databases required are:

- 6 arc-second Terrain Databases
- Helicopter Obstacle Database
- Aviation Database including Heliports

4.4.1 Terrain-HSVT Page 120° Arc or 360° Rings

Select the 120° Arc or 360° rings overlay for the Terrain page with either the 360/Arc soft keys or from the Page Menu.

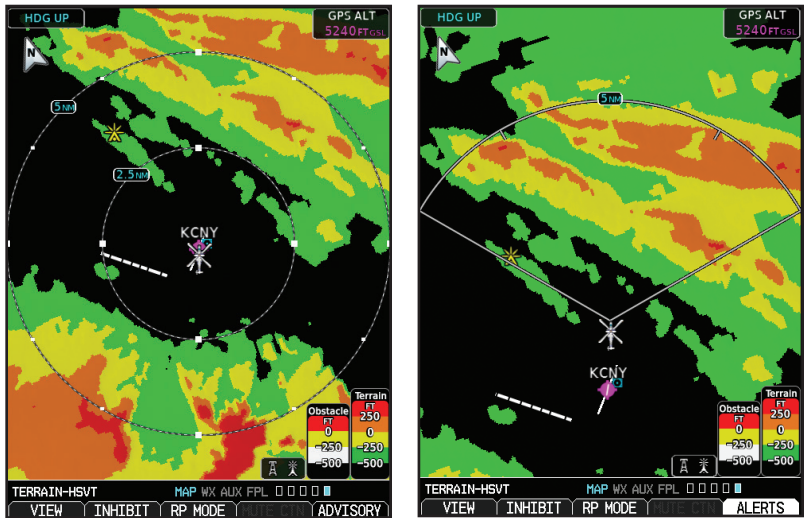


Figure 4-16 Terrain-HSVT 360 and Arc Views

1. Press the **VIEW** soft key and then the **360** or **Arc** soft key.
- OR
1. Press **MENU** and the with the "View Arc" or "View 360°" selection highlighted press **ENT**.



Figure 4-17 Terrain-HSVT Page Menu Viewing Selections

4.4.2 Terrain-HSVT Page Aviation Data

Select the display of Aviation data on the Garmin Terrain-HSVT page. The Page Menu selections allow you to hide or show aviation data overlay on the Terrain or the Map Setup options for the Navigation Map pages.

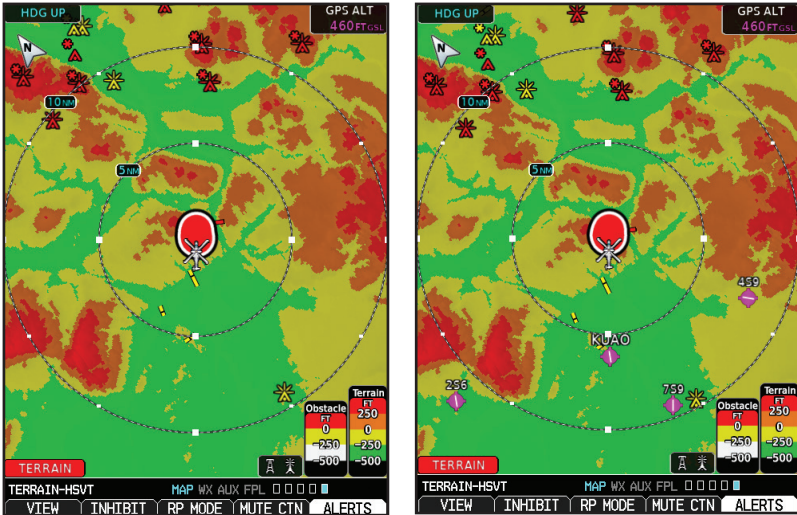


Figure 4-18 Terrain-HSVT Hide and Show Aviation Data

1. While viewing the Terrain page of the MAP page group, press **MENU** for Map selections to hide or show aviation data overlay on the Terrain or the Map Setup options for the Navigation Map pages.

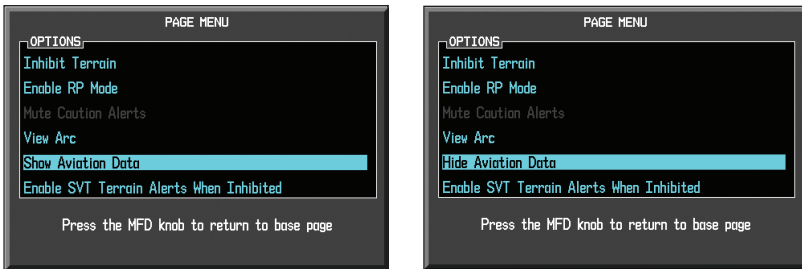


Figure 4-19 Show/Hide Aviation Data on the Terrain-HSVT Page

2. Press **ENT** to save the highlighted value.

4.4.3 Inhibiting/Enabling Terrain-HSVT Alerting

Terrain-HSVT has an inhibit mode that deactivates the aural and visual alerts. Pilots should use discretion when inhibiting Terrain-HSVT and always remember to enable the system when appropriate.

When Terrain HSVT is inhibited the following terrain alerts functions are inhibited:

- Aural Alerts
- Pop up alert on MFD
- Annunciator on PFD
- Terrain warning and caution shading on PFD synthetic terrain

NOTE: See RFM for guidance on inhibiting Terrain-HSVT.



Figure 4-20 Terrain-HSVT Alerting Disabled (Alerts Inhibited) Annunciation (PFD & MFD)

1. In MAP page group, turn the small **MFD** knob to reach the HTerrain SVT Page.
 2. Press the **INHIBIT** soft key to inhibit or enable Terrain SVT (choice dependent on current state).
- OR
1. Press the **MENU** key.

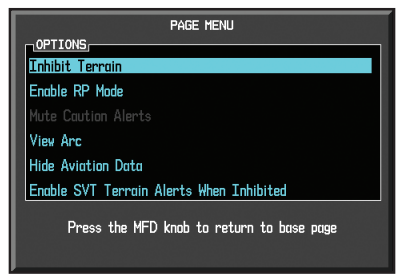


Figure 4-21 Select Inhibit Terrain-HSVT Alerting (Alerts Will Be Inhibited)

2. Use the large or small **MFD** knob to highlight "Inhibit Terrain" or "Enable Terrain" (choice dependent on current state) and press the **ENT** key.

4.4.4 Terrain-HSVT Reduced Protection Mode

Reduced Protection (RP) mode functionality allows operating with a reduction in the alerting thresholds, and suppresses visual and aural annunciation of caution alerts. Reduced protection allows low level operations and landings off airport with a minimum number of alerts while continuing to provide protection from terrain and obstacles. Reduced Protection should only be selected when operating in visual contact with the terrain as alerting times are significantly less than in normal mode.

Enable or disable RP Mode on the Garmin Terrain-HSVT page. The Page Menu selections allow you to hide or show aviation data overlay on the Terrain Map page.

The MFD Terrain Scale will show a "RP" annunciation when RP Mode is enabled. The "RP" annunciation will also be shown in the upper right corner of the PFD.

 


Figure 4-22 MFD and PFD RP Mode Annunciation

1. While viewing the Terrain page of the MAP page group, press **MENU** for Map selections to enable or disable RP Mode on the Terrain page.

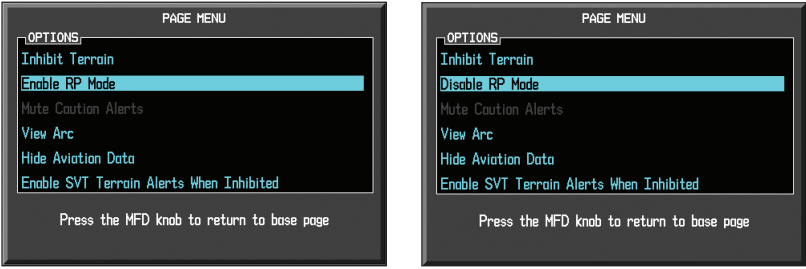


Figure 4-23 Enable or Disable RP Mode on the Terrain-HSVT Page

2. Press **ENT** to save the highlighted value.

OR

1. While viewing the Terrain page of the MAP page group, press the **RP** soft key to enable or disable RP Mode on the Terrain page.

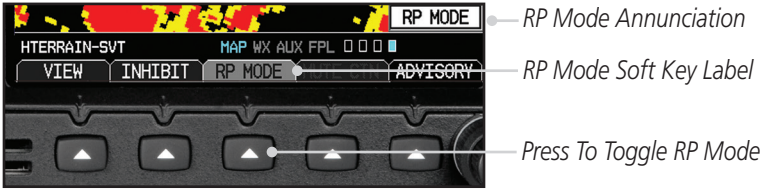


Figure 4-24 Enable or Disable RP Mode on the Terrain-HSVT Page

2. Press the **RP** soft key to toggle RP Mode on and off.

4.4.5 Synthetic Vision Alerts and Annunciations

Terrain-HSVT alerts employ a CAUTION or a WARNING alert severity level in the normal mode, but only a WARNING alert severity level in RP mode. When an alert is issued, visual annunciations are displayed and aural alerts are simultaneously issued.

When an alert is issued, annunciations appear on the PFD and MFD (Terrain-HSVT page only). The Terrain Alert Annunciation is shown to the upper left of the Altimeter on the PFD and below the Terrain Legend on the MFD. If the Terrain-HSVT page is not displayed at the time, a pop-up alert appears on the MFD.

To acknowledge the pop-up alert:

1. Press the **CLR** key (returns to the currently viewed page).
- OR
1. Press the **ENT** key (accesses the Terrain-HSVT Page).

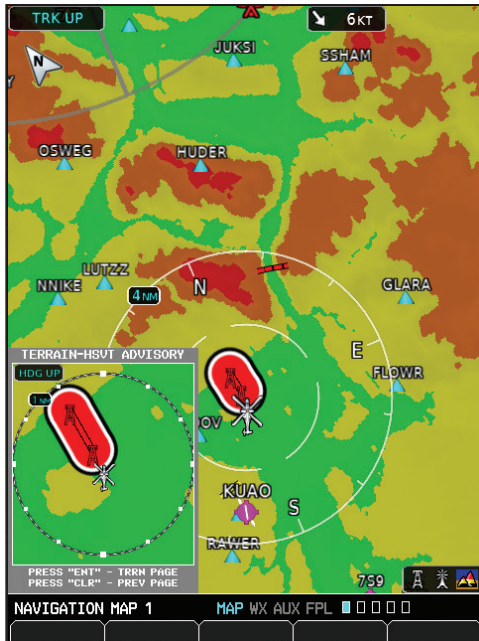


Figure 4-25 Terrain-HSVT Advisory Pop-Up on the MFD

Alert Type	PFD/MFD Alert Annunciation	Aural Message
GPS signal re-established	None	"Terrain System Available"
Terrain System Test Successful	None	"Terrain System test OK"
Terrain System Test in Progress	TER TEST	None
Terrain Alerting is disabled	TER INH	None
No GPS position Excessively degraded GPS signal	TER N/A	"Terrain System Not Available"
Terrain SVT System Test Fail	TER FAIL	"Terrain System Failure"

Table 4-26 Terrain-HSVT System Test Status Annunciations

Alert Type	PFD/MFD Alert Annunciation	Aural Message
FLTA Terrain Caution (RTC-C, ITI-C)	TERRAIN	"Caution, Terrain, Terrain"
FLTA Terrain Caution (RLC-C, ILI-C)	WIRE	"Caution, Wire, Wire"
FLTA Terrain Warning (RTC-W, ITI-W)	TERRAIN	"Warning, Terrain, Terrain"
FLTA Terrain Warning (RLC-W, ILI-W)	WIRE	"Warning, Wire, Wire"
FLTA Obstacle Caution (ROC-C, IOI-C)	OBSTACLE	"Caution, Obstacle, Obstacle"
FLTA Obstacle Warning (ROC-W, IOI-W)	OBSTACLE	"Warning, Obstacle, Obstacle"

Table 4-27 Terrain-HSVT Alerts Summary

4.4.6 Mute Caution Alerts

Aural Caution Alert, when present, may be suppressed by pressing the **MUTE CTN** soft key or selecting Mute Caution Alerts from the Menu.

To Mute or Unmute Caution Alerts:

1. When the **MUTE CTN** soft key label is present, press the **MUTE CTN** key (Aural Caution Alerts will be muted).
- OR
1. Press the **MENU** key, select Mute Caution Alerts, and press **ENT**.

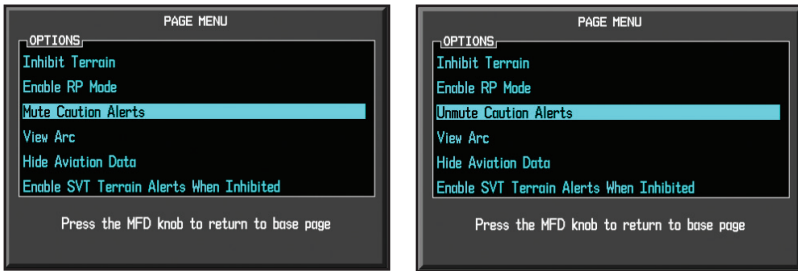


Figure 4-28 Mute and Unmute Caution Alerts

4.4.7 SVT Alerts when Terrain is Inhibited

If the pilot desires to retain the Terrain warning shading on PFD synthetic terrain even when Terrain HSVT is inhibited then select the Enable SVT Terrain Alerts When Inhibited menu option.

To Enable or Disable SVT Terrain Alerts When Terrain Is Inhibited:

1. While viewing the Terrain-HSVT page of the MAP page group, press the **MENU** key.
2. Highlight **Disable SVT Terrain Alerts When Inhibited** and press **ENT**.

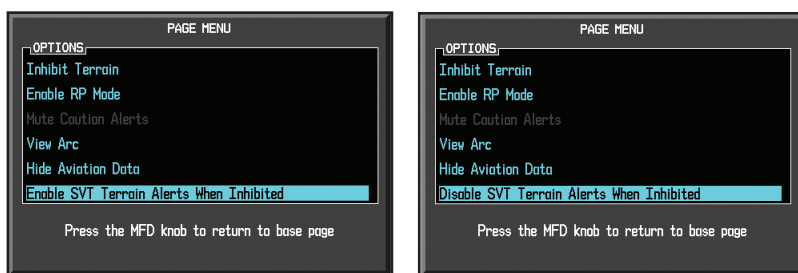


Figure 4-29 Enable/Disable SVT Terrain Alerts When Inhibited

4.5 Traffic Systems

The Traffic function requires the installation of a compatible traffic device and will then provide a separate traffic page in the Map page group as well as the overlay of traffic on the Map Navigation pages. TIS and TAS cannot be displayed at the same time. If the rotorcraft has a TAS unit installed, the GDU 620 will be configured for TAS. If no TAS unit is installed and a GTX Mode-S transponder is installed then the GDU 620 will be configured for TIS. A pilot can tell which data is being displayed by the label in the top left corner (TAS/TCAS: OPER for TAS/TCAS data and TIS: OPER for TIS data). TIS data comes from a GTX transponder. Coverage is limited to specific areas as shown in the Airmen's Information Manual (AIM). TAS data comes from a TAS unit such as a Garmin GTS 800 or 820, Skywatch 497, KTA 810, or other unit. Coverage follows the rotorcraft. In the Navigation Map page setup you can select the maximum range at which traffic symbols are shown. Once outside of the selected range, traffic will be decluttered. The Traffic soft key will still be available. The Garmin GDL 88H can provide TIS-B and ADS-B information. The Garmin GTS ADS-B products can also provide ADS-B information.

4.5.1 TAS/TCAS 1 Traffic (Optional)

TAS refers to an active Traffic Advisory System that may be optionally displayed on the PFD and/or MFD. The TAS is installed separately from the G500H system. There are variations in performance and control among the various G500H compatible TAS systems. Refer to the appropriate TAS documentation for detailed information on the operation of the TAS system. This section describes the display and control functions available on the G500H system.



NOTE: *TIS and TAS are mutually exclusive.*



NOTE: *Rotorcraft without an operating transponder are invisible to both Traffic Advisory Systems (TAS) and TIS. Rotorcraft without altitude reporting capability are shown without altitude separation data or climb descent indication.*



NOTE: *Traffic is also displayed in the SVT feature on the PFD.*

4.5.1.1 Displaying and Operating Traffic (TAS/TCAS Systems)

The Traffic Map Page shows surrounding TAS/TCAS traffic data in relation to the rotorcraft's current position and altitude. Traffic page orientation is always heading up. The traffic mode and altitude filter mode are annunciated in the upper left corner.

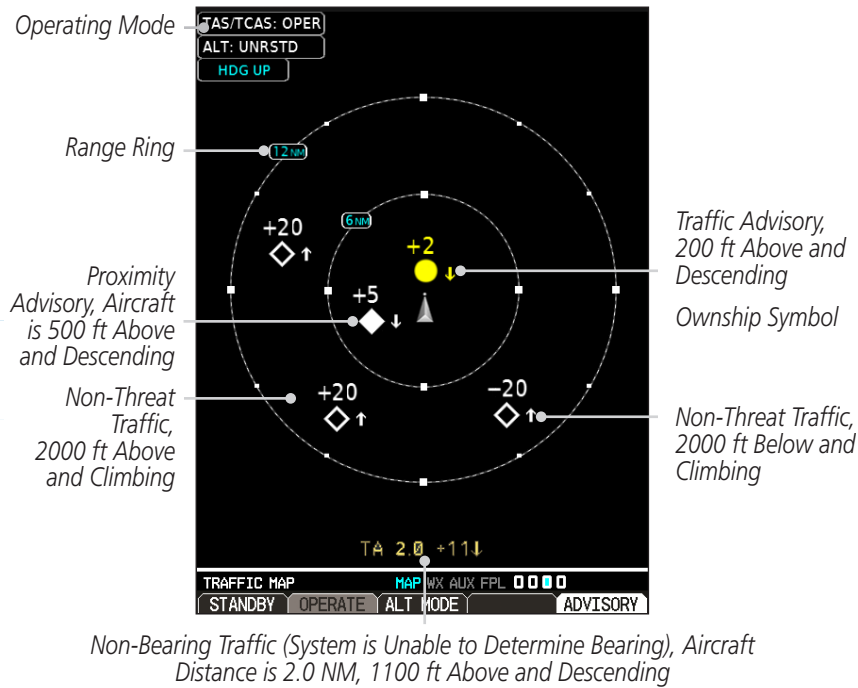


Figure 4-30 Traffic Map Page - TAS/TCAS

4.5.1.2 Switching from Standby Mode to Operating Modes

The unit must be in operating mode for traffic to be displayed.

1. While viewing the Traffic Page of the MAP page group, select the **OPERATE** soft key to select Operating Mode.
2. To switch to Standby Mode from the Traffic Page, select the **STANDBY** soft key.



NOTE: Not all TAS systems can be controlled from the G500H. The Operate/Standby soft keys may not be displayed. An alert will be generated when Standby is selected and the rotorcraft is in the air.

4.5.1.3 Range Ring

Pressing the **RNG** keys will zoom in and out in preset steps depending on the installed equipment.

4.5.1.4 Altitude Display

Changing the altitude display mode

1. Press the **ALT MODE** soft key to change the altitude filter.
2. Select the desired altitude filter by pressing the **BELOW**, **NORMAL**, **ABOVE**, or **UNRSTD** (unrestricted) soft keys. The selection is displayed in the Altitude mode field.

Altitude Mode	Displayed Traffic Range (ft)
Below	-9,900 to 2,700
Normal	-2,700 to 2,700
Above	-2,700 to 9,900
Unrestricted	All Traffic Shown (-9,900 to 9,900)

Table 4-31 Displayed Traffic Range



NOTE: *Traffic Advisories (TAs) are always displayed, regardless of altitude mode.*

Foreword	
Sec 1	System
Sec 2	PFD
Sec 3	MFD
Sec 4	Hazard Avoidance
Sec 5	Additional Features
Sec 6	Annun. & Alerts
Sec 7	Symbols
Sec 8	Glossary
	Appendix A
	Index

4.5.1.5 TAS/TCAS Symbolology

Traffic is displayed using four different symbols.

TAS Symbol	Description
	Other Traffic
	Proximity Advisory (PA)
	Traffic Advisory (TA)
	Traffic Advisory Off Scale

Table 4-32 TAS/TCAS Traffic Symbol Description

The traffic system determines the type of symbol used for each target. Refer to the traffic system documentation for information regarding the criteria used to determine target type.

A Traffic Advisory (TA) alerts the crew to a potentially hazardous intruding rotorcraft. Closing rate, distance, and vertical separation meet TA criteria for the specific traffic system. A Traffic Advisory that is beyond the selected display range is indicated by a half TA symbol at the edge of the screen at the relative bearing of the intruder.

4.5.1.6 Traffic System Status



NOTE: Refer to the equipment documentation for information on the self-test and operating modes.

The traffic mode is indicated in the upper left corner of the Traffic Map Page.

Mode	Traffic Mode Annunciation (Traffic Map Page)
TAS Self-test Initiated	TEST (also shown in white in center of page)
TAS Operating	OPERATING
TAS Standby	STANDBY (also shown in white in center of page)

Table 4-33 TAS Modes

If the unit fails, an annunciation as to the cause of the failure is shown in the center of the Traffic Map Page.

Traffic Map Page Annunciation	Description
NO DATA	Data is not being received from the TAS unit.
TRFC FAIL	TAS unit has failed (unit is self-reporting a failure or sending incorrectly formatted data).
NO TRFC DATA	Data is not being received from the TAS unit.
DATA FAILED	Data is being received from the TAS unit, but the unit is self-reporting a failure.
FAILED	Incorrect data format received from the TAS unit.

Table 4-34 TAS Failure Annunciations

The annunciations to indicate the status of traffic information appear in a banner at the lower left corner of maps on which traffic can be displayed.

Traffic Status Banner Annunciation	Description
TA OFF SCALE*	A Traffic Advisory is outside the selected display range Annunciation is removed when traffic comes within the selected display range.
TA X.X ± XX ↓**	System cannot determine bearing of Traffic Advisory. Annunciation indicates distance in NM, altitude separation in hundreds of feet, and altitude trend arrow (climbing/descending).
TA/ X.XNM/± XX ↓**	System cannot determine bearing of Traffic Advisory. Annunciation indicates distance in NM, altitude separation in hundreds of feet, and altitude trend arrow (climbing/descending). The system distance units are set to Metric or Imperial and are shown as such in all other cases except for the traffic distance annunciation.

*Shown as symbol on Traffic Map Page

**Shown in center of Traffic Map Page

Table 4-35 TAS Traffic Status Annunciations

For TAS traffic, TEST MODE can be initiated from the Page Menu (press the **MENU** key) when the traffic device is in Standby mode.

4.5.1.7 Traffic Pop-Up

When the GDU 620 MFD is displaying any page (other than the Traffic page) and a traffic alert becomes active, the Traffic pop-up will be displayed.



NOTE: The traffic pop-up will not appear when your rotorcraft is on the ground.

1. Press **ENT** to go directly to the Traffic page.
- OR
2. Press **CLR** to return to the previously viewed page.



Figure 4-36 Traffic Pop-Up

4.5.2 TIS Traffic (Optional)

Foreword



WARNING: The Traffic Information Service (TIS) is intended for advisory use only. TIS is intended to help the pilot locate traffic visually. It is the responsibility of the pilot to see and maneuver to avoid traffic.

Sec 1
System



NOTE: TIS is available only when the rotorcraft is within the service volume of a TIS-capable terminal radar site. Rotorcraft without an operating transponder are invisible to both Traffic Advisory Systems (TAS) and TIS. Rotorcraft without altitude reporting capability are shown without altitude separation data or climb descent indication.

Sec 2
PFD

Sec 3
MFD



NOTE: TIS and TAS are mutually exclusive.



NOTE: Traffic is also displayed in the SVT feature on the PFD.

Sec 4
Hazard
Avoidance

The type of traffic systems that is installed is determined by the traffic page display in the upper left corner of the MFD.

Sec 5
Additional
Features

If Traffic Information Service (TIS) is configured, TIS will be displayed in the upper left corner of the MFD.

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Traffic Information Service (TIS) is designed to help in detection and avoidance of other rotorcraft. TIS uses the Mode S transponder for the traffic data link. TIS receives traffic information from ground stations, and is updated every five seconds. The GDU 620 displays up to eight traffic targets within a 7.5 NM radius, from 3,000 feet below to 3,500 feet above the requesting rotorcraft. Traffic is displayed according to TCAS symbology using three different symbols.

4.5.2.1 Traffic Map Page

Sec 8
Glossary

Appendix A

Index

The Traffic Map Page is configured to show surrounding TIS traffic data in relation to the rotorcraft's current position and altitude, without clutter from the basemap. Rotorcraft orientation on this map is always heading up unless there is no valid heading.

The traffic mode is annunciated in the upper left corner of the Traffic Map Page. When the rotorcraft is on the ground, TIS automatically enters Standby Mode. Once the rotorcraft is airborne, TIS switches from Standby to Operating Mode and the GDU 620 begins to display traffic information.

Displaying traffic on the Traffic Map Page


1. Turn the large **MFD** knob to select the Map Page Group.
2. Turn the small **MFD** knob to select the Traffic Map Page.
3. Confirm TIS is in Operating Mode:

Select the **OPERATE** soft key to begin displaying traffic.

OR

1. Press the **MENU** key.
2. Select Operate Mode (shown if TIS is in Standby Mode) and then press the **ENT** key.

Operating Mode

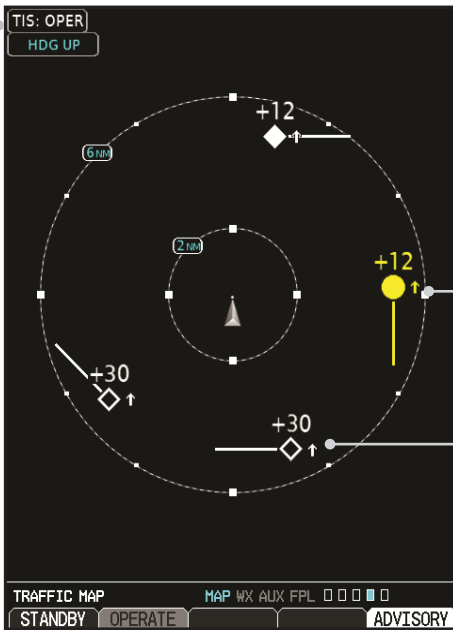

Traffic Advisory, Aircraft is 1,200 feet above, climbing, and moving in the direction of the line

Non-Threat Traffic, Aircraft is 3,000 feet above, climbing, and moving in the direction of the line

Figure 4-37 Traffic Map Page - TIS

4.5.2.2 TIS Symbology

TIS Symbol	Description
	Non-Threat Traffic
	Traffic Advisory (TA)
	Traffic Advisory Off Scale

Table 4-38 TIS Traffic Symbols

A Traffic Advisory (TA) alerts the crew to a potentially hazardous intruding rotorcraft. Closing rate, distance, and vertical separation meet TA criteria. A Traffic Advisory that is beyond the selected display range is indicated by a half TA symbol at the edge of the screen at the relative bearing of the intruder.

TIS also provides a vector line showing the direction in which the traffic is moving, to the nearest 45°. Traffic information for which TIS is unable to determine the bearing (non-bearing traffic) is displayed in the bottom center of the Traffic Map Page or in a banner at the lower left corner of other map pages on which traffic can be displayed.

The altitude difference between the requesting rotorcraft and other intruder rotorcraft is displayed above/below the traffic symbol in hundreds of feet. If the other rotorcraft is above the requesting rotorcraft, the altitude separation appears above the traffic symbol; if below, the altitude separation appears below. Altitude trend is displayed as an up/down arrow (for speeds greater than 500 fpm in either direction) to the right of the target symbol. Traffic symbols for rotorcraft without altitude reporting capability appear without altitude separation or climb/descent information.

4.5.2.3 TIS Limitations



NOTE: *This section on TIS Limitations is not comprehensive. Garmin recommends the user review the TIS Limitations section of the Aeronautical Information Manual, Section 1-3-5.*

TIS is NOT intended to be used as a collision avoidance system and does not relieve the pilot of responsibility to “see and avoid” other aircraft. TIS should not be used for avoidance maneuvers during IMC or other times when there is no visual contact with the intruder aircraft. TIS is intended only to assist in visual acquisition of other aircraft in VMC. No recommended avoidance maneuvers are provided for, nor authorized, as a direct result of a TIS intruder display or TIS advisory.

While TIS is a useful aid to visual traffic avoidance, it has some system limitations that must be fully understood to ensure proper use. Many of these limitations are inherent in secondary radar surveillance. In other words, the information provided by TIS will be no better than that provided to ATC. TIS will only display aircraft with operating transponders installed.

TIS relies on surveillance of the Mode S radar, which is a “secondary surveillance” radar similar to the ATCRBS. TIS operation may be intermittent during turns or other maneuvering. TIS is dependent on two-way, “line-of-sight” communication between the aircraft and the Mode S radar. Whenever the structure of the client aircraft comes between the transponder antenna (usually located on the underside of the aircraft) and the ground-based radar antenna, the signal may be temporarily interrupted. Other limitations and anomalies associated with TIS are described in the AIM, Section 1-3-5.

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Hazard Avoidance	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	



Garmin is not responsible for Mode S geographical coverage. Operation of the ground stations is the responsibility of the FAA. Refer to the Aeronautical Information Manual for a Terminal Mode S Radar Site Map covering the U.S.



NOTE: TIS will be unavailable at low altitudes in many areas of the U.S., particularly in mountainous regions. Also, when flying near the “floor” of radar coverage in a particular area, intruders below the client aircraft may not be detected by TIS.

TIS information is collected one radar scan prior to the scan during which the uplink occurs. Therefore, the surveillance information is approximately five seconds old. In order to present the intruders in a “real time” position, the TIS ground station uses a “predictive algorithm” in its tracking software. This algorithm uses track history data to extrapolate intruders to their expected positions consistent with the time of display in the cockpit. Occasionally, aircraft maneuvering will cause this algorithm to induce errors in the display. These errors primarily affect relative bearing information and traffic target track vector (it will lag); intruder distance and altitude will remain relatively accurate and may be used to assist in “see and avoid.” Some of the more common examples of these errors follow:

- When client or intruder aircraft maneuvers excessively or abruptly, the tracking algorithm may report incorrect horizontal position until the maneuvering aircraft stabilizes.
- When a rapidly closing intruder is on a course that crosses the client aircraft course at a shallow angle (either overtaking or head on) and either aircraft abruptly changes course within 0.25 NM, TIS may display the intruder on the opposite side of the client than it actually is.

These are relatively rare occurrences and will be corrected in a few radar scans once the course has stabilized.

4.5.2.4 TIS Alerts

When the number of Traffic Advisories (TAs) on the Traffic Map Page increases from one scan to the next, the following occur:

- A single “Traffic” voice alert is generated.
- A TRAFFIC Annunciation appears to the top left of the Attitude Indicator on the PFD, flashing for 5 seconds and remaining displayed until no TAs are detected in the area.

To reduce the number of nuisance alerts due to proximate aircraft, the “Traffic” voice alert is generated only when the number of TAs increases. For example, when the first TA is displayed, a voice and visual annunciation are generated. As long as a single TA remains on the display, no additional voice alerts are generated. If a second TA appears on the display or if the number of TAs initially decreases and then subsequently increases, another voice alert is generated.

A “Traffic Not Available” (TNA) voice alert is generated when the TIS service becomes unavailable or is out of range.

Traffic may not be displayed in the radar coverage area due to the following:

- Radar site TIS Mode S sensor is not operational or is out of service.
- Traffic or requesting aircraft is beyond the maximum range of the TIS-capable Mode S radar site.
- Traffic or requesting aircraft is above the radar site in the cone of silence and out of range of an adjacent site.
- Traffic or requesting aircraft is below radar coverage. In flat terrain, the coverage extends from about 3,000 feet upward at 55 miles. Terrain and obstacles around the radar site can further decrease radar coverage in all directions.
- Traffic does not have an operating transponder.

4.5.2.5 TIS System Status

The GDU 620 performs an automatic test of TIS during power-up. If TIS passes the test, TIS enters Standby Mode on the ground or Operating Mode in the air. If TIS fails the power up test, an annunciation is shown in the center of the Traffic Map Page.

Traffic Map Page Annunciation	Description
NO DATA*	Data is not being received from the transponder
DATA FAILED*	Data is being received from the transponder, but a failure is detected in the data stream
FAILED*	The transponder has failed
UNAVAILABLE	TIS is unavailable or out of range

* Contact a service center or Garmin dealer for corrective action

Table 4-39 TIS Failure Annunciations

The traffic mode is annunciated in the upper left corner of the Traffic Map Page. When the rotorcraft is on the ground, TIS automatically enters Standby Mode. If traffic is selected for display on another map while Standby Mode is selected, the traffic display enabled icon is crossed out (also the case when TIS has failed). Once the rotorcraft is airborne, TIS switches to Operating Mode and traffic information is displayed. The mode can be changed manually using soft keys or the page menu.

Mode	Traffic Mode Annunciation (Traffic Map Page)	Traffic Display Enabled Icon (Other Maps)
TIS Operating	OPERATING	
TIS Standby	STANDBY (Also shown in white in center of page)	
TIS Failed*	FAIL	

Table 4-40 TIS Modes

Switching Between TIS Operating Modes

- 1. Turn the large **MFD** knob to the MAP page group and then turn the small **MFD** knob to the Traffic Map Page.
- 2. Select the **STANDBY** or **OPERATE** soft key to switch between modes. The mode is displayed in the upper left corner of the Traffic Map Page.

OR

- 1. Press the **MENU** key.
- 2. Select Operate mode or Standby mode whether airborne or on the ground.
- 3. Press the **ENT** key.



NOTE: An alert will be generated when Standby is selected and the rotorcraft is in the air.

The annunciations indicate the status of traffic information appear in a banner at the lower left corner of maps on which traffic can be displayed.

Traffic Status Banner Annunciation	Description
TA OFF SCALE*	A Traffic Advisory is outside the selected display range Annunciation is removed when traffic comes within the selected display range
TA/ X.XNM/± XX↑ **	System cannot determine bearing of Traffic Advisory Annunciation indicates distance in NM, altitude separation in hundreds of feet, and altitude trend arrow (climbing/ descending)
AGE MM:SS	Appears if traffic data is not refreshed within 6 seconds If after another 6 seconds data is not received, traffic is removed from the display The quality of displayed traffic information is reduced as the age increases
TRFC COAST	The displayed data is not current (6 to 12 seconds since last message) The quality of displayed traffic information is reduced when this message is displayed

Foreword
Sec 1 System
Sec 2 PFD
Sec 3 MFD
Sec 4 Hazard Avoidance
Sec 5 Additional Features
Sec 6 Annun. & Alerts
Sec 7 Symbols
Sec 8 Glossary
Appendix A
Index

TRFC RMVD	Traffic is removed because it is too old for coasting (12 to 60 seconds since last message) Traffic may exist within the selected display range, but it is not displayed
TRFC FAIL	Traffic data has failed
NO TRFC DATA	Traffic has not been detected
TRFC UNAVAIL	The traffic service is unavailable or out of range

*Shown as symbol on Traffic Map Page
**Shown in center of Traffic Map Page

Table 4-41 TIS Traffic Status Annunciations

4.5.3 ADS-B Traffic (Optional)

ADS-B In allows a properly-equipped aircraft to receive TIS-B and other aircraft equipped with ADS-B out capability.

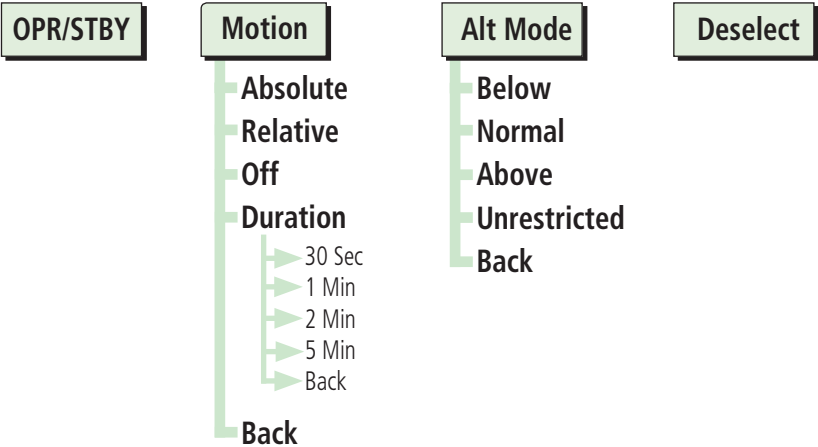



Figure 4-42 ADS-B Traffic Page Functional Diagram

Depending on the installation the **OPR/STBY** soft key may appear. When in Standby mode, pressing the **MENU** key will show the Page menu where the traffic LRU can be placed into TEST mode.

4.5.3.1 Target Selection

Traffic targets displayed on the dedicated traffic page may be selected in order to obtain additional information about a traffic target.

1. Press the small **MFD** knob to start target selection.
2. Turn the small or large **MFD** knobs to step through selection of the available targets.
3. After selecting a target, you can press the small **MFD** knob to leave the target selected, and return the small **MFD** to page selection mode.
4. Use the **DESELECT** softkey to turn off selected traffic.

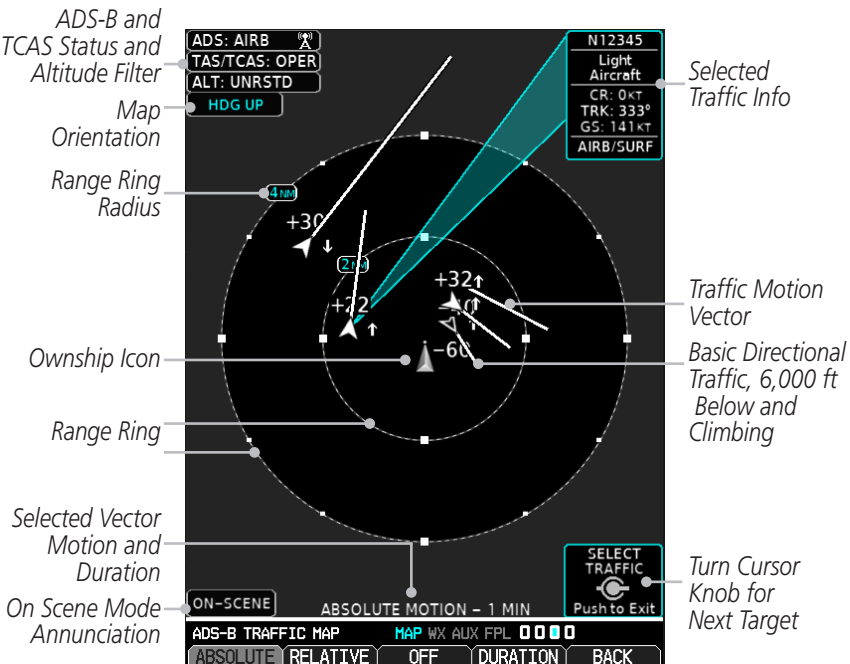

NOTE: Traffic targets within 1,200 ft vertical separation and 6NM from the ownship are depicted as proximate targets.

Symbol	Description
	Basic Non-Directional Traffic
	Basic Directional Traffic
	Basic Off-scale Selected Traffic
	Proximate Non-Directional Traffic
	Proximate Directional Traffic
	Proximate Off-scale Selected Traffic
	Non-Directional Alerted Traffic
	Off-Scale Non-Directional Alerted Traffic
	Directional Alerted Traffic
	Off-Scale Directional Alerted Traffic
	Non-Directional Surface Vehicle
	Directional Surface Vehicle

Table 4-44 ADS-B Traffic Symbols

***NOTE:** Color of basic and proximate traffic is dependent on airborne/ on-ground status of target (target is brown when on the ground, see the surface vehicles).*

4.5.3.2 Status

ADS-B Status

ADS-B Status displays the current status of traffic application: Off, Surface, Airborne, N/A, Fail, or Test.

TCAS Status

If a TCAS system is integrated with the ADS-B system then this shows the current status of the TCAS system. When the ADS-B system is integrated with a TCAS system, the controls are provided on the installed navigator and the **OPR/STBY** soft key is not available.

When the heading is valid or ADS is OFF, and with only the TAS/TCAS operating, the ADS-B traffic map orientates to heading up (“HDG UP”).

The display reverts to track up (“TRK UP”) if all of these conditions are met:

- Heading is not valid
- GPS track is valid
- Ground speed is greater than 15 knots
- ADS-B is active

When the heading and track are invalid, “LATCHED” displays and the system obtains the last know orientation (heading, track, or true north).

4.5.3.3 Motion Vector

When Absolute Motion Vectors are selected, the vectors extending from the traffic targets depict the target reported track and speed over the ground. When Relative Motion Vectors are selected, the vectors extending from the traffic targets display how the traffic target is moving relative to your rotorcraft. These vectors are calculated using the traffic targets track and ground speed and your rotorcraft’s track and ground speed. These two values are combined to depict where the traffic target is moving with respect to your rotorcraft and indicates where the traffic target will be, relative to your rotorcraft, at the time specified by the length of the vector.



NOTE: *Absolute motion vectors match the color of the intruder (white or yellow). Relative motion vectors are green except for Traffic Advisories whose Relative Motion vectors are yellow. The annunciation on the bottom of the dedicated traffic page indicates which vector type is selected and their length.*

Foreword

System Sec 1

PFD Sec 2

MFD Sec 3

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

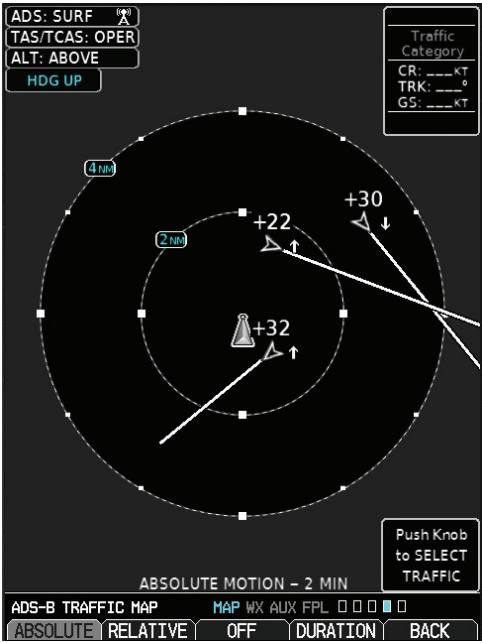


Figure 4-45 Absolute Motion (White Vectors)

NOTE: Relative Motion vectors are unavailable when the rotorcraft is on the ground. The duration will be annunciated as UNAVAIL after "RELATIVE MOTION -" at the bottom of the screen.

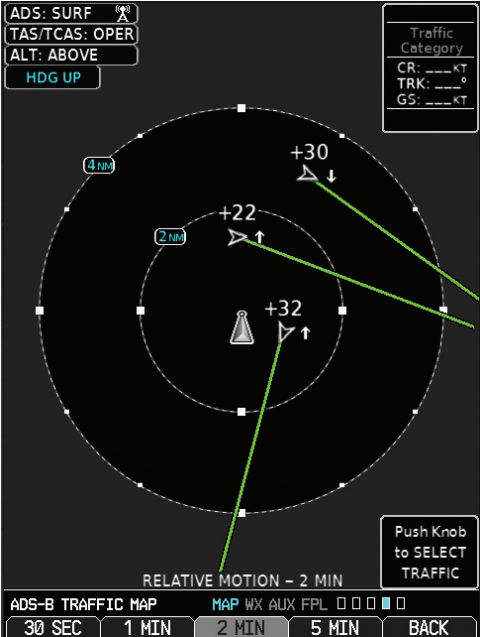


Figure 4-46 Relative Motion (Green Vectors)

Vector Duration

The Vector Duration selection sets the time that the vector will show the calculated distance and direction of the traffic target. A longer duration will result in a longer vector. Press the smart key for the desired duration.

Altitude Filter

The Altitude Filter limits the traffic displayed to the Below, Normal, Above or Unrestricted altitude block as listed in the “Displayed Traffic Range” table. The filter altitudes are relative to ownship altitude. Press the Alt Mode smart key to display the altitude smart keys. Press the smart key to select the altitude filter value.

Altitude Mode	Displayed Traffic Range (ft)
Below	-9,900 to 2,700
Normal	-2,700 to 2,700
Above	-2,700 to 9,900
Unrestricted	All Traffic Shown (-9,900 to 9,900)

Table 4-47 Displayed Traffic Range

4.6 XM WX Satellite Weather (Optional)

The primary map for viewing XM WX Satellite Weather data are the Weather Data Link Pages in the Map Page Group. These are the only GDU 620 map displays capable of all available XM WX Satellite weather products. The XM WX Satellite Weather pages may be oriented to either Track Up or North Up.

4.6.1 Using XM WX Satellite Weather Products

When a weather product is active on the Weather Data Link Page or the Navigation Map Page, the age of the data is displayed on the screen. The age of the product is based on the time difference between when the data was assembled on the ground and the current GPS time. Weather products are refreshed at specific intervals (defined in the Refresh Rate column).

If a weather product is not received within the 30, 60, 90, or 120 minute Expiration Time intervals, the data is considered expired and is removed from the display. This ensures that the displayed data is consistent with what is currently being broadcast by XM WX Satellite Radio services. If more than half of the expiration time has elapsed from the time the data is received, the color of the product age displayed changes to yellow.

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

4.6.2 Customizing the XM WX Satellite Weather Map

Each Wx Data Link Map page may be customized individually. The Wx Data Link Map pages are customized by selecting options from the Page Menu. The Page Menu options include choices for Weather Setup and displaying the Weather Legends. The Weather Setup choice covers selections for adjusting the viewing ranges of the weather products.

1. While viewing a WX Data Link Map page of the WX page group, press the **MENU** key to display the Page Menu Options. The cursor flashes on the "Weather Setup" option. Press **ENT**.

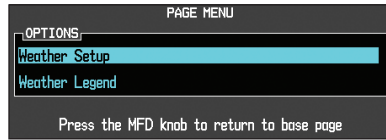


Figure 4-48 Weather Page Menu Options

2. Turn the Large or Small **MFD** knob to select Weather Setup (1/2) or Weather Setup (2/2) and press **ENT**.

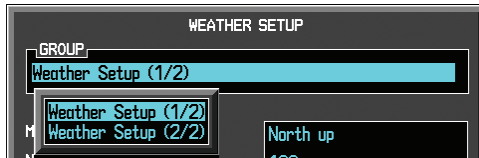


Figure 4-49 Weather Setup Group Selection

3. With the Data Link Setup Menu displayed, turn the Large **MFD** knob to highlight the desired item and then turn the small **MFD** knob to select the desired weather feature value. Where a value (such as 100 NM) is selected, weather data will be shown at map ranges of the selected value (100 NM) and lower.
4. Press **ENT** to save a selection.
5. Turn the large **MFD** knob to the next desired option or press the small **MFD** knob to cancel and return to the XM Weather Data Link Map Page.

WX Page Menu - Weather Setup	
Menu Item	Adjustment
Map Orientation	North Up, Track Up
NEXRAD Data Viewing Range	Off, 10 NM to 500 NM
NEXRAD Legend	On/Off
Source	US, Canada
Echo Top Data Viewing Range	Off, 10 NM to 500 NM
Cloud Top Data Viewing Range	Off, 10 NM to 500 NM
Lightning Data Viewing Range	Off, 10 NM to 500 NM
Cell Mov Data Viewing Range	Off, 10 NM to 500 NM
SIG/AIR Viewing Range	Off, 10 NM to 500 NM
PIREPS Data Viewing Range	Off, 10 NM to 500 NM
METAR Data Viewing Range	Off, 10 NM to 500 NM
Surface Data Viewing Range	Off, 10 NM to 500 NM
Frz Lvl Data Viewing Range	Off, 10 NM to 500 NM
Wnds Aloft Data Viewing Range	Off, 10 NM to 500 NM
County Data Viewing Range	Off, 10 NM to 500 NM
TFR Data Viewing Range	Off, 10 NM to 500 NM
AIREPS Data Viewing Range	Off, 10 NM to 500 NM
Icing Data Viewing Range	Off, 10 NM to 500 NM
Turbulence Data Viewing Range	Off, 10 NM to 500 NM
Cyclone Data Viewing Range	Off, 10 NM to 500 NM

Table 4-50 XM Weather Page Menu Setup Options

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

4.6.3 XM Weather Symbols and Product Age

The weather product symbols, the expiration time and the broadcast rate are shown in the following table. The broadcast rate represents the interval at which XM WX Satellite Radio broadcasts new signals that may or may not contain new weather data. It does not represent the rate at which weather data is updated or new content is received by the Data Link Receiver. Weather data is updated at intervals that are defined and controlled by XM WX Satellite Radio and its data vendors.

The product label in the legend will turn yellow at half the expiration time and gray when expired. Expired products will not be shown on the display.



WARNING: *Do not use data link weather information for maneuvering in, near, or around areas of hazardous weather. Information contained within data link weather products may not accurately depict current weather conditions.*



WARNING: *Do not use the indicated data link weather product age to determine the age of the weather information shown by the data link weather product. Due to time delays inherent in gathering and processing weather data for data link transmission, the weather information shown by the data link weather product may be significantly older than the indicated weather product age.*

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

Weather Product		Expiration Time (Minutes)
Sec 1 System	NEXRAD (NEXRAD and Echo Top are Mutually Exclusive)	30
	Echo Top (Cloud Top and Echo Top Mutually Exclusive) (NEXRAD and Echo Top Mutually Exclusive)	30
	Cloud Top (Cloud Top and Echo Top Mutually Exclusive)	60
Sec 2 PFD	XM Lightning	30
	Cell Movement	30
	SIGMETs / AIRMETs	60
Sec 3 MFD	METARs	90
	City Forecast	90
	Surface Analysis	60
Sec 4 Hazard Avoidance	Freezing Levels	120
	Winds Aloft	90
	County Warnings	60
Sec 5 Additional Features	PIREPS	90
	TFRs	60
	AIREPS	90
Sec 6 Annun. & Alerts	Icing	90
	Turbulence	180
	Cyclone Warnings	60

Table 4-51 Weather Product Symbols and Data Timing



NOTE: Product age for individual reports of XM AIRMETs, SIGMETs, City Forecasts, County Warnings, Cell Movement and TFRs are not provided by XM Weather Service.

Product age indication for XM Icing Potential and Turbulence is not included on the weather map. The valid time for these products is displayed on the weather map in place of the generation time.

The valid time indication for XM Freezing Level, Winds Aloft and Canada Winds Aloft is not displayed. Instead, the generation time for these is displayed.

Symbol	Description
	Flood
	Severe Thunderstorm
	Tornado
	Sunny
	Part Sun
	Cloudy
	Rainy
	T-Storm
	Snow
	Windy
	Foggy
	Haze
	High/Low Temp

Table 4-52 Weather Symbols

4.6.4 XM Weather Legends

The **LEGEND** soft key displays a pop-up legend of the currently used weather products. Pressing the **LEGEND** soft key again, the **MFD** knob, the **ENT**, or **CLR** keys will remove the legend.

1. A full page legend can be selected by selecting the Weather Legend option in the XM Weather Map Menu or pressing the **LEGEND** soft key on the Weather Map Page. The legend displayed will match the selected weather products. Turn the large or small **MFD** knobs to scroll through the legend, if necessary.

	Foreword
Sec 1	System
Sec 2	PFD
Sec 3	MFD
Sec 4	Hazard Avoidance
Sec 5	Additional Features
Sec 6	Annun. & Alerts
Sec 7	Symbols
Sec 8	Glossary
Appendix A	
Index	

FRONTS

Date/Time: 12/01 18:38LCL

COLD
WARM
STATIONARY
OCCLUDED
TROUGH
HIGH



LOW

 
ECHO TOPS

Age: 28m

70000 FT

5000 FT GROUND

NO COVERAGE



CITY FORECAST

Date/Time: 12/01 19:00LCL

SUNNY
CLOUDY
T-STORM
WINDY
HAZE

PART SUN
RAINY
SNOW
FOGGY



NEXRAD CELL MOV

Age: 21m

DIRECTION



METAR

Age: 4m

VFR
MVFR
IFR
LIFR
Unknown

 


CLOUD TOPS

Age: 2m

70000 FT

0 FT



COUNTY WARNINGS

Date/Time: 12/01 17:38LCL

SEVERE THUNDERSTORM
TORNADO
FLOOD



CYCLONE

Date/Time: 12/01 17:38LCL

WARNING



LIGHTNING

Age: 18m

STRIKE



NEXRAD

Age: 18m

DBZ

RAIN
MIXED
SNOW

>55
>50
>45
>40
>30
>20
>10

NO COVERAGE



SIGMET

Date/Time: 12/01 16:38LCL

SIGMET



AIRMET

Date/Time: 12/01 16:38LCL

ICING
TURBULENCE
IFR
MTN OBSCR
SURFACE WINDS



WINDS ALOFT

US Date/Time: 12/01 00:00LCL CN Date/Time: 12/01 00:00LCL

0 KNOTS
5 KNOTS OR LESS
10 KNOTS OR LESS
50 KNOTS OR LESS



FREEZING LEVELS (FT)

Date/Time: 12/01 16:38LCL

2000
4000
6000
8000
10000

12000
14000
16000
18000
20000



AIREPS

Age: 57m

ALL AIREPS



PIREPS

Age: 57m

URGENT
ROUTINE



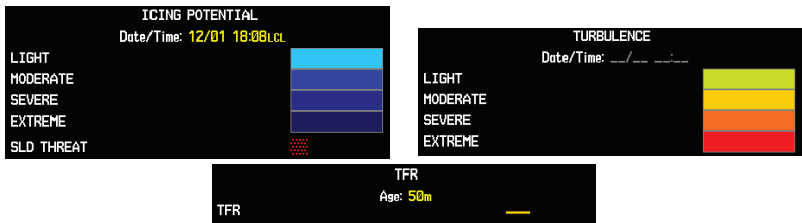


Figure 4-53 Weather Legends

2. An abbreviated legend may be displayed on the upper right side of a WX Data Link Map page for the applicable weather products when selected in the Page Menu options for Weather.

4.6.5 XM NEXRAD

WSR-88D, or NEXRAD (NEXt-generation RADar), is a network of 158 high-resolution Doppler radar systems that are operated by the National Weather Service (NWS). NEXRAD data provides centralized meteorological information for the continental United States and selected overseas locations. The maximum range of a single NEXRAD radar site is 250 NM. The NEXRAD network provides important information about severe weather for air traffic safety.

NEXRAD data is not real-time. The lapsed time between collection, processing, and dissemination of NEXRAD images can be significant and may not reflect the current radar synopsis. Due to the inherent delays and the relative age of the data, it should be used for long-range planning purposes only. Never use NEXRAD data or any radar data to penetrate hazardous weather. Instead, use it in an early-warning capacity of pre-departure and en route evaluation.

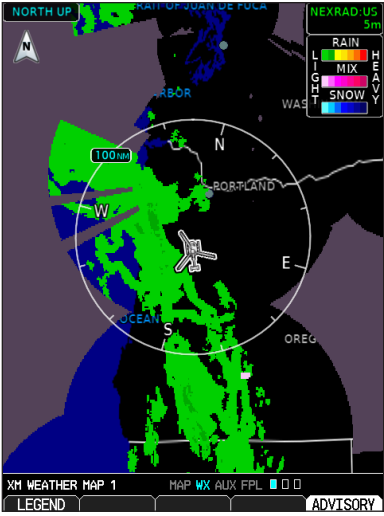


Figure 4-54 XM Weather - NEXRAD

Composite data from all the NEXRAD radar sites in the United States is shown. This data is composed of the maximum reflectivity from the individual radar sweeps. The display of the information is color-coded to indicate the weather severity level. All weather product legends can be viewed on the Weather Data Link Page. For the NEXRAD legend, select the **LEGEND** soft key when NEXRAD is selected for display.

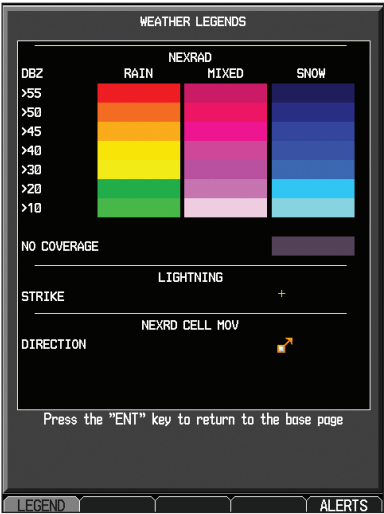


Figure 4-55 NEXRAD Weather Legend

The display of radar coverage is always active when either NEXRAD or ECHO TOPS is selected. Areas where NEXRAD radar coverage and Echo Tops information is not currently available or is not being collected are indicated in grayish-purple.

4.6.5.1 Reflectivity

Reflectivity is the amount of transmitted power returned to the radar receiver. Colors on the NEXRAD display directly correlate to the level of detected reflectivity. Reflectivity as it relates to hazardous weather can be very complex.

The role of radar is essentially to detect moisture in the atmosphere. Simply put, certain types of weather reflect radar better than others. The intensity of a radar reflection is not necessarily an indication of the weather hazard level. For instance, wet hail returns a strong radar reflection, while dry hail does not. Both wet and dry hail can be extremely hazardous.

The different NEXRAD echo intensities are measured in decibels (dB) relative to reflectivity (Z). NEXRAD measures the radar reflectivity ratio, or the energy reflected back to the radar receiver (designated by the letter Z). The value of Z increases as the returned signal strength increases.

4.6.5.2 NEXRAD Limitations

NEXRAD radar images may have certain limitations:

- NEXRAD composite reflectivity does not provide sufficient information to determine cloud layers or precipitation characteristics. For example, it is not possible to distinguish between wet snow, wet hail, and rain.
- NEXRAD composite reflectivity is sampled at the minimum antenna elevation angle. An individual NEXRAD site cannot depict high altitude storms at close ranges. It has no information about storms directly over the site.
- When zoomed in to a range of 30 NM, each square block on the display represents an area of four square kilometers. The intensity level reflected by each square represents the highest level of NEXRAD data sampled within the area.

The following may cause abnormalities in displayed NEXRAD radar images:

- Ground clutter
- Strokes and spurious radar data

- Sun strobes (when the radar antenna points directly at the sun)
- Interference from buildings or mountains, which may cause shadows
- Metallic dust from military aircraft, which can cause alterations in radar scans



NOTE: At present, NEXRAD data can age significantly by the time the mosaic image is created. Although such situations are not believed to be typical, in extreme latency and mosaic-creation scenarios, the actual age of the oldest NEXRAD data in the mosaic can exceed the age indication in the cockpit by 15-20 minutes. Even small time differences between the age indicator and actual conditions can be important for safety of flight, especially when considering fast-moving weather hazards, quickly developing weather scenarios, and/or fast-moving aircraft.

4.6.6 XM Weather Page Map Orientation

The Orientation option sets the orientation of the Wx Data Link Map pages.

1. While viewing the Wx Data Link Map 1, 2, or 3 of the Wx page group, press the **MENU** key. With "Weather Setup" highlighted, press **ENT**.
2. Turn the small **MFD** knob to select "Weather Setup 1/2" and press **ENT**.
3. With the "Map Orientation" option active, turn the small **MFD** knob to change the highlighted value.

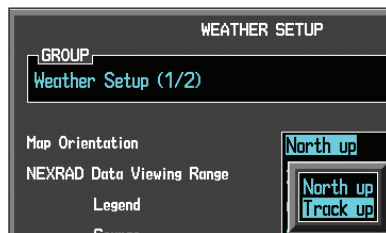


Figure 4-56 Weather Page Map Orientation

4. Press **ENT** to accept the displayed value. The next option will be highlighted.
5. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

4.6.7 NEXRAD Data Viewing Range

The NEXRAD Viewing Range option allows you to select the map range where at and below the selected value NEXRAD weather products will be shown on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, NEXRAD weather data will not be shown. For the value (such as 100 NM) that is selected, NEXRAD data will be shown at the selected map ranges (such as 100 NM) and lower.

1. While viewing a WX Data Link Map page of the WX page group, press the **MENU** key to display the Page Menu Options. The cursor flashes on the "Weather Setup" option. Press **ENT**.
2. Turn the small **MFD** knob to select "Weather Setup 1/2" and press **ENT**.
3. Turn the large **MFD** knob to highlight the NEXRAD Data Viewing Range value. Turn the small **MFD** knob to highlight the desired value.
4. Press **ENT** to accept the displayed value. The next option will be highlighted.
5. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page or turn the large **MFD** knob to the next option.

4.6.8 NEXRAD Legend

The NEXRAD Legend selection provides the option of displaying an abbreviated version of the NEXRAD legend in the top right region of the MFD. The full legend is available by pressing the **LEGEND** soft key.



Figure 4-57 NEXRAD Legend Selection

1. While viewing Weather Setup 1/2 menu, turn the large **MFD** knob to highlight the NEXRAD Legend value.
2. Turn the small **MFD** knob to highlight Off or On. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

4.6.9 NEXRAD Source

The NEXRAD Legend selection provides the option of using US or Canadian Nexrad data.

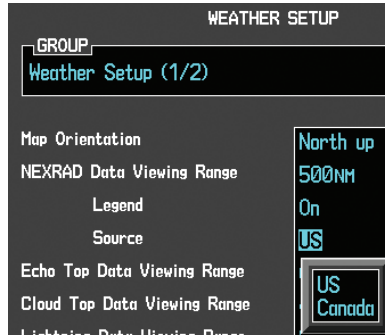


Figure 4-58 NEXRAD Source Selection

1. While viewing Weather Setup 1/2 menu, turn the large **MFD** knob to highlight the NEXRAD Legend value.
2. Turn the small **MFD** knob to highlight US or Canada. Press **ENT** to accept the displayed value.

4.6.10 XM Echo Tops



NOTE: Due to similarities in color schemes, the display of Echo Tops is mutually exclusive with Cloud Tops and NEXRAD.

Echo Tops data shows the location, elevation, and direction of the highest radar echo. The highest radar echo does not indicate the top of a storm or clouds; rather it indicates the highest altitude at which precipitation is detected. Information is derived from NEXRAD data.

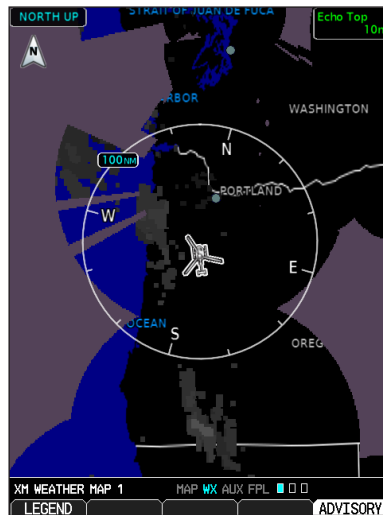


Figure 4-59 XM Weather - Echo Tops

The display of radar coverage is always active when either NEXRAD or ECHO TOPS is selected. Areas where NEXRAD radar coverage and Echo Tops information is not currently available or is not being collected are indicated in grayish-purple.

Echo Top Data Viewing Range

The Echo Top Data Viewing Range option allows you to select the map range where at and below that value Echo Top weather products will be shown on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, Echo Tops will not be shown. Where a value (such as 250 NM) is selected, Echo Top data will be shown at map ranges of the selected value (250 NM) and lower.

- 1. While viewing Weather Setup 1/2 menu, turn the large **MFD** knob to highlight the Echo Top Data Viewing Range value.
- 2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
- 3. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page, or turn the large **MFD** knob to the next option.

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Hazard Avoidance	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	

4.6.11 XM Cloud Tops



NOTE: Due to similarities in color schemes, the display of Cloud Tops is mutually exclusive with Echo Tops and NEXRAD.

Cloud Tops data depicts cloud top altitudes as determined from satellite imagery.



Figure 4-60 XM Weather - Cloud Tops

To display the Cloud Tops legend, select the **LEGEND** soft key when Cloud Tops is selected for display. Since Cloud Tops and Echo Tops use the same color scaling to represent altitude, display of these weather products is mutually exclusive. When Cloud Tops is activated, Echo Tops or NEXRAD data is not shown.

Cloud Top Data Viewing Range

The Cloud Top Data Viewing Range option allows you to select the map range where at and below that value Cloud Top weather products will be shown on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, Cloud Tops will not be shown. Where a value (such as 150 NM) is selected, Cloud Top data will be shown at map ranges of that value (150 NM) and lower.

- 1. While viewing Weather Setup 1/2 menu, turn the large **MFD** knob to highlight the Cloud Top Data Viewing Range value.
- 2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
- 3. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page or turn the large **MFD** knob to the next option.

Foreword

System
Sec 1

PFD
Sec 2

MFD
Sec 3

Sec 4
Hazard
Avoidance

Additional
Features
Sec 5

Annun.
& Alerts
Sec 6

Symbols
Sec 7

Glossary
Sec 8

Appendix A

Index

4.6.12 XM WX Satellite Lightning

Lightning data shows the approximate location of cloud-to-ground lightning strikes. A strike icon represents a strike that has occurred within a two-kilometer region. The exact location of the lightning strike is not displayed.

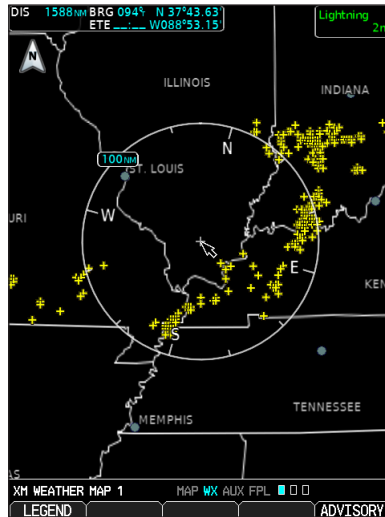


Figure 4-61 XM Weather - Lightning

Lightning Data Viewing Range

The Lightning Data Viewing Range option allows you to select the map range where at and below that value Lightning weather products will be shown on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, Lightning will not be shown. Where a value (such as 100 NM) is selected, NEXRAD data will be shown at map ranges of the selected value (100 NM) and lower.

1. While viewing Weather Setup 1/2 menu, turn the large **MFD** knob to highlight the Lightning Data Viewing Range value.
2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

4.6.13 XM SIGMETs and AIRMETs

SIGMETs (SIGNificant METeorological Information) and AIRMETs (AIRmen's METeorological Information) are broadcast for potentially hazardous weather considered of importance to aircraft. A Convective SIGMET is issued for hazardous convective weather. A localized SIGMET is a significant weather condition occurring at a localized geographical position.

When enabled, SIGMET/AIRMETs advise the pilot of potentially hazardous weather to all aircraft. SIGMET/AIRMET data covers icing, turbulence, dust, and volcanic ash as issued by the National Weather Service. The update rate is every 12 minutes.

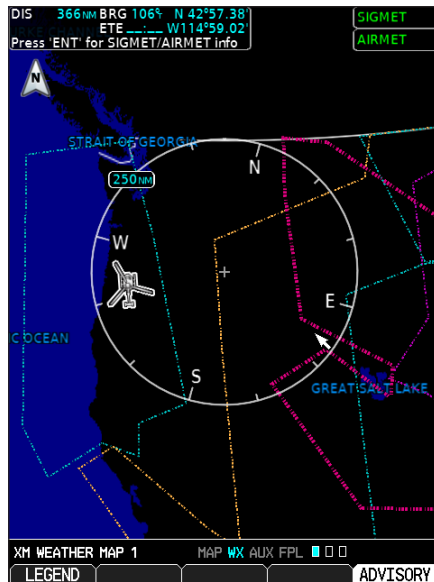


Figure 4-62 XM Weather - AIRMETs (Graphic)

When enabled, the following AIRMETs are available for display:

- Icing
- Turbulence
- IFR conditions
- Mountain obscuration
- Surface winds

SIGMET/AIRMET Viewing Range

The SIGMET/AIRMET Viewing Range option allows you to select the map range where at and below that value SIGMET/AIRMET products will be shown on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, SIGMET/AIRMET will not be shown. Where a value (such as 100 NM) is selected, SIGMET/AIRMET data will be shown at map ranges of the selected value (100 NM) and lower.

- 1. While viewing Weather Setup 1/2 menu, turn the large **MFD** knob to highlight the SIG/AIR Viewing Range value.
- 2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
- 3. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page or turn the large **MFD** knob to the next option.

Viewing Textual Sigmet/Airmets

Textual Sigmet/Airmets can be viewed by selecting the Sigmet/Airmet outline on the Weather (WX) page.

- 1. While viewing a Map or Weather page, Use the small and large **MFD** knobs to move the cursor to highlight a Sigmet/Airmet line. Press **ENT**.
- 2. The Sigmet/Airmet information will be shown. Press the small **MFD** knob to return to the previously viewed page.

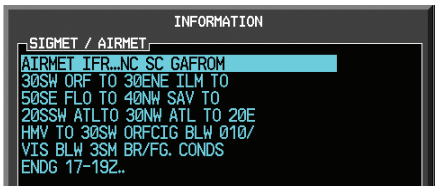


Figure 4-63 XM Weather - AIRMETs (Text)

4.6.14 XM PIREPs

Pilot Weather Reports (PIREPs) provide timely weather information for a particular route of flight. When significant weather conditions are reported or forecast, Air Traffic Control (ATC) facilities are required to solicit PIREPs. A PIREP may contain non-forecast adverse weather conditions, such as low in-flight visibility, icing conditions, wind shear, and turbulence. PIREPs are issued as either Routine (UA) or Urgent (UUA).

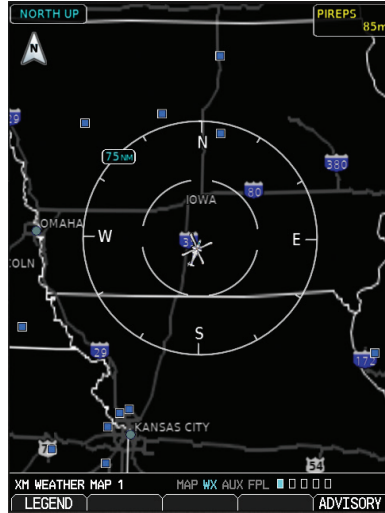


Figure 4-64 XM Weather - PIREPs

1. While viewing Weather Setup 1/2 menu, turn the large **MFD** knob to highlight the PIREPs value.
2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

4.6.15 XM METARs



NOTE: Atmospheric pressure reported for METARs is given in hectopascals (hPa), except in the United States, where it is reported in inches of mercury (in Hg). Temperatures are reported in Celsius.



NOTE: METAR information is only displayed within the installed aviation database service area.

METAR (METeorological Aerodrome Report), known as an Aviation Routine Weather Report, is the standard format for current weather observations. METARs are updated hourly and are considered current. METARs typically contain information about the temperature, dew point, wind, precipitation, cloud cover, cloud heights, visibility, and barometric pressure. They can also contain information on precipitation amounts, lightning, and other critical data. METARs are shown as colored flags at airports that provide them.

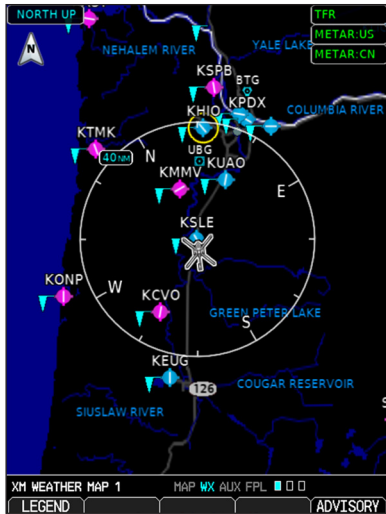


Figure 4-65 XM Weather - Graphic METARs

METAR Viewing Range

The METAR Viewing Range option allows you to select the map range where at and below that value METAR weather products will be shown on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, METARs will not be shown. Where a value (such as 150 NM) is selected, METAR data will be shown at map ranges of the selected value (150 NM) and lower.

1. While viewing Weather Setup 1/2 menu, turn the large **MFD** knob to highlight the METAR Data Viewing Range value.
2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page or turn the large **MFD** knob to the next option.

Foreword

Sec 1
System

Viewing Textual METARs

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

Textual METARs can be viewed by selecting an airport on the Map or Weather (WX) pages.

1. While viewing a Map or Weather page, Use the small and large **MFD** knobs to move the cursor to highlight an airport with a METAR flag. Press **ENT**.
2. The Waypoint Information page for that airport will now be shown. Press the **WX** soft key to view weather information for the waypoint.



Figure 4-66 XM Weather - Textual METARs

3. Use the small **MFD** knob or the large **MFD** knob to scroll through the available information.
4. Press the small **MFD** knob to return to the previously viewed page.

4.6.16 XM Winds Aloft

The Winds Aloft Altitude option allows you to select the altitude where at and below that value Winds Aloft weather products will be shown on the selected MFD Wx Data Link Map page (1, 2, or 3). Altitude can be selected in 3000 foot increments from the surface up to 42,000 feet MSL. “ALT UNAVBL” is displayed when the altitude is unsupported for a specific product and will never show data on the map.

Pressing the **WX Alt Dn** or **WX Alt Up** soft keys steps down or up in the 3,000 foot increments. In the figure below where 6,000 feet is selected, Winds Aloft data will be shown at 6,000 feet.

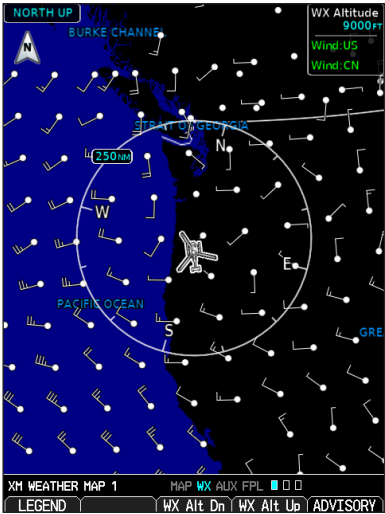


Figure 4-67 XM Weather - Winds Aloft



Figure 4-68 XM Weather - Winds Aloft Legend

Winds Aloft Data Viewing Range

The Winds Aloft Data Viewing Range option allows you to select the map range where at and below that value Winds Aloft weather products will appear on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, Winds Aloft will not be shown. Where a value (such as 100 NM) is selected, Winds Aloft data will be shown at map ranges of the selected value (100 NM) and lower.

1. While viewing Weather Setup 1/2 menu, turn the large **MFD** knob to highlight the Winds Aloft Data Viewing Range value.
2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page or turn the large **MFD** knob to the next option.

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Hazard Avoidance	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	

4.6.17 XM Surface Analysis and City Forecast



NOTE: Surface Analysis and City Forecast data are displayed only within the installed Aviation Database service area.

Surface Analysis and City Forecast information is available for current and forecast weather conditions. Forecasts are available for intervals of 12, 24, 36, and 48 hours by pressing the **SRFC TIME** soft key or in the Page Menu Weather Setup options.

When enabled, the Surface Analysis forecast shows frontal lines indicating weather fronts and the direction they are moving. High and Low pressure centers are noted with a large H or L. The Forecast Time menu item will step through the intervals manually.

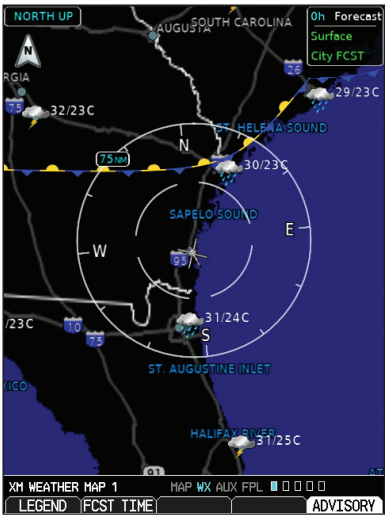


Figure 4-69 XM Weather - Surface Analysis and City Forecast

A Cold Front is a front where cold air replaces warm air. A blue line with blue triangles that point in the direction of the cold air flow.

Figure 4-70 XM Weather - Cold Front

A Warm Front is where warm air replaces cold air. An orange line with orange half moons that point in the direction of the warm air flow.

Figure 4-71 XM Weather - Warm Front

A Stationary Front is a front with very little horizontal movement. The line alternates with orange and blue sections which point in opposite directions to symbolize little movement.



Figure 4-72 XM Weather - Stationary Front

An Occluded Front is where a cold front has overtaken and merged with a warm front. The line alternates with the blue triangle and orange half moon symbols on the same side of the line pointing in the direction the front is moving.



Figure 4-73 XM Weather - Occluded Front

Surface Data Viewing Range

The Surface Data Viewing Range option allows you to select the map range where at and below that value Surface Data weather products will be shown on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, Surface Data will not be shown. Where a value (such as 150 NM) is selected, Surface data will be shown at map ranges of the selected value (150 NM) and lower.

1. While viewing Weather Setup 1/2 menu, turn the large **MFD** knob to highlight the Surface Data Viewing Range value.
2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page or turn the large **MFD** knob to the next option.

Forecast Time

The Forecast Time option allows you to select the forecast time when the Surface and City Forecast weather products will appear on the selected MFD Wx Data Link Map page (1, 2, or 3). Forecasts are available for intervals of current, 12, 24, 36, and 48 hours. The interval is selected by pressing the **FCST TIME** soft key on the Wx Data Link Map page.

4.6.18 XM County Warnings

County data provides specific public awareness and protection weather warnings from the National Weather Service (NWS). This can include information on fires, tornadoes, severe thunderstorms, flood conditions, and other natural disasters.

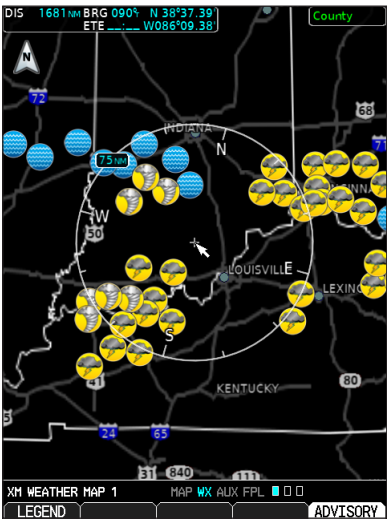


Figure 4-74 XM Weather - County Warnings

County Data Viewing Range

The County Data Viewing Range option allows you to select the map range where at and below that value County weather products will be shown on the selected MFD Wx Data Link Map pages (1, 2, or 3). When Off is selected, County Data will not be shown. Where a value (such as 100 NM) is selected, County data will be shown at map ranges of the selected value (100 NM) and lower.

1. While viewing Weather Setup 1/2 menu, turn the large **MFD** knob to highlight the County Data Viewing Range value.
2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page or turn the large **MFD** knob to the next option.

4.6.19 XM TFRs

Temporary Flight Restrictions (TFRs) provide detailed information for local short term restrictions. The update rate is approximately every 20 minutes.



Figure 4-75 XM Weather - TFRs

The Temporary Flight Restriction (TFR) viewing range option selects whether TFR information is shown on the GFDS Weather Map. TFR information will be shown at and below the selected map range. When Off is selected, the information will not be shown. For the value (such as 500 NM) selected, TFR information will be shown at map ranges of that value (500 NM), and lower.

1. While viewing Weather Setup 1/2 menu, turn the large **MFD** knob to highlight the TFR Data Viewing Range option.
2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page or turn the large **MFD** knob to the next option.

Viewing Textual TFRs

Textual TFRs can be viewed by selecting a TFR outline on the Weather (WX) pages.

- 1. While viewing a XM Weather page, Use the small and large **MFD** knobs to move the cursor to highlight a TFR symbol (yellow circle). Press **ENT**.
- 2. The TFR details will be shown.
- 3. Press the small **MFD** knob or ENT to return to the Weather page.



Figure 4-76 XM Weather - Textual TFRs and Legend

Foreword	
Sec 1 System	
Sec 2 PFD	
Sec 3 MFD	
Sec 4 Hazard Avoidance	
Sec 5 Additional Features	
Sec 6 Annun. & Alerts	
Sec 7 Symbols	
Sec 8 Glossary	
Appendix A	
Index	

4.6.20 XM Cell Movement

Cell Movement data shows the location and movement of storm cells as identified by a ground-based system. Cells are represented by yellow squares, with direction of movement indicated with short, orange arrows.

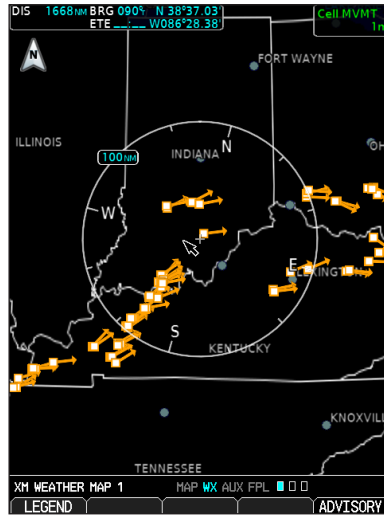


Figure 4-77 XM Weather - Cell Movement

On most applicable maps, Cell Movement data is selected for display along with NEXRAD. On the Weather Data Link Page, Cell Movement data can be selected independently.

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

Cell Movement Data Viewing Range

The Cell Movement Data Viewing Range option allows you to select the map range and below where Cell Movement weather products will appear on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, Cell Movement will not be shown. Where a value (such as 100 NM) is selected, Cell Movement data will be shown at map ranges of the selected value (100 NM) and lower.

1. While viewing Weather Setup 2/2 menu, turn the large **MFD** knob to highlight the Cell Movement Data Viewing Range option.
2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page or turn the large **MFD** knob to the next option.

Foreword

Sec 1
SystemSec 2
PFDSec 3
MFDSec 4
Hazard
AvoidanceSec 5
Additional
FeaturesSec 6
Annun.
& AlertsSec 7
SymbolsSec 8
Glossary

Appendix A

Index

4.6.21 XM AIREPs

Air Reports (AIREPs) are messages from an aircraft, typically from commercial aircraft, to a ground station. AIREPs are similar to PIREPs.

1. While viewing Weather Setup 2/2 menu, turn the large **MFD** knob to highlight the AIREPs Viewing Range option.
2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page or turn the large **MFD** knob to the next option.



Figure 4-78 XM Weather - AIREPs

Viewing Textual AIREPs/PIREPs

Textual AIREPs/PIREPs can be viewed by selecting a AIREP on the Map or Weather (WX) pages.

1. While viewing a Map or Weather page, Use the small and large **MFD** knobs to move the cursor to highlight an airport with a AIREP.
2. Press **ENT** to view text information. Press **ENT** again to return to the previous page.


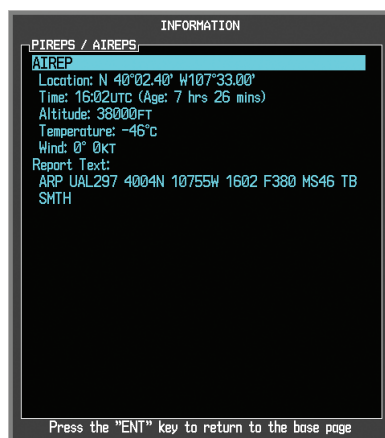


Figure 4-79 XM Weather - AIREP Text Detail

4.6.22 XM Cyclone

The current location of the cyclone is shown along with its projected path with the date and time.

1. While viewing Weather Setup 2/2 menu, turn the large **MFD** knob to highlight the Cyclone Data Viewing Range option.
2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page or turn the large **MFD** knob to the next option.

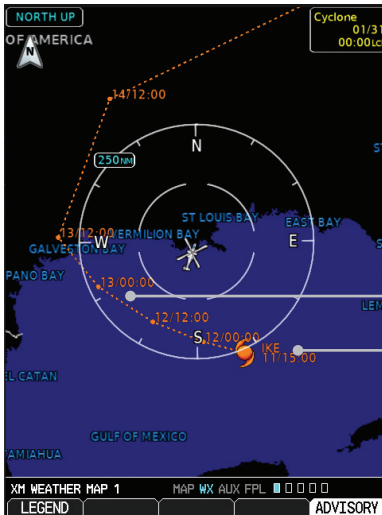

Projected Path With Date And Time

Current Position Of Cyclone

Figure 4-80 XM Weather - Cyclone

4.6.23 XM Freezing Level

Freezing Level data shows the color-coded contour lines for the altitude and location at which the Freezing Level is found. When no data is displayed for a given altitude, the data for that altitude has not been received, or is out of date and has been removed from the display. New data appears at the next update.

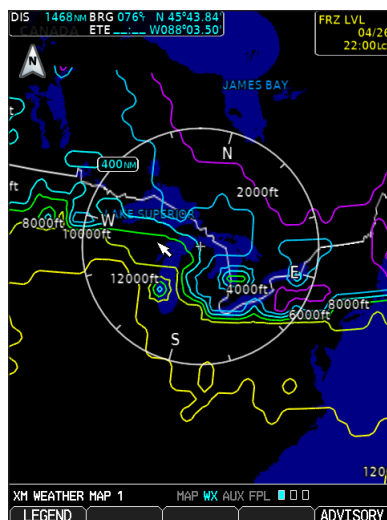


Figure 4-81 XM Weather - Freezing Levels

Freezing Level Viewing Range

The Freezing Level Viewing Range option allows you to select the map range where at and below that value Freezing Level weather products will be shown on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, Freezing Level Data will not be shown. Where a value (such as 100 NM) is selected, Freezing Level data will be shown at map ranges of the selected value (100 NM) and lower.

1. While viewing Weather Setup 2/2 menu, turn the large **MFD** knob to highlight the Frz Lvl Viewing Range value.
2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page or turn the large **MFD** knob to the next option.

4.6.24 XM Icing

The Icing product shows a graphic view of the current icing environment in four categories: light, moderate, severe, and extreme (not specific to aircraft type). The Icing product is not a forecast, but a presentation of the current conditions at the time of the analysis. Supercooled Large Droplet (SLD) icing conditions are characterized by the presence of relatively large, super cooled water droplets indicative of freezing drizzle and freezing rain aloft. SLD threat areas are depicted as black and red blocks over the Icing colors. Icing and SLD data are shown between 1,000 feet and 30,000 feet in 3,000 foot increments.

1. While viewing Weather Setup 2/2 menu, turn the large **MFD** knob to highlight the Icing Data Viewing Range value.
2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

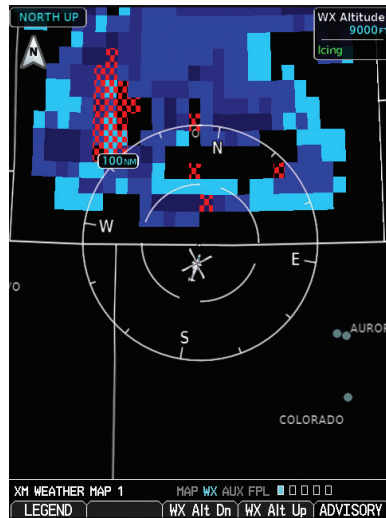


Figure 4-82 XM Weather - Icing and SLD

4. Press the **WX Alt Dn** or **WX Alt Up** keys to increase or decrease the reporting altitude of icing in 3,000 foot increments. The selected altitude is shown in a window above the altitude keys.

4.6.25 XM Turbulence

Turbulence data identifies the potential for erratic movement of high-altitude air mass associated winds. Turbulence is classified as light, moderate, severe or extreme, at altitudes between 21,000 and 45,000 feet. Turbulence data is intended to supplement AIRMETs and SIGMETs.

1. While viewing Weather Setup 2/2 menu, turn the large **MFD** knob to highlight the Turbulence Viewing Range value.
2. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
3. Press the small **MFD** knob to cancel selection or to end editing and return to the previously viewed page or turn the large **MFD** knob to the next option.
4. Press the **WX Alt Dn** or **WX Alt Up** keys to increase or decrease the reporting altitude of icing in 3,000 foot increments. The selected altitude is shown in a window above the altitude keys.

Foreword

Sec 1
SystemSec 2
PFDSec 3
MFD**Sec 4**
Hazard
AvoidanceSec 5
Additional
FeaturesSec 6
Annun.
& AlertsSec 7
SymbolsSec 8
Glossary

Appendix A

Index

4.7 Garmin Connex Satellite Services (Optional)



NOTE: *Garmin Connex Satellite Services was formerly called GFDS and may still display as GFDS on GDUs.*

Garmin Connex Satellite Services (GCSS) is an optional feature available with the Iridium satellite system that is interfaced through the optional Garmin GSR 56. The primary maps for viewing Connex weather data are the Weather Data Link Pages in the Map Page Group. These are the only GDU 620 map displays capable of all available GFDS weather products. The WX Weather pages may be oriented to either Track Up or North Up. Both Connex and SiriusXM Weather may be installed and selected individually. Connex Weather coverage is available throughout most of Europe, Canada and the U.S. Additional radar coverage areas are being added continuously. Selection of the Weather Source is made on the Aux - System Setup page.

More detail on GFDS weather products and coverage can be found at:

<https://fly.garmin.com/fly-garmin/connex/worldwide-weather/>



NOTE: *A system can be configured for both SiriusXM and Connex Weather, but both cannot be displayed at the same time.*



WARNING: *Do not use data link weather information for maneuvering in, near, or around areas of hazardous weather. Information contained within data link weather products may not accurately depict current weather conditions.*



WARNING: *Do not use the indicated data link weather product age to determine the age of the weather information shown by the data link weather product. Due to time delays inherent in gathering and processing weather data for data link transmission, the weather information shown by the data link weather product may be significantly older than the indicated weather product age.*

4.7.1 Connex Weather Registration

4.7.1.1 Registering Connex Weather

It is necessary to register the GDU to utilize the weather products.

1. Visit flyGarmin.com to create a Connex Weather account. Provide the GDU System ID and airframe info (model, tail number, etc).
2. An access code to enter on the GFDS Registration page.
3. While viewing a WX Map page of the WX page group, press the **MENU** key to display the Page Menu Options.
4. Turn the large **MFD** knob to highlight "Register With GFDS." Press **ENT**.

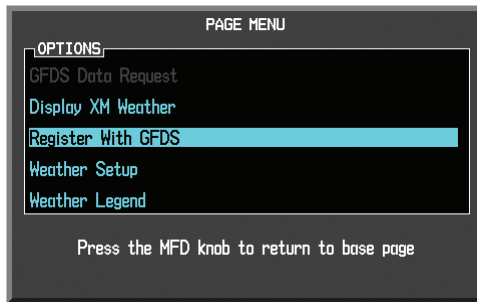


Figure 4-83 Select GFDS Registration

5. Turn the small **MFD** knob to select values and the large **MFD** knob to move to the next position. Highlight **REGISTER** and press **ENT** to complete the process. The GDU will contact the Connex servers using the GSR 56 transceiver. If the access code and system ID are correct, it will download and display the airframe info.

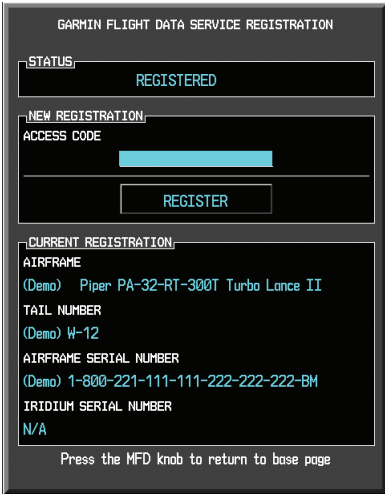
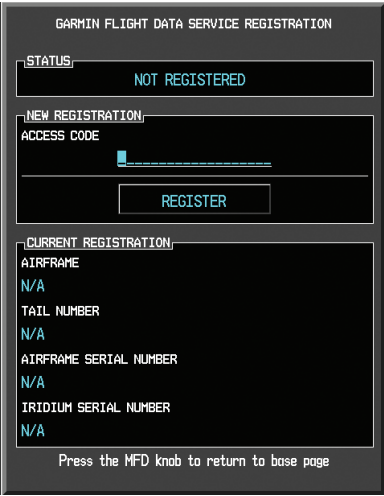


Figure 4-84 Registration Page (Default and Completed)

4.7.1.2 Deactivating Unit Registration

Registration of the GDU unit can be deactivated so that the unit can no longer make requests to GFDS. This does not cancel the subscription.

1. While viewing a WX Map page of the WX page group, press the **MENU** key to display the Page Menu Options.
2. Turn the large **MFD** knob to highlight "Register With GFDS." Press **ENT**.
3. With the Access Code field highlighted, press **CLR** to remove the access code.
4. Any weather requests will now fail and the system will no longer be linked to the account.

4.7.2 Using GFDS Satellite Weather Products

When a weather product is active on the Weather Data Link Page or the Navigation Map Page, the age of the data is displayed on the screen. The age of the product is based on the time difference between when the data was assembled on the ground and the current GPS time. Weather products are refreshed at selectable intervals.

If for any reason, a weather product is not refreshed within the 30, 60, 90, or 120 minute Expiration Time intervals, the data is considered expired and is removed from the display. This ensures that the displayed data is consistent with what is currently being broadcast by Garmin Connex Weather services. If more than half of the expiration time has elapsed from the time the data is received, the color of the product age displayed changes to yellow.

4.7.3 Customizing the Weather Map

Each Wx Data Link Map page may be customized individually. The Wx Map pages are customized by selecting options from the Page Menu. The Page Menu options include choices for Weather Setup and displaying the Weather Legends. The Weather Setup choice covers selections for adjusting the viewing ranges of the weather products.



NOTE: If multiple weather sources are installed, then the weather source must first be selected on the AUX System Setup page. Refer to Section 3.2.1.10.

1. While viewing a WX Data Link Map page of the WX page group, press the **MENU** key to display the Page Menu Options. Turn the large **MFD** knob to highlight the “Weather Setup” option. Press **ENT**.

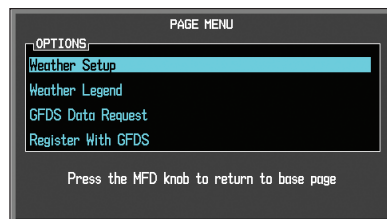


Figure 4-85 Weather Page Menu Options

2. With the Data Link Setup Menu displayed, turn the Large **MFD** knob to select the desired item.

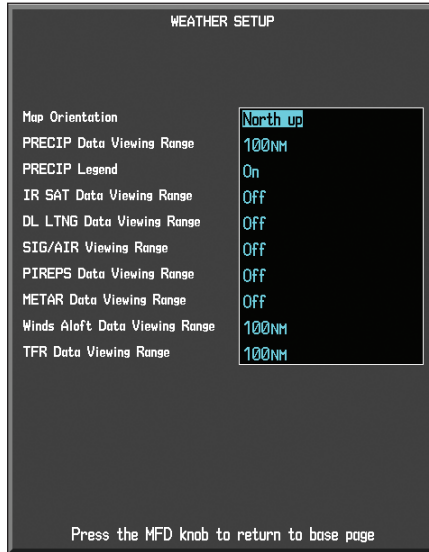


Figure 4-86 Weather Data Link Setup Menu Options

3. Turn the small **MFD** knob to select the desired weather feature option.
4. Press **ENT** to save a selection.
5. Turn the large **MFD** knob to the next desired option or press the small **MFD** knob to cancel and return to the Connex Weather Map Page.

WX Page Menu - Weather Setup	
Menu Item	Adjustment
Map Orientation	North Up, Track Up
PRECIP Data Viewing Range	Off, 50 NM to 500 NM
PRECIP Legend	On/Off
IR SAT Data Viewing Range	Off, 10 NM to 500 NM
Lightning Data Viewing Range	Off, 10 NM to 500 NM
SIG/Air Viewing Range	Off, 10 NM to 500 NM
PIREPS Viewing Range	Off, 10 NM to 500 NM
METAR Data Viewing Range	Off, 10 NM to 500 NM
Wnd Aloft Data Viewing Range	Off, 10 NM to 500 NM
TFR Data Viewing Range	Off, 10 NM to 500 NM

Table 4-87 GFDS Weather Page Menu Setup Options

4.7.4 GFDS Data Request

It is necessary to request the downloading of weather products. Requests can be sent manually or set to automatically update at a selected rate.

- 1. While viewing a WX Data Link Map page of the WX page group, press the **MENU** key to display the Page Menu Options.
- 2. Turn the large **MFD** knob to highlight "GFDS Data Request." Press **ENT**.



Figure 4-88 Select GFDS Data Request

- 3. Turn the small **MFD** knob to select values and the large **MFD** knob to move to the next position.

GFDS DATA REQUEST

COVERAGE

☒ PRESENT POSITION

☐ DESTINATION

☒ FLIGHT PLAN NEXT 100NM

☐ WAYPOINT

DIAMETER / RTE WIDTH 150NM

AUTO REQUEST

UPDATE RATE 5 Min

MANUAL REQUEST

SEND REQ

CANCEL REQ

REQUEST STATUS

OK

Next auto update: 5 Minutes

Press the MFD knob to return to base page

Figure 4-89 GFDS Data Request Page

4.7.4.1 GFDS Data Request Coverage

Present Position GFDS Data Request

1. While viewing a WX Data Link Map page of the WX page group, press the **MENU** key to display the Page Menu Options.
2. Turn the large **MFD** knob to highlight "GFDS Data Request." Press **ENT**.
3. Turn the large **MFD** knob to highlight "Present Position." Press **ENT**.
4. The Present Position box will be checked and weather information will be requested around your present position.
5. To deselect Present Position reporting, turn the large **MFD** knob to highlight "Present Position." Press **ENT**.

Destination GFDS Data Request

1. Turn the large **MFD** knob to highlight "Destination." Press **ENT**.
2. The Destination box will be checked and weather information will be requested around your flight plan destination.

3. To deselect Destination reporting, turn the large **MFD** knob to highlight "Destination." Press **ENT**.

Flight Plan GFDS Data Request

1. Turn the large **MFD** knob to highlight "Flight Plan." Press **ENT**.
2. The range list will now be highlighted. Turn the small **MFD** knob to highlight the desired range and press **ENT**.

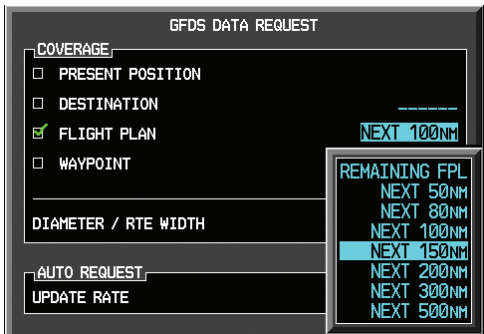


Figure 4-90 Flight Plan GFDS Data Request

3. The Flight Plan box will be checked and weather information will be requested along your flight plan forward of your present position for the range selected.
4. To deselect Flight Plan reporting, turn the large **MFD** knob to highlight "Flight Plan." Press **ENT**.

Waypoint GFDS Data Request

1. Turn the large **MFD** knob to highlight "Waypoint." Press **ENT**.
2. The Waypoint Selection field will now be highlighted. Turn the small **MFD** knob to select the first character. Turn the large **MFD** knob to highlight the next character. When finished selecting the waypoint name, press **ENT**.



Figure 4-91 Waypoint GFDS Data Request

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

3. The Waypoint box will be checked and weather information will be requested around the selected waypoint for the range selected (next operation).

Diameter/Route Width GFDS Data Request

- 1. After selecting a coverage option in the previous section, the Diameter/Route Width field will now be highlighted.



Figure 4-92 Waypoint GFDS Data Request Range

- 2. Turn the small **MFD** knob to select the desired Diameter/Route Width and then press **ENT**.

4.7.4.2 GFDS Data Request Auto Request

- 1. Turn the large **MFD** knob to highlight "Auto Request - Update Rate."
- 2. Turn the small **MFD** knob to select "Off" or an Update Rate. When finished selecting the Update Rate, press **ENT**. The Update Rate will default to "OFF" at each power cycle.

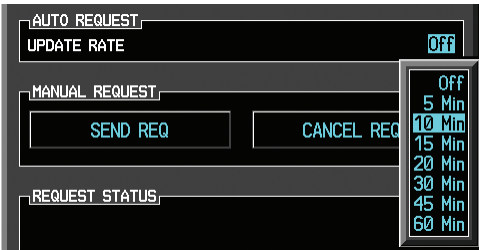


Figure 4-93 GFDS Data Request Auto Update Rate

4.7.4.3 GFDS Data Request Manual Request

The GFDS weather data may be updated at any time regardless of the automatic update timing by selecting a Manual Request. When multiple requests are made, some products are merged with the old data (SIGMETs/AIRMETs, TAFs, TFRs, and METARs), but the old data of other products is discarded.

1. Turn the large **MFD** knob to highlight "Manual Request - Send Req."
2. Press **ENT**.

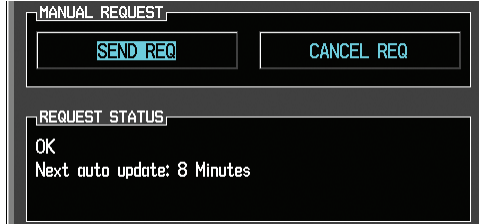


Figure 4-94 Manual GFDS Data Request

3. The update request will occur immediately. The action will be noted in the Request Status window. The Auto Request time will be reset to the selected value.

4.7.4.4 GFDS Data Request Status Window

The Request Status window will show a response such as "OK" when manual requests are made. The time for the next auto update will be shown.

4.7.5 Weather Page Map Orientation

The Orientation option sets the orientation of the Wx Data Link Map pages.

1. While viewing the Wx Data Link Map 1, 2, or 3 of the Wx page group, press the **MENU** key. With "Weather Setup" highlighted, press **ENT**.
2. With the "Map Orientation" option active, turn the small **MFD** knob to change the highlighted value.



Figure 4-95 Weather Page Map Orientation

3. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the WX page or turn the large **MFD** knob to the next option.

4.7.6 Precipitation Data Viewing Range

The Precipitation (PRECIP) Viewing Range option allows you to select the map range where at and below the selected value PRECIP weather products will be shown on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, PRECIP weather data will not be shown. In the figure below where 500 NM is selected, PRECIP data will be shown at map ranges of 500 NM and lower. TFRs and METARs are the only weather products shown below 10 NM.

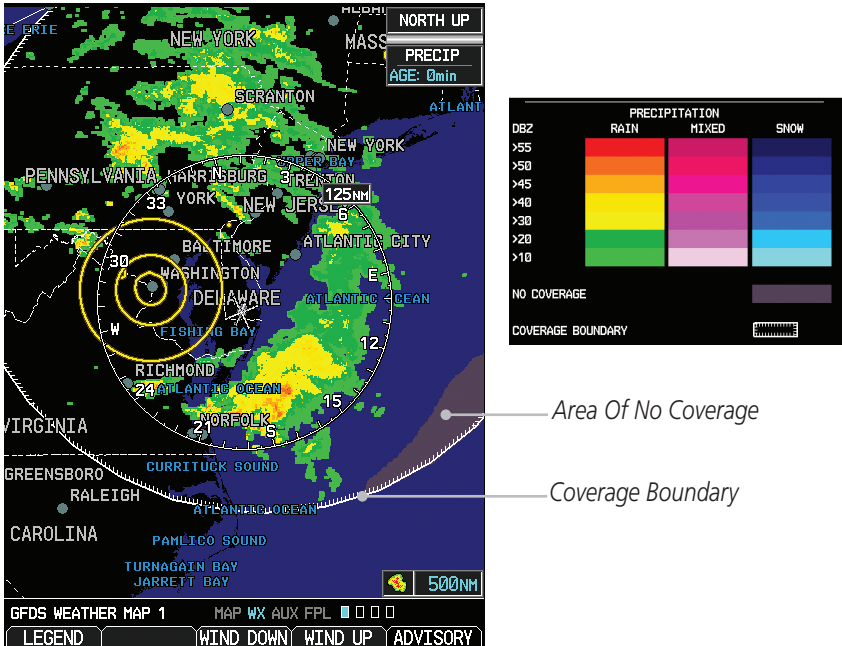


Figure 4-96 GFDS PRECIP Weather Map Display and Legend

1. While viewing a WX Data Link Map page of the WX page group, press the **MENU** key to display the Page Menu Options. Turn the large **MFD** knob to highlight the Weather Setup option and press **ENT**.
2. Turn the large **MFD** knob to highlight PRECIP Data Viewing Range. Turn the small **MFD** knob to highlight the desired value.
3. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the WX page or turn the large **MFD** knob to the next option.

4.7.7 PRECIP Legend

The PRECIP Legend selection provides the option of displaying an abbreviated version of the PRECIP legend in the top right region of the MFD. The full legend is available by pressing the **LEGEND** soft key.


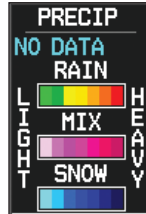


Figure 4-97 GFDS PRECIP Legend Selection

1. While viewing a WX Data Link Map page of the WX page group, press the **MENU** key to display the Page Menu Options. Turn the large **MFD** knob to highlight the Weather Setup option and press **ENT**.
2. Turn the large **MFD** knob to highlight PRECIP Legend.
3. Turn the small **MFD** knob to highlight Off or On. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the WX page or turn the large **MFD** knob to the next option.

4.7.8 GFDS Infrared Satellite Data Viewing Range

Infrared Satellite (IR SAT) data is available over North America and Europe and depicts cloud top temperatures from satellite imagery. Brighter cloud top colors indicate cooler temperatures occurring at higher altitudes. Information is updated every half hour.

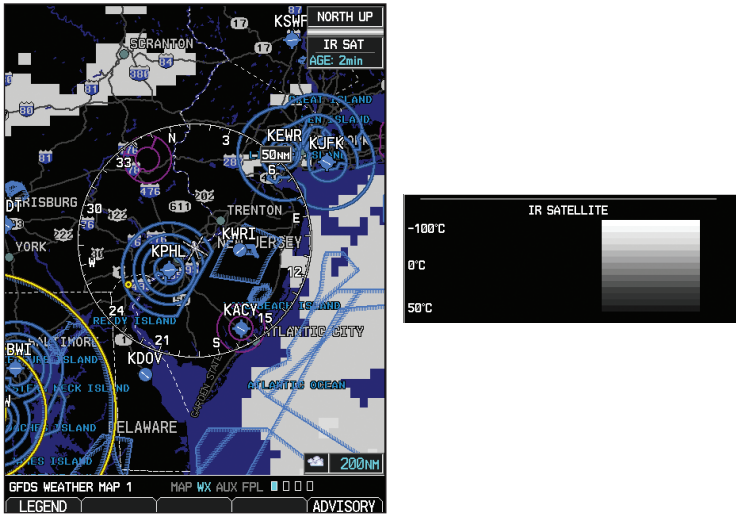

4.7.9 Data Link Lightning Data Viewing Range

Data Link Lightning (DL LTNG) data shows the approximate location of cloud-to-ground lightning strikes. A strike icon represents a strike that has occurred within a two-kilometer region. The exact location of the lightning strike is not displayed. Only cloud to ground strikes are reported in the US and extreme southern Canada (cloud to cloud strikes are not reported).



Figure 4-99 GFDS Data Link Lightning and Legend

The Lightning Data Viewing Range option allows you to select the map range where at and below that value Lightning weather products will be shown on the selected MFD GFDS Weather Map page (1, 2, or 3). When Off is selected, Lightning will not be shown. Where a value (such as 250 NM) is selected, GFDS data will be shown at map ranges of the selected value (250 NM) and lower.

1. While viewing a GFDS Weather Map page of the WX page group, press the **MENU** key to display the Page Menu Options. Turn the large **MFD** knob to highlight the Weather Setup option and press **ENT**.
2. Turn the large **MFD** knob to highlight DL LTNG Data Viewing Range.
3. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the WX page or turn the large **MFD** knob to the next option.

4.7.10 SIGMETs and AIRMETs

SIGMETs (SIGNificant METeorological Information) and AIRMETs (AIRMen's METeorological Information) are broadcast for potentially hazardous weather considered of importance to aircraft. A Convective SIGMET is issued for hazardous convective weather. A localized SIGMET is a significant weather condition occurring at a localized geographical position.

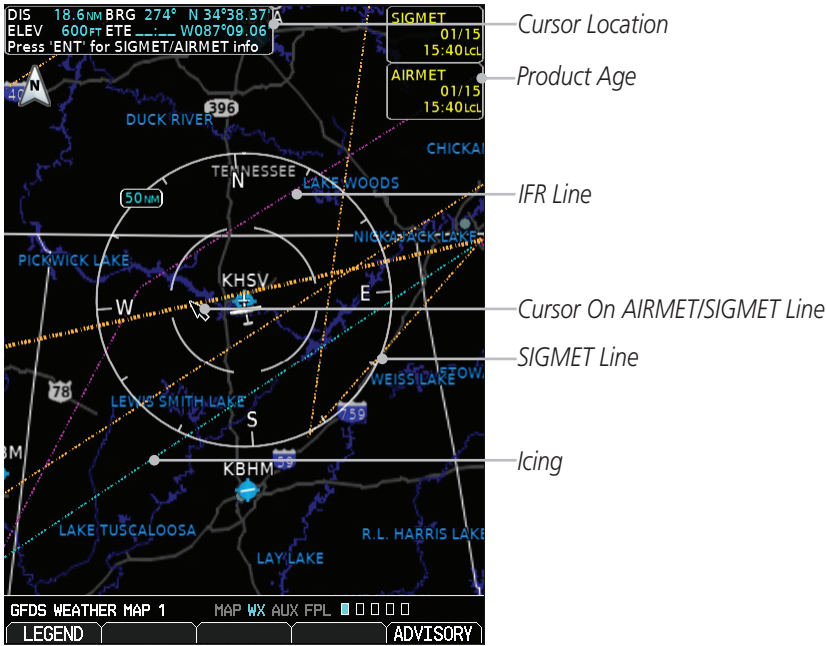


Figure 4-100 GFDS Weather Page - AIRMETS/SIGMETs

When enabled, SIGMET/AIRMETs advise the pilot of potentially hazardous weather to all aircraft. SIGMET/AIRMET data covers icing, turbulence, dust, and volcanic ash as issued by the National Weather Service. The update rate is every 12 minutes in the U.S. Elsewhere, updates are made as they are issued.

Viewing Textual SIGMETs/AIRMETs

Textual SIGMET/AIRMETs can be viewed by selecting an SIGMET/AIRMET line on the Map or Weather (WX) pages.

1. While viewing a Map or Weather page, Use the small and large **MFD** knobs to move the cursor to highlight a SIGMET/AIRMET line. Press **ENT**.
2. The Waypoint Information page for that line will now be shown. Press the **WX** soft key to view weather information.

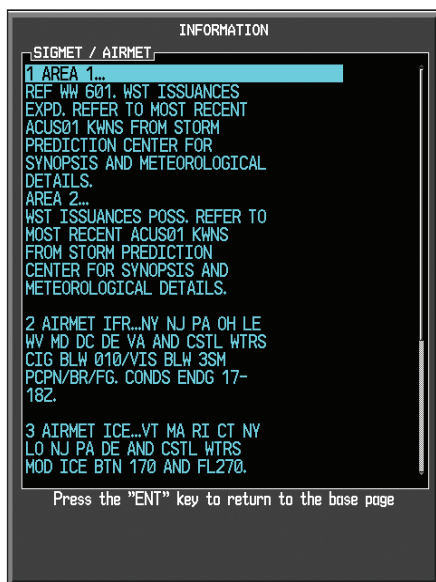


Figure 4-101 GFDs Weather - AIRMETs/SIGMETs Detail and Legend

When enabled, the following AIRMETs are available for display:

- Icing
- Turbulence
- IFR conditions
- Mountain obscuration
- Surface winds

SIGMET/AIRMET Viewing Range

The SIGMET/AIRMET Viewing Range option allows you to select the map range where at and below that value SIGMET/AIRMET products will be shown on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, SIGMET/AIRMET will not be shown. Where a value (such as 250 NM) is selected, SIGMET/AIRMET data will be shown at map ranges of the selected value (250 NM) and lower.

1. While viewing a WX Data Link Map page of the WX page group, press the **MENU** key to display the Page Menu Options. Turn the large **MFD** knob to highlight the Weather Setup option and press **ENT**.
2. Turn the large **MFD** knob to highlight SIG/AIR Viewing Range.
3. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the WX page or turn the large **MFD** knob to the next option.

4.7.11 AIREP/PIREP

Pilot Weather Reports (PIREPs) provide timely weather information for a particular route of flight. When significant weather conditions are reported or forecast, Air Traffic Control (ATC) facilities are required to solicit PIREPs. A PIREP may contain non-forecast adverse weather conditions, such as low in-flight visibility, icing conditions, wind shear, and turbulence. PIREPs are issued as either Routine (UA) or Urgent (UUA).

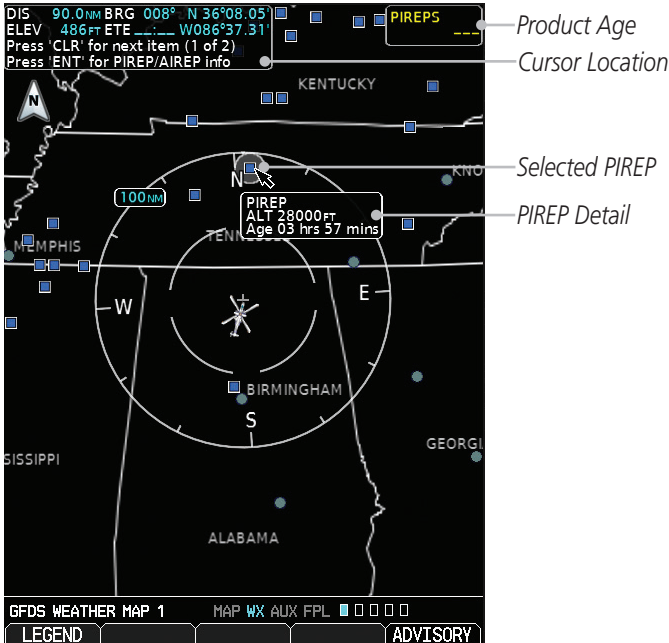


Figure 4-102 GFDS Weather Page - AIREPs/PIREPs

1. While viewing a WX Data Link Map page of the WX page group, press the **MENU** key to display the Page Menu Options. The cursor flashes on the "Weather Setup" option. Press **ENT**.
2. Turn the large **MFD** knob to highlight the PIREPS Viewing Range value.
3. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

Viewing Textual AIREPs/PIREPs

Textual AIREPs/PIREPs can be viewed by selecting an AIREP/PIREP on the Map or Weather (WX) pages.

1. While viewing a Map or Weather page, Use the small and large **MFD** knobs to move the cursor to highlight an airport with an AIREP/PIREP. Press **ENT**.
2. The Waypoint Information page for that airport will now be shown. Press the **WX** soft key to view weather information for the waypoint.

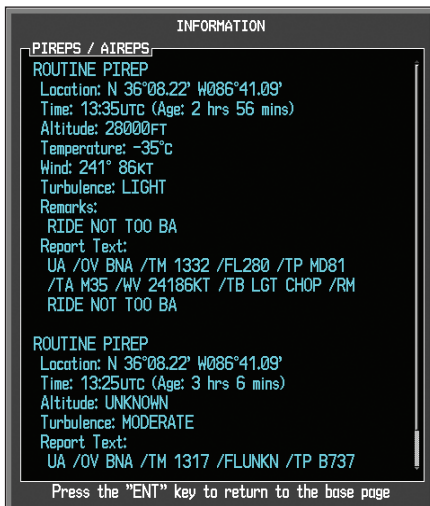


Figure 4-103 GFDS Weather - AIREPs/PIREPs Detail and Legend

4.7.12 METARs




NOTE: Atmospheric pressure reported for METARs is given in hectopascals (hPa), except in the United States, where it is reported in inches of mercury (in Hg). Temperatures are reported in Celsius.



NOTE: METAR information is only displayed within the installed aviation database service area.

METAR (METeorological Aerodrome Report), known as an Aviation Routine Weather Report, is the standard format for current weather observations. METARs are generally updated hourly, but some sites are more frequent. Special updates are done as conditions warrant. METARs typically contain information about the temperature, dew point, wind, precipitation, cloud cover, cloud heights, visibility, and barometric pressure. They can also contain information on precipitation amounts, lightning, and other critical data. METARs are shown as colored flags at airports that provide them.

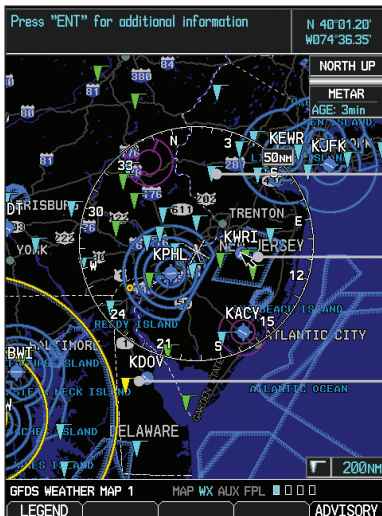

Cursor Location

Product Age

VFR METAR

Selected METAR (MVFR)

IFR METAR

Figure 4-104 GFDS Weather - Graphic METARs and Legend

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

Viewing Textual METARs

Textual METARs can be viewed by selecting an airport on the Map or Weather (WX) pages.

1. While viewing a Map or Weather page, Use the small and large **MFD** knobs to move the cursor to highlight an airport with a METAR flag. Press **ENT**.
2. The Waypoint Information page for that airport will now be shown. Press the **WX** soft key to view weather information for the waypoint.

 
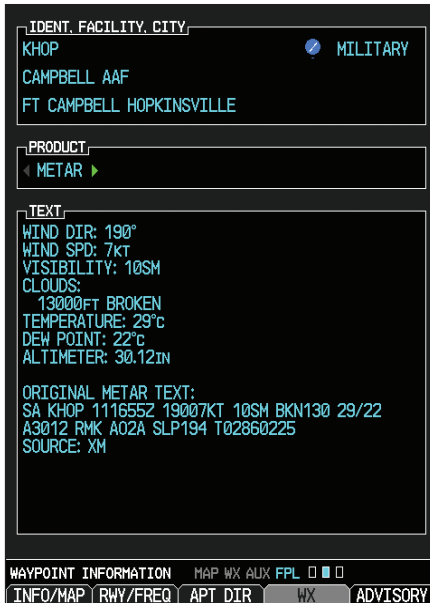


Figure 4-105 GFDs Weather - METARs Detail and Legend

METAR Viewing Range

The METAR Viewing Range option allows you to select the map range where at and below that value METAR weather products will be shown on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, METARs will not be shown. Where a value (such as 150 NM) is selected, METAR data will be shown at map ranges of the selected value (150 NM) and lower.

- 1. While viewing a WX Data Link Map page of the WX page group, press the **MENU** key to display the Page Menu Options. Turn the large **MFD** knob to highlight the Weather Setup option and press **ENT**.
- 2. Turn the large **MFD** knob to highlight METAR Data Viewing Range.
- 3. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
- 4. Press the small **MFD** knob to cancel selection or to end editing and return to the WX page or turn the large **MFD** knob to the next option.

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Hazard Avoidance	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	

4.7.13 Winds Aloft

Winds Aloft data shows the forecast wind speed and direction at the surface and at selected altitudes. Altitudes can be selected in 3000 foot increments from the surface up to 42,000 feet MSL. Pressing the **WX Alt Dn** or **WX Alt Up** soft keys steps down or up in 3,000 foot increments.

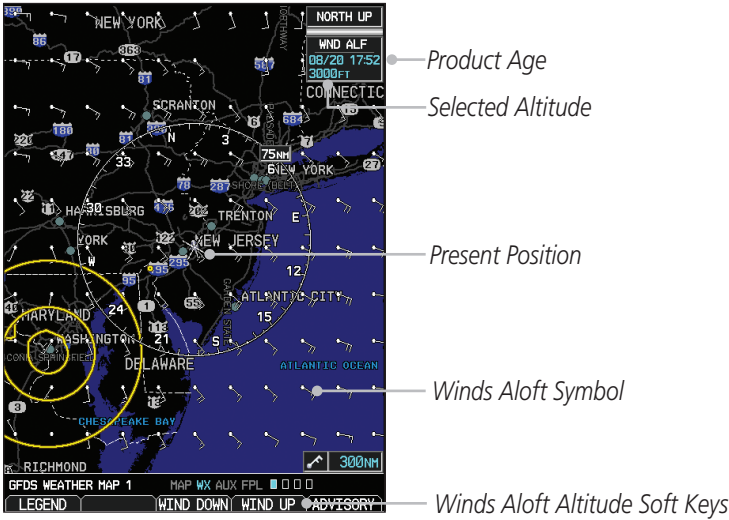


Figure 4-106 GFDS Weather - Winds Aloft



Figure 4-107 GFDS Weather - Winds Aloft Legend

Winds Aloft Data Viewing Range

The Winds Aloft Data Viewing Range option allows you to select the map range where at and below that value Winds Aloft weather products will appear on the selected MFD Wx Data Link Map page (1, 2, or 3). When Off is selected, Winds Aloft will not be shown. When 150 NM is selected, Winds Aloft data will be shown at map ranges of 150 NM and lower.

1. While viewing a WX Data Link Map page of the WX page group, press the **MENU** key to display the Page Menu Options. Turn the large **MFD** knob to highlight the Weather Setup option and press **ENT**.
2. Turn the large **MFD** knob to highlight Winds Aloft Data Viewing Range.
3. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the WX page or turn the large **MFD** knob to the next option.

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Hazard Avoidance	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	

4.7.14 GFDS TFRs

Temporary Flight Restrictions (TFRs) provide detailed information for local short term restrictions. The update rate is approximately every 20 minutes.



Figure 4-108 GFDS Weather - TFRs

The Temporary Flight Restriction (TFR) viewing range option selects whether TFR information is shown on the GFDS Weather Map. TFR information will be shown at and below the selected map range. When Off is selected, the information will not be shown. For the value (such as 500 NM) selected, TFR information will be shown at map ranges of that value (500 NM), and lower.

1. While viewing a GFDS Weather Map page of the WX page group, turn the large **MFD** knob to highlight the TFR Data Viewing Range option.
2. Turn the small **MFD** knob to change the highlighted value.
3. Press **ENT** to accept the displayed value.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the GFDS Weather Map page.

Viewing Textual TFRs

Textual TFRs can be viewed by selecting a TFR outline on the Weather (WX) pages.

- 1. While viewing a GFDS Weather page, Use the small and large **MFD** knobs to move the cursor to highlight a TFR symbol (yellow circle). Press **ENT**.
- 2. The TFR details will be shown.
- 3. Press the small **MFD** knob or ENT to return to the Weather page.



Figure 4-109 GFDS Weather - Textual TFRs and Legend

4.8 FIS-B Weather (Optional)

WSR-88D weather surveillance radar or NEXRAD (NEXt generation RADar) is a Doppler radar system that has greatly improved the detection of meteorological events such as thunderstorms, tornadoes, and hurricanes. An extensive network of NEXRAD stations provides almost complete radar coverage of the continental United States, Alaska, and Hawaii. The unobstructed range of each NEXRAD is 124 nautical miles. The ADS-B/FIS-B receiver sends the FIS-B information and sends it to the GDU 620.



NOTE: The ADS-B/FIS-B receiver will send all FIS-B weather and NOTAM/TFR information that it receives. There may be more information available than is received by the ADS-B/FIS-B receiver. This can lead to the ADS-B/FIS-B receiver, and subsequently the GDU620, displaying the status of the FIS-B data as "received" and "current" even though some of the data for the region is missing.

4.8.1 NEXRAD Abnormalities

There are possible abnormalities regarding displayed NEXRAD images. Some, but not all, causes of abnormal displayed information include:

- Ground Clutter
- Strokes and spurious radar data
- Sun strokes, when the radar antenna points directly at the sun
- Military aircraft deploy metallic dust which can cause alterations in radar scans
- Interference from buildings or mountains, which may cause shadows
- Scheduled maintenance may put a radar off-line

4.8.2 NEXRAD Limitations

Certain limitations exist regarding the NEXRAD radar displays. Some, but not all, are listed for the user's awareness:

- The Regional NEXRAD “pixels” are 1.5 minutes (1.5 nautical miles = 2.78 km) wide by 1 minute (1 nautical miles = 1.852 km) tall. The CONUS NEXRAD “pixels” are 7.5 minutes (7.5 nautical miles = 13.89 km) wide by 5 minutes (5 nautical miles = 9.26 km) wide. Above 60° of latitude the Regional NEXRAD “pixels” are 3 minutes/nautical miles. CONUS NEXRAD is not available above 60° of latitude. The intensity level reflected by the pixel will be the highest level sampled within the area covered by each pixel.



NOTE: *Where it is noted that NOTAM data is available, it is possible only a subset of the data is available and that more NOTAM reports may arrive in future updates. Updates occur approximately every ten minutes.*

4.8.3 NEXRAD Intensity

Colors are used to identify the different NEXRAD echo intensities (reflectivity) measured in dBZ (decibels of Z). “Reflectivity” is the amount of transmitted power returned to the radar receiver. Reflectivity (designated by the letter Z) covers a wide range of signals (from very weak to very strong). So, a more convenient number for calculations and comparison, a decibel (or logarithmic) scale (dBZ), is used. The dBZ values increase as the strength of the signal returned to the radar increases.

4.8.4 NEXRAD

When enabled, NEXRAD weather information is shown. Composite data from all of the NEXRAD radar sites in the United States is shown. This data is composed of the maximum reflectivity from the individual radar sweeps. The display of the information is color-coded to indicate the weather level severity. Refer to the legend for a description of the color code.

The NEXRAD option has selections of Regional, CONUS, or Combined NEXRAD. CONUS NEXRAD includes a composite of available NEXRAD radar imagery across the 48 states. Regional NEXRAD is a composite of available NEXRAD radar imagery in a local area, showing a more detailed image than CONUS NEXRAD. FIS-B weather data reception requires line-of-site communication between the receiver and the ADS-B ground station. Incomplete Regional and/or CONUS NEXRAD imagery displayed on the MAP and FIS-B Weather Pages of the affected products is an indicator of poor FIS-B reception.

Affected Areas

Any area in the continental United States (CONUS) or Alaska where the distance from ADS-B ground stations, or the combined effect of distance and low altitude, is sufficiently great may cause poor reception. A good source of information for ground station coverage can be found at:

<http://www.faa.gov/>

Reception will improve in some affected areas as the FAA completes the NextGen ADS-B ground station infrastructure. However, due to line-of-sight broadcast characteristics, operators with properly installed and functioning equipment may still receive incomplete FIS-B data when signal reception is limited by the distance from ground stations combined with a low altitude.

4.8.5 NEXRAD Weather Setup

1. While viewing the FIS-B weather page, press the **Menu** key.
2. With the Weather Setup selection highlighted, press **ENT**.

4.8.5.1 Weather Page Map Orientation

The Orientation option sets the orientation of the Wx Data Link Map pages.

1. While viewing the FIS-B Weather Map 1, 2, or 3 of the Wx page group, press the **MENU** key. With "Weather Setup" highlighted, press **ENT**.
2. With the "Map Orientation" option active, turn the small **MFD** knob to change the highlighted value.

 


Figure 4-110 Weather Page Map Orientation

3. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

4.8.5.2 NEXRAD Data Viewing Range

The NEXRAD Viewing Range option allows you to select the map range where at and below the selected value NEXRAD weather products will be shown on the selected MFD FIS-B Weather Map page (1, 2, or 3). When Off is selected, NEXRAD weather data will not be shown. Where a value (such as 250 NM) is selected, NEXRAD data will be shown at map ranges of that value (250 NM) and lower.

1. While viewing a FIS-B Weather Map page of the WX page group, press the **MENU** key to display the Page Menu Options. The cursor flashes on the "Weather Setup" option. Press **ENT**.
2. The NEXRAD Data Viewing Range value will be highlighted. Turn the small **MFD** knob to highlight the desired value.
3. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

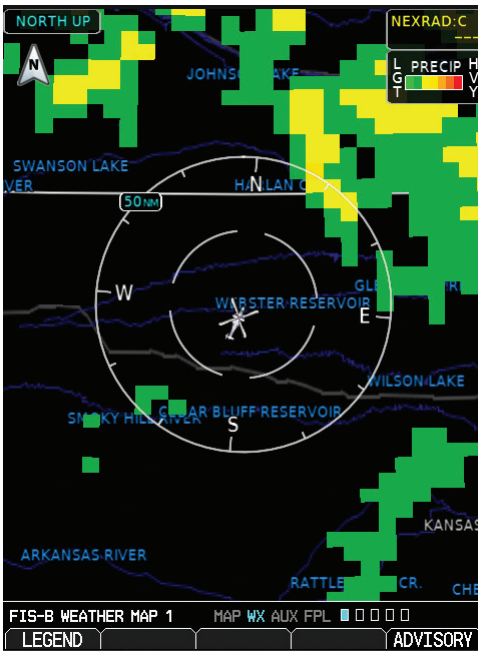


Figure 4-111 FIS-B NEXRAD Precipitation and Legend

4.8.5.3 NEXRAD Legend

The NEXRAD Legend selection provides the option of displaying an abbreviated version of the NEXRAD legend in the top right region of the MFD. The full legend is available by pressing the **LEGEND** soft key.

1. While viewing a FIS-B Weather Map page of the WX page group, press the **MENU** key to display the Page Menu Options. The cursor flashes on the "Weather Setup" option. Press **ENT**.
2. Turn the large **MFD** knob to highlight the NEXRAD Legend value.
3. Turn the small **MFD** knob to highlight Off or On. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

Foreword

System Sec 1

- Sec 2
PFD

Sec 3
MFD

Sec 4 Hazard Avoidance

Sec 5
Addition
Feature:

Sec 6
Annu.
& Alerts

Sec 7
symbols

Sec 8
lossary

Appendix A

Index



Regional NEXRAD

The Regional NEXRAD selection shows available regional NEXRAD radar information from reporting ground stations within 500 NM of the rotorcraft location.

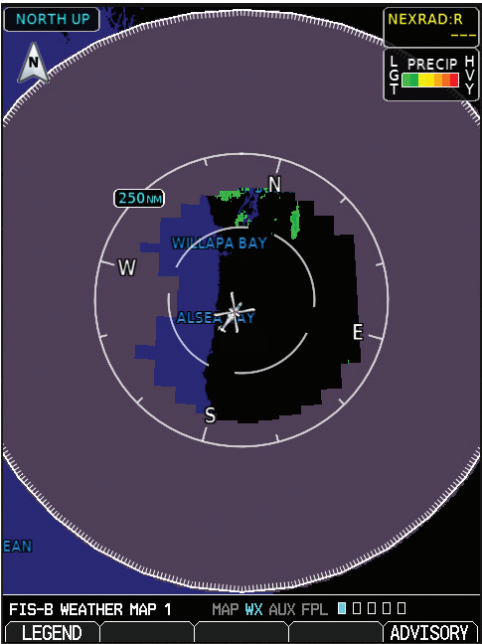


Figure 4-113 FIS-B Regional NEXRAD

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Hazard Avoidance	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	

Combined NEXRAD

Regional NEXRAD data and CONUS NEXRAD data are shown together. The two types of NEXRAD are separated by a white stippled border. This boundary is updated whenever new Regional or CONUS NEXRAD data is received. The radius of the boundary is fixed at 150 NM.

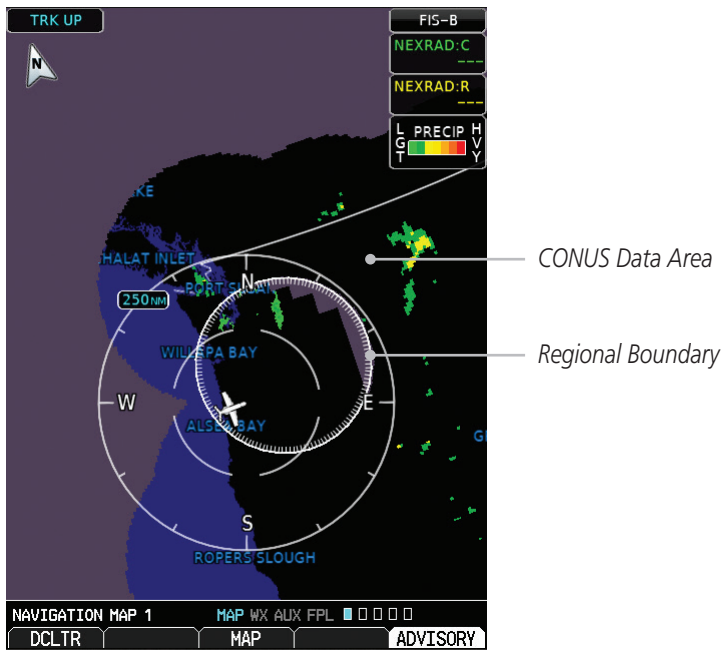


Figure 4-114 FIS-B Combined NEXRAD

4.8.5.5 SIGMETs and AIRMETs

SIGMETs (SIGNificant METeorological Information) and AIRMETs (AIRMen's METeorological Information) are broadcast for potentially hazardous weather considered of importance to aircraft. A Convective SIGMET is issued for hazardous convective weather. A localized SIGMET is a significant weather condition occurring at a localized geographical position.

When enabled, SIGMET/AIRMETs advise the pilot of potentially hazardous weather to all aircraft. SIGMET/AIRMET data covers icing, turbulence, dust, and volcanic ash as issued by the National Weather Service. The update rate is every 12 minutes.

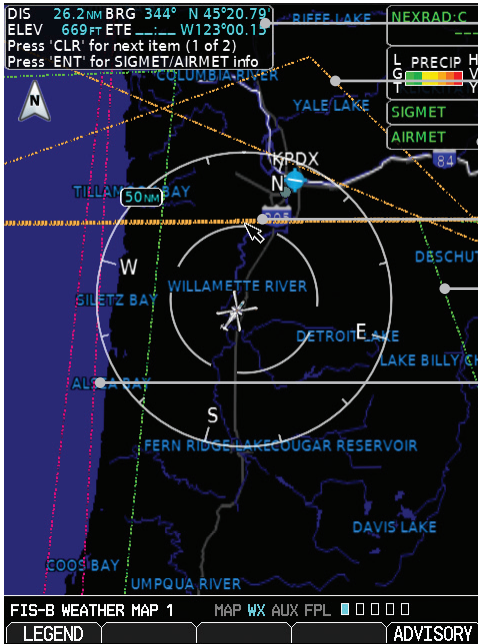


Figure 4-115 FIS-B - AIRMETS/SIGMETs

SIGMET/AIRMET (SIG/AIR) Viewing Range

The SIGMET/AIRMET Viewing Range option allows you to select the map range where at and below that value SIGMET/AIRMET products will be shown on the selected MFD FIS-B Weather Map page (1, 2, or 3). When Off is selected, SIGMET/AIRMET will not be shown. For a value selected (such as, 150 NM), SIGMET/AIRMET data will be shown at map ranges of that value (150 NM), and lower.

1. While viewing a FIS-B Weather Map page of the WX page group, press the **MENU** key to display the Page Menu Options. The cursor flashes on the "Weather Setup" option. Press **ENT**.
2. Turn the large **MFD** knob to highlight the SIGMET/AIRMET Viewing Range value.
3. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

Viewing Textual *SIGMETs/AIRMETs*

Textual SIGMET/AIRMETs can be viewed by selecting an SIGMET/AIRMET line on the Map or Weather (WX) pages.

1. While viewing a Map or Weather page, Use the small and large **MFD** knobs to move the cursor to highlight a SIGMET/AIRMET line. Press **ENT**.
2. The Waypoint Information page for that line will now be shown. Press the **WX** soft key to view weather information.

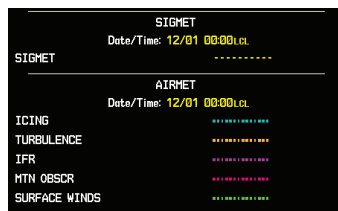
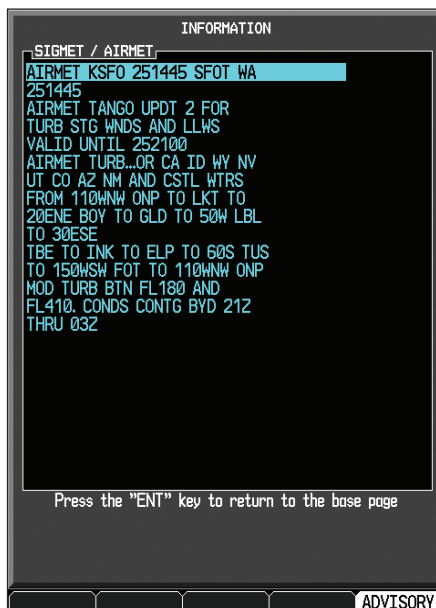


Figure 4-116 FIS-B AIRMETs/SIGMETs Detail and Legend

When enabled, the following AIRMETs are available for display:

- Icing
- Turbulence
- IFR conditions
- Mountain obscuration
- Surface winds

4.8.5.6 AIREP/PIREP

Pilot Weather Reports (PIREPs) provide timely weather information for a particular route of flight. When significant weather conditions are reported or forecast, Air Traffic Control (ATC) facilities are required to solicit PIREPs. A PIREP may contain non-forecast adverse weather conditions, such as low in-flight visibility, icing conditions, wind shear, and turbulence. PIREPs are issued as either Routine (UA) or Urgent (UUA).

1. While viewing a FIS-B Weather Map page of the WX page group, press the **MENU** key to display the Page Menu Options. The cursor flashes on the "Weather Setup" option. Press **ENT**.
2. Turn the large **MFD** knob to highlight the PIREPS Viewing Range value.
3. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

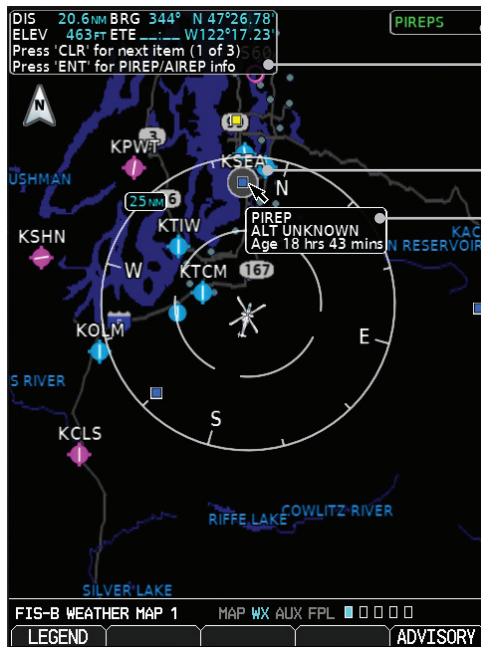


Figure 4-117 FIS-B AIREPs/PIREPs

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Avoidance	Sec 4
Hazard	Sec 5
Additional Features	Sec 6
Annun. & Alerts	Sec 7
Symbols	Sec 8
Glossary	Appendix A
Index	

Viewing Textual AIREPs/PIREPs

Textual AIREPs/PIREPs can be viewed by selecting an AIREP/PIREP on the Map or Weather (WX) pages.

1. While viewing a Map or Weather page, Use the small and large **MFD** knobs to move the cursor to highlight a AIREP/PIREP. Press **ENT**.
2. Press **ENT** or the the small **MFD** knob to return to the Weather page.


 


Figure 4-118 FIS-B AIREPs/PIREPs Detail and Legend

4.8.5.7 METARs




NOTE: Atmospheric pressure reported for METARs is given in hectopascals (hPa), except in the United States, where it is reported in inches of mercury (in Hg). Temperatures are reported in Celsius.

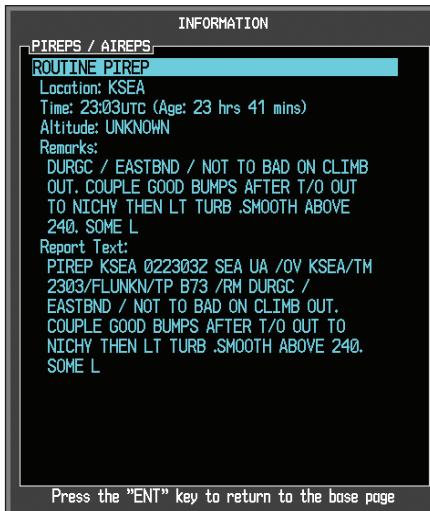

NOTE: METAR information is only displayed within the installed aviation database service area.

METAR (METeorological Aerodrome Report), known as an Aviation Routine Weather Report, is the standard format for current weather observations. METARs are updated hourly and are considered current. METARs typically contain information about the temperature, dew point, wind, precipitation, cloud cover, cloud heights, visibility, and barometric pressure. They can also contain information on precipitation amounts, lightning, and other critical data. METARs are shown as colored flags at airports that provide them.

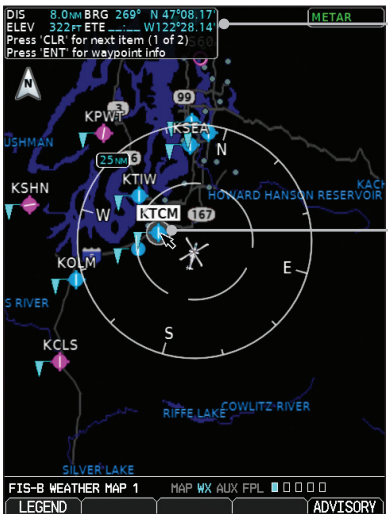

Cursor Location

Selected METAR (VFR)

Figure 4-119 FIS-B Weather - Graphic METARs

METAR Viewing Range

The METAR Viewing Range option allows you to select the map range where at and below that value METAR weather products will be shown on the selected MFD FIS-B Weather Map page (1, 2, or 3). When Off is selected, METARs will not be shown. For a value (such as 150 NM) selected, METAR data will be shown at map ranges of that value (150 NM), and lower.

Foreword

System
Sec 1

PFD
Sec 2

MFD
Sec 3

Avoidance
Sec 4

Additional
Features
Sec 5

Annun.
& Alerts
Sec 6

Symbols
Sec 7

Glossary
Sec 8

Appendix A

Index

1. While viewing a FIS-B Weather Map page of the WX page group, press the **MENU** key to display the Page Menu Options. The cursor flashes on the "Weather Setup" option. Press **ENT**.
2. Turn the large **MFD** knob to highlight the METAR Data Viewing Range value.
3. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

Viewing Textual METARs

Textual METARs can be viewed by selecting an airport on the Map or Weather (WX) pages.

1. While viewing a Map or Weather page, Use the small and large **MFD** knobs to move the cursor to highlight an airport with a METAR flag. Press **ENT**.
2. The Waypoint Information page for that airport will now be shown. Press the **WX** soft key to view weather information for the waypoint.



Figure 4-120 FIS-B Weather - Textual METARs

4.8.5.8 Winds Aloft

Winds Aloft data shows the forecast wind speed and direction at the surface and at selected altitudes. Altitudes can be selected in 3000 foot increments from the surface up to 42,000 feet MSL by pressing the **WX Alt Dn** or **WX Alt Up** soft keys.



Figure 4-121 FIS-B Weather - Winds Aloft Legend

The Winds Aloft Data Viewing Range option allows you to select the map range where at and below that value Winds Aloft weather products will appear on the selected MFD FIS-B Weather Map page (1, 2, or 3). When Off is selected, Winds Aloft will not be shown. For the value (such as 150 NM) selected, Winds Aloft data will be shown at map ranges of that value (such as 150 NM), and lower.

1. While viewing a FIS-B Weather Map page of the WX page group, press the **MENU** key to display the Page Menu Options. The cursor flashes on the "Weather Setup" option. Press **ENT**.
2. Turn the large **MFD** knob to highlight the Winds Aloft Data Viewing Range value.
3. Turn the small **MFD** knob to highlight the desired value. Press **ENT** to accept the displayed value. The next option will be highlighted.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the Navigation Map page or turn the large **MFD** knob to the next option.

4.8.5.9 FIS-B TFRs

Temporary Flight Restrictions (TFRs) provide detailed information for local short term restrictions.



Figure 4-122 FIS-B Weather - TFRs

The Temporary Flight Restriction (TFR) viewing range option selects whether TFR information is shown on the FIS-B Weather Map. TFR information will be shown at and below the selected map range. When Off is selected, the information will not be shown. For the value (such as 500 NM) selected, TFR information will be shown at map ranges of that value (500 NM), and lower.

1. While viewing a FIS-B Weather Map page of the WX page group, turn the large **MFD** knob to highlight the TFR Data Viewing Range option.
2. Turn the small **MFD** knob to change the highlighted value.
3. Press **ENT** to accept the displayed value.
4. Press the small **MFD** knob to cancel selection or to end editing and return to the FIS-B Weather Map page.

Viewing Textual TFRs

Textual TFRs can be viewed by selecting a TFR outline on the Weather (WX) pages.

1. While viewing a Weather page, Use the small and large **MFD** knobs to move the cursor to highlight a TFR outline (yellow circle). Press **ENT**.
2. A summary of the TFR will be shown and the first TFR will be highlighted. In the case of multiple TFRs, turn the small or large **MFD** knobs to highlight the desired TFR.
3. Press the **VIEW TEXT** soft key to view the full TFR text.
4. Press **ENT** to return to the Weather page.

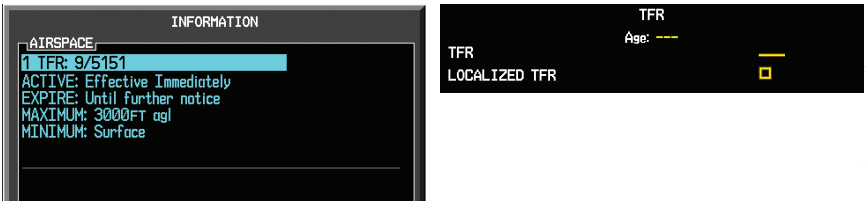


Figure 4-123 FIS-B Weather - Textual TFRs and Legend

4.9 Stormscope



NOTE: Refer to the *WX-500 Pilot's Guide* for a detailed description of the *WX-500 Stormscope*.

The WX-500 Stormscope Weather Mapping Sensor is a passive weather avoidance system that detects electrical discharges associated with thunderstorms within a 200 NM radius of the rotorcraft. Stormscope measures relative bearing and distance of thunderstorm-related electrical activity and reports the information to the display. **Interfaces are currently only available for the WX-500 Stormscope System.**

For lightning display interpretation, study the examples in the WX-500 Pilot's Guide that are designed to help you relate the cell or strike patterns shown on the display to the size and location of thunderstorms that may be near your rotorcraft.

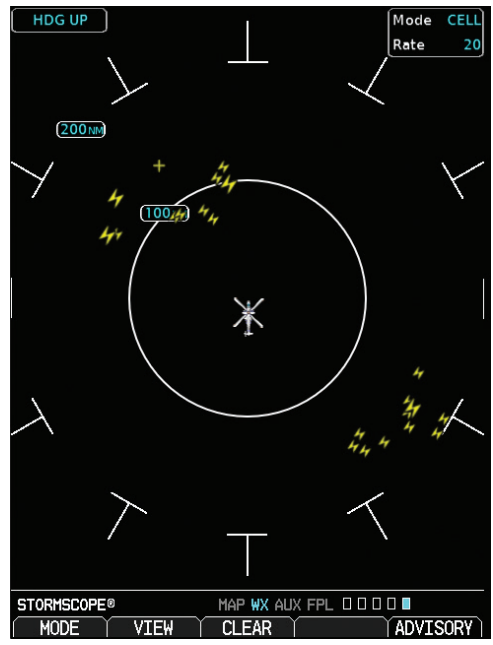


Figure 4-124 Stormscope

Symbol	Time Since Strike (Seconds)
	Less than 6
	Less than 60
	Less than 120
	Less than 180

Table 4-125 Stormscope Symbols

Mode

The Mode selection allows you to select the display of storm cells or strikes.



NOTE: Cell mode uses a clustering program to identify clusters of electrical activity that indicate cells. Cell mode is most useful during periods of heavy storm activity. Displaying cell data during these periods frees the user from sifting through a screen full of discharge points and helps to better determine where the storm cells are located.

View

The Mode selection allows you to select 360° or Arc views.

Clearing the Stormscope Page

Routinely clearing the Stormscope Page of all discharge points is a good way to determine if a storm is building or dissipating. In a building storm discharge points reappear faster and in larger numbers. In a dissipating storm discharge points appear slower and in smaller numbers.

- While viewing the Weather Stormscope page, press the **Clear** key to clear lightning strikes.
- Lightning strikes will be cleared from the display and the Rate value will be reset.



NOTE: When heading is not available (N/A), the pilot must clear the strikes after each turn.

Index	Foreword
Appendix A	
Sec 8 Glossary	
Sec 7 Symbols	
Sec 6 Annun. & Alerts	
Sec 5 Additional Features	
Sec 4 Hazard Avoidance	
Sec 3 MFD	
Sec 2 PFD	
Sec 1 System	

This page intentionally left blank

5 ADDITIONAL FEATURES (OPTIONAL)



NOTE: The availability of SafeTaxi, ChartView, or FliteCharts in electronic form may not preclude the requirement to carry paper charts aboard the aircraft. See the RFMS for more information.



NOTE: ChartView is an optional feature that requires enablement by a Garmin dealer.

Additional features of the GDU 620 include the following:

- ChartView and FliteCharts electronic charts
- SafeTaxi diagrams
- SiriusXM Satellite Radio entertainment
- XM WX Satellite Weather (covered in section 4.7)
- Traffic (covered in sections 4.5 and 4.6)
- Garmin Synthetic Vision Technology (SVT)

The optional ChartView and FliteCharts provide on-board electronic terminal procedures charts. Electronic charts offer the convenience of rapid access to essential information. Either ChartView or FliteCharts may be configured in the system.

SafeTaxi diagrams provide detailed taxiway, runway, and ramp information at more than 700 airports in the United States. By decreasing the range on an airport that has a SafeTaxi diagram available, a close up view of the airport layout can be seen.

The optional SiriusXM Satellite Radio entertainment audio feature of the GDL 69A Data Link Receiver handles more than 170 channels of music, news, and sports. SiriusXM Satellite Radio offers more entertainment choices and longer range coverage than commercial broadcast stations.

XM WX Satellite Weather is an optional service that provides the ability to display graphic weather data overlaid on the MFD Nav Map and Weather Data Link pages.

The Traffic Map Page shows surrounding TAS or TIS traffic data in relation to the aircraft's current position and altitude. The Traffic option is designed to assist in detection and avoidance of other aircraft.

Foreword

System
Sec 1

PFD
Sec 2

MFD
Sec 3

Hazard
Avoidance
Sec 4

Additional
Features
Sec 5

Annun.
& Alerts
Sec 6

Symbols
Sec 7

Glossary
Sec 8

Appendix A

Index

The optional Garmin Synthetic Vision Technology (SVT) is a visual enhancement to the G500H. SVT is displayed as a forward-looking display of the topography immediately in front of the aircraft. SVT information is shown on the primary flight display (PFD).

5.1 FliteCharts and ChartView

When the Chart feature is available, charts will be shown on the third page of the Flight Plan page group. The Chart page will default to the nearest airport if no flight plan or destination airport is present. While you are on the ground, the displayed charts will default to the current airport location regardless of flight plan.

Both ChartView and FliteCharts may be geo-referenced. The icon will have an “x” through it the selected chart does not support geo-referencing.



NOTE: The availability of SafeTaxi, ChartView, or FliteCharts in electronic form may not preclude the requirement to carry paper charts aboard the aircraft. See the RFMS for more information.

NOTE: The Chart feature provides a digital representation of a paper chart and provides no vertical or lateral course guidance. Flight Plan and Procedures are separate from charts, and do provide vertical and lateral course guidance for the loaded route or procedure shown on the Flight Plan page. The term “Chart Unavailable” means that the chart cannot be viewed on the Chart page due to either a chart not being published, or an error in the chart database, but does not preclude its availability or inclusion of the procedure in the Flight Plan or Procedures portion of the system. The absence of a chart for a particular Departure, Arrival, or Approach does not preclude its availability or inclusion in the Flight Plan. The absence of a particular Departure, Arrival, or Approach under the Flight Plan does not preclude the ability to view the chart.

NOTE: Do not use SafeTaxi or Chartview functions as the basis for ground maneuvering. SafeTaxi and Chartview functions do not comply with the requirements of AC 20-159 and are not qualified to be used as an airport moving map display (AMMD). SafeTaxi and Chartview are to be used by the flight crew to orient themselves on the airport surface to improve pilot situational awareness during ground operations.

Foreword	
Sec 1 System	
Sec 2 PFD	
Sec 3 MFD	
Sec 4 Hazard Avoidance	
Sec 5 Additional Features	
Sec 6 Annun. & Alerts	
Sec 7 Symbols	
Sec 8 Glossary	
Appendix A	
Index	



NOTE: The chart for the destination airport or loaded approach will automatically be selected.

1. Turn the large **MFD** knob to the Flight Plan (FPL) page group.
2. Turn the small **MFD** knob to the Chart page.

5.1.1 ChartView (Optional)

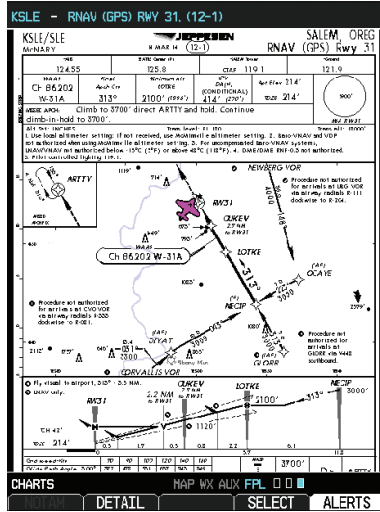


Figure 5-1 ChartView Chart Page

ChartView resembles the paper version of Jeppesen terminal procedures charts. The charts are displayed in full color with high-resolution. The MFD depiction shows the aircraft position on the moving map in the plan view of approach charts and on airport diagrams.

The ChartView database subscription is available from Jeppesen, Inc. ChartView is an optional feature that requires enablement by a Garmin dealer. Available data includes:

- Arrivals (STAR)
- Departure Procedures (DP)
- Approaches
- Airport Diagrams
- Chart NOTAMs

Cycle Number and Revision

The ChartView database is revised every 14 days. Charts are still viewable during a period that extends from the cycle expiration date to the disables date. ChartView is disabled 70 days after the expiration date and is no longer available for viewing upon reaching the disable date. When turning on the GDU 620, the Power-up Page indicates any of nine different possible criteria for ChartView availability. See Table 5-5 for the various ChartView Power-up Page displays and the definition of each.

5.1.2 FliteCharts

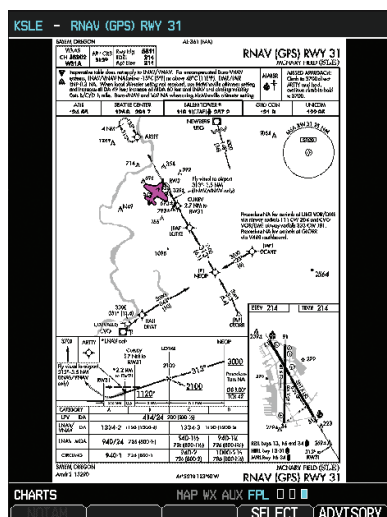


Figure 5-2 FliteCharts Chart Page

FliteCharts resemble the paper version of FAA-published terminal procedures charts. FliteCharts data may also be provided by sources other than the FAA. The charts are displayed with high-resolution and in color for applicable charts. The MFD FliteCharts depiction shows the aircraft position on the moving map in the plan view of approach charts. FliteCharts database subscription is available from Garmin. Available data includes:

- Arrivals (STAR)
- Departure Procedures (DP)
- Approaches
- Airport Diagrams (not geo-referenced)

Cycle Number and Revision

FliteCharts data is revised every 28 days. Charts are still viewable during a period that extends from the cycle expiration date to the disables date. FliteCharts is disabled 180 days after the expiration date and are no longer available for viewing upon reaching the disables date. When turning on the GDU 620, the Power-up page indicates any of five different possible criteria for chart availability. These indications are whether the databases are not configured, not available, current, out of date, or disabled. See Table 5-5 for the various FliteCharts Power-up page displays and the definition of each.

5.1.3 Determining Chart Database Type, Coverage, and Currency

Chart Database Type

Select the **DBASE** soft key for scrolling through the database information. Scroll through the database with the **MFD** knob or **ENT** key.

- 1. Turn the large **MFD** knob to select AUX.
- 2. Press the **DB ACTV** key to view the databases.
- 3. Press the small **MFD** knob and then turn the small or large **MFD** knobs to highlight Chart Type. The field will show Not Available, ChartView, or FliteCharts.

CHART CYCLE	1505
CHART TYPE	Jeppesen ChartView
CHART EXPIRES	12-MAR-15
CHART DISABLES	21-MAY-15

Figure 5-3 ChartView Database Information

CHART REGION	US
CHART CYCLE	1503
CHART TYPE	FliteCharts
CHART EFFECTIVE	05-MAR-15
CHART EXPIRES	02-APR-15
CHART DISABLES	29-SEP-15

Figure 5-4 FliteChart Database Information

Chart Coverage

The chart databases cover the area that was selected during the download process. FliteCharts will note the region covered by the installed chart database; ChartView does not.

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Hazard Avoidance	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	

Chart Currency



NOTE: Messages displayed in yellow also appear in a message banner along the bottom of the Chart page.

The date currency of the installed chart databases are shown both during power-up and on the AUX - System Status page.

Power-up Page Display	Definition
 FliteCharts 1408, Effective 24-JUL-2014	Database's effective date is in the future. [2]
 FliteCharts 1408, Effective 24-JUL-2014	Database's effective date is the current day. [1] [2]
 ChartView 1503, Expires 12-FEB-2015	Current date is unknown (e.g., no GPS fix yet).
 FliteCharts 1408, Expires 21-AUG-2014	
 ChartView 1503, Expires 12-FEB-2015	Database is active.
 FliteCharts 1408, Expires 21-AUG-2014	
 ChartView 1503, Expires 12-FEB-2015 Check local rules for database effective times	Database's expiration date is the current day. [1]
 FliteCharts 1408, Effective 24-JUL-2014 Check local rules for database effective times	
 ChartView 1503, Expired 12-FEB-2015	Database's expiration date has passed. Expired notes that the database expired less than 70 days ago, but may still be used.
 FliteCharts 1408, Expired 21-AUG-2014	
 ChartView 1503, Disabled 23-APR-2015	Database's disable data has passed. Disabled notes that the database expired more than 70 days ago and is no longer available for use.
 FliteCharts 1408, Disabled 17-FEB-2015	
 Chart Data Verifying...	System is verifying database when new cycle is installed.
 Chart Data Corrupt!	Database verification failed.
 Chart Data N/A	No database is installed.

 
Power-up Page Display	Definition
	Blank Line. GDU 620 system is not configured for any chart data. Contact a Garmin-authorized service center for configuration.

Table 5-5 Power-up Page Annunciations and Definitions

- When the effective or expiration date is the current day, the following message is displayed at the bottom of the page: “Check local rules for database effective times.”
- ChartView does not have “Effective” dates.

5.1.4 Selecting a Chart



NOTE: When the chart database synchronizes with another LRU, and Chart Streaming is not available, a message banner at the bottom of the Chart page displays “Getting newer charts.” This process can take several minutes.

The G500H will only allow the pilot to select the chart type in normal mode if it is configured for ChartView. When in-air, the pilot cannot select the field to change the chart source, and a small message is displayed underneath the Chart Type line that reads “Chart Type can only be changed when on ground.” The ability to select a chart type is absent from normal mode if configured for FliteCharts.

5.1.4.1 Selecting FliteCharts or ChartView

When configured during installation and when both chart types are available, you can select which chart type will be used. Only one chart type can be used at a time.

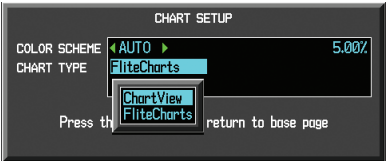


Figure 5-6 Chart NOTAM

- Turn the large **MFD** knob to highlight the Chart Type sections.
- Turn the small **MFD** knob to select ChartView or FliteCharts.

- Press the **ENT** key to save the selected value.
- Changing chart type requires a restart of the unit. With OK selected, press the **ENT** key to restart the unit and change to the selected chart type.

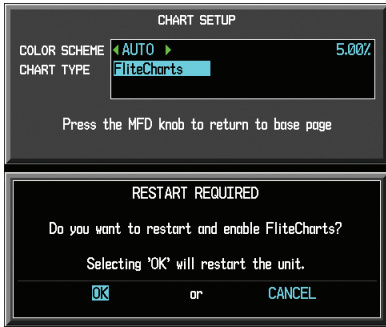


Figure 5-7 Changing Chart Type

5.1.4.2 Selecting a New Chart by FPL, NRST, or RECENT

You may select other charts to display based on your flight plan (FPL), charts of the nearest airport (NRST), or your most recently selected airports (RECENT).



Figure 5-8 Chart Category Selection

- While viewing the Chart page of the FPL page group, press the **SELECT** soft key.
- Turn the small **MFD** knob counterclockwise to show FPL, NRST, or RECENT.
- Turn the large **MFD** knob to select the desired identifier and then press **ENT**.

5.1.4.3 Selecting a Chart Manually

A chart for a different airport may be chosen by selecting the identifier for the desired airport.

Airport Identifier Selection

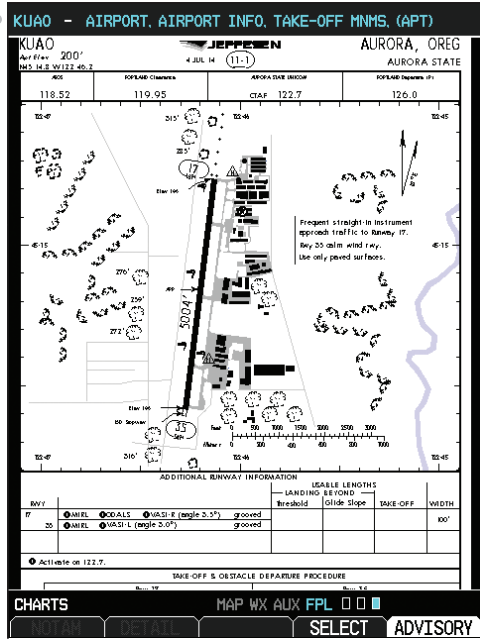


Figure 5-9 Airport Identifier Selection

1. While viewing the Chart page of the FPL page group, press the **SELECT** soft key to change the airport.
2. Use the small **MFD** knob to change the character.
3. Use the large **MFD** knob to move the cursor to highlight a character.
4. Press **ENT** to accept the selected airport.

5.1.4.4 Chart Auto-Selection

The Chart page will automatically select a chart to display when the page is opened.



NOTE: *The chart for the destination airport or loaded approach will automatically be selected.*

- While on the ground, the nearest airport diagram will be displayed.
- If an approach is loaded in the selected GPS navigator, the chart for that approach will be displayed. In some cases, the pilot may be prompted to select the correct chart from a list of possible matches.
- If an approach is not loaded, the airport diagram for the destination airport will be displayed.
- If no destination airport exists, the nearest airport diagram will be displayed.



NOTE: *Automatic chart selection only occurs when the Chart page is opened. For example, if a new approach is loaded while the Chart page is open, a different MFD page must be selected and the Chart page re-opened for the new approach chart to be automatically displayed.*

When the pilot has manually selected a chart to display, a different chart will not be automatically selected until one of the following events occurs:

- The aircraft takes off or lands
 - A new or different approach is loaded
1. While viewing the Chart page of the FPL page group, press the **SELECT** soft key to activate chart selection.
 2. Turn the large **MFD** knob to highlight the field to the right of the airport identifier.
 3. Turn the small **MFD** knob to highlight the desired chart.

Figure 5-10 Activate Chart Selection for the Current Airport (ChartView shown)

4. Press **ENT** to accept and view the selected chart.

Figure 5-11 Selected Chart for the Current Airport (ChartView shown)


5.1.5 Using Charts

More detail on the displayed chart can be viewed by zooming in with the Range keys and moving the chart around with pan mode. The Detail soft key allows access to more details for the currently displayed chart.

5.1.5.1 Chart Zooming and Panning

Chart zooming and panning allows viewing charts closer to examine details.

NOTE: Panning mode is indicated by the presence of scroll bars.

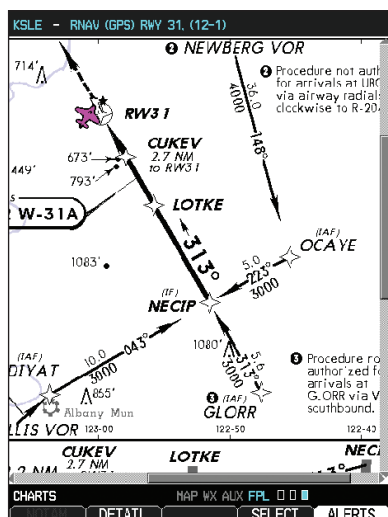

Vertical Scroll Bar

Horizontal Scroll Bar

Figure 5-12 Zooming and Panning Around a Chart

- While viewing the Chart page of the FPL page group, press the **RNG** (Range)   keys to zoom in and out.
- After zooming in, you may only see part of the chart. Press the small **MFD** knob to enter Pan mode and activate scroll bars on the edges of the chart. Turn the large and small **MFD** knobs to move around the chart.
- Press the small **MFD** knob to cancel the scroll bars and exit panning.

5.1.5.2 Viewing Chart Details in ChartView



NOTE: The chart for the destination airport or loaded approach will automatically be selected.



NOTE: Chart details are only available for instrument approach procedure charts. Chart details are not available for airport diagrams or SID/STAR charts.

1. Press the **Detail** key to view detailed views of the current chart. The **Detail** key is only available with ChartView.

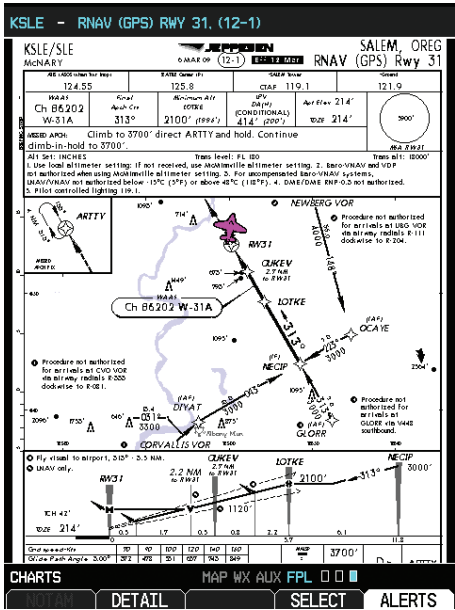


Figure 5-13 Selected Chart for the Current Airport (ChartView shown)

2. Press the **Header**, **Plan**, **Profile**, or **Minimums** keys to view detailed sections for the chart for those topics. An aircraft icon will show in the lower right corner of the display if your aircraft is in the chart area.

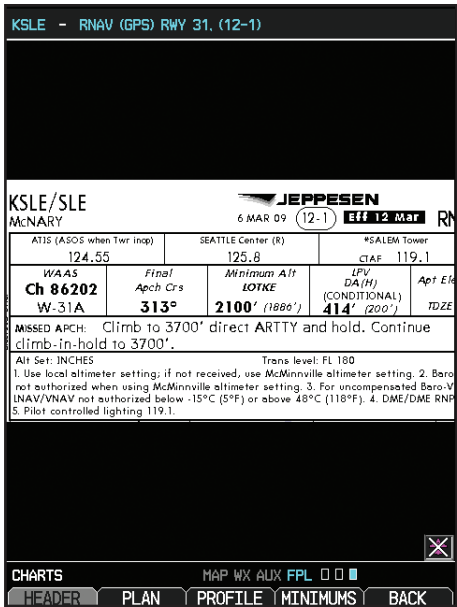


Figure 5-14 Detail of the Selected Chart (Header Shown)

3. Press the **Back** key to return to the view of the full chart.

5.1.5.3 Setting the Altitude Minimums Alerter

1. While viewing the Chart page of the FPL page group, press the **Menu** key. With the Set Minimums item highlighted, press **ENT**.
2. With the Minimums Source highlighted, select the Altitude Minimums Alerter source with small **MFD** knob.



Figure 5-15 Minimums Source Selection

3. Turn the large **MFD** knob to highlight the Altitude Minimums value. Turn the large and small **MFD** knobs to change the Altitude Minimums value and then press **ENT** to activate the selected value.



Figure 5-16 Minimums Altitude Selection

Alerting is inhibited while the aircraft is on the ground and until the aircraft reaches 150 feet above the MDA. The Minimum altitude will be available in the Altitude Alerter.

In dual installations, the minimums alerting altitude value may be set from either GDU 620 and will be synchronized on both units.



NOTE: If you highlight the Minimums Altitude field on the FPL page and press the CLR key, it will turn the minimums functionality off.

5.1.5.4 Viewing Chart NOTAMs

If an active NOTAM (Notice to Airmen) exists for the selected chart, the **NOTAM** soft key will be available. Press the **NOTAM** soft key to view the NOTAM or select View NOTAMs from the Chart Options menu.

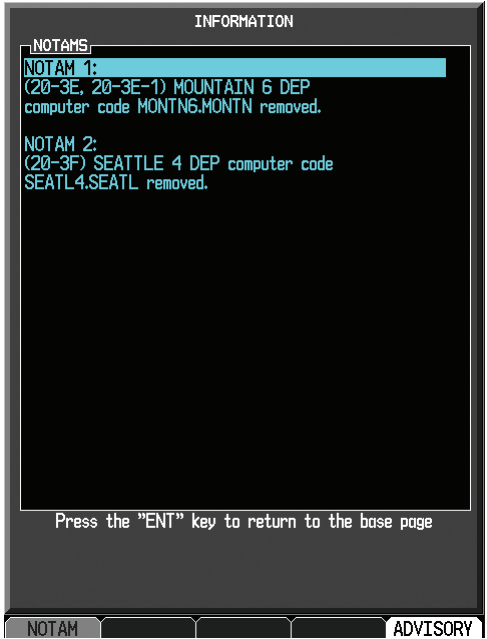


Figure 5-17 Chart NOTAM

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

5.1.5.5 Day/Night View

Chart pages can be displayed on a white or black background for day or night viewing. The Day View offers a better presentation in a bright environment. The Night View gives a better presentation for viewing in a dark environment. .

When AUTO is selected, it allows the user to set a threshold for the transition between the Day and Night color schemes.



Figure 5-18 Chart Color Scheme Auto Selection and Aux Display Brightness

The threshold is compared to the Display Brightness Level that is displayed on the Aux System Setup page. If the color scheme percentage on the Chart Setup page is less than the display brightness percentage selected on the Aux System Setup page, then the Chart AUTO Color Scheme will draw the chart as though the NIGHT scheme were selected. Otherwise, the AUTO scheme will draw the chart as though the DAY scheme were selected.

1. In the FPL page group, turn the small **MFD** knob to reach the Chart page.
2. Press **MENU** to display the Options menu.
3. Press **ENT** to go to Chart Setup. The Color Scheme option will be highlighted.
4. Turn the small **MFD** knob to select Day - AUTO - Night.
5. If Auto is selected, turn the large **MFD** knob CW to the percentage value and turn the small **MFD** knob to change the value.
6. Press the small **MFD** knob or the **ENT** key to save the selected value and return to the Chart page.



NOTE: Once an adjustment is made to the percentage field in Auto mode, the chart must be redrawn (zoomed in or out, or another chart selected) before the switch from Day to Night is seen.

5.2 SafeTaxi

SafeTaxi is an enhanced feature that gives greater map detail when zooming in on airports at close range. The airport display on the map reveals runways with numbers, taxiways with identifying letters/numbers, airport Hot Spots, and airport landmarks including ramps, buildings, control towers, and other prominent features. Resolution is greater at lower map ranges. When the aircraft location is within the screen boundary, including within SafeTaxi ranges, an aircraft symbol is shown on any of the navigation map views for enhanced position awareness.

Designated Hot Spots are recognized at airports with many intersecting taxiways and runways, and/or complex ramp areas. Airport Hot Spots are outlined to caution pilots of areas on an airport surface where positional awareness confusion or runway incursions happen most often. Hot Spots are defined with a magenta circle or outline around the region of possible confusion.

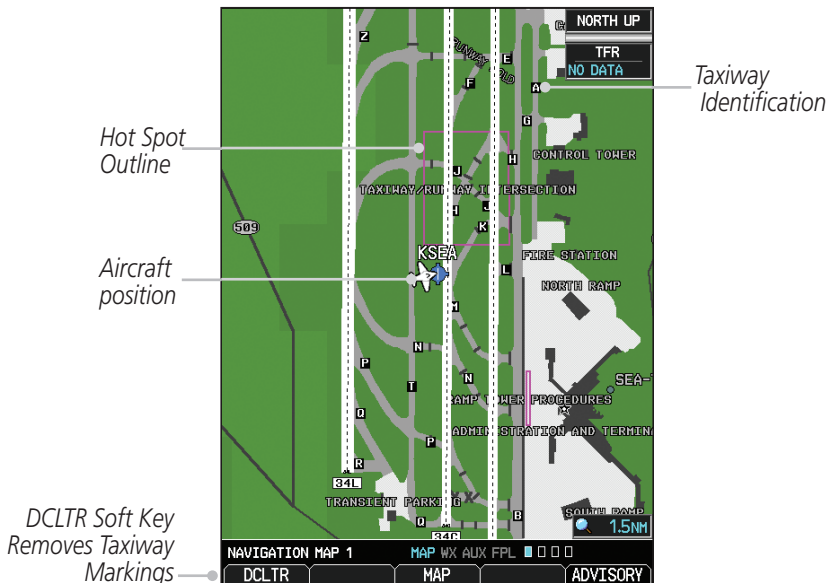


Figure 5-19 SafeTaxi Depiction on the Navigation Map Page

NOTE: Do not use SafeTaxi or Chartview functions as the basis for ground maneuvering. SafeTaxi and Chartview functions do not comply with the requirements of AC 20-159 and are not qualified to be used as an airport moving map display (AMMD). SafeTaxi and Chartview are to be used by the flight crew to orient themselves on the airport surface to improve pilot situational awareness during ground operations.

5.2.1 Using SafeTaxi

Any map page that displays the navigation view can also show the SafeTaxi airport layout within the maximum configured range. The following is a list of pages where the SafeTaxi feature can be seen:

- Navigation Map Page
- Weather Datalink Page
- Airport Information Page
- Intersection Information Page
- NDB Information Page
- VOR Information Page
- User Waypoint Information Page

During ground operations the aircraft's position is displayed in reference to taxiways, runways, and airport features. When panning over the airport, features such as runway holding lines and taxiways are shown.

5.2.1.1 Decluttering

The **DCLTR** soft key (declutter) label advances to DCLTR-1, DCLTR -2, and DCLTR-3 each time the soft key is selected for easy recognition of decluttering level. Selecting the **DCLTR** soft key removes the taxiway markings and airport feature labels. Selecting the **DCLTR-1** soft key removes VOR station ID, the VOR symbol, and intersection names if within the airport plan view. Selecting the **DCLTR-2** soft key removes the airport runway layout, unless the airport in view is part of an active route structure. Pressing the **DCLTR-3** soft key cycles back to the original map detail. With Auto-Zoom enabled, the map will automatically zoom to 1 NM and DCLTR-0 upon landing so SafeTaxi can be viewed. Refer to Map Declutter Levels in the Navigation Map Section.

5.2.1.2 Hot Spot Information

Hot Spots can contain more information about the area that can be displayed when selected.

1. While viewing the Hot Spot area on the Navigation Map page, press the small **MFD** knob to activate the cursor.
2. Turn the **MFD** knobs to move the cursor on the Hot Spot border or into the Hot Spot area and then press the **ENT** key.

Hot spot Name Location Info



Figure 5-20 SafeTaxi Hot Spot Information

3. An information window will be shown on the MFD. After viewing, press the small **MFD** knob, **CLR**, or **ENT** keys to remove the information window. Press the small **MFD** knob again to cancel the cursor.

5.2.2 SafeTaxi Cycle Number and Revision

The SafeTaxi database is revised every 56 days. SafeTaxi is always available for use after the expiration date. When turning on the GDU 620, the Power-up Page indicates whether the databases are current, out of date, or not available. The Power-up Page shows the SafeTaxi database is current when the “SafeTaxi Expires” date is shown in white. When the SafeTaxi cycle has expired, the “SafeTaxi Expires” date appears in yellow. The message “SafeTaxi: N/A” appears in white if no SafeTaxi data is available on the database card.

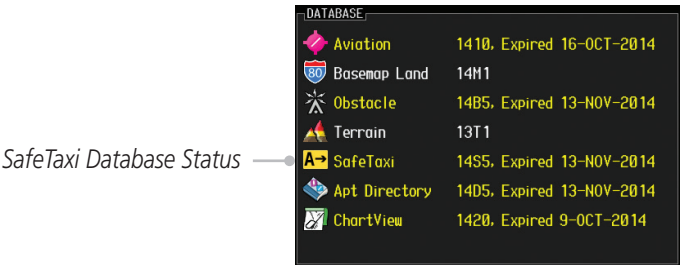


Figure 5-21 Power-up Page, SafeTaxi Database

The SafeTaxi Region, Version, Cycle, Effective date and Expires date of the database cycle can also be found on the AUX - System Status page. SafeTaxi information appears in white and yellow text. The EFFECTIVE date appears in white when data is current and in yellow when the current date is before the effective date. The EXPIRES date appears in white when data is current and in yellow when expired. SafeTaxi REGION NOT AVAILABLE appears in white if SafeTaxi data is not available on the database card. Expired SafeTaxi data is never disabled.

5.3 SiriusXM Satellite Radio Entertainment



NOTE: Refer to the Hazard Avoidance Section for information about XM WX Satellite Weather products.

The optional SiriusXM Satellite Radio entertainment feature of the GDL 69A Data Link Receiver is available for the pilot's and passengers' enjoyment. The GDL 69A can receive SiriusXM Satellite Radio entertainment services at any altitude throughout the Continental U.S. Entertainment audio is not available on the GDL 69 Data Link Receiver.

SiriusXM Satellite Radio offers a variety of radio programming over long distances without having to constantly search for new stations. Based on signals from satellites, coverage far exceeds land-based transmissions. SiriusXM Satellite Radio services are subscription-based. For more information on specific service packages, visit <https://www.siriusxm.com/sxmaviation>.

5.3.1 Activating SiriusXM Satellite Radio Services

The service is activated by providing SiriusXM Satellite Radio with either one or two coded IDs, depending on the equipment. Either the Audio Radio ID or the Data Radio ID, or both, must be provided to SiriusXM Satellite Radio to activate the entertainment subscription. The SiriusXM Satellite Radio Activation Instructions are included with the unit (also available at flyGarmin.com, P/N 190-00355-04).

SiriusXM Satellite Radio and XM WX Satellite Weather subscriptions are sold separately. It is not required to activate both the entertainment and weather service subscriptions with the GDL 69A. Either or both services can be activated. SiriusXM Satellite Radio uses one or both of the coded IDs to send an activation signal that, when received by the GDL 69A, allows it to play entertainment programming.

These IDs are located:

- On the label on the back of the Data Link Receiver
- On the XM Information Page on the MFD

Contact the installer if the Data Radio ID and the Audio Radio ID cannot be located.



NOTE: The **LOCK** soft key on the XM Information Page (Auxiliary Page Group) is used to save GDL 69A activation data when the SiriusXM Satellite Radio services are initially set up. It is not used during normal SiriusXM Satellite Radio operation, but there should be no adverse effects if inadvertently selected during flight. Refer to the GDL 69/69A SiriusXM Satellite Radio Activation Instructions (190-00355-04, Rev G, or later) for further information.

If XM WX Satellite weather services have not been activated, the weather product names will be displayed in gray (see below) on the XM Information Page and a yellow Activation Required message is displayed in the center of the Weather Data Link Page (Map Page Group). The Service Class refers to the groupings of weather products available for subscription.

5.3.2 SiriusXM Satellite Radio Information

The Aux mode XM Information page displays information about the SiriusXM Satellite radios, service class, and products when the GDL 69/69A is installed and the SiriusXM Satellite Radio service is activated. The Data and Audio radios have separate Identification Numbers. The Service Class determines the features that are available. Products that are not part of the subscription are displayed in gray. Products that are part of the active subscription, but are waiting to receive data are white. Products that are part of the active subscription and have data are green.

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index



Figure 5-22 SiriusXM Satellite Radio Information

1. In the AUX page group, turn the small **MFD** knob to display SiriusXM Satellite Radio Information.
2. The **LOCK** soft key is used to “lock” your XM subscription activation. This is only used for the initial subscription or to make a change.



NOTE: Refer to the *GDL 69/69A SiriusXM Satellite Radio Activation Instructions (190-00355-04, Rev G, or later)* for further information.

5.3.3 SiriusXM Satellite Radio Entertainment

Audio entertainment is available through the SiriusXM Satellite Radio Service when activated in the optional installation of the GDL 69A. The GDU 620 serves as the display and control head for your remotely mounted GDL 69A. SiriusXM Satellite Radio allows you to enjoy a variety of radio programming over long distances without having to constantly search for new stations. Based on signal from satellites, coverage far exceeds land-based transmissions. When enabled, the SiriusXM Satellite Radio audio entertainment is accessible in Aux page group.

The information on the SiriusXM Satellite Radio display is composed of four areas: the Active Channel, Available Channels, Category of the highlighted channel, and the Volume setting. The Active Channel window shows the Channel Name and Number, Artist, Song Title, and Category.

1. Turn the large **MFD** knob to Aux Mode.
2. Turn the small **MFD** knob to the XM Radio page.

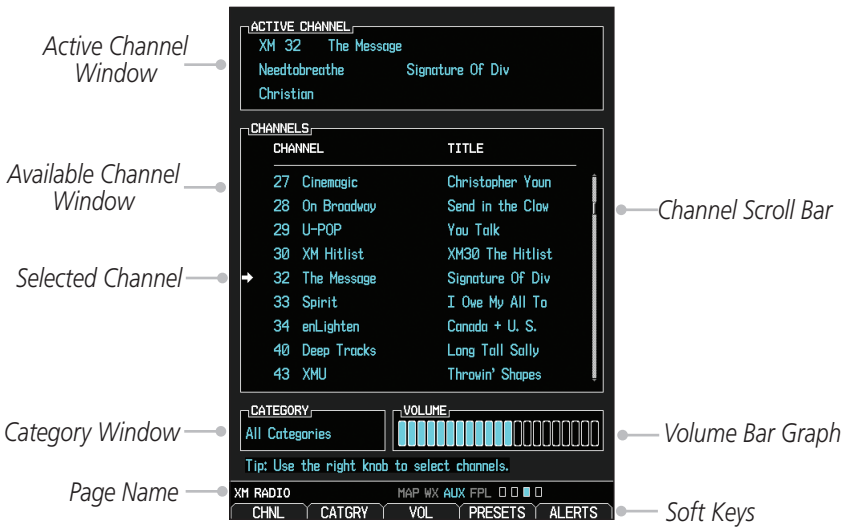


Figure 5-23 SiriusXM Satellite Radio

5.3.3.1 Channel Categories

The Category window displays the currently selected category of audio. Categories of channels, such as Jazz, Rock, or News, can be selected to list the available channels for a type of music or other contents.

1. While viewing the XM Radio page of the AUX page group, press the **CATGRY** soft key to activate Category selection.
2. Turn the small **MFD** knob to select the desired category. When the MFD knob is turned to select a category, the soft keys will not be shown.



Figure 5-24 XM Category List and Soft Keys

3. Press **ENT** to display the list of channels for the highlighted category in the Channels window.
4. Press the small **MFD** knob to cancel selection or to end editing.
OR
1. Press **CATGRY** and then the **CAT +** or **CAT -** soft keys to increment up or down one category at a time.
2. Press **ALL** to show the channels for all categories. Use the large and small **MFD** knobs to select desired channel.
3. Press **ENT** to save the selection or press the small **MFD** knob to cancel selection.

5.3.3.2 Selecting a SiriusXM Satellite Radio Channel

The Channel feature is used to navigate through the channels in the selected category.

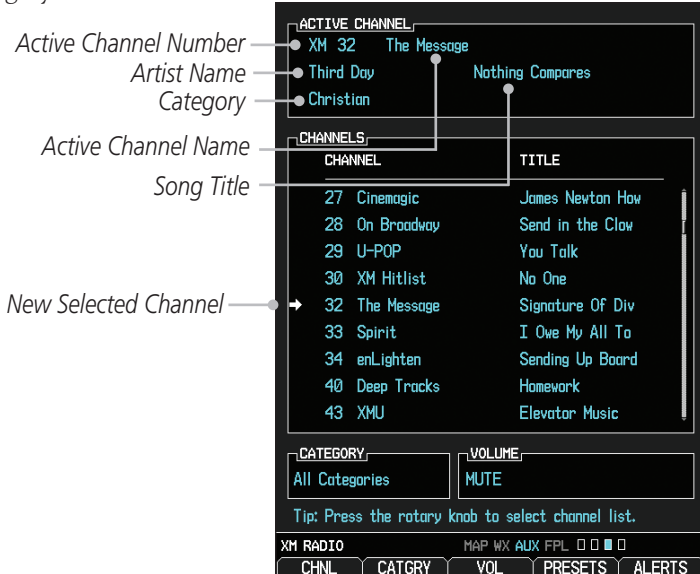


Figure 5-25 XM Channel Selection

1. While viewing the XM Radio page of the AUX page group, press the small **MFD** knob and then turn the small **MFD** knob to select the desired channel.
2. Press **ENT** to make the highlighted channel the Active Channel.



NOTE: A delay of several seconds may occur when selecting a channel. The listed title may end before the radio begins playing the current Active Channel material.

3. Press the small **MFD** knob to cancel selection or to end editing.
OR
1. Press **CHNL** and then the **CH +** or **CH -** soft keys to increment up or down one channel at a time in the active category.
OR
1. Press **CHNL** and then the **DIR CH** soft key to directly select a channel in the active category. Use the large and small **MFD** knobs to select desired channel.
2. Press **ENT** to save the selection or press the small **MFD** knob to cancel selection.

5.3.3.3 SiriusXM Satellite Radio Volume

The Volume control allows you to set the audio volume level, as well as mute the audio.

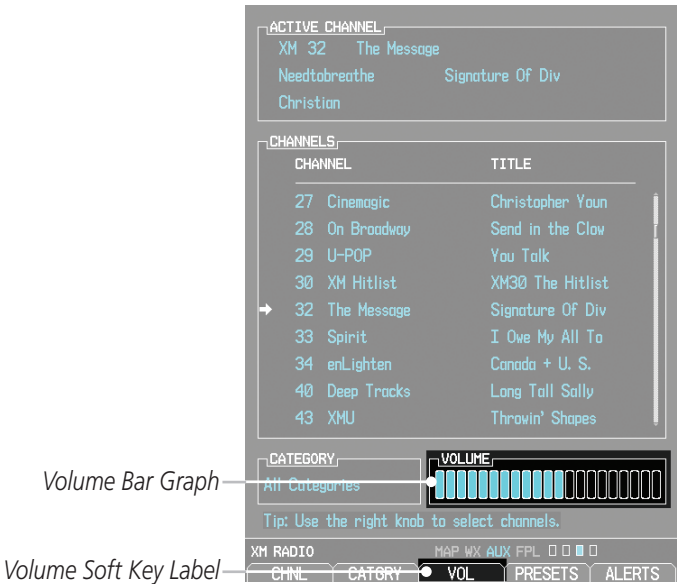


Figure 5-26 XM Radio Volume Setting

1. While viewing the XM Radio page of the AUX page group, press the **VOL** soft key.
2. Press the **VOL +** or **VOL -** soft keys, or turn the small **MFD** knob, to adjust the radio volume.

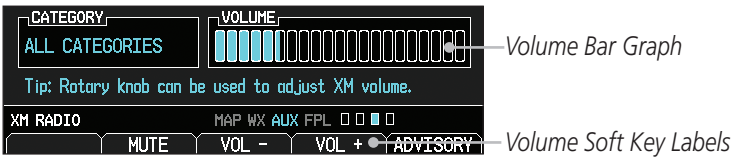


Figure 5-27 XM Radio Volume Controls

3. Press **MUTE** to mute the radio volume.
4. Press **MUTE** again or the **VOL +** or **VOL -** soft keys to unmute the radio volume.

5.3.3.4 SiriusXM Satellite Radio Channel Presets

The **PRESET** soft key allows you to store the Active Channel into a selected preset position for easy later recall. A delay of several seconds can occur when setting or recalling a preset.

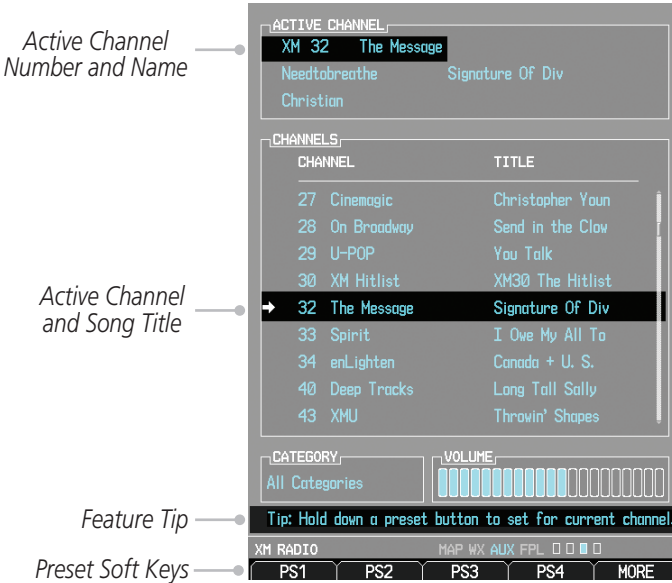


Figure 5-28 XM Radio Presets

Setting a Preset

1. While viewing the XM Radio page of the AUX page group, you may set a preset for the Active Channel. Press the **PRESETS** soft key.
2. Press and hold a preset soft key, such as **PS1**.
3. Press the **MORE** soft key to display the next series of presets.

Recalling a Preset

1. While viewing the XM Radio page of the AUX page group, press the **PRESETS** soft key.
2. Press the preset soft key for the desired stored channel, such as **PS1**.
3. Press the **MORE** soft key to display the next series of presets.

5.3.4 GDL 69/69A Data Link Receiver Troubleshooting

Some quick troubleshooting steps listed below can be performed to find the possible cause of a failure.

- Ensure the owner/operator of the aircraft in which the Data Link Receiver is installed has subscribed to SiriusXM Satellite Radio
- Ensure the SiriusXM Satellite Radio subscription has been activated
- Perform a quick check of the circuit breakers to ensure that power is applied to the Data Link Receiver

For troubleshooting purposes, check the LRU Information Box on the AUX - System Status Page for Data Link Receiver (GDL 69/69A) status, serial number, and software version number. If a failure has been detected in the GDL 69/69A the status will be marked with a red “X.”

1. Turn the large **MFD** knob to select the AUX Page Group.
2. Turn the small **MFD** knob to select the System Status Page (the last page in the AUX Page Group).

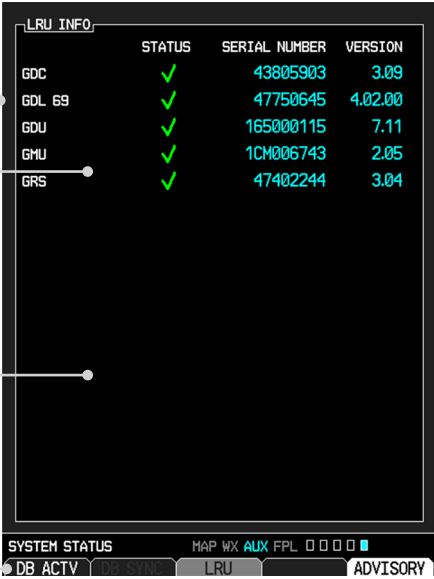


Figure 5-29 LRU Status Window

5.4 Helicopter Synthetic Vision Technology (Optional)

The optional Helicopter Synthetic Vision Technology (HSVT) is a visual enhancement to the G500H. HSVT is displayed as a forward-looking display of the topography immediately in front of the aircraft. HSVT information is shown on the primary flight display (PFD). The depicted imagery is derived from the aircraft attitude, heading, GPS three-dimensional position, and a database of terrain, obstacles, and other relevant features.

The following HSVT enhancements appear on the PFD:

- Flight Path Marker
- Horizon Heading Marks
- Traffic Display
- Airport Signs
- Runway Display
- Terrain Alerting
- Obstacle Alerting
- Water
- Zero-Pitch Line

HSVT offers a three-dimensional view of terrain and obstacles. Terrain and/or obstacles that pose a threat to the aircraft in flight are shaded yellow or red.



NOTE: HSVT will become disabled if the databases necessary to display HSVT are unavailable (generating a GDU DB ERR or HSVT DISABLED alert) or AHRS or GPS data is unavailable.

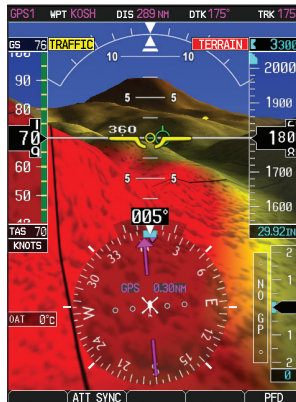


Figure 5-30 Synthetic Vision Imagery - PFD

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Hazard Avoidance	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	

5.4.1 HSVT Operation

Garmin HSVT is activated from the PFD using the soft keys located along the bottom edge of the display. Pressing the soft keys turn the related function on or off.

HSVt functions are displayed on three levels of soft keys. The **PFD** soft key leads into the PFD function soft keys, including synthetic vision. Pressing the **SYN VIS** soft key enables synthetic vision and displays the **SYN TERR**, **HRZN HDG**, and **APTSIGNS** soft keys. The **BACK** soft key returns to the previous level of soft keys.

HRZN and **APTSIGNS** soft keys are dependent upon the state of the **SYN TERR** soft key. When Synthetic Terrain is deactivated, the **SYN TERR** soft key appears illuminated while the remaining HSVT soft keys are unavailable for selection and subdued (black with dark-gray characters). If Synthetic Terrain is deactivated, all other HSVT features are also deactivated. With Synthetic Terrain activated, all other HSVT features may be turned on or off at the pilot's discretion.

- SYN TERR soft key enables synthetic terrain depiction.
- HRZN HDG soft key enable horizon heading marks and digits.
- APTSIGNS soft key enables airport signposts.

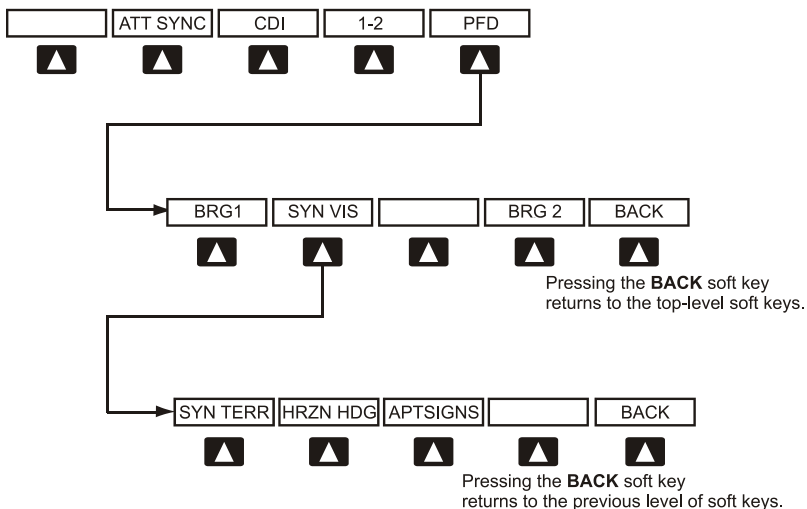


Figure 5-31 HSVT Soft Keys

5.4.2 Activating and Deactivating HSVT



NOTE: In some instances, such as temporary loss of GPS signal, the HSVT functionality will be disabled.

To enable HSVT:

1. Press the **PFD** soft key.
2. Press the **SYN VIS** soft key.
3. Press the **SYN TERR** soft key to view the HSVT display.

When HSVT is enabled, the pitch ladder will display a different pitch scale.



Figure 5-32 Pitch Scale with HSVT Enabled

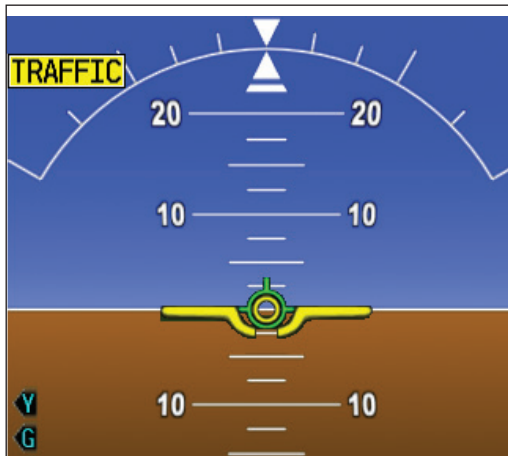


Figure 5-33 Pitch Scale with HSVT Disabled

5.4.3 HSVT Features



Figure 5-34 HSVT on Primary Flight Display

NOTE: HSVT features are not a substitute for standard course and altitude deviation information using the CDI, VSI, and VDI presentations.

5.4.3.1 Flight Path Marker

The Flight Path Marker (FPM) is also known as a Velocity Vector. It is displayed on the PFD at ground speeds above 30 knots. The FPM depicts approximate projected path of the aircraft.

5.4.3.2 Zero-Pitch Line

The Zero-Pitch Line is drawn completely across the display and provides a reference line by which to judge aircraft attitude with respect to the horizon. It is not necessarily aligned with the terrain horizon, particularly when the terrain is sloped or mountainous.

5.4.3.3 Horizon Heading

The Horizon Heading is synchronized with the HSI and shows compass headings in 30-degree increments on the Zero-Pitch Line. Horizon heading tick marks and digits appearing on the zero-pitch line are not visible when they are behind either the airspeed or altitude display. Horizon Heading is activated and deactivated by pressing the **HRZN HDG** soft key.

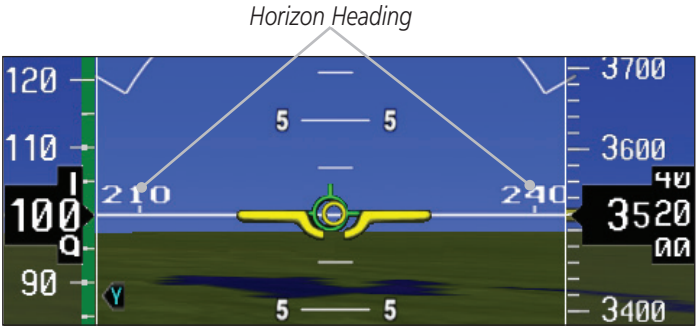


Figure 5-35 Horizon Heading

5.4.3.4 Airport Signs

Airports Signs provide a visual representation of airport location and identification on the synthetic terrain display. When activated, the signs appear on the display when the aircraft is approximately 15 NM from an airport and disappear at approximately 4.5 NM. Airport signs are shown without the identifier until the aircraft is approximately 9 NM from the airport. Airport signs are shown behind the airspeed or altitude display. Airport signs are activated and deactivated by pressing the **APT SIGNS** soft key.



NOTE: *Heliport signs will not appear on the synthetic terrain display.*

*Airport Sign with Identifier
(Between 4.5 NM and 9.0 NM)*

*Airport Sign without Identifier
(Between 9 NM and 15 NM)*



Figure 5-36 Airport Signs

5.4.3.5 Runway Depiction

Runways are shown on the PFD in various ways. Soft surface runways, such as grass runways, are depicted in green. Hard surface runways, such as asphalt, are depicted in gray. Your flight plan will determine how the runway is displayed on the PFD.

Without a loaded flight plan, a runway is shown as dark gray with the boundaries of the runway in light gray.



Figure 5-37 Depiction of Runway with a Loaded Flight plan

A runway that is not in a loaded flight plan is shown as dark gray with no other colors.



Figure 5-38 Depiction of Runway Not in Loaded Flight plan

A runway that is associated with an approach in the loaded flight plan is outlined with a white rectangle, with the actual runway, in that rectangle.

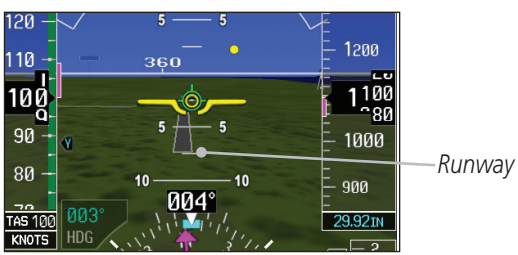


Figure 5-39 Depiction of Runway with Loaded Approach

5.4.3.6 Traffic

Traffic symbols are displayed in their approximate respective location as determined by the related traffic systems. TIS, TAS and ADS-B traffic are all displayed. Traffic is displayed in three dimensions, appearing larger as they are getting closer, and smaller when they are further away.

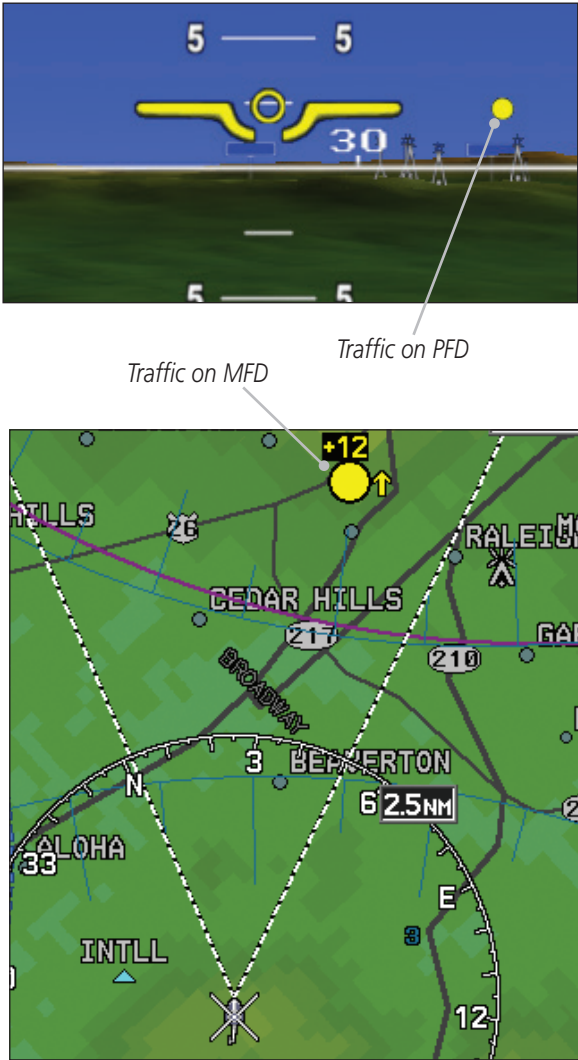


Figure 5-40 Traffic Depiction on PFD and MFD

Foreword	
Sec 1	System
Sec 2	PFD
Sec 3	MFD
Sec 4	Avoidance
Sec 5	Additional Features
Sec 6	Annun. & Alerts
Sec 7	Symbols
Sec 8	Glossary
Appendix A	
Index	

5.4.3.7 Obstacles

Obstacles are represented on the synthetic display by two-dimensional tower or windmill symbols found on the MFD maps and charts. Obstacle symbols appear in the perspective view with relative height above terrain and distance from the aircraft.

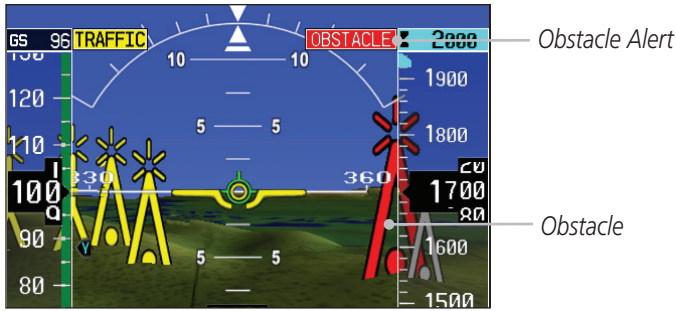


Figure 5-41 Obstacle Depiction on PFD

Unlike the MFD moving map display, obstacles on the synthetic terrain display do not change colors based on relative altitude but will be colored to match any SVT TERRAIN or TAWS Alert from that obstacle. Obstacles greater than 1,000 feet below the aircraft's altitude are not shown. Obstacles are shown behind the airspeed and altitude displays.

5.4.3.8 Field of View

The PFD Field of View can be represented on the MFD Navigation Map Page lateral image. Two dashed lines forming a V-shape in front of the aircraft symbol on the MFD with an angle of approximately 50° represent the forward horizontal field of view shown on the PFD.

V-Shaped Lines
Depict PFD Field
of View (angle is
approx. 50°)

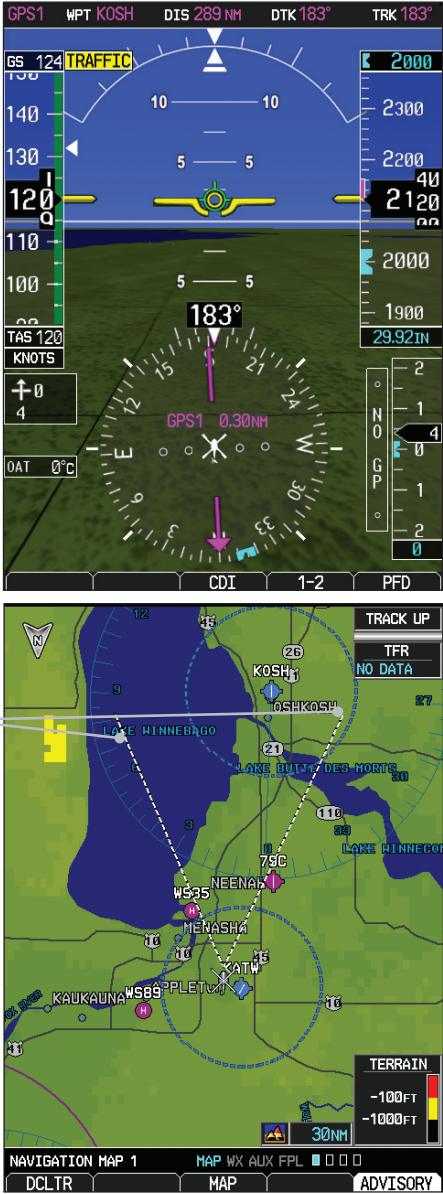


Figure 5-42 MFD and PFD Field of View Comparison

To configure the Field of View:

1. While viewing the Navigation Map 1 or 2 of the Map Page Group, press the **MENU** key to display the **PAGE MENU**.

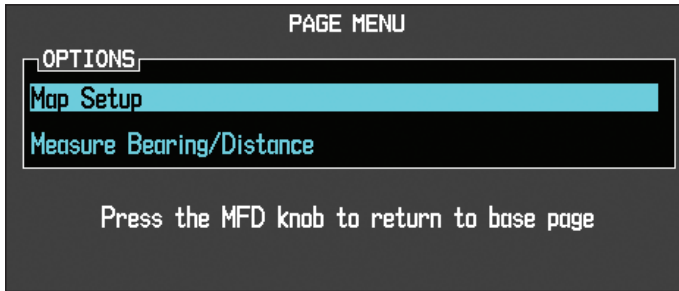


Figure 5-43 Page Menu

2. Press the **ENT** key to bring up the setup page.



Figure 5-44 Map Setup Items

3. Turn the large **MFD** knob to scroll through the options to **FIELD OF VIEW**.
4. Turn the small **MFD** knob to select **On** or **Off**. Press the **ENT** key to confirm your selection.
5. Press the small **MFD** knob to return to the Navigation Map Page.


5.4.3.9 Unusual Attitudes

Unusual attitudes are displayed with red chevrons overlaid on the display, pointing to the direction to fly to correct the unusual attitude condition. The display shows either a brown or blue band of color at the top or bottom of the screen to represent earth or sky. This is intended to prevent losing sight of the horizon during extreme pitch attitudes.

Two conditions that inhibit HSVT and generate alerts on the PFD:

- The position of the aircraft exceeds the range of the terrain database.
- The terrain database is out of date using an older terrain database card.

Blue Band - Sky Representation

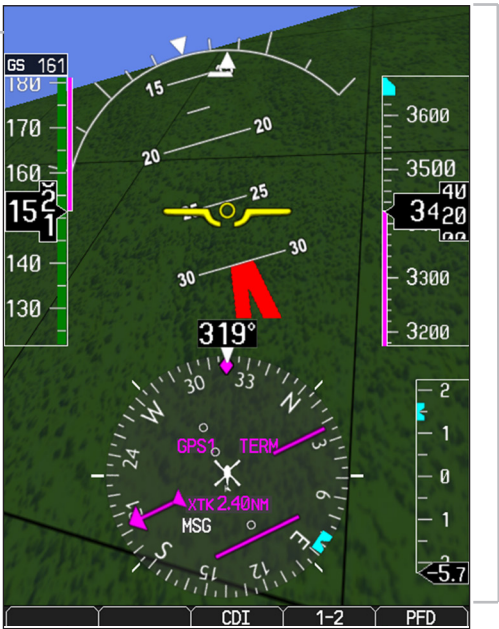

Full Display Terrain

Figure 5-45 Unusual Attitude Display - Blue Band

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features


Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

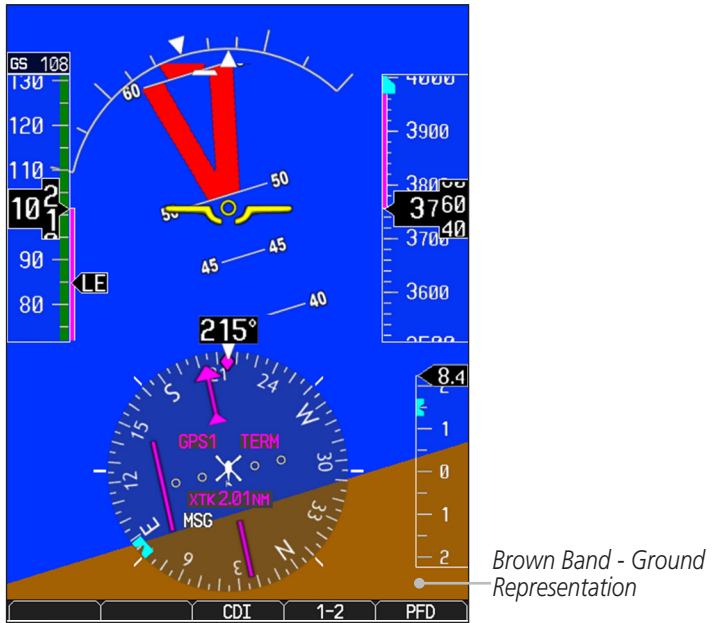

5.5 GFC 600H Operation

The G500H interfaces to the GFC 600H to provide the functions described in this section. Refer to the *Rotocraft Flight Manual* and *GFC 600H Pilot Guide*, or autopilot system documentation for instructions on how to use the autopilot functions.

5.5.1 Heading Select Mode

The GDU 620 heading bug displays on the HSI. When coupled in HDG mode, the FCS will command banks as necessary to maintain the selected heading. The heading bug is always present. For more information on setting the heading bug, refer to section 2.6.1.

5.5.2 Altitude Capture

The GDU 620 altitude bug is used to automatically capture a selected altitude when the FCS is coupled in VS or IAS modes. Adjust the altitude bug in the normal manner when using the altitude capture interface. The altitude preselect bug is always present. For more information on setting the altitude capture bug, refer to section 2.4.1.

5.5.3 Vertical Speed Control

The GDU 620 vertical speed bug controls vertical speed when the FCS is coupled in VS mode. The vertical speed bug displays on the GDU 620 only when the vertical speed mode is selected on the GFC 600H. For more information on setting the vertical speed bug, refer to section 2.5.1.

5.5.4 Selected Airspeed

The selected airspeed bug only appears when the FCS is in IAS mode. The selected airspeed is only adjustable using the GFC 600H.

5.5.5 FCS Navigation

The HSI is used with the NAV or APR modes of the GFC 600H. The GDU 620 provides the FCS with the selected course and lateral/vertical deviations. The GDU 620 is a switching source between the installed navigation sources (e.g GPS/VLOC, 1-2). The navigation source that is displayed on the HSI is sent to the autopilot.

5.5.6 Flight Director Display

If the FCS is decoupled from the flight director, then flight director cues are presented on the PFD. The GFC 605H Mode controller controls the flight director and there are no pilot controls or adjustments available on the G500H.

A dual cue flight director is displayed on the PFD. The G500H system limits the distance the flight director pitch commands may deviate from the aircraft attitude icon. If the Pitch command provided by the FCS is greater than the distance allowed by the G500H, the command bars display at the maximum distance allowed by the G500H. As the aircraft pitch changes to satisfy the command bars, the bars continue to display at the maximum distance from the aircraft attitude icon until the aircraft pitch deviation is within the command display limit.



Figure 5-47 Dual Cue Flight Director

5.5.7 Autopilot Mode Annunciations

The GFC 600H mode annunciations are located at the top of the Primary Flight Display.

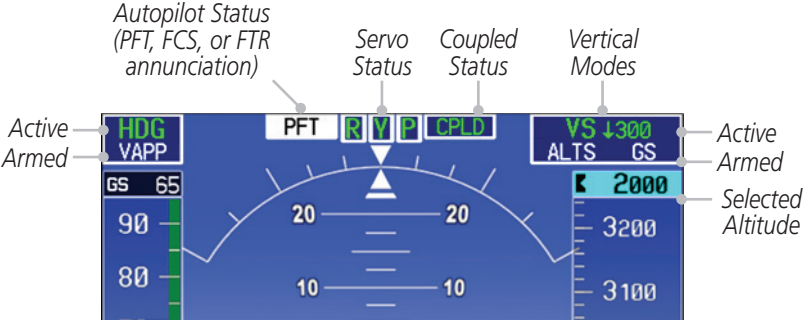


Figure 5-48 HFCS Status Annunciations on Garmin GDU 620 PFD

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

Status	Definition
PFT	Preflight Test in Process
FCS	Preflight Test Failure or FCS System Failure
FTR	Force Trim Release switch is pressed (more than 3 seconds)
YAW	YAW Axis Failure

Table 5-49 Autopilot Status

Status	Definition
RYP	Servo engaged and in detent
RYP	Servo engaged and out of detent. If in Standby (FCS OFF), this indicates an active limit cue.
RYP RYP	- Servo engaged and out of detent (more than 10 seconds) - Flashing inverse video - Keeps flashing until returned to detent
R P R P	- Transition from servos engaged to servos disengaged - Flashing inverse video for 5 seconds

Table 5-50 Servo Status

Foreword
Sec 1 System
Sec 2 PFD
Sec 3 MFD
Sec 4 Hazard Avoidance
Sec 5 Additional Features
Sec 6 Annun. & Alerts
Sec 7 Symbols
Sec 8 Glossary
Appendix A
Index

Status	Definition
	Servos coupled to Flight Director
	Transition from Coupled to Decoupled
	Attitude Hold

Table 5-51 Coupled Status

The mode flashes yellow when there is an abnormal loss of the mode, see *GFC 600H Pilot's Guide* for details. When the autopilot transitions from one mode to another the text flashes green.

Mode	Annunciation
ALT	Altitude Hold
ALTS	Selected Altitude Capture
ATT	Attitude
GP	Glidepath
GS	Glideslope
GSPD	Ground Speed
IAS	Indicated Airspeed
LVL	Level Hold
VS	Vertical Speed

Table 5-52 Vertical Mode Annunciations

Mode	Annunciation
ATT	Attitude
BC	Backcourse Navigation
GPS	• GPS Approach • GPS Navigation
GSPD	Ground Speed
HDG	Heading
LOC	• Localizer Approach • Localizer Navigation
LVL	Level Hold
VAPP	VOR Approach
VOR	VOR Navigation

Table 5-53 Lateral Mode Annunciations

Foreword	
System	Sec 1
PFD	Sec 2
MFD	Sec 3
Hazard Avoidance	Sec 4
Additional Features	Sec 5
Annun. & Alerts	Sec 6
Symbols	Sec 7
Glossary	Sec 8
Appendix A	
Index	

Index	Foreword
Appendix A	
Sec 8 Glossary	
Sec 7 Symbols	
Sec 6 Annun. & Alerts	
Sec 5 Additional Features	
Sec 4 Hazard Avoidance	
Sec 3 MFD	
Sec 2 PFD	
Sec 1 System	

This page intentionally left blank

6 ANNUNCIATIONS AND ALERTS

6.1 Alerts

Alerts are displayed on the MFD and are accessible via the **ALERTS MFD** soft key. When a new advisory is present, the **ALERTS** soft key text changes to **ADVISORY** and flashes until the alerts page is viewed.

The MFD ALERTS page may have two additional soft keys (**TRND/ACK** and **CAPTURE**) which are present when interfaced to an optional ADAS+ Engine Trend Monitor (ETM). Pressing the **TRND/ACK** soft key is equivalent to pressing the **ETM Trend** key for one second. Pressing the **CAPTURE** soft key is equivalent to pressing the **ETM Trend** key for five seconds. Refer to the Rotorcraft Flight Manual and ADAS+ ETM documentation for the system description and operating procedures.

Alert Message	Description	Action
ADC(1/2) ALT EC	• ADC 1 or ADC 2 Altitude Error Correction is unavailable. • Alert is enabled and the ADC is reporting that altitude correction is unavailable.	• Contact a Garmin dealer for service.
ADC(1/2) SERVICE	• ADC 1 or ADC 2 requires service.	• Contact a Garmin dealer for service.
ADC CONFIG	• ADC configuration error.	• Contact a Garmin dealer for service.
AHRS(1/2) CAL	• AHRS 1 or AHRS 2 calibration version error.	• Contact a Garmin dealer for service.

Alert Message	Description	Action
AHRS(1/2) GPS	- AHRS 1 or AHRS 2 is not receiving any GPS information. - AHRS 1 or AHRS 2 is operating exclusively in no-GPS reversionary mode. - AHRS 1 or AHRS 2 is using the backup GPS source. - AHRS 1 or AHRS 2 is not receiving backup GPS information. - Two GPS devices are configured as present and AHRS1 is not receiving GPS data from the backup (2nd) device.	- Verify that navigators are on and have a GPS signal. - Verify that self-test mode is not enabled. - Check the RFMS for limitations. - Contact a Garmin dealer for service.
AHRS(1/2) SRVC	AHRS 1 or AHRS 2 magnetic-field model needs update.	- Upgrade AHRS magnetic field model. - Contact a Garmin dealer for service.

Alert Message	Description	Action
AHRS(1/2) TAS	- AHRS 1 or AHRS 2 is not receiving true airspeed from the ADC. - Displayed heading and attitude data is still valid. - Additional loss of GPS data will cause loss of heading and attitude data.	Contact a Garmin dealer for service.
AHRS CONFIG	AHRS configuration error.	Contact a Garmin dealer for service.
AHRS MAG DB	AHRS/GDU magnetic field model database version mismatch.	Reload MAG DB.
ALT KEY INOP	The ALT key function is disabled. ALT key not available.	
ALT NO COMP	No data from one or more altitude sensors.	Contact a Garmin dealer for service.
ARINC 429 CONFIG	ARINC 429 configuration error.	Contact a Garmin dealer for service.
ARINC 708 CONFIG	ARINC 708 configuration error.	Contact a Garmin dealer for service.
AUD NOT AVAIL	Audio system is not available.	Contact a Garmin dealer for service.
AUD SYS FAIL	Audio system failure.	Contact a Garmin dealer for service.

Foreword

System
Sec 1PFD
Sec 2MFD
Sec 3Hazard
Avoidance
Sec 4Additional
Features
Sec 5Sec 6
Annun.
& AlertsSymbols
Sec 7Glossary
Sec 8

Appendix A

Index

Alert Message	Description	Action
AVTN DB	• Reduced functionality due to missing aviation database. • Datacard may have been ejected.	• Install the missing database. • Reinsert the datacard, if necessary.
CAL LOST	• Calibration data is lost.	• Contact a Garmin dealer for service.
CHT DB ERR	• Datacard's charts database is incomplete. Some charts may be unavailable.	• Reload charts database.
CHT STREAM	• Chart streaming is not available. GDU reverts to the datacard's charts.	
CNFG MISMATCH	• GDU 1-2 airframe configuration settings disagree.	• Contact a Garmin dealer for service.
CNFG MODULE	• GDU configuration module is inoperative.	• Contact a Garmin dealer for service.

Alert Message	Description	Action
DATALINK	• ADS-B fault: UAT receiver. • ADS-B fault: 1090 receiver. • FIS-B weather has failed. • GDL 88H ADS-B Failure. Unable to transmit ADS-B messages. • GDL 88H ADS-B fault. • GDL 88H needs service. • GDL 88H ADS-B is not transmitting position. Check GPS devices. • GDL 88H control panel input fault. Check transponder mode. • GDL 88H ADS-B fault. Pressure altitude source inoperative. • GDL 88H external traffic system inoperative or connection is lost.	• Contact a Garmin dealer for service.

Foreword

System
Sec 1

PFD
Sec 2

MFD
Sec 3

Hazard
Avoidance
Sec 4

Additional
Features
Sec 5

Sec 6
Annun.
& Alerts

Symbols
Sec 7

Glossary
Sec 8

Appendix A

Index

Alert Message	Description	Action
DATALINK (cont)	• GDL 88H configuration module needs service. • GDL 88H is inoperative or connection to GDU is lost. • GDL 88H CSA failure. • GDL 88H external traffic system has a low battery. • GDL 88H external traffic system in standby for more than 60 seconds.	• Contact a Garmin dealer for service.
DATA LOST	• Pilot stored data is lost. All pilot configurable items return to their default settings.	• Confirm the data is lost. • Reconfigure all personal settings.
DB ERR	• Database found on top card.	• Remove database card or move card to bottom slot.
DB SYNC COMPLETE	• Database sync complete. • Restart required to use new databases.	• Restart GDU.
DB SYNC DISABLED	• No database card found to receive databases.	• Contact a Garmin dealer for service.
DB SYNC ERROR	• Not enough space to receive one or more databases.	• Contact a Garmin dealer for service.

Alert Message	Description	Action
DIAG MODE	System is in Diagnostic mode.	
DSCRT CONFIG	Discrete input/output configuration error.	Contact a Garmin dealer for service.
ENG SENSOR UNIT (1/2)	- Configuration error. - Communication with sensors is halted or lost.	Contact a Garmin dealer for service.
ETM CAPTURE	- Engine Trend Monitor data capture. - ADAS+ engine monitoring system is recording trend data.	Refer to the ADAS+ literature.
ETM EXCEED	- Engine Trend Monitor exceedance/advisory. - ADAS+ engine monitoring system is reporting an exceedance or advisory condition.	Refer to the ADAS+ literature.
ETM FAULT	- Engine Trend Monitor needs service. - ADAS+ engine monitoring system is reporting a system fault.	Refer to the ADAS+ literature.

Alert Message	Description	Action
GAD 43	GAD 43 communication is lost.	Contact a Garmin dealer for service.
	Gyro Emulation Type Mismatch fault.	Contact a Garmin dealer for service.
	Yaw Rate Scale Factor Mismatch fault.	Contact a Garmin dealer for service.
	GDU AHRS Monitor fault.	Contact a Garmin dealer for service.
	Pitch Deviation fault.	Contact a Garmin dealer for service.
	Roll Deviation fault.	Contact a Garmin dealer for service.
	Yaw Rate Deviation fault.	Contact a Garmin dealer for service.
	AHRS A429 Attitude Timeout fault.	Contact a Garmin dealer for service.

Alert Message	Description	Action
GAD 43	AHRS A429 Attitude Invalid fault.	Contact a Garmin dealer for service.
	AHRS Pitch Out of Range fault.	Contact a Garmin dealer for service.
	AHRS Attitude Invalid fault.	Contact a Garmin dealer for service.
	AHRS A429 Heading Timeout fault.	Contact a Garmin dealer for service.
	AHRS A429 Heading Invalid fault.	Contact a Garmin dealer for service.
	Power Supply fault.	Contact a Garmin dealer for service.
	AC reference is lost.	Contact a Garmin dealer for service.
	Application SCI integrity fault.	Contact a Garmin dealer for service.
	Configuration integrity fault.	Contact a Garmin dealer for service.
	Calibration integrity fault.	Contact a Garmin dealer for service.
	Unit fault.	Contact a Garmin dealer for service.
GAD 43E CONFIG	- GAD 43e configuration error. - Communication is halted.	Contact a Garmin dealer for service.
GATE MODE	Automated testing is on.	
GDL69	GDL 69 has failed.	Contact a Garmin dealer for service.

Alert Message	Description	Action
GEO LIMITS	- AHRS 1 is too far north or south. No magnetic heading provided. - Operation in extreme north latitudes has rendered the heading data unreliable.	- Return to a geographic position within the reliable operating area, or use an alternate means of navigation. - Check the RFMS for limitations.
GPS(1/2) FAIL	Communication with GPS 1 or GPS 2 is lost.	Use an alternate navigation source.
GPS(1/2) PPS FAIL	Timing data from GPS 1 or GPS 2 is lost.	Contact a Garmin dealer for service.
GSR FAIL	GSR has failed.	Contact a Garmin dealer for service.
GWX CONFIG	- GWX configuration error. - Configuration is required.	Contact a Garmin dealer for service.
GWX SERVICE	GWX requires service.	Contact a Garmin dealer for service.
HDG FAULT	- AHRS 1 or AHRS 2 in no-magnetometer reversionary mode. - Heading fault occurs on the AHRS. - Heading data is unreliable.	- Check RFMS for limitations. - Use a compass or other course information. - Contact a Garmin dealer for service.

Foreword

System
Sec 1PFD
Sec 2MFD
Sec 3Hazard
Avoidance
Sec 4Additional
Features
Sec 5Annun.
& Alerts
Sec 6Symbols
Sec 7Glossary
Sec 8

Appendix A

Index

Alert Message	Description	Action
HDG LOST	• HDG features are disabled or defaulted to GPS1 TRK. • GDU is in reversionary track-based mode.	
HTAWS N/A	• External HTAWS is not available. Internal TERRAIN-HSVT alerting is enabled. • External TAWS configuration mismatch.	• Contact a Garmin dealer for service.
IAS NO COMP	• No data from one or more airspeed sensors.	• Contact a Garmin dealer for service.
LIMIT CUE DISABLED	• Limit cueing is not available. Autopilot is unable to support functionality. • Pilot has turned the function off.	• Informational only. No action necessary.
LOWSPD	• Underspeed Protection is active.	
<LRU> CAL	• Error in the calibration of the indicated LRU.	• Calibration service required. Contact a Garmin dealer for service.
<LRU> CONFIG	• Error in the configuration of the indicated LRU.	• Config service required. Contact a Garmin dealer for service.

Alert Message	Description	Action
<LRU> COOLING	The indicated LRU has insufficient cooling. Display is automatically dimmed to reduce power usage.	Contact a Garmin dealer for service.
<LRU> DB ERR	Error exists with the indicated LRU database.	Replace or update database.
<LRU> KEYSTK	The indicated LRU key is stuck.	Contact a Garmin dealer for service.
<LRU> SERVICE	The indicated LRU requires service.	Contact a Garmin dealer for service.
<LRU> VOLTAGE	The indicated LRU has low voltage. Display is automatically dimmed to reduce power usage.	Contact a Garmin dealer for service.
MANIFEST	LRU software mismatch. Communication is halted.	Contact a Garmin dealer for service.
MAXSPD	Overspeed Protection is active.	
NAV(1/2)	- Communication with NAV 1 or NAV 2 is lost. - No data from the indicated navigation receiver.	Switch to alternate form of navigation (GPS or otherwise), if available.
NO RADAR DATA	No data is being sent to the GDU.	Contact a Garmin dealer for service.

Foreword

System
Sec 1PFD
Sec 2MFD
Sec 3Sec 4
Hazard
AvoidanceSec 5
Additional
FeaturesSec 6
Annun.
& AlertsSec 7
SymbolsSec 8
Glossary

Appendix A

Index

Alert Message	Description	Action
PIT NO COMP	No data from one or more pitch attitude sensors.	Contact a Garmin dealer for service.
PREV EXCEED	- Previous Engine Trend Monitor exceedance. - ADAS+ engine trend monitor is reporting a previous exceedance.	Refer to the ADAS+ literature.
RADAR CONTROLS DISAGREE	Data does not match for a duration of 15 seconds or longer.	Contact a Garmin dealer for service.
REGISTER GFDS	Data services are inoperative. GFDS is not registered.	Register with GFDS.
ROL NO COMP	No data from one or more roll attitude sensors.	Contact a Garmin dealer for service.
RS-232 CONFIG	RS-232 configuration error.	Contact a Garmin dealer for service.
RS-485 CONFIG	RS-485 configuration error.	Contact a Garmin dealer for service.
SD CARD 1	Top SD card disabled due to errors.	Replace card.
SD CARD 2	Bottom SD card disabled due to errors.	Replace card.
SIMULATOR	Simulator mode is active. Do not use for navigation.	

Alert Message	Description	Action	
STORMSCOPE	Stormscope has failed or connection is lost.	Contact a Garmin dealer for service.	Foreword
SVT DISABLED	- Outside of terrain database coverage area. - Terrain database resolution is too low.	- Repeat steps to reactivate SVT with the appropriate PFD soft keys. - Install 9 arc-second database (GDU 620 SW v6.21 or earlier) or 4.9 arc second database (GDU 620 SW v7.00 or later).	System Sec 1
SW MISMATCH	GDU software version mismatch. No GDU crossfill.	Contact a Garmin dealer for service.	PFD Sec 2
TDB	Airframe does not support Terrain database.		MFD Sec 3
TERRAIN DSP	Terrain/obstacle database error.	Update database.	Avoidance Sec 4
TRAFFIC	- ADS-B In traffic alerting has failed. - ADS-B In traffic has failed. - TAS/TCAS has been in standby for more than 60 seconds or has failed. - Traffic device is inoperative or connection to GDU is lost.	Contact a Garmin dealer for service.	Additional Features Sec 5
TRAFFIC CONFIG	ADS-B traffic data does not match configuration.	Contact a Garmin dealer for service.	Annun. & Alerts Sec 6
			Symbols Sec 7
			Glossary Sec 8
			Appendix A
			Index


Alert Message	Description	Action
TRAFFIC FAIL	- Traffic device has failed. - Traffic data will no longer be displayed.	Contact a Garmin dealer for service.
TRAFFIC STDBY	Traffic is in Standby mode while airborne.	Check traffic system controls on the MFD Traffic Map page or traffic system.
TRK LOST	Heading and track from active GPS is lost. HSI is using secondary GPS track.	
TRK TRAFFIC	Heading is lost. Traffic is now based on track.	
WX ALERT	Possible severe weather ahead.	Check weather radar.
WX RADAR	Communication with weather radar is lost.	Contact a Garmin dealer for service.
WX RDR SERVICE	Weather radar requires service.	Contact a Garmin dealer for service.
WXR INPUT FAULT	Weather radar is not receiving one or more inputs.	Contact a Garmin dealer for service.
XPDR (1/2)	- GTX 1 or GTX 2 requires service. - GTX 1 or GTX 2 is inoperative or connection to GDU is lost.	Contact a Garmin dealer for service.

Table 6-1 Alert Messages


6.2 System Status

The System Status page of Aux mode shows the status, serial number, and software version of LRUs and the date of databases. There are no menu pages. In the LRU Status column, a green check means the unit is present and operating properly, while a red “X” indicates an absence or failure.


Foreword
System
Sec 1
PFD
Sec 2
MFD
Sec 3
Avoidance
Sec 4
Hazard
Additional
Features
Sec 5
Sec 6
Annun.
& Alerts
Sec 7
Symbols
Sec 8
Glossary
Appendix A
Index

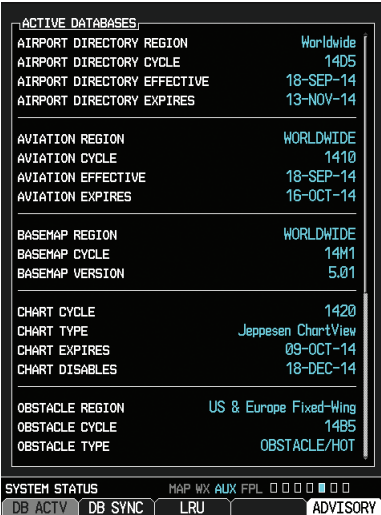

Active Databases

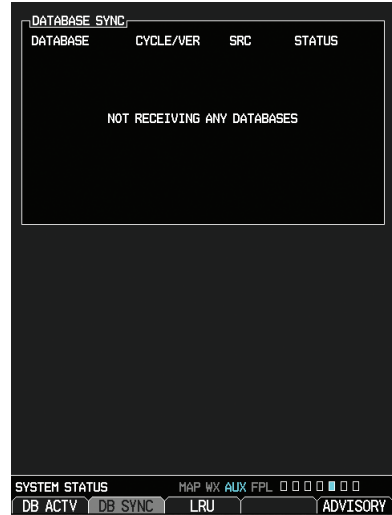

Database Sync

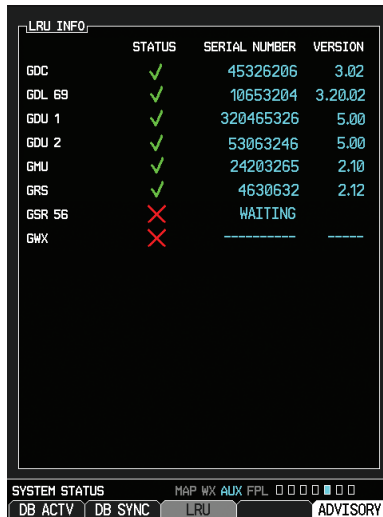

System LRUs

Figure 6-2 System Status Displays

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

**Sec 6
Annun.
& Alerts**

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

This page intentionally left blank

7 SYMBOLS

The following tables describe the symbols that are found on the MFD Map displays.

7.1 Map Page Symbols

Symbol	Description
	Unknown Airport
	Non-towered, Non-serviced Airport
	Towered, Non-serviced Airport
	Non-towered, Serviced Airport
	Towered, Serviced Airport
	Soft Surface, Serviced Airport
	Soft Surface, Non-serviced Airport
	Private Airport
	Heliport
	Intersection
	LOM (compass locator at outer marker)
	NDB (Non-directional Radio Beacon)
	VOR
	VOR/DME
	ILS/DME or DME-only
	VORTAC
	TACAN
	VRP (Visual Reporting Point)
	User Airport
	User Waypoint

Table 7-1 Map Page Symbols

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

Foreword

Sec 1 System

Sec 2 PFD

Sec 3 MFD

Sec 4 Hazard Avoidance

Sec 5 Additional Features

Sec 6 Annun. & Alerts

Sec 7 Symbols

Sec 8 Glossary

Appendix A

Index

7.2 SafeTaxi Symbols

 
Symbol	Description
	Helipad
	Airport Beacon
	Under Construction Zones
	Designated Water Areas

Table 7-2 SafeTaxi Symbols

7.3 Traffic Symbols

Symbol	Description (Highest to Lowest Priority)
	Traffic Advisory (TA), In Range
	Traffic Advisory (TA), Out of Range
	Proximate Advisory (PA)
	Other Traffic

Table 7-3 Traffic Symbols

Symbol	Description
	Basic Non-Directional Traffic
	Basic Directional Traffic
	Basic Off-scale Selected Traffic
	Proximate Non-Directional Traffic
	Proximate Directional Traffic
	Proximate Off-scale Selected Traffic
	Non-Directional Alerted Traffic
	Off-Scale Non-Directional Alerted Traffic
	Directional Alerted Traffic
	Off-Scale Directional Alerted Traffic
	Non-Directional Surface Vehicle
	Directional Surface Vehicle

Table 7-4 ADS-B Traffic Symbols



NOTE: Color of basic and proximate traffic is dependent on airborne/ on-ground status of target (target is brown when on the ground, see the surface vehicles).

7.4 Basemap Symbols

Symbol	Description
	Interstate Highway
	State Highway
	US Highway
	National Highway - 2-digit drawn inside
	Small City or Town
	Medium City
	Large City

Table 7-5 Basemap Symbols

7.5 Map Tool Bar Symbols

Symbol	Description
	Terrain Proximity Enabled and Available Indicator
	Terrain Proximity Enabled and Not Available Indicator
	Point Obstacle Enabled and Available Indicator (Software version 5.12 and later)
	Point Obstacle Enabled and Not Available Indicator (Software version 5.12 and later)
	Wire Obstacles Enabled and Available Indicator (Software version 5.12 and later)
	Wire Obstacles Enabled and Not Available Indicator (Software version 5.12 and later)
	StormScope
	StormScope Enabled and Not Available Indicator
	Ownship is receiving TIS-B and ADS-R services (Software version 5.11 or earlier)
	Possible incomplete traffic picture – ownship is not receiving one (or both) of the TIS-B or ADS-R services (Software version 5.11 or earlier)
	Traffic Enabled and Available Indicator
	Traffic Enabled and Not Available Indicator

Table 7-6 Map Tool Bar Symbols

Foreword

System
Sec 1

PFD
Sec 2

MFD
Sec 3

Avoidance
Sec 4
Hazard

Additional
Features
Sec 5

Annun.
& Alerts
Sec 6

Symbols
Sec 7

Glossary
Sec 8

Appendix A

Index

7.6 Ownship Symbols

Symbol	Description
	2-Blade Rotorcraft
	3-Blade Rotorcraft
	4-Blade Rotorcraft

Table 7-7 Ownship Symbols

7.7 Miscellaneous Symbols

Symbol	Description
	Arrow
	Default Map Cursor
	Measuring Cursor
	MFD Wind Vector (w/ valid GPS solution)
	PFD Wind Vector styles
	Parallel Track Waypoint
	Restricted/Prohibited/Warning/Alert
	TFR (Temporary Flight Restrictions)
	MOA
	Class B Airspace
	Class C Airspace
	Class D Airspace
	Airspace Altitude Label (Upper/Lower Limits)

Table 7-8 Miscellaneous Symbols

8 GLOSSARY

ACT, ACTV	active, activate	Foreword
ADC	Air Data Computer	
ADF	Automatic Direction Finder	
ADI	Attitude Direction Indicator	
ADS-B	Automatic Dependent Surveillance - Broadcast	System Sec 1
AFF	Automatic Flight Following	
AGL	Above Ground Level	
AHRS	Attitude and Heading Reference System	PFD Sec 2
AIM	Airman's Information Manual	
AIRMET	Airman's Meteorological Information	
ALT	altitude	MFD Sec 3
AP	autopilot	
APR	approach	
APT	airport, aerodrome	
ARINC	Aeronautical Radio Incorporated	Hazard Sec 4
ARSPC	airspace	Avoidance
ARTCC	Air Route Traffic Control Center	
AS	airspeed	
ASOS	Automated Surface Observing System	Additional Sec 5
ATC	Air Traffic Control	Features
ATCRBS	ATC Radar Beacon System	
ATIS	Automatic Terminal Information Service	
AUX	auxiliary	Annun. & Alerts Sec 6
AWOS	Automated Weather Observing System	
BARO	barometric setting	Symbols Sec 7
BC	backcourse	
Bearing	The compass direction from the present position to a destination waypoint	
BRG	bearing	Glossary Sec 8
C	center runway	
°C	degrees Celsius	
CDI	Course Deviation Indicator	Appendix A
CHNL	channel	
CLD	cloud	
CLR	clear	
CONFIG	configuration	Index
Course	The line between two points to be followed by the aircraft	

		Crosstrack Error	The distance the aircraft is off a desired course in either direction, left or right
Sec 1 System	Foreword	CRS	course
		CRSR	cursor
		CTA	Control Area
		CTRL	control
		CUM	The total of all legs in a flight plan.
Sec 2 PFD		D ALT	density altitude
		DB, DBASE	database
		DCLTR, DECLTR	declutter
		deg	degree
Sec 3 MFD		DEP	departure
		Desired Track (DTK)	The desired course between the active "from" and "to" waypoints
Sec 4 Hazard Avoidance		DEST	destination
		DFLT	default
		DIS	distance
		Distance	The 'great circle' distance from the present position to a destination waypoint
Sec 5 Additional Features		DME	Distance Measuring Equipment
		DP	Departure Procedure
		DPRT	departure
Sec 6 Annun. & Alerts		DSBL	disabled
		DTK	Desired Track
Sec 7 Symbols		EDR	Excessive Descent Rate
		ELEV	elevation
		EMI	Electromagnetic Interference
		ENR	en route
Sec 8 Glossary		En Route Safe Altitude	The recommended minimum altitude within ten miles left or right of the desired course on an active flight plan or direct-to
Index	Appendix A	ENT	enter
		ERR	error
		ESA	En route Safe Altitude
		ETA	Estimated Time of Arrival
		ETE	Estimated Time En Route
		°F	degrees Fahrenheit
		FAA	Federal Aviation Administration
		FCC	Federal Communication Commission

FCST	forecast	
FD	flight director	
FIS-B	Flight Information Services-Broadcast	Foreword
FISDL	Flight Information Service Data Link	
FLTA	Forward Looking Terrain Avoidance	
FPL	flight plan	System
FREQ	frequency	Sec 1
FRZ	freezing	
FSS	Flight Service Station	
ft	foot/feet	PFD Sec 2
G/S, GS	glideslope	
GDC	Garmin Air Data Computer	
GDL	Garmin Satellite Data Link	MFD Sec 3
GDU	Garmin Display Unit	
GEO	geographic	
GLS	Global Navigation Satellite Landing System	Avoidance Sec 4
GMA	Garmin Audio Panel System	
GMT	Greenwich Mean Time	
GMU	Garmin Magnetometer Unit	
GPS	Global Positioning System	Additional Sec 5
GPSS	GPS Roll Steering	
Ground Speed	The velocity that the aircraft is travelling relative to a ground position	
Ground Track	<i>see Track</i>	Annun. & Alerts Sec 6
GRS	Garmin Reference System	
GS	Ground Speed	
GTX	Garmin Transponder	Symbols Sec 7
HDG	heading	
Heading	The direction an aircraft is pointed, based upon indications from a magnetic compass or a properly set directional gyro	Glossary Sec 8
HFOM	Horizontal Figure of Merit	
Hg	mercury	
hPa	hectopascal	Appendix A
HPL	Horizontal Protection Level	
HSDB	High-Speed Data Bus	
HSI	Horizontal Situation Indicator	
Hz	Hertz	Index

	IAF	Initial Approach Fix
	ICA0	International Civil Aviation Organization
Foreword	IFR	Instrument Flight Rules
	IGRF	International Geomagnetic Reference Field
	ILS	Instrument Landing System
Sec 1	IMC	Instrument Meteorological Conditions
System	IOI	Imminent Obstacle Impact
	INFO	information
	in HG	inches of mercury
Sec 2	INT	intersection(s)
PFD	INTEG	integrity (RAIM unavailable)
	ITI	Imminent Terrain Impact
Sec 3	L	left, left runway
MFD	LAT	latitude
	LCD	Liquid Crystal Display
Sec 4	LCL	local
Hazard	LED	Light Emitting Diode
Avoidance	Leg	The portion of a flight plan between two waypoints
	LIFR	Low Instrument Flight Rules
Sec 5	LNAV	Lateral Navigation
Additional	LOC	localizer
Features	LOI	loss of integrity (GPS)
	LON	longitude
Sec 6	LPV	Localizer Performance with Vertical guidance
Annun.	LRU	Line Replacement Unit
& Alerts	LT	left
	LTNG	lightning
Sec 7		
Symbols		
	MAG	Magnetic
Sec 8	MAG VAR	Magnetic Variation
Glossary	MapMX	A proprietary data format used to forward navigation information from the Garmin GPS units to the GDU 620
Appendix A	MAX	maximum
	MAXSPD	maximum speed (overspeed)
	MDA	barometric minimum descent altitude
	METAR	Aviation Routine Weather Report
Index	MFD	Multi Function Display
	MIN	minimum

Minimum Safe Altitude	Uses Grid MORAs to determine a safe altitude within ten miles of the aircraft present position	
MKR	marker beacon	Foreword
MOA	Military Operations Area	
MOV	movement	
mpm	meters per minute	
MSA	Minimum Safe Altitude	System Sec 1
MSG	message	
MSL	Mean Sea Level	
MT	meter	PFD Sec 2
mV	millivolt(s)	
MVFR	Marginal Visual Flight Rules	
NAV	navigation	MFD Sec 3
NAVAID	NAVigation AID	
NCR	Negative Climb Rate	
NDB	Non-Directional Beacon	
NEXRAD	Next Generation Radar	Hazard Avoidance Sec 4
OAT	Outside Air Temperature	
OBS	Omni Bearing Selector	Additional Features Sec 5
PA	Proximity Advisory	
PC	personal computer	
PDA	Premature Descent Alert	
PFD	Primary Flight Display	
P. POS	Present Position	
PTK	parallel track	Annun. & Alerts Sec 6
QTY	quantity	Symbols Sec 7
R	right, right runway	
RAIM	Receiver Autonomous Integrity Monitoring	
RAM	random access memory	
REF	reference	
REQ	required	
REV	reverse, revision, revise	
RFM	Rotorcraft Flight Manual	
RFMS	Rotorcraft Flight Manual Supplement	
RMI	Radio Magnetic Indicator	
RNG	range	Index

Foreword	RNWWY	runway
	ROC	Reduced Required Obstacle Clearance
	RT	right
	RTC	Reduced Required Terrain Clearance
Sec 1 System	SBAS	Satellite-Based Augmentation System
	SCIT	Storm Cell Identification and Tracking
	SD	Secure Digital
Sec 2 PFD	SFC	surface
	SIAP	Standard Instrument Approach Procedures
	SID	Standard Instrument Departure
Sec 3 MFD	SIGMET	Significant Meteorological Information
	SLP/SKD	slip/skid
	SMBL	symbol
Sec 4 Hazard Avoidance	SPD	speed
	SRVC, SVC	service
	STAR	Standard Terminal Arrival Route
Sec 5 Additional Features	STATS	statistics
	STBY	standby
	STD	standard
Sec 6 Annun. & Alerts	SUA	Special Use Airspace
	SUSP	suspend
	SVT	Synthetic Vision
Sec 7 Symbols	SW	software
	SYS	system
	T	true
Sec 8 Glossary	TA	Traffic Advisory
	TACAN	Tactical Air Navigation System
	TAF	Terminal Aerodrome Forecast
Appendix A	TAS	True Airspeed
	TAS	Traffic Advisory System
	TAT	Total Air Temperature
Index	TAWS	Terrain Awareness and Warning System
	TCA	Terminal Control Area
	TCAS	Traffic Collision Avoidance System
	TEMP	temperature
	TERM	terminal
	TFR	Temporary Flight Restriction
	T HDG	True Heading
	TIS	Traffic Information System

TMA	Terminal Maneuvering Area	
Topo	topographic	
Track	Direction of aircraft movement relative to a ground position; also 'Ground Track'	Foreword
TRK	track	
TRSA	Terminal Radar Service Area	System Sec 1
UNAVAIL	unavailable	
USR	user	
UTC	Coordinated Universal Time	PFD Sec 2
UTM/UPS	Universal Transverse Mercator/ Universal Polar Stereographic Grid	
V, Vspeed	velocity (airspeed)	MFD Sec 3
VAR	variation	
VFR	Visual Flight Rules	
VHF	Very High Frequency	Avoidance Sec 4
VLOC	VOR/Localizer Receiver	
VMC	Visual Meteorological Conditions	
VNAV, VNV	vertical navigation	Additional Features Sec 5
VOR	VHF Omni-directional Range	
VORTAC	very high frequency omnidirectional range station and tactical air navigation	
VS	Vertical speed	Annun. & Alerts Sec 6
VSI	Vertical Speed Indicator	
WAAS	Wide Area Augmentation System	
WGS-84	World Geodetic System - 1984	Symbols Sec 7
WPT	waypoint(s)	
WX	weather	
XPDR	transponder	
XTK	cross-track	Glossary Sec 8

This page intentionally left blank

A.1 SD Card Use and Databases

The G500H System uses Secure Digital (SD) cards to load and store various types of data. For basic flight operations, SD cards are required for database storage as well as database updates.

SD cards are required for Terrain, Obstacle, FliteChart, SafeTaxi, and ChartView, and Aviation database storage as well as Aviation, Jeppesen aviation and ChartView database updates. For database updates, the database update datacard must be inserted in the top SD card slot while the appropriate database card is located in the lower SD card slot. ChartView is an optional feature that requires enablement by a Garmin dealer.

The unit will generate an error in the event that a database SD card is inserted into the top slot. Aviation databases can be loaded from an SD card in either slot. If the aviation database on the SD card is more than two cycles expired, and the pilot declines the system's prompt to update the aviation database, the system will provide a second prompt that allows the pilot to suppress future prompts to update to that particular aviation database on that SD card.



NOTE: Ensure the GDU 620 is powered off before inserting or removing an SD card.



NOTE: Refer to Appendix A.1.1 for instructions on updating the aviation database.

Inserting an SD Card

1. Insert the SD card in the SD card slot (the front of the card should be flush with the face of the display bezel).
2. To eject the card, gently press on the SD card to release the spring latch.

Database Name	Function	Where Stored	Update Cycle	Provider	Notes
Aviation	Airport, NAVAID, Waypoint, and Airspace information	Internal GDU 620 memory or SD card	28 days (on Thursdays)	fly.garmin.com	Updates installed via SD card and copied into internal memory
IGRF model	AHRS magnetic variation model	Internal AHRS memory	5 years	fly.garmin.com	Included with Aviation database
SafeTaxi	Airport surface diagrams	SD card	56 days (on Thursdays)	fly.garmin.com	
Terrain	Topographic map, SVT, Terrain/TAWS	SD card	As required	fly.garmin.com	9 arc-second or higher resolution required for SVT
Obstacle	Obstacle information for map, SVT, and TAWS	SD card	56 days (on Thursdays)	fly.garmin.com	
Basemap	Boundary and road information	Internal Memory or SD card	As required	fly.garmin.com	
Airport Directory	Airport facility and FBO information	SD card	56 days	fly.garmin.com	Database may be available in different versions. Update cycle and content may vary.
FliteCharts	FAA-published terminal procedures	SD card	28 days (on Thursdays)	fly.garmin.com	Disables 180 days after expiration date.
ChartView	Jeppesen terminal procedures	SD card	14 days (on Fridays)	Contact Jeppesen	Optional feature that requires Garmin dealer enablement. Disables 70 days after expiration date.

Table A-1 Database List


A.1.1 Aviation Databases

The aviation database is updated on a 28 day cycle. Aviation database updates are provided by Garmin and may be downloaded from the Garmin website fly.garmin.com onto a Garmin provided Supplemental datacard. Contact Garmin at fly.garmin.com for navigation database updates and update kits. The Aviation database is stored on an SD card. This datacard is used to transfer the database from the top SD card slot to the datacard located in the bottom SD card slot. Removal of the datacard in the bottom SD card slot is not required.

The optional ChartView database is updated on a 14 day cycle. The ChartView database is provided directly from Jeppesen. ChartView is an optional feature that requires enablement by a Garmin dealer. Contact Jeppesen (www.jeppesen.com) for ChartView subscription and update information.

Updating the Aviation Database

1. With the G500H System OFF, insert the SD card containing the aviation database update into the upper card slot of the GDU 620 to be updated (label of SD card should face up).
2. Turn the G500H System ON.
3. Verify the correct update cycle is loaded during power-up. Press the **ENT** key to continue or the **CLR** key to cancel loading.

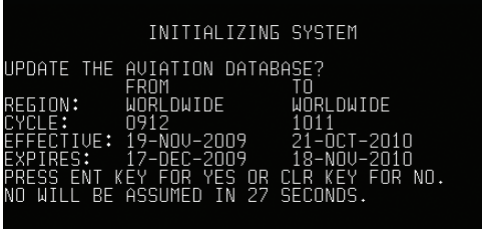

```
INITIALIZING SYSTEM
UPDATE THE AVIATION DATABASE?
FROM      TO
REGION:   WORLDWIDE   WORLDWIDE
CYCLE:    0912         1011
EFFECTIVE: 19-NOV-2009 21-OCT-2010
EXPIRES:  17-DEC-2009 18-NOV-2010
PRESS ENT KEY FOR YES OR CLR KEY FOR NO.
NO WILL BE ASSUMED IN 27 SECONDS.
```

Figure A-2 Database Initialization Display

Foreword

System Sec 1

PFD Sec 2

MFD Sec 3

Hazard Avoidance Sec 4

Additional Features Sec 5

Annun. & Alerts Sec 6

Symbols Sec 7

Glossary Sec 8

Appendix A

Index

4. A notice on the display will indicate successful updating of the database.

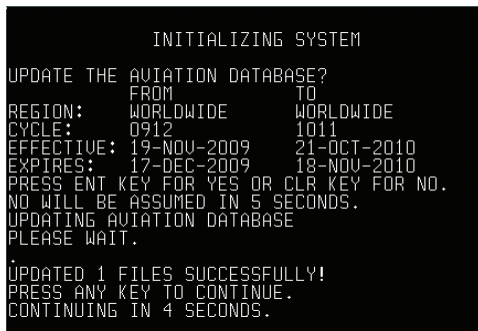


Figure A-3 Database Loading Completed

5. The following display will show the databases and their current status.

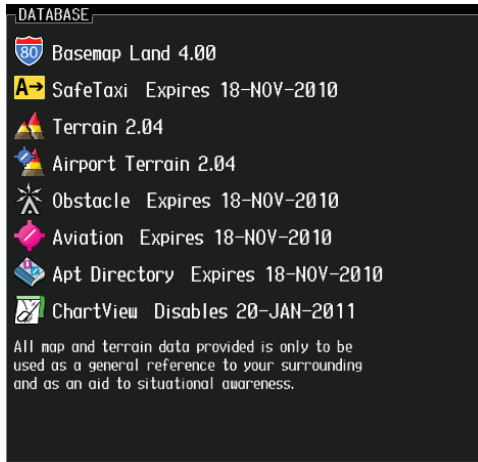


Figure A-4 Database Information on the Splash Screen

6. Use the large **MFD** knob to select the AUX page group and then small **MFD** knob to reach the System Status Page.
7. Press the **DBASE** soft key to place the cursor in the "DATABASE" window.
8. Turn the small **MFD** knob to scroll through the list and check that all databases are current and there are no errors. If a database is highlighted in yellow, it is either expired or the G500H can not determine the date.
9. Power down the GDU 620.

A.1.2 Garmin Databases



WARNING: *The data contained in the terrain and obstacle databases comes from government agencies. Garmin accurately processes and cross-validates the data, but cannot guarantee the accuracy and completeness of the data.*

The following GDU 620 databases are stored on Supplemental Data Cards provided by Garmin:

- Aviation – The aviation database contains airport, airspace, NAVAID, and waypoint information. This database is updated on a 28 day cycle.
- Terrain – The terrain database contains terrain mapping data. This database is updated periodically and has no expiration date.
- Obstacle – The obstacles database contains data for obstacles, such as towers, that pose a potential hazard to aircraft. Obstacles 200 feet and higher are included in the obstacle database. The rotorcraft database includes all reported obstacles regardless of height. It is very important to note that not all obstacles are necessarily charted and therefore may not be contained in the obstacle database. This database is updated on a 56-day cycle. Obstacles will still be shown after the database has expired. Several obstacle database options are available. Obstacle databases created for GTN software version 5.10 or later include all power lines or only HOT lines depending on the type of obstacle database installed. Hazardous Obstacle Transmission (HOT) Lines are power lines that are co-located with other FAA-identified obstacles. The installed obstacle database type can be verified on the System Status page. Power line data is available for the contiguous United States as well as small parts of Canada and Mexico.
- SafeTaxi – The SafeTaxi database contains detailed airport diagrams for selected airports. These diagrams aid in following ground control instructions by accurately displaying the aircraft position on the map in relation to taxiways, ramps, runways, terminals, and services. This database is updated on a 56-day cycle. SafeTaxi will still be shown after it has expired.
- FliteCharts – The FliteCharts database contains procedure charts for the United States only. This database is updated on a 28-day cycle. If not updated within 180 days of the expiration date, FliteCharts no longer functions.

Foreword

System
Sec 1

PFD
Sec 2

MFD
Sec 3

Avoidance
Hazard
Sec 4

Additional
Features
Sec 5

Annun.
& Alerts
Sec 6

Symbols
Sec 7

Glossary
Sec 8

Appendix A

Index

- **Airport Directory (optional)** – The airport directory database contains airport facility and FBO information. This database is optional and “N/A” will be displayed in white text on the startup screen if the database is not installed. This database may be available in multiple versions with varying update cycles and/or content.

Since these databases are not stored internally in the GDU 620, a Supplemental Data Card containing identical database versions must be kept in each display unit for dual installations. After subscribing to the desired database product, the database product will need to be downloaded to a Supplemental Data Card. Insert the Supplemental Data Card into the lower card slot shown in Figure A-4. The Supplemental Data Card should not be removed except to update the databases stored on the card. The upper slot is typically used for updating the navigation database and is then normally left open. The Navigation card may be inserted in either slot, but should use the same slot each time.

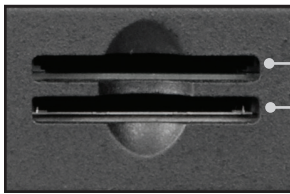


Figure A-5 SD Card Database Location

The Garmin databases can be updated by following the instructions detailed in the “Navigation Databases” section of the Garmin web site (fly.garmin.com). Once the updated files have been downloaded from the web site, a PC equipped with an appropriate SD card reader is used to unpack and program the new databases onto the existing Supplemental Data Cards. The following equipment is required to perform the update:

- Windows-compatible PC computer (Windows 2000, XP, Vista, or Windows 7 recommended)
- SanDisk SD Card Reader, P/Ns SDDR-93 or SDDR-99 or equivalent card reader
- Updated database obtained from the Garmin web site
- Existing Supplemental Database SD Card (P/N 010-00769-xx)

It may be necessary to have the system configured by a Garmin authorized service facility in order to use certain database features.

Updating Garmin Databases

1. Download the data to the data cards from the appropriate web site.
2. Insert the Database SD card in an empty card slot of the GDU 620. The SD card containing the Aviation, ChartView, FliteCharts, SafeTaxi, or any other database must be inserted into the lower slot on the GDU 620.
3. Apply power to the G500H System. View the MFD power-up splash screen. Check that the databases are initialized and displayed on the splash screen. When updating the terrain and FliteCharts databases, an “in progress” message may be seen. If this message is present, wait for the system to finish loading before proceeding. Some databases can take up to 15 minutes to update.
4. Acknowledge the Power-up Page agreement by pressing the **ENT** key or the right-most soft key. If a database is highlighted in yellow, it is either expired or the G500H can not determine the date.



Figure A-6 Database Information on the Splash Screen

5. Use the large **MFD** knob to select the AUX page group and then the small **MFD** knob to reach the System Status Page.
6. Press the **DBASE** soft key to place the cursor in the “DATABASE” window.
7. Turn the small **MFD** knob to scroll through the list and check that all databases are current and there are no errors.
8. Power down the GDU 620.

Foreword

System Sec 1

PFD Sec 2

MFD Sec 3

Avoidance Sec 4
Hazard

Additional Sec 5
Features

Annun. Sec 6
& Alerts

Symbols Sec 7

Glossary Sec 8

Appendix A

Index

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

This page intentionally left blank

INDEX

Symbols

1-2 key 2-3

A

Activating XM 5-22
 Active flight plan 2-18, 3-1, 3-65, 3-66, 3-67
 Additional features 5-1
 ADF 1-1, 1-2, 2-2, 2-4, 2-32, 8-1
 ADIZ 3-5, 3-10, 3-24
 ADS-B 4-38
 AFF
 Age 4-47
 AHRS , 1-2, 1-4, 3-34, 6-2, 6-8, 6-10,
 Aircraft symbol 2-8, 2-21, 3-3
 Air Data Computer 1-4
 AIREP 4-101, 4-119
 AIRMETs 4-48, 4-63, 4-99, 4-116
 Airport beacon 7-2
 Airport diagram 5-3, 5-4, A-5
 Airport Directory 3-74, A-6
 Airport signs 2-5, 5-35
 Airspace labels 3-25
 Airspeed Indicator 1-23, 2-6, 2-7
 Airspeed reference 2-8, 1-23, 3-29,
 Airspeed tape 2-7, 2-20, 3-29,
 Airspeed trend vector 2-6
 Air temperature 1-4, 1-8, 2-1
 Airways 3-2, 3-5, 3-10, 3-24
 Alerts 2-15, 2-18, 3-67, 4-19, 4-32, 4-35,
 6-1
 Altimeter i, 2-13, 2-16
 Altitude 1-1, 1-4, 1-17, 1-24, 2-15, 2-18,
 3-27, 4-4, 3-34, 3-36, 3-67,
 Altitude alerter 2-15, 5-15
 Altitude alerting 2-15
 Altitude Bug 1-17, 2-1, 2-13
 Altitude Display Mode 4-24, 4-25
 Altitude minimums 2-18, 3-67, 5-15
 Altitude select 1-17
 Altitude trend vector 2-13

Annunciations 1-13, 2-15, 2-18, 4-19,
 4-27, 4-28, 4-36, 4-38, 5-7, 6-1
 Answering a phone call 3-64
 Antenna 4-110
 Approaches 2-29, 8-1, 5-3, 5-4, 5-10,
 5-13,
 Apt Dir 3-74
 AP Test 2-3
 APTSIGNS 2-5
 Arc 4-7, 4-14
 Arrivals 5-3, 5-4
 Attitude 1-1, 1-4, 1-13, 2-8, 2-11, 6-8,
 8-1
 Attitude and Heading Reference System
 (AHRS) 1-4, 1-5, 1-13, 6-3
 Attitude Hold (ATT) 1-12
 Attitude Indicator 2-8, 2-9
 Attitude Sync 2-37
 ATT Sync 2-37
 Aural message 4-20
 Automatic flight following 3-56
 Autopilot 1-1, 2-3
 Autopilot (AP) 1-12
 Auto-slewing 2-29
 Auto zoom 3-9, 3-12
 Aux mode 3-27
 AUX - System Status Page 5-21
 Aviation map data 3-22

B

Backcourse 2-27, 2-29
 Backlighting 1-25
 Baro-corrected altitude 2-17
 Barometric minimum 2-18
 Barometric pressure 2-16, 1-19, 1-24,
 3-37,
 Basemap symbols 7-4, 7-6
 Beacon 7-1, 7-2
 Bearing information 2-32, 2-33
 Bearing line 2-33
 Bearing Pointers 2-26, 2-32
 Best glide 2-8
 Bezel keys 1-17, 1-19
 BRG 1-2 2-4

Foreword

System Sec 1

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

Brightness 1-23, 1-25, 3-27, 3-28,

C

Call suppression 3-58
 Canadian Nexrad 4-57
 Cautions iii, 3-5, 4-20, 3-37, 4-20,
 CDI 1-17, 1-23, 2-2, 2-3, 2-21, 2-22,
 2-24, 2-25, 2-26, 3-27, 2-29,
 3-33, 3-34, 3-65,
 CDI source 2-25, 2-29, 2-33
 CDI/VDI Preview 1-23, 3-27
 Cell movement 3-18, 3-19, 4-48, 4-75,
 4-76
 Channel 1-10, 3-40, 5-25, 5-26, 5-27,
 5-29
 Chart category 3-69, 5-8
 Charts 3-75, 5-1, 5-2, 5-4, 5-17
 ChartView A-1, 5-1, 5-2, 5-3, A-3, A-7,
 ChartView database 5-3, 5-4, A-1, A-3
 ChartView subscription A-3
 City 3-5, 3-68, 3-72, 4-48
 City forecast 4-48, 4-70, 4-71
 Class B airspace 3-5, 3-23, 7-7
 Class C airspace 3-5, 3-23, 7-7
 Class D airspace 3-5, 3-23, 7-7
 Cloud tops 4-48, 4-60, 4-61
 Cloudy 4-49
 Cold front 4-70
 Color scheme 5-17
 Combined NEXRAD 4-116
 Compass card 2-21, 2-23
 Continental US NEXRAD 4-114
 CONUS 4-114
 County warnings 4-48, 4-72
 Course Deviation Indicator (CDI) 2-21,
 2-22, 2-24
 Course pointer 2-21, 2-22, 2-24, 2-29
 Course select 1-17, 2-1, 2-26
 Crossfill 3-33,
 Cross track error 2-25
 Current heading 1-17, 2-21, 2-22, 2-23
 Current track indicator 2-21, 2-23
 Cursor 1-19, 3-6, 3-7, 3-8, 3-18, 3-28,
 3-30, 3-33, 3-72, 3-74, 7-7

Customizing maps 3-8
 Customizing Nav Map pages 3-8
 Cycle number 5-4, 5-5, 5-21
 Cyclone 4-46, 4-48, 4-79

D

Database 1-5, 1-15, 3-10, 3-41, 4-4, 4-5,
 4-66, 4-70, 4-103, 4-121, 5-3,
 5-5, 6-16, A-1, A-5,
 Databases A-1
 Database SYNC 3-42
 Data fields 3-66, 3-67
 Data link 1-2, 1-10, 4-30, 4-44, 4-47,
 4-51, 4-54, 4-59, 4-61, 4-62,
 4-64, 4-66, 4-68, 4-69, 4-71,
 4-72, 4-76, 4-80, 4-83, 4-94,
 4-100, 4-105, 4-107, 4-112
 Data Link Receiver troubleshooting 5-30
 Date 1-23, 3-27, 3-35, , 5-4, 5-5, 6-16,
 A-5,
 Day view 5-17
 DCLTR soft key 3-4, 5-18, 5-19
 Dead Reckoning (DR) 2-33
 Decision Height (DH) 3-65
 Declutter 2-11, 3-4, 3-5, 4-23, 5-19
 Departures 5-3, 5-4
 Display brightness 1-23, 1-25, 3-27, 3-28,
 Display units 1-24, 3-27, 3-36, 3-37,
 3-38,
 Distance 3-6, 1-23, 3-8, 3-12, 3-36, 3-65,
 3-68,
 Distance measuring 3-7
 DME 7-1
 DP 5-3, 5-4
 Dual installation 3-33, 3-68, A-6,
E
 Echo tops 4-48, 4-53, 4-58, 4-59, 4-60
 Electronic Stability and Protection (ESP)
 1-12
 ETA 3-65
 Expiration time 4-44, 4-47
 Extreme attitude 2-11
 Extreme Roll 2-12

F

Facility 3-68, 3-71, 3-72
 Field of view 3-10, 3-16, 5-39, 5-40
 FIS-B 8-3
 Flight Director (FD) 1-12
 Flight path marker 5-34
 Flight plan 1-23, 2-18, 2-27, 3-1, 3-2,
 3-12, 3-65, 5-8
 FliteCharts 5-4, A-5, 5-5, A-7,
 FliteCharts database 5-4, A-7
 Flood 4-49, 4-72
 Fog 4-49
 Forecast time 4-71
 Forward looking terrain avoidance 4-13
 Freezing level 4-48, 4-80
 Frequency 2-22, 2-27, 2-29, 2-30, 2-32,
 3-71, 3-73

G

GAD 43 1-1, 1-2, 2-3, 6-8
 GDC 72H/74H i, page ii, 1-2, 1-4
 GDL 69/69A 1-2, 1-10, 3-18, 3-39, 3-40,
 4-1, 5-1, 5-22, 5-24, 5-25, 5-30
 GDL 69 troubleshooting 5-30
 GDL 88H models 1-9
 GDU 620 1-2, 1-3
 GDU 1040 1-2
 GEA 71 1-2
 GFC 600H 1-12
 GFDS
 Glideslope 2-24, 2-27
 Glossary 8-1
 GMU 44 1-1, 1-2, 1-8
 GPS altitude i, 4-4
 GPS level of service 2-21, 2-24, 2-32
 Ground pointer 2-1
 Ground speed 2-7, 2-6, 5-34
 GRS 77H/79H page ii, 1-2, 1-15
 GSR 56 1-10, 3-54, 3-57
 GTP 59 1-2
 GTX 33 4-1

H

Hail 4-53
 Hazard avoidance 4-1
 Haze 4-49
 Heading 1-5, 1-7, 1-17, 2-21, 2-22, 3-1,
 3-34, 4-24, 4-30
 Heading bug 1-17, 2-1, 2-21, 2-22
 Heading select 1-17
 Helipad 7-2
 Heliport 7-1
 Home page 3-3
 Horizon heading 2-5, 5-32, 5-35
 Horizon line 2-8, 2-9
 Horizontal Situation Indicator (HSI) 1-3,
 1-17, 2-1, 2-21–2-40, 5-35
 Hot spots 5-18, 5-19
 Hrzn Hdg 2-5
 H-TAWS 4-12
 Hurricanes 4-109

I

Icing 4-63, 4-81, 4-99, 4-100, 4-116,
 4-118
 Identifier 3-68, 3-69, 3-70, 3-72, 5-8,
 5-10, 5-35
 IFR 4-63, 4-100, 4-118
 IGRF model 1-15
 ILS 2-24, 2-27, 2-29, 2-30, 7-1
 Imminent obstacle impact 4-13
 Imminent terrain impact 4-13
 INFO soft key 3-66
 Infra-Red 4-97
 Inhibit alerting 4-16
 Intersection 3-5, 3-22, 3-23, 5-19, 7-1
 Iridium 1-10, 3-54, 3-57, 4-1, 4-83
 Iridium phone 3-57

J

Jeppesen 5-3, A-1
 Jeppesen database A-3

L

Land data 3-2, 3-9, 3-12, 3-13
 Lateral deviation scale 2-21, 2-24

Foreword

System
Sec 1

PFD
Sec 2

MFD
Sec 3

Avoidance
Hazard
Sec 4

Additional
Features
Sec 5

Annun.
& Alerts
Sec 6

Symbols
Sec 7

Glossary
Sec 8

Appendix A

Index

Lat/Lon 3-5, 3-10, 3-16, 3-68
 LDA 2-29
 Legend 3-9, 3-19, 4-6, 4-45, 4-46, 4-49,
 4-52, 4-56, 4-60, 4-68, 4-96,
 4-106, 4-113, 4-123
 Level 3-4, 1-23, 3-5, 3-27, 3-28, 4-80,
 Lighting 1-25, 3-73,
 Lightning 3-2, 3-5, 3-18, 3-19, 4-46,
 4-48, 4-62, 4-66, 4-88, 4-98,
 4-103, 4-121,
 Limitations 4-5, 4-33, 4-53, 4-110
 Localizer 2-22, 2-24, 2-29, 2-32
 Loc BC 2-29
 LPV 2-27, 2-33
 LRU 1-3, 1-9, 3-41, 6-16,
 Lubber line 2-21, 2-23

M

Magnetometer 1-2, 1-5, 1-8
 Making a phone call 3-63
 Map 3-2
 Map orientation 3-1, 3-3, 3-11, 3-68, 4-6,
 4-46, 4-54, 4-88, 4-94, 4-112
 Map panning 3-6
 Map pointer 3-2, 3-6
 Map range 1-23, 3-2, 3-4, 3-11, 5-18
 Map setup 3-8, 4-15, 5-40
 Map symbols 7-1, 7-4, 7-6, 7-7
 Map toolbar symbols 7-5
 Marker beacon 2-35
 Markings 2-8, 5-18, 5-19
 Mean Sea Level 4-4
 Measuring distance 3-7
 Menu Key 1-19, 1-20, 3-4, 3-8
 Menus 1-19, 1-20
 Message 2-21, 4-20
 METARs 3-65, 3-75, 4-46, 4-48, 4-66,
 4-88, 4-103, 4-105, 4-121
 MFD 1-1, 1-3, 1-16, 1-19, 3-1
 MFD display units 3-27, 3-36,
 Military 3-10, 3-24, 4-54
 Minimum Descent Altitude (MDA) 2-18
 Minimums 5-15
 Miscellaneous symbols 7-6, 7-7

Miscompare 2-35
 MOA 3-5, 3-10, 3-24, 7-7
 Motion vector 4-41
 Mountains 4-110
 Moving map 1-1, 1-3, 1-19, 3-1, 3-2, 3-9
 MSL 4-4
 Mute 5-28

N

National Weather Service 4-51, 4-63,
 4-72, 4-99, 4-116
 Nav angle 2-22, 1-24, 3-37,
 Navigation database 1-15, A-3, A-6
 Navigation map 3-8, 1-19, 3-1, 3-2, 4-4,
 4-15, 4-17, 4-44, 5-18, 5-19, 5-39
 Navigation source ii, 2-3, 2-21, 2-25,
 2-27, 2-32, 2-33, 3-34, 3-65
 Nav range ring 3-2, 3-9
 Nav Status Bar 2-1
 Nav status style 3-27, 3-30
 NDB 3-5, 3-9, 3-22, 3-23,, 5-19, 7-1
 NEXRAD 3-18, 4-48, 4-51, 4-111
 Legend 4-56, 4-113
 Limitations 4-53
 Viewing range 4-55, 4-112
 NEXRAD Legend 3-19
 Nexrad source 4-57
 NEXRAD Viewing Range 3-19
 Night view 5-17
 Normal display operation 1-1
 North up 3-1, 3-9, 3-11, 4-44, 4-46, 4-88
 NOTAM 5-3, 5-16
 Notes iv
 NRST 5-8

O

OAT 1-4, 1-8
 OBS 1-17, 2-21, 2-26, 2-33, 3-34, 8-5
 Obstacle data 3-15, 4-4, A-5
 Obstacles 3-12, 3-13, 3-15, 4-4, 4-5, 4-9,
 4-35, A-5,
 Obstructions 4-5
 Occluded front 4-71
 Other airspace 3-24

Outside air temperature 1-4, 1-8, 2-1
 Overspeed 2-7
 Overview 1-1

P

Page group 1-19, 3-2
 Page menus 1-19, 1-20, 1-21, 3-8, 3-10,
 3-18, 3-21, 3-22, 3-28, 3-66, 4-7,
 4-14, 4-45, 4-46
 Panning 3-6, 5-12, 5-19
 Parallel track 7-7
 Parking area 7-2
 Part Sun 4-49
 PFD 1-3, 1-16
 PFD options 1-23, 3-27, 3-30,
 PFD soft keys 2-2
 Phone book 3-59
 Phone call 3-63
 Phone volume 3-62
 Photocell 1-25
 Pilot Controlled Lighting 3-73
 PIREP 4-65, 4-101, 4-119
 Pitch indication 2-8
 Pitch scale 2-8, 2-9, 5-33
 Position reporting 3-54
 Power 4-110
 Power-up 1-4, 1-14, 1-15, 4-36, 5-4, 5-5,
 5-21, A-3, A-7
 Precipitation 4-53, 4-58, 4-66, 4-95,
 4-103, 4-121
 Preset 5-29
 Product age 4-44, 4-47
 Proximate advisory 7-2

R

Radar 4-33, 4-35, 4-51, 4-53, 4-58,
 4-109, 4-110
 Radar altimeter 3-28, 2-38, 2-13
 Rainy 4-49
 Range keys 1-19, 3-4, 3-68, 5-12
 Range ring 3-2, 3-9, 4-25, 4-39,
 RECENT 5-8
 Record of Revisions vi
 Reduce protection 4-17

Reference speed 2-8
 Reflectivity 4-52, 4-53, 4-110
 Regional NEXRAD 4-115
 Register with GFDS 4-84
 Restore defaults 3-28, 3-67
 Restricted airspace 3-24
 Roll pointer 2-8, 2-9
 Roll Scale 2-8, 2-9
 Roll scale pointer 2-1, 2-9
 Roll Scale Zero 2-8
 Route 3-7, 3-65, 5-19
 RP mode 4-17
 Runway depiction 5-36
 Runway extension 3-22
 Runway information 3-71, 3-73

S

SafeTaxi 3-12, 3-22, 5-1, 5-18, 5-19,
 5-21, A-1, A-5, A-7
 SafeTaxi symbols 7-2
 Satellite telephone 3-57
 Scale 3-4, 3-6, 2-6, 2-8, 2-9, 2-10, 2-21,
 2-22, 2-24, 3-2, 4-9, 3-10, 3-14,
 4-26, 2-13,
 Scroll bars 5-12
 SDF 2-29
 Secure Digital (SD) card 2-1, 3-1, A-1
 Selected Altitude 2-15, 2-18, 3-34, 4-106,
 4-123, 2-13
 Selected altitude range arc 3-17
 Selected Course 2-26, 3-34
 Selected Heading 2-22, 3-34
 Serial numbers 3-41, 5-30, 6-16
 Service Class 5-23, 5-24
 SIGMET 4-48, 4-63, 4-64, 4-99, 4-100,
 4-116, 4-117
 SiriusXM 3-39, 3-40
 SiriusXM Satellite Radio 1-10
 SiriusXM Satellite Radio Entertainment
 5-22
 SiriusXM weather 3-66
 Sky pointer 2-9, 2-10
 Sky representation 2-8, 5-41
 Slewing 2-29

Foreword

Sec 1
System

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

Slip/Skid Indicator 2-8
 Smart airspace 3-25
 Snow 4-49, 4-53
 Soft keys 1-16, 1-20, 2-1, 2-2, 2-11, 3-1,
 4-23, 4-36, 5-26, 5-32, 5-34
 Software version 3-41, 5-30, 6-16
 Speed 1-4, 2-6, 1-23, 2-8, 3-12, 2-20,
 3-27, 3-29, 4-32, 3-36
 Speed range 2-8
 STAR 5-3, 5-4
 Stationary front 4-71
 Stormscope 1-9, 4-126
 Sunny 4-49
 Surface analysis 4-48, 4-70
 Surface data 4-46, 4-71
 Surface winds 4-63, 4-100, 4-118
 Symbols 4-26, 4-32, 4-47, 4-49, 5-37, 7-1
 Synchronization 1-23, 3-27, 3-33, 3-34
 Syn Terr 2-5
 Synthetic Vision v, 2-5, 3-10, 3-16, 4-2,
 4-13, 4-19, 5-1, 5-31
 Synthetic Vision alerts 4-19
 Syn Vis 2-5
 System description 1-1
 System display units 3-27, 3-37,
 System power 1-4, 1-13, 1-15
 System settings 1-22, 3-27
 System status 3-41, 4-5, 4-9, 6-16, 4-27,
 4-36,

T

TACAN 7-1
 TAF 3-75, 4-66, 4-103, 4-121
 TAS 4-23, 5-1
 TAWS alerts 4-12
 TAWS-SVT 4-1, 4-13
 TCA 3-9, 3-23
 Temperature 1-24, 3-37, 4-49,
 Temperature probe 1-1, 1-2, 1-8
 Temperature reference 3-27
 Terrain 1-23, 3-12, 3-1, 4-2, 3-13, A-1,
 4-4, 4-10, 4-13, 4-35,
 Terrain alerts 4-4, 4-13, 4-19, 4-20
 Terrain data 3-10, 3-14, A-5, 4-5, 4-9,

Terrain proximity i, 1-23, 4-1, 4-4, 7-5
 Terrain-SVT 4-2, iii, 4-13,
 Textual METARs 4-67, 4-104, 4-122
 TFR 3-3, 3-10, 3-22, 3-24, 4-73, 4-108,
 4-124, 7-7
 Thunderstorm 4-109
 Thunderstorms 4-49, 4-72
 Time 3-12, 1-23, 3-27, 3-35, 4-44, 4-48,
 4-70, 4-71,
 Time zone 3-35
 TIS 4-23, 4-30, 4-32, 4-33, 4-35, 5-1
 TMA 3-9, 3-23
 To/From Indicator 2-21, 2-22
 Topo data 3-10, 3-13
 Topo scale 3-3, 3-10, 3-14
 Tornadoes 4-49, 4-72
 Tornados 4-109
 Track indicator 2-21, 2-23
 Track vector 3-2, 3-9, 3-12, 4-34
 Traffic Advisory 3-21, 4-1, 4-23, 4-26,
 4-30, 7-2
 Traffic Pop-Up 4-29
 Traffic symbols 4-32, 4-40, 5-37, 7-2
 Transponder 4-1, 4-23, 4-30, 4-33, 4-35,
 4-36,
 Trend Vector 2-6, 2-13, 2-21, 2-23
 Trim ball indicator 2-9
 True Airspeed 2-7, 1-23,
 True North 2-22, 3-37
 Turbulence 4-63, 4-82, 4-99, 4-116
 Turn Rate 2-21
 Turn Rate Indicator 2-21, 2-23

U

Under construction 7-2
 Unusual attitude 2-11, 5-41

V

VDI 2-27, 5-34
 Vector Duration 4-43
 Vector motion 4-41
 Version 1-14, 3-41, 4-13, 5-21, A-6
 Vertical deviation 2-27

Vertical speed 1-1, 1-4, 1-18, 2-20, 1-24,
2-1, 3-27, 3-34, 3-36, 2-13,
Vertical Speed Indicator (VSI) 1-24, 2-20
Video 3-49
VNAV 2-14, 2-27, 2-33
VNAV Altitude Constraints 2-14, 2-16
VNV 8-7
Voice alert 4-35
Volume 1-10, 3-40, 5-25, 5-28
VOR 1-17, 2-3, 3-5, 2-22, 2-25, 2-32,
3-1, 3-9, 3-22, 3-23, 3-34, 5-19,
7-1
VORTAC 7-1
Vsports 2-8

W

WAAS 1-8, 2-27
Warm front 4-70, 4-71
Warnings i
Waypoint information 3-68, 3-71, 3-75,
5-19
Waypoint selection 3-69
Waypoint weather 3-75
Weather 3-18, 3-75, 4-44, 4-83, 4-109
Weather legend 4-45, 4-49, 4-52
Weather product 3-19, 4-44, 4-47, 4-49,
4-55, 4-95, 4-112, 5-23
Weather radar 1-2
Weather symbols 4-47
Wind 1-23, 2-34, 3-9, 3-2, 3-12, 3-27,
3-30, 3-42, 4-48, 4-49, 4-63,
4-66, 4-68, 4-100, 4-103, 4-106,
4-118, 4-121, 4-123,
Winds aloft 4-48, 4-68, 4-106, 4-123
Wind speed 3-12
Wind vector 1-23, 2-34, 3-3, 3-9, 3-12,
3-27, 3-30, 7-7
WX-500 1-9, 4-126
WX soft key 3-66

X

XM 4-44
XM Information page 3-39
XM weather 4-44
XTK 2-25

Y

Yaw Axis Control 1-12

Z

Zero pitch line 5-34

Foreword

System
Sec 1

Sec 2
PFD

Sec 3
MFD

Sec 4
Hazard
Avoidance

Sec 5
Additional
Features

Sec 6
Annun.
& Alerts

Sec 7
Symbols

Sec 8
Glossary

Appendix A

Index

This page intentionally left blank

