A330

FLIGHT CREW OPERATING MANUAL

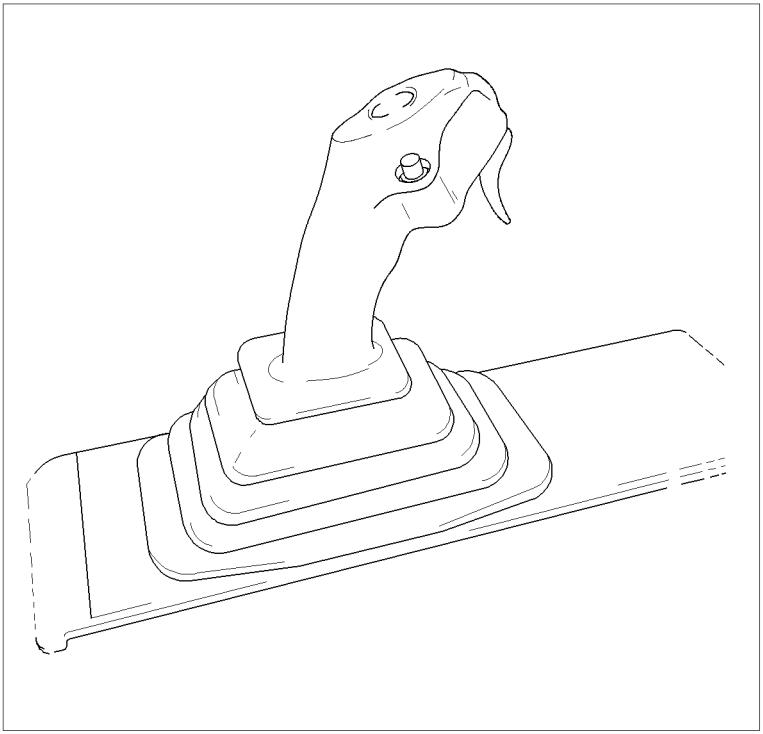

FLIGHT OPERATIONS 3

AIRBUS®

00.00 CONTENTS

00.10 ORGANIZATION OF THE MANUAL
– FOREWORD 1
– COMMENTS – QUESTIONS – SUGGESTIONS 1
– CONTENT 1
– USE 2
– PAGINATION 3
– REVISIONS 4
– HOW TO INSERT A REVISION 5
– BEST WAY TO GET UPDATED DOCUMENTATION 5

00.20 LIST OF CODES

00.30 LIST OF NORMAL REVISIONS

00.35 RECORD OF TEMPORARY REVISIONS

00.36 LIST OF EFFECTIVE TEMPORARY REVISIONS

00.70 CROSS REFERENCE TABLE

00.75 HIGHLIGHTS

00.80 LIST OF EFFECTIVE PAGES

00.85 LIST OF MODIFICATIONS

FOREWORD

R This manual complements the approved Flight Manual. Airbus has attempted to ensure that the data contained in this manual agrees with the data in the Flight Manual. If there is any disagreement, the Flight Manual is the final authority.

COMMENTS - QUESTIONS - SUGGESTIONS

All manual holders and users are encouraged to submit any Flight Crew Operating Manual questions and suggestions to :

R

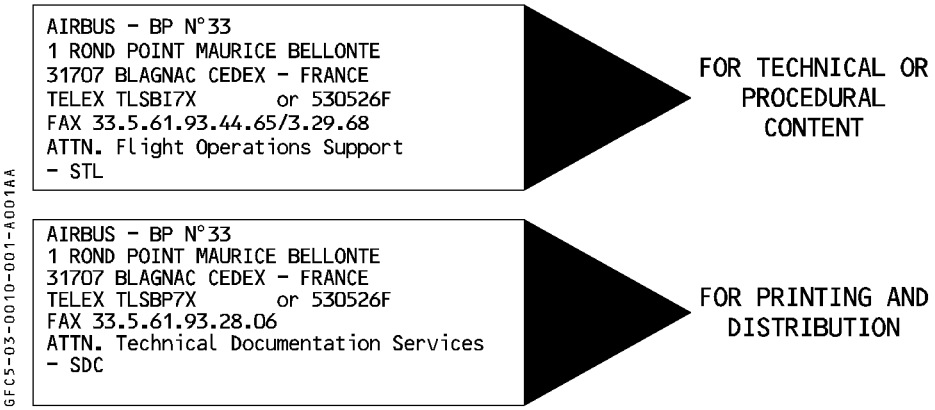

CONTENT

R The Flight Crew Operating Manual is the support documentation for flight crew operations.
R The Flight Crew Operating Manual provides operating crews with the technical, procedural
R and performance characteristics of the A330 aircraft to ensure a safe and efficient
R operation during normal and/or abnormal/emergency situations on ground and in flight.
R However, the Flight Crew Operating Manual is not intended to provide basic jet aircraft
R piloting techniques or information that are considered as basic airmanship for trained flight
R crews familiar with that type of aircraft and with its general handling characteristics.
R The Flight Crew Operating Manual is intended :
R — To be used directly as flight crew operating manual or to be the basis for elaboration of
R the relevant parts of the “crew manual” by the operations department of the operator
R in accordance with applicable requirements.
R — To be used as a flight crew training manual (initial and refresher).
R However, the Flight Crew Operating Manual is not intended to be used for teaching basic
R piloting skills.

The content is divided into four volumes :
Vol 1 = Systems' description (description of the aircraft systems).
Vol 2 = Flight preparation (performance information, plus loading data).
Vol 3 = Flight operations (operating procedures, techniques, and performance information).
Vol 4 = FMGS pilot's guide (procedures for FMGS use).

USE

As a comprehensive set of references, the FCOM :
- can be used by an operator's flight operations department to supplement its own crew manual
- can be issued directly to crew members for training and subsequently for line operations.

WARNINGS, CAUTIONS AND NOTES

WARNING : an operating procedure, technique, etc, which may result in personnel injury or loss of life if not carefully followed.
CAUTION : an operating procedure, technique, etc, which may result in damage to equipment if not carefully followed.
NOTE : an operating procedure, technique, etc, considered essential to emphasize.

COMPLEMENTARY INFORMATION

The manual includes technical information required for training as well as complementary information.
- Where a paragraph or schematic is preceded by the heading FOR INFO the details given are considered to be "nice to know". Knowledge of these items is not required for the type rating qualification.
- ECAM warnings and cautions are summarized in a table at the end of each chapter of the volume 1. Numeric values are given for information only.

OPTIONAL EQUIPMENT

The legend ◁ indicates that a paragraph or a schematic is applicable only if the related equipment is installed.

PAGINATION

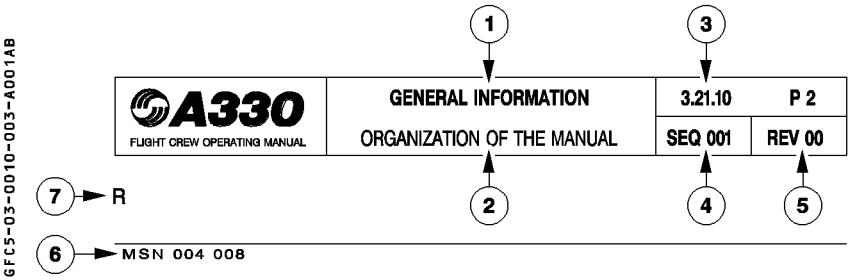

(1) Chapter title

(2) Subchapter title

(3) FCOM volume number, Chapter number, Section number, Page number

R (4) Sequence number is used for Airbus Industrie management of different aircraft
R configurations and allows to enter into list of effective pages

R (5) Revision number of the manual at which the page has been revised

R (6) Aircraft MSN, or ALL (when a page is applicable to all aircraft covered by the manual).
R Correspondance between MSN and registration may be found in the cross reference
R table

R (7) An "R" in front of a line indicates that the line has been revised.

REVISIONS

NORMAL REVISIONS

There are issued periodically to cover non-urgent corrections and changes, and to add new data.
They are accompanied by filing instructions and an updated List of Effective Pages that includes customized pages.
A normal revision record sheet is at the front of each volume.
In addition, each volume has a "List of MOD/MP affecting the manual", that gives a simple explanation of the technical content of each MOD/MP incorporated and its validity per aircraft.

TEMPORARY REVISIONS

Printed on yellow paper these are issued to cover urgent matters arising between normal revisions. They are accompanied by filing instructions and an updated customized list of effective TR.
A yellow temporary revision record sheet is at the front of each volume.

R ### INCORPORATION OF SERVICE BULLETINS IN THE MANUAL

R When a Service Bulletin (SB) has been accomplished on one or more aircraft of the operator fleet and notified to Airbus Industrie, all affected manuals will reflect the new aircraft configuration at next following revision. If judged necessary by Airbus Industrie, or
R requested by the operator, a "Temporary Revision" is issued between normal revisions.

OPERATIONS ENGINEERING BULLETINS

These are issued as the need arises to give operators revised or new, but significant, technical and procedural information.
OEBs come with an OEB record sheet. This record sheet is re-issued with each normal revision to update the bulletin embodiment status.
They are accompanied by filing instructions and an updated customized list of effective OEB.

HOW TO INSERT A REVISION

FILING INSTRUCTIONS

Use the filing instructions as follows :

- REMOVE : The page must be removed. It may be replaced by a new page if associated with an "INSERT" instruction. If not, the page is cancelled.
- INSERT : The page must be inserted. If not associated with a "REMOVE" instruction, the page is new for the operator fleet and does not replace an existing one.

The column "NOTE" indicates the reason for change. It states "EFFECTIVITY CHANGE ONLY" if the page is only revised due to effectivity change and not due to technical content.

LIST OF EFFECTIVE PAGES (LEP)

The manual after revision must comply with the LEP, which lists all the pages that are in the manual. The new pages are indicated by "N" and the revised pages by "R".

R BEST WAY TO GET UPDATED DOCUMENTATION

R The best way to ensure timely receipt of getting correct updated documentation is to advise :
AIRBUS INDUSTRIE
BP 33
31707 BLAGNAC CEDEX
FRANCE
Telex : TLSBP7X.. or 530526F
R FAX 33 5 61 93 28 06
R ATTN : Customer Service Directorate – Technical Documentation Services (AI/SE – D)
as soon as any change has been completed on any airplane.

To simplify automatic LEP processing some modifications have been grouped under a common code.

CODE	DESIGNATION
0001	Mod : (40063+42915) = (40063+42630+42915)
0002	Mod : (44431+47420) = (44431+46256+47420)
0003	Mod : 44308 = 44339 = 45509 = 46893 = (44724+44907) = (45509+46893) = (44308+44724+44907) = (44308+45509+46893) = (45509+46095+46893) = (45509+46572+46893) = (45509+46711+46893) = (45509+46095+46572+46893)
0004	Mod : (43078+45273+45509+46256+49632) = (43078+45273+45509+46095+46256+46589+49632)
0006	Mod : (45509+46964) = (45509+47221) = (45509+46964+47221)
0007	Mod : (43078+45509+SAS) = (43078+45509+46095+46589+SAS)
0008	Mod : (45008+45509) = (45008+45509+46095+46589)
0009	Mod : (45509+49632) = (45509+46095+46589+49632)
0011	Mod : (44308+44311) = (44308+44724+44907) = (44308+44311+44341) = (44341+46572+46893) = (44311+44341+46893) = (44308+44311+44724+44907) = (44311+44341+46572+ 46893)
0012	Mod : (44644+49632) = (44644+45509+49632)
0015	Mod : (46256+46511) = (44488+46256+46511)
0016	Mod : 44308 = 44339 = 45509 = (44724+44907) = (45509+46893) = (44308+44724+44907) = (45509+46095+46893) = (45509+46711+46893)
0017	Mod : (44644+45509+49632) = (44644+45509+46095+46589+49632)
0018	Mod : (40818+43639) = (40818+43641) = (40818+43724)
0019	Mod : (45509+46964+49193) = (45509+47221+49193)
0020	Mod : (45273+GE) = (46256+PW) = (45273+46256+GE) = (45273+46256+PW)
0021	Mod : (44047+44488+45509) = (44047+44488+45509+46095+46589)
0022	Mod : (44488+45509) = (44488+45509+46095+46589)
0023	Mod : (44644+45509+46964) = (44644+45509+47221) = (44644+45509+46964+47221)
0024	Mod : 44270 = 46688 = (42600+44270) = (42600+46688) = (43308+44270+46688)
0025	Mod : (40082+46181) = (40082+46932) = (40082+45630+46932+47322)
0026	Mod : (44385+44431) = (44385+44431+45509+46095)
0027	Mod : (44385+44431+45509) = (44385+44431+45509+46095+46589) = (44385+44431+45509+46256)
0028	Mod : (43639+44488) = (43641+44488) = (43724+44488)
0029	Mod : (44385+44431+46256) = (44385+44431+45509+46095+46256)
0030	Mod : (44385+44431+45509+46256) = (44385+44431+45509+46095+46256+46589)
0031	Mod : 44270 = 44803 = 46688 = (42600+44270) = (42600+46688) = (42200+42600+44270) = (42200+42600+46688) = (43308+44270+46688)
0032	Mod : (44644+45509+46964+49193) = (44644+45509+47221+49193)
0034	STD = Mod : 44724 = (44724+44907) = (44311+44341) = (44311+44724) = (44311+44724+44907)
0035	Mod : 41757 = 44313 = 46281 = 46285 = 46468 = 47407 = (41757+44313)
0036	Mod : 46728 = 46824 = 46986 = 47392 = 47572
0037	Mod : (44047+45509) = (44047+45509+46095+46589)
0038	Mod : 44047 = (44047+45509+46095)

	CODE	DESIGNATION
	0039	Mod : (45238+45584) = (45239+45530) = (45239+45656)
RRR	0040	Mod : 40467 = 45748 = (40467+40630) = (40467+45341) = (45341+45748) = (40257+45341+45748) = (40467+45341+45748) = (40630+45343+45748) = (40630+45341+45344+45748)
RRRRRRRRR	0041	Mod : (40467+40518) = (40467+41957) = (40518+45748) = (41957+45748) = (40467+41957+45344) = (40518+45341+45748) = (41957+45341+45748) = (45341+45748+47755) = (40467+40518+45341+45748) = (40467+41957+45341+45748) = (40518+45341+45342+45748) = (40467+45341+45748+47755) = (41957+45341+45344+45748) = (40467+40518+45341+45342+45748) = (40467+40630+45341+45343+45748) = (40467+41957+45341+45344+45748)
	0042	STD = Mod : 40630 = 45341 = 45343 = (40630+45343) = (40630+45341+45343+45748)
	0043	Mod : (44047+44644) = (44047+44644+45509+46095)
	0044	Mod : (44308+46324+47470) = (44339+46324+47470) = (46572+46324+47470) = (46893+46324+47470) = (44308+44724+44907+46324+47470) = (44339+44724+44907+46324+47470)
	0045	Mod : (44644+46964+49193) = (44644+47221+49193)
	0046	Mod : 44905 = (44905+46932)
	0047	Mod : 42600 = 44803 = (43308+44803) = (42600+43308+44803)
	0048	Mod : 42600 = (43308+44803) = (42600+43308+44803) = (44270+44700)
	0049	Mod : (44047+44644+45509) = (44047+44644+45509+46095+46589)
	0050	Mod : (44047+45273) = (44047+45273+45509+46095)
	0051	Mod : (44047+45273+45509) = (44047+45273+45509+46095+46589)
	0052	Mod : (44047+45273+46256) = (44047+45273+45509+46095+46256)
	0053	Mod : (44047+45273+45509+46256) = (44047+45273+45509+46095+46256+46589)
	0054	Mod : (43078+44047+45273) = (43078+44047+45273+45509+46095)
	0055	Mod : (43078+44047+45273+45509) = (43078+44047+45273+45509+46095+46589)
	0056	Mod : (43078+44047+45273+46256) = (43078+44047+45273+45509+46095+46256)
	0057	Mod : 41038 = 41124 = 41125 = 43237 = 45390 = 45391 = 45392 = 45950
	0058	Mod : 44308 = 44339 = 46893 = (44339+46893) = (46572+46893) = (44308+44724+44907) = (44311+44341+46893)
	0059	Mod : 47420 = (44488+46256+46511+47420)
	0060	Mod : 44339 = (44341+46893) = (44339+44341+46893) = (44341+46572+46893) = (44341+46572+46893) = (44311+44341+46893+46990)
	0061	Mod : (44905+46893) = (44905+46572+46893) = (44339+44905+46893)
	0062	Mod : 46324 = (44724+46324) = (44339+44724+46324) = (44724+44907+46324)
	0063	Mod : (43078+44047+45273+45509+46256) = (43078+44047+45273+45509+46095+46256+46589)
	0064	Mod : (44308+46324) = (45509+46324+46893) = (45509+46095+46324+46893) = (45509+46324+46572+46893) = (45509+46095+46324+46572+46893) = (45509+46324+46711+46893+46929)
	0065	Mod : (44047+44488) = (44047+44488+45509+46095)
	0066	STD = Mod : 44724 = (44308+44724) = (45509+46095) = (45509+46711)
	0067	Mod : (46441+47420+47549) = (46441+47420+47967)
	0068	STD = Mod : 44724 = 44341 = (44308+44724) = (44724+44907) = (44311+44341) = (44311+44724) = (44311+44724+44907)
	0069	Mod : 40021 = 44800 = 48277 = (40065+41248+40021) = (40065+41248+44800) = (41248+41509+40021) = (41248+41509+44800) = (41248+44547+40021) = (41248+44547+44800)

CODE	DESIGNATION
0070	Mod : (43078+45509) = (43078+45509+46095+46589)
0073	Mod : 44270 = (42600+44270) = (42200+42600+44270)
0074	Mod : (40065+40021) = (41509+40021) = (44547+40021) = (45123+40021) = (46514+40021) = (40065+44800) = (41509+44800) = (44547+44800) = (45123+44800) = (46514+44800) = (40065+48227) = (41509+48227) = (44547+48227) = (45123+48227) = (46514+48227)
0076	Mod : 47500 = (46810+47500) = (46863+47500)
0077	Mod : (43442+47500) = (43442+46810+ 47500) = (43442+46863+47500)
0078	STD = Mod : 44724 = (44308+44724) = (44724+44907) = (45509+46095) = (45509+46711) = (45509+46711+46893)
0079	Mod : 44308 = 44339 = 45509 = 46893 = (44308+44724+44907) = (44339+44724+44907)
0081	Mod : 46256 = (46256+44385) = (46256+44431)
0082	Mod : (44644+45509) = (44644+45509+46095+46589)
0083	Mod : (45451+46256) = (45452+46256) = (48447+46256)
0085	Mod : (45008+42094) = (45008+46447) = (45008+45496) = (45008+446063) = (45008+47110) = (45008+48050) = (45008+49539)
0086	Mod : (44603+45509) = (44603+45509+46095+46589)
0087	Mod : 41757 = 44313 = 47407 = (41757+47407)
0088	Mod : 42094 = 45496 = 46063 = 46447 = 48050 = 47110 = 49539
0089	Mod : (S14942+47930+44644) = (44644+47930+49800)
0090	Mod : (46181+46511) = (46932+46511) = (47233+46511) = (47457+46511) = (47462+46511)
0091	Mod : 48832 = (48832+44994+46237+46696)
0092	Mod : 46256 = (46256+47930+49800+49801)
0093	Mod : (44644+46256) = (44644+46256+47930+49800+49801)
0094	Mod : (46256+S14942+47930) = (46256+47930+49800)
0095	Mod : (44644+46256+S14942+47930) = (44644+46256+47930+49800)
0096	Mod : (44308+46256) = (44339+46256) = (46572+46256) = (46893+46256) = (44308+44724+44907+46256) = (44339+44724+44907+46256)
0097	Mod : (44603+45264+45509) = (44603+45264+45509+46095+46589)
0098	Mod : (43078+45509+46893) = (43078+45509+46095+46589+46893)
R R 0099	Mod : (40373+40065) = (40373+41509) = (40373+44222) = (40373+44312) = (40373+44547) = (40373+45123) = (40373+46514) = (40373+46742)
0100	STD = Mod : (40065+41248) = (41248+41509) = (41248+44547)
0101	Mod : 40065 = 41509 = 44547 = 45123 = 46514 = 46742
0102	STD = Mod : (43037+46266) = (44629+46266) = (45055+46266)
0103	STD = Mod : (40065+41248) = (41248+41509) = (41248+44577) = (46514+46741) = (41248+44222)
0104	Mod : 40065 = 41509 = 44222 = 44312 = 44547 = 45123 = 46514 = 46742
0105	Mod : (44807+40818) = (44807+45252) = (44808+40818) = (44808+45252) = (44807+44808+40818) = (44807+44808+45252)
0106	Mod : (45509+50014) = (45509+46095+46589+50014)
0107	Mod : (44644+45509) = (44644+45509+46095+46589)
0108	Mod : (45273+45509) = (45273+45509+46095+46589)
0109	Mod : (43078+45273) = (43078+45273+45509+46095)
0110	Mod : (45273+46256) = (45273+45509+46095+46256)

	CODE	DESIGNATION
	0111	Mod : (45273+45509+46256) = (45273+45509+46095+46256+46589)
	0112	Mod : (43078+45273+45509) = (43078+45273+45509+46095+46589)
	0113	Mod : (43078+45273+46256) = (43078+45273+45509+46095+46256)
	0114	Mod : (43078+45273+45509+46256) = (43078+45273+45509+46095+46256+46589)
	0115	Mod : 41757 = 44313 = 46281 = 46285 = 46468 = 47407 = (41757+44313)
	0116	Mod : 44308 = 44339 = 45509 = (44724+44907) = (45509+46893) = (44308+44724+44907) = (45509+46095+46893) = (45509+46711+46893) = (45509+46893+46711+46929)
	0117	Mod : (44308+46324) = (44339+46324) = (46572+46324) = (46893+46324) = (44308+44724+44907+46324) = (44339+44724+44907+46324)
	0118	Mod : (46576+49632) = (46256+46576+49632)
	0119	Mod : (48344+49632) = (47420+48344+49632)
	0120	Mod : (48818+49632+50091) = (48818+49632+50995)
	0121	Mod : (44905+46932) = (44905+47233)
	0122	STD = Mod : 44724 = (44339+44724) = (44724+44907)
	0123	Mod : 44308 = 44339 = 46572 = 46893 = (44308+44724+44907) = (44339+44724+44907)
	0124	Mod : 47457 = 47462 = (46893+47457) = (46893+47462) = (46572+46893+47457) = (46572+46893+47462)
	0125	STD = Mod : (45100+46894) = (42083+44339+44724) = (41240+44724+45100+46894) = (41240+44724+44907+45100+46894)
	0126	Mod : 42600 = (43308+44803) = (44270+44700)
	0127	Mod : 46572 = 46893 = (42083+44339+46893) = (45100+46893+46990) = (42083+44339+44724+44907)
	0128	Mod : (45100+46893+46894) = (41240+44308+45100+46894) = (45100+46572+46893+46894) = (41240+44308+44724+44907+45100+46894)
	0129	Mod : 41757 = 44313 = 46281 = 46285 = 46468 = 47407 = (41757+44313)
	0130	Mod : 46324 = (44724+46324) = (44339 +44724+46324) = (44724+44907+46324)
	0131	Mod : (44308+46324) = (44339+46324) = (46324+46572) = (46324+46893) = (44308+44724+44907+46324) = (44339+44724+44907+46324)
	0132	Mod : (44308+46324+47470) = (44339+46324+47470) = (46324+46572+47470) = (46324+46893+47470) = (44308+44724+44907+46324+47470) = (44339+44724+44907+46324+47470)
R R R	0133	Mod : 47457 = 47462 = 51138 = 51139 = (44308+51138) = (44724+51138) = (46893+47457) = (46893+47462) = (46893+51138) = (46893+51139) = (44724+44907+51138) = (44308+44724+44907+51138)
	0134	Mod : 49144 = (45238+47420+49144) = (45239+47420+49144)
	0135	Mod : 45828 = 45832 = 46772 = 46972 = 46975 = 46996 = 48106
	0136	Mod : (45828+47660) = (45832+47660) = (46772+47660) = (46972+47660) = (46975+47660) = (46996+47660) = (47660+48106)
	0137	Mod : (45897+50014) = (44482+45897+50014)
	0138	Mod : (44905+49632) = (44905+46256+49632)
	0139	Mod : 49144 = (46181+46511+49144) = (46511+46932+49144) = (46511+47233+49144) = (46511+47457+49144) = (46511+47462+49144)
	0156	STD = Mod : 44724 = (44339+44724) = (44724+44907)
	0157	Mod : 44308 = 44339 = 46572 = 46893 = (44308+44724+44907) = (44339+44724+44907)

CODE	DESIGNATION
0158	Mod : (42094+45008) = (45008+46447) = (45008+48050) = (45008+47110) = (45008+45496) = (45008+46063) = (45008+49539)
0159	Mod : 40086+40518+45341+45342+45748
0160	Mod : 46181 = 46932 = 47233 = 47457 = 47462 = 51138 = 51139
0161	Mod : (46181+46511) = (46932+46511) = (47233+46511) = (47457+46511) = (47462+46511) = (46511+51138) = (46511+51139)
0162	Mod : 46028 = (40624+46028+CPA)
0163	Mod : (46028+46932) = (40624+46028+46932+CPA)
0164	Mod : 47500 = 50214 = (46810+47500) = (46863+47500) = (47500+50214)
0165	Mod : (43442+47500) = (43442+50214) = (43442+46810+ 47500) = (43442+46863+47500) = (43442+47500+50214)
0166	Mod : 46863 = 51393 = (46810+46863) = (46810+51393)
0167	Mod : (44308+46256+46324) = (44339+46256+46324) = (46256+46324+46572) = (46256+46324+46893) = (45509+46256+46324+46893) = (44339+44724+44907+46256+46324)
0168	Mod : 42600 = (42600+44270+44700) = (42600+43308+44803)
0169	Mod : 42600 = (42600+44270+44700)
0170	Mod : 43308 = (42600+43308)
0171	Mod : 46893 = (42083+44339) = (42233+44339) = (42083+46893) = (42083+44339+46893) = (42083+44339+46893) = (45100+46893+46990) = (42083+44339+44724+44907)
0172	STD = Mod : 42083 = 42233 = 45100 = (45100+46894) = (41240+44724) = (42083+44724+44907) = (42083+44724+44339) = (41240+44308+44724+45100+46894) = (41240+44724+44907+45100+46894)
0173	Mod : (46893+45100) = (41240+44308+46894) = (45100+46893+46894) = (41240+44308+45100) = (41240+44308+45100+46894) = (41240+44308+44724+44907+46894) = (41240+44308+44724+44907+45100+46894)
0174	Mod : (46893+51144) = (45100+46893+46894+51144)
0175	Mod : 42600 = 44803 = (43308+44803) = (42600+43308+44803) = (42600+44270+44700)
0176	Mod : (44905+50830) = (44905+46892+47784+50830+50864)
0177	Mod : 42600 = (43308+44803) = (42600+43308+44803) = (42600+ 44270+44700)
0178	Mod : (45100+46572+46893+46894+47589) = (45100+46572+46893+46894+51096)
0179	Mod : 45509 = (45509+46095+46589) = (45509+47244+52166)
0180	STD = Mod : (40081+47943) = (47244+52166)
0181	Mod : (49144+49193+50716) = (49144+49193+50717)
0182	Mod : 49632 = (45238+49632) = (45239+49632)
0183	STD = Mod : (40065+41248) = (41248+41509) = (41248+44547)
0184	Mod : (49193+49304) = (49193+50754) = (49193+51853)
0185	Mod : 42600 = 44803 = (43308+44803) = (42600+43308+44803) = (42600+44270+44700)
0186	Mod : 44270 = 46688 = (42600+44270) = (42600+46688) = (42200+42600+44270) = (42200+42600+46688) = (43308+44270+46688)
0187	Mod : 44313 = 46285 = 47407 = 49794 = 52342
0188	Mod : 44308 = 46893 = (44308+44724+44907) = (44339+44724+44907)
0189	Mod : (44905+49144) = (44905+47420+49144)

	CODE	DESIGNATION
R	0191	Mod : (44308+46256+46324) = (46256+46324+46893) =
R		(45509+46256+46324+46893) = (44339+44724+44907+46256+46324) =
R		(44308+44724+44907+46256+46324)
R	0192	Mod : 44308 = 46893 = (44308+44724+44907) = (44339+44724+44907)

R

N°	ISSUE DATE	
00	JAN 93	
01	JUN 93	
02	OCT 93	
03	NOV 93	
04	FEB 94	
05	MAY 95	
06	MAY 97	
07	JAN 98	
08	JUL 98	
09	DEC 98	
10	APR 99	
11	SEP 99	
12	MAR 00	
13	JUL 00	
14	DEC 00	
15	JUL 01	
16	DEC 01	
17	JUN 02	
18	MAR 03	
19	JAN 04	

N°	TITLE	STATUS	LOCATION
To be filled by the operator, if needed.			

THIS TABLE GIVES, FOR EACH AIRCRAFT INCLUDED IN THE MANUAL, THE CROSS REFERENCE BETWEEN :

- THE MANUFACTURING SERIAL NUMBER (MSN) WHICH APPEARS IN THE LIST OF EFFECTIVE PAGES

- THE REGISTRATION NUMBER OF THE AIRCRAFT AS KNOWN BY AIRBUS INDUSTRIE.

MSN	REGISTRATION
0054	F-OMSA
0644	

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 00 00	001	001	REV006		ALL
3 00 10	001	001	REV017		ALL
3 00 10	002	001	REV017	STD	
3 00 10	003	001	REV006		ALL
3 00 10	004	001	REV006		
3 00 10	005	001	REV006		ALL
3 00 20	001	001	REV019	LIST OF CODES	ALL
3 00 20	002	001	REV019	LIST OF CODES	
3 00 20	003	001	REV019	LIST OF CODES	ALL
3 00 20	004	001	REV019	LIST OF CODES	
3 00 20	005	001	REV019	LIST OF CODES	ALL
3 00 20	006	001	REV019	LIST OF CODES	
3 00 30	001	001	REV019	LIST OF NORMAL REVISIONS	ALL
3 00 35	001	001	REV007	RECORD OF TEMPORARY REVISION	ALL
3 00 36	001-LTR	001	REV018	LIST OF TEMPORARY REVISIONS	ALL
3 00 70	CRT	001	REV019	CROSS REFERENCE TABLE	ALL
3 00 75	HL	001	REV019	HIGHLIGHTS	ALL
3 00 80	LEP	001	REV019	LIST OF EFFECTIVE PAGES	ALL
3 00 85	LOM	001	REV019	LIST OF MOD/MP/SB	ALL
3 01 00	001	001	REV018		ALL
3 01 00	002	102	REV018	46324	
3 01 10	001	001	REV005		0644
3 01 10	001	100	REV005	40161	0054
3 01 20	001	106	REV019	GE/RR 768/CODE 0168	0054
3 01 20	002	106	REV019	CODE:0185	
3 01 20	001	113	REV008	M:44905 GE 80E1A3/80E1A4	0644
3 01 20	002	115	REV010	44905	
3 01 20	003	001	REV008		ALL
3 01 20	004	001	REV009		
3 01 20	005	001	REV019		0054
3 01 20	006	005	REV006	GE 80E1A2	
3 01 20	005	001	REV019		0644
3 01 20	006	105	REV015	80E1A4/44905	
3 01 20	007	030	REV019	GE80E1A2=PW4164/4168	0054
3 01 20	007	110	REV019	GEA2/A3/A4/4168A/772B/44905	0644

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 01 21	001	100	REV016	45330=43475+45330	0644
3 01 21	001	105	REV016	43475	0054
3 01 22	001	001	REV018		0054
3 01 22	002	001	REV019	CODE 0122	
3 01 22	001	110	REV018	44905	0644
3 01 22	002	115	REV019	CODE:133	
3 01 22	002A	001	REV019	CODE 0122	0054
3 01 22	002A	100	REV019	CODE 0188	0644
3 01 22	003	105	REV015	44905=46932=47233	0644
3 01 22	004	100	REV018	44905=46932=44905+47233	
3 01 22	003	105	REV015	44905=46932=47233	0054
3 01 22	004	105	REV018	47233	
3 01 23	001	100	REV016	47669	0644
3 01 24	001	105	REV018	M:47660=(47660+51221)	0644
3 01 25	001	100	REV018	40260=40522=50092	0054
3 01 28	001	005	REV011	GE	0054
3 01 28	002	001	REV018	STD	
3 01 28	001	005	REV011	GE	0644
3 01 28	002	130	REV018	GE/PW/44644	
3 01 29	001	001	REV008		ALL
3 01 32	001	109	REV013	GE/46863=51393	0054
3 01 32	002	001	REV017		
3 01 32	001	220	REV016	GE+CODE:0165	0644
3 01 32	002	001	REV017		
3 01 34	001	100	REV019	M:46324=(46324+47244+52166)	0054
3 01 34	001	200	REV019	46324+47244	0644
3 01 35	001	100	REV006	CODE:0040	0054
3 01 35	002	001	REV005		
3 01 35	001	200	REV006	CODE:0041	0644
3 01 35	002	001	REV005		
3 01 49	001	001	REV008		ALL
3 01 49	002	100	REV017	45332=46255	
3 01 70	001	005	REV015	GE	ALL
3 01 70	002	005	REV011	GE	
3 02 00	001	102	REV019	49632	ALL
3 02 00	002	001	REV010		

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 02 00	003	100	REV018	47420=49632	ALL
3 02 00	004	205	REV019	49632+50014	
3 02 00	005	001	REV019		0054
3 02 00	006	001	REV018		
3 02 00	005	200	REV019	M:49144+49193	0644
3 02 00	006	200	REV019	M:44644+49144	
3 02 00	007	001	REV019		0054
3 02 00	008	100	REV019	M:49632	
3 02 00	007	200	REV019	M:40074+49193	0644
3 02 00	008	100	REV019	M:49632	
3 02 00	009	100	REV017	46256	0054
3 02 00	010	105	REV018	47420/GE	
3 02 00	009	202	REV018	46256+49193	0644
3 02 00	010	105	REV018	47420/GE	
3 02 00	011	105	REV018	GE/49632	ALL
3 02 01	001	001	REV006		ALL
3 02 01	002	001	REV012		
3 02 01	003	001	REV014		ALL
3 02 01	004	001	REV014		
3 02 01	005	001	REV019		ALL
3 02 01	006	001	REV019		
3 02 10	001	001	REV005		ALL
3 02 10	002	001	REV018		
3 02 10	003	001	REV018	STD	ALL
3 02 10	004	001	REV018		
3 02 10	005	001	REV018		ALL
3 02 10	006	001	REV012		
3 02 10	006A	010	REV019	GE 80E1A2	0054
3 02 10	006A	115	REV019	M:44905/GE 80E1A3/80E1A4	0644
3 02 10	007	001	REV011		ALL
3 02 10	008	001	REV015		
3 02 10	009	001	REV019		ALL
3 02 21	001	001	REV018		0054
3 02 21	002	001	REV018		
3 02 21	001	100	REV018	40097	0644
3 02 21	002	100	REV018	40097	
3 02 21	003	001	REV018		0054
3 02 21	004	102	REV018	49632	

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 02 21	003	210	REV019	M:40097+51502	0644
3 02 21	004	202	REV018	40097+49632	
3 02 21	005	001	REV013	STD	0054
3 02 21	006	001	REV009		
3 02 21	005	102	REV018	49193	0644
3 02 21	006	001	REV009		
3 02 21	007	102	REV018	49632	ALL
3 02 21	008	001	REV018	STD	
3 02 21	009	001	REV018		0054
3 02 21	010	102	REV018	49632	
3 02 21	009	100	REV018	40097	0644
3 02 21	010	102	REV018	49632	
3 02 21	011	102	REV018	49632	0054
3 02 21	012	100	REV018	40099	
3 02 21	011	302	REV018	40097+48818+49632	0644
3 02 21	012	100	REV018	40099	
3 02 22	001	100	REV015	46324	ALL
3 02 22	002	001	REV009		
3 02 22	003	001	REV007		0644
3 02 22	004	103	REV017	43639=43641=43724	
3 02 22	003	001	REV007		0054
3 02 22	004	200	REV017	CODE:0018	
3 02 22	005	203	REV006	CODE:0028	ALL
3 02 23	001	100	REV018	46256	ALL
3 02 23	002	102	REV015	47420	
3 02 24	001	001	REV019		0054
3 02 24	002	001	REV008		
3 02 24	001	100	REV019	M:44385	0644
3 02 24	002	001	REV008		
3 02 24	003	001	REV008		ALL
3 02 24	004	400	REV018	M:44431+46256+47420+49632	
3 02 24	005	132	REV019	M:49632/GE	0054
3 02 24	006	001	REV018		
3 02 24	005	132	REV019	M:49632/GE	0644
3 02 24	006	300	REV018	CODE:0027	
3 02 24	007	105	REV018	44603=44603+45509+46095	0054
3 02 24	008	146	REV018	GE/46964=47221=46964+47221	
3 02 24	007	205	REV018	CODE:0086	0644
3 02 24	008	406	REV018	GE+CODE:0032	

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 02 24	009	001	REV018	STD	0054
3 02 24	010	035	REV018	STD=45509+46095/GE	
3 02 24	009	102	REV018	45509	0644
3 02 24	010	305	REV019	44644+45509+49193/MGE	
3 02 24	011	001	REV018	STD=M:45509+46095	0054
3 02 24	012	001	REV018	STD	
3 02 24	011	105	REV018	M:49144	0644
3 02 24	012	001	REV018	STD	
3 02 24	013	001	REV018	STD	0054
3 02 24	014	001	REV018	STD	
3 02 24	013	110	REV018	45008	0644
3 02 24	014	001	REV018	STD	
3 02 24	015	001	REV018	STD	0054
3 02 24	016	001	REV018	STD=45509+46095	
3 02 24	015	200	REV019	M:45509+47244	0644
3 02 24	016	205	REV018	CODE:0008	
3 02 24	017	215	REV019	M:43078+49632	0054
3 02 24	018	200	REV018	CODE:0137	
3 02 24	017	300	REV019	M:43078+45509+49632	0644
3 02 24	018	200	REV018	CODE:0137	
3 02 24	019	205	REV019	M:43078+49632	0054
3 02 24	020	102	REV019	49632	
3 02 24	019	410	REV019	M:43078+45509+49144+49632	0644
3 02 24	020	202	REV019	45008+49632	
3 02 24	021	001	REV019		0054
3 02 24	022	102	REV018	49632	
3 02 24	021	100	REV019	44644	0644
3 02 24	022	304	REV018	M:44644+45509+49632	
3 02 24	023	102	REV018	49632	ALL
3 02 25	001	100	REV018	50014	ALL
3 02 26	001	100	REV015	41309	0054
3 02 26	002	001	REV015	STD	
3 02 26	001	100	REV015	41309	0644
3 02 26	002	102	REV019	M:49193	
3 02 26	003	001	REV014	STD	ALL
3 02 26	004	001	REV015	STD	
3 02 26	005	001	REV015	STD	ALL
3 02 26	006	001	REV014	STD	

M V CH SEC ---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 02 26 007	100	REV014	46256	0054
3 02 26 008	100	REV018	49632	
3 02 26 007	200	REV019	M:40379+49193	0644
3 02 26 008	100	REV018	49632	
3 02 26 009	001	REV018	STD	0054
3 02 26 010	001	REV019	STD	
3 02 26 009	001	REV018	STD	0644
3 02 26 010	105	REV019	M:40096	
3 02 26 011	001	REV019	STD	0054
3 02 26 012	001	REV019	STD	
3 02 26 011	100	REV019	M:48818	0644
3 02 26 012	001	REV019	STD	
3 02 26 013	001	REV019	STD	0054
3 02 26 013	001	REV019	STD	0644
3 02 26 014	205	REV019	M:48818+49632	
3 02 26 015	100	REV019	M:49193	0644
3 02 27 001	001	REV006	STD	0054
3 02 27 002	001	REV006		
3 02 27 001	001	REV006	STD	0644
3 02 27 002	100	REV019	M:49193	
3 02 27 003	001	REV006		0054
3 02 27 004	001	REV019		
3 02 27 003	100	REV019	M:49193	0644
3 02 27 004	001	REV019		
3 02 27 005	100	REV009	46256	0644
3 02 27 006	105	REV019	CODE 0139	
3 02 27 005	100	REV009	46256	0054
3 02 27 006	200	REV019	CODE:0161	
3 02 27 007	100	REV018	46324	0054
3 02 27 008	100	REV018	46324	
3 02 27 007	202	REV018	46324+49144	0644
3 02 27 008	100	REV018	46324	
3 02 27 009	001	REV017	STD=46256	0054
3 02 27 010	001	REV017	STD	
3 02 27 009	200	REV017	46256+46290	0644
3 02 27 010	200	REV019	46256+46290	
3 02 27 011	001	REV019		ALL
3 02 27 012	100	REV019	46256	

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 02 27	013	001	REV019		0054
3 02 27	014	001	REV019		
3 02 27	013	100	REV019	M:49144	0644
3 02 27	014	001	REV019		
3 02 27	015	001	REV012	STD	0054
3 02 27	016	001	REV005	STD	
3 02 27	015	102	REV018	49144	0644
3 02 27	016	300	REV019	CODE:0181	
3 02 27	017	001	REV011	STD	0054
3 02 27	018	101	REV019	47420=46812+47420	
3 02 27	017	102	REV018	49144	0644
3 02 27	018	103	REV018	49144=46812+47420+49144	
3 02 27	019	001	REV015	STD	0054
3 02 27	020	100	REV019	47420	
3 02 27	019	105	REV018	M:49144	0644
3 02 27	020	200	REV019	M:44905+49144	
3 02 27	021	102	REV019	49144	0644
3 02 27	022	102	REV019	M:49144	
3 02 27	023	102	REV019	M:49144	0644
3 02 28	001	001	REV006	STD	0054
3 02 28	002	005	REV015	GE/PW	
3 02 28	001	100	REV008	44644	0644
3 02 28	002	005	REV015	GE/PW	
3 02 28	003	001	REV006	STD	0054
3 02 28	004	105	REV018	49632	
3 02 28	003	100	REV008	44644	0644
3 02 28	004	205	REV018	44644+49632	
3 02 28	005	001	REV008	STD=44488	0054
3 02 28	006	001	REV018	STD	
3 02 28	005	210	REV008	44488+44644	0644
3 02 28	006	100	REV018	44644	
3 02 28	006A	001	REV009	STD	ALL
3 02 28	007	105	REV009	46256	0054
3 02 28	008	001	REV019	STD	
3 02 28	007	205	REV009	44644+46256	0644
3 02 28	008	100	REV019	44644	
3 02 28	009	001	REV019	STD	0054
3 02 28	010	100	REV008	46256	

M V CH SEC ---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 02 28 009	100	REV019	44644	0644
3 02 28 010	200	REV008	44644+46256	
3 02 28 011	001	REV018	STD	0054
3 02 28 012	102	REV019	49632	
3 02 28 011	100	REV018	44644	0644
3 02 28 012	102	REV019	49632	
3 02 28 013	100	REV009	CODE:0092	0054
3 02 28 014	001	REV019		
3 02 28 013	410	REV018	44644+47930+49632+49800	0644
3 02 28 014	100	REV019	44644	
3 02 28 015	001	REV018	STD	0054
3 02 28 015	001	REV018	STD	0644
3 02 28 016	100	REV018	45008	
3 02 29 001	001	REV005	STD	0054
3 02 29 002	100	REV019	49632	
3 02 29 001	001	REV005	STD	0644
3 02 29 002	202	REV019	M:49144+49193	
3 02 29 003	100	REV014	46812	ALL
3 02 29 004	100	REV016	46812	
3 02 29 004A	100	REV017	46812	0054
3 02 29 004A	105	REV019	M:49144	0644
3 02 29 005	100	REV015	46812	ALL
3 02 29 006	110	REV019	CODE 0182	
3 02 29 006A	001	REV017	STD	0054
3 02 29 006A	100	REV019	M:49144	0644
3 02 29 007	100	REV013	46812	0054
3 02 29 008	100	REV018	49632	
3 02 29 007	102	REV018	49144	0644
3 02 29 008	105	REV019	M:49193	
3 02 29 008A	001	REV019		0054
3 02 29 008A	102	REV019	49144	0644
3 02 29 009	001	REV018	STD	0054
3 02 29 010	001	REV018	STD	
3 02 29 009	001	REV018	STD	0644
3 02 29 010	100	REV019	M:49144	
3 02 29 011	001	REV015	STD	0054
3 02 29 012	100	REV018	49632	

M	V	CH	SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
M	V	CH	SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3		02	29	011	001	REV015	STD	0644
3		02	29	012	202	REV019	49144+49193	
3		02	29	013	100	REV018	46812	0054
3		02	29	014	110	REV018	46812	
3		02	29	013	100	REV018	46812	0644
3		02	29	014	120	REV019	M:49144	
3		02	29	015	001	REV015	STD	ALL
3		02	29	016	100	REV015	44488	
3		02	30	001	001	REV019		0054
3		02	30	002	001	REV005	STD	
3		02	30	001	001	REV019		0644
3		02	30	002	102	REV018	49193	
3		02	30	003	001	REV014		0054
3		02	30	004	001	REV019		
3		02	30	003	100	REV019	M:49193	0644
3		02	30	004	001	REV019		
3		02	30	005	001	REV019		ALL
3		02	30	006	001	REV009		
3		02	30	007	001	REV019		0054
3		02	30	008	001	REV019		
3		02	30	007	001	REV019		0644
3		02	30	008	100	REV018	40074	
3		02	30	009	100	REV019	M:49193	0644
3		02	30	010	100	REV019	M:49193	
3		02	30	011	100	REV019	M:49193	0644
3		02	30	012	100	REV019	M:49193	
3		02	30	013	100	REV019	M:49193	0644
3		02	31	001	001	REV005		ALL
3		02	31	002	001	REV005		
3		02	31	003	001	REV005		0054
3		02	31	004	001	REV006		
3		02	31	003	100	REV019	M:50161	0644
3		02	31	004	001	REV006		
3		02	31	005	001	REV016	STD	0054
3		02	31	006	100	REV014	45057	
3		02	31	005	100	REV016	47524	0644
3		02	31	006	100	REV014	45057	
3		02	32	001	001	REV016		ALL
3		02	32	002	001	REV015		

M V CH SEC ---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 02 32 003	001	REV006		ALL
3 02 32 004	001	REV006		
3 02 32 005	001	REV018	STD	ALL
3 02 32 006	001	REV008		
3 02 32 007	001	REV012	STD	0054
3 02 32 008	001	REV013	STD	
3 02 32 007	100	REV012	45008	0644
3 02 32 008	105	REV013	45008	
3 02 32 009	001	REV017		ALL
3 02 32 010	200	REV019	M:45900+49632	
3 02 32 011	310	REV019	44919+46256+49632	0054
3 02 32 012	103	REV019	M:49632	
3 02 32 011	310	REV019	44919+46256+49632	0644
3 02 32 012	300	REV019	40118+43442+49632	
3 02 32 013	001	REV011	STD	0054
3 02 32 014	001	REV019		
3 02 32 013	001	REV011	STD	0644
3 02 32 014	100	REV019	M:49193	
3 02 34 001	100	REV010	46324	ALL
3 02 34 002	100	REV017	46324	
3 02 34 003	001	REV019		0054
3 02 34 004	001	REV016	STD	
3 02 34 003	001	REV019		0644
3 02 34 004	100	REV019	M:49144	
3 02 34 004A	100	REV017	46324	ALL
3 02 34 005	001	REV018	STD	0054
3 02 34 006	001	REV018	CODE:0078	
3 02 34 005	001	REV018	STD	0644
3 02 34 006	305	REV019	CODE 0191	
3 02 34 007	100	REV017	46324	ALL
3 02 34 008	001	REV006	STD	
3 02 34 009	001	REV018	STD	0054
3 02 34 010	100	REV018	46256	
3 02 34 009	102	REV018	49193	0644
3 02 34 010	100	REV018	46256	
3 02 34 011	001	REV006	STD	0054
3 02 34 012	100	REV018	46324	
3 02 34 011	001	REV006	STD	0644
3 02 34 012	200	REV018	46324+49026	

M	V	CH	SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
M	V	CH	SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3		02	34	013	100	REV016	46324	ALL
3		02	34	014	100	REV019	CODE:0036	
3		02	34	015	001	REV016	STD	0054
3		02	34	016	001	REV018	STD	
3		02	34	015	100	REV019	M:49193	0644
3		02	34	016	200	REV019	M:49144+49193	
3		02	34	017	001	REV017	STD	ALL
3		02	34	018	001	REV017	STD	
3		02	34	019	001	REV017	STD	ALL
3		02	34	020	001	REV017	STD	
3		02	34	021	070	REV017	GE80E1A2	0054
3		02	34	022	070	REV017	GE80E1A2	
3		02	34	021	130	REV017	80E1A2/A3/A4/44905	0644
3		02	34	022	130	REV017	80E1A2/A3/A4/44905	
3		02	34	023	070	REV018	GE	ALL
3		02	36	001	001	REV013	STD	0054
3		02	36	002	001	REV019		
3		02	36	001	001	REV013	STD	0644
3		02	36	002	100	REV019	40097	
3		02	36	003	001	REV019		0054
3		02	36	004	001	REV018	STD	
3		02	36	003	100	REV019	40097	0644
3		02	36	004	001	REV018	STD	
3		02	36	005	100	REV008	46256	ALL
3		02	36	006	001	REV019		
3		02	36	007	001	REV010	STD	ALL
3		02	46	001	300	REV017	46742+47420+48227	0644
3		02	49	001	100	REV009	46511	ALL
3		02	52	001	001	REV018	STD	ALL
3		02	52	002	001	REV005	STD	
3		02	70	001	101	REV018	49632	0054
3		02	70	002	110	REV018	49632	
3		02	70	001	200	REV019	M:49193+49632	0644
3		02	70	002	110	REV018	49632	
3		02	70	003	110	REV019	M:49632	0054
3		02	70	004	125	REV018	49632=(47420+49632)	
3		02	70	003	200	REV019	M:49144+49193	0644
3		02	70	004	125	REV018	49632=(47420+49632)	

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 02 70	005	001	REV018		0054
3 02 70	006	200	REV007	CODE 0065	
3 02 70	005	200	REV018	M:49144+49193	0644
3 02 70	006	300	REV009	CODE:0021	
3 02 70	007	140	REV018	GE/49632	0054
3 02 70	008	120	REV018	GE/49632	
3 02 70	007	247	REV018	CODE 0119/GE	0644
3 02 70	008	120	REV018	GE/49632	
3 02 70	009	105	REV007	M:44488/GE ALL	ALL
3 02 70	010	105	REV018	GE/49632	
3 02 70	011	001	REV010		ALL
3 02 70	012	005	REV006	GE ALL	
3 02 70	013	020	REV007	GE ALL	ALL
3 02 70	014	100	REV018	49632	
3 02 70	015	100	REV019	49632	0054
3 02 70	016	110	REV018	49632=(47420+49632)	
3 02 70	015	200	REV019	M:49144+49632	0644
3 02 70	016	110	REV018	49632=(47420+49632)	
3 02 70	017	105	REV013	M:47420/GE	0054
3 02 70	018	020	REV018	GE ALL	
3 02 70	017	105	REV013	M:47420/GE	0644
3 02 70	018	120	REV019	M:49193/GE	
3 02 70	019	001	REV018	GE ALL	ALL
3 02 70	020	001	REV018		
3 02 70	021	001	REV007		0054
3 02 70	022	105	REV008	CODE 0020	
3 02 70	021	100	REV019	M:49193	0644
3 02 70	022	105	REV008	CODE 0020	
3 02 70	023	001	REV007		ALL
3 02 70	024	001	REV012		
3 02 70	025	001	REV019		ALL
3 02 70	026	050	REV018	GE	
3 02 70	027	100	REV011	M:46237	ALL
3 02 70	028	001	REV011		
3 02 80	001	001	REV017		0054
3 02 80	002	100	REV013	M:46324	
3 02 80	001	001	REV017		0644
3 02 80	002	200	REV013	M:45008+46324	
3 02 80	003	001	REV018		0054
3 02 80	004	001	REV009		

M	V	CH	SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
M	V	CH	SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3		02	80	003	100	REV018	M:45008	0644
3		02	80	004	100	REV016	CODE:0088	
3		02	80	005	100	REV013	M:46324	0054
3		02	80	006	001	REV017		
3		02	80	005	200	REV013	M:45008+46324	0644
3		02	80	006	200	REV017	CODE:0085	
3		02	80	007	001	REV016		0644
3		02	80	008	125	REV015	GE80E1A4/44905=44905+47233	
3		02	80	007	001	REV016		0054
3		02	80	008	126	REV015	47233/80E1A2	
3		02	80	009	001	REV006		ALL
3		02	80	010	001	REV016		
3		02	80	010A	001	REV013		ALL
3		02	80	011	001	REV017		ALL
3		02	80	011A	001	REV016		ALL
3		02	80	012	001	REV016		ALL
3		02	80	013	001	REV015		0054
3		02	80	014	001	REV013		
3		02	80	013	001	REV015		0644
3		02	80	014	200	REV019	M:40467+50616=45748+50616	
3		02	80	015	040	REV018	GE	0054
3		02	80	016	100	REV019	M:47420	
3		02	80	015	040	REV018	GE	0644
3		02	80	016	200	REV019	CODE 0189	
3		02	80	017	001	REV019		ALL
3		02	80	018	100	REV019	49632	
3		02	80	019	001	REV017		0054
3		02	80	020	001	REV017		
3		02	80	019	001	REV017		0644
3		02	80	020	100	REV017	44100=44754	
3		02	80	021	001	REV017		ALL
3		02	90	001	001	REV010		0644
3		02	90	002	001	REV019		
3		02	90	001	001	REV010		0054
3		02	90	002	100	REV019	M:40161	
3		02	90	003	001	REV019		ALL
3		02	90	004	001	REV019		

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 02 90	005	001	REV019		ALL
3 02 90	006	001	REV019		
3 02 90	007	001	REV019		0644
3 02 90	008	001	REV019		
3 02 90	007	001	REV019		0054
3 02 90	008	100	REV019	M:40161	
3 03 00	001	001	REV009		ALL
3 03 01	001	001	REV017		ALL
3 03 01	002	001	REV017		
3 03 01	003	001	REV016		ALL
3 03 01	004	001	REV016		
3 03 01	005	001	REV007		ALL
3 03 02	001	001	REV016		ALL
3 03 02	002	001	REV007		
3 03 03	001	001	REV007		ALL
3 03 04	001	001	REV008		ALL
3 03 04	002	100	REV014	M:42630	
3 03 04	003	100	REV013	M:46255	0054
3 03 04	004	001	REV013	STD=45191+46237+46256	
3 03 04	003	105	REV013	M:47454=(46255+47454)	0644
3 03 04	004	001	REV013	STD=45191+46237+46256	
3 03 04	005	001	REV018		ALL
3 03 04	006	005	REV015	GE	
3 03 05	001	001	REV017		ALL
3 03 05	002	001	REV017		
3 03 05	003	001	REV005		ALL
3 03 05	004	001	REV018		
3 03 05	005	001	REV017		ALL
3 03 05	006	001	REV018		
3 03 06	001	001	REV007		0054
3 03 06	002	001	REV018	STD	
3 03 06	001	001	REV007		0644
3 03 06	002	305	REV019	M:44905+50690+51411	
3 03 06	003	001	REV018	STD	0054
3 03 06	004	001	REV015		
3 03 06	003	100	REV018	45471=45470=45469	0644
3 03 06	004	001	REV015		
3 03 06	005	100	REV019	CODE 0101	0054
3 03 06	006	001	REV019		

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 03 06	005	100	REV019	CODE 0101	0644
3 03 06	006	100	REV019	M:51411	
3 03 06	007	001	REV018	CODE 0102	0054
3 03 06	008	001	REV015		
3 03 06	007	100	REV018	M:43037=44629=45055	0644
3 03 06	008	001	REV015		
3 03 06	009	001	REV017		ALL
3 03 06	010	001	REV017		
3 03 06	011	001	REV018	CODE:0180	0054
3 03 06	012	001	REV018		
3 03 06	011	110	REV018	M:47244	0644
3 03 06	012	105	REV018	M:44100=44754	
3 03 06	013	001	REV007		ALL
3 03 06	014	001	REV010		
3 03 06	015	001	REV018		0054
3 03 06	015	100	REV018	M:46698=46817	0644
3 03 07	001	001	REV015		0054
3 03 07	002	205	REV018	M:49632+50014	
3 03 07	001	001	REV015		0644
3 03 07	002	300	REV018	M:47500+49632+50014	
3 03 07	003	001	REV018		ALL
3 03 08	001	100	REV019	M:46237 GE ALL	ALL
3 03 08	002	005	REV005	GE ALL	
3 03 09	001	005	REV006	GE ALL	0054
3 03 09	002	005	REV018	GE	
3 03 09	001	005	REV006	GE ALL	0644
3 03 09	002	140	REV018	GE/43442	
3 03 10	001	005	REV016	GE	0054
3 03 10	002	100	REV016	CODE 0166	
3 03 10	001	005	REV016	GE	0644
3 03 10	002	115	REV016	CODE:0164	
3 03 10	003	001	REV019		0054
3 03 10	004	001	REV019		
3 03 10	003	001	REV019		0644
3 03 10	004	100	REV019	M:44100=44754	
3 03 10	005	001	REV005		0054
3 03 10	006	100	REV012	CODE 0166	
3 03 10	005	001	REV005		0644
3 03 10	006	120	REV014	CODE:0164	

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 03 11	001	005	REV015	GE ALL	ALL
3 03 11	002	001	REV017		
3 03 12	001	001	REV018		0054
3 03 12	002	005	REV018	GE ALL	
3 03 12	001	001	REV018		0644
3 03 12	002	100	REV018	46459	
3 03 12	003	001	REV016		ALL
3 03 12	004	001	REV016		
3 03 12	005	001	REV019		ALL
3 03 13	001	008	REV018	GE/PW	ALL
3 03 14	001	001	REV009		ALL
3 03 14	002	100	REV009	M:46558	
3 03 15	001	100	REV017	46558	ALL
3 03 15	002	001	REV018	STD	
3 03 16	001	001	REV005		ALL
3 03 16	002	001	REV019		
3 03 16	003	005	REV019	GE/ALL + PW/ALL	ALL
3 03 17	001	100	REV008	M:43724+44661+44662	ALL
3 03 17	002	100	REV006	M:43724+44661+44662	
3 03 17	003	001	REV018	STD+M:40064+43057	ALL
3 03 17	004	001	REV017		
3 03 18	001	001	REV009		0054
3 03 18	002	105	REV018	CODE 0062	
3 03 18	001	001	REV009		0644
3 03 18	002	210	REV018	CODE:0117	
3 03 18	003	001	REV018	STD	ALL
3 03 18	004	001	REV018		
3 03 18	005	001	REV018	STD	0054
3 03 18	006	001	REV019		
3 03 18	005	001	REV018	STD	0644
3 03 18	006	100	REV019	M:49193	
3 03 18	007	001	REV018		ALL
3 03 18	008	001	REV015		
3 03 19	001	001	REV019	CODE 0122	0054
3 03 19	002	001	REV019		
3 03 19	001	100	REV019	CODE 0192	0644
3 03 19	002	001	REV019		
3 03 19	003	001	REV018	CODE 0172	0054
3 03 19	004	001	REV018		

M	V	CH	SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
M	V	CH	SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3		03	19	003	206	REV019	CODE 0174	0644
3		03	19	004	001	REV018		
3		03	19	005	001	REV018		0054
3		03	19	006	103	REV018	CODE 0130	
3		03	19	005	001	REV018		0644
3		03	19	006	205	REV018	CODE 0131	
3		03	19	007	001	REV018	CODE 0122	0054
3		03	19	008	001	REV019		
3		03	19	007	100	REV018	CODE 0192	0644
3		03	19	008	100	REV019	M:49193	
3		03	19	009	001	REV018		ALL
3		03	19	010	001	REV019		
3		03	19	011	001	REV019		ALL
3		03	19	012	001	REV018		
3		03	19	013	001	REV018		ALL
3		03	20	001	001	REV017		ALL
3		03	20	002	001	REV005		
3		03	21	001	001	REV005		ALL
3		03	22	001	001	REV006		0054
3		03	22	002	001	REV016		
3		03	22	001	100	REV010	M:44905	0644
3		03	22	002	100	REV016	44905	
3		03	22	003	005	REV017	GE ALL	0054
3		03	22	004	001	REV018		
3		03	22	003	100	REV017	GE ALL/44905	0644
3		03	22	004	100	REV018	M:44905	
3		03	22	005	001	REV015		ALL
3		03	22	006	001	REV005		
3		03	23	001	001	REV018		ALL
3		03	23	002	001	REV018		
3		03	24	001	001	REV017		ALL
3		03	24	002	001	REV016		
3		03	25	001	005	REV017	GE ALL	ALL
3		03	25	002	001	REV017	STD	
3		03	25	003	001	REV019	STD+M:44905+50690	ALL
3		03	26	001	001	REV012		ALL
3		03	90	001	001	REV017		ALL
3		03	90	002	001	REV016		

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 03 90	003	001	REV009		ALL
3 03 90	004	001	REV009		
3 03 90	005	001	REV009		ALL
3 03 90	006	001	REV009		
3 03 90	007	001	REV015		ALL
3 04 00	001	100	REV018	50014	ALL
3 04 00	002	001	REV018	STD	
3 04 00	003	050	REV018	RR/GE	ALL
3 04 10	001	001	REV006		ALL
3 04 10	002	100	REV019	M:43724 OR 44661 OR 44662	
3 04 10	003	001	REV019		ALL
3 04 10	004	001	REV008		
3 04 21	001	001	REV008		ALL
3 04 21	002	001	REV014		
3 04 23	001	001	REV018	STD	0054
3 04 23	002	103	REV019	CODE 0104	
3 04 23	001	001	REV018	STD	0644
3 04 23	002	200	REV018	CODE 0099	
3 04 23	002A	001	REV019		ALL
3 04 23	003	110	REV014	45452=48447=45451+46609	0644
3 04 23	004	110	REV014	M:45452=48447=(45451+46609)	
3 04 23	005	200	REV015	CODE 0083	0644
3 04 24	001	001	REV010		ALL
3 04 24	002	001	REV019		
3 04 24	003	001	REV009		ALL
3 04 24	004	100	REV015	M:43078	
3 04 24	005	001	REV018		0054
3 04 24	006	001	REV018		
3 04 24	005	001	REV018		0644
3 04 24	006	100	REV019	M:46742	
3 04 24	007	001	REV016		ALL
3 04 25	001	100	REV018	50014	0054
3 04 25	002	100	REV018	50014	
3 04 25	001	200	REV018	50014+50242	0644
3 04 25	002	200	REV018	50014+50242	
3 04 25	003	100	REV018	50014	ALL
3 04 27	001	001	REV006		ALL
3 04 27	002	001	REV018		

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 04 27	003	001	REV018		ALL
3 04 27	004	100	REV018	M:46512=46964=47221	
3 04 27	005	100	REV018	M:46512=46964=47221	0054
3 04 27	006	001	REV018		
3 04 27	005	100	REV018	M:46512=46964=47221	0644
3 04 27	006	100	REV018	M:49144	
3 04 27	007	001	REV018		ALL
3 04 27	008	001	REV018		
3 04 27	009	001	REV013		ALL
3 04 27	010	001	REV013		
3 04 27	011	100	REV017	42732	ALL
3 04 28	001	100	REV016	45008	0644
3 04 28	002	205	REV017	44575+45008	
3 04 30	001	001	REV019	STD	ALL
3 04 30	002	100	REV018	M:44482=45897	
3 04 31	001	001	REV006		ALL
3 04 31	002	001	REV006		
3 04 32	001	001	REV017		0054
3 04 32	002	001	REV019		
3 04 32	001	100	REV017	CODE:0057	0644
3 04 32	002	001	REV019		
3 04 32	003	001	REV016		0054
3 04 32	003	100	REV019	M:50214=51393	0644
3 04 34	001	001	REV008		ALL
3 04 34	002	001	REV014		
3 04 34	003	001	REV013		ALL
3 04 34	004	200	REV018	CODE 0105	
3 04 34	005	001	REV008		ALL
3 04 34	006	001	REV008	STD=43537	
3 04 34	007	001	REV019		ALL
3 04 34	008	100	REV011	CODE 0036	
3 04 34	009	100	REV011	CODE 0036	ALL
3 04 34	010	001	REV005		
3 04 34	011	001	REV018	STD	ALL
3 04 34	012	001	REV014		
3 04 34	013	200	REV018	M:46324+49632	0054
3 04 34	014	001	REV012		
3 04 34	013	200	REV018	M:46324+49632	0644
3 04 34	014	100	REV019	M:51411	

M V CH SEC ---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 04 34 015	001	REV016		0054
3 04 34 016	001	REV016		
3 04 34 015	100	REV019	M:51411	0644
3 04 34 016	100	REV019	M:51411	
3 04 46 001	200	REV015	46742+48227	0644
3 04 46 002	200	REV019	46742+48227	
3 04 46 003	200	REV015	46742+48227	0644
3 04 46 004	200	REV018	46742+48227	
3 04 46 005	200	REV019	46742+48227	0644
3 04 46 006	200	REV015	46742+48227	
3 04 46 007	200	REV015	46742+48227	0644
3 04 46 008	200	REV015	46742+48227	
3 04 46 009	200	REV015	46742+48227	0644
3 04 46 010	200	REV015	46742+48227	
3 04 46 011	200	REV015	46742+48227	0644
3 04 46 012	200	REV015	46742+48227	
3 04 46 013	200	REV015	46742+48227	0644
3 04 46 014	200	REV015	46742+48227	
3 04 46 015	200	REV015	46742+48227	0644
3 04 46 016	200	REV015	46742+48227	
3 04 46 017	200	REV015	46742+48227	0644
3 04 46 018	200	REV015	46742+48227	
3 04 46 019	200	REV015	46742+48227	0644
3 04 46 020	200	REV015	46742+48227	
3 04 46 021	200	REV018	46742+48227	0644
3 04 52 001	001	REV005		ALL
3 04 70 001	001	REV005		ALL
3 04 70 002	001	REV019		
3 04 70 003	005	REV019	GE ALL	ALL
3 04 70 004	100	REV009	M:46237 GE ALL	
3 04 70 005	001	REV015		ALL
3 04 70 006	001	REV005		
3 04 70 007	001	REV012		0054
3 04 70 008	050	REV012		
3 04 70 007	001	REV012		0644
3 04 70 008	200	REV012	CODE:0039	
3 04 70 009	040	REV018	GE	ALL
3 04 90 001	005	REV005	GE ALL	ALL
3 04 90 002	005	REV019	GE	

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 04 91	001	001	REV014		0054
3 04 91	002	001	REV014		
3 04 91	001	001	REV014		0644
3 04 91	002	100	REV014	MOD 44905	
3 04 91	003	010	REV016	GE 80E1A2	0054
3 04 91	004	001	REV018		
3 04 91	003	115	REV016	GE80E1A2/A3/A4/44905	0644
3 04 91	004	001	REV018		
3 04 91	005	001	REV008		ALL
3 04 91	006	001	REV013		
3 04 91	007	001	REV008		ALL
3 04 91	008	001	REV018	STD	
3 04 91	009	120	REV018	42915=42630+42915	ALL
3 04 91	010	001	REV018	STD	
3 04 91	010A	001	REV019		ALL
3 04 91	011	001	REV019	STD	ALL
3 04 91	012	001	REV019		
3 04 91	012A	001	REV019		ALL
3 04 91	013	001	REV010		ALL
3 04 91	014	001	REV019		
3 04 91	014A	001	REV019		ALL
3 04 91	015	001	REV010		ALL
3 04 91	016	100	REV018	M:40096=40098=40099	
3 04 92	001	001	REV018	STD	ALL
3 04 92	002	001	REV018	STD	
3 04 92	003	001	REV018	STD	ALL
3 04 92	004	001	REV018	STD	
3 04 92	005	001	REV018	STD	ALL
3 04 92	006	001	REV018	STD	
3 05 00	001	001	REV018		ALL
3 05 00	002	001	REV006		
3 05 05	001	001	REV006		ALL
3 05 05	002	001	REV006		
3 05 05	003	001	REV006		ALL
3 05 05	004	001	REV005		
3 05 05	005	001	REV012		ALL
3 05 05	006	001	REV005		
3 05 06	001	010	REV006	STD=80E1A2/A3/A4/45055+46266	0054
3 05 06	002	010	REV007	GE 80E1A2	

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 05 06	001	110	REV011	GE80E1A2/A3/A4/45055	0644
3 05 06	002	015	REV008	GE 80E1A4	
3 05 06	003	010	REV006	GE 80E1A2	0054
3 05 06	004	010	REV011	GE 80E1A2	
3 05 06	003	015	REV007	GE 80E1A4	0644
3 05 06	004	015	REV007	GE 80E1A4	
3 05 06	005	010	REV006	GE 80E1A2	0054
3 05 06	006	010	REV007	GE 80E1A2/80E1A4	
3 05 06	005	015	REV012	GE 80E1A4	0644
3 05 06	006	010	REV007	GE 80E1A2/80E1A4	
3 05 06	007	010	REV007	GE 80E1A2/80E1A4	ALL
3 05 06	008	005	REV006	GE ALL	
3 05 10	001	001	REV008		0054
3 05 10	002	010	REV007	GE 80E1A2/A3/A4	
3 05 10	001	001	REV008		0644
3 05 10	002	115	REV009	GE80E1A2/A3/A4/44905	
3 05 10	003	010	REV007	GE 80E1A2/A3/A4	0054
3 05 10	004	010	REV007	GE 80E1A2/A3/A4	
3 05 10	003	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 10	004	115	REV009	GE80E1A2/A3/A4/44905	
3 05 10	005	010	REV007	GE 80E1A2/A3/A4	0054
3 05 10	005	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 10	006	110	REV009	M:45530=45584=45656	
3 05 10	007	215	REV010	44905+45584/GE80E1A2/A3/A4	0644
3 05 10	008	215	REV010	44905+45584/GE80E1A2/A3/A4	
3 05 10	009	215	REV010	44905+45584/GE80E1A2/A3/A4	0644
3 05 10	010	215	REV010	44905+45584/GE80E1A2/A3/A4	
3 05 10	011	215	REV010	44905+45584/GE80E1A2/A3/A4	0644
3 05 10	012	215	REV010	44905+45584/GE80E1A2/A3/A4	
3 05 10	013	215	REV010	44905+45584/GE80E1A2/A3/A4	0644
3 05 10	014	215	REV010	44905+45584/GE80E1A2/A3/A4	
3 05 15	001	010	REV007	GE 80E1A2/A4/A3	0054
3 05 15	002	010	REV007	GE 80E1A2/A4/A3	
3 05 15	001	105	REV015	47457 OR 51139/80E1A2/A3/A4	0644
3 05 15	002	105	REV015	47457=51139/80E1A2/A3/A4	
3 05 15	003	010	REV007	GE 80E1A2/A4/A3	0054
3 05 15	004	010	REV014	GE 80E1A2/A4/A3	
3 05 15	003	105	REV015	47457=51139/80E1A2/A3/A4	0644
3 05 15	004	010	REV014	GE 80E1A2/A4/A3	

M V CH SEC ---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 05 15 005	010	REV009	GE 80E1A2/A4/A3	ALL
3 05 15 006	010	REV009	GE 80E1A2/A4/A3	
3 05 15 007	010	REV007	GE 80E1A2/A4/A3	ALL
3 05 15 008	010	REV007	GE 80E1A2/A4/A3	
3 05 15 009	010	REV007	GE 80E1A2/A4/A3	ALL
3 05 15 010	010	REV007	GE 80E1A2/4A/A3	
3 05 15 011	010	REV007	GE 80E1A2/A3/A4	0054
3 05 15 012	010	REV007	GE 80E1A2/A3/A4	
3 05 15 011	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 15 012	115	REV009	GE80E1A2/A3/A4/44905	
3 05 15 013	010	REV007	GE 80E1A2/A3/A4	0054
3 05 15 014	010	REV007	GE 80E1A2/A3/A4	
3 05 15 013	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 15 014	115	REV009	GE80E1A2/A3/A4/44905	
3 05 15 015	010	REV007	GE 80E1A2/A3/A4	0054
3 05 15 016	010	REV007	GE 80E1A2/A3/A4	
3 05 15 015	115	REV010	GE80E1A2/A3/A4/44905	0644
3 05 15 016	115	REV010	GE80E1A2/A3/A4/44905	
3 05 15 017	010	REV007	GE 80E1A2/A3/A4	0054
3 05 15 018	010	REV007	GE 80E1A2/A3/A4	
3 05 15 017	115	REV010	GE80E1A2/A3/A4/44905	0644
3 05 15 018	115	REV010	GE80E1A2/A3/A4/44905	
3 05 15 019	010	REV007	GE 80E1A2/A3/A4	0054
3 05 15 020	010	REV007	GE 80E1A2/A3/A4	
3 05 15 019	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 15 020	115	REV009	GE80E1A2/A3/A4/44905	
3 05 15 021	010	REV007	GE 80E1A2/A3/A4	0054
3 05 15 022	010	REV007	GE 80E1A2/A3/A4	
3 05 15 021	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 15 022	115	REV009	GE80E1A2/A3/A4/44905	
3 05 15 023	010	REV014	GE 80E1A2/A3/A4	0054
3 05 15 024	010	REV014	GE 80E1A2/A3/A4	
3 05 15 023	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 15 024	115	REV009	GE80E1A2/A3/A4/44905	
3 05 15 025	010	REV014	GE 80E1A2/A3/A4	0054
3 05 15 026	010	REV014	GE 80E1A2/A3/A4	
3 05 15 025	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 15 026	115	REV009	GE80E1A2/A3/A4/44905	
3 05 15 027	010	REV014	GE 80E1A2/A3/A4	0054
3 05 15 028	010	REV014	GE 80E1A2/A3/A4	

M V CH SEC ---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 05 15 027	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 15 028	115	REV009	GE80E1A2/A3/A4/44905	
3 05 15 029	010	REV014	GE 80E1A2/A3/A4	0054
3 05 15 030	010	REV014	GE 80E1A2/A3/A4	
3 05 15 029	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 15 030	115	REV009	GE80E1A2/A3/A4/44905	
3 05 20 001	001	REV006		0054
3 05 20 002	010	REV007	GE 80E1A2/A3/A4	
3 05 20 001	001	REV006		0644
3 05 20 002	115	REV009	GE80E1A2/A3/A4/44905	
3 05 20 003	010	REV006	GE 80E1A2/A3/A4	0054
3 05 20 004	010	REV006	GE 80E1A2/A3/A4	
3 05 20 003	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 20 004	115	REV009	GE80E1A2/A3/A4/44905	
3 05 20 005	010	REV007	GE 80E1A2/A3/A4	0054
3 05 20 006	010	REV007	GE 80E1A2/A3/A4	
3 05 20 005	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 20 006	115	REV009	GE80E1A2/A3/A4/44905	
3 05 20 007	010	REV007	GE 80E1A2/A3/A4	0054
3 05 20 008	010	REV007	GE 80E1A2/A3/A4	
3 05 20 007	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 20 008	115	REV009	GE80E1A2/A3/A4/44905	
3 05 20 009	010	REV007	GE 80E1A2/A3/A4	0054
3 05 20 010	010	REV007	GE 80E1A2/A3/A4	
3 05 20 009	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 20 010	115	REV009	GE80E1A2/A3/A4/44905	
3 05 20 011	010	REV007	GE 80E1A2/A3/A4	0054
3 05 20 012	010	REV007	GE 80E1A2/A3/A4	
3 05 20 011	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 20 012	115	REV009	GE80E1A2/A3/A4/44905	
3 05 20 013	010	REV007	GE 80E1A2/A3/A4	0054
3 05 20 014	010	REV006	GE 80E1A2/A3/A4	
3 05 20 013	115	REV009	GE80E1A2/A3/A4/44905	0644
3 05 20 014	115	REV009	GE80E1A2/A3/A4/44905	
3 05 20 015	010	REV007	GE 80E1A2/A3/A4	0054
3 05 20 016	010	REV007	GE 80E1A2/A3/A4	
3 05 20 015	115	REV010	GE80E1A2/A3/A4/44905	0644
3 05 20 016	115	REV010	GE80E1A2/A3/A4/44905	
3 05 20 017	010	REV007	GE 80E1A2/A3/A4	0054
3 05 20 018	010	REV007	GE 80E1A2/A3/A4	

M	V	CH	SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
M	V	CH	SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3		05	20	017	115	REV010	GE80E1A2/A3/A4/44905	0644
3		05	20	018	115	REV010	GE80E1A2/A3/A4/44905	
3		05	20	019	001	REV013		ALL
3		05	20	020	001	REV013		
3		05	25	001	001	REV006		0054
3		05	25	002	010	REV015	GE 80E1A2/A3/A4	
3		05	25	001	001	REV006		0644
3		05	25	002	115	REV015	GE80E1A2/A3/A4/44905	
3		05	25	003	010	REV015	GE 80E1A2/80E1A4	0054
3		05	25	004	010	REV015	GE 80E1A2/80E1A4	
3		05	25	003	115	REV015	GE80E1A2/A3/A4/44905	0644
3		05	25	004	115	REV015	GE80E1A2/A3/A4/44905	
3		05	25	005	010	REV015	GE 80E1A2/80E1A4	0054
3		05	25	005	115	REV015	GE80E1A2/A3/A4/44905	0644
3		05	30	001	001	REV006		0054
3		05	30	002	010	REV006	GE 80E1A2/A3/A4	
3		05	30	001	001	REV006		0644
3		05	30	002	115	REV009	GE80E1A2/A3/A4/44905	
3		05	30	003	010	REV006	GE 80E1A2/A3/A4	0054
3		05	30	003	115	REV009	GE80E1A2/A3/A4/44905	0644
3		05	35	001	001	REV010		0054
3		05	35	002	010	REV008	GE 80E1A2	
3		05	35	001	001	REV010		0644
3		05	35	002	115	REV009	M:44905 GE 80E1A4	
3		05	35	003	010	REV012	GE 80E1A2	0054
3		05	35	004	001	REV008		
3		05	35	003	115	REV009	M:44905 GE 80E1A4	0644
3		05	35	004	001	REV008		
3		05	35	005	010	REV008	GE 80E1A2	0054
3		05	35	006	010	REV008	GE 80E1A2	
3		05	35	005	115	REV009	M:44905 GE 80E1A4	0644
3		05	35	006	115	REV009	M:44905 GE 80E1A4	
3		05	40	001	001	REV008		0054
3		05	40	002	010	REV012	GE 80E1A2/A3/A4	
3		05	40	001	001	REV008		0644
3		05	40	002	115	REV012	GE80E1A2/A3/A4/44905	
3		05	40	003	010	REV012	GE 80E1A2/A3/A4	0054
3		05	40	003	115	REV012	GE80E1A2/A3/A4/44905	0644

M V CH SEC	---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 05 50	001	001	REV006		ALL
3 05 50	002	001	REV011		
3 05 50	003	001	REV011		ALL
3 05 50	004	001	REV011		
3 05 50	005	001	REV011		ALL
3 05 50	006	001	REV011		
3 06 00	001	001	REV007		ALL
3 06 10	001	001	REV006		ALL
3 06 10	002	001	REV006		
3 06 20	001	010	REV008	GE 80E1A2	0054
3 06 20	001	115	REV009	80E1A4/A3/44905	0644
3 06 30	001	001	REV007		0054
3 06 30	002	010	REV008	GE 80E1A2	
3 06 30	001	001	REV007		0644
3 06 30	002	115	REV009	M : 44905/ GE 80E1A4/A3	
3 06 30	003	010	REV006	GE 80E1A2	0054
3 06 30	004	010	REV014	GE 80E1A2	
3 06 30	003	115	REV009	M : 44905/GE 80E1A4/A3	0644
3 06 30	004	115	REV009	M : 44905/GE 80E1A4/A3	
3 06 30	005	010	REV014	GE 80E1A2	0054
3 06 30	006	010	REV014	GE 80E1A2	
3 06 30	005	115	REV009	M : 44905/ GE 80E1A4/A3	0644
3 06 30	006	115	REV009	M : 44905/GE 80E1A4/A3	
3 06 30	007	010	REV014	GE 80E1A2	0054
3 06 30	008	010	REV014	GE 80E1A2	
3 06 30	007	115	REV009	M : 44905/GE 80E1A4/A3	0644
3 06 30	008	115	REV009	M : 44905/GE 80E1A4/A3	
3 06 30	009	010	REV014	GE 80E1A2	0054
3 06 30	010	010	REV014	GE 80E1A2	
3 06 30	009	115	REV009	M : 44905/ GE 80E1A4/A3	0644
3 06 30	010	115	REV009	M : 44905/ GE 80E1A4/A3	
3 06 30	011	010	REV014	GE 80E1A2	0054
3 06 30	012	001	REV007		
3 06 30	011	115	REV009	M 44905/GE 80E1A4/A3	0644
3 06 30	012	001	REV007		
3 06 30	013	010	REV014	GE 80E1A2	0054
3 06 30	013	115	REV009	M:44905/GE80E1A4/A3	0644

M V CH SEC ---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 06 40 001	001	REV015		0054
3 06 40 002	010	REV011	GE 80E1A2	
3 06 40 001	001	REV015		0644
3 06 40 002	115	REV009	M:44905 GE 80E1A4/A3	
3 06 40 003	010	REV007	GE 80E1A2	0054
3 06 40 004	010	REV007	GE 80E1A2	
3 06 40 003	115	REV009	M:44905 GE 80E1A4/A3	0644
3 06 40 004	115	REV009	M:44905 GE 80E1A4/A3	
3 06 40 005	010	REV007	GE 80E1A2	0054
3 06 40 006	010	REV007	GE 80E1A2	
3 06 40 005	115	REV009	M:44905 GE 80E1A4/A3	0644
3 06 40 006	115	REV009	M:44905 GE 80E1A4/A3	
3 06 40 007	001	REV007		ALL
3 06 50 001	001	REV006		0054
3 06 50 002	010	REV006	GE 80E1A2	
3 06 50 001	001	REV006		0644
3 06 50 002	115	REV009	M:44905 GE 80E1A4/A3	
3 06 50 003	010	REV006	GE 80E1A2	0054
3 06 50 004	010	REV006	GE 80E1A2	
3 06 50 003	115	REV009	M:44905 GE 80E1A4/A3	0644
3 06 50 004	115	REV009	M:44905 GE 80E1A4/A3	
3 06 50 005	010	REV006	GE 80E1A2	0054
3 06 50 006	010	REV006	GE 80E1A2	
3 06 50 005	115	REV009	M:44905 GE 80E1A4/A3	0644
3 06 50 006	115	REV009	M:44905 GE 80E1A4/A3	
3 06 50 007	010	REV006	GE 80E1A2	0054
3 06 50 008	010	REV006	GE 80E1A2	
3 06 50 007	115	REV009	M:44905 GE 80E1A4/A3	0644
3 06 50 008	115	REV009	M:44905 GE 80E1A4/A3	
3 06 50 009	010	REV006	GE 80E1A2	0054
3 06 50 010	010	REV006	GE 80E1A2	
3 06 50 009	115	REV009	M:44905 GE 80E1A4/A3	0644
3 06 50 010	115	REV009	M:44905 GE 80E1A4/A3	
3 06 50 011	010	REV006	GE 80E1A2	0054
3 06 50 012	010	REV006	GE 80E1A2	
3 06 50 011	115	REV009	M:44905 GE 80E1A4/A3	0644
3 06 50 012	115	REV009	M:44905 GE 80E1A4/A3	
3 06 50 013	001	REV007		0054
3 06 50 014	010	REV006	GE 80E1A2	

M V CH SEC ---PAGE--	SEQ	--REV--	----VALIDATION CRITERIA-----	-----EFFECTIVITY-----
3 06 50 013	001	REV007		0644
3 06 50 014	115	REV009	M:44905 GE 80E1A4/A3	
3 06 50 015	010	REV006	GE 80E1A2	0054
3 06 50 015	115	REV009	M:44905 GE 80E1A4/A3	0644
3 06 55 001	010	REV015	GE 80E1A2	0054
3 06 55 001	115	REV015	GE80E1A3/A4/44905	0644
3 06 60 001	010	REV006	GE 80E1A2	0054
3 06 60 001	115	REV009	M:44905 GE 80E1A4/A3	0644
3 06 70 001	001	REV006		ALL
3 06 70 002	001	REV012		
3 06 70 003	001	REV007		ALL
3 07 20 001-0EB	001	REV009	LIST OF EFFECTIVE 0EB	ALL
3 07 30 001	001	REV007	STATUS OF 0EB	ALL

M V T	REV	MOD SB	MP	TITLE / VALIDITY
.	019A	40021	.....	ELECTRICS-GENERATION-DISTRIBUTION-VU'S AND AVIONICS-DEFINE BASIC A/C ALL
.	019A	40065 23-3004 02	.....	COMMUNICATIONS-DEFINE ACARS MU INSTALLATION (SUNDSTRAND) F-OMSA
.	019A	40074	.....	ICE AND RAIN PROTECTION-DEFINE ADVISORY DUAL ICE DETECTION SYSTEM MSN 0644
.	019A	40086	.....	OXYGEN-INSTALL ADDITIONAL FLIGHT CREW OXYGEN BOTTLE MSN 0644
.	019A	40096	.....	AIR CONDITIONING-DEFINE VENTILATION OF FORWARD CARGO COMPARTMENT MSN 0644
.	019A	40097	.....	AIR CONDITIONING-DEFINE TEMPERATURE CONTROL OF FORWARD CARGO COMPARTMENT MSN 0644
.	019A	40099	.....	AIR CONDITIONING-DEFINE HEATING SYSTEM FOR LOWER DECK BULK CARGO COMPARTMENT ALL
.	019A	40118	.....	LANDING GEAR-NOSE AND MAIN GEARS-INSTALL PROVISIONS FOR T.P.I.S (TYRE PRESSURE INDICATING SYSTEM) MSN 0644
.	019A	40161	.....	DOORS-EMERGENCY EXIT-INTRODUCE "TYPE A DOOR" F-OMSA
.	019A	40197	.....	POWER PLANT-DEFINE CF6 80E1 POWER PLANT AND ASSOCIATED SYSTEMS MSN 0644
.	019A	40373	.....	COMMUNICATIONS-AUDIO MANAGEMENT-IMPROVE AUDIO CONTROL PANEL (A C P) MSN 0644

M V T	REV	MOD SB	MP	TITLE	VALIDITY
.	019A	40379	.....	EQUIPMENT/FURNISHINGS-INSTALL PROVISIONS FOR AN UNDERFLOOR CREW REST CONTAINER (BFE)	MSN 0644
.	019A	40467	.....	OXYGEN-CREW OXYGEN-INSTALL A 115 CU FEET STEEL CYLINDER	F-OMSA
.	019A	40522	.....	LANDING GEAR -NLG WHEELS-FIT MICHELIN RADIAL PLY TYRES TYPE M07601 SIZE 1050X395R16	F-OMSA
.	019A	40721	.....	NAVIGATION -VOR-MARKER - REPLACE ALLIED SIGNAL BY COLLINS RECEIVERS (BFE)	F-OMSA
.	019A	40818	.....	NAVIGATION-WEATHER RADAR SYSTEM-REPLACE ALLIED SIGNAL BY COLLINS WEATHER RADAR SYSTEM (BFE)	F-OMSA
.	019A	41309	.....	GENERAL-COMPLETE BASIC A/C DEFINITION (A330)	ALL
.	019A	41510	.....	NAVIGATION-RADIO ALTIMETER-INSTALL	
		34-3005 01		COLLINS RADIO ALTIMETER SYSTEM	F-OMSA
.	019A	42600	.....	GENERAL-INTRODUCE INCREASED DESIGN WEIGHTS-MTOW 212 MLW 177 MZFW 167	F-OMSA
.	019A	42630	.....	AIR CONDITIONING-AVIONICS EQUIPMENT	
		21-3008		VENTILATION-INCREASE HORN TIME DELAY WARNINGIN CASE OF VENT EXTRA FAULT	ALL
.	019A	42732	.....	FLIGHT CONTROLS-RUDDER MECHANICAL	
		27-3011 02		CONTROL-REPLACE FIBER GLASS CONTROL ROD BY ALUMINIUM ALLOY ROD	ALL

M V T	REV	MOD SB	MP	TITLE / VALIDITY
.	019A	42915 21-3022	.....	AIR CONDITIONNING - LWR DK CARGO COMPT. VENTILATION AND COOLING (FWD AND AFT) - INTRODUCE COMMON VENTILATION CONTROLLER ALL
.	019A	42933 28-3015 03	.....	FUEL - FCMS - PREVENT ERRONEOUS FAULT OUTPUTS FROM FCMC IN THE BATTERY GROUND SERVICE CONFIGURATION ALL
.	019A	43078 27-3019 01	.....	FLIGHT CONTROLS - CHANGE WIRING OF FCPC1 AND FCSC1 FAULT INDICATOR LIGHTS ALL
.	019A	43237	.....	LANDING GEAR - WHEELS AND BRAKES - DEFINE AND FIT GOODRICH BRAKES FOR GROWTH A/C 1500 LPO MSN 0644
.	019A	43442	.....	LANDING GEAR - NLG - INSTALL A WARNING SYSTEM IN COMPLIANCE WITH JAR 25-745 MSN 0644
.	019A	43475 21-3027 02	.....	AIR CONDITIONING - PRESSURE CONTROL AND MONITORING - INCREASE MAX. CABIN DIFFERENTIAL PRESSURE F-OMSA
.	019A	43537 34-3031 10	.....	NAVIGATION - ADIRS - FIT REDUCED VERTICAL SEPARATION MINIMUM (RVSM) ALL
.	019A	43620 28-3025 02	.....	FUEL - FCMS - INSTALL STAGE 6.12 FCMC WITH CHANGES TO SOFTWARE FOR A330 AND A340 A/C ALL
.	019A	43724 22-3011 01	.....	AUTOFLIGHT - FMEGC - INSTALL IMPROVED AUTOPILOT FOR GE ENGINES ALL
.	019A	44015 26-3011	.....	FIRE PROTECTION - SMOKE DETECTION - INTRODUCE UPDATED SDCU ALL

M V T	REV	MOD SB	MP	TITLE	VALIDITY
.	019A	44047 27-3039 02	.....	FLIGHT CONTROLS - EFCS / CONTROL INPUT AND POWER SUPPLY - PROVIDE A SECOND ELECTRICAL POWER SUPPLY TO FCSC2	ALL
.	019A	44100	.....	NAVIGATION - WEATHER RADAR SYSTEM - ACTIVATE DUAL PREDICTIVE WINDSHEAR RADAR SYSTEM, COLLINS	MSN 0644
.	019A	44270 00-3004 05	.....	GENERAL - INTRODUCE A330/300 INCREASED DESIGN WEIGHT MTOW 215T, MLW 177T, MZFW 167T (WV003)	F-OMSA
.	019A	44385	.....	FLIGHT CONTROLS - CONTROL INPUTS AND POWER SUPPLY - PROVIDE A SECOND ELECTRICAL POWER SUPPLY TO FCPC3	MSN 0644
.	019A	44431 24-3011 02	.....	ELECTRICAL POWER-ELECTRICAL CONTRACTOR MANAGEMENT SYSTEM - INSTALL NEW ECMU STANDARD 5	ALL
.	019A	44457 21-3053 01 92-3017 04	.....	ELECTRIC AND ELECTRONIC COMMON INSTALLATION - PROTECT RADIO ALTIMETER TRANSCEIVERS AGAINST MOISTURE	ALL
.	019A	44482 30-3015 02	.....	ICE AND RAIN PROTECTION - WINDSHIELD RAIN PROTECTION - DEACTIVATE RAIN REPELLENT SYSTEM	ALL
.	019A	44488 31-3016 03	.....	INDICATING/RECORDING SYSTEM - FWC - INSTALL NEW FWC STANDARD K1.0	ALL
.	019A	44575 28-3037	.....	FUEL - FMCS - FIT FCMC (STAGE 7.1) WITH CHANGES TO SOFTWARE FOR A330 AND A340 AIRCRAFT	ALL

M V T	REV	MOD SB	MP	TITLE / VALIDITY
.	019A	44603 28-3041 03	.....	FUEL - APU FUEL PUMP SYSTEM - PREVENT AN ELECTRICAL ESS NETWORK "OVERLOAD" (A330) ALL
.	019A	44644	.....	FUEL - DISTRIBUTION - INSTALL STRUCTURE AND SYSTEM PROVISIONS FOR ACTIVATION OF CENTER TANK (A330-200) MSN 0644
.	019A	44700 00-3006 01	.....	GENERAL - DESIGN WEIGHTS - REVERT TO MTOW 212T, MLW 177T, MZFW 167T (RETROFIT SOLUTION) F-OMSA
.	019A	44800	.....	NAVIGATION - GENERAL - CHANGE FROM BFE TO SFE ACCORDING TO NEW SPECIFICATIONS MSN 0644
.	019A	44807 31-3018	.....	INDICATING/RECORDING SYSTEM-ELECTRONIC INSTRUMENT SYSTEM (E.I.S.) - INSTALL DMC SOFTWARE V509X WITH DMC B HARDWARE ALL
.	019A	44808 31-3018	.....	INDICATING/RECORDING SYSTEM-ELECTRONIC INSTRUMENT SYSTEM (E.I.S.) - INSTALL DMC SOFTWARE V509X WITH DMC A HARDWARE F-OMSA
.	019A	44905	.....	FLIGHT CONTROLS - GENERAL - ADAPT FLIGHT CONTROLS FOR ST7 MSN 0644
.	019A	44919 32-3065 03	.....	LANDING GEAR - BRAKE SYSTEM TEMPERATURE - INSTALL NEW STANDARD OF BRAKE TEMPERATURE MONITORING UNIT (BTMU) ALL
.	019A	45008	.....	FUEL - JETTISON SYSTEM - INSTALL JETTISON SYSTEM ON A330-200 MSN 0644
.	019A	45022	.....	NAVIGATION - RADIO ALTIMETER - INSTALL NEW THOMPSON ERT 540 RADIO ALTIMETER STANDARD MSN 0644

M V T	REV	MOD SB	MP	TITLE / VALIDITY
.	019A	45030	.....	COMMUNICATIONS - RMP -
		23-3022		INSTALL RMP SEXTANT P/N 899-0850-004
				ALL
.	019A	45055	.....	ENGINE FUEL AND CONTROL - GENERAL -
		.....		PROVIDE DERATED TAKE-OFF FACILITIES FOR G.E. ENGINES
				MSN 0644
.	019A	45057	.....	INDICATING/RECORDING SYSTEM - FWC -
		31-3020 03		DEFINE NEW OEB REMINDER FUNCTION
				ALL
.	019A	45191	.....	HYDRAULIC POWER - MAIN HYDRAULIC POWER-
		29-3032 01		INTRODUCE PUSH BUTTON SWITCHES AND SWITCHGUARDS ON HYDRAULIC CONTROL PANEL
				ALL
.	019A	45198	.....	AIR CONDITIONING -
		.....		ADAPT FWD CARGO COMPARTMENT VENTILATION FOR ST7 VERSIONS
				MSN 0644
.	019A	45238	.....	AUTO FLIGHT - FMGEC -
		22-3015 01		INSTALL STD L7 - B4 FOR A330 WITH GE ENGINES
				ALL
.	019A	45252	.....	NAVIGATION - WEATHER RADAR SYSTEM -
		.....		INSTALL DUAL WEATHER RADAR COLLINS P/N 622-5132-120
				MSN 0644
.	019A	45264	.....	NAVIGATION - ADF - INSTALL ADF
		.....		RECEIVER COLLINS 900 P/N 822-0299-020
				MSN 0644
.	019A	45266	.....	NAVIGATION - VOR - INSTALL VOR
		.....		RECEIVERS COLLINS 900 P/N 822-0297-020
				MSN 0644
.	019A	45273	.....	INDICATING/RECORDING SYSTEM - FWC -
		31-3021		INSTALL NEW FWC STANDARD K1-1
				ALL

M V T	REV	MOD SB	MP	TITLE VALIDITY
.	019A	45330	.....	AIR CONDITIONING - PRESSURE CONTROL - INTRODUCE MODIFIED CABIN PRESSURE CONTROLLER P/N 20793-01AA MSN 0644
.	019A	45332	.....	AIRBORNE AUXILIARY POWER - CONTROL AND MONITORING - INTRODUCE VERSATILE ECB MSN 0644
.	019A	45341	.....	OXYGEN PASSENGER - OXYGEN SYSTEM - INTRODUCE IMPROVED O2 CONTAINER SERIES 15 MIN. FROM VENDOR DRAEGER MSN 0644
.	019A	45392	.....	LANDING GEAR - WHEELS AND BRAKES - INSTALL IMPROVED LIFE GOODRICH 1500 LPO BRAKES (COMMON STANDARD BASIC/GROWTH) MSN 0644
.	019A	45451	.....	COMMUNICATION - SATCOM - ACTIVATE COCKPIT VOICE WITH HONEYWELL SATCOM AVIONICS MSN 0644
.	019A	45469	.....	LIGHTS - CABIN EMERGENCY LIGHTING - INTRODUCE IMPROVED EPSU (FOR 115V-AC-SYSTEM) MSN 0644
.	019A	45471	.....	LIGHTS - CABIN EMERGENCY LIGHTING - INTRODUCE A NEW EPSU (FOR 6V-DC-SYSTEM) MSN 0644
.	019A	45509	.....	NAVIGATION - MMR - INSTALL COLLINS MULTI-MODE RECEIVERS PROVIDING ILS (FM IMMUNE) AND GPS PRIMARY FUNCTION MSN 0644
.	019A	45520	.....	FUEL - FCMS - FIT FCMC STAGE 8.0 MSN 0644
.	019A	45584	.....	ENGINE FUEL AND CONTROL - INCORPORATE A330/GE DERATED CLIMB MODIFICATION MSN 0644

M V T	REV	MOD SB	MP	TITLE	VALIDITY
.	019A	45748	.....	OXYGEN - CREW OXYGEN - INSTALL A 115 CU.FT COMPOSITE OXYGEN CYLINDER	MSN 0644
.	019A	45897 30-3019 04	.....	ICE AND RAIN PROTECTION - WINDSHIELD RAIN PROTECTION - REACTIVATE THE RAIN REPELLENT SYSTEM	ALL
.	019A	45900 32-3080 01	.....	LANDING GEAR - NORMAL BRAKING - INSTALL BSCU SOFTWARE STANDARD S7A	ALL
.	019A	46180	.....	AUTO FLIGHT - FMGEC - INSTALL STD L7-B5 FOR A330 WITH GE ENGINES	MSN 0644
.	019A	46237 31-3027	.....	INDICATING/RECORDING SYSTEMS - EIS - DISPLAY MANAGEMENT COMPUTER - INSTALL NEW DMC SOFTWARE V510X	ALL
.	019A	46255 49-3019	.....	AIRBORNE AUXILIARY POWER - CONTROL AND MONITORING - INTRODUCE ECB-10	F-OMSA
.	019A	46256 31-3028 01	.....	INDICATING/RECORDING SYSTEMS - CENTRAL WARNING SYSTEMS - INSTALL NEW FWC STANDARD K3-0	ALL
.	019A	46290	.....	FLIGHT CONTROLS - FCDC - INSTALL FCDC STANDARD L15/M12	MSN 0644
.	019A	46324 34-3077 05	.....	NAVIGATION - GPWS - ACTIVATE ENHANCED GPWS	ALL
.	019A	46357 73-3019	.....	ENGINE FUEL AND CONTROL - FUNCTIONAL INTERFACES (FADEC) - IMPROVE AIR CONDITIONING PACK CLOSURE CONTROL	ALL

M V T	REV	MOD SB	MP	TITLE / VALIDITY
.	019A	46447	.....	EQUIPMENT/FURNISHINGS - MISCELLLANEOUS EMERGENCY EQUIPMENT - INSTALL EMERGENCY LOCATOR TRANSMITTER (E.L.T.) CEIS A06V2 MSN 0644
.	019A	46459	.....	INDICATING/RECORDING SYSTEMS-CENTRAL WARNING SYSTEMS-PROVIDE NEW AUTO CALL-OUT CALLED "V ONE" MSN 0644
.	019A	46511	.....	INDICATING/RECORDING SYSTEMS - FWC - 31-3028 01 INSTALL FWC STANDARD K3.1 ALL
.	019A	46512	.....	FLIGHT CONTROLS -FLIGHT CONTROL PRIMARY COMPUTER (FCPC) - INTRODUCE FCPC 2K1P2 ON A330-200 MSN 0644
.	019A	46558	.....	ICE AND RAIN PROTECTION - WING ICE 30-3020 01 PROTECTION - RELOCATE OUTBOARD VALVE TO INBOARD POSITION ALL
.	019A	46596	.....	AUTO FLIGHT - FCU - INTRODUCE 22-3020 02 FCU P/N -608 ALL
.	019A	46609	.....	COMMUNICATIONS - SATCOM - INSTALL SATCO SATCOM AVIONICS AERO H+ - HONEYWELL MSN 0644
.	019A	46728	.....	NAVIGATION-TCAS-INSTALL ALLIED SIGNAL CHANGE 7 P/N 066-50000-2220 MSN 0644
.	019A	46742	.....	INFORMATION SYSTEMS - AIR TRAFFIC AND INFORMATION MANAGEMENT SYSTEM - ACTIVATE ATSU MSN 0644
.	019A	46755	.....	FIRE PROTECTION - DETECTION - MODIFY 26-3020 02 SMOKE DETECTION CONTROL UNIT (SDCU) ALL

M V T	REV	MOD SB	MP	TITLE	VALIDITY
.	019A	46810	.....	LANDING GEAR - NORMAL BRAKING - INSTALL BSCU SOFTWARE STANDARD S8B	MSN 0644
.	019A	46812 31-3028 01	.....	INDICATING/RECORDING SYSTEM - FWC - INSTALL NEW FWC STANDARD K3.2	ALL
.	019A	46817	.....	FLIGHT CONTROLS - AILERON - MODIFY AILERON SERVO CONTROL ATTACHMENT BOLT	MSN 0644
.	019A	46825	.....	FUEL - TRIM TANK TRANSFER SYSTEM - MODIFY WIRING TO ALLOW EMERGENCY ELECTRICAL CONFIGURATION DETECTION	MSN 0644
.	019A	46863 32-3092 02	.....	LANDING GEAR - NORMAL BRAKING - INSTALL BSCU SOFTWARE STANDARD S8C	F-OMSA
.	019A	46893	.....	NAVIGATION - MMR - INSTALL COLLINS MULTI-MODE RECEIVERS P/N 822-1152-121	MSN 0644
.	019A	46964 27-3068	.....	FLIGHT CONTROLS -FLIGHT CONTROL PRIMARY COMPUTER - INTRODUCE FCPC M12 FOR A330-300	F-OMSA
.	019A	47110	.....	COMMUNICATIONS-GENERAL-INSTALL CEIS P/N 93N6035 EMERGENCY CONTROL PANEL IN COCKPIT	MSN 0644
.	019A	47221	.....	FLIGHT CONTROLS - FLIGHT CONTROL PRIMARY COMPUTER - INTRODUCE FCPC P4/M12 FOR A330	MSN 0644
.	019A	47233 22-3023	.....	AUTO FLIGHT - FMGEC - INSTALL A NEW STANDARD FMGEC L9B6 FOR GE ENGINE	ALL

M V T	REV	MOD SB	MP	TITLE / VALIDITY
.	019A	47244	.....	NAVIGATION-STANDBY NAVIGATION SYSTEMS- INSTALL SEXTANT AVIONICS INTEGRATED STANDBY INSTRUMENT SYSTEM (ISIS) MSN 0644
.	019A	47293 28-3063 01	.....	FUEL -TRIM TANK TRANSFER - INSTALL TWO ADDITIONAL PRESSURE RELIEF VALVES IN THE TRIM TANK ALL
.	019A	47308	.....	AIR CONDITIONING - PRESSURE CONTROL AND MONITORING - IMPROVE CABIN PRESSURE CONTROLLER P/N 20793-02AB MSN 0644
.	019A	47392 34-3096 03	.....	NAVIGATION-TCAS-INSTALL TCAS II HONEYWELL 2000 (CHANGE 7) P/N 7517900-10003 F-OMSA
.	019A	47420 31-3042 01	.....	INDICATING/RECORDING SYSTEMS - FLIGHT WARNING COMPUTER (FWC) - INSTALL NEW FWC STANDARD K5-0 ALL
.	019A	47454	.....	APU - CONTROL AND MONITORING - INTRODUCE VECB-210101 MSN 0644
.	019A	47457	.....	AUTO FLIGHT - FMGEC - INSTALL FMGEC P1-B7 FOR GE ENGINES MSN 0644
.	019A	47500	.....	LANDING GEAR - NORMAL BRAKING - INSTALL BSCU SOFTWARE STANDARD S8D MSN 0644
.	019A	47524	.....	INDICATING/RECORDING SYSTEMS-ELECTRONIC INSTRUMENT SYSTEM - INSTALL NEW DISPLAY SYSTEM (EIS2) EQTS (DMC/DU/DISKETTES) MSN 0644
.	019A	47587 27-3079	.....	FLIGHT CONTROLS - PRIMARY COMPUTER - INTRODUCE FCPC M13 F-OMSA

M V T	REV	MOD SB	MP	TITLE / VALIDITY
.	019A	47660	.....	ELECTRICAL POWER-GENERAL-INSTALL ADDITIONAL ELECTRICAL OUTLETS IN COCKPIT (110V/60HZ) MSN 0644
.	019A	47669	.....	INFORMATION SYSTEMS - ATIMS - INSTALL ATC APPLICATIONS FOR FANS A MSN 0644
.	019A	47735	.....	FLIGHT CONTROL - FCPC - REPLACE OLD STD (M12 AND P4) BY A NEW ONE (M13 AND P5) HARD 2K1 MSN 0644
.	019A	47755	.....	OXYGEN-PASSENGER OXYGEN-EXTEND DURATION OF CHEMICAL OXYGEN SUPPLY TO 22 MIN. FOR A340-600 AND ENHANCED A/C (DRAEGER) MSN 0644
.	019A	47930	.....	FUEL - FCMS - INSTALL FCMC STAGE 9.0 28-3067 01 ALL
.	019A	48227	.....	INFORMATION SYSTEMS - GENERAL - CERTIFY FANS A CONFIGURATIONS MSN 0644
.	019A	48344	.....	ENGINE FUEL AND CONTROL - FADEC SYSTEM - INTRODUCE ECU E1L S/W ON CF6-80E1 MSN 0644
.	019A	48818	.....	COMMUNICATIONS - GENERAL - BASIC PROVISIONS FOR IN FLIGHT ENTERTAINMENT SYSTEM A330/A340-200/300 MSN 0644
.	019A	48956	.....	FLIGHT CONTROLS - SPOILER - INTRODUCE MODIFIED SERVO CONTROL MSN 0644
.	019A	49026	.....	NAVIGATION - EGPWS - ACTIVATE OBSTACLE FUNCTION MSN 0644
.	019A	49104	.....	AUTO FLIGHT - FMGEC - INSTALL STANDARD L10B7 FOR GE ENGINES 22-3035 01 F-OMSA

M V T	REV	MOD SB	MP	TITLE VALIDITY
.	019A	49144	.....	FLIGHT CONTROLS - ELECTRICAL FLIGHT CONTROL SYSTEM (EFCS) - INSTALL RUDDER FLY-BY WIRE ON A330/A340 MSN 0644
.	019A	49193	.....	INDICATING/RECORDING SYSTEMS - FWC - INSTALL NEW STANDARD K7 MSN 0644
.	019A	49632	.....	INDICATING/RECORDING SYSTEMS - FWC - REPLACE THE EXISTING STANDARD FWC BY A NEW STD K6 FOR A330 - FAR 121-344 ALL
.	019A	49800	.....	FUEL - FCMS - ACTIVATE CREW ALERT 'FUEL FU/FOB DISCREPANCY' MSN 0644
.	019A	50014	.....	EQUIPMENT/FURNISHINGS - COCKPIT - INSTALL AN ARMOURED COCKPIT DOOR ALL
.	019A	50161	.....	INDICATING/RECORDING SYSTEM - EIS - INSTALL NEW EIS2 STANDARD L3-1 (DMC, DU AND DISKS) MSN 0644
.	019A	50214	.....	LANDING GEAR - NORMAL BRAKING - INTRODUCE STAGE 9 STANDARD BSCU MSN 0644
.	019A	50242	.....	COMMUNICATIONS - VIDEO MONITORING - INSTALL A COCKPIT DOOR SURVEILLANCE SYSTEM (CDSS) MSN 0644
.	019A	50616	.....	INDICATING/RECORDING SYSTEMS - EIS - INTALL NEW EIS2 STANDARD L4 ON A330/A340 ENHANCED MSN 0644
.	019A	50690	.....	LIGHTS- WING AND ENGINE SCAN LIGHTING- CHANGE SWITCHING PHILOSOPHY. MSN 0644

M V T	REV	MOD SB	MP	TITLE / VALIDITY
.	019A	50717	.....	AUTO-FLIGHT - FMGEC - INSTALL FMGEC P2B7 FOR GE ENGINES MSN 0644
.	019A	51144	.....	NAVIGATION - ADIRS- INSTALL 4MCU ADIRS HONEYWELL (AE21) MSN 0644
.	019A	51295	.....	AIR CONDITIONING - PRESSURIZATION CONTROL - INSTALL ECAM INDICATION FOR 3RD SAFETY VALVE (INTERIM SOLUTION) MSN 0644
.	019A	51411	.....	NAVIGATION - ADIRS - ACTIVATE IMPROVEMENT FUNCTION ON ADIRU MSN 0644
.	019A	51502	.....	AIR CONDITIONING - AIR CONDITIONNING ((PACKS)) - INTRODUCE NEW PACK -08 STANDARD MSN 0644
.	019A	51790	.....	INDICATING/RECORDING SYSTEMS - FWC - INSTALL NEW FWC STANDARD K8 ON A330 MSN 0644
.	019A	51802	.....	GENERAL-DESIGN WEIGHTS-CERTIFY A330-200 WV050 MTOW 230T, MLW 180T, MZFW 168T WITH REVISED A/C DESIGN SERVICE GOAL MSN 0644
.	019A	52017	.....	FLIGHT CONTROL - FLIGHT CONTROL PRIMARY COMPUTER - INTRODUCE NEW FCPC STD "P7/M16" FOR A330 ENHANCED MSN 0644
.	019A	52230	.....	EQUIPMENT/FURNISHINGS - CURTAINS AND PARTITIONS -MODIFY CDLS STIKE TOLERANCE MSN 0644

01.00 CONTENTS

01.10 FOREWORD
– GENERAL 1
– KIND OF OPERATIONS 1

01.20 GENERAL LIMITATIONS
– MINIMUM FLIGHT CREW 1
– CENTER OF GRAVITY LIMITS 1
– WEIGHT LIMITATIONS 2
– FLIGHT MANEUVERING LOAD ACCELERATION LIMITS 2
– ENVIRONMENTAL ENVELOPE 2
– AIRPORT OPERATIONS 3
– SPEED LIMITATIONS 3

01.21 AIR COND / PRESS / VENT
– CABIN PRESSURE 1
– RAM AIR INLET 1
– AIR CONDITIONING WITH LP GROUND UNIT 1

01.22 AUTOFLIGHT
– GENERAL 1
– AUTOMATIC APPROACH, LANDING, AND ROLLOUT 3
– PARAVISUAL INDICATOR (PVI) ◁ 4

01.23 COMMUNICATIONS ◁
– VHF3 TUNING IN VOICE MODE FROM THE MCDU

01.24 ELECTRICAL ◁

R **01.25 CREW REST COMPARTMENTS ◁**
R – LOWER DECK MOBILE CREW REST COMPARTMENT 1
R – FLIGHT CREW REST COMPARTMENT 1

01.28 FUEL

01.29 HYDRAULIC

01.32 LANDING GEAR

01.34 NAVIGATION

– ENHANCED GROUNG PROXIMITY WARNING SYSTEM (EGPWS) 1

01.35 OXYGEN

– COCKPIT FIXED OXYGEN SYSTEM 1

01.49 APU

– GENERAL 1
– ENVELOPE 1

01.70 POWERPLANT

– THRUST SETTING/EGT LIMITS 1
– OIL 1
– RPM 2
– STARTER 2
– REVERSER THRUST 2
– REDUCED THRUST TAKEOFF 2

GENERAL

This section includes the limitations required by the regulations and contained in the Flight
R Manual.
All references to airspeed, Mach and altitude relate to indicated airspeed, indicated Mach and pressure altitude, unless otherwise noted.

KIND OF OPERATIONS

This airplane is certified in the public transport category (passengers and freight) for day and night operations, in the following conditions when the appropriate equipment and instruments required by the airworthiness and operating regulations are approved, installed and in an operable condition :

- VFR and IFR
- Extended overwater flight
- Flight in icing conditions

R — Maximum number of passenger seats : 375

GENERAL

This section includes the limitations required by the regulations and contained in the Flight
R Manual.
All references to airspeed, Mach and altitude relate to indicated airspeed, indicated Mach and pressure altitude, unless otherwise noted.

KIND OF OPERATIONS

This airplane is certified in the public transport category (passengers and freight) for day and night operations, in the following conditions when the appropriate equipment and instruments required by the airworthiness and operating regulations are approved, installed and in an operable condition :

- VFR and IFR
- Extended overwater flight
- Flight in icing conditions

R — Maximum number of passenger seats : 440

MINIMUM FLIGHT CREW

The minimum flight crew consists of 2 pilots.

CENTER OF GRAVITY LIMITS

R

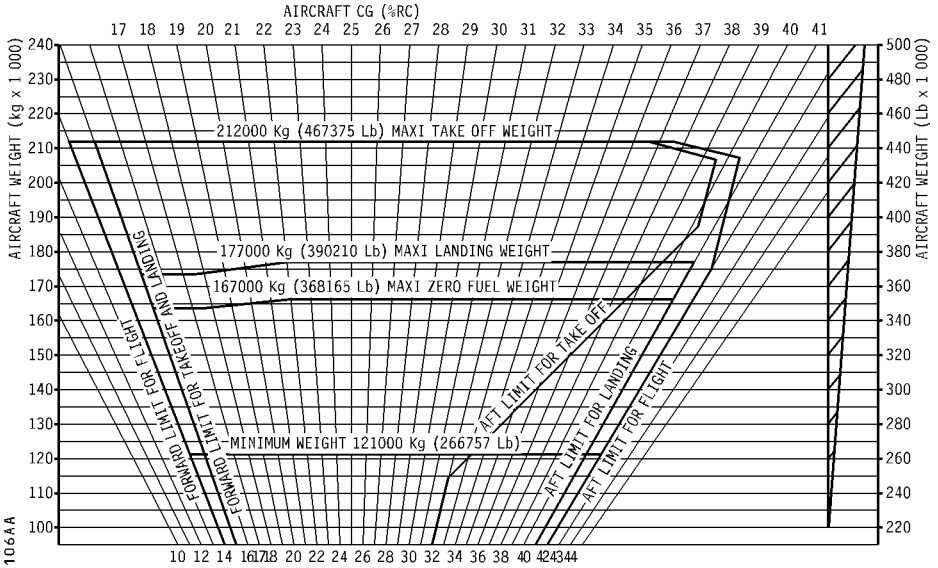

GFCS-03-0120-001-A106AA

* MLW : 177000 kg (390214 lb) FOR CG 22.4% AND AFT
174000 kg (383600 lb) FOR CG 17.4% AND FWD
WITH LINEAR VARIATION IN-BETWEEN

** MZFW : 167000 kg (368168 lb) FOR CG 22.4% AND AFT
164000 kg (361554 lb) FOR CG 17.4% AND FWD
WITH LINEAR VARIATION IN-BETWEEN

- CG limits are given in percentage of the reference chord length aft of the leading edge.
- The reference chord length is 7.27 m (23.85 feet). It is 28.15 m (92.36 feet) aft of the aircraft nose.
- The CG must always be within these limits regardless of fuel load.

WEIGHT LIMITATIONS

Maximum taxi weight . . . . . 212 900 kg (469 360 lb)
Maximum takeoff weight (brake release) . . . . . 212 000 kg (467 375 lb)
Maximum landing weight . . . . . 177 000 kg (390 210 lb)
Maximum zero fuel weight . . . . . 167 000 kg (368 165 lb)
R Minimum weight . . . . . 121 000 kg (266 757 lb)

In exceptional conditions (in flight turn back or diversion), an immediate landing at weight above maximum landing weight is permitted, provided the pilot follows the overweight landing procedure.

FLIGHT MANEUVERING LOAD ACCELERATION LIMITS

Clean configuration . . . . . – 1 g to + 2.5g
Other configurations . . . . . 0 g to + 2 g

ENVIRONMENTAL ENVELOPE

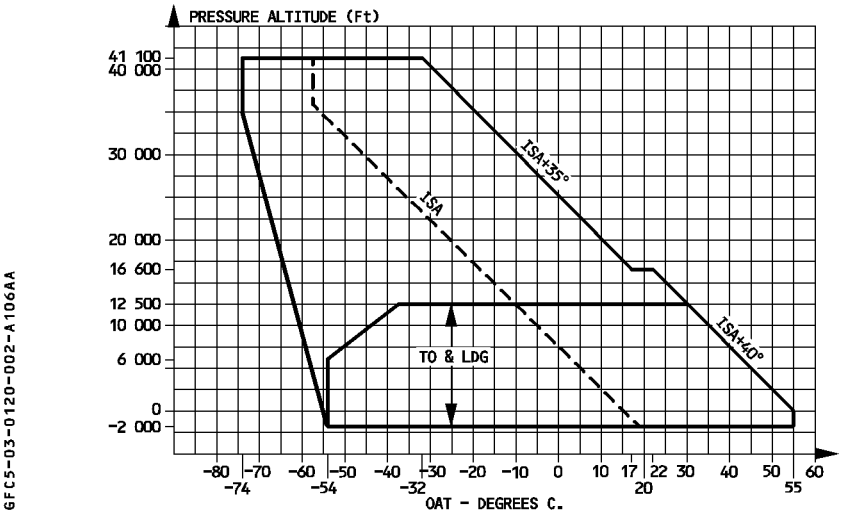

MINIMUM FLIGHT CREW

The minimum flight crew consists of 2 pilots.

CENTER OF GRAVITY LIMITS

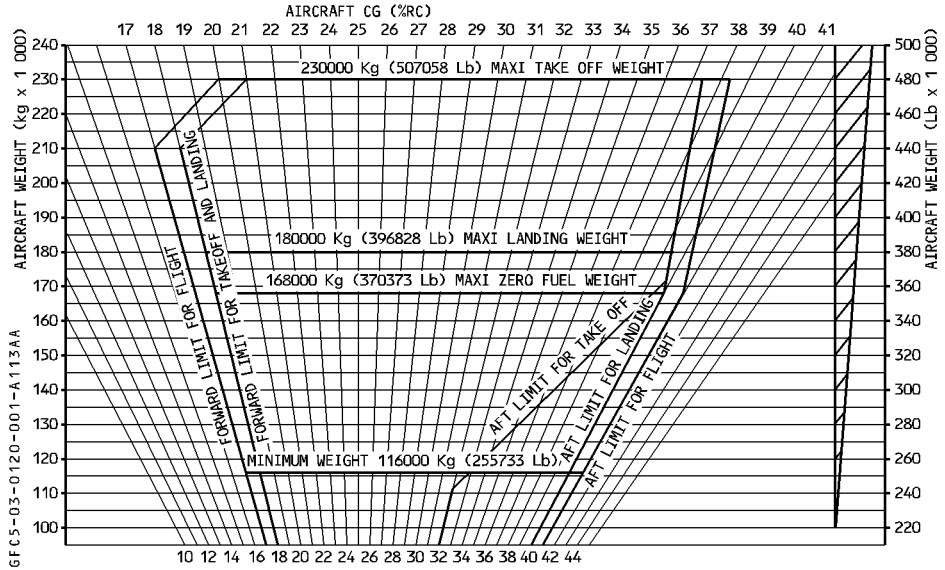

- CG limits are given in percentage of the reference chord length aft of the leading edge.
- The reference chord length is 7.27 m (23.85 feet). It is 24.96 m (81.89 feet) aft of the aircraft nose.
- The CG must always be within these limits regardless of fuel load.

WEIGHT LIMITATIONS

Maximum taxi weight . . . . . 230 900 kg (509 042 lb)
Maximum takeoff weight (brake release) . . . . . 230 000 kg (507 058 lb)
Maximum landing weight * . . . . . 180 000 kg (396 828 lb)
Maximum zero fuel weight * . . . . . 168 000 kg (370 373 lb)
R Minimum weight . . . . . 116 000 kg (255 733 lb)

* See page 1 for possible increase of these weights

In exceptional circumstances (inflight turn back or diversion), an immediate landing at weight above maximum landing weight is permitted provided that the pilot follows the overweight landing procedure.

FLIGHT MANEUVERING LOAD ACCELERATION LIMITS

Clean configuration . . . . . – 1 g to + 2.5g
Slats extended . . . . . 0 g to + 2 g

ENVIRONMENTAL ENVELOPE

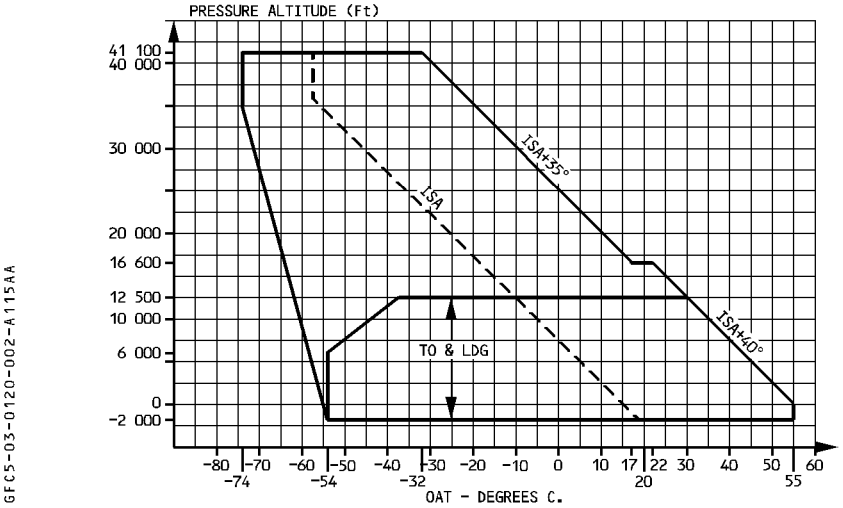

AIRPORT OPERATIONS

- Runway slope (mean) . . . . . ± 2 %
- Runway altitude . . . . . 12 500 ft
- Wind for takeoff and landing
  - maximum crosswind demonstrated : 32 knots, with gusts up to 40 knots
  - maximum tail wind . . . . . 10 kt

R Maximum crosswind values have been demonstrated with flight controls in normal law
R as well as in direct law with and without yaw damper.

- Wind for passenger/cargo door operation :
  - maximum wind for passenger door operation : 40 knots (or 50 knots if the aircraft nose is orientated into the wind)
  - maximum wind for cargo door operation 40 knots (or 60 knots if the aircraft nose is orientated into the wind or door is on the leeward side)
  - the passenger/cargo door must be closed before the wind speed exceeds 60 knots.

SPEED LIMITATIONS

MAXIMUM OPERATING SPEED VMO/MMO

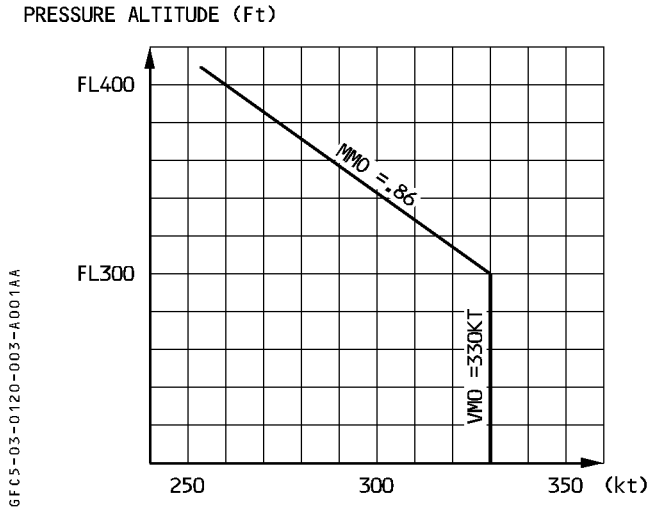

The maximum operating limit speed VMO/MMO may not be exceeded deliberately in any regime of flight.

R **BUFFET ONSET**

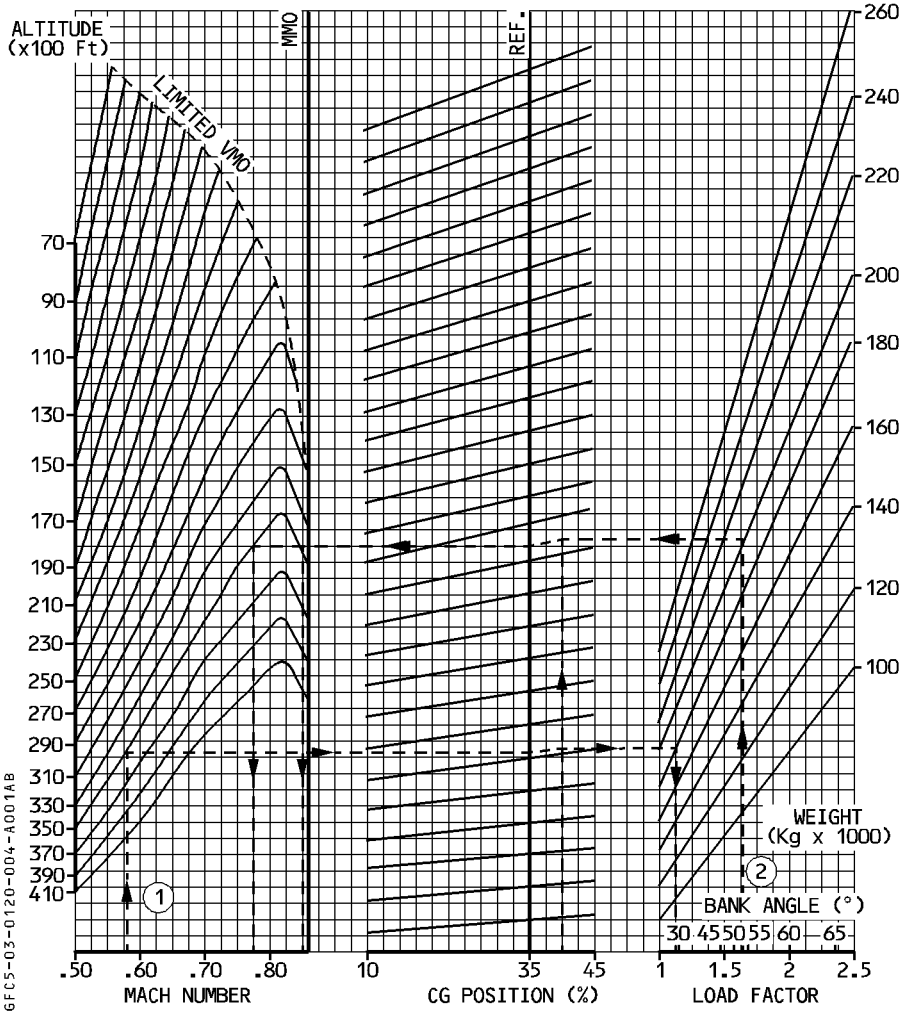

R Examples :
R 1. Determine Maximum Bank Angle limited by buffet :
R DATA : M = 0.58, FL = 350, CG = 40 %, WEIGHT = 180000 kg
R RESULT : load factor = 1.15 g or 30° bank
R 2. Determine low and high speed limited by buffet :
R DATA : 52° bank or 1.63 g, WEIGHT = 200000 kg, CG = 40%, FL = 350
R RESULT : M = 0.775 (low speed buffet) and M = 0.85 (high speed buffet).

MAXIMUM FLAPS/SLATS SPEEDS

Lever Position	SLATS	FLAPS	AILERONS	Ind. on ECAM	MAX SPD	FLIGHT PHASE
1	16	0	0	1	240	HOLDING
		8	5	1 + F	215	TAKEOFF
2	20	8	10	2 (a)	205	APPROACH
	20	14	10	2	196	TAKEOFF/APPROACH
3	23	22	10	3	186	TAKEOFF/APPR/LDG
FULL	23	32	10	FULL	180	LANDING
(a) This slats/flaps position corresponds to CONF 1*						

· Maximum altitude with flaps/slats extended : 20000 feet

GEAR DOWN SPEEDS

· Maximum speed with landing gear extended (VLE) 250 knots/.55
· Maximum speed at which the landing gear may be operated (extension and retraction) (VLO) 250 knots/.55
· Maximum speed for gravity extension (VLE, VLO) . . . . . 200 knots
· Maximum altitude at which the landing gear may be extended . . . . . 21000 feet

MAXIMUM TIRE SPEED

R · Ground speed . . . . . 204 knots

WINDSHIELD WIPERS IN USE

· Maximum speed . . . . . 230 knots

COCKPIT WINDOW OPEN

· Maximum speed . . . . . 230 knots

Note : It is not possible to open the cockpit windows, with the packs ON.

SPEEDBRAKES

· No limitation.

MINIMUM CONTROL SPEEDS

R VMCL = 123 (KT IAS)

R

Altitude (ft)	VMCA (KT CAS)	VMCG (KT IAS)		
		CONF 1 + F	CONF 2	CONF 3
0	117	118	118	119
2000	114	115	115	116
4000	111	112	112	112.5
6000	108.5	109	109	109.5
8000	105.5	106.5	106.5	107

MAXIMUM FLAPS/SLATS SPEEDS

Lever Position	SLATS	FLAPS	AILERONS	Ind. on ECAM	MAX SPD	FLIGHT PHASE
1	16	0	0	1	240	HOLDING
		8	5	1 + F	215	TAKEOFF
2	20	8	10	2 (a)	205	APPROACH
	20	14	10	2	196	TAKEOFF/APPROACH
3	23	22	10	3	186	TAKEOFF/APPR/LDG
FULL	23	32	10	FULL	180	LANDING
(a) This slats/flaps position corresponds to CONF 1*						

· Maximum altitude with flaps/slats extended : 20000 feet

GEAR DOWN SPEEDS

· Maximum speed with landing gear extended (VLE) 250 knots/.55
· Maximum speed at which the landing gear may be operated (extension and retraction) (VLO) 250 knots/.55
· Maximum speed for gravity extension (VLE, VLO) . . . . . 200 knots
· Maximum altitude at which the landing gear may be extended . . . . . 21000 feet

MAXIMUM TIRE SPEED

R · Ground speed . . . . . 204 knots

WINDSHIELD WIPERS IN USE

· Maximum speed . . . . . 230 knots

COCKPIT WINDOW OPEN

· Maximum speed . . . . . 230 knots

Note : It is not possible to open the cockpit windows, with the packs ON.

SPEEDBRAKES

· No limitation.

MINIMUM CONTROL SPEEDS

VMCL = 118 (KT IAS)

R

Altitude (ft)	VMCA (KT CAS)	VMCG (KT IAS)		
		CONF 1 + F	CONF 2	CONF 3
0	106	108	108	108.5
2000	103	106	106	106.5
4000	100	103	103.5	103.5
6000	97.5	100	100.5	100.5
8000	94	97.5	97.5	97.5

STALLING SPEEDS

R

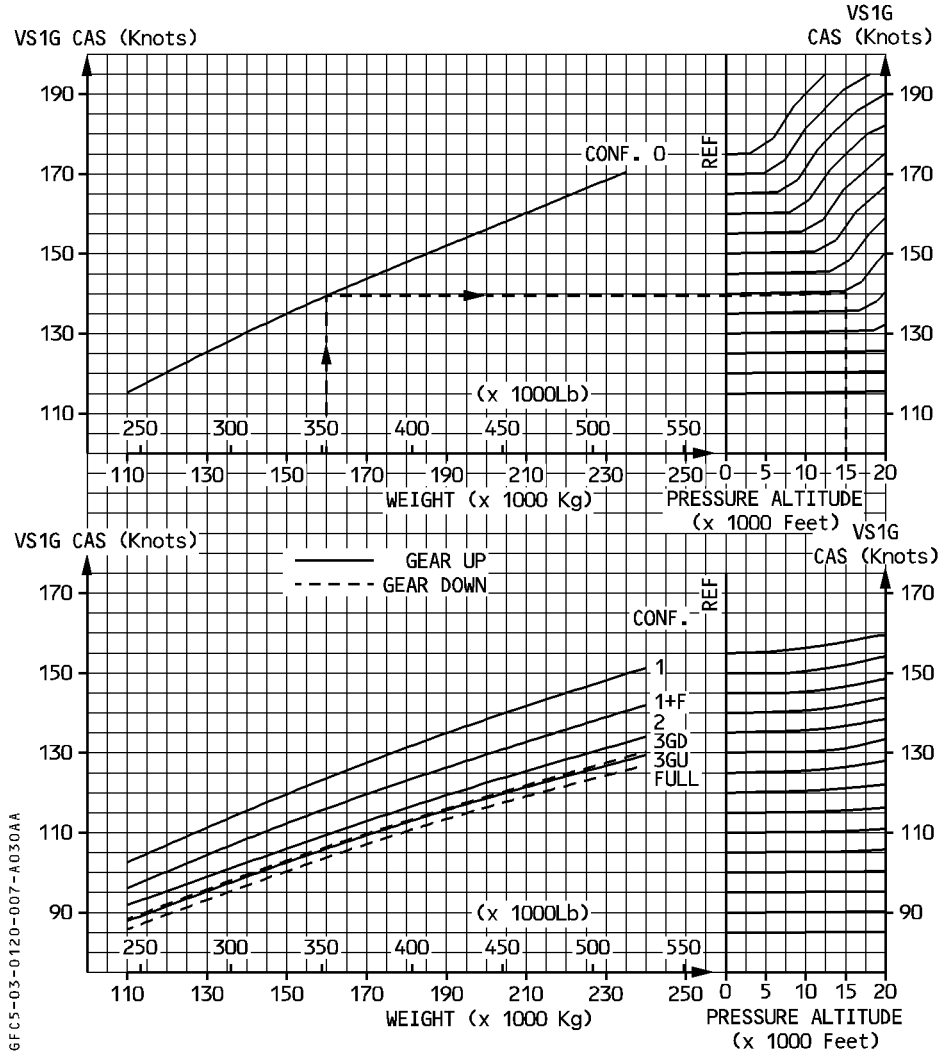

DATA : GW = 160000 kg (352740 lb), PRESSURE ALTITUDE 15000 feet, CLEAN CONFIGURATION

RESULT : VS1G = 140 knots CAS

STALLING SPEEDS

R

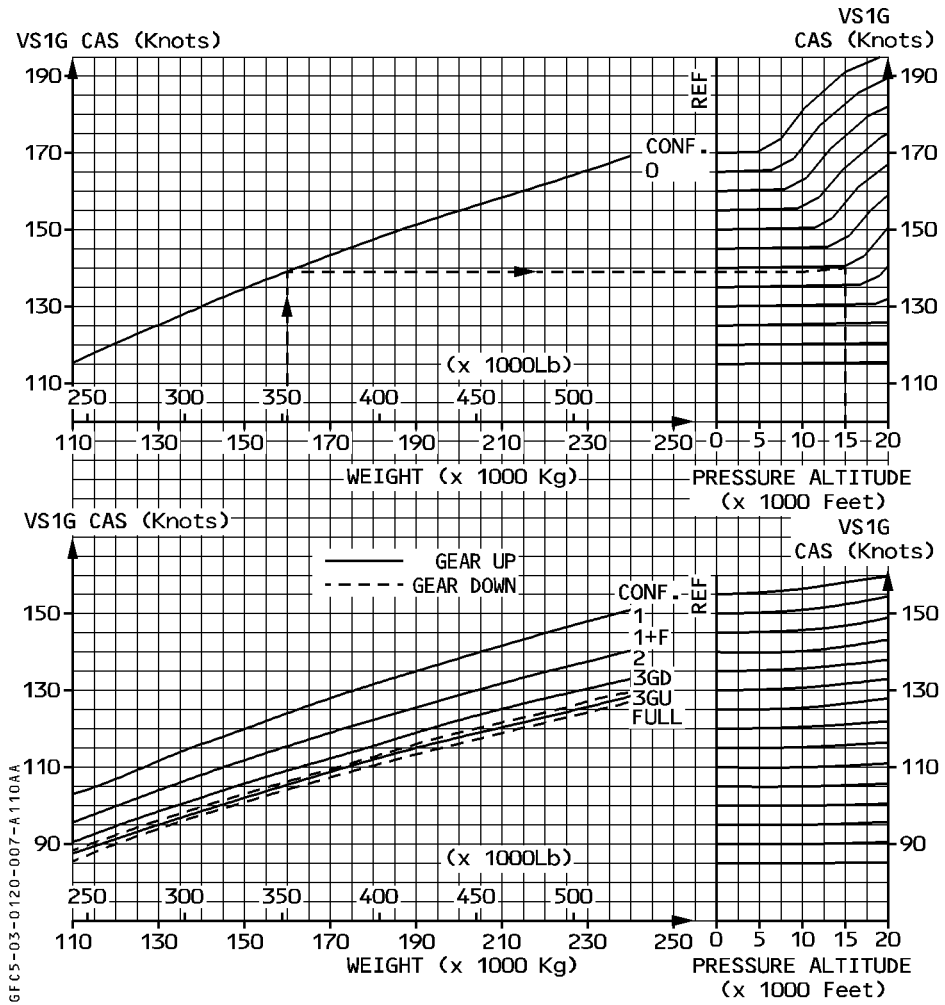

DATA : GW = 160000 kg (352740 lb), PRESSURE ALTITUDE 15000 feet, CLEAN CONFIGURATION

RESULT : VS1G = 140 knots CAS

CABIN PRESSURE

- Maximum positive differential pressure . . . . . 9.25 psi
- Maximum negative differential pressure . . . . . – 1 psi
- Safety relief valve setting . . . . . 8.85/– 1 psi

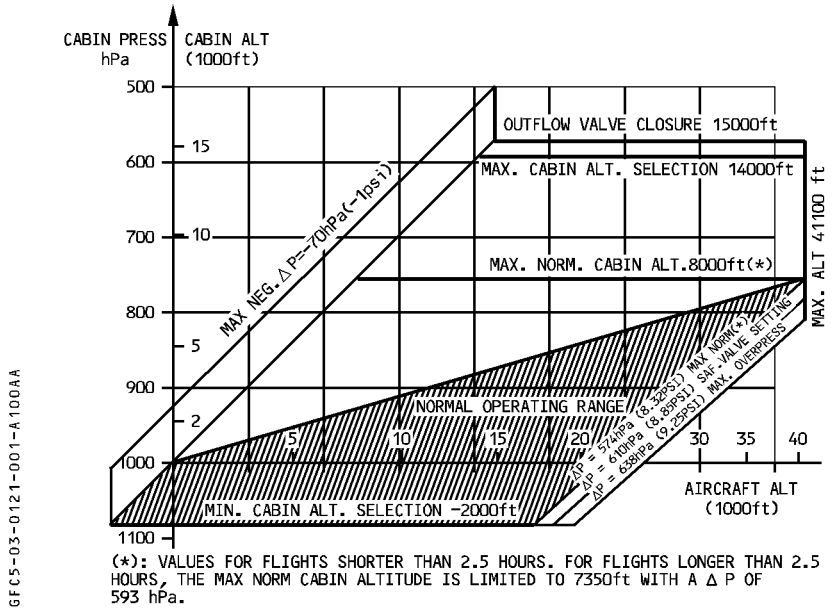

GFCS-03-0121-001-A100AA

(*): VALUES FOR FLIGHTS SHORTER THAN 2.5 HOURS. FOR FLIGHTS LONGER THAN 2.5 HOURS, THE MAX NORM CABIN ALTITUDE IS LIMITED TO 7350ft WITH A Δ P OF 593 hPa.

Note : Maximum differential pressure and safety valve setting tolerance = ± 7 hPa (0.1 psi)

RAM AIR INLET

Opens only if differential pressure is lower than 1 psi.

AIR CONDITIONING WITH LP GROUND UNIT

- Do not use conditioned air simultaneously from packs and LP ground units.
- Air flow supplied by two ground carts should not exceed 2 × 1.6 kg/sec (2 × 3.53 lb/sec).

R **AIR CONDITIONING WITH HP GROUND UNIT**

R – Do not use HP ground unit when APU supplies bleed air to avoid bleed system damage.

CABIN PRESSURE

- Maximum positive differential pressure . . . . . 9.25 psi
- Maximum negative differential pressure . . . . . – 1 psi
- Safety relief valve setting . . . . . 8.85 psi/– 1 psi

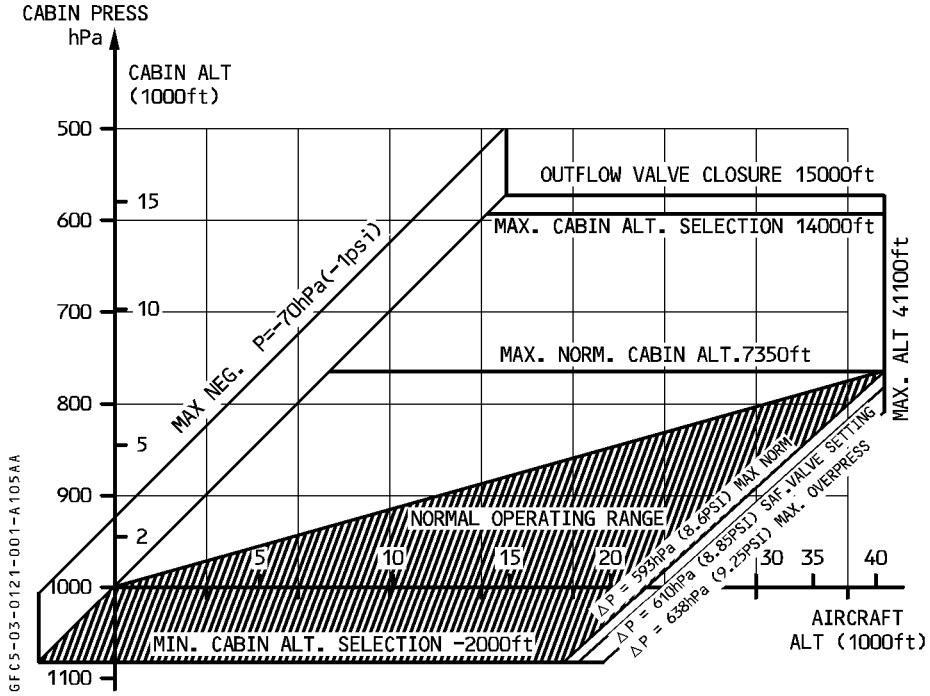

Note : Max. △ p and safety valve setting tolerance = ± 7 hPa (0.1 psi)

RAM AIR INLET

Open only if differential pressure is lower than 1 psi.

AIR CONDITIONING WITH LP GROUND UNIT

- Do not use conditioned air simultaneously from packs and LP ground units.
- Air flow supplied by two ground carts should not exceed 2 × 1.6 kg/sec (3.47 lb/sec).

R **AIR CONDITIONING WITH HP GROUND UNIT**

R – Do not use HP ground unit when APU supplies bleed air to avoid bleed system damage.

GENERAL

AUTO PILOT FUNCTION

Minimum height for use of autopilot on takeoff with SRS mode . . . . . 100 ft AGL
(An internal FMGS logic prevents the autopilot from engaging during the 5 seconds after liftoff).
Minimum height for use of the autopilot in :
Straight-in non precision approach . . . . . applicable MDA (MDH)
Circling approach . . . . . applicable MDA - 100 ft (or MDH - 100 ft)
ILS approach with CAT 1 displayed on FMA . . . . . 160 ft AGL
Go-around (AP or FD engagement) . . . . . 100 ft AGL
All other phases . . . . . 500 ft AGL
Use of the AP or FD in OPEN DES or DES mode is not permitted in approach, unless the FCU altitude is set to, or above, MDA (MDH) or 500 feet, whichever is the highest.

AUTOTHRUST FUNCTION

R Use of the autothrust is approved with, or without, AP/FD in selected or managed mode.

FLIGHT MANAGEMENT FUNCTION

FMGS lateral and vertical navigation has been certified for after takeoff, en route, and terminal area operations, for instrument approach procedures (except ILS, LOC, LOC-BC, LDA, SDF and MLS), and for missed approach procedures.

Navigation accuracy is a function of ground radio navaid infrastructure, or elapsed time since the last radio update.

The FMGS is also certified for navigation within BRNAV, PRNAV, and RNP 10 airspace. RNP10 oceanic/remote area operations are approved, provided time limitations in IRS only navigation (acceptable to operational authorities), are established.

FMGS approval is based on the assumption that the navigation database has been validated for intended use.

Obstacle clearance and adherence to airspace constraints remains the flight crew's responsibility.

Fuel, time predictions/performance information is provided for advisory purposes only.

R NAV mode may be used after takeoff, provided FMGS runway updating has been checked.

GENERAL

AUTO PILOT FUNCTION

Minimum weight for use of autoland . . . . . 123 000 kg
Minimum height for use of the autopilot on takeoff with SRS mode . . . . . 100 ft AGL
(An internal FMGS logic prevents the autopilot from engaging during the 5 seconds after liftoff).
Minimum height for use of the autopilot in :
Straight-in non precision approach . . . . . applicable MDA (MDH)
Circling approach . . . . . applicable MDA - 100 ft (or MDH - 100 ft)
ILS approach with CAT 1 displayed on FMA . . . . . 160 ft AGL
Go-around (AP or FD engagement) . . . . . 100 ft AGL
All other phases . . . . . 500 ft AGL
Use of the AP or FD in OPEN DES or DES mode is not permitted in approach, unless the FCU altitude is set to, or above, MDA (MDH) or 500 feet, whichever is the highest.

AUTOTHRUST FUNCTION

Use of the autothrust is approved with, or without, AP/FD in selected or managed mode.

FLIGHT MANAGEMENT FUNCTION

FMGS lateral and vertical navigation has been certified for after takeoff, en route, and terminal area operations, for instrument approach procedures (except ILS, LOC, LOC-BC, LDA, SDF and MLS), and for missed approach procedures.
RNP accuracy with GPS PRIMARY, or radio updating, has been demonstrated to be :

	With AP ON in NAV	With AP OFF and FD ON in NAV	With AP OFF and FD OFF
En route	1 NM	1 NM	1.3 NM
In terminal area	0.5 NM	0.5 NM	0.5 NM
In approach	0.3 NM	0.3 NM	Not authorized

Without GPS PRIMARY (or GPS deselected or inoperative), accuracy has been demonstrated, provided the appropriate RNP value is checked or entered on the MCDU, and HIGH accuracy is displayed.
Without GPS PRIMARY (or GPS deselected or inoperative), the navigation accuracy is a function of ground radio navaid infrastructure, or elapsed time since the last radio update.
The FMGS is also certified for navigation within BRNAV, PRNAV, and RNP 10 airspace.
RNP10 oceanic/remote area operations are approved with GPS PRIMARY or, without GPS PRIMARY (or GPS deselected or inoperative), provided time limitations in IRS only navigation (acceptable to operational authorities), are established.
FMGS approval is based on the assumption that the navigation database has been validated for intended use.
Obstacle clearance and adherence to airspace constraints remains the flight crew's responsibility.
Fuel, time predictions/performance information is provided for advisory purposes only.

R NAV mode may be used after takeoff, provided FMGS runway updating has been checked.

TAKEOFF IN GPS PRIMARY

R For certain airports, where the difference between the local coordinate system and WGS
R 84 (geodesic standard used by GPS, FMS) is not negligible, an incorrect NAV guidance may
R occur after takeoff.
R GPS must be deselected for takeoff from these airports, until a safe altitude is reached.

USE OF NAV AND FINAL APP MODES FOR NON PRECISION APPROACH

NAV, or NAV and FINAL APP mode may be used for VOR, VOR/DME, NDB, NDB/DME or RNAV (including GPS) approach, but not for ILS, LOC, LOC-BC, LDA, SDF, or MLS final approach.

VOR, VOR/DME, NDB or NDB/DME approach procedures may be performed, in NAV, or NAV and FINAL APP mode, provided AP or FD is used, and :

- The reference navaid and the corresponding airborne equipment is serviceable, tuned and monitored during the approach, or
- The radio navaid coverage supports the RNP value, specified for the approach procedure, and an operational approval is obtained.

RNAV approach may only be performed, if the radio navaid coverage supports the RNP value and HIGH accuracy is displayed on the MCDU with the specified RNP, and operational approval is obtained.

NAV mode may be used in the terminal area, provided :

- HIGH accuracy is displayed, and the appropriate RNP is checked or entered on the MCDU, or

R - Navaid raw data is monitored.

USE OF NAV AND FINAL APP MODES FOR NON PRECISION APPROACH

NAV, or NAV and FINAL APP mode may be used for VOR, VOR/DME, NDB, NDB/DME or RNAV (including GPS) approach, but not for ILS, LOC, LOC-BC, LDA, SDF, or MLS final approach.

For instrument approach procedures not coded in WGS 84 (or equivalent) coordinate system, the GPS must be deselected.

FINAL APP mode guidance capability with GPS PRIMARY has been demonstrated down to MDH/DH (barometric) 250 feet.

VOR, VOR/DME, NDB or NDB/DME approach procedures may be performed, in NAV, or NAV and FINAL APP mode, provided AP or FD is used, and :

- GPS PRIMARY is available. In this case, the reference navaid may be unserviceable, or the airborne radio equipment may be inoperative, or not installed, provided operational approval is obtained.
- Without GPS PRIMARY :
  - The reference navaid and the corresponding airborne equipment is serviceable, tuned, and monitored during the approach, or
  - The radio navaid coverage supports the RNP value, specified for the approach procedure, and an operational approval is obtained.

For GPS approach, GPS PRIMARY must be available.

RNAV approach without GPS PRIMARY may be performed only if the radio navaid coverage supports the RNP value and HIGH accuracy is displayed on the MCDU with the specified RNP, and operational approval is obtained.

NAV mode may be used in the terminal area, provided :

- GPS PRIMARY is available, or
- HIGH accuracy is displayed, and the appropriate RNP is checked or entered on the MCDU, or

R - Navaid raw data is monitored.

AUTOMATIC APPROACH, LANDING AND ROLL OUT

CATEGORY II

Minimum decision height : . . . . . 100 feet AGL
At least one autopilot must be engaged in APPR mode and CAT 2, CAT 3 SINGLE or CAT 3 DUAL must be displayed on FMA.
If the crew performs an automatic approach without autoland, the autopilot must be disengaged no later than at 80 feet.

CATEGORY III FAIL PASSIVE

Minimum decision height : . . . . . 50 feet
At least one autopilot must be engaged in APPR mode and CAT 3 SINGLE or CAT 3 DUAL must be displayed on FMA.

CATEGORY III FAIL OPERATIONAL

A/THR must be used in selected or managed speed.
Alert height : . . . . . 200 feet
– CAT III With DH
  2 autopilots must be engaged in APPR mode and CAT 3 DUAL must be displayed on FMA
– CAT III Without DH
  2 autopilots must be engaged in APPR mode and CAT 3 DUAL must be displayed on FMA
Minimum Runway Visual Range : . . . . . 75 meters

R **ENGINE OUT**

R CAT II and CAT III fail passive autoland are only approved in configuration 3, and if
R engine-out procedures are completed before reaching 1000 feet in approach.

MAXIMUM WIND CONDITIONS FOR CAT II/CAT III AUTOMATIC APPROACH, OR AUTOMATIC LANDING AND AUTOMATIC ROLLOUT

Headwind : 35 knots
Tailwind : 10 knots
Crosswind : 20 knots

Note : Wind limitation is based on surface wind, reported by the tower. If the wind displayed on the ND exceeds the above-noted limitations for autoland, but the tower reports surface wind within the limitations, then the autopilot can remain engaged. If the tower reports surface wind beyond limitations, only CAT I automatic approach without autoland can be performed.

AUTOMATIC LANDING

CAT II and CAT III autoland is approved in CONF3 and CONF FULL.
Automatic landing has been demonstrated :
- on CAT II and CAT III ILS beam,
- with ILS slope angle inside a range of (– 2.5°, – 3.15°),
- for airfield elevations lower than 9200 feet.

R - for weights below maximum landing weight.
R - at approach speed (Vapp) = VLS + wind correction
R minimum wind correction 5 knots
R maximum wind correction 15 knots

Automatic rollout performance has been approved on dry and wet runways, but performance on snow-covered or icy runways has not been demonstrated.
Automatic landing system performance has been demonstrated on CAT II and CAT III ILS beams. However, automatic landing in CAT I, or better weather conditions, is possible on CAT I ground installation or when ILS sensitive areas are not protected, if the following precautions are taken :
- The airline has checked that the ILS beam quality and the effect of the terrain profile before the runway have no adverse effect on autopilot guidance. In particular, the effect of terrain discontinuities within 300 meters before runway threshold must be evaluated.
- The crew is aware that LOC or GS beam fluctuations, independent of the aircraft system, may occur and the PF is prepared to immediately disconnect the autopilot and to take the appropriate action, should unsatisfactory guidance occur.
- At least CAT 2 capability is displayed on the FMA, and CAT II/III procedures are used.
- Visual references are obtained at a DH appropriate for the CAT I approach being flown, or a go-around is performed.
- When the crew does not intend to perform an autoland, they should disconnect the AP at, or above, 80 feet. This altitude being considered as a minimum to take over and feel comfortable. Nevertheless, for safety reasons, the AP can be disconnected at any time.

Note : Under the crew's responsibility, and in case of an emergency, autoland can be
R *performed up to Max Takeoff Weight.*

AUTOMATIC APPROACH, LANDING AND ROLL OUT

CATEGORY II

Minimum decision height : . . . . . 100 feet AGL
At least one autopilot must be engaged in APPR mode and CAT 2, CAT 3 SINGLE or CAT 3 DUAL must be displayed on FMA.
If the crew performs an automatic approach without autoland, the autopilot must be disengaged no later than at 80 feet.

CATEGORY III FAIL PASSIVE

Minimum decision height : . . . . . 50 feet
At least one autopilot must be engaged in APPR mode and CAT 3 SINGLE or CAT 3 DUAL must be displayed on FMA.

CATEGORY III FAIL OPERATIONAL

A/THR must be used in selected or managed speed.
Alert height : . . . . . 200 feet
– CAT III With DH
  2 autopilots must be engaged in APPR mode and CAT 3 DUAL must be displayed on FMA
– CAT III Without DH
  2 autopilots must be engaged in APPR mode and CAT 3 DUAL must be displayed on FMA
Minimum Runway Visual Range : . . . . . 75 meters

R **ENGINE OUT**

R CAT II and CAT III fail passive autoland are only approved in configuration 3, and if
R engine-out procedures are completed before reaching 1000 feet in approach.

MAXIMUM WIND CONDITIONS FOR CAT II/CAT III AUTOMATIC APPROACH, OR AUTOMATIC LANDING AND AUTOMATIC ROLLOUT

Headwind : 35 knots
Tailwind : 10 knots
Crosswind : 20 knots

Note : Wind limitation is based on surface wind, reported by the tower. If the wind displayed on the ND exceeds the above-noted limitations for autoland, but the tower reports surface wind within the limitations, then the autopilot can remain engaged. If the tower reports surface wind beyond limitations, only CAT I automatic approach without autoland can be performed.

AUTOMATIC LANDING

CAT II and CAT III autoland is approved in CONF3 and CONF FULL.
Automatic landing has been demonstrated :
- on CAT II and CAT III ILS beam,
- with ILS slope angle inside a range of (– 2.5°, – 3.15°),
- for airfield elevations lower than 9200 feet.

R - for weights below maximum landing weight.
R - at approach speed (VAPP) = VLS + wind correction
R minimum wind correction 5 knots
R maximum wind correction 15 knots

Automatic rollout performance has been approved on dry and wet runways, but performance on snow-covered or icy runways has not been demonstrated.
Automatic landing system performance has been demonstrated on CAT II and CAT III ILS beams. However, automatic landing in CAT I, or better weather conditions, is possible on CAT I ground installation or when ILS sensitive areas are not protected, if the following precautions are taken :
- The airline has checked that the ILS beam quality and the effect of the terrain profile before the runway have no adverse effect on autopilot guidance. In particular, the effect of terrain discontinuities within 300 meters before runway threshold must be evaluated.
- The crew is aware that LOC or GS beam fluctuations, independent of the aircraft system, may occur and the PF is prepared to immediately disconnect the autopilot and to take the appropriate action, should unsatisfactory guidance occur.
- At least CAT 2 capability is displayed on the FMA, and CAT II/III procedures are used.
- Visual references are obtained at a DH appropriate for the CAT I approach being flown, or a go-around is performed.
- When the crew does not intend to perform an autoland, they should disconnect the AP at, or above, 80 feet. This altitude being considered as a minimum to take over and feel comfortable. Nevertheless, for safety reasons, the AP can be disconnected at any time.

Note : Under the crew's responsibility, and in case of an emergency, autoland can be
R *performed up to Max Takeoff Weight.*

VHF3 TUNING IN VOICE MODE FROM THE MCDU

Do not use the MCDU's VHF3 VOICE DIRECTORY and COMPANY CALL pages to tune VHF3 in Voice mode.
Only use RMP to tune VHF3 in Voice mode.

ELECTRICAL

Electrical Outlets

It is forbidden to use the electrical outlets, during takeoff and landing.

LOWER DECK MOBILE CREW REST COMPARTMENT ◁

Do not occupy the Mobile Crew Rest Compartment during taxi, takeoff, and landing.

FLIGHT CREW REST COMPARTMENT ◁

The Flight Crew Rest Compartment seats can be used during taxi, takeoff, and landing, depending on local regulations.

GENERAL

FUEL AND ADDITIVE SPECIFICATIONS

– See engine specification
– The fuel system has been certified with JET A1, JET A, JP 5, and JP 8.

MAXIMUM ALLOWABLE WING FUEL IMBALANCE

Maximum allowed wing fuel imbalance in either inner or outer tanks at takeoff, landing and in flight.

R

INNER TANKS		OUTER TANKS	
Tank content (heavier tank)	Authorized asymmetry	Tank content (heavier tank)	Authorized asymmetry
FULL	2 900 kg (6400 lb)	FULL	1 480 kg (3260 lb)
HALF	4 800 kg (10500 lb)	2400 kg (5290 lb)	1 580 kg (3480 lb)
7 500 kg (16500 lb)	7 500 kg (16500 lb)	1 730 kg (3810 lb)	1 730 kg (3810 lb)

R The variation is linear between these values.
R (No limitation below 7500 kg (16500 lb) for inner tanks and 1730 kg (3810 lb) for outer
R tanks).

Note : Inner and outer authorized asymmetries should not be added.

FUEL TEMPERATURE

Maximum fuel temperature : JET A, JET A1, JP 8 and JP 5 : + 55°C
Minimum fuel temperature : Freezing point + 3°C or – 54°C whichever is the higher in inner tank.
Freezing point in outer or trim tank.

If the actual fuel freezing point of the fuel being used for the flight is unknown, the fuel specification freezing point provided hereafter must be used :

JET A1	JET A	JP 5	JP 8
– 47°C	– 40°C	– 46°C	– 47°C

MINIMUM FUEL QUANTITY FOR TAKEOFF : 5 200 kg (11460 lb)

WING TK LO LVL warning must not be displayed on ECAM for takeoff.

FUEL MANAGEMENT

– In case of a trim tank forward transfer pump failure, do not select the trim tank forward when the pitch attitude is above 3 degrees to avoid inadvertent fuel aft transfer.

GENERAL

FUEL AND ADDITIVE SPECIFICATIONS

– See engine specification
– The fuel system has been certified with JET A1, JET A, JP 5, and JP 8.

MAXIMUM ALLOWABLE WING FUEL IMBALANCE

Maximum allowed wing fuel imbalance in either inner or outer tanks at takeoff, landing and in flight.

R

INNER TANKS		OUTER TANKS	
Tank content (heavier tank)	Authorized asymmetry	Tank content (heavier tank)	Authorized asymmetry
FULL	2 900 kg (6400 lb)	FULL	1 480 kg (3260 lb)
HALF	4 800 kg (10500 lb)	2400 kg (5290 lb)	1 580 kg (3480 lb)
7 500 kg (16500 lb)	7 500 kg (16500 lb)	1 730 kg (3810 lb)	1 730 kg (3810 lb)

R The variation is linear between these values.
R (No limitation below 7500 kg (16500 lb) for inner tanks and 1730 kg (3810 lb) for outer
R tanks).

Note : Inner and outer authorized asymmetries should not be added.

FUEL TEMPERATURE

Maximum fuel temperature : JET A, JET A1, JP 8 and JP 5 : + 55°C
Minimum fuel temperature : Freezing point + 3°C or – 54°C whichever is the higher in inner tank.
Freezing point in outer or trim tank.

If the actual fuel freezing point of the fuel being used for the flight is unknown, the fuel specification freezing point provided hereafter must be used :

JET A1	JET A	JP 5	JP 8
– 47°C	– 40°C	– 46°C	– 47°C

MINIMUM FUEL QUANTITY FOR TAKEOFF : 5 200 kg (11460 lb)

WING TK LO LVL warning must not be displayed on ECAM for takeoff.

FUEL MANAGEMENT

- Tanks must be emptied in the following order : Center tank, then wing tanks.
- In case of a trim tank forward transfer pump failure, do not select the trim tank forward when the pitch attitude is above 3 degrees to avoid inadvertent fuel aft transfer.

HYDRAULIC

Normal operating pressure is 3000 psi ± 200.

GENERAL

BRAKES

Maximum brake temperature for takeoff (brake fans ◁ off) . . . . . 300° C

AUTO BRAKE

Use of the autobrake does not relieve the pilot of his responsibility to safely stop within the available runway length by taking over brake control with the brake pedals, if necessary. The pilot may disengage the automatic braking system, either by pressing the pushbutton of the armed mode or by applying firm action on the brake pedals.

PARKING BRAKE

CAUTION

Do not set N1 above 80 % with the parking brake ON.

NOSEWHEEL STEERING (NWS)

The nosewheel steering angle is limited to 65°.
Do not use differential braking during taxiing or turning at speeds below 20 knots.
Asymmetric thrust may be used during turns at high NWS angles in order to initiate the turn and to keep the aircraft moving during the turn. But, it should not be used to tighten the turn.
For towing and pushback, the nosewheel steering angle is limited to 60°. The ground crew should make use of the 60° marking on the nose landing gear door, to ensure that this limitation is not exceeded.

R Towbarless operation on the nose landing gear (towing and pusback is approved when
R using the accepted towbarless towing vehicles listed in the Airbus SIL 09-002.

TAXI WITH DEFLATED TIRES

R If tire damage is suspected after landing or after a rejeted takeoff, inspection of the tires is required before taxi. If the tire is deflated but not damaged, the aircraft can be taxied at low speed with the following limitations :

1. If one tire is deflated on one or more gears (ie. a maximum of three tires), the speed should be limited to 7 knots when turning.

R 2. If two tires are deflated on the same main gear, (the other main gear tires not being
R deflated), speed should be limited to 3 knots, and the nosewheel steering angle should be limited to 30 degrees.

GENERAL

BRAKES

Maximum brake temperature for takeoff (brake fans ◁ off) . . . . . 300° C

AUTOBRAKE

Use of the autobrake does not relieve the pilot of his responsibility to safely stop within the available runway length, by taking over brake control with the brake pedals, if necessary. The pilot may disengage the automatic braking system, either by pressing the armed mode pushbutton, or by applying firm action on the brake pedals.

PARKING BRAKE

CAUTION

Do not set N1 above 80 % with the parking brake ON.

NOSEWHEEL STEERING

The nosewheel steering angle is limited to 72°.

R No braked pivot turn is allowed (ie. differential braking cannot be used to fully stop one
R main gear).
R Asymmetric thrust should be used during the turn, to maintain a continuous speed
R (between 5 and 10 knots). Some anticipation is required to ensure that asymmetric thrust
R is available at the beginning of the turn.

For towing and pushback, the nosewheel steering angle is limited to 65°. The ground crew should make use of the 65° marking on the nose landing gear door, to ensure that this limitation is not exceeded.

TAXI WITH DEFLATED TIRES

R If tire damage is suspected after landing or after a rejeted takeoff, inspection of the tires is required before taxi. If the tire is deflated but not damaged, the aircraft can be taxied at low speed with the following limitations :

1. If one tire is deflated on one or more gears (ie. a maximum of three tires), the speed should be limited to 7 knots when turning.

R 2. If two tires are deflated on the same main gear, (the other main gear tires not being
R deflated), speed should be limited to 3 knots, and the nosewheel steering angle should be limited to 30 degrees.

R **INERTIAL REFERENCE SYSTEM**

R Refer to the Polar Navigation section in the FCOM 4.04.40.

ENHANCED GROUND PROXIMITY WARNING SYSTEM (EGPWS)

- Aircraft navigation is not to be predicated on the use of the terrain display.
  The terrain display is only intended as a situational awareness tool, and may not provide the accuracy on which to solely base terrain avoidance maneuvers.
  The EGPWS database, display, and alerting algorithms, do not currently take into account man-made obstructions.
- The EGPWS enhanced function should be inhibited (TERR pushbutton to OFF, on the GPWS panel) when the aircraft position is less than 15 NM from the airfield :
  - For operations to/from runways not incorporated in the EGPWS database.
  - For specific approach procedures, which have previously been identified as potentially producing false terrain alerts.

R **INERTIAL REFERENCE SYSTEM**

R Refer to the Polar Navigation section in the FCOM 4.04.40.

ISIS

When both PFDs are lost, the ISIS bugs function must not be used.

ENHANCED GROUND PROXIMITY WARNING SYSTEM (EGPWS)

- Aircraft navigation is not to be predicated on the use of the terrain display.
  The terrain display is only intended as a situational awareness tool, and may not provide the accuracy on which to solely base terrain avoidance maneuvers.
  The EGPWS database, display, and alerting algorithms, do not currently take into account man-made obstructions.
- The EGPWS enhanced function should be inhibited (TERR pushbutton to OFF, on the GPWS panel) when the aircraft position is less than 15 NM from the airfield :
  - For operations to/from runways not incorporated in the EGPWS database.
  - For specific approach procedures, which have previously been identified as potentially producing false terrain alerts.

COCKPIT FIXED OXYGEN SYSTEM

MINIMUM FLIGHT CREW OXYGEN PRESSURE

REF TEMPERATURE *		°C	– 10	0	10	20	30	40	50
		°F	14	32	50	68	86	104	122
MIN ** BOTTLE PRESSURE (PSI)	2 CREW MEMBERS		520	540	560	580	600	620	640
	2 CREW MEMBERS	+1 OBS	660	690	710	740	760	790	810
	2 CREW MEMBERS	+2 OBS	810	850	880	910	940	970	1 000

* REF TEMPERATURE :
. on ground : (OAT + CAB TEMP) / 2
. in flight : CAB TEMP (°C) – 10°C
or
CAB TEMP (°F) – 18° F

** MINIMUM BOTTLE PRESSURE TO COVER :
– Preflight checks
– Usage of oxygen when only one pilot is in the cockpit
– Unusable quantity (to ensure regulator functioning with minimum pressure)
– Normal system leakage
– and
· Protection after loss of cabin pressure with mask regulator on NORMAL (diluted oxygen) :
– During emergency descent for all cockpit members for 15 minutes (refer to cabin fixed oxygen system)
– During cruise at FL 100 for 2 crew members for 105 minutes
or
· Protection against smoke with 100 % oxygen for all cockpit members during 15 minutes at 8000 feet cabin altitude.

Note : The above times are based on the use of a sealed mask, may be shorter for bearded crew (in terms of performance, pressure or duration).

LEFT INTENTIONALLY BLANK

COCKPIT FIXED OXYGEN SYSTEM

MINIMUM FLIGHT CREW OXYGEN PRESSURE

REF TEMPERATURE *		°C	– 10	0	10	20	30	40	50
		°F	14	32	50	68	86	104	122
MIN ** BOTTLE PRESSURE (PSI)	2 CREW MEMBERS		540	560	580	600	620	640	660
	2 CREW MEMBERS	+1 OBS	660	690	710	740	760	790	810
	2 CREW MEMBERS	+2 OBS	810	850	880	910	940	970	1 000

* REF TEMPERATURE :
. on ground : (OAT + CAB TEMP) / 2
. in flight : CAB TEMP (°C) – 10°C
or
CAB TEMP (°F) – 18° F

** MINIMUM BOTTLE PRESSURE TO COVER :
– Preflight checks
– Usage of oxygen when only one pilot is in the cockpit
– Unusable quantity (to ensure regulator functioning with minimum pressure)
– Normal system leakage
– and :

R · Protection after loss of cabin pressure with mask regulator on NORMAL (diluted oxygen) :
– During emergency descent for all cockpit members for 22 minutes (refer to cabin fixed oxygen system)
– During cruise at FL 100 for 2 crew members for 98 minutes

or

· Protection against smoke with 100 % oxygen for all cockpit members during 15 minutes at 8000 feet cabin altitude.

Note : The above times, which are based on the use of a sealed mask, may be shorter for bearded crew (in terms of performance, pressure or duration).

LEFT INTENTIONALLY BLANK

GENERAL

OIL QUANTITY

Minimum before start . . . . . APU level indicator at ADD.
R The message LOW OIL LEVEL appears on ECAM APU page at this threshold.

APU STARTER

After three consecutive start attempts without cool down, a 60 minute cooling interval before next start must be observed.

ROTOR SPEED

· Maximum N . . . . . 107 %

EGT

· Maximum EGT . . . . . 650°C
· Maximum for start . . . . . 1250°C

R

ENVELOPE

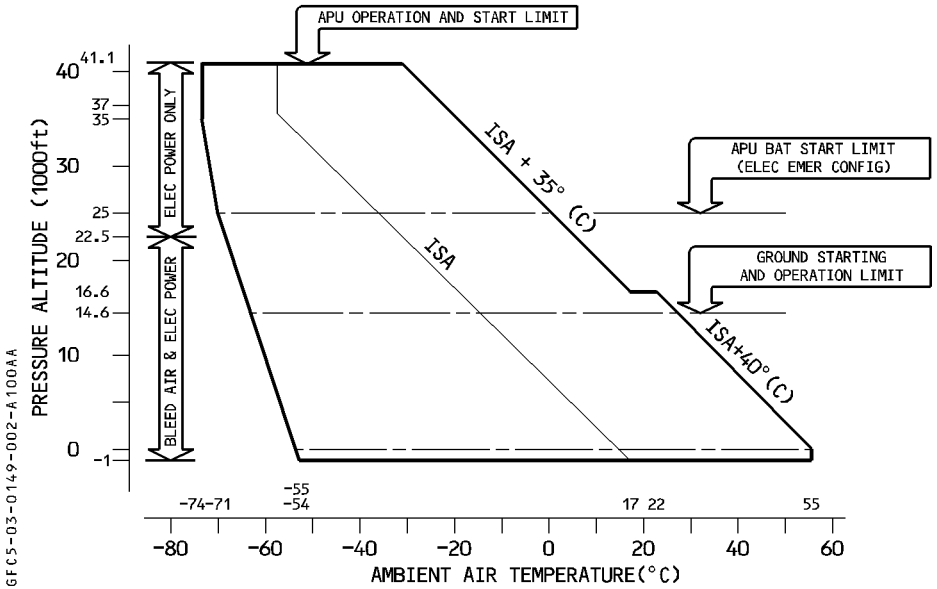

Note : In the APU start envelope, APU start is guaranteed within 3 consecutive start attempts.

· ELEC power extraction only (in flight or on ground) . . . . . 115 KVA (100 %)
· APU Air bleed extraction with generator load in flight :

BLEED AIR AND GEN LOAD IN FLIGHT				
TEMP ▶ MAX ALT (feet) ▼		ISA	ISA + 20	ISA + 35
22500 feet	ONE PACK	100 % (115 KVA)	63 % (72 KVA)	35 % (40 KVA)
20000 feet	ENG START	100 % (115 KVA)	74 % (85 KVA)	44 % (51 KVA)
17500 feet	TWO PACKS	100 % (115 KVA)	100 % (115 KVA)	74 % (85 KVA)

· APU air bleed extraction for wing anti-ice is not permitted.

THRUST SETTING / EGT LIMITS

R

OPERATING CONDITION	TIME LIMIT	EGT LIMIT	NOTE
TAKEOFF and GO-AROUND	5 min	975° C	
	10 min		Only in case of engine failure
MCT	Unlimited	940° C	
STARTING		750° C	
		975° C	For air start only

OIL

Maximum continuous temperature . . . . . 160° C
Maximum transient temperature (15 min) . . . . . 175° C
Minimum starting temperature . . . . . – 40° C
Minimum oil quantity . . . . . Refer to 3.03.04

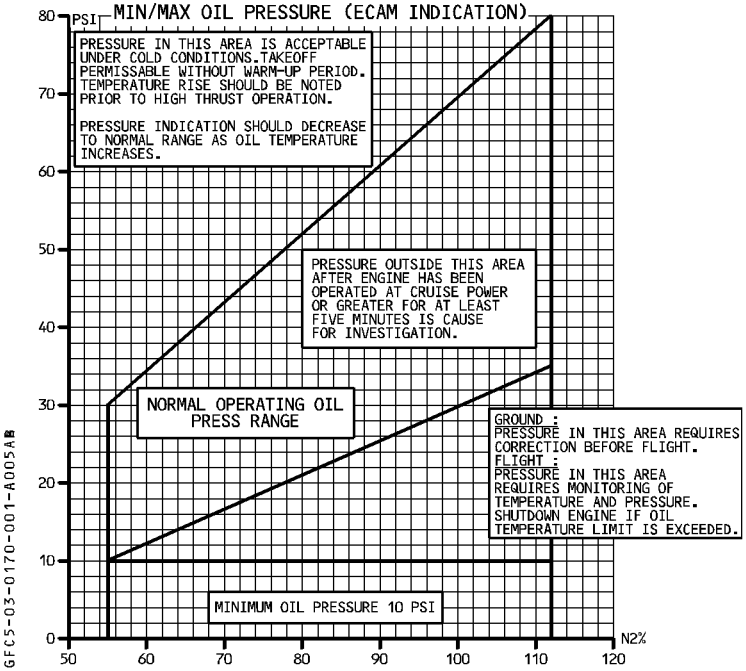

RPM

N1 max . . . . . 115.5 %

Note : The N1 limit depends upon ambient conditions and engine airbleed configuration. These may limit the N1 to a value lower than that given above.

N2 max . . . . . 113 %

STARTER

- Starter maximum continuous operation is 5 minutes.
- Between each cycle, wait 30 seconds per minute of operation for starter cooling.
- After two consecutive 5 minutes duty cycles, wait 10 minutes to allow starter to cool before each subsequent 5 minutes duty cycle
- No running engagement of the starter when the N2 is above 30 %.

REVERSE THRUST

- Selection of reverse thrust in flight is prohibited
- Backing the aircraft with reverse thrust is not permitted.
- Maximum reverse should not be used below 70 knots. Idle reverse is allowed down to aircraft stop.

REDUCED THRUST TAKEOFF

- Takeoff at reduced thrust is permissible only if the airplane meets all applicable performance requirements at the planned takeoff weight with the operating engines at the thrust available for the assumed temperature.
- Thrust reduction must not exceed 25 % of the full rated takeoff thrust.
  To meet this requirement, the flexible assumed temperature must not be higher than ISA + 43° C (T MAX FLEX).
- The assumed temperature must not be lower than the flat rating temperature or the actual OAT.
- Takeoff reduced thrust is not permitted on contaminated runways.
- R Takeoff at reduced thrust is allowed with any inoperative item affecting the performance
  R only if the associated performance shortfall has been applied to meet all performance
  R requirements at the takeoff weight with the operating engines at the thrust available for
  R the flex temperature.

02.00 CONTENTS

02.01 INTRODUCTION

02.10 OPERATING TECHNIQUES

REJECTED TAKEOFF 1
ENG FAILURE AFTER V_1 – CONTINUED TO. 4
IMMEDIATE VMC LDG FOLLOWING ENG FAILURE ON TAKEOFF. 6
R APPROACH WITH ONE ENGINE INOPERATIVE. 6a
R CIRCLING APPROACH WITH ONE ENGINE INOPERATIVE. 6a
LANDING WITH SLATS OR FLAPS JAMMED 7
NO FLAPS NO SLATS LANDING 9

02.21 AIR COND / PRESS / VENT

BLOWING FAULT 8
BULK (FWD)(AFT) CRG ISOL FAULT OR VENT FAULT ◁★ 10
BULK (FWD) CRG HEAT FAULT ◁★ 10
BULK CRG DUCT OVHT ◁★ 12
DUCT OVHT 4
EXCESS CAB ALT 5
EXTRACT FAULT 8
FWD CRG COOL FAULT ◁★ 11
FWD (AFT) OFV NOT OPEN 7
GND COOL FAULT ◁★ 9
HOT AIR SYS 1(2) FAULT 4
R IFE BAY VENT FAULT ◁★ 11
L(R) (L+R) CAB VENT FAULT 8
LAV + GAL VENT FAULT 10
LDG ELEV FAULT 7
LO DIFF PR 7
LWR LAV VENT FAULT ◁★ 13
LWR STOWAGE ISOL FAULT ◁★ 13
LWR STOWAGE VENT FAULT ◁★ 13

02.21 AIR COND / PRESS / VENT (cont'd)

– OVBD VALVE FAULT 9
– PACK 1(2) OVHT 1
– PACK VALVE 1(2) FAULT 1
– PACK 1(2) OFF 2
– PACK 1+2 FAULT 2
– PACK 1(2) REGUL FAULT 3
– PACK BAY VENT FAULT 9
– SAFETY VALVE OPEN 7
– SYS 1(2) (1+2) FAULT 6
– VENT SYS FAULT 11
– ZONE CTLR 1 (2) FAULT 4
– ZONE REGUL FAULT 3

02.22 AUTO FLT

– AP OFF 2
– A/THR OFF 2
– A/THR LIMITED 3
– AUTOLAND 5
– FCU FAULT 4
– FM 1(2) (1+2) FAULT 1
– MCDU 1 (2) (3) FAILURE 5
– REAC W/S DET FAULT 3

R

02.23 COMMUNICATIONS

ACARS 1(2) (1+2) FAULT ◁ 1
ACARS CALL (ALERT)◁ 1
CIDS 1+2 FAULT 1
CIDS PA FAULT 1
HF DATA FAULT ◁ 2
SATCOM (DATA) FAULT ◁ 2
SATCOM VOICE FAULT/SATCOM CALL (ALERT) ◁ 2
VHF/HF EMITTING 1
VHF 3 DATA FAULT ◁ 2

02.24 ELECTRICAL

AC BUS 1 FAULT 5
AC BUS 2 FAULT 6
AC ESS BUS FAULT 6
AC ESS BUS SHED 7
AC ESS BUS ALTN 23
APU GEN FAULT 1
BAT 1(2) or APU BAT FAULT or OFF 3
BAT 1(2) or APU BAT SYS FAULT. 4
BUS TIE OFF 23
C/B MONITOR FAULT 4
C/B TRIPPED 4
DC BAT BUS FAULT 23
DC BUS 1 FAULT 16
DC BUS 2 FAULT 17
DC BUS 1+2 FAULT 21
DC ESS BUS FAULT 19
DC ESS BUS SHED 20
ECMU 1(2) FAULT 3
EMER CONFIG 8
GEN 1(2) FAULT OR OFF 1
GEN 1(2) or APU GEN or EXT PWR OVERLOAD 2
IDG 1(2) DISCONNECTED 2
IDG OIL LO PR or OVHT 2
IDG 1(2) MINOR FAULT 4
REMAINING SYSTEMS IN EMER CONF 12

02.24 ELECTRICAL (Cont'd)
– STATIC INV FAULT 2
– TR 1(2) or APU TR or ESS TR FAULT 4

02.25 COCKPIT DOOR
– COCKPIT DOOR FAULT 1

02.26 FIRE PROTECTION
– AFT/BULK CRG SMOKE 7
– APU FIRE 3
– AVIONICS DET FAULT 8
– AVNCS VENT SMOKE 8
R – BULK AVN SMOKE ◁ 13
R – BULK AVN DET FAULT ◁ 13
R – CAB VIDEO 1(2)(3)(4) SMOKE ◁ 14
R – CAB VIDEO 1(2)(3)(4) DET FAULT ◁ 14
– ENG FIRE ON GROUND 1
– ENG FIRE IN FLIGHT 2
– ENG or APU FIRE LOOP FAULT 3
– ENG or APU FIRE DET FAULT 3
R – FLT (CAB) REST SMOKE ◁ 13
R – FLT (CAB) REST DET FAULT ◁ 13
– FWD CRG SMOKE 6
– FWD (AFT) CRG BTL 1(2) FAULT 6
– FWD CRG (AFT/BULK) DET FAULT 7
R – IFE BAY SMOKE ◁ 14
R – IFE BAY DET FAULT ◁ 14
– LAVATORY DET FAULT 7
– LAVATORY SMOKE 3
R – LWR STOWAGE SMOKE/DET FAULT 14
– SMOKE/AVNCS SMOKE 9
– SMOKE DET FAULT 8
– SMOKE/TOXIC FUMES REMOVAL 4

02.27 FLIGHT CONTROLS
– ADR CHECK PROC . . . . . REFER TO 02.34
– ADR DISAGREE . . . . . REFER TO 02.34
– AIL SERVO FAULT 15
– ALTN LAW 7
– CONFIG L(R) SIDESTICK FAULT (BY TAKE OVER) 2
– CONFIG SLATS (FLAPS) NOT IN T.O CONFIG 5
– CONFIG SPD BRK NOT RETRACTED 13
– CONFIG PITCH TRIM NOT IN T.O RANGE 16

02.27 FLIGHT CONTROLS (Cont'd)

– CONFIG RUD TRIM NOT IN T.O. RANGE 16
– DIRECT LAW 8
– ELEV SERVO FAULT 13
– ELEV REDUND LOST 9
– FCDC 1(2) (1+2) FAULT 15
– FLAP/MCDU DISAGREE 5
– FLAP LVR NOT ZERO ◁ 5
– FLAPS FAULT/LOCKED 3
– FLAPS/SLATS FAULT/LOCKED : MAX SPEED/V_{REF}/LDG DIST . . . 4
– GND SPLR FAULT 12
– IR DISAGREE . . . . . REFER TO 02.34
– LOW ENERGY WARNING 7
– L(R) ELEV FAULT 13
– L(R) SIDESTICK FAULT 2
– L(R) INR (OUTR) AIL FAULT 15
– LVR OUT OF DETENT 5
– L+R ELEV FAULT 14
– PRIM 1 (2) (3) FAULT 6
– PRIM 1 (2) (3) or SEC 1 (2) PITCH FAULT 18
– RUDDER TRIM RUNAWAY 19
– RUDDER JAM/RUDDER PEDAL JAM 20
R – RUD G (Y) (B) SERVO JAM 17
– RUD TRIM 1(2) FAULT 17
– RUD TRIM FAULT 17
R – RUD TRV LIM 1 (2) FAULT 17
– RUD TRV LIM FAULT 18
– SEC 1 (2) FAULT 7
– SENSOR FAULT 17
– SLAT or FLAP SYS 1(2) FAULT 1
– SLAT or FLAP TIP BRK FAULT 1
– SLATS FAULT/LOCKED 2

02.27 FLIGHT CONTROLS (Cont'd)
– SPD BRK FAULT or DISAGREE 12
– SPD BRK STILL OUT ◁ 12
– STAB CTL FAULT 11
– SPLR FAULT 12
– TURB DAMP FAULT 18
– YAW DAMPER 1(2) FAULT 16
– YAW DAMPER FAULT 16

02.28 FUEL
– ABNORM MAN FWD XFR 10
– APU AFT PUMP FAULT 10
– ENG 1 (2) or APU LP VALVE FAULT 3
– EXCESS AFT CG 5
– FCMC 1 (2) (1 + 2) FAULT 9
– FUEL LEAK 11
R – FUEL IMBALANCE 15
– FUEL LO TEMP 8
– FU/FOB DISCREPANCY ◁ 13
– GRVTY FUEL FEEDING 2
– L (R) INNER TK HI TEMP 13
– L (R) PUMP 1(2) LO PR 1
– L (R) STBY PUMP LO PR 1
– L (R) WING PUMPS LO PR 1
– L (R) (L + R) WING TK LO LVL 4
– MAN XFR COMPLETED 10
– NO WEIGHT/CG DATA 10
– OUTR TO INR FAULT 5
– T TANK XFR FAULT 6A
– TRIM LINE FAULT 6
– TRIM TANK FUEL UNUSABLE 14
– TRIM TK PUMP LO PR 5
– WING TK OVERFLOW 13
– WING XFEED FAULT 3
– ZFW ZFCG DISAGREE 10

02.27 FLIGHT CONTROLS (Cont'd)

– CONFIG RUD TRIM NOT IN T.O. RANGE 16
– DIRECT LAW 8
– ELEV SERVO FAULT 13
– ELEV REDUND LOST 9
– FCDC 1(2) (1+2) FAULT 15
– FLAP/MCDU DISAGREE 5
– FLAP LVR NOT ZERO◁ 5
– FLAPS FAULT/LOCKED 3
– FLAPS/SLATS FAULT/LOCKED : MAX SPEED/V_{REF}/LDG DIST . . . 4
– GND SPLR FAULT 12
– IR DISAGREE . . . . . REFER TO 02.34
– LOW ENERGY WARNING 7
– L(R) ELEV FAULT 13
– L(R) SIDESTICK FAULT 2
– L(R) INR (OUTR) AIL FAULT 15
– LVR OUT OF DETENT 5
– L+R ELEV FAULT 14
– PEDAL SENSOR FAULT 17
– PITCH TRIM/MCDU/CG DISAGREE 16
– PRIM 1 (2) (3) FAULT 6
– PRIM 1 (2) (3) or SEC 1 (2) PITCH FAULT 18
– RUD B (Y) (G) SERVO FAULT 21
– RUD NORM CTL FAULT 23
– RUD PEDAL FAULT 22
– RUD PRIM (SEC) 1 FAULT 23
– RUDDER FAULT 21
– RUDDER TRIM RUNAWAY 19
– RUDDER JAM/RUDDER PEDAL JAM 20
– RUD TRIM 1(2) FAULT 17
– RUD TRIM FAULT 17
– SEC 1 (2) FAULT 7
– SENSOR FAULT 17
– SLAT or FLAP SYS 1(2) FAULT 1
– SLAT or FLAP TIP BRK FAULT 1
– SLATS FAULT/LOCKED 2

02.27 FLIGHT CONTROLS (Cont'd)

– SPD BRK FAULT or DISAGREE 12
– SPD BRK STILL OUT ◁ 12
– STAB CTL FAULT 11
– SPLR FAULT 12
– TURB DAMP FAULT 18

02.28 FUEL

– ABNORM MAN FWD XFR 10
– APU AFT PUMP FAULT 10
– CTR TO INNER FAULT 5
– ENG 1 (2) or APU LP VALVE FAULT 3
– EXCESS AFT CG 5
– FCMC 1 (2) (1 + 2) FAULT 9
– FOB BELOW 17 T ◁ 4
– FUEL IMBALANCE 15
– FUEL LEAK 11
– FUEL LO TEMP 8
– FU/FOB DISCREPANCY ◁ 13
– GRVTY FUEL FEEDING 2
– JETTISON FAULT ◁ 16
– JETTISON NOT CLOSED ◁ 16
– L (R) CTR PUMP LO PR 1
– L (R) INNER TK HI TEMP 13
– L (R) WING PUMPS LO PR 1
– L (R) (L + R) WING TK LO LVL 4
– L (R) PUMP 1(2) LO PR 1
– L (R) STBY PUMP LO PR 1
– L + R CTR PUMPS LO PR 3
– MAN XFR COMPLETED 10
– NO WEIGHT/CG DATA 10
– OUTR TO INR FAULT 5
– T TANK XFR FAULT 6a
– TRIM LINE FAULT 6
– TRIM TANK FUEL UNUSABLE 14
– TRIM TK PUMP LO PR 5
– WING TK OVERFLOW 13
– WING XFEED FAULT 3
– ZFW ZFCG DISAGREE 10

02.29 HYDRAULIC

– B RSVR LO AIR PR/OVHT/LO LVL 3
– B ENG 1 PUMP LO PR 13
– B+Y SYS LO PR 9
– G+B SYS LO PR 5
– G+Y SYS LO PR 7
– G (B) (Y) ELEC PUMP FAULT 11
– G ENG 1(2) PUMP LO PR 11
– G ENG 1+2 PUMP LO PR 12
– G RSVR LO AIR PR/OVHT/LO LVL 1
– G RSVR UNDERFILLED 16
– G SYS LEAK 16
– MONITORING FAULT 15
– RAT FAULT 15
– Y ENG 2 PUMP LO PR 14
– Y RSVR LO AIR PR/OVHT/LO LVL 4a

02.30 ICE AND RAIN PROTECTION

R – CAPT (F/O) (STBY) PITOT (L STAT) (R STAT) (AOA) HEAT . . . 2
– CAPT (F/O) TAT HEAT 3
– CAPT (F/O) (STBY) PROBES HEAT 3
– DOUBLE PROBE HEAT FAILURE 3
– ENG 1(2) VALVE CLOSED or OPEN 4
R – L (R) INR (OUTR) WING HI PR 6
– L (R) INR (OUTR) WING LO PR 5
– L (R) INR (OUTR) WING OPEN 6
– L(R) (L+R) WSHLD HEAT 1
– L(R) (L+R) WINDOW HEAT 1
– WAI SYS FAULT 7
– WING OPEN ON GND 4
– WING VLVE NOT OPEN 5

02.31 INDICATING / RECORDING

– DFDR or FDIU FAULT 1
– DISPLAY DISCREPANCY 4
– DISPLAY UNIT FAILURE 5
– ECAM SINGLE DISPLAY 6
– EFIS DMC 1(2) (3) FAULT 3
– ECAM DMC 3 FAULT 3
– ECAM DMC 1(2) FAULT 4
– ECP FAULT 1
– FWC 1(2) FAULT 1
– FWC 1+2 FAULT 2
– OEB/FWC DISCREPANCY ◁ 6
– SDAC 1(2) (1+2) FAULT 2

02.32 LANDING GEAR

BRAKES – A/SKID FAULT or A/SKID NWS OFF 10
– AUTO BRK FAULT 10
– CONFIG PARK BRK ON 11
– HOT 11
– LOSS OF BRAKING 13
– PARK BRK LO PR ◁ 10
– RELEASED 10
– RESIDUAL BRAKING 14
R – RESIDUAL BRAKING PROC 14
– SYS 1(2) FAULT 12
L/G – DOORS NOT CLOSED 1
– GEAR NOT DOWN 4
– GEAR NOT DOWNLOCKED 3
– GEAR NOT UPLOCKED 1
– GEAR UPLOCK FAULT 2
– GRAVITY EXTENSION 6
– LDG WITH ABNORMAL L/G 7
– LGCIU 1(2) (1+2) FAULT 5
– L(R) LENGTHENING FAULT 4
– RETRACTION FAULT 4
– SYS DISAGREE 4
WHEEL – HYD SEL VALVE 12
– NWS OVERSTEER 12
– N/W STRG FAULT 12
– TIRE LO PR ◁ 12

02.29 HYDRAULIC

– B RSVR LO AIR PR/OVHT/LO LVL 3
– B ENG 1 PUMP LO PR 13
– B+Y SYS LO PR 9
– G+B SYS LO PR 5
– G+Y SYS LO PR 7
– G (B) (Y) ELEC PUMP FAULT 11
– G ENG 1(2) PUMP LO PR 11
– G ENG 1+2 PUMP LO PR 12
– G RSVR LO AIR PR/OVHT/LO LVL 1
– G RSVR UNDERFILLED 16
– G SYS LEAK 16
– MONITORING FAULT 15
– RAT FAULT 15
– Y ENG 2 PUMP LO PR 14
– Y RSVR LO AIR PR/OVHT/LO LVL 4a

02.30 ICE AND RAIN PROTECTION

– A. ICE DETECT FAULT 8
– ALL PITOT HEAT 12
– CAPT (F/O) (STBY) PITOT (L STAT) (R STAT) (AOA) HEAT . . . 2
– CAPT (F/O) TAT HEAT 3
– CAPT (F/O) (STBY) PROBES HEAT 3
– CAPT + F/O PITOT HEAT 9
– CAPT + STBY PITOT HEAT 10
– DOUBLE STAT or AOA HEAT FAILURE 3
– ENG 1(2) VALVE CLOSED or OPEN 4
– F/O + STBY PITOT HEAT 11
– ICE or SEVERE ICE DETECTED 8
– L (R) INR (OUTR) WING HI PR 6
– L (R) INR (OUTR) WING LO PR 5
– L (R) INR (OUTR) WING OPEN 6
– L(R) (L+R) WSHLD HEAT 1
– L(R) (L+R) WINDOW HEAT 1
– WAI SYS FAULT 7
– WING OPEN ON GND 4
– WING VLVE NOT OPEN 5

02.31 INDICATING / RECORDING

– DFDR or FDIU FAULT 1
– DISPLAY DISCREPANCY 4
– DISPLAY UNIT FAILURE 5
– ECAM SINGLE DISPLAY 6
– EFIS DMC 1(2) (3) FAULT 3
– ECAM DMC 3 FAULT 3
– ECAM DMC 1(2) FAULT 4
– ECP FAULT 1
– FWC 1(2) FAULT 1
– FWC 1+2 FAULT 2
– OEB/FWC DISCREPANCY ◁ 6
– SDAC 1(2) (1+2) FAULT 2

02.32 LANDING GEAR

BRAKES – A/SKID FAULT or A/SKID NWS OFF 10
– AUTO BRK FAULT 10
– CONFIG PARK BRK ON 11
– HOT 11
– LOSS OF BRAKING 13
– PARK BRK LO PR ◁ 10
– RELEASED 10
– RESIDUAL BRAKING 14
R – RESIDUAL BRAKING PROC 14
– SYS 1(2) FAULT 12
L/G – DOORS NOT CLOSED 1
– GEAR NOT DOWN 4
– GEAR NOT DOWNLOCKED 3
– GEAR NOT UPLOCKED 1
– GEAR UPLOCK FAULT 2
– GRAVITY EXTENSION 6
– LDG WITH ABNORMAL L/G 7
– LGCIU 1(2) (1+2) FAULT 5
– L(R) LENGTHENING FAULT 4
– RETRACTION FAULT 4
– SYS DISAGREE 4
WHEEL – HYD SEL VALVE 12
– NWS OVERSTEER 12
– N/W STRG FAULT 12
– TIRE LO PR ◁ 12

02.34 NAVIGATION

– ADR 1 (2) (3) FAULT 1
– ADR 1+2 (1+3) (2+3) FAULT 2
– ADR 1 + 2 + 3 FAULT 3
R – ADR CHECK 17
– ADR DISAGREE 16
– EXTREME LATITUDE 8
– FM/IR POS DISAGREE 6
– FM/GPS POS DISAGREE ◁ 6
– GPS 1(2) FAULT ◁ 11
– GPWS ALERTS/EGPWS ALERTS ◁ 12
– GPWS FAULT 10
– GPWS TERR DET FAULT ◁ 13
– HDG or ATT or ALTI or BARO REF DISCREPANCY 8
– ILS 1 (2) (1+2) FAULT 10
– IR 1 (2) (3) FAULT 4a
– IR ALIGNMENT IN ATT MODE 5
– IR 1+2 (1+3) (2+3) FAULT 7
– IR DISAGREE 15
– IR NOT ALIGNED 6
– OVERSPEED 8
– PRED W/S DET FAULT ◁ 11
– RA 1 (2) (1+2) FAULT 9
– STALL WARNING 11
– TCAS FAULT ◁ 10
– TCAS WARNINGS ◁ 13
R – UNRELIABLE SPEED INDICATION 18

02.36 PNEUMATIC

– ABNORM BLEED CONFIG 2
– APU BLEED FAULT 4
– APU BLEED LEAK 3
– BMC 1(2) FAULT 5
– BLEED LO TEMP 6
– DUAL BLEED FAULT 7
– ENG 1 (2) BLEED FAULT 1
– ENG 1(2) BLEED NOT CLSD 1
– ENG 1 (2) HPV NOT OPEN 4
– L (R) WING or ENG 1 (2) LEAK 3
– L (R) WING LEAK DET FAULT 4
– X BLEED FAULT 4

02.46 INFORMATION SYSTEM ◁
– ATSU FAULT 1
– ATC FAULT 1
– COMPANY FAULT 1

02.49 APU
– APU FAULT 1

02.52 DOOR
– FWD or AFT or BULK CARGO 1
– L (R) FWD or MID or AFT CABIN 1
– L (R) EMER EXIT or AVIONIC 1
– POS DET 1(2) (1+2) 2
– UPPER DECK CARGO ◁ 1

02.70 POWERPLANT
– ALL ENG FLAMEOUT 4
– BLEED STATUS FAULT 7
– COOL VALVE FAULT ◁ 8
– EGT EXCEEDED ◁ 12
– EIU FAULT 10
– ENG FAIL 1
– ENG SHUTDOWN 3
R – ENG CTL SYS FAULT 7
– ENG CTL VALVE FAULT 11
– ENG 1(2) MINOR FAULT 8
R – ENG START FAULT (THR LEVERS NOT AT IDLE) 20
– ENG 1(2) START VALVE FAULT 20
– ENG 1(2) START FAULT 21
– ENG THRUST LOSS ◁ 22
– ENG STALL 23
– ENG TAILPIPE FIRE 25
– FADEC SYS FAULT 8
– FADEC OVHT or FAULT 9
– FUEL FILTER CLOG 9
– HIGH ENGINE VIBRATION 26
– HP FUEL VALVE 22
– IGN A (B) (A+B) FAULT 11
– N1/N2 EGT OVERLIMIT 12
– OIL LO or HI TEMP 18

02.34 NAVIGATION

– ADR 1 (2) (3) FAULT 1
– ADR 1+2 (1+3) (2+3) FAULT 2
– ADR 1 + 2 + 3 FAULT 3
– ADR CHECK 17
– ADR DISAGREE 16
– EXTREME LATITUDE 8
– FM/IR POS DISAGREE 6
– FM/GPS POS DISAGREE ◁ 6
– GPS 1(2) FAULT ◁ 11
– GPWS ALERTS/EGPWS ALERTS ◁ 12
– GPWS FAULT 10
– GPWS TERR DET FAULT ◁ 13
– HDG or ATT or ALTI or BARO REF DISCREPANCY 8
– IAS DISCREPANCY 9
– ILS 1 (2) (1+2) FAULT 10
– IR 1 (2) (3) FAULT 4a
– IR ALIGNMENT IN ATT MODE 5
– IR 1+2 (1+3) (2+3) FAULT 7
– IR DISAGREE 15
R – IR NOT ALIGNED 5
– OVERSPEED 8
– PRED W/S DET FAULT ◁ 11
– RA 1 (2) (1+2) FAULT 9
– STALL WARNING 11
– TCAS FAULT ◁ 10
– TCAS WARNINGS ◁ 13
– UNRELIABLE SPEED INDICATION 18

02.36 PNEUMATIC

– ABNORM BLEED CONFIG 2
– APU BLEED FAULT 4
– APU BLEED LEAK 3
– BMC 1(2) FAULT 5
– BLEED LO TEMP 6
– DUAL BLEED FAULT 7
– ENG 1 (2) BLEED FAULT 1
– ENG 1(2) BLEED NOT CLSD 1
– ENG 1 (2) HPV NOT OPEN 4
– L (R) WING or ENG 1 (2) LEAK 3
– L (R) WING LEAK DET FAULT 4
– X BLEED FAULT 4

02.46 INFORMATION SYSTEM ◁
– ATSU FAULT 1
– ATC FAULT 1
– COMPANY FAULT 1

02.49 APU
– APU FAULT 1

02.52 DOOR
– FWD or AFT or BULK CARGO 1
– L (R) FWD or MID or AFT CABIN 1
– L (R) EMER EXIT or AVIONIC 1
– POS DET 1(2) (1+2) 2
– UPPER DECK CARGO ◁ 1

02.70 POWERPLANT
– ALL ENG FLAMEOUT 4
– BLEED STATUS FAULT 7
– COOL VALVE FAULT ◁ 8
– EGT EXCEEDED ◁ 12
– EIU FAULT 10
– ENG FAIL 1
– ENG SHUTDOWN 3
R – ENG CTL SYS FAULT 7
– ENG CTL VALVE FAULT 11
– ENG 1(2) MINOR FAULT 8
R – ENG START FAULT (THR LEVERS NOT AT IDLE) 20
– ENG 1(2) START VALVE FAULT 20
– ENG 1(2) START FAULT 21
– ENG THRUST LOSS ◁ 22
– ENG STALL 23
– ENG TAILPIPE FIRE 25
– FADEC SYS FAULT 8
– FADEC OVHT or FAULT 9
– FUEL FILTER CLOG 9
– HIGH ENGINE VIBRATION 26
– HP FUEL VALVE 22
– IGN A (B) (A+B) FAULT 11
– N1/N2 EGT OVERLIMIT 12
– OIL LO or HI TEMP 18

02.70 POWERPLANT (Cont'd)

– OIL LO PR 18
– OIL FILTER CLOG 18
– RELIGHT IN FLIGHT 27
– REV PRESSURIZED 13
– REV INHIBITED 13
– REV FAULT 13
– REV SET 14
– REV UNLOCKED 14
– THR LEVERS NOT SET ◁ 9
– T.O. THRUST DISAGREE 9
– THR LEVER DISAGREE 16
– THR LEVER FAULT 17
– THRUST LOCKED 18
– TYPE DISAGREE 13

02.80 MISCELLANEOUS

– BOMB ON BOARD 10
– COCKPIT WINDSHIELD/WINDOW CRACKED 13
– CREW INCAPACITATION 9
– DITCHING 2
– ECAM ADVISORY CONDITIONS 14
– EMER DESCENT 7
– FORCED LANDING 5
– LDG DIST CORRECTIONS FOR FAILURES 16
– ON GROUND EMER / EVACUATION 1
– OVERWEIGHT LANDING 8
– UNRELIABLE SPEED INDICATION . . . . . REFER TO 02.34
– VOLCANIC ASH ENCOUNTER 21
– WINDSHEAR 19
– WINDSHEAR AHEAD◁ 20

02.90 DETAILED CABIN/COCKPIT EVAC PROC

GENERAL

Abnormal and Emergency procedures represent the actions applicable after a failure, to ensure adequate safety and to ease the further conduct of the flight. They are applied following the «READ and DO» principle.

PRESENTATION

The presentation of procedures is, as far as practicable, identical to the presentation on ECAM. The abbreviations used are identical to nomenclature on the cockpit panels. All actions or information displayed on ECAM are printed in capital letters. Other information, not on ECAM, is printed in small letters.

Expanded information is inserted in the procedure and printed in italics. It provides :

- identification of the particular failure
- explanation for actions, where the reason is not self evident
- additional background information

· When several procedures are presented under the same title, the starting point of each procedure is marked by a black square.
Only one procedure is applicable at a time.
For example :

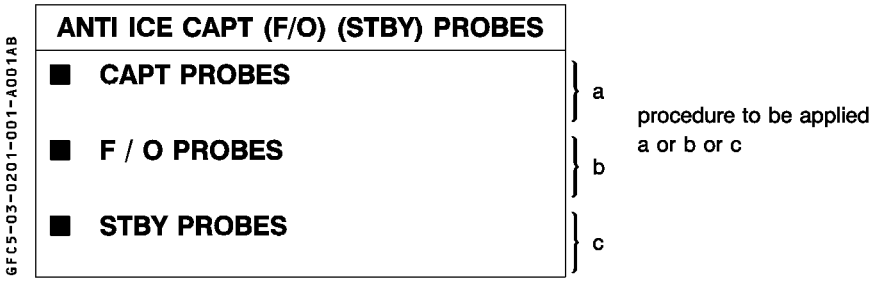

R · Black squares are also used to indicate parts of procedure, among which only one is applicable at a time.
For example :

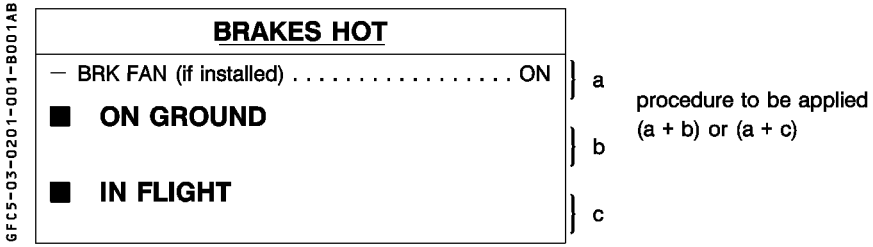

The ECAM does not display black squares.

· If an action depends on a precondition, a black dot identifies the precondition. If the precondition appears on ECAM, it appears in large letters. If not, it appears in small letters.
For example :

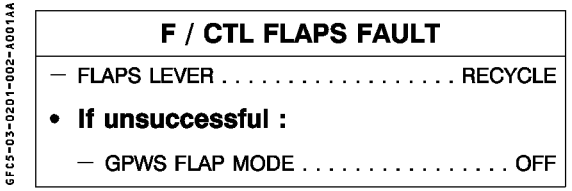

· Titles of the procedures appear in the following ways :

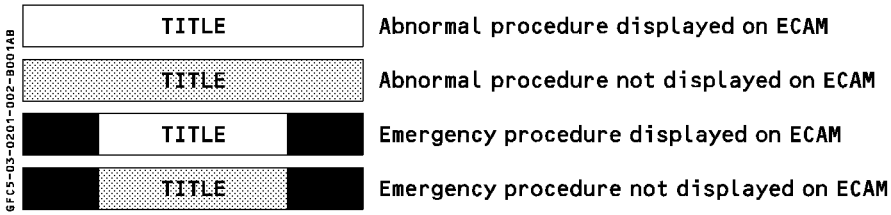

TASK SHARING

The general task sharing shown below applies to all procedures.
The pilot flying remains pilot flying throughout the procedure.
PF, the pilot flying, is responsible for :
– thrust levers,
– control of flight path and airspeed,
– aircraft configuration (request configuration change),
– navigation,
– communications.
PNF, the pilot not flying, is responsible for :
– reading aloud the ECAM and checklists,
– executing required actions or actions requested by the PF, if applicable,
– operating the engine master switch and ENG FIRE pushbutton (monitored by the PF).

R MEMORY ITEMS

R The following procedures are to be applied without referring to paper : Windshear ◁ ,
R windshear ahead ◁ , TCAS ◁ , EGPWS ◁ , loss of braking, beginning of EMER DESCENT,
R beginning of UNRELIABLE SPEED INDICATION.

USE OF AUTOPILOT

The autopilot may be used in most failure cases, when available :

- In case of engine failure, without any restriction including autoland or CAT II/CAT III ILS.
- In case of other failures, down to 500 ft AGL in all modes. However, the AP has not been certified in all configurations and its performance cannot be guaranteed. If the pilot chooses to use the AP in such circumstances, extra vigilance is required and the AP must be disconnected, if the aircraft deviates from the desired or safe flight path.

INITIATION OF PROCEDURES

Procedures are initiated on pilot flying command.
No action is taken (apart from cancelling audio warnings through the MASTER WARN light) until :

- The appropriate flight path is established, and
- The aircraft is at least 400 feet above the runway, if a failure occurs during takeoff, approach or go-around.
  A height of 400 feet is recommended because it is a good compromise between the necessary time for stabilization and the excessive delay in procedure initiation.
  In some emergency cases, provided the appropriate flight path is established, the pilot flying may initiate actions before this height.

R If an emergency causes LAND ASAP to appear in red on the ECAM, the pilot flying should
R land at the nearest suitable airport.
If an abnormal procedure causes LAND ASAP to appear in amber on the ECAM, the crew should consider the seriousness of the situation and the selection of a suitable airport.

LANDING DISTANCE

Any increase in landing distance, resulting from an emergency or abnormality, must be based on the actual landing distance in Conf FULL (Refer to 3.02.80).

ECAM

Warning Inhibition during takeoff

Some warnings (non-inhibited) appear whenever the prompting situation arises ; others (inhibited) do not appear at once, if the prompting situation arises during takeoff.

CREW COORDINATION

When carrying out a procedure displayed on ECAM, both pilots must be aware of the present display. Before any "CLEAR" action, the pilots should crosscheck to confirm that there remains no blue message (except in case of no action feedback) that they can eliminate by a direct action.

NO CLEAR ACTION BEFORE CROSS-CONFIRMATION

Example of crew coordination and cross confirmation :

WARNING DISPLAY	PILOT FLYING	PILOT NOT FLYING
HYD B RSVR OVHT BLUE ENG 1 PUMP....OFF	READ FAILURE TAKE ATC RADIO CTL – REQUEST ECAM ACTION (1)	READ FAILURE – PERFORM ECAM ACTION OR REQUEST EXECUTION BY THE PF
HYD B RSVR OVHT * F/CTL B SYS LO PR	– CHECK ECAM ACTION COMPLETED – CONFIRM CLEAR	– REQUEST CLEAR
SEAT BELTS * F/CTL	– CONFIRM CLEAR	– REVIEW ALL AFFECTED EQUIPMENT SHOWN IN AMBER ON F / CTL PAGE – REQUEST CLEAR
STATUS APPR PROC / INOP SYS IF BLUE OVHT OUT : / CAT 3 BLUE ENG 1 PUMP .... ON / BLUE HYD PART SPLRS CAT 2 ONLY / ALTN BRK SLATS SLOW / REV 1	– CONFIRM CLEAR	– READ STATUS LINE BY LINE – REQUEST CLEAR

R For standard calls, refer to 3.03.90.

(1) Although it is the responsability of the pilot flying to request ECAM actions, this does not preclude the captain from either taking control of the aircraft or ordering ECAM actions he considers to be necessary.

R *Note : ECAM procedures and STATUS information, supplemented by a PFD/ND check*
R *suffice for handling the fault. However, before applying the ECAM procedures,*
R *the fault should be confirmed on the system display.*
R *When ECAM actions have been performed, and the ECAM STATUS has been*
R *reviewed, the crew may refer to FCOM procedure (3.02) for supplementary*
R *information, if time permits.*

USE OF SUMMARIES

GENERAL

The summaries consist of QRH procedures. They have been created to help the crew handle the actions to be carried out, in the event of an electrical emergency configuration dual hydraulic failure.
In any case, the ECAM should be applied first.
This includes both the procedure and the STATUS review.
Only after announcing "ECAM ACTIONS COMPLETED", should the PNF refer to the corresponding QRH summary.
When the failure occurs, and after performing the ECAM actions, the PNF should refer to the "CRUISE" portion of the summary, in order to determine the landing distance coefficient.
Since normal landing distances are also given on this page, the PNF will be able to compute the landing distance taking failure(s) into account, in order for the pilot to decide whether to divert or not.

APPROACH PREPARATION

As always, approach preparation includes a review of the ECAM STATUS.
After reviewing the STATUS, the PNF should refer to the "CRUISE" portion of the summary to determine the VREF correction, and compute the VAPP.
The pilot is presumed to know the computation method, and use the VREF given on the MCDU (the destination having been previously updated).
A VREF table is provided in the summary, for failure cases leading to the loss of the MCDU.
The LANDING and GO-AROUND portions of the summary should be used for the approach briefing.

APPROACH

The APPR PROC actions should be performed by reading the APPROACH portion of the summary. This portion has primarily been added due to the flap extension procedure, which is not fully addressed by the ECAM.
As the recommendations provided in this portion of the summary are deened sufficient, it is not necessary to refer to the "LANDING WITH FLAPS (SLATS) JAMMED" paper procedure.
After referring to the APPROACH portion of the summary, the PNF should then review the ECAM STATUS, and check that all APPR PROC actions have been completed.

SEQUENCE

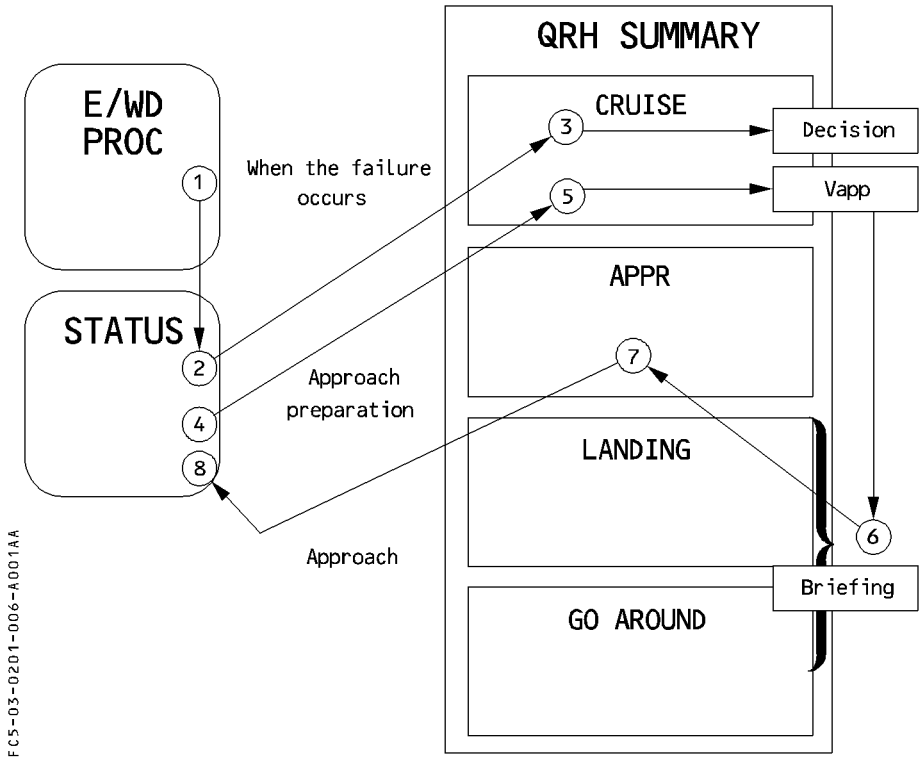

REJECTED TAKEOFF

GENERAL

The decision to reject the take-off and the stop action shall be made by the captain.
It is therefore recommended that the captain keeps his hand on the thrust levers until V1 is reached whether he is PF or PNF. As soon as he decides to abort, he calls "stop", takes over and performs the stop actions.
It is impossible to list all the factors which could lead to the decision to discontinue the take-off, but in order to help in the decision process, the ECAM inhibits the warnings which are not paramount from 80 kt to 1 500 ft (or 2 minutes after lift-off, whichever occurs first).
Experience has shown that rejected take-offs were sometimes hazardous even though the performance was correctly calculated, based on flight tests.
This may be due to the following factors :
- Delay in initiating stopping procedure is increase,
- Tyres are damaged,
- Brakes not working correctly, initial temperature higher than normal,
- Brakes not fully applied.
- Runway friction coefficient is lower than assumed in computations
- Error in gross weight determination,
- Runway line up not considered.

The A330 is certificated according to JAR amendment 25-42 which considers 2 seconds between decision and action, thus improving the safety margin.
Since above 100 kt, rejecting the take-off becomes a serious action which may lead to a hazardous situation, in particular as speed approaches V1, be "Go-minded" if none of the main failures quoted below has occurred.

REJECTED TAKEOFF (CONT'D)

DECISION MANAGEMENT

- **Below 100 knots** :
  The decision to reject the takeoff may be taken at the Captain's discretion, depending on the circumstances.
  Although we cannot list all of the causes, the Captain should seriously consider discontinuing the takeoff, if any ECAM warning is activated.
  Note : The speed of 100 knots is not critical, and was chosen in order to help the Captain make his decision and avoid unnecessary stops from high speed.
- **Above 100 knots, and below V1** :
  Rejecting the takeoff at these speeds is a more serious matter, particularly on slippery runways. It could lead to a hazardous situation, if the speed is approaching V1. Very few situations should lead to the decision to reject the takeoff. The main ones are :
  1. Fire warning, or severe damage ;
  2. Sudden loss of engine thrust ;
  3. Malfunctions or conditions that give unambiguous indications that the aircraft will not fly safely.
  4. ECAM warnings, such as :
  · ENG or APU FIRE
  · ENG FAIL
  · CONFIG
  · ENG OIL LO PR
R · ENG REV UNLOCKED
  · L + R ELEV FAULT
  Nose gear vibration should not lead to an RTO above 100 knots.
  In case of tire failure between V1 minus 20 knots and V1 :
  Unless debris from the tires has caused serious engine anomalies, it is far better to get airborne, reduce the fuel load, and land with a full runway length available.
  The V1 call has precedence over any other call.
- **Above V1** :
  Takeoff must be continued, because it may not be possible to stop the aircraft on the remaining runway.

REJECTED TAKEOFF (CONT'D)

PROCEDURE

R

CAPT	F/O
Phase 1	
– CALL . . . . . "STOP"	
Simultaneously :	
– THRUST LEVERS . . . . . IDLE	
– REVERSE THRUST . . . . . MAX AVAIL.	– BRAKE RESPONSE . . . . . MONITOR – REVERSE . . . . . CONFIRM – ANY AUDIO . . . . . CANCEL – ATC . . . . . INFORM – ON GROUND EMER/EVACUATION Checklist . . . . . LOCATE
Phase 2	
Consider positioning the aircraft to keep any possible fire away from the fuselage.	
– PARKING BRAKE . . . . . APPLY *Set parking brake ON after aircraft stops.*	
– PA call . "ATTENTION CREW/AT STATIONS"	
– CALL . . . . . "ECAM ACTIONS"	– ECAM ACTIONS . . . . . INITIATE
The aircraft should remain stationary while the crew evaluates the situation.	
Evacuation phase If required, refer to the ON GROUND EMER/EVACUATION Checklist for evacuation.	Inform ATC of intention and required assistance.

REVERSERS Full reverse may be used until coming to a complete stop. But, if there is enough runway available at the end of the deceleration, it is preferable to reduce reverse thrust when passing 70 knots.

Note : 1. If the brake response does not seem appropriate for the runway condition, FULL manual braking should be applied and maintained. If IN DOUBT, TAKE OVER MANUALLY. Do not attempt to clear the runway, until it is absolutely clear that an evacuation is not necessary and that it is safe to do so.

2. If the autobrake is unserviceable, the Captain simultaneously reduces the thrust and applies maximum pressure on both pedals.
The aircraft will stop in the minimum distance, only if the brake pedals are maintained fully pressed until the aircraft comes to a stop.

3. If normal braking is inoperative, immediately switch the A/SKID & NOSE WHEEL switch to OFF and modulate brake pressure, as required, at or below 1 000 PSI. If the brake pedals were fully pressed when switching the A/SKID & NOSE WHEEL switch to OFF, full pressure would be applied to the brakes.

4. After a rejected takeoff, if the aircraft comes to a complete stop using autobrake MAX, release brakes prior to taxi by disarming spoilers.

ENG FAILURE AFTER V1 – CONTINUED TAKEOFF

– If an engine fails after the aircraft passes V1 the takeoff must be continued.
– Use rudder conventionally to maintain runway centerline.
R – At VR, initiate the rotation with a positive sidestick input to achieve
R a continuous rotation rate, towards a pitch attitude of 12°5. After lift-off follow the speed reference system (SRS).
– When airborne with a positive rate of climb and when the radio altitude has increased, select the landing gear up.
– Use rudder to prevent yaw. Shortly after lift-off, β target will appear. Adjust rudder position to zero the β target. Control heading conventionally with bank, keeping the β target at zero with rudder. Accelerate if β target cannot be zeroed with full rudder.
– Consider the use of TOGA thrust.
On derated takeoff (derated takeoff option installed), do not use TOGA thrust if speed is below F in CONF 2 and 3.
– Consider the use of auto pilot.
– At 400 FT mini, apply ECAM procedure
– At acceleration height, level off and allow the speed to increase.
· At F speed select CONF 1
· At S speed select CONF 0
– When the flap handle is at zero, β target reverts to side slip indication. Center sideslip indication conventionally.
– At green dot speed (engine-out operating speed in clean configuration – green dot) resume the climb using maximum continuous thrust and maintain green dot speed.
(If already in the FLX/MCT gate, move to CL and back to MCT)
– MAXIMUM TAKEOFF THRUST IS ALLOWED FOR 10 MINUTES ONLY.

FOR ENG FAIL DURING INITIAL CLIMB-OUT

– Proceed as above. However, if the failure occurs above V2 maintain the SRS commanded attitude (or the speed reached after recovery). In any case, the minimum speed must be equal to V2.

R

ENG FAILURE AFTER V1 – CONTINUED TAKEOFF (CONT'D)

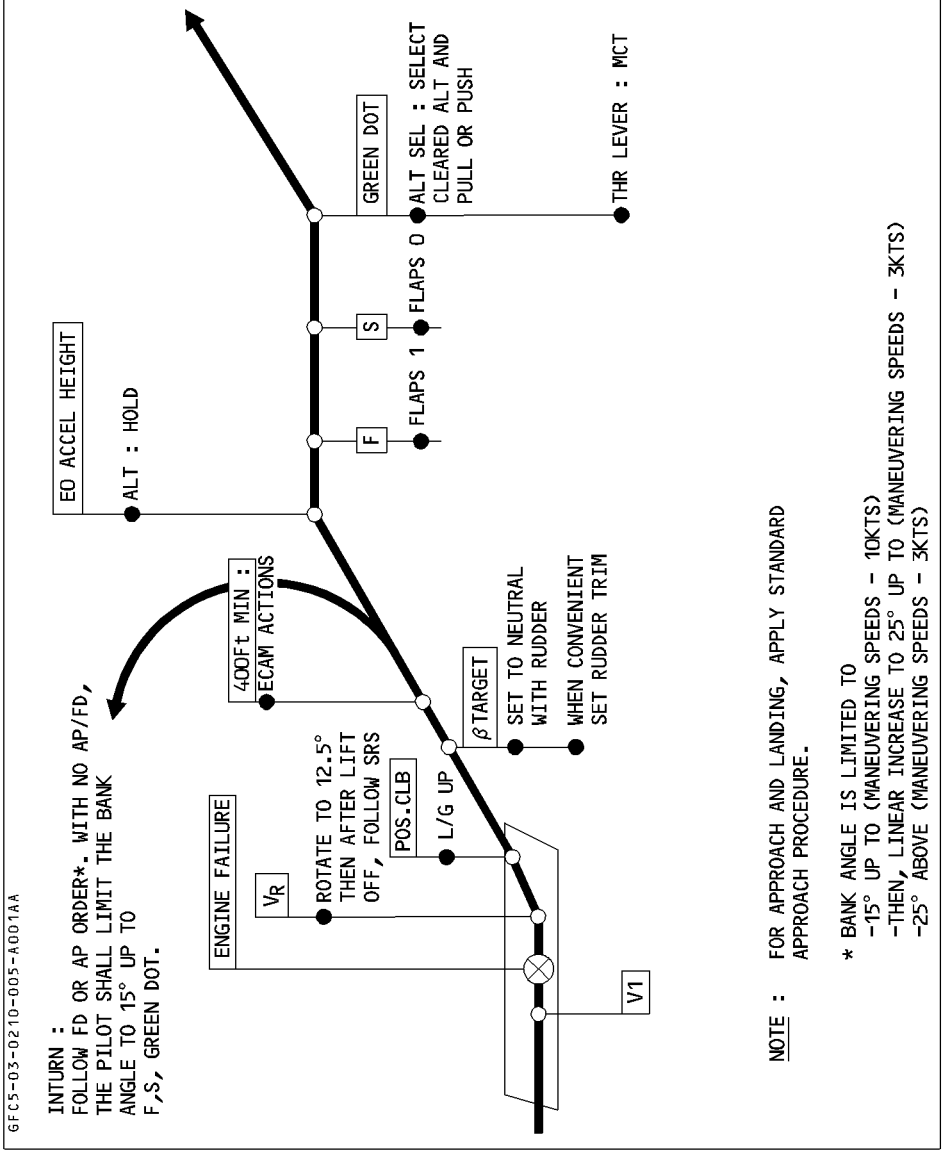

R

IMMEDIATE VMC LDG FOLLOWING ENG FAILURE ON TO

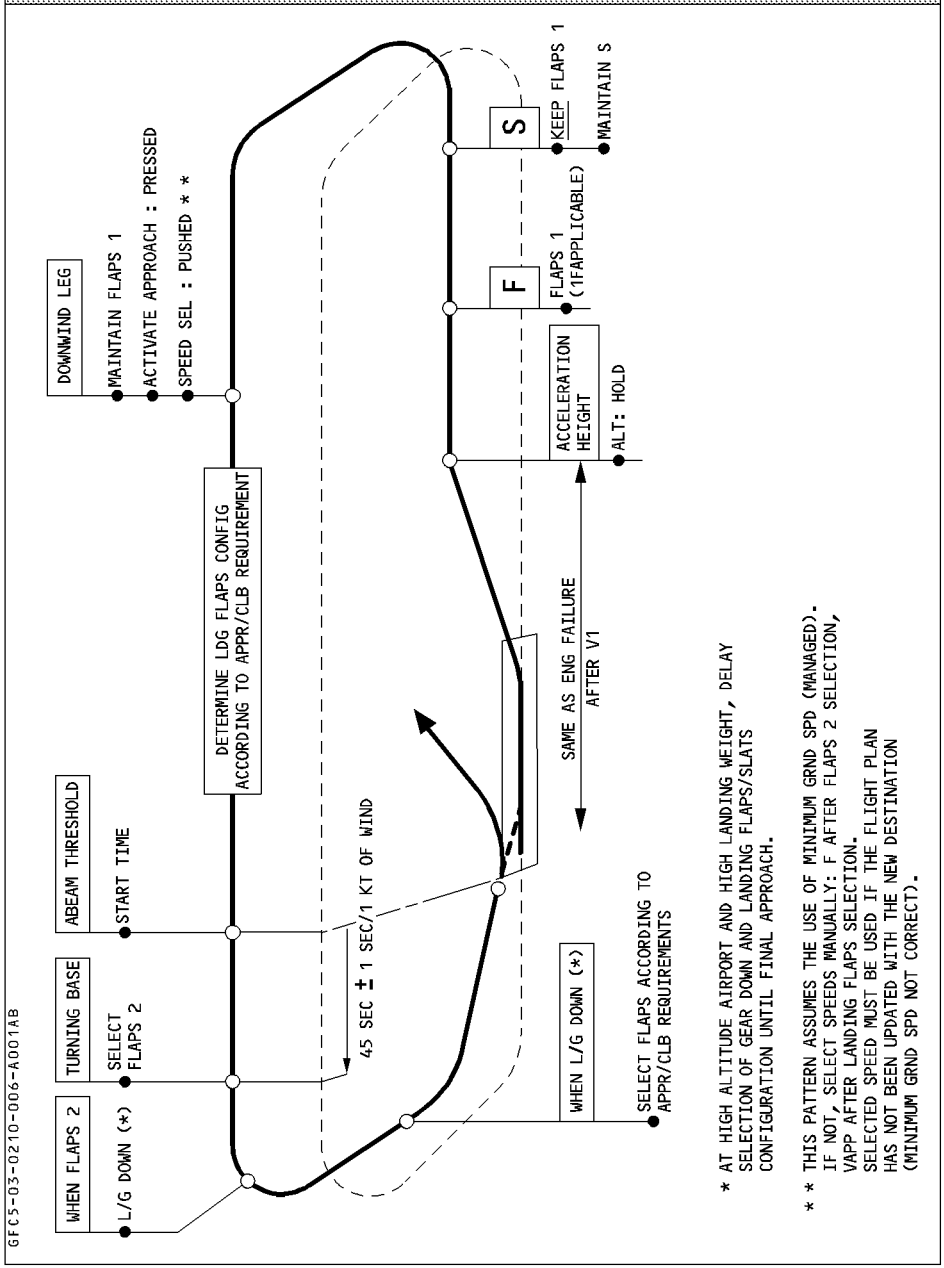

CIRCLING APPROACH WITH ONE ENGINE INOPERATIVE

– LANDING WEIGHT . . . . . CHECK

● **If the aircraft weight is above the maximum weight for circling in CONF 3 (given in the table below) :**

The aircraft cannot maintain flight level with CONF 3 and landing gear down.

– Delay gear extension.

Note : – if the approach is flown at less than 750 ft RA, the warning "L/G NOT DOWN" will be triggered. The pilot can cancel aural warning by pressing the EMER CANC pushbutton on the ECAM control panel.

– "TOO LOW GEAR" warning is to be expected, if the landing gear is not downlocked at 500 ft RA.

MAXIMUM WEIGHT FOR CIRCLING IN CONF 3 (1000 KG)

OAT (°C)	AIRPORT ELEVATION (feet)							
	0	2000	4000	6000	8000	10000	12000	14000
0	216.0	208.0	200.0	190.0	182.0	174.0	166.0	154.0
5	216.0	208.0	200.0	190.0	182.0	174.0	162.0	148.0
10	216.0	208.0	200.0	190.0	180.0	168.0	156.0	144.0
15	216.0	208.0	198.0	188.0	174.0	162.0	150.0	138.0
20	216.0	208.0	194.0	180.0	168.0	156.0	144.0	132.0
25	216.0	202.0	188.0	174 .0	162.0	150.0	138.0	124.0
30	208.0	194.0	182.0	168.0	156.0	144.0	132.0	
35	200.0	188 .0	176.0	162.0	150.0	140.0		
40	192.0	180.0	170.0	158.0				
45	184.0	174.0	164.0					
50	178.0	166.0						
55	170.0							

CIRCLING APPROACH WITH ONE ENGINE INOPERATIVE

– LANDING WEIGHT . . . . . CHECK

● **If the aircraft weight is above the maximum weight for circling in CONF 3 (given in the table below) :**

The aircraft cannot maintain flight level with CONF 3 and landing gear down.

– Delay gear extension.

Note : – if the approach is flown at less than 750 ft RA, the warning "L/G NOT DOWN" will be triggered. The pilot can cancel aural warning by pressing the EMER CANC pushbutton on the ECAM control panel.

– "TOO LOW GEAR" warning is to be expected, if the landing gear is not downlocked at 500 ft RA.

MAXIMUM WEIGHT FOR CIRCLING IN CONF 3 (1000 KG)

OAT (°C)	AIRPORT ELEVATION (feet)							
	0	2000	4000	6000	8000	10000	12000	14000
0	224.0	216.0	206.0	198.0	188.0	180.0	172.0	158.0
5	224.0	214.0	206.0	196.0	188.0	180.0	158.0	154.0
10	224.0	214.0	206.0	196.0	186.0	174.0	158.0	148.0
15	222.0	214.0	206.0	194.0	180.0	158.0	154.0	142.0
20	222.0	214.0	202.0	186.0	174.0	158.0	148.0	138.0
25	222.0	208.0	194.0	180.0	158.0	154.0	144.0	132.0
30	214.0	200.0	188.0	174.0	158.0	150.0	138.0	
35	208.0	194.0	182.0	168.0	156.0	144.0		
40	198.0	186.0	176.0	158.0				
45	190.0	180.0	168.0					
50	182.0	172.0						
55	176.0							

LANDING WITH SLATS OR FLAPS JAMMED

Determine landing configuration according to the table 3.02.80.

■ **Repeat the following until landing configuration is reached**

R – SPEED SEL ..... VFE NEXT – 5 KT

R *Decelerate towards VFE NEXT – 5 kt but not below VLS. In case of turbulence, to*
R *avoid VFE exceedance, the pilot may decide to decelerate to a lower speed, but not*
R *below VLS.*

Note : · *The autopilot may be used down to 500 feet AGL. As it is not tuned for abnormal configurations its behaviour can be less than optimum and must be monitored.*

· *Approach with A/THR and selected speed is recommended.*

· *OVERSPEED warning and VLS displayed on PFD are computed according to the actual flap/slats position.*

· *VFE and VFE NEXT are displayed on PFD according to the FLAPS lever position. If not displayed use the placard speeds.*

R · *If VLS is greater than VFE NEXT (overweight landing case), the flaps lever can*
R *be set in the required next position while the speed is reduced to follow VLS*
R *reduction as surfaces extend. The VFE warning threshold should not be*
R *triggered.*
R *In this case, disconnect the A/THR. A/THR can be reengaged when the landing*
R *configuration is established.*

As speed reduces through VFE NEXT :

– FLAPS LEVER ..... ONE STEP DOWN

● **When landing configuration is established :**

– DECELERATE TO CALCULATED APPROACH SPEED IN FINAL APPROACH

FOR GO AROUND

Table page 8 provides the MAX SPEEDS for the abnormal configurations.

■ **IF SLATS FAULT :**

● **FOR CIRCUIT :**

– MAINTAIN SLATS/FLAPS CONFIGURATION
– Recommended speed : MAX SPEED – 10 KT

● **FOR DIVERSION :**

– SELECT CLEAN CONFIGURATION

● **If SLATS jammed at 0**

– Normal operating speeds

● **If SLATS jammed > 0**

– Recommended speed for diversion : 205 kt
– Increased fuel consumption

LANDING WITH SLATS OR FLAPS JAMMED (CONT'D)

■ **IF FLAPS FAULT :**

● **FOR CIRCUIT :**
- MAINTAIN SLATS/FLAPS CONFIGURATION
- Recommended speed : MAX SPEED –10KT

● **FOR DIVERSION :**

● **If FLAPS jammed at 0**
- SELECT CLEAN CONFIGURATION
- Normal operating speeds

● **If FLAPS jammed > 0**
- MAINTAIN SLATS/FLAPS CONFIGURATION
- Recommended speed for diversion : MAX SPEED –10KT
- Increased fuel consumption

Note : · In case the SPD LIM flag is displayed on the PFD, use the MAX SPEED displayed on the ECAM status page.
· In case of a go-around with CONF FULL selected, the L/G NOT DOWN warning is triggered at landing gear retraction.
R *· In some cases, MAX SPEED –10 KT may be a few knots higher than*
R *the VFE. In this situation, pilots may follow the VFE.*

MAX SPEED

Flaps / Slats	F = 0	0 < F ≤ 1	1 < F ≤ 2	2 < F ≤ 3	F > 3
S = 0	NO LIMITATION	215 knots	196 knots	186 knots	180 knots
0 < S ≤ 1	240 knots				
1 < S	215 knots	205 knots			

CAUTION

For flight with SLATS/FLAPS extended, fuel consumption is increased.
Refer to the fuel flow indication.
As a guideline, determine the fuel consumption in clean configuration at the same altitude without airspeed limitation (e.g. From the ALTERNATE FLIGHT PLANNING tables, refer to 2.05.50) and multiply this result by 1.5 (SLATS EXTENDED), or 2.2 (FLAPS EXTENDED), or 2.5 (SLATS and FLAPS EXTENDED), to obtain the fuel consumption required to reach the destination in the current configuration.

NO FLAPS NO SLATS LANDING

– SPEED SEL . . . . . GREEN DOT
An initial approach is recommended with the A/THR in selected speed.
The AP is allowed down to 500 feet AGL.
– GPWS FLAP MODE . . . . . OFF
– FLAPS LEVER . . . . . CONF 1
Disregard the CONF 2 requirement on the ECAM status page.
Set the FLAPS handle to CONF1 to benefit from SRS guidance, in case of a go-around.
The VFE, displayed on the PFD, depends on the flap lever position, so a false VFE will be given.
Plan a long stabilized approach.

● **For the final approach :**
– A/THR . . . . . OFF
– SPD SEL . . . . . VAPP
Select VLS from the PFD (or VREF + 50 knots, if VLS is not available).
At 500 feet reduce the speed to obtain VLS - 5 knots (or VREF + 45 knots, if VLS is not available) at touchdown.
– LDG DIST PROC . . . . . APPLY
R *Refer to the QRH part 2, or to the FCOM 3.02.80.*

AIR PACK 1(2) OVHT

– PACK (affected) . . . . . OFF

The fault light goes off, when the overheat disappears.

R *High flow is automatically selected on the remaining pack.*

● **WHEN PACK OVHT OUT :**

R – PACK (affected) . . . . . ON

STATUS

● **WHEN PACK OVHT OUT :** | INOP SYS

R – PACK (affected) . . . . . ON | PACK 1(2)

AIR PACK VALVE 1(2) FAULT

■ **If only one pack valve closed (on ground at engine start) :**

PACK (affected) INHIB BY DOORS

In case of pressurization prevention, due to one door not closed, only one pack valve is

R *closed. The other pack's valve abnormally stays in the OPEN position.*

■ **In all other cases :**

R – PACK (affected) . . . . . OFF

STATUS

| INOP SYS

R | PACK 1(2)

AIR PACK 1(2) OFF

Crew awareness.

One pack is abnormally selected off.

STATUS

INOP SYS
PACK 1(2)

R

AIR PACK 1 + 2 FAULT

■ **If one door not locked closed on ground :**

PACKS INHIB BY DOORS

Check that the doors are closed and locked. If confirmed closed, maintenance action is due.

■ **In all other cases :**

– PACK (affected) . . . . . OFF

The fault light goes off, when the failure disappears.

DESCENT TO FL 100/MEA

Note : The rate at which the cabin altitude increases may be minimized by closing the CARGO ISOL VALVES, if the cargo freight permits.

● **WHEN PACK OVHT OUT :**

If the FAULT was due to an overheat :

– PACK (affected) . . . . . ON

● **WHEN DIFF PR < 1 PSI AND FL BELOW 100 :**

– RAM AIR . . . . . ON

MAX FL 100/MEA

STATUS

	INOP SYS
MAX FL 100/MEA	PACK 1 + 2
● **WHEN PACK OVHT OUT :**	
If the FAULT was due to an overheat :	
– PACK (affected) . . . . . ON	

R

AIR PACK 1(2) OVHT

– PACK (affected) . . . . . OFF
The fault light goes off, when the overheat disappears.
High flow is automatically selected on the remaining pack.
– FWD CRG COOLING (a) . . . . . OFF

● **WHEN PACK OVHT OUT :**
– PACK (affected) . . . . . ON
– FWD CRG COOLING (a) . . . . . ON

STATUS

● **WHEN PACK OVHT OUT :**	INOP SYS
– PACK (affected) . . . . . ON	PACK 1(2)
– FWD CRG COOLING (a) . . . . . ON	FWD CRG TEMP

(a) These lines are only displayed, if the automatic closure of the cargo cooling cold air valve is not operative.

AIR PACK VALVE 1(2) FAULT

■ **If only one PACK VALVE closed (on ground at engine start) :**
PACK (affected) INHIB BY DOORS
In case of pressurization prevention, due to one door not closed, only one pack valve is closed. The other pack's valve abnormally stays in the OPEN position.
– FWD CRG COOLING (a) . . . . . OFF

■ **Other cases :**
– PACK (affected) . . . . . OFF
– FWD CRG COOLING (a) . . . . . OFF

STATUS

	INOP SYS
	PACK 1(2)
	FWD CRG TEMP

(a) These lines are only displayed, if the automatic closure of the cargo cooling cold air valve is not operative.

AIR PACK 1(2) OFF

Crew awareness.

One pack is abnormally selected off.

STATUS

INOP SYS
PACK 1(2)
FWD CRG TEMP

AIR PACK 1 + 2 FAULT

■ **If one door not locked closed on ground :**

PACKS INHIB BY DOORS

Check that the doors are closed and locked. If confirmed closed, maintenance action is due.

■ **In all other cases :**

– PACK (affected) . . . . . OFF

The fault light goes off, when the failure disappears.

DESCENT TO FL 100/MEA

Note : The rate at which the cabin altitude increases may be minimized by closing the CARGO ISOL VALVES if the cargo freight permits.

● **WHEN PACK OVHT OUT :**

If the FAULT was due to an overheat

– PACK (affected) . . . . . ON

● **WHEN DIFF PR < 1 PSI AND FL BELOW 100 :**

– RAM AIR . . . . . ON

MAX FL 100/MEA

STATUS

MAX FL 100/MEA

● **WHEN PACK OVHT OUT :**

If the FAULT was due to an overheat :

– PACK (affected) . . . . . ON

INOP SYS
PACK 1 + 2
FWD CRG TEMP

AIR PACK 1(2) REGUL FAULT

■ **If RAM air door failed closed :**

PACK 1 (2) RAM DOOR CLOSED

	STATUS
PACK PERF AFFECTED	

■ **If PACK controller fault :**

Crew awareness.

	STATUS
PACK 1(2) AT FIXED TEMP *The pack delivers a fixed temperature of 5° C ± 4° C.* *The flow control valve pneumatically regulates the flow to the NORM value.*	

■ **If PACK in bypass mode :**

Failure of the Air Cycle Machine.

PACK 1 (2) IN BYPASS MODE

– PACK (affected on ground) . . . . . OFF

To avoid overheating on the ground.

PACK (affected) AVAIL IN FLT (only displayed on ground)

	STATUS INOP SYS
PACK PERF AFFECTED	
PACK (affected) AVAIL IN FLT (only displayed on ground)	PACK 1(2) (on ground)

COND ZONE REGUL FAULT

Zone controller fault, or loss of trim air system.

ENG HI IDLE

	STATUS INOP SYS
CAB TEMP REGUL DEGRADED (on ground) PACKS AT FIXED TEMP *The packs deliver a fixed temperature : 20°C (68°F)* *Pack flow and zone temperature selections are lost.*	ZONE REGUL

R ENG HI IDLE

COND ZONE CTLR 1(2) FAULT

Crew awareness.

STATUS

INOP SYS
ZONE CTLR (1) (2)

AIR HOT AIR SYS 1(2) FAULT

One hot air valve, and the hot air X valve is failed closed.

Crew awareness.

STATUS

CAB TEMP REGUL DEGRADED (on ground)	INOP SYS
	CKPT TEMP (only if sys 2 failed)

COND DUCT OVHT

COCKPIT DUCT OVHT, or
CABIN DUCT OVHT

– HOT AIR (affected) . . . . . OFF

If not closed automatically.

● **IF HOT AIR STUCK OPEN :**

– PACK (affected) . . . . . OFF

● **WHEN DUCT TEMP < 70 DEG C :**

– HOT AIR (affected) . . . . . OFF THEN ON

Hot air pressure regulating valve will reopen.

– PACK (affected) . . . . . ON

STATUS

● **WHEN DUCT TEMP < 70 DEG C :**	INOP SYS
– HOT AIR (affected) . . . OFF THEN ON	CKPT TEMP (only if sys 2 failed)
– PACK (affected) . . . . . ON	
CAB TEMP REGUL DEGRADED (on ground)	

AIR PACK 1(2) REGUL FAULT

■ **If RAM air door failed closed :**

PACK 1 (2) RAM DOOR CLOSED

STATUS

PACK PERF AFFECTED

■ **If PACK controller fault :**

Crew awareness.

STATUS

PACK 1(2) AT FIXED TEMP

The pack delivers a fixed temperature of 12° C ± 3° C.
The flow control valve pneumatically regulates the flow to the NORM value.

■ **If PACK in bypass mode :**

Failure of the Air Cycle Machine.

PACK 1 (2) IN BYPASS MODE

– PACK (affected on ground) . . . . . OFF

To avoid overheating on the ground.

PACK (affected) AVAIL IN FLT (only displayed on ground)

STATUS

	INOP SYS
PACK PERF AFFECTED	
PACK (affected) AVAIL IN FLT (only displayed on ground)	PACK 1(2) (on ground)

COND ZONE REGUL FAULT

Zone controller fault, or loss of trim air system.

ENG HI IDLE

STATUS

	INOP SYS
CAB TEMP REGUL DEGRADED (on ground)	ZONE REGUL
PACKS AT FIXED TEMP	FWD CRG TEMP
The packs deliver a fixed temperature : 20°C (68°F)	
Pack flow and zone temperature selections are lost.	
ENG HI IDLE	

COND ZONE CTLR 1(2) FAULT

Crew awareness.

STATUS

INOP SYS
ZONE CTLR (1) (2)

AIR HOT AIR SYS 1(2) FAULT

One hot air valve, and the hot air X is valve failed closed.

Crew awareness.

STATUS

CAB TEMP REGUL DEGRADED (on ground)	INOP SYS
	FWD CRG TEMP (only if sys 1 failed)
	CKPT TEMP (only if sys 2 failed)

COND DUCT OVHT

FWD CRG DUCT OVHT, or
COCKPIT DUCT OVHT, or
CABIN DUCT OVHT

– HOT AIR (affected) . . . . . OFF

If not closed automatically.

- **IF HOT AIR STUCK OPEN :**
  - – PACK (affected) . . . . . OFF
- **WHEN DUCT TEMP < 70 DEG C :**
  - – HOT AIR (affected) . . . . . OFF THEN ON

    Hot air pressure regulating valve will reopen.
  - – PACK (affected) . . . . . ON

STATUS

- **WHEN DUCT TEMP < 70 DEG C :** – HOT AIR (affected) . . . OFF THEN ON – PACK (affected) . . . . . ON CAB TEMP REGUL DEGRADED (on ground)	INOP SYS
	FWD CRG TEMP
	CKPT TEMP (only if sys 2 failed)

CAB PR EXCESS CAB ALT

– CREW OXY MASK (if above FL 100) . . . . . ON

It is recommended to descend with autopilot engaged :

· Turn ALT selector knob and pull
· Turn HDG selector knob and pull
· Set target SPD/MACH.

– DESCENT (if above FL 100) . . . . . INITIATE

● **IF RAPID DECOMPRESSION (above FL 160)** :

EMER DESCENT FL 100/MEA (or minimum obstacle clearance altitude)

– THR LEVERS (if A/THR not engaged) . . . . . IDLE
– SPD BRK . . . . . FULL
– SPD . . . . . MAX/APPROPRIATE

Descent at maximum appropriate speed or, if structural damage is suspected use the flight controls with care and reduce speed as appropriate.

Landing gear may be extended below 21000 feet ; speed must be reduced to 250 knots.

– SIGNS . . . . . ON
– ENG START SEL . . . . . IGN
– ATC . . . . . NOTIFY

Notify ATC of the nature of the emergency and state intentions.

If ATC cannot be contacted, select ATC code A7700 or transmit a distress message on one of the following frequencies :

(VHF) 121.5 MHz or (HF) 2.182 KHz or 8364 kHz.

To save oxygen, set oxygen diluter selector to N position.

With oxygen diluter selector set to 100 %, oxygen quantity may not be sufficient to cover the entire descent profile.

Ensure that the crew can communicate wearing oxygen masks.

Avoid the continuous use of interphone position to minimize the interference from oxygen mask breathing noise.

● **IF CAB ALT > 14 000 FT** :

– PAX OXY MASKS . . . . . MAN ON

R *Note : When descent is established and if time permits check that the OUTFLOW VALVES are closed on the CAB PRESS ECAM page. If they are not closed and △P is positive, select manual control and the V/S CTL toggle switch to full down.*

Notify cabin crew when safe flight level has been reached and oxygen mask use can be stopped.

CAB PR SYS 1 (2) (1 + 2) FAULT

■ **If one system affected :**

Crew awareness.

STATUS

INOP SYS
CAB PR 1 (2)

■ **If both systems affected :**

● **If one door not locked closed on ground :**

R CAB PR INHIB BY DOORS

● **In all other cases :**

R *Due to the slow closure of the outflow valve in manual pressurization mode, and*
R *depending on the failure, the following procedure may not avoid a depressurization.*

– MODE SEL . . . . . MAN
– MAN VALVE SEL . . . . . BOTH
– MAN V/S CTL . . . . . AS RQRD

R *· It may take 10 seconds in manual mode before the crew notices a change of the*
R *outflow valve position.*
R *· Monitor cabin V/S and cabin altitude frequently and adjust as necessary.*
R *· Maintain aircraft altitude at or above cabin altitude.*
R *· The two safety valves limit △P to 8.85 psi.*

STATUS

MAN CAB PR CTL :
TGT V/S : CLIMB 500 FT/MN
: DES 300 FT/MN

INOP SYS
CAB PR 1 + 2

A/C FL	CAB ALT TGT
410	8 000
350	6 500
300	5 000
250	2 500
< 200	0

● **DURING FINAL APPR :**

– MAN V/S CTL . . . . . FULL UP

When on intermediate approach (below 2500 feet), adjust △P = 0.
When △P at zero, select FULL UP to fully open both outflow valves.

CAUTION

R Check that △P is at zero before opening doors.

CAB PR EXCESS CAB ALT

– CREW OXY MASK (if above FL 100) . . . . . ON

It is recommended to descend with the autopilot engaged :

· Turn the ALT selector knob, and pull.
· Turn the HDG selector knob, and pull.
· Set target SPD/MACH.

● **If above FL 100, and under FL 160** :

– DESCENT . . . . . INITIATE

● **If above FL 160** :

EMER DESCENT FL 100/MEA (or minimum obstacle clearance altitude)

– THR LEVERS (if A/THR not engaged) . . . . . IDLE
– SPD BRK . . . . . FULL
– SPD . . . . . MAX/APPROPRIATE

Descent at maximum appropriate speed or, if structural damage is suspected, use the flight controls with care and reduce speed as appropriate.
Landing gear may be extended below 21000 feet ; speed must be reduced to 250 knots.

– SIGNS . . . . . ON
– ENG START SEL . . . . . IGN
– ATC . . . . . NOTIFY

Notify ATC of the nature of the emergency and state intentions.
If ATC cannot be contacted, select ATC code A7700, or transmit a distress message on one of the following frequencies :
(VHF) 121.5 MHz, or (HF) 2182 KHz, or 8364 kHz.
To save oxygen, set the oxygen diluter selector to the N position.
With the oxygen diluter selector set to 100 %, oxygen quantity may be insufficient to cover the entire descent profile.
Ensure that the crew can communicate wearing oxygen masks.
Avoid continuous use of the interphone position to minimize interference from the oxygen mask breathing noise.

● **IF CAB ALT > 14 000 FT** :

– PAX OXY MASKS . . . . . MAN ON

Note : *When descent is established and, if time permits, check that the OUTFLOW VALVES are closed on the CAB PRESS ECAM page. If they are not closed and △P is positive, select manual control and the V/S CTL toggle switch to full down.*
Notify the cabin crew when safe flight level has been reached, and oxygen mask use can be stopped.

CAB PR SYS 1 (2) (1 + 2) FAULT

■ **If one system affected :**

Crew awareness.

STATUS

INOP SYS
CAB PR 1 (2)

■ **If both systems affected :**

● **If one door not locked closed on ground :**

R CAB PR INHIB BY DOORS

● **In all other cases :**

R *Due to the slow closure of the outflow valve in manual pressurization mode, and*
R *depending on the failure, the following procedure may not avoid a depressurization.*

– MODE SEL . . . . . MAN
– MAN VALVE SEL . . . . . BOTH
– MAN V/S CTL . . . . . AS RQRD

R · *It may take 10 seconds in manual mode before the crew notices a change of the*
R *outflow valve position.*
R · *Monitor cabin V/S and cabin altitude frequently and adjust as necessary.*
R · *Maintain aircraft altitude at or above cabin altitude.*
R · *The two safety valves limit △P to 8.85 psi.*

STATUS

MAN CAB PR CTL :
TGT V/S : CLIMB 500 FT/MN
: DES 300 FT/MN

INOP SYS
CAB PR 1 + 2

A/C FL	CAB ALT TGT
410	8 000
350	6 500
300	5 000
250	2 500
< 200	0

● **DURING FINAL APPR :**

– MAN V/S CTL . . . . . FULL UP

When on intermediate approach (below 2500 feet), adjust △P = 0.
When △P at zero, select FULL UP to fully open both outflow valves.

CAUTION

R Check that △P is at zero before opening doors.

CAB PR LO DIFF PR (in flight)

EXPECT HI CAB RATE
– A/C V/S ..... REDUCE

CAB PR FWD (AFT) OFV NOT OPEN (on ground)

– MODE SEL ..... MAN
– MAN VALVE SEL ..... FWD (AFT)
– MAN V/S CTL ..... FULL UP
It may take 10 seconds in manual mode before the crew notices a change in the outflow valve position.

	STATUS
FWD OFV CTL : MAN ONLY (AFT)	|

CAB PR SAFETY VALVE OPEN

The failure is probably due to an overpressure.

● **IF DIFF PR ABV 8.7 PSI :**
– MODE SEL ..... MAN
– MAN VALVE SEL ..... BOTH
– MAN V/S CTL ..... AS RQRD
If overpressure is confirmed, reduce cabin △P.
For manual control, refer to the CAB PR SYS 1 + 2 FAULT status.
It may take 10 seconds in manual mode before the crew notices a change in the outflow valve position.

● **IF UNSUCCESSFUL :**
– A/C FL ..... REDUCE

CAB PR LDG ELEV FAULT

– LDG ELEV ..... MAN ADJUST
Landing field elevation from FMGS is not available. Landing elevation must be manually selected with LDG ELEV selector.
If landing is performed using QFE, set 0 feet on LDG ELEV selector.
Refer to the LDG ELEV indication on the CRUISE page, or the CAB PRESS page, to adjust the required landing elevation.

● **If LDG ELEV selector is inoperative :**
LDG ELEV SET AT ZERO

COND L (R) (L + R) CAB VENT FAULT

Failure of the cabin fan(s), or recirculation valve(s).

– PACK FLOW ..... HI

STATUS

INOP SYS
L CAB VENT (R) (L + R)

VENT BLOWING FAULT

– PACK FLOW ..... HI

To increase air flow.

– CAB FANS ..... ON

– COCKPIT TEMP ..... DECREASE

– CABIN TEMP ..... DECREASE

To decrease the temperature of the recirculated air.

● **IF WARNING AFTER 5 MIN :**

MAX FLT TIME ..... 5 HOURS

R *Note : This flight time limitation intends to prevent premature failures of some minor*
R *equipments (IFE, cabin communication ...) that may occur after 5 hours with a*
R *BLOWING FAULT caution. This 5 hours limitation is not applicable to other*
R *equipments.*

STATUS

● **If warning after 5 minutes :**
MAX FLT TIME ..... 5 HOURS

INOP SYS
VENT BLOWING

VENT EXTRACT FAULT

Note : Resetting the AEVC computer may clear the EXTRACT FAULT caution, if it is triggered on ground at engine start.

– EXTRACT ..... OVRD

Air is blown through the overboard extract valve, which is partially open.
The underfloor extract valve is closed.

STATUS

INOP SYS
VENT EXTRACT

VENT OVBD VALVE FAULT

Note : Resetting the AEVC computer may clear the OVBD VALVE FAULT, if it is triggered on ground at engine start.

– EXTRACT ..... OVRD

● **IF OVBD STILL FULL OPEN :**

MAX FL 100/MEA

– CAB PR MODE SEL ..... MAN

– CAB PR VALVE SEL ..... BOTH

– MAN V/S CTL ..... FULL UP

Pressurization is inhibited to avoid damage to the ducts.

It may take 10 seconds in manual mode before the crew notices a change in the outflow valve position.

	STATUS
MAX FL 100/MEA	INOP SYS OVBD VALVE

VENT PACK BAY VENT FAULT (on ground)

– ONE PACK ..... OFF

	STATUS
● **On ground :** BOTH PACKS AVAIL IN FLT	INOP SYS PACK 1 or 2 PACKBAY VENT

R

COND LAV + GAL VENT FAULT

Crew awareness.
– PAX SYS ..... OFF (a)
PAX SYS AVAIL IN FLT (a)(b)
Note : When in flight, the PAX SYS pushbutton can be switched ON.

STATUS

	INOP SYS
● **On ground :** CAB TEMP REGUL DEGRADED PAX SYS AVAIL IN FLT (a)(b) *Note : In flight, the PAX SYS pb can be switched ON.*	LAV + GAL VENT

(a) Only if passenger entertainment system is installed in the cabin (VCC).
(b) Displayed, if no smoke is detected and no IFE bay ventilation loss.

COND BULK (FWD) (AFT) CRG ISOL FAULT ◁

Crew awareness.

STATUS

INOP SYS
BULK VENT (FWD, AFT) CRG◁
FWD CRG TEMP◁

COND BULK (FWD) (AFT) CRG VENT FAULT ◁

Crew awareness.
Failure of ventilation fan.

STATUS

	INOP SYS
● **If FWD (AFT) affected :** FWD (AFT) CARGO VENT REDUCED	BULK VENT (FWD, AFT) CRG◁ FWD CRG TEMP◁

COND BULK (FWD) CRG HEAT FAULT ◁

Crew awareness.

STATUS

INOP SYS
BULK HEAT (FWD CRG TEMP)

VENT OVBD VALVE FAULT

Note : Resetting the AEVC computer may clear the OVBD VALVE FAULT, if it is triggered on ground at engine start.

– EXTRACT ..... OVRD

● **IF OVBD STILL FULL OPEN :**

MAX FL 100/MEA

– CAB PR MODE SEL ..... MAN

– CAB PR VALVE SEL ..... BOTH

– MAN V/S CTL ..... FULL UP

Pressurization is inhibited to avoid damage to the ducts.

It may take 10 seconds in manual mode before the crew notices a change in the outflow valve position.

	STATUS
MAX FL 100/MEA	INOP SYS OVBD VALVE

VENT PACK BAY VENT FAULT (on ground)

– ONE PACK ..... OFF

	STATUS
● **On ground :** BOTH PACKS AVAIL IN FLT	INOP SYS PACK 1 or 2 PACKBAY VENT FWD CRG TEMP

COND LAV + GAL VENT FAULT

Crew awareness.

– PAX SYS ..... OFF (a)

PAX SYS AVAIL IN FLT (a)(b)

Note : When in flight, the PAX SYS pushbutton can be switched ON.

STATUS

	INOP SYS
● **On ground :** CAB TEMP REGUL DEGRADED PAX SYS AVAIL IN FLT (a)(b) *Note : In flight, the PAX SYS pb can be switched ON.*	LAV + GAL VENT

(a) Only if passenger entertainment system is installed in the cabin (VCC).
(b) Displayed, if no smoke is detected and no IFE bay ventilation loss.

COND BULK (FWD) (AFT) CRG ISOL FAULT ◁

Crew awareness.

STATUS

INOP SYS
BULK VENT (FWD, AFT) CRG◁
FWD CRG TEMP◁

COND BULK (FWD) (AFT) CRG VENT FAULT ◁

Crew awareness.

Failure of ventilation fan.

STATUS

	INOP SYS
● **If FWD (AFT) affected :** FWD (AFT) CARGO VENT REDUCED	BULK VENT (FWD, AFT) CRG◁ FWD CRG TEMP◁

COND BULK (FWD) CRG HEAT FAULT ◁

Crew awareness.

STATUS

INOP SYS
BULK HEAT (FWD CRG TEMP)

COND VENT SYS FAULT

Failure of the ventilation controller, leading to the loss of galley and cargo ventilation.

– PACK FLOW . . . . . HI
– PAX SYS . . . . . OFF (a)
PAX SYS AVAIL IN FLT (b)

STATUS

	INOP SYS
● **On ground :**	
CAB TEMP REGUL DEGRADED *Cabin temperature sensors are not ventilated.*	CRG VENT L + R CAB VENT
PAX SYS AVAIL IN FLT (b)	LAV + GAL VENT

(a) When the passenger entertainment system is installed in the cabin (VCC), or in the avionic bay (IFEC).
(b) When the passenger entertainment system is installed in the cabin (VCC), but not in the avionic bay, and if no smoke is detected.

COND BULK CRG DUCT OVHT

– BULK HOT AIR (If not closed automatically) . . . . . OFF

● **WHEN BULK CRG DUCT TEMP<70 DEG C :**

– BULK HOT AIR . . . . . OFF/ON

	STATUS
● **WHEN BULK CRG DUCT TEMP<70 DEG C:** – BULK HOT AIR . . . . . OFF/ON	INOP SYS BULK HEAT

COND VENT SYS FAULT

Failure of the ventilation controller, leading to the loss of galley and cargo ventilation.

– PACK FLOW . . . . . HI
– PAX SYS . . . . . OFF (a)
PAX SYS AVAIL IN FLT (b)

STATUS

	INOP SYS
● **On ground :**	
CAB TEMP REGUL DEGRADED	CRG VENT
Cabin temperature sensors are not ventilated.	L + R CAB VENT
PAX SYS AVAIL IN FLT (b)	LAV + GAL VENT
	IFE BAY VENT

(a) When the passenger entertainment system is installed in the cabin (VCC), or in the avionic bay (IFEC).
(b) When the passenger entertainment system is installed in the cabin (VCC), but not in the avionic bay, and if no smoke is detected.

COND FWD CRG COOL FAULT

– FWD CRG COOLING . . . . . OFF

STATUS

INOP SYS
FWD CRG TEMP

COND IFE BAY VENT FAULT

– PAX SYS . . . . . OFF

STATUS

INOP SYS
IFE BAY VENT

COND BULK CRG DUCT OVHT

– BULK HOT AIR (If not closed automatically) . . . . . OFF

● **WHEN BULK CRG DUCT TEMP<70 DEG C :**

– BULK HOT AIR . . . . . OFF/ON

	STATUS
● **WHEN BULK CRG DUCT TEMP<70 DEG C:** – BULK HOT AIR . . . . . OFF/ON	INOP SYS BULK HEAT

AUTO FLT FM 1 (2) FAULT

This warning is associated with MAP NOT AVAIL message, displayed on the related ND.

– FM SOURCE . . . . . BOTH ON 2 (1)
Both NDs will use the same FM information.

STATUS

	INOP SYS
CAT 3 SINGLE ONLY	AP 1 (2) FM 1 (2) GPWS TERR(a) CAT 3 DUAL

(a) Only if FM1 is lost

AUTO FLT FM 1 + 2 FAULT

– FM SOURCE . . . . . NORM
The FM source selector must be at NORM to allow the NAV B/UP prompt to be displayed on the MCDU MENU page.

– NAVAID TUNING . . . . . USE RMP
Select both RMPs on NAV.

– LDG ELEV . . . . . MAN ADJUST
CPCs normally use the landing elevation from the FM.

STATUS

	INOP SYS
MCDU BACK UP NAV AVAIL CAT 1 ONLY (a)	FM 1 + 2 AP 1 + 2 (a) GPWS TERR

Note : As DH indication is lost, ILS approach may only be a CAT 1 approach.

(a) AP 1 + 2 are only lost, if the FG parts of the FMGS are also lost.

AUTO FLT AP OFF

This warning is displayed only for involuntary disconnection. For voluntary disconnection a red AP OFF message is displayed in the right lower part of ECAM upper DU.

Crew awareness

	STATUS
	INOP SYS
CAT 1 ONLY (if both AP lost)	AP (affected)

AUTO FLT A/THR OFF

This warning is displayed only for involuntary disconnection. For voluntary disconnection an amber A/THR OFF message is displayed in the right lower part of ECAM upper DU.

– THR LEVERS . . . . . MOVE

Thrust is frozen after autothrust disconnection until the thrust levers are moved.

Note : If the thrust levers are not moved within 5 seconds, the "ENG THRUST LOCKED" warning is then triggered every 5 seconds (Refer to 3.02.70).

	STATUS
	INOP SYS
CAT 2 ONLY	A/THR
	CAT 3

R

AUTO FLT REAC W/S DET FAULT

Reactive windshear function is lost.

Crew awareness.

STATUS

| INOP SYS
REAC W/S DET

AUTO FLT A/THR LIMITED

R *This warning is displayed when autothrust is active and the thrust levers are not in the CL*
R *detent (or MCT detent in case of engine out). The caution is repeated every 5 seconds as*
R *long as the thrust levers are not moved.*

■ **If all engines operative**

– THR LEVER . . . . . CLB

■ **In case of engine out :**

– THR LEVER (remaining engine) . . . . . MCT

AUTO FLT FCU FAULT

R ■ **Partial loss of the FCU**

– BARO REF . . . . . CHECK

The baro reference setting on the FCU and PFDs must be crosschecked.

● **if necessary (a) :**

– AFS TARGET . . . . . RESELECT

Although the AP/FD and A/THR are lost, the targets selection and displays are available.

CAT 1 ONLY (a)

STATUS
INOP SYS
PART FCU
AP 1 + 2 (a)
A/THR (a)

R (a) AP 1+2 and A/THR are only lost in a specific FCU failure mode
R (channel B + C failure in a 3–channel FCU architecture).

■ **Total loss of the FCU**

PFD BARO REF : STD ONLY

With all FCU channels failed, the baro reference value is automatically set at 1013 hPa.
Use the STBY ALTI to set actual baro setting.
In addition :

– *All FCU controls are inop.*
– *A/THR, AP 1+2, and FD 1+2 are not available.*
(except in LAND TRACK or GO AROUND mode where only A/THR is lost)
– *On PFD :*
· *Altitude alert is inop.*
· *ILS deviation scales are displayed.*
· *TRK/FPA selection is lost.*
· *MACH selection is lost.*
· *SPD LIM flag is displayed.*
– *On ND :*
· *ROSE mode with map (80 NM range) is displayed.*
· *Weather radar display is lost (blank display or flag).*
· *VOR/ADF needles :*
Needle 1, related to VOR1 only.
Needle 2, related to ADF2 only.
– *On DDRMI*
VOR/ADF selection is not affected.

AUTO FLT REAC W/S DET FAULT

Reactive windshear function is lost.

Crew awareness.

STATUS

| INOP SYS
REAC W/S DET

AUTO FLT A/THR LIMITED

R *This warning is displayed when autothrust is active and the thrust levers are not in the CL*
R *detent (or MCT detent in case of engine out). The caution is repeated every 5 seconds as*
R *long as the thrust levers are not moved.*

■ **If all engines operative**

– THR LEVER . . . . . CLB

■ **In case of engine out :**

– THR LEVER (remaining engine) . . . . . MCT

AUTO FLT FCU FAULT

R ■ **Partial loss of the FCU**

– BARO REF . . . . . CHECK

The baro reference setting on the FCU and PFDs must be crosschecked.

● **if necessary (a) :**

– AFS TARGET . . . . . RESELECT

Although the AP/FD and A/THR are lost, the targets selection and displays are available.

R CAT 1 ONLY (a)

STATUS
INOP SYS
PART FCU
AP 1 + 2 (a)
A/THR (a)

R (a) AP 1+2 and A/THR are only lost in a specific FCU failure mode
R (channel B + C failure in a 3–channel FCU architecture).

■ **Total loss of the FCU**

PFD BARO REF : STD ONLY

With all FCU channels failed, the baro reference value is automatically set at 1013 hPa.
Use the STBY ALTI to set the actual baro setting.
In addition :

– *All FCU controls are inop.*
– *A/THR, AP 1+2, and FD 1+2 are not available.*
(except in LAND TRACK or GO AROUND mode, where only A/THR is lost)
– *On PFD :*
· *Altitude alert is inop.*
· *ILS deviation scales are displayed.*
· *TRK/FPA selection is lost*
· *MACH selection is lost*
– *On ND :*
· *ROSE mode with map (80 NM range) is displayed.*
· *Weather radar display is lost, if the 80 NM range was not selected at the time of the FCU failure.*
· *VOR/ADF needles :*
Needle 1, related to VOR1 only
Needle 2, related to ADF2 only
– *On DDRMI*
VOR/ADF selection is not affected.

AUTO FLT FCU FAULT (CONT'D)

STATUS

PFD BARO REF : STD ONLY
CAT 1 ONLY

INOP SYS
AP 1+2
A/THR
FCU

R

AUTOLAND

The red AUTOLAND lights flash on the glareshield when :

- *AP OFF below 200 feet AGL*
- *Excessive LOC deviation between 15 feet and 200 feet AGL*
- *Excessive GLIDE deviation between 100 feet and 200 feet AGL*
- *ILS failure below 200 feet AGL*
- *Radio altimeter discrepancy of more than ± 15 feet below 200 feet AGL.*

Note : In case of voluntary AP OFF below 200 feet AGL (by instinctive disconnect pushbutton), the AUTOLAND lights flash for 3 seconds. If visual references are insufficient, a go around must be initiated.

– PERFORM A GO AROUND

MCDU 1(2)(3) FAILURE

– BRT KNOB (on affected MCDU) . . . . . OFF

The MCDU 3 automatically replaces MCDU 1 or 2

COM VHF 1(2)(3)/HF 1(2) EMITTING

1. *If any Push to Talk (PTT) transmission selector (sidestick radio selector, hand mike selector, or PTT switch) is jammed in the transmit position, try to release it in order to remove the caution.*

R 2. *If unsuccessful, deselect the identified failed VHF/HF transmission keys on the associated*
R *Audio Control Panel (ACP) to remove the caution. This ACP should only be used in*
R *reception mode. The associated PTT transmission selectors must not be used.*

Note : In this case, the ACP of the unaffected side may be used to recover the deselected
R *VHF/HF channel.*

COM CIDS 1 + 2 FAULT

Crew awareness.

Passenger address, cabin and service interphone, passenger signs, and communication with the lower deck and flight crew rest compartment (if installed), are inoperative.

STATUS

| INOP SYS
| CIDS 1+2

COM CIDS PA FAULT

Crew awareness.

Passenger address is inoperative.

STATUS

| INOP SYS
| CIDS PA

COM ACARS 1(2) (1+2) FAULT ◁

Crew awareness.

STATUS

| INOP SYS
| ACARS 1(2) (1+2)

COM SATCOM (DATA) FAULT ◁

Crew awareness.

STATUS

VHF 3 ONLY FOR DATA LINK(a) | INOP SYS SATCOM (DATA)

(a) Only displayed, if the ATC option is installed.

COM SATCOM VOICE FAULT ◁

Crew awareness.

Telephone communications are inoperative. ACARS is still transmitted by the SATCOM.

Note : This caution may be spuriously triggered on ground when the ADIRUs are not aligned. It will disappear when alignment is complete.

COM VHF 3 DATA FAULT ◁

Crew awareness.

STATUS

SATCOM ONLY FOR DATA LINK(a) | INOP SYS VHF3 DATA

(a) Only displayed, if the ATC option is installed.

COM HF DATA FAULT ◁

Crew awareness.

Triggered to indicate the loss of the HFDRs' DATA mode.

ELEC GEN 1(2) FAULT

– GEN (affected) . . . . . OFF THEN ON

● **IF UNSUCCESSFUL :**

– GEN (affected) . . . . . OFF

STATUS

CONSIDER APU GEN USE

The APU, if available, may be started.

R CAT 3 SINGLE ONLY (a)

R *Note : Due to electrical transfer, in case of a GEN 2 failure (or GEN switched OFF), the right outer aileron position is briefly modified, inducing a pitch-up jerk.*

INOP SYS
GEN 1(2)
PART GALLEY (a)
CAT 3 DUAL (a)

R (a) Only if APU GEN is not in line.

ELEC GEN 1(2) OFF

Crew awareness.

Switch affected GEN on.

STATUS

INOP SYS
GEN 1(2)
PART GALLEY (a)
CAT 3 DUAL (a)

R

R

R (a) Only if APU GEN is not in line.

ELEC APU GEN FAULT

– APU GEN . . . . . OFF THEN ON

● **IF UNSUCCESSFUL :**

– APU GEN . . . . . OFF

In flight : Restrict use of the APU to emergencies.

STATUS

INOP SYS
APU GEN

ELEC IDG 1(2) DISCONNECTED (on ground)

Crew awareness

STATUS

R CONSIDER APU GEN USE

INOP SYS
GEN 1(2)
PART GALLEY
(only if APU GEN not in line)

ELEC IDG 1(2) OIL LO PR/OVHT

– IDG (affected) ..... OFF

When the engine is stopped, or below idle, the IDG disconnection is inhibited.
Press IDG pushbutton switch until GEN FAULT light comes on but not more than 3 seconds to avoid damage to the disengage solenoid.
IDG FAULT light stays on as long as overheat is present.

STATUS

CAT 3 SINGLE ONLY

INOP SYS
GEN 1(2)
PART GALLEY
CAT 3 DUAL

ELEC GEN 1(2)/APU GEN/EXT PWR OVERLOAD

– GALLEY ..... OFF

This warning is only displayed if galley automatic shedding has failed.

STATUS

INOP SYS
GALLEY

ELEC STATIC INV FAULT

Crew awareness

ELEC GEN 1(2) FAULT

– GEN (affected) . . . . . OFF THEN ON

● **IF UNSUCCESSFUL :**

– GEN (affected) . . . . . OFF

STATUS

CONSIDER APU GEN USE

The APU, if available, may be started.

R CAT 3 SINGLE ONLY (a)

R

R (a) Only if APU GEN is not in line.

INOP SYS
GEN 1(2)
PART GALLEY (a)
CAT 3 DUAL (a)

ELEC GEN 1(2) OFF

Crew awareness.

Switch affected GEN on.

STATUS

R

R

R (a) Only if APU GEN not in line.

INOP SYS
GEN 1(2)
PART GALLEY (a)
CAT 3 DUAL (a)

ELEC APU GEN FAULT

– APU GEN . . . . . OFF THEN ON

● **IF UNSUCCESSFUL :**

– APU GEN . . . . . OFF

In flight : Restrict use of the APU to emergencies.

STATUS

INOP SYS
APU GEN

ELEC IDG 1(2) DISCONNECTED (on ground)

Crew awareness

STATUS

R CONSIDER APU GEN USE

INOP SYS
GEN 1(2)
PART GALLEY (only if APU GEN not in line)

ELEC IDG 1(2) OIL LO PR/OVHT

– IDG (affected) ..... OFF

When the engine is stopped, or below idle, the IDG disconnection is inhibited.
Press IDG pushbutton switch until GEN FAULT light comes on but not more than 3 seconds to avoid damage to the disengage solenoid.
IDG FAULT light stays on as long as overheat is present.

STATUS

CAT 3 SINGLE ONLY

INOP SYS
GEN 1(2)
PART GALLEY
CAT 3 DUAL

ELEC GEN 1(2)/APU GEN/EXT PWR OVERLOAD

– GALLEY ..... OFF

This warning is only displayed if galley automatic shedding has failed.

STATUS

INOP SYS
GALLEY

ELEC STATIC INV FAULT

Crew awareness

ELEC ECMU 1(2) FAULT

– GEN 1(2) . . . . . KEEP ON

The closure control of associated generator line contactor is lost, but the contactor remains closed (self hold) provided the GEN pushbutton switch is ON.
The associated AC BUS TIE contactors open. The APU line contactor opens if ECMU 1 is affected.

	STATUS
– GEN 1 (2) . . . . . KEEP ON	INOP SYS ECMU 1(2) APU GEN (a) PART GALLEY EXT PWR A (b) EXT PWR B (c)

R (a) if ECMU 1 FAULT
R (b) if ECMU 2 FAULT (on ground)
R (c) if ECMU 1 FAULT (on ground)

ELEC BAT 1(2) or APU BAT FAULT

● **In case of thermal runaway or short circuit :**
– BAT (affected) . . . . . OFF
Battery contactor is automatically opened by Battery Charge Limiter, but the automatic opening must be manually confirmed.

	STATUS
● **IF APU BAT and APU TR fault :** APU START NOT AVAIL	INOP SYS BAT 1(2) or APU BAT

ELEC BAT 1(2) or APU BAT OFF

Crew awareness
Battery is abnormally selected OFF.

	STATUS
● **If APU BAT off and APU TR fault :** ● **FOR APU START :** – APU BAT . . . . . ON	

ELEC BAT 1(2) or APU BAT SYS FAULT

Crew awareness

STATUS

	INOP SYS
● **If APU BAT SYS FAULT and APU TR fault** APU START NOT AVAIL	BAT 1(2) or APU BAT SYS

ELEC TR 1(2) or APU TR or ESS TR FAULT

Crew awareness

● **In case of APU TR fault :**

● **If APU NOT REQUIRED :**

– APU BAT . . . . . OFF

STATUS

	INOP SYS
● **If APU TR fault and APU BAT off :** ● **FOR APU START :** – APU BAT . . . . . ON CAT 3 SINGLE ONLY (if TR 1 or 2 is failed)	TR 1(2) or APU TR or ESS TR CAT 3 DUAL (if TR 1 or 2 is failed)

ELEC C/B MONITOR FAULT

Crew awareness

STATUS

	INOP SYS
	C/B MONITOR

ELEC C/B TRIPPED

Crew awareness

Press the C/B pushbutton on the ECP to identify the affected circuit breakers on the ECAM SD.

ELEC IDG 1(2) OIL SYS FAULT (on ground)

Crew awareness.

ELEC AC BUS 1 FAULT

If the automatic transfer of AC ESS BUS is inoperative, the ECAM's E/WD and SD DUs are simultaneously lost.

The ECAM/ND SEL must be used to recover the E/WD on the NDU, in order to apply the ECAM procedure.

– AC ESS FEED ..... ALTN

This line is displayed, if automatic AC ESS transfer has failed.

– EMER ELEC PWR ..... MAN ON

This line is displayed, if manual AC ESS transfer has failed.

– VENT EXTRACT ..... OVRD

Air is blown through the overboard valve which is partially open.

R – PACK FLOW ..... HI

PAX SYS AVAIL IN FLT (if VCC installed)

STATUS

	INOP SYS
CAB TEMP REGUL DEGRADED (only on ground) CAT 2 ONLY PAX SYS AVAIL IN FLT	See below

INOP SYS DISPLAYED ON ECAM

EFIS DMC 3	TR 1	GPWS
ECAM DMC 1	G ELEC PUMP	TCAS ◁
REV 1	Y ELEC PUMP	L WNDW HEAT
STBY AOA	L CAB VENT	STBY PITOT (a)
ACARS 1 + 2	GND COOL ◁	CAPT TAT
PART GALLEY	VENT EXTRACT	ADR 1
RA 1	AFT CRG VENT	ADR 3
R FUEL STBY	CAT 3	FUEL AFT XFR
L FUEL STBY	LAV + GAL VENT	ENG1 IGNB

OTHER INOP SYS

BRK FAN (WHEELS 5,6,7,8)◁	ECAM SD	PART CKPT LIGHTS
MDDU	AEVC	L VACUUM GEN
PRINTER	DATA LOADER	HUD ◁
R PVI	FWD APU PUMP	

(a) If AIR DATA SWTG is set to CAPT ON 3, STBY PITOT is supplied by the AC ESS BUS, CAPT PITOT is no longer supplied.

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC AC BUS 2 FAULT

– PACK FLOW . . . . . HI

Note : Due to electrical transfer, the right outer aileron's position is briefly modified, inducing a pitch-up jerk.

STATUS

FWD CRG VENT REDUCED ◁
CAT 1 ONLY

INOP SYS
See below

INOP SYS DISPLAYED ON ECAM

EFIS DMC 2	BULK VENT	ATC 2
ECAM DMC 2	TR 2	R WNDW HEAT
REV 2	FUEL AFT XFR	B ELEC PUMP
FWD CRG TEMP ◁	APU TR	R WSHLD HEAT
R CAB VENT	F/O PITOT	PART GALLEY
L FUEL PUMP 1	RA 2	R FUEL PUMP 1
HF 2	SDAC 2	ADR 2
F T.TK PUMP	FWC 2	ILS 2
FWD CRG VENT ◁	CAT 2	F/O AOA
F/O TAT	DFDR	FDIU
ENG 2 IGN B		

OTHER INOP SYS

BRK FAN (WHEELS 1,2,3,4)◁	RADAR 2	VOR 2
F/O PFD	DME 2	PRESSURIZED WATER SYS
F/O ND	ADF 2 ◁	PARTIAL CKPT LIGHTS
MCDU 2	R LDG LTS	CMC 2
AFT CRG LOAD	STROBE LT	DRAIN HEAT
R VACUUM GEN		

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC AC ESS BUS FAULT

– AC ESS FEED . . . . . ALTN

● **IF UNSUCCESSFUL :**

R – CAPT EFIS DMC . . . . . 3 (a)

– ECAM SWTG DMC 1

R – AIR DATA SWTG . . . . . CAPT ON 3 (a)

ELEC AC BUS 1 FAULT

If the automatic transfer of AC ESS BUS is inoperative, the ECAM's E/WD and SD DUs are simultaneously lost.

The ECAM/ND SEL must be used to recover the E/WD on the NDU, in order to apply the ECAM procedure.

– AC ESS FEED ..... ALTN

This line is displayed, if automatic AC ESS transfer has failed.

– EMER ELEC PWR ..... MAN ON

This line is displayed, if manual AC ESS transfer has failed.

– VENT EXTRACT ..... OVRD

Air is blown through the overboard valve which is partially open.

R – PACK FLOW ..... HI

PAX SYS AVAIL IN FLT (if VCC installed)

STATUS

	INOP SYS
CAB TEMP REGUL DEGRADED (only on ground) CAT 2 ONLY PAX SYS AVAIL IN FLT	See below

INOP SYS DISPLAYED ON ECAM

EFIS DMC 3	TR 1	GPWS
ECAM DMC 1	G ELEC PUMP	TCAS ◁
REV 1	Y ELEC PUMP	L WNDW HEAT
STBY AOA	L CAB VENT	STBY PITOT (a)
ACARS 1 + 2	GND COOL ◁	CAPT TAT
PART GALLEY	VENT EXTRACT	ADR 1
RA 1	AFT CRG VENT	ADR 3
R FUEL STBY	CAT 3	FUEL AFT XFR
L FUEL STBY	LAV + GAL VENT	ENG1 IGNB

OTHER INOP SYS

BRK FAN (WHEELS 5,6,7,8)◁	ECAM SD	PART CKPT LIGHTS
MDDU	AEVC	L VACUUM GEN
PRINTER	DATA LOADER	HUD ◁
R PVI	FWD APU PUMP	

(a) If AIR DATA SWTG is set to CAPT ON 3, STBY PITOT is supplied by the AC ESS BUS, CAPT PITOT is no longer supplied.

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC AC BUS 2 FAULT

– PACK FLOW ..... HI

STATUS

FWD CRG VENT REDUCED ◁
CAT 1 ONLY

INOP SYS
EFIS DMC 2
See below

INOP SYS DISPLAYED ON ECAM

BULK VENT	ATC 2	ECAM DMC 2
TR 2	R WNDW HEAT	REV 2
FUEL AFT XFR	B ELEC PUMP	FWD CRG TEMP ◁
APU TR	R WSHLD HEAT	F/O AOA
R CAB VENT	F/O PITOT	PART GALLEY
F/O TAT	L FUEL PUMP 1	RA 2
HF 2	R FUEL PUMP 1	SDAC 2
ADR 2	F T.TK PUMP	FWC 2
ILS 2	FWD CRG VENT ◁	GPS 2
R CAT 2	DFDR	FDIU
ENG 2 IGN B		

OTHER INOP SYS

BRK FAN (WHEELS 1,2,3,4)◁	RADAR 2	VOR 2
F/O PFD	DME 2	PRESSURIZED WATER SYS
F/O ND	ADF 2 ◁	PARTIAL CKPT LIGHTS
MCDU 2	R LDG LTS	CMC 2
AFT CRG LOAD	STROBE LT	DRAIN HEAT
R VACUUM GEN		

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC AC ESS BUS FAULT

– AC ESS FEED ..... ALTN

● **IF UNSUCCESSFUL :**

R – CAPT EFIS DMC ..... 3 (a)

– ECAM SWTG DMC 1

R – AIR DATA SWTG ..... CAPT ON 3 (a)

ELEC AC ESS BUS FAULT (CONT'D)

STATUS

CAT 1 ONLY

INOP SYS
See below

INOP SYS DISPLAYED ON ECAM

EFIS DMC 1	ILS 1	ECAM DMC 3
CAT 2	SDAC 1	CAPT PITOT
FWC 1	GPWS G/S	ADR 1
ENG1, 2 IGN A		

OTHER INOP SYS

AFT APU PUMP	DDRMI	CMC 1
	CAPT PFD	VOR 1
PAX OXY MASK ACTUATION	E/WD	ADF 1 ◁
L/G IND PANEL	CABIN EMER LTS	

R (a) These lines are only displayed if AC ESS BUS SHED is available.

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC AC ESS BUS SHED

– AIR DATA SWTG ..... CAPT ON 3

STATUS

INOP SYS
CAPT AOA
ATC 1
FUEL AFT XFR
HF 1
L WSHLD HEAT
L FUEL PUMP 2
R FUEL PUMP 2
See below

OTHER INOP SYS

MCDU 1	CVR	L LDG LTS
CAPT ND	DME 1	RADAR 1

Note : 1. The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

2. AP2 pushbutton light is lost. AP2 engagement can be checked on the FMA.

ELEC EMER CONFIG

LAND ASAP

– EMER ELEC PWR ..... MAN ON
Only displayed, if the EMER GEN is not automatically coupled.

– ALL GEN ..... OFF THEN ON

● **IF UNSUCCESSFUL :**

– BUS TIE ..... OFF
Setting the BUS TIE pushbutton to OFF segregates both generator channels.

– ALL GEN ..... OFF THEN ON
If the emergency generator is automatically or manually coupled, and if at least one generator is recovered, the DC and AC ESS buses are still supplied by the EMER GEN. If normal aircraft supply is recovered through one GEN, or the APU GEN, select LAND RECOVERY ON for approach (recovery of ILS1, LGCIU1, BSCU1, SFCC1, WHC1). Engine anti-ice is ON, regardless of the pushbutton's position, so fuel consumption increases by approximately 1.5 %.

– VHF 1/ATC 1 ..... USE
Only VHF 1, HF1, and ATC 1, are supplied in electrical emergency configuration. SELCAL is inoperative.

– VENT EXTRACT ..... OVRD
Switch EXTRACT OVRD, since the extract and cabin fans are lost.

CAUTION

In case of discrepancies between airspeed indications on the Captain's PFD and on the standby indicator, disregard the standby indicator (probe not deiced).

Note : · Only VOR 1 or ADF 1 (as selected on the DDRMI) is available. The ADF/VOR selector position on the FCU must be in accordance with the ADF/VOR selector on the DDRMI.

ELEC AC ESS BUS FAULT (CONT'D)

STATUS

CAT 1 ONLY

INOP SYS
See below

INOP SYS DISPLAYED ON ECAM

EFIS DMC 1	ILS 1	ECAM DMC 3
GPS 1	SDAC 1	CAPT PITOT
CAT 2	FWC 1	GPWS G/S
ADR 1	ENG 1, 2 IGN A	

OTHER INOP SYS

AFT APU PUMP	DDRMI	CMC 1
	CAPT PFD	VOR 1
PAX OXY MASK ACTUATION	E/WD	ADF 1 ◁
L/G IND PANEL	CABIN EMER LTS	

R (a) These lines are only displayed if AC ESS BUS SHED is available.

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC AC ESS BUS SHED

– AIR DATA SWTG ..... CAPT ON 3

STATUS

INOP SYS
CAPT AOA
ATC 1
FUEL AFT XFR
HF 1
L WSHLD HEAT
L FUEL PUMP 2
R FUEL PUMP 2
See below

OTHER INOP SYS

MCDU 1	CVR	L LDG LTS
CAPT ND	DME 1	RADAR 1

Note : 1. The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

2. AP2 pushbutton light is lost. AP2 engagement can be checked on the FMA.

ELEC EMER CONFIG

LAND ASAP

– EMER ELEC PWR . . . . . MAN ON
Displayed, only if the EMER GEN is not automatically coupled.
– ALL GEN . . . . . OFF THEN ON

● **IF UNSUCCESSFUL :**
– BUS TIE . . . . . OFF
Setting the BUS TIE pushbutton to OFF segregates both generator channels.
– ALL GEN . . . . . OFF THEN ON
If the emergency generator is automatically or manually coupled, and if at least one generator is recovered, the DC and AC ESS buses are still supplied by EMER GEN. If normal aircraft supply is recovered through one GEN, or the APU GEN, select LAND RECOVERY ON for approach (recovery of LGCIU1, BSCU1, SFCC1, WHC1).
Engine anti-ice is ON, regardless of the pushbutton's position, so fuel consumption increases by approximately 1.5 %.
– VHF 1/ATC 1 (if EMER GEN supplied by eng. hyd pumps) . . . . . USE
– VHF 1 (if EMER GEN supplied by RAT) . . . . . USE
Only VHF 1, HF1, and ATC 1, are supplied in electrical emergency configuration. SELCAL is inoperative.
– VENT EXTRACT . . . . . OVRD
Switch EXTRACT OVRD, since the extract fan and cabin fans are lost.
– CTR TANK XFR BY GRAVITY
CTR TK UNUSABLE IF < 15 T

CAUTION
In case of discrepancies between airspeed indications on the Captain's PFD and on the standby indicator, disregard the standby indicator (probe not deiced).

Note : · Only VOR 1 or ADF 1 (as selected on the DDRMI) is available. The ADF/VOR selector position on the FCU must be in accordance with the ADF/VOR selector on the DDRMI.

ELEC EMER CONFIG (CONT'D)

- **WHEN SPD > 270 KT AND NOT IN CLIMB :**
  - T TANK MODE ..... FWD

    Check that the pitch attitude is below 3 degrees. Fuel consumption increases by approximately 1%.

    Note : As fuel is fed from one side only, fuel balance must be monitored. To maintain fuel balance, L PUMP 2 can be selected off, then R PUMP 2 will automatically start (its corresponding FAULT light will go off).
  - WEIGHT/CG ..... INITIALIZE
- **FOR SLATS EXTENSION :**
  - LAND RECOVERY ..... ON

R *ILS 1, SFCC 1, LGCIU 1, BSCU 1, WHC 1 are recovered. The remaining fuel pump is lost.*
- **FOR L/G GRVTY EXTN :**

  MAX SPEED ..... 200 KT
  - L/G GRVTY EXTN ..... DOWN
- **WHEN L/G DOWNLOCKED :**
  - L/G LEVER ..... DOWN

    Note : In case of go-around, gear retraction is not available and CLIMB performance is degraded.

ELEC EMER CONFIG (CONT'D)

STATUS

SPD BRK . . . . . DO NOT USE
MAX SPEED 330/.82
APPR PROC
- **FOR SLATS EXTENSION** :
  - LAND RECOVERY . . . . . ON
- **AT SLATS EXTENSION** :
  - T TANK MODE . . . . . AUTO
  - FOR LDG . . . . . USE FLAP 3
- **FOR L/G GRVTY EXTN** :
  MAX SPEED . . . . . 200 KT
  - L/G GRVTY EXTN . . . . . DOWN
- **WHEN L/G DOWNLOCKED** :
  - L/G LEVER . . . . . DOWN
- **WHEN L/G DN** :
  - MAN PITCH TRIM . . . . . USE

  As Direct law becomes active at landing gear extension, the Automatic Trim is inoperative.
- **WHEN SPD > 270 KT AND NOT IN CLIMB (if T TK not empty)** :
  - T TANK MODE . . . . . FWD

– LDG DIST PROC . . . . . APPLY
ALTN LAW : PROT LOST
CONSIDER APU GEN USE (b)
INCREASED FUEL CONSUMP
ENG HI IDLE
CAT 1 ONLY

INOP SYS
F/CTL PROT
PRIM 2+3
RA 1+2
A/CALLOUT
AP 2
VHF 2+3
HALF SPLRS
REVERSERS
ADR 2 (a)
CAT 2
N/W STRG
AUTO BRK
MOST F PUMPS (a)
GPS 1+2

ELEC EMER CONFIG (CONT'D)

- **WHEN SPD > 270 KT AND NOT IN CLIMB :**
  - T TANK MODE ..... FWD

    Check that the pitch attitude is below 3 degrees. Fuel consumption increases by approximately 1%.

    Note : As fuel is fed from one side only, fuel balance must be monitored. To maintain fuel balance, L PUMP 2 can be selected off, then R PUMP 2 will automatically start (its corresponding FAULT light will go off).
  - WEIGHT/CG ..... INITIALIZE
- **FOR SLATS EXTENSION :**
  - LAND RECOVERY ..... ON

R *SFCC 1, LGCIU 1, BSCU 1, WHC1 are recovered. The remaining fuel pump is lost.*

- **FOR L/G GRVTY EXTN :**

  MAX SPEED ..... 200 KT
  - L/G GRVTY EXTN ..... DOWN
- **WHEN L/G DOWNLOCKED :**
  - L/G LEVER ..... DOWN

    Note : In case of go-around, gear retraction is not available and CLIMB performance is degraded.

ELEC EMER CONFIG (CONT'D)

STATUS

SPD BRK . . . . . DO NOT USE
MAX SPEED 330/.82
APPR PROC
- **FOR SLATS EXTENSION** :
  - LAND RECOVERY . . . . . ON
- **AT SLATS EXTENSION** :
  - T TANK MODE . . . . . AUTO
  - FOR LDG . . . . . USE FLAP 3
- **FOR L/G GRVTY EXTN** :
  MAX SPEED . . . . . 200 KT
  - L/G GRVTY EXTN . . . . . DOWN
- **WHEN L/G DOWNLOCKED** :
  - L/G LEVER . . . . . DOWN
- **WHEN L/G DN** :
  - MAN PITCH TRIM . . . . . USE

  As Direct law becomes active at landing gear extension, the Automatic Trim is inoperative.
- **WHEN SPD > 270 KT AND NOT IN CLIMB (if T TK not empty)** :
  - T TANK MODE . . . . . FWD

– LDG DIST PROC . . . . . APPLY
ALTN LAW : PROT LOST
CONSIDER APU GEN USE (b)
INCREASED FUEL CONSUMP
ENG HI IDLE
CTR TK UNUSABLE IF < 15 T
CTR TO INR : MAN ONLY
CAT 1 ONLY

INOP SYS
F/CTL PROT
PRIM 2+3
RA 1+2
AP 2
VHF 2+3
HALF SPLRS
REVERSERS
ADR 2 (a)
CAT 2
N/W STRG
MOST F PUMPS (a)
GPS 2

ELEC EMER CONFIG (CONT'D)

(a) After LAND RECOVERY selection :
- ILS 1, SLATS/FLAPS channel 1, LGCIU 1, BSCU 1 and WHC1 are recovered. (Autobrake remains lost because only one PRIM is available). But FLAPS remain lost, if ENG2 failed and IDG1 lost.
- Remaining fuel pump (L FUEL PUMP 2 or R FUEL PUMP 2) will stop.
- SLATS/FLAPS SLOW is displayed as information on STS.
- HF 1, AP 1 and ADR 3 are lost after LAND RECOVERY selection.

(b) Only in case of GEN or ENG failure. For this purpose, BUS TIE pushbutton must be switched back to AUTO.

Note : STATUS is simplified in ELEC EMER CONFIG ; only the most significant STS items are displayed.

ELEC EMER CONFIG SYS REMAINING		EMER GEN RUNNING		BAT ONLY	
		SUPPLIED BY ENG HYD PUMPS	SUPPLIED BY RAT	IN FLT	ON GND (IAS < 50 kt)
AIR COND PRESS VENT	PRESS AUTO SYS 1	Norm	Norm	Norm	Norm
	MAN PRESS CTL	Inop	Inop	Inop	Norm
	RAM AIR	Norm	Norm	Norm	Norm
	PACK VALVE	Norm	Norm	Norm	Norm
	AVIONIC VENT	OVBD only	OVBD only	OVBD only	OVBD only
	CARGO VENT	ISOL valve only	Inop	Inop	Inop
AUTO FLT	FMGC	1 only	Inop	Inop	Inop
	MCDU	1 only	Inop	Inop	3 only
	FCU	1 only	1 only	1 only	1 only
COM	VHF 1	Norm	Norm	Norm	Norm
	HF1	Norm ***	Inop	Inop	Inop
	RMP 1	Norm	Norm	Norm	Norm
	ACP (CAPT., F/O)	Norm	Norm	Norm	Norm
	CIDS	Norm	Norm	Norm	Norm
	INTERPHONE	Norm	Norm	Norm	Norm
	CVR	Norm	Inop	Inop	Inop
	LOUDSPEAKER 1+2	Norm	Norm	Norm	Norm
EIS	PFD 1	Norm	Norm	Norm	Norm
	ND 1	Norm	Inop	Inop	Inop
	ECAM upper DU	Norm	Norm	Norm	Norm
	DMC 1 or 3	Norm	Norm	Norm	Norm
	SDAC 1, FWC 1	Norm	Norm	Norm	Norm
	ECP	Norm	Norm	Norm	Norm
FLT INS	CLOCK	Norm	Norm	Norm	Norm

*** Shed, when the LAND RECOVERY pushbutton is ON.

ELEC EMER CONFIG (CONT'D)

(a) After LAND RECOVERY selection :

R · SLATS/FLAPS channel 1, LGCIU 1, BSCU 1 and WHC1 are recovered.
R But FLAPS remain lost, if ENG2 failed and IDG1 lost.

· Remaining fuel pump (L FUEL PUMP 2 or R FUEL PUMP 2) will stop.
· SLATS/FLAPS SLOW is displayed as information on STS.
· HF 1, AP 1 and ADR 3 are lost after LAND RECOVERY selection.

(b) Only in case of GEN or ENG failure. For this purpose, BUS TIE pushbutton must be switched back to AUTO.

Note : STATUS is simplified in ELEC EMER CONFIG ; only the most significant STS items are displayed.

ELEC EMER CONFIG SYS REMAINING		EMER GEN RUNNING		BAT ONLY	
		SUPPLIED BY ENG HYD PUMPS	SUPPLIED BY RAT	IN FLT	ON GND (IAS < 50 kt)
AIR COND PRESS VENT	PRESS AUTO SYS 1	Norm	Norm	Norm	Norm
	MAN PRESS CTL	Inop	Inop	Inop	Norm
	RAM AIR	Norm	Norm	Norm	Norm
	PACK VALVE	Norm	Norm	Norm	Norm
	AVIONIC VENT	OVBD only	OVBD only	OVBD only	OVBD only
	CARGO VENT	ISOL valve only	Inop	Inop	Inop
AUTO FLT	FMGC	1 only	Inop	Inop	Inop
	MCDU	1 only	Inop	Inop	3 only
	FCU	1 only	1 only	1 only	1 only
COM	VHF 1	Norm	Norm	Norm	Norm
	HF1	Norm ***	Inop	Inop	Inop
	RMP 1	Norm	Norm	Norm	Norm
	ACP (CAPT., F/O)	Norm	Norm	Norm	Norm
	CIDS	Norm	Norm	Norm	Norm
	INTERPHONE	Norm	Norm	Norm	Norm
	CVR	Norm	Inop	Inop	Inop
	LOUDSPEAKER 1+2	Norm	Norm	Norm	Norm
EIS	PFD 1	Norm	Norm	Norm	Norm
	ND 1	Norm	Inop	Inop	Inop
	ECAM upper DU	Norm	Norm	Norm	Norm
	DMC 1 or 3	Norm	Norm	Norm	Norm
	SDAC 1, FWC 1	Norm	Norm	Norm	Norm
	ECP	Norm	Norm	Norm	Norm
FLT INS	CLOCK	Norm	Norm	Norm	Norm

*** Shed, when the LAND RECOVERY pushbutton is ON.

ELEC EMER CONFIG SYS REMAINING		EMER GEN RUNNING		BAT ONLY	
		SUPPLIED BY ENG HYD PUMPS	SUPPLIED BY RAT	IN FLT	ON GND (IAS < 50 kt)
FIRE	ENG LOOPS	A only	A only	A only	A only
	APU LOOP	A only	A only	A only	A only
	CARGO SMOKE DET	1 only	Inop	Inop	Inop
	FIRE EXT. (Eng. Apu, Cargo)	Squib A	Squib A	Squib A	Squib A
	APU AUTO EXT.	–	–	–	Norm
FLT CTL	PRIM 1	Norm	Norm	Norm	Norm
	SEC 2	Norm	Norm	Norm	Norm
	SEC 1	Norm	Norm	Norm	Norm
	FCDC 1	Norm	Inop	Inop	Inop
	SFCC SLATS	1 only *	1 only *	1 only	1 only
	SFCC FLAPS	1 only *	Inop	Inop	Inop
	PITCH TRIM	1 only	Inop	Inop	Inop
	RUDD TRIM	Norm	Inop	Inop	Inop
	RUDD TRAVEL	Norm	Norm	Norm	Norm
FUEL	FCMC	1 only	Inop	Inop	2 only
	PUMPS	L PUMP 2 only *****	L PUMP 2 only *****	Inop	Inop
	X FEED	Mot 1 only	Mot 1 only	Mot 1 only	Mot 1 only
	LP VALVES	Mot 1 only	Mot 1 only	Mot 1 only	Mot 1 only
	XFR, ISOL VALVES	Norm	Norm	Norm	Norm
	AFT APU PUMP	Norm ***	Norm ***	Norm ***	Norm ***
	APU LP VALVE	Norm	Norm	Norm	Norm

* Operative, when the LAND RECOVERY pushbutton is ON.

*** Shed, when the LAND RECOVERY pushbutton is ON.

***** · The crossfeed valve automatically opens.
· If the L PUMP 2 is inoperative, the R PUMP 2 takes over.
· The remaining pump is lost, when the LAND RECOVERY pushbutton is ON.
When supplied by the RAT only, the remaining pump is lost when the speed is below 260 knots.

ELEC EMER CONFIG SYS REMAINING		EMER GEN RUNNING		BAT ONLY	
		SUPPLIED BY ENG HYD PUMPS	SUPPLIED BY RAT	IN FLT	ON GND (IAS < 50 kt)
HYD	FIRE SOV/RAT CTL	Norm	Norm	Norm	Norm
ICE & RAIN	WING A. ICE	Norm	Inop	Inop	Inop
	ENG A. ICE	Open	Open	Open	Open
	CAPT PITOT	Norm	Norm	Norm	Norm
	WHC 1	Norm *	Inop	Inop	Inop
	CAPT AOA	Norm	Inop	Inop	Inop
	STBY AOA/PITOT	Norm ****	Inop	Inop	Inop
	RAIN REPEL ◁	Capt	Capt	Capt	Capt
L/G	LGCIU	1 only *	1 only *	1 only *	1 only
	GRVTY EXT	Norm	Norm	Norm	Norm
	IND. PANEL	Norm	Norm	Norm	Norm
	AUTO BRK/ANTI SKID	Inop/Norm *	Inop	Inop	Inop
	PARK BRK	Norm	Norm	Norm	Norm
LIGHTS	L LDG LT	Norm *	Inop	Inop	Inop

* Operative, when the LAND RECOVERY pushbutton is ON.

*** Shed, when the LAND RECOVERY pushbutton is ON.

**** Shed when the LAND RECOVERY pushbutton is ON, unless the AIR DATA selector is switched to “CAPT ON 3”. (This leads to loss of the autopilot).

ELEC EMER CONFIG SYS REMAINING		EMER GEN RUNNING		BAT ONLY	
		SUPPLIED BY ENG HYD PUMPS	SUPPLIED BY RAT	IN FLT	ON GND (IAS < 50 kt)
FIRE	ENG LOOPS	A only	A only	A only	A only
	APU LOOP	A only	A only	A only	A only
	CARGO SMOKE DET	1 only	Inop	Inop	Inop
	FIRE EXT. (Eng. Apu, Cargo)	Squib A	Squib A	Squib A	Squib A
	APU AUTO EXT.	–	–	–	Norm
FLT CTL	PRIM 1	Norm	Norm	Norm	Norm
	SEC 2	Norm	Norm	Norm	Norm
	SEC 1	Norm	Norm	Norm	Norm
	FCDC 1	Norm	Inop	Inop	Inop
	SFCC SLATS	1 only *	1 only *	1 only	1 only
	SFCC FLAPS	1 only *	Inop	Inop	Inop
	PITCH TRIM	1 only	Inop	Inop	Inop
	RUDD TRIM	Norm	Inop	Inop	Inop
	RUDD TRAVEL	Norm	Norm	Norm	Norm
FUEL	FCMC	1 only	Inop	Inop	2 only
	PUMPS	L PUMP 2 only *****	L PUMP 2 only *****	Inop	Inop
	X FEED	Mot 1 only	Mot 1 only	Mot 1 only	Mot 1 only
	LP VALVES	Mot 1 only	Mot 1 only	Mot 1 only	Mot 1 only
	XFR, ISOL VALVES	Norm	Norm	Norm	Norm
	AFT APU PUMP	Norm ***	Norm ***	Norm ***	Norm ***
	APU LP VALVE	Norm	Norm	Norm	Norm
	JETTISON	Inop	Inop	Inop	Inop

* Operative, when the LAND RECOVERY pushbutton is ON.

*** Shed when the LAND RECOVERY pushbutton is ON.

***** · The crossfeed valve automatically opens.
· If the L PUMP 2 is inoperative, the R PUMP 2 takes over.
· The remaining pump is lost when LAND RECOVERY pushbutton is at ON.
When supplied by the RAT only, the remaining pump is lost when the speed is below 260 knots.

ELEC EMER CONFIG SYS REMAINING		EMER GEN RUNNING		BAT ONLY	
		SUPPLIED BY ENG HYD PUMPS	SUPPLIED BY RAT	IN FLT	ON GND (IAS < 50 kt)
HYD	FIRE SOV/RAT CTL	Norm	Norm	Norm	Norm
ICE & RAIN	WING A. ICE	Norm	Inop	Inop	Inop
	ENG A. ICE	Open	Open	Open	Open
	CAPT PITOT	Norm	Norm	Norm	Norm
	WHC 1	Norm *	Inop	Inop	Inop
	CAPT AOA	Norm	Inop	Inop	Inop
	STBY AOA/PITOT	Norm ****	Inop	Inop	Inop
	RAIN REPEL ◁	Capt	Capt	Capt	Capt
L/G	LGCIU	1 only *	1 only *	1 only *	1 only
	GRVTY EXT	Norm	Norm	Norm	Norm
	IND. PANEL	Norm	Norm	Norm	Norm
	AUTO BRK/ANTI SKID	Inop/Norm *	Inop	Inop	Inop
	PARK BRK	Norm	Norm	Norm	Norm
LIGHTS	L LDG LT	Norm *	Inop	Inop	Inop

* Operative, when the LAND RECOVERY pushbutton is ON.

*** Shed, when the LAND RECOVERY pushbutton is ON.

**** Shed when the LAND RECOVERY pushbutton is ON, unless the AIR DATA selector is switched to “CAPT ON 3”. (This leads to loss of the autopilot).

ELEC EMER CONFIG SYS REMAINING		EMER GEN RUNNING		BAT ONLY	
		SUPPLIED BY ENG HYD PUMPS	SUPPLIED BY RAT	IN FLT	ON GND (IAS < 50 kt)
NAV	IR 1 and 3	Norm	Norm	Norm	Norm
	IR 2	5 min	5 min	5 min	5 min
	ADR 1	Norm	Norm	Norm	Norm
	ADR 3	Norm ****	Inop	Inop	Inop
	VOR or ADF ◁ **	1 only	1 only	1 only	1 only
	DME	1 only	Inop	Inop	Inop
	ILS	1 only *	1 only *	1 only *	1 only
	DDRMI	Norm	Norm	Norm	Norm
	ATC	1 only	Inop	Inop	Inop
	RADAR	1 only ***	Inop	Inop	Inop
	STBY HOR/COMPASS	Norm	Norm	Norm	Norm
	STBY ASI (not deiced)	Norm	Norm	Norm	Norm
	STBY ALTI (VIB)	Norm	Inop	Inop	Inop
OXYGEN	CREW OXY valve ctl	Norm	Inop	Inop	Inop
	PAX OXY	Norm	Norm	Norm	Norm
PNEU	ENG BLEED	BMC 1 only	BMC 1 only	BMC 1 only	BMC 1 only
	X BLEED	man only	man only	man only	man only
APU		Norm	Norm	Norm	Norm
DOORS	SLIDES ARM/WARN	Norm	Norm	Norm	Norm
PWR PLT	FADEC's	A only	A only	A only	A only
	IGNITION	A only	A only	A only	A only
	REV	Inop	Inop	Inop	Inop
	HP VALVE closure	Norm	Norm	Norm	Norm

* Operative, when the LAND RECOVERY pushbutton is ON.

** Only VOR1 or ADF1 ◁ (as selected on DDRMI) is avail. at a time.

R If the DDRMI is deactivated, only VOR1 is available on the ND
R (ADF1 will not be available independently of the selection
R performed on the DDRMI).

*** Shed, when the LAND RECOVERY pushbutton is ON.

**** Shed when the LAND RECOVERY pushbutton is ON, unless the AIR DATA selector is switched to "CAPT ON 3". (This leads to loss of the autopilot).

ELEC DC BUS 1 FAULT

Crew awareness.

STATUS

PACK 1 AT FIXED TEMP
CAT 3 SINGLE ONLY

INOP SYS
See below

INOP SYS DISPLAYED ON ECAM

VHF 3	REV 1 (GE engine only)	G ELEC PUMP
ZONE CTLR 1	B ELEC PUMP	GND COOL
FUEL AFT XFR	PART GALLEY	PACKBAY VENT
L+R CAPT STAT HEAT	L FUEL STBY	C/B DISPLAY
L+R STBY STAT HEAT	R FUEL PUMP 2	ACP 3
R FUEL STBY	GPS 1 ◁	CAT 3 DUAL
TR 1		

OTHER INOP SYS

SELCAL	CAPT WIPER	Brake Temp ind. (5 to 8)
TPIS◁	DATA LOADER	RMP 3
BLOW DET	PART COCKPIT LTS	R LDG LTS
PACK 1 REGUL	HUD ◁	

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC EMER CONFIG SYS REMAINING		EMER GEN RUNNING		BAT ONLY	
		SUPPLIED BY ENG HYD PUMPS	SUPPLIED BY RAT	IN FLT	ON GND (IAS < 50 kt)
NAV	IR 1 and 3	Norm	Norm	Norm	Norm
	IR 2	5 min	5 min	5 min	5 min
	ADR 1	Norm	Norm	Norm	Norm
	ADR 3	Norm ****	Inop	Inop	Inop
	VOR or ADF ◁ **	1 only	1 only	1 only	1 only
	DME	1 only	Inop	Inop	Inop
	MMR	1 only	1 only	1 only	1 only
	DDRMI	Norm	Norm	Norm	Norm
	ATC	1 only	Inop	Inop	Inop
	RADAR	1 only ***	Inop	Inop	Inop
	ISIS	Norm	Norm	Norm	Norm
OXYGEN	CREW OXY valve ctl	Norm	Inop	Inop	Inop
	PAX OXY	Norm	Norm	Norm	Norm
PNEU	ENG BLEED	BMC 1 only	BMC 1 only	BMC 1 only	BMC 1 only
	X BLEED	man only	man only	man only	man only
APU		Norm	Norm	Norm	Norm
DOORS	SLIDES ARM/WARN	Norm	Norm	Norm	Norm
PWR PLT	FADEC's	A only	A only	A only	A only
	IGNITION	A only	A only	A only	A only
	REV	Inop	Inop	Inop	Inop
	HP VALVE closure	Norm	Norm	Norm	Norm

** Only VOR1 or ADF1 ◁ (as selected on DDRMI) is available at a time.
If the DDRMI is deactivated, only VOR1 is available on the ND (ADF1 will not be available, independently of the selection performed on the DDRMI).

*** Shed, when the LAND RECOVERY pushbutton is ON.

**** Shed when the LAND RECOVERY pushbutton is ON, unless the AIR DATA selector is switched to “CAPT ON 3”. (This leads to loss of the autopilot).

ELEC DC BUS 1 FAULT

Crew awareness.

STATUS

PACK 1 AT FIXED TEMP
CAT 3 SINGLE ONLY

INOP SYS
See below

INOP SYS DISPLAYED ON ECAM

VHF 3	REV 1 (GE engine only)	G ELEC PUMP
ZONE CTLR 1	B ELEC PUMP	GND COOL
FUEL AFT XFR	PART GALLEY	PACKBAY VENT
L+R CAPT STAT HEAT	L FUEL STBY	C/B DISPLAY
L+R STBY STAT HEAT	R FUEL PUMP 2	ACP 3
R FUEL STBY	CAT 3 DUAL	TR 1
JETTISON		

OTHER INOP SYS

SELCAL	CAPT WIPER	Brake Temp ind. (5 to 8)
TPIS◁	DATA LOADER	RMP 3
BLOW DET	PART COCKPIT LTS	R LDG LTS
PACK 1 REGUL	HUD ◁	

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC DC BUS 2 FAULT

– AIR DATA SWTG (if ADR 3 AVAIL) . . . . . F/O ON 3
– FM SOURCE . . . . . BOTH ON 1

Note : SEC 2 FAULT light is unduly illuminated.

● **IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :**
– T TANK MODE . . . . . FWD

Note : If the trim tank pump is inoperative, apply the action if the CG is aft of 32 %, and when the SPD is greater than 270 knots, and not in climb.

Secondary Failure
* F/CTL

STATUS

– SPD BRK . . . . . DO NOT USE
● **IF CG AFT 32 % WHEN SPD > 270 KT AND NOT IN CLIMB**
– T TANK MODE . . . . . FWD
– LDG DIST PROC . . . . . APPLY
Refer to the QRH Part 2, or to the FCOM 3.02.80.
BOTH PFD ON SAME FMGEC
PACK 2 AT FIXED TEMP
SLATS/FLAPS SLOW
CAT 3 SINGLE ONLY

INOP SYS
See below

INOP SYS DISPLAYED ON ECAM

PRIM 2+3	R WSHLD HEAT	GPS 2 ◁
AP 2 (FMGC 2)	BMC 2	R WNDW HEAT
VHF 2	ZONE CTLR 2	HALF SPLRS
LGCIU 2	FCDC 2	REV 2 (GE engine only)
FUEL AFT XFR	CAB PR 2	F/O TAT
L+R F/O STAT HEAT	GALLEY	FM 2
R FUEL PUMP 1	FCMC 2	CAT 3 DUAL
TR 2	L FUEL PUMP 1	ENG 1+2 LOOP B
BRAKES SYS 2	F T.TK PUMP	Y ELEC PUMP

ELEC DC BUS 2 FAULT (CONT'D)

OTHER INOP SYS

PACK 2 REGUL	F/O WIPER	SFCC 2
SDCU 2	F/O RAIN REP.	RMP 2
BRAKE TEMP IND (1 to 4)	ENG 1+2 SQUIB B	PART COCKPIT LTS
CARGO SQUIB B	AUTOBRAKE	CDLS

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC DC BUS 2 FAULT

– AIR DATA SWTG (if ADR 3 AVAIL) . . . . . F/O ON 3
– FM SOURCE . . . . . BOTH ON 1
– SEC 2 . . . . . KEEP ON

Note : SEC 2 FAULT light is unduly illuminated.

● **If CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :**
– T TANK MODE . . . . . FWD

Note : If the trim tank pump is inoperative, apply the action if the CG is aft of 32 %, and when SPD is greater than 270 knots, and not in climb.

Secondary Failure
* F/CTL

STATUS

	INOP SYS
– SPD BRK . . . . . DO NOT USE	See below
● **IF CG AFT 32 % WHEN SPD > 270 KT AND NOT IN CLIMB**	
– T TANK MODE . . . . . FWD	
– LDG DIST PROC . . . . . APPLY	
Refer to the QRH Part 2, or to the FCOM 3.02.80.	
BOTH PFD ON SAME FMGEC	
PACK 2 AT FIXED TEMP	
SLATS/FLAPS SLOW	
CAT 3 SINGLE ONLY	

INOP SYS DISPLAYED ON ECAM

PRIM 2+3	R WSHLD HEAT	AP 2 (FMGC 2)
BMC 2	R WNDW HEAT	VHF 2
ZONE CTLR 2	HALF SPLRS	LGCIU 2
FCDC 2	REV 2 (GE engine only)	FUEL AFT XFR
CAB PR 2	F/O TAT	L+R F/O STAT HEAT
GALLEY	FM 2	R FUEL PUMP 1
FCMC 2	TR 2	L FUEL PUMP 1
ENG 1+2 LOOP B	CAT 3 DUAL	BRAKES SYS 2
F T.TK PUMP	Y ELEC PUMP	

ELEC DC BUS 2 FAULT (CONT'D)

OTHER INOP SYS

PACK 2 REGUL	F/O WIPER	SFCC 2
SDCU 2	F/O RAIN REP.	RMP 2
BRAKE TEMP IND (1 to 4)	ENG 1+2 SQUIB B	PART COCKPIT LTS
CARGO SQUIB B	AUTOBRAKE	CDLS

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC DC ESS BUS FAULT

AC ESS SHED, DC ESS SHED and AC LAND RCVRY buses are also lost.
For AC ESS SHED and DC ESS SHED BUS FAULT, refer to corresponding cautions for additional procedures.

– ECAM SWTG DMC 3
To recover the STATUS page.
– PFD BARO REF : STD ONLY(a)
– AUDIO SWTG . . . . . SELECT
– VHF 2 or 3/ATC 2 . . . . . USE
– BARO REF . . . . . CHECK
– GPWS . . . . . OFF

(a) This line is only displayed, if the DC BUS 2 is also lost
In this case, the BARO REF .... CHECK line is not displayed.

Note : 1. To shut down the engines on ground, use the fire pushbutton.
2. Trim tank fuel may be unusable. Apply the TRIM TK UNUSABLE procedure.

STATUS

AVOID ICING CONDITIONS
APPR PROC
– GPWS FLAP MODE . . . . . OFF
– T TK UNUSBL PROC . . . . . APPLY
● **IF ICE ACCRETION**
– APPR SPD . . . . . VLS + 10 KT
– LDG DIST PROC . . . . . APPLY
R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*
BOTH PFD ON SAME FMGC
SLATS/FLAPS SLOW
CAT 1 ONLY

INOP SYS
See below

INOP SYS DISPLAYED ON ECAM

WING A. ICE	ILS 1	CAB PR 1
AP 1	CAT 2	L FUEL PUMP 2
VHF 1	L WSHLD HEAT	GPWS
CAPT AOA	L WNDOW HEAT	FCDC 1
ACP 1+2	PART FCU	RUD TRV LIM 1
HF 1	LGCIU 1	RUD TRIM 1
FM 1	FCMC 1	APU LOOP A
BRAKES SYS 1	ENG 1+2 LOOP A	GPS 1 ◁

ELEC DC ESS BUS FAULT (CONT'D)

OTHER INOP SYS

CAPT ND	MCDU 1	HF 1
BMC 1	FLT INTERPHONE	STBY COMPASS
SFCC 1	L/G IND. PANEL	STBY HORIZON
RMP 1	CAPT RAIN REP	PAX OXY AUTO CTL
STBY ALTIMETER (vibrator)	ECP	SDCU 1
FCMC 2 (part)	APU	LANDING LTS CTL
DME 1	CVR	RADARD 1

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC DC ESS BUS SHED

AC ESS SHED BUS is also lost.

Refer to the corresponding caution for additional procedures and status.

– FM SOURCE . . . . . BOTH ON 2

AVOID ICING CONDITIONS

STATUS

AVOID ICING CONDITIONS

APPR PROC

– GPWS FLAP MODE . . . . . OFF

● **IF ICE ACCRETION :**

– APPR SPD . . . . . VLS + 10 KT

– LDG DIST PROC . . . . . APPLY

R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*

BOTH PFD ON SAME FMGC

FLAPS SLOW

CAT 3 SINGLE ONLY

INOP SYS

WING A. ICE
AP 1
CAPT AOA
FM 1
CAT 3 DUAL
BRAKES SYS 1
L WSHLD HEAT
ATC 1
L WNDOW HEAT
RUD TRIM 1
FCMC 1
HF1
See below

OTHER INOP SYS

FCMC 2 (part)	SFCC FLAPS 1	SDCU 1
STBY ALTIMETER	LANDING LTS CTL	

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC DC ESS BUS FAULT

AC ESS SHED, DC ESS SHED and AC LAND RCVRY buses are also lost.
For AC ESS SHED and DC ESS SHED BUS FAULT, refer to corresponding cautions for additional procedures.

– ECAM SWTG DMC 3
To recover the STATUS page.
– PFD BARO REF : STD ONLY(a)
– AUDIO SWTG . . . . . SELECT
– VHF 2 or 3/ATC 2 . . . . . USE
– BARO REF . . . . . CHECK
– GPWS . . . . . OFF

(a) This line is only displayed, if the DC BUS 2 is also lost
In this case, the BARO REF .... CHECK line is not displayed.

Note : 1. To shut down the engines on ground, use the fire pushbutton.
2. Trim tank fuel may be unusable. Apply the TRIM TK UNUSABLE procedure.

STATUS

AVOID ICING CONDITIONS
APPR PROC
– GPWS FLAP MODE . . . . . OFF
– T TK UNUSBL PROC . . . . . APPLY
● **IF ICE ACCRETION**
– APPR SPD . . . . . VLS + 10 KT
– LDG DIST PROC . . . . . APPLY
Refer to the QRH Part 2, or to the FCOM 3.02.80.
BOTH PFD ON SAME FMGC
SLATS/FLAPS SLOW
CAT 1 ONLY

INOP SYS
See below

INOP SYS DISPLAYED ON ECAM

WING A. ICE		CAB PR 1
AP 1	CAT 2	L FUEL PUMP 2
VHF 1	L WSHLD HEAT	GPWS
CAPT AOA	L WNDOW HEAT	FCDC 1
ACP 1+2	PART FCU	
HF 1	LGCIU 1	RUD TRIM 1
FM 1	FCMC 1	APU LOOP A
BRAKES SYS 1	ENG 1+2 LOOP A	

ELEC DC ESS BUS FAULT (CONT'D)

OTHER INOP SYS

CAPT ND	MCDU 1	HF 1
BMC 1	FLT INTERPHONE	STBY COMPASS
SFCC 1	L/G IND. PANEL	STBY HORIZON
RMP 1	CAPT RAIN REP	PAX OXY AUTO CTL
STBY ALTIMETER (vibrator)	ECP	SDCU 1
FCMC 2 (part)	APU	CVR
RADAR 1	DME 1	LANDING LTS CTL

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC DC ESS BUS SHED

AC ESS SHED BUS is also lost.

Refer to the corresponding caution for additional procedures and status.

– FM SOURCE . . . . . BOTH ON 2

AVOID ICING CONDITIONS

STATUS

AVOID ICING CONDITIONS

APPR PROC

– GPWS FLAP MODE . . . . . OFF

● **IF ICE ACCRETION :**

– APPR SPD . . . . . VLS + 10 KT

– LDG DIST PROC . . . . . APPLY

R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*

BOTH PFD ON SAME FMGC

FLAPS SLOW

CAT 3 SINGLE ONLY

INOP SYS

WING A. ICE
AP 1
CAPT AOA
FM 1
CAT 3 DUAL
BRAKES SYS 1
L WSHLD HEAT
ATC 1
L WNDOW HEAT
RUD TRIM 1
FCMC 1
JETTISON
See below

OTHER INOP SYS

FCMC 2 (part)	SFCC FLAPS 1	SDCU 1
STBY ALTIMETER	LANDING LTS CTL	

Note : The warning may be caused by a sub BUS failure. Consequently, only a part of the above-listed systems may be lost.

ELEC DC BUS 1 + 2 FAULT

– WING X FEED ..... ON
Only the L FUEL PUMP 2 is supplied.
– FM SOURCE ..... BOTH ON 1
– FUEL IMBALANCE ..... MONITOR
To stop the imbalance, consider descent to the gravity feed ceiling (refer to FCOM 3.02.28 p 2), in order to use gravity feeding on the right side. In this case, close the WING X FEED.

● **IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB**
– T TANK MODE ..... FWD

Secondary Failure
* F/CTL

STATUS

– SPD BRK ..... DO NOT USE

APPR PROC

● **FOR L/G GRVTY EXTN :**
MAX SPEED ..... 200 KT
– L/G GRVTY EXTN ..... DOWN
● **WHEN L/G DOWNLOCKED :**
– L/G ..... DOWN
● **IF CG AFT 32 % WHEN SPD > 270KT AND NOT IN CLIMB**
– TTK MODE ..... FWD

– LDG DIST PROC ..... APPLY
Refer to the QRH Part 2, or to the FCOM 3.02.80.

R FUEL GRVTY FEED ONLY
ENG 1 AUTOSTART ONLY
ENG 2 AUTOSTART ONLY
PACKS AT FIXED TEMP
ENG HI IDLE
BOTH PFD ON SAME FMGC
SLATS/FLAPS LOW
CAT 3 SINGLE ONLY

ELEC DC BUS 1 + 2 FAULT (CONT'D)

INOP SYS
F/CTL PROT
See below

INOP SYS DISPLAYED ON ECAM

PRIM 2+3	AP 2	TR 1+2
VHF 2+3	HALF SPLRS	REVERSERS
GND COOL ◁	FUEL AFT XFR	L+R CAPT STAT HEAT
R WNDW HEAT	C/B DISPLAY	L+R F/O STAT HEAT
REAC W/S DET	L+R STBY STAT HEAT	FCDC 2
ACP 3	FCMC 2	FM 2
CAT 3 DUAL	ZONE REGUL	ENG 1+2 LOOP B
BRAKES SYS 2	R FUEL PUMPS	G ELEC PUMP
L FUEL PUMP 1	B ELEC PUMP	L FUEL STBY
Y ELEC PUMP	F TTK PUMP	R WSHLD HEAT
GPS 1+2 ◁	BMC 2	LGCIU 2
CAB PR 2	MAN CAB PR	N/W STRG
GALLEY		

OTHER INOP SYS

RMP 2+3	TPIS ◁	SDCU 2
PACK 1+2 REGUL	WIPERS	BLOW DET
SELCAL	BRAKE TEMP IND	CARGO SQUIB B
DATA LOADER	L/G SAFETY VALVE	ENG SQUIB B
R LDG LTS	PART COCKPIT LTS	SFCC 2
F/O RAIN REP	AUTOBRAKE	CDLS ◁

ELEC DC BUS 1 + 2 FAULT

– WING X FEED . . . . . ON
Only the L FUEL PUMP 2 is supplied.
– FM SOURCE . . . . . BOTH ON 1
– FUEL IMBALANCE . . . . . MONITOR
To stop the imbalance, consider descent to FL 200 to use gravity feeding on the right side. In this case, close the WING X FEED.
CTK TANK XFR BY GRVTY
CTR TANK UNUSABLE IF < 15 T
● **IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB**
– T TANK MODE . . . . . FWD

Secondary Failure
* F/CTL

STATUS

– SPD BRK . . . . . DO NOT USE
APPR PROC
● **FOR L/G GRVTY EXTN :**
MAX SPEED . . . . . 200 KT
– L/G GRVTY EXTN . . . . . DOWN
● **WHEN L/G DOWNLOCKED :**
– L/G . . . . . DOWN
● **IF CG AFT 32 % WHEN SPD > 270KT AND NOT IN CLIMB**
– TTK MODE . . . . . FWD
– LDG DIST PROC . . . . . APPLY
Refer to the QRH Part 2, or to the FCOM 3.02.80.
CTR TANK XFR BY GRVTY
CTR TANK UNUSABLE IF < 15 KT
R FUEL GRVTY FEED ONLY
ENG 1 AUTOSTART ONLY
ENG 2 AUTOSTART ONLY
PACKS AT FIXED TEMP
ENG HI IDLE
BOTH PFD ON SAME FMGC
SLATS/FLAPS LOW
CAT 3 SINGLE ONLY

ELEC DC BUS 1 + 2 FAULT (CONT'D)

INOP SYS
F/CTL PROT
See below

INOP SYS DISPLAYED ON ECAM

PRIM 2+3	AP 2	TR 1+2
VHF 2+3	HALF SPLRS	REVERSERS
GND COOL ◁	FUEL AFT XFR	L+R CAPT STAT HEAT
R WNDW HEAT	C/B DISPLAY	L+R F/O STAT HEAT
REAC W/S DET	L+R STBY STAT HEAT	FCDC 2
ACP 3	FCMC 2	FM 2
CAT 3 DUAL	ZONE REGUL	ENG 1+2 LOOP B
BRAKES SYS 2	R FUEL PUMPS	G ELEC PUMP
L FUEL PUMP 1	B ELEC PUMP	L FUEL STBY
Y ELEC PUMP	F TTK PUMP	F CTR PUMPS
BMC 2	LGCIU 2	R WSHLD HEAT
MAN CAB PR	N/W STRG	CAB PR 2
GALLEY		

OTHER INOP SYS

RMP 2+3	TPIS ◁	SDCU 2
PACK 1+2 REGUL	WIPERS	BLOW DET
SELCAL	BRAKE TEMP IND	CARGO SQUIB B
DATA LOADER	L/G SAFETY VALVE	ENG SQUIB B
R LDG LTS	PART COCKPIT LTS	SFCC 2
F/O RAIN REP	AUTOBRAKE	CDLS ◁

ELEC DC BAT BUS FAULT

ENG HI IDLE

Due to the loss of the EIVMUs.

STATUS

	INOP SYS
ENG 1 AUTO START ONLY	A/THR
ENG 2 AUTO START ONLY	REVERSERS
ENG 1 HI IDLE	MAN CAB PR
ENG 2 HI IDLE	APU LOOP B
CAT 2 ONLY	See below

OTHER INOP SYS

APU SQUIB B	CAPT PHC	STBY PHC

ELEC BUS TIE OFF

The BUS TIE pushbutton is abnormally selected OFF.

Crew awareness.

ELEC AC ESS BUS ALTN (on ground)

Crew awareness.

AC ESS BUS is supplied from AC BUS 2, even if the AC ESS FEED pushbutton is set to normal.

Note : This alert is inhibited, when the AC ESS BUS FAULT caution is triggered.

COCKPIT DOOR FAULT

This procedure should be applied, if the Cockpit Door Locking System (CDLS) fails. This failure is indicated when the FAULT light on the center pedestal's CKPT DOOR panel comes on.

– CKPT DOOR CONT PANEL . . . . . CHECK

This panel is located on the overhead panel. It is used to identify the faulty CDLS item, and to verify the status of the pressure sensors and the three electrical latches (referred to as strikes).

- **If two or more electrical latches (strikes) are faulty :**

  The cockpit door is not intrusion-proof.

- **If two pressure sensors are faulty :**

  Automatic latch release is unavailable, in case of cockpit decompression.

- **If no LED on the CKPT DOOR CONT panel is on :**

  The CDLS control unit is faulty ; therefore, the cockpit door might unlock automatically. If it does not, consider using the mechanical override system to unlock the door.

Note : In case of a DC BUS 2 fault, no FAULT indication appears on the center pedestal's CKPT DOOR panel. The CDLS is not electrically-supplied, and is inoperative.

ENG 1(2) FIRE on ground

R – THR LEVERS ..... IDLE

Full reverse may be used to stop the aircraft.

● **WHEN A/C IS STOPPED :**

– PARKING BRK ..... ON

– ENG MASTER (affected) ..... OFF

Associated LP and HP valves close.

– ENG FIRE P/B (affected) ..... PUSH

· *Aural warning stops*

· *ENG FIRE pushbutton remains on, as long as a fire is detected.*

· *FADEC is no longer supplied. So, the THR LEVERS...IDLE line reappears, even if the thrust levers are at idle.*

– AGENT 1 + 2 ..... DISCH

– ENG MASTER (opposite side) ..... OFF

– ATC (VHF 1) ..... NOTIFY

Notify ATC of the nature of the emergency, and state intentions.

Only VHF1 is available on batteries.

– CABIN CREW (PA) ..... ALERT

● **IF EVAC RQRD :**

– EVAC COMMAND ..... ON

– APU MASTER SW ..... OFF

ENG 1(2) FIRE in flight

R

LAND ASAP

– THR LEVER (affected) . . . . . IDLE
– ENG MASTER (affected) . . . . . OFF
Associated LP and HP valves close.
– ENG FIRE P/B (affected) . . . . . PUSH
· *Aural warning stops.*
· *ENG FIRE pushbutton remains on, as long as a fire is detected.*
· *FADEC is no longer supplied. So, the THR LEVER...IDLE line reappears, even if the thrust lever is at idle.*
– ENG BLEED (affected eng if not automatically closed) . . . OFF
– APU BLEED (only for eng 1) . . . . . OFF
– X BLEED (if not automatically closed) . . . . . CLOSE
The affected side is isolated from any source of air.
– AGENT 1 AFT 10 S . . . . . DISCH
The 10–second delay allows N1 to decrease, reducing nacelle ventilation, and thereby increasing the effect of the agent. Automatic countdown on the ECAM.
– ATC . . . . . NOTIFY
Notify ATC of the nature of the emergency, and state intentions.

● **IF FIRE AFTER 30 S :**
– AGENT 2 . . . . . DISCH
Discharge the second agent, if the fire warning remains 30 seconds after the discharge of the first agent.

ENG 1(2) SHUT DOWN

Do not attempt to restart the engine.
For the after ENG SHUTDOWN procedure, see the ENG section (Refer to 3.02.70).

ENG 1(2) FIRE on ground

R – THR LEVERS ..... IDLE

Full reverse may be used to stop the aircraft.

● **WHEN A/C IS STOPPED :**

– PARKING BRK ..... ON

– ENG MASTER (affected) ..... OFF

Associated LP and HP valves close.

– ENG FIRE P/B (affected) ..... PUSH

· *Aural warning stops*

· *ENG FIRE pushbutton remains on, as long as a fire is detected.*

· *FADEC is no longer supplied. So, the THR LEVERS...IDLE line reappears, even if the thrust levers are at idle.*

– AGENT 1 + 2 ..... DISCH

– ENG MASTER (opposite side) ..... OFF

– ATC (VHF 1) ..... NOTIFY

Notify ATC of the nature of the emergency, and state intentions.

Only VHF1 is available on batteries.

– CABIN CREW (PA) ..... ALERT

● **IF EVAC RQRD :**

– EVAC COMMAND ..... ON

– APU MASTER SW ..... OFF

ENG 1(2) FIRE in flight

LAND ASAP

– THR LEVER (affected) . . . . . IDLE
– ENG MASTER (affected) . . . . . OFF
Associated LP and HP valves close.
– ENG FIRE P/B (affected) . . . . . PUSH
· *The aural warning stops.*
· *The ENG FIRE pushbutton remains on, as long as a fire is detected.*
R · *The FADEC is no longer supplied.*
– ENG BLEED (affected Eng, if not automatically closed) . . OFF
– APU BLEED (only for Eng 1) . . . . . OFF
– X BLEED (if not automatically closed) . . . . . CLOSE
The affected side is isolated from any source of air.
– AGENT 1 AFTER 10 S . . . . . DISCH
The 10–second delay allows N1 to decrease, reducing nacelle ventilation, and thereby increasing the effect of the agent. Automatic countdown on the ECAM.
– ATC . . . . . NOTIFY
Notify ATC of the nature of the emergency, and state intentions.

● **IF FIRE AFTER 30 S :**
– AGENT 2 . . . . . DISCH
Discharge the second agent, if the fire warning remains 30 seconds after the discharge of the first agent.

ENG 1(2) SHUT DOWN

Do not attempt to restart the engine.
For the after ENG SHUTDOWN procedure, see the ENG section (Refer to 3.02.70).

APU FIRE

LAND ASAP

– APU FIRE P/B ..... PUSH
- *APU LP valve closes.*
- *Aural warning stops.*
- *APU FIRE pushbutton remains lit, as long as fire is detected.*

– AGENT AFTER 10 S ..... DISCH
The 10–second delay allows the airflow to decrease, which increases the effect of the agent.
Automatic countdown on the ECAM.

– APU MASTER SW ..... OFF
Do not attempt to restart the APU.

STATUS

INOP SYS
APU

ENG/APU FIRE LOOP A(B) FAULT

Crew awareness.

STATUS

INOP SYS
ENG 1(2) LOOP A (B) or APU LOOP A (B)

ENG/APU FIRE DET FAULT

Loss of both fire detection loops.
Crew awareness.

STATUS

INOP SYS
FIRE DET 1 (2) or APU FIRE DET

SMOKE LAVATORY SMOKE

Crew awareness.
Maintain contact with the cabin crew to follow the status of the fire, and consider the emergency descent and smoke removal procedures.

SMOKE/TOXIC FUMES REMOVAL

· *Use the smoke removal procedure, if there is dense smoke, toxic fumes (smell), or if smoke generation cannot be stopped.*
If a scent similar to orange peels pervades the cockpit, suspect a toxic leak of rain repellent fluid. If the scent is similar to pine needles, suspect a non-toxic leak (◁).

· *If there is smoke in the cabin, it may be necessary to make a PA announcement to minimize apprehension.*

– OXY MASK/GOGGLE . . . . . ON/100 %/EMERG
Ensure crew communication is established. Avoid continuous use of the interphone to minimize interference from the oxygen mask breathing noise.
Turn the emergency knob to remove condensation or smoke from the mask.

– SEAT BELTS/NO SMOKING . . . . . ON

– CAB FANS . . . . . OFF
To prevent smoke from entering the cockpit and cabin.

– PACK FLOW . . . . . HI
To provide maximum airflow from the packs.
Do not shut down the air conditioning packs, and do not reduce ventilation in an attempt to smother the fire.
Do not deploy oxygen masks, if fire is suspected in the cabin.

● **If cockpit window opening required :**
Unless dense smoke is in the cockpit, do not open the cockpit window to evacuate the smoke.

– LDG ELEV . . . . . 10000 FT/MEA

– DESCENT (FL 100 or MEA or minimum obstacle clearance altitude) . . . . . INITIATE

R *Descent is initiated to FL100, or the MEA, or the minimum obstacle clearance altitude, while the cabin altitude is increased to 10000 feet or MEA.*
The increase in cabin altitude also reduces, at least temporarily, the smoke concentration.
Cabin depressurization starts when descent is initiated.
Passenger oxygen, as required by regulation.

– ATC . . . . . NOTIFY

SMOKE/TOXIC FUMES REMOVAL (CONT'D)

● **At FL 100 or MEA :**

– PACK 1+2 ..... OFF

It is not possible to open the cockpit window when the packs are ON.

– MODE SEL ..... MAN

R – MAN VALVE SEL ..... BOTH

R – MAN V/S CTL ..... FULL UP

– RAM AIR ..... ON

· *At FL100, or MEA, or minimum obstacle clearance altitude, it is possible to open the RAM AIR valve, when △P is 1 psi or below. RAM AIR does not assist smoke removal, but allows flying with both packs OFF (after window opening).*

– MAX SPD ..... 230 KT

– HEADSETS ..... ON

– COCKPIT WINDOW ..... OPEN

CAUTION

Due to the increased noise level, pay particular attention to visual warnings.

SMOKE FWD CRG SMOKE

Note : If the warning has been temporarily displayed and no crew action has been taken, normal cargo ventilation may be recovered when ventilation is required for livestock transportation, by a reset of both ventilation controller channels.

LAND ASAP

– FWD ISOL VALVE (if not automatically closed) . . . . . OFF ◁
– FWD AGENT . . . . . DISCH
– FWD CRG COOLING . . . . . OFF ◁

Note : · Expect the SMOKE warning to remain after agent discharge, even if the smoke source is extinguished. Gases from the smoke source are not evacuated, and smoke detectors are also sensitive to the extinguishing agent. Once isolation valves are closed, the cargo is not ventilated, thus the cargo temperature is unreliable.

Order the ground crew not to open the door of affected cargo compartment, unless the passengers have disembarked and fire services are present.

· If SMOKE warning is displayed on ground with the cargo compartment door open, do not initiate AGENT DISCHARGE. Request the ground crew to investigate and eliminate the smoke source.

· On ground, the warning may be triggered due to a high level of humidity. Provided the smoke is not visually confirmed :

– Deactivate the smoke detection system by pulling the SDCU 1 and 2 reset buttons.
– Reset the cargo ventilation system using the VENT CONT 1 and 2 reset buttons.
– At cargo doors closure, reactivate SDCU 1 and 2.

STATUS

INOP SYS
FWD CRG VENT◁FWD CRG HEAT◁
FWD CRG TEMP◁
FWD CRG COOL◁

SMOKE FWD (AFT) CRG BTL 1(2) FAULT

Crew awareness.

SMOKE AFT/BULK CRG SMOKE

LAND ASAP

R
- AFT ISOL VALVE . . . . . OFF◁
- BULK ISOL VALVE (if not automatically closed) . . . . . OFF
- CAB REST . . . . . EVACUATE ◁
- CAB REST DOORS . . . . . CLOSE ◁
- AFT AGENT . . . . . DISCH ◁

Note : Refer to the notes in the FWD CRG SMOKE procedure. They are applicable to the AFT/BULK CRG SMOKE procedure.

STATUS

INOP SYS
AFT CRG VENT◁
BULK VENT
BULK HEAT◁

SMOKE LAVATORY DET FAULT

Toilet smoke detection is lost.

Crew awareness.

STATUS

INOP SYS
LAV DET

SMOKE FWD (AFT/BULK) CRG DET FAULT

● **IF NO LIVESTOCK :**
- ISOL VALVE (affected compartment) . . . . . OFF
- FWD CRG COOLING . . . . . OFF◁

STATUS

INOP SYS
FWD CRG DET (AFT) (BULK)
FWD CRG TEMP◁
BULK CRG HEAT◁
AFT CRG VENT◁ (BULK)

SMOKE DET FAULT

Both SDCU channels fail. Avionics, cargo, and toilet smoke detection are lost.

– BULK AVNCS . . . . . OFF ◁
– PAX SYS . . . . . OFF ◁

This will confirm the automatic cut-off of the power supply.

● **IF NO LIVESTOCK :**

– FWD and AFT ISOL VALVE . . . . . OFF ◁
– BULK ISOL VALVE . . . . . OFF
– FWD CRG COOLING . . . . . OFF ◁

STATUS

INOP SYS
SMOKE DET
CRG VENT

SMOKE AVIONICS DET FAULT

Avionics compartment smoke detection is lost.

Crew awareness.

STATUS

INOP SYS
AVNCS DET

SMOKE AVNCS VENT SMOKE

The description of this procedure is included in the SMOKE/AVNCS SMOKE procedure. (Refer to FCOM 3.02.26 p. 9).

SMOKE AFT/BULK CRG SMOKE

LAND ASAP

- AFT ISOL VALVE ..... OFF◁
- BULK ISOL VALVE (if not automatically closed) ..... OFF
- CAB REST ..... EVACUATE ◁
- CAB REST DOORS ..... CLOSE ◁
- AFT AGENT ..... DISCH ◁

Note : Refer to the notes in the FWD CRG SMOKE procedure. They are applicable to the AFT/BULK CRG SMOKE procedure.

STATUS

INOP SYS
AFT CRG VENT◁
BULK VENT
BULK HEAT◁

SMOKE LAVATORY DET FAULT

Toilet smoke detection is lost.

Crew awareness.

STATUS

INOP SYS
LAV DET

SMOKE FWD (AFT/BULK) CRG DET FAULT

● **IF NO LIVESTOCK :**

- AFT ISOL VALVE ..... OFF
- BULK ISOL VALVE ..... OFF◁

STATUS

INOP SYS
BULK VENT
AFT CRG VENT◁
BULK CRG DET
AFT CRG DET
FWD CRG DET

SMOKE DET FAULT

Both SDCU channels fail. Avionics, cargo, and toilet smoke detection are lost.

– BULK AVNCS ..... OFF ◁
– PAX SYS ..... OFF ◁

This will confirm the automatic cut-off of the power supply.

● **IF NO LIVESTOCK :**

– FWD and AFT ISOL VALVE ..... OFF ◁
– BULK ISOL VALVE ..... OFF
– FWD CRG COOLING ..... OFF ◁

STATUS

INOP SYS
SMOKE DET
CRG VENT

SMOKE AVIONICS DET FAULT

Avionics compartment smoke detection is lost.

Crew awareness.

STATUS

INOP SYS
AVNCS DET

SMOKE AVNCS VENT SMOKE

The description of this procedure is included in the SMOKE/AVNCS SMOKE procedure. (Refer to FCOM 3.02.26 p. 9).

SMOKE/AVNCS SMOKE

This procedure is applicable, in case of suspected smoke from the avionics compartment, air conditioning, or cabin equipment. The flight crew should apply this paper procedure, if smoke is detected with or without "AVNCS VENT SMOKE" ECAM activation.

This paper procedure includes all the steps of the AVNCS VENT SMOKE ECAM procedure. Therefore, if the ECAM procedure is displayed, it may be applied, if smoke from avionics is suspected. However, if non-avionics smoke is suspected, the flight crew will refer to the paper procedure.

The procedure layout is organized as follows :

- *The first lines (before the text box) correspond to immediate actions, which must be performed by the crew as soon as smoke is detected (with or without ECAM activation, whatever the smoke source). These immediate actions enable the crew to quickly refer to the steps, most commonly adopted in smoke-related cases.*
- *The text box indicates the immediate procedure to be applied by the crew when, at any time of the procedure, the smoke is so dense that they are no longer able to determine the smoke source and smoke removal is required.*
- *The last part of the procedure corresponds to specific actions to be applied by the crew, once the smoke source has been identified.*

R *In case of a CARGO or LAVATORY (or other area equipped with smoke detectors) SMOKE ECAM warning, without any smoke detected in the cockpit/cabin, directly apply the ECAM/QRH procedure. Note that these warnings may be caused by some other source, that should, ordinarily, first be detected by the flight crew/cabin crew/avionics smoke detectors.*

LAND ASAP

APPLY IMMEDIATELY :

– VENT EXTRACT ..... OVRD
Avionics ventilation air is extracted overboard.

– CAB FANS ..... OFF
To prevent smoke from entering the cockpit and cabin.

– GALLEYS ..... OFF

● **IF REQUIRED**

– CREW OXY MASKS ON/100%/EMERG
Ensure crew communication is established. Avoid continuous use of the interphone to minimize interference from the oxygen mask breathing noise.
Turn the emergency knob to remove condensation or smoke from the mask.

– FAULTY EQUIPT (if identified) ..... ISOLATE

SMOKE/AVNCS SMOKE (CONT'D)

6FCS-03-0226-010-A001AA

● IF DENSE SMOKE, at any time of the procedure :
- DESCENT for smoke removal..... INITIATE
- SMOKE/TOXIC FUMES REMOVAL..... APPLY
- ELEC EMER CONFIG..... CONSIDER
  Refer to the end of the procedure to set ELEC EMER CONFIG

Guidelines to determine smoke origin :

– *If smoke initially comes out of the cockpit's ventilation outlets, or if smoke is detected in the cabin, the crew may suspect an AIR COND SMOKE. In addition, very shortly thereafter, several SMOKE warnings (cargo, lavatory, avionics) will be triggered. The displayed ECAM procedures must therefore be applied.*

– *Following an identified ENG or APU failure, smoke may emanate from the faulty item through the bleed system and be perceptible in the cockpit or the cabin. In that case, it will be re-circulated throughout the aircraft, until it completely disappears from the air conditioning system.*

– *If only the AVIONICS SMOKE warning is triggered, the crew may suspect AVIONICS SMOKE.*

– *If the AVIONICS SMOKE warning is triggered, while an equipment is declared faulty, the crew may suspect that smoke is coming from this equipment.*

■ **IF AIR COND SMOKE SUSPECTED :**

– APU BLEED ..... OFF
– VENT EXTRACT ..... AUTO

Note : When VENT EXTRACT is in the OVRD position, a single pack may not be able to maintain cabin pressure.

– PACK 1 ..... OFF

● **If smoke persists :**

– PACK 1 ..... ON
– PACK 2 ..... OFF

● **If smoke still persists :**

– PACK 2 ..... ON

If the crew suspects that the smoke does not come from Pack 2, normal pack configuration can be restored.

– VENT EXTRACT ..... OVRD

– SMOKE/TOXIC FUMES REMOVAL ..... CONSIDER

SMOKE/AVNCS SMOKE

This procedure is applicable, in case of suspected smoke from the avionics compartment, air conditioning, or cabin equipment. The flight crew should apply this paper procedure, if smoke is detected with or without "AVNCS VENT SMOKE" ECAM activation.

This paper procedure includes all the steps of the AVNCS VENT SMOKE ECAM procedure. Therefore, if the ECAM procedure is displayed, it may be applied, if smoke from avionics is suspected. However, if non-avionics smoke is suspected, the flight crew will refer to the paper procedure.

The procedure layout is organized as follows :

- *The first lines (before the text box) correspond to immediate actions, which must be performed by the crew as soon as smoke is detected (with or without ECAM activation, whatever the smoke source). These immediate actions enable the crew to quickly refer to the steps, most commonly adopted in smoke-related cases.*
- *The text box indicates the immediate procedure to be applied by the crew when, at any time of the procedure, the smoke is so dense that they are no longer able to determine the smoke source and smoke removal is required.*
- *The last part of the procedure corresponds to specific actions to be applied by the crew, once the smoke source has been identified.*

R *In case of a CARGO or LAVATORY (or other area equipped with smoke detectors) SMOKE ECAM warning, without any smoke detected in the cockpit/cabin, directly apply the ECAM/QRH procedure. Note that these warnings may be caused by some other source, that should, ordinarily, first be detected by the flight crew/cabin crew/avionics smoke detectors.*

LAND ASAP

APPLY IMMEDIATELY :

– VENT EXTRACT ..... OVRD
Avionics ventilation air is extracted overboard.

– CAB FANS ..... OFF
To prevent smoke from entering the cockpit and cabin.

– GALLEYS ..... OFF

● **IF REQUIRED**

– CREW OXY MASKS ON/100%/EMERG
Ensure crew communication is established. Avoid continuous use of the interphone to minimize interference from the oxygen mask breathing noise.
Turn the emergency knob to remove condensation or smoke from the mask.

– FAULTY EQUIPT (if identified) ..... ISOLATE

SMOKE/AVNCS SMOKE (CONT'D)

6FC5-03-0226-010-A105A4

● IF DENSE SMOKE, at any time of the procedure :
- DESCENT for smoke removal..... INITIATE
- SMOKE/TOXIC FUMES REMOVAL..... APPLY
- ELEC EMER CONFIG..... CONSIDER
  Refer to the end of the procedure to set ELEC EMER CONFIG

Guidelines to determine smoke origin :

– *If smoke initially comes out of the cockpit's ventilation outlets, or if smoke is detected in the cabin, the crew may suspect an AIR COND SMOKE. In addition, very shortly thereafter, several SMOKE warnings (cargo, lavatory, avionics) will be triggered. The displayed ECAM procedures must therefore be applied.*

– *Following an identified ENG or APU failure, smoke may emanate from the faulty item through the bleed system and be perceptible in the cockpit or the cabin. In that case, it will be re-circulated throughout the aircraft, until it completely disappears from the air conditioning system.*

– *If only the AVIONICS SMOKE warning is triggered, the crew may suspect AVIONICS SMOKE.*

– *If the AVIONICS SMOKE warning is triggered, while an equipment is declared faulty, the crew may suspect that smoke is coming from this equipment.*

■ **IF AIR COND SMOKE SUSPECTED :**

– APU BLEED ..... OFF

– VENT EXTRACT ..... AUTO

Note : When VENT EXTRACT is in the OVRD position, a single pack may not be able to maintain cabin pressure.

– PACK 1 ..... OFF

● **If smoke persists :**

– PACK 1 ..... ON

– PACK 2 ..... OFF

– CRG FWD ISOL VALVE ..... OFF

To prevent a cargo smoke warning from being triggered by smoke coming from the cabin.

● **If smoke still persists :**

– PACK 2 ..... ON

If the crew suspects that the smoke does not come from Pack 2, normal pack configuration can be restored.

– VENT EXTRACT ..... OVRD

– SMOKE/TOXIC FUMES REMOVAL ..... CONSIDER

SMOKE/AVNCS SMOKE (CONT'D)

■ **IF CAB EQUIPMENT SMOKE SUSPECTED :**

– EMER EXIT LT ..... ON
To recover minimum cabin lighting when the COMMERCIAL will be switched OFF.
– COMMERCIAL ..... OFF
– SMOKE/TOXIC FUMES REMOVAL ..... CONSIDER

● **IF SMOKE SOURCE CANNOT BE DETERMINED AND STILL PERSISTS :**

Consider shedding the AC BUS bar on one side. Then, if unsuccessful, on the other. When it is clear that the shedded side is not involved, reconnect it.

● **AC BUS 1 can be shed as follow :**

– ECAM/ND SEL ..... F/O
The ECAM SD will be lost during the sequence. Switching is necessary to allow ELEC page monitoring.
– ELEC/AC page ..... SELECT
– BUS TIE ..... OFF
The BUS TIE OFF caution is triggered after 5 seconds.
– GEN 2 ..... CHECK ON
– AC ESS FEED ..... ALTN
This action avoids autopilot and autothrust disconnection during electrical transients.
– GEN 1 ..... OFF
The ECAM SD is lost.
Note : If this electrical configuration is maintained, the Captain's Total Air Temperature and angle-of-attack, standby angle-of-attack and pitot are not deiced.
PFD1 and STBY instruments may display erroneous data in icing conditions. Use PFD 2.

● **AC BUS 2 can be shed as follows :**

– BUS TIE ..... CHECK OFF
– GEN 1 ..... ON
– AC ESS FEED ..... NORM
– ECAM/ND SEL ..... NORM
– GEN 2 ..... OFF
PFD2 and ND2 are lost.

SMOKE/AVNCS SMOKE (CONT'D)

TO SET ELEC EMER CONFIG :

– EMER ELEC PWR ..... MAN ON

● **WHEN EMER GEN AVAIL :**

– GEN 1 ..... OFF
– GEN 2 ..... OFF
– APU GEN ..... OFF

ELEC **EMER CONFIG**

APPLY ECAM PROCEDURE WITHOUT PERFORMING THE GEN RESET.

SMOKE/AVNCS SMOKE (CONT'D)

■ **IF CAB EQUIPMENT SMOKE SUSPECTED :**

– PAX SYS ..... OFF

● **If smoke persists :**

– EMER EXIT LT ..... ON

To recover minimum cabin lighting when the COMMERCIAL will be switched OFF.

– COMMERCIAL ..... OFF

– SMOKE/TOXIC FUMES REMOVAL ..... CONSIDER

● **IF SMOKE SOURCE CANNOT BE DETERMINED AND STILL PERSISTS :**

Consider shedding the AC BUS bar on one side. Then, if unsuccessful, ON the other. When it is clear that the shedded side is not involved, reconnect it.

● **AC BUS 1 can be shed as follow :**

– ECAM/ND SEL ..... F/O

The ECAM SD will be lost during the sequence. Switching is necessary to allow ELEC page monitoring.

– ELEC/AC page ..... SELECT

– BUS TIE ..... OFF

The BUS TIE OFF caution is triggered after 5 seconds.

– GEN 2 ..... CHECK ON

– AC ESS FEED ..... ALTN

This action avoids autopilot and autothrust disconnection during electrical transients.

– GEN 1 ..... OFF

ECAM SD is lost.

Note : If this electrical configuration is maintained, Captain's Total Air Temperature and angle-of-attack, standby angle-of-attack and pitot are not deiced.

PFD1 and STBY instruments may display erroneous data in icing conditions. Use PFD 2.

● **AC BUS 2 can be shed as follows :**

– BUS TIE ..... CHECK OFF

– GEN 1 ..... ON

– AC ESS FEED ..... NORM

– ECAM/ND SEL ..... NORM

– GEN 2 ..... OFF

PFD2 and ND2 are lost.

SMOKE/AVNCS SMOKE (CONT'D)

TO SET ELEC EMER CONFIG :

– EMER ELEC PWR ..... MAN ON

● **WHEN EMER GEN AVAIL :**

– GEN 1 ..... OFF
– GEN 2 ..... OFF
– APU GEN ..... OFF

ELEC **EMER CONFIG**

APPLY ECAM PROCEDURE WITHOUT PERFORMING THE GEN RESET.

SMOKE CAB REST SMOKE

- **If SMOKE is in the LDMCR compartment :**
  - CAB REST DOORS . . . . . CLOSE

  If it is not possible to fight the smoke source, evacuate and close the hatch. Confirm activation of the crew rest compartment's internal fire extinguishing system.

  Maintain contact with the cabin crew to follow up on the status of the fire, and consider the emergency descent and smoke removal procedures.

  Note : If, in flight, the warning has been temporarily displayed and identified as a false warning, crew rest compartment ventilation may be recovered by resetting both VENT controller channels.

SMOKE FLT REST SMOKE

Crew awareness.

Maintain contact with the cabin crew to follow up on the status of the fire, and consider the emergency descent and smoke removal procedures.

SMOKE FLT (CAB) REST DET FAULT

Crew awareness.

Smoke detection is lost in the upper (lower) deck crew rest compartment.

STATUS

INOP SYS
FLT REST DET (CAB)

SMOKE CAB REST SMOKE

- **If SMOKE is in the LDMCR compartment :**
  - CAB REST DOORS . . . . . CLOSE

  If it is not possible to fight the smoke source, evacuate and close the hatch. Confirm activation of the crew rest compartment's internal fire extinguishing system.
  Maintain contact with the cabin crew to follow up on the status of the fire, and consider the emergency descent and smoke removal procedures.
  Note : If, in flight, the warning has been temporarily displayed and identified as a false warning, crew rest compartment ventilation may be recovered by resetting both VENT controller channels.

SMOKE FLT REST SMOKE

Crew awareness.
Maintain contact with the cabin crew to follow up on the status of the fire, and consider the emergency descent and smoke removal procedures.

SMOKE FLT (CAB) REST DET FAULT

Crew awareness.
Smoke detection is lost in the upper (lower) deck crew rest compartment.

STATUS

INOP SYS
FLT REST DET (CAB)

SMOKE IFE BAY SMOKE

LAND ASAP

– PAX SYS ..... OFF

SMOKE IFE BAY DET FAULT

Smoke detection is lost in the IFE bay.

– PAX SYS ..... OFF

STATUS

INOP SYS
IFE BAY DET

SMOKE BULK REST SMOKE ◁

LAND ASAP

Crew awareness.

Maintain contact with the cabin crew to follow up on the status of the fire, and consider applying the emergency descent and smoke removal procedures.

SMOKE BULK DET FAULT ◁

BULK REST

Crew awareness that Bulk rest detection is faulty.

Bulk rest smoke detection is lost.

STATUS

INOP SYS
BLK REST DET

SMOKE BULK REST BTL 1(2) ◁

Crew awareness that Bulk Rest Bottle 1(2) is faulty.

F/CTL SLAT SYS 1(2) FAULT

Crew awareness

STATUS

SLATS SLOW ▌

F/CTL FLAP SYS 1(2) FAULT

Crew awareness

STATUS

R ● **In case of FLAP SYS 1 FAULT**
R APPR PROC :
R – GPWS FLAP MODE . . . . . OFF
R *Flap position signal to GPWS is lost.*
R FLAPS SLOW ▌

F/CTL SLAT (FLAP) TIP BRK FAULT

Failure of one slat or flap wing tip brake.

Crew awareness

Note : The "SLAT (FLAP) TIP BRK FAULT" warning is triggered when the automatic test has not been performed during the last 10 days.

R *This warning being classified as a NO GO item in the MMEL it will have to be corrected prior to the next flight. This can be done on ground by manually launching the WTB engagement test accessing the CMS through the MCDU.*

STATUS

SLATS (FLAPS) SLOW ▌

F/CTL L (R) SIDESTICK FAULT

Crew awareness

CONFIG L (R) SIDESTICK FAULT (BY TAKE OVER)

The warning is triggered on ground if either stick is inoperative (take over pb pressed more than 30 seconds.).

– L (R) TAKE OVER . . . . . DEPRESS

The affected stick becomes operative.

F/CTL SLATS FAULT/LOCKED

For landing with slats jammed, see OPERATING TECHNIQUES (Refer to 3.02.10)

R *The autopilot may be used down to 500 ft AGL. As it is not tuned for the abnormal*
R *configurations, its behaviour can be less than optimum and must be monitored.*

MAX SPEED . . . . . refer to figure on page 4

Speed is limited to the VFE corresponding to the next slat position.

● **WHEN SPEED BELOW VFE** :

– FLAPS LEVER (if slats not locked) . . . . . RECYCLE

Return to the previous selection, then back to the desired position.

Note : If slats fault following double SFCC slats channel failure, ALTN law becomes active (refer to associated procedure). Speed limits are lost on PFD.

STATUS

MAX SPEED . . . . . See page 4

APPR PROC :

● **If SLATS < 2** :

– GPWS FLAP MODE . . . . . OFF

– FOR LDG . . . . . USE FLAP 2

R ● **FOR GO AROUND**

R – S/F JAMMED PROC . . . . . APPLY

● **If SLATS ≥ 2**

– FOR LDG . . . . . USE FLAP 3

Do not select CONF FULL so as not to degrade handling qualities.

R ● **FOR GO AROUND**

R – S/F JAMMED PROC . . . . . APPLY

– LDG DIST PROC (See page 4) . . APPLY

Landing distance is increased due to increase of approach speed.

INOP SYS
SLATS

F/CTL SLAT SYS 1(2) FAULT

Crew awareness

STATUS

SLATS SLOW ▌

F/CTL FLAP SYS 1(2) FAULT

Crew awareness

STATUS

R ● **In case of FLAP SYS 1 FAULT**
R APPR PROC :
R – GPWS FLAP MODE . . . . . OFF
R *Flap position signal to GPWS is lost.*
R FLAPS SLOW ▌

F/CTL SLAT (FLAP) TIP BRK FAULT

Failure of one slat or flap wing tip brake.

Crew awareness

Note : The "SLAT (FLAP) TIP BRK FAULT" warning is triggered when the automatic test has not been performed during the last 10 days.

R *This warning being classified as a NO GO item in the MMEL it will have to be corrected prior to the next flight. This can be done on ground by manually launching the WTB engagement test accessing the CMS through the MCDU.*

STATUS

SLATS (FLAPS) SLOW ▌

F/CTL L (R) SIDESTICK FAULT

Crew awareness

CONFIG L (R) SIDESTICK FAULT (BY TAKE OVER)

The warning is triggered on ground, if either stick is inoperative (takeover pushbutton is pressed for more than 30 seconds.).

– L (R) TAKE OVER . . . . . DEPRESS

The affected stick becomes operative.

F/CTL SLATS FAULT/LOCKED

For landing with slats jammed, see OPERATING TECHNIQUES (Refer to 3.02.10).

The autopilot may be used down to 500 feet AGL. As it is not tuned for abnormal configurations, its behavior can be less than optimum and must be monitored.

MAX SPEED . . . . . Refer to figure on page 4

Speed is limited to the VFE corresponding to the next slat position.

● **WHEN SPEED BELOW VFE** :

– FLAPS LEVER (if slats not locked) . . . . . RECYCLE

Return to the previous selection, then back to the desired position.

Note : If slats' fault following double SFCC slats channel failure, ALTN law becomes active (refer to associated procedure). Speed limits are lost on PFD.

STATUS

MAX SPEED . . . . . See page 4

APPR PROC :

– GPWS FLAP MODE (if slats < 2) . OFF

– S/F JAMMED PROC . . . . . APPLY

Refer to the S/F JAMMED paper procedure (QRH Part 2, or FCOM 3.02.10) for managing the approach, and be prepared for a go-around.

The ECAM procedure (below) just provides the final flap lever selection for landing, depending on the failed slats' position.

■ **If SLATS < 2 :**

– FOR LDG . . . . . USE FLAP 2

■ **If SLATS ≥ 2 :**

– FOR LDG . . . . . USE FLAP 3

Do not select CONF FULL, so as to not degrade handling qualities.

– LDG DIST PROC (See page 4) . . APPLY

Landing distance is increased, due to the increase in approach speed.

INOP SYS

SLATS

F/CTL FLAPS FAULT/LOCKED

For landing with flaps jammed, see OPERATING TECHNIQUES (Refer to 3.02.10).

R *The autopilot may be used down to 500 ft AGL. As it is not tuned for the abnormal*
R *configurations, its behaviour can be less than optimum and must be monitored.*

MAX SPEED . . . . . refer to figure on page 4

Speed is limited to the VFE corresponding to the next flap position

● **WHEN SPEED BELOW VFE** :

– FLAPS LEVER (if flaps not locked) . . . . . RECYCLE

Return to the previous selection, then back to the desired position.

Note : In case of FLAPS FAULT, when idle is selected, approach idle is set on all engines. If flaps fault following dual SFCC failure, ALTN law becomes active (refer to associated procedure), speed limits are lost on PFD.

STATUS

MAX SPEED . . . . . See page 4

APPR PROC :

● **If FLAPS < 3** :

– GPWS FLAP MODE . . . . . OFF

– FOR LDG . . . . . USE FLAP 2

Selecting FLAP 2 instead of FLAP 3 permits VMAX display on PFD to be increased.

R ● **FOR GO AROUND** :

R – S/F JAMMED PROC . . . . APPLY

R ● **If FLAPS = 3** :

R – FOR LDG . . . . . USE FLAP 3

R ● **FOR GO AROUND** :

R – S/F JAMMED PROC . . . . APPLY

R ● **If FLAPS > 3** :

R – FOR LDG . . . . . USE FLAP FULL

R ● **FOR GO AROUND** :

R – S/F JAMMED PROC . . . . APPLY

– LDG DIST PROC (See page 4) . . . APPLY

Landing distance may be increased due to increase of approach speed

INOP SYS

FLAPS

FLAPS/SLATS FAULT/LOCKED

This figure gives the MAX SPEED value displayed on ECAM in case of failure for all Slats/Flaps positions.

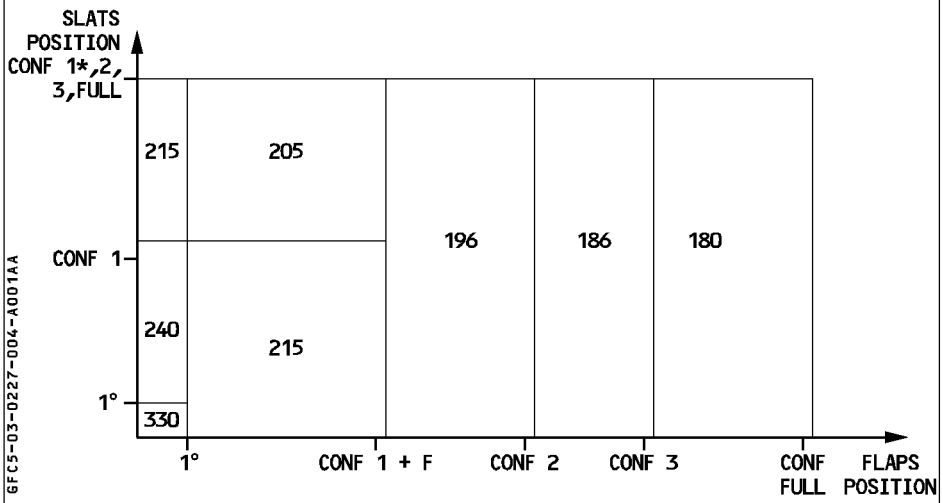

R

VLS/LDG DIST					
	0 ≤ Flaps < 1+F	1+F ≤ Flaps < 2	2 ≤ Flaps < 3	3 ≤ Flaps < FULL	Flaps FULL
0 ≤ Slats < 1 DRY RWY	VREF + 50 DIST. × 1.7	VREF + 40 DIST. × 1.6	VREF + 30 DIST. × 1.4	VREF + 25 DIST. × 1.3	VREF + 25 DIST. × 1.3
1 ≤ Slats < 2 DRY RWY	VREF + 30 DIST. × 1.5	VREF + 20 DIST. × 1.3	VREF + 15 DIST. × 1.2	VREF + 10 DIST. × 1.2	VREF + 10 DIST. × 1.2
Slats = 2 DRY RWY	VREF + 30 DIST. × 1.5	VREF + 15 DIST. × 1.3	VREF + 10 DIST. × 1.2	VREF + 5 DIST. × 1.1	VREF

CAUTION

For flight with SLATS/FLAPS extended, fuel consumption is increased. Refer to fuel flow indication.
As a guide line, determine the fuel consumption in clean configuration at same altitude without airspeed limitation (e.g. from ALTERNATE FLIGHT PLANNING TABLES) and multiply this result by 1.5 (SLATS EXTENDED) or 2.2 (FLAPS EXTENDED) or 2.5 (SLATS and FLAPS EXTENDED) to give the fuel consumption required to reach the destination in the current configuration.

F/CTL FLAPS FAULT/LOCKED

For landing with flaps jammed, see OPERATING TECHNIQUES (Refer to 3.02.10).
The autopilot may be used down to 500 feet AGL. As it is not tuned for abnormal configurations, its behavior can be less than optimum and must be monitored.

MAX SPEED . . . . . refer to figure on page 4
Speed is limited to the VFE corresponding to the next flap position

● **WHEN SPEED BELOW VFE :**

– FLAPS LEVER (if flaps not locked) . . . . . RECYCLE
Return to the previous selection, then back to the desired position.
Note : In case of FLAPS FAULT, when idle is selected, approach idle is set on all engines. If flaps' fault following dual SFCC failure, ALTN law becomes active (refer to associated procedure). Speed limits are lost on the PFD.

STATUS

MAX SPEED . . . . . See page 4

APPR PROC :

– GPWS FLAP MODE (if flaps < 3) . OFF
– S/F JAMMED PROC . . . . . APPLY
Refer to the S/F JAMMED paper procedure (QRH Part 2, or FCOM 3.02.10) for managing the approach, and be prepared for a go-around.
The ECAM procedure (below) just provides the final flap lever selection for landing, depending on the failed flaps' position.

■ **If FLAPS < 3 :**
– FOR LDG . . . . . USE FLAPS 2
Selecting FLAPS 2, instead of FLAPS 3, enables the PFD's VMAX display to be increased.

■ **If FLAPS = 3 :**
– FOR LDG . . . . . USE FLAP 3

■ **If FLAPS > 3 :**
– FOR LDG . . . . . USE FLAP FULL

– LDG DIST PROC (See page 4) . . APPLY
Landing distance may be increased, due to the increase in approach speed.

INOP SYS
FLAPS

FLAPS/SLATS FAULT/LOCKED

This figure gives the MAX SPEED value displayed on ECAM in case of failure for all Slats/Flaps positions.

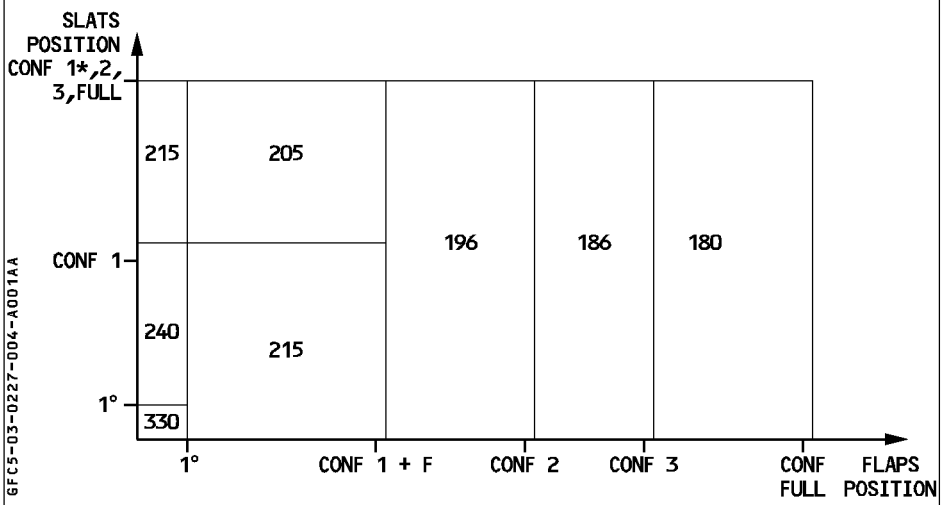

R

VLS/LDG DIST					
	0 ≤ Flaps < 1+F	1+F ≤ Flaps < 2	2 ≤ Flaps < 3	3 ≤ Flaps < FULL	Flaps FULL
0 ≤ Slats < 1 DRY RWY	VREF + 50 DIST. × 1.7	VREF + 40 DIST. × 1.6	VREF + 30 DIST. × 1.4	VREF + 25 DIST. × 1.3	VREF + 25 DIST. × 1.3
1 ≤ Slats < 2 DRY RWY	VREF + 30 DIST. × 1.5	VREF + 20 DIST. × 1.3	VREF + 15 DIST. × 1.2	VREF + 10 DIST. × 1.2	VREF + 10 DIST. × 1.2
Slats = 2 DRY RWY	VREF + 30 DIST. × 1.5	VREF + 15 DIST. × 1.3	VREF + 10 DIST. × 1.2	VREF + 5 DIST. × 1.1	VREF

CAUTION

For flight with SLATS/FLAPS extended, fuel consumption is increased. Refer to fuel flow indication.
As a guide line, determine the fuel consumption in clean configuration at same altitude without airspeed limitation (e.g. from ALTERNATE FLIGHT PLANNING TABLES) and multiply this result by 1.5 (SLATS EXTENDED) or 2.2 (FLAPS EXTENDED) or 2.5 (SLATS and FLAPS EXTENDED) to give the fuel consumption required to reach the destination in the current configuration.

CONFIG SLATS (FLAPS) NOT IN T.O CONFIG

Crew awareness

F/CTL LVR OUT OF DETENT

The flaps lever is between two detents.

Crew awareness

F/CTL FLAP/MCDU DISAGREE

This caution is triggered when pressing the T.O CONFIG TEST pushbutton in phase 2 or at take off initiation if the flap lever position and the FLAPS position as entered on the PERF T.O MCDU page are different.

Crew awareness

R

F/CTL FLAP LVR NOT ZERO

The flap lever is not at zero when altitude is above 22000 ft.

F/CTL PRIM 1(2)(3) FAULT

– PRIM (affected) . . . . . OFF THEN ON

● **IF UNSUCCESSFUL:**

– PRIM (affected) . . . . . OFF

● **In case of dual PRIM failure :**

– SPD BRK . . . . . DO NOT USE

In case of a third PRIM failure : If the speedbrakes are out, they immediately retract, inducing a strong pitch down effect.

● **If CG AFT 32 % :**

– T TANK MODE . . . . . FWD

Fuel consumption is increased by approximately 1%.

Note : If the trim tank pump is inoperative, this part of the procedure is replaced by:

· IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE ..... FWD

STATUS

● **In case of an all PRIM failure :**

RUD WITH CARE ABV 160 KT

The rudder travel limit value is frozen at its value, at the time when the failure occurred. Therefore, rudder inputs must be limited, at speeds above 160 knots, so as not to damage structure. At slats extension, full rudder travel authority is recovered.

● **In case of a dual or an all PRIM failure :**

– SPD BRK . . . . . DO NOT USE

● **If CG AFT 32 % :**

– T TANK MODE . . . . . FWD

Note : If the trim tank pump is inoperative, this part of the procedure is replaced by:

· IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE ..... FWD

– LDG DIST PROC . . . . . APPLY

R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*

CAT 3 SINGLE ONLY

INOP SYS

PRIM 1(2)(3) PART (HALF, MOST) SPLRS

CAT 3 DUAL (PRIM 1 or PRIM 2 failure)

REVERSERS (if PRIM 1+3 failure)

SPD BRK (all PRIM failure)

GND SPLRS (all PRIM failure)

AP 1+2 (all PRIM failure)

RUD TRV LIM (all PRIM failure)

CONFIG SLATS (FLAPS) NOT IN T.O CONFIG

Crew awareness

F/CTL LVR OUT OF DETENT

The flaps lever is between two detents.

Crew awareness

F/CTL FLAP/MCDU DISAGREE

This caution is triggered when pressing the T.O CONFIG TEST pushbutton in phase 2 or at take off initiation if the flap lever position and the FLAPS position as entered on the PERF T.O MCDU page are different.

Crew awareness

R

F/CTL FLAP LVR NOT ZERO

The flap lever is not at zero when altitude is above 22000 ft.

F/CTL PRIM 1(2)(3) FAULT

– PRIM (affected) . . . . . OFF THEN ON

● **IF UNSUCCESSFUL:**

– PRIM (affected) . . . . . OFF

● **In case of dual PRIM failure :**

– SPD BRK . . . . . DO NOT USE

In case of a third PRIM failure : If the speed brakes are out, they immediately retract, inducing a strong pitch down effect.

● **If CG AFT 32 % :**

– T TANK MODE . . . . . FWD

Fuel consumption is increased by approximately 1%.

Note : If the trim tank pump is inoperative, this part of the procedure is replaced by:

· IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE ..... FWD

STATUS

● **In case of a dual PRIM failure :**

– SPD BRK . . . . . DO NOT USE

● **If CG AFT 32 % :**

– T TANK MODE . . . . . FWD

Note : If the trim tank pump is inoperative, this part of the procedure is replaced by:

· IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE ..... FWD

– LDG DIST PROC . . . . . APPLY

R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*

CAT 3 SINGLE ONLY

INOP SYS

PRIM 1(2)(3) PART (HALF, MOST) SPLRS

CAT 3 DUAL (PRIM 1 or PRIM 2 failure)

REVERSERS (if PRIM 1+3 failure)

SPD BRK (all PRIM failure)

GND SPLRS (all PRIM failure)

AP 1+2 (all PRIM failure)

F/CTL SEC 1(2) FAULT

– SEC (affected) . . . . . OFF THEN ON

● **IF UNSUCCESSFUL :**

– SEC (affected) . . . . . OFF

● **In case of a dual SEC failure :**

RUD WITH CARE ABV 160 KT

STATUS

	INOP SYS
RUD WITH CARE ABV 160 KT(a)	PART SPLRS
CAT 1 ONLY(a)	SEC 1 (2)
CAT 3 SINGLE ONLY	CAT 3 DUAL
	AP 1+2(a)
	RUD TRIM 1 (2)(a)
	RUD TRV LIM 1(2) (a)

(a) In case of a dual SEC failure, RUD TRIM, RUD TRV LIM and AP 1+2 are lost.

LOW ENERGY WARNING

The "SPEED SPEED SPEED" synthetic voice is triggered every 5 seconds each time the aircraft's energy becomes lower than a threshold under which thrust shall be increased to recover a positive flight path angle.

– THR LEVERS . . . . . PUSH

Increase the thrust until the warning disappears.

F/CTL ALTN LAW (PROT LOST)

Maneuver protections (pitch, bank) are lost, high speed and high AOA protections are degraded, the load factor protection is kept.

SPD BRK (in case of EMER ELEC CONFIG) . . . . . DO NOT USE

MAX SPEED 330/.82

Speed is limited, due to degraded high speed protection.

Note : In case of EGPWS alerts, since protections are lost, respect stall warnings when applying the EGPWS procedure.

STATUS

	INOP SYS
MAX SPEED 330/.82	F/CTL PROT
APPR PROC :	
– FOR LDG . . . . . USE FLAP 3	
ALTN LAW : PROT LOST	

F/CTL DIRECT LAW (PROT LOST)

The PFD displays "USE MAN PITCH TRIM" in amber.

SPD BRK . . . . . DO NOT USE

MAX SPEED 330/.80

Note : In case of EGPWS alerts, since protections are lost, respect stall warnings when applying the EGPWS procedure.

Speed is limited, due to the loss of high speed protection.

Do not exceed M.80, so as not to degrade handling qualities.

– MAN PITCH TRIM (except if B + Y HYD LO PR) . . . . . USE

Automatic trim is inoperative in direct law.

MANEUVER WITH CARE

Use small control inputs at high speed since, in direct law, the controls are powerful. Use of manual thrust is recommended. Avoid large thrust changes.

● **If CG AFT 32 % :**

– T TANK MODE . . . . . FWD

Fuel consumption is increased by approximately 1%.

Note : If the T TK pump is inoperative, this part of the procedure is replaced by :

· IF CG AFT 32 %, AND WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE ..... FWD

STATUS

SPD BRK . . . . . DO NOT USE

MAX SPEED 330/.80

MANEUVER WITH CARE

APPR PROC :

– FOR LDG . . . . . USE FLAP 3

– MAN PITCH TRIM . . . . . USE

(Except, if B + Y HYD LO PR)

● **If CG AFT 32 % :**

– T TANK MODE . . . . . FWD

Note : 1. If the T TK pump is inoperative, this part of the status is replaced by :

· IF CG AFT 32 %, AND WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE ..... FWD

2. If trim tank transfer is unavailable, consider descending to a lower altitude, where controllability is improved.

DIRECT LAW : PROT LOST

CAT 1 ONLY

INOP SYS

F/CTL PROT

AP 1 + 2

F/CTL SEC 1(2) FAULT

– SEC (affected) . . . . . OFF THEN ON

● **IF UNSUCCESSFUL** :

– SEC (affected) . . . . . OFF

STATUS

	INOP SYS
CAT 1 ONLY(a)	PART SPLRS
CAT 3 SINGLE ONLY	SEC 1 (2)
	CAT 3 DUAL
	AP 1+2(a)
	RUD TRIM 1 (2)(a)

(a) In case of a dual SEC failure, RUD TRIM and AP 1+2 are lost.

LOW ENERGY WARNING

The "SPEED SPEED SPEED" synthetic voice is triggered every 5 seconds, each time the aircraft's energy goes lower than a threshold under which thrust shall be increased to recover a positive flight path angle.

– THR LEVERS . . . . . PUSH

Increase thrust, until the warning disappears.

F/CTL ALTN LAW (PROT LOST)

Maneuver protections (pitch, bank) are lost, high speed and high AOA protections are degraded, and the load factor protection is maintained.

SPD BRK (in case of EMER ELEC CONFIG) . . . . . DO NOT USE

MAX SPEED 330/.82

Speed is limited, due to degraded high speed protection.

Note : In case of EGPWS alerts, since protections are lost, respect the stall warning when applying the EGPWS procedure.

STATUS

	INOP SYS
MAX SPEED 330/.82	F/CTL PROT
APPR PROC :	
– FOR LDG . . . . . USE FLAP 3	
ALTN LAW : PROT LOST	

F/CTL DIRECT LAW (PROT LOST)

The PFD displays "USE MAN PITCH TRIM" in amber.

SPD BRK . . . . . DO NOT USE

MAX SPEED 330/.80

Note : In case of EGPWS alerts, since protections are lost, respect stall warnings when applying the EGPWS procedure.

Speed is limited, due to the loss of high speed protection.

Do not exceed M.80, so as not to degrade handling qualities.

– MAN PITCH TRIM (except if B + Y HYD LO PR) . . . . . USE

Automatic trim is inoperative in direct law.

MANEUVER WITH CARE

Use small control inputs at high speed since, in direct law, the controls are powerful. Use of manual thrust is recommended. Avoid large thrust changes.

● **If CG AFT 32 % :**

– T TANK MODE . . . . . FWD

Fuel consumption is increased by approximately 1%.

Note : If the T TK pump is inoperative, this part of the procedure is replaced by :

· IF CG AFT 32 %, AND WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE ..... FWD

STATUS

SPD BRK . . . . . DO NOT USE

MAX SPEED 330/.80

MANEUVER WITH CARE

APPR PROC :

– FOR LDG . . . . . USE FLAP 3

– MAN PITCH TRIM . . . . . USE

(Except, if B + Y HYD LO PR)

● **If CG AFT 32 % :**

– T TANK MODE . . . . . FWD

Note : 1. If the T TK pump is inoperative, this part of the status is replaced by :

· IF CG AFT 32 %, AND WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE ..... FWD

2. If trim tank transfer is unavailable, consider descending to a lower altitude, where controllability is improved.

DIRECT LAW : PROT LOST

CAT 1 ONLY

INOP SYS

F/CTL PROT

AP 1 + 2

F/CTL ELEV REDUND LOST

This caution is triggered, in case of dual failure cases, when a subsequent third failure affecting the F/CTL system may lead to degraded pitch control, or to pitch mechanical backup. Certain failure combinations lead to an aileron preset to limit the pitch up affect in case of this third failure. If this third failure occurs, the ELEV REDUND LOST PROC and the associated FL and speed limitations no longer apply. In this case, the MAN PITCH TRIM ONLY message is displayed. It is recommended that the autothrust be disconnected to improve longitudinal control of the aircraft.

R

– REDUND LOST PROC . . . . . APPLY

Refer to the paper procedure below.

ELEV REDUND LOST PROC (paper proc)

– CHECK the AIL positions on the F/CTL page.

■ **IF AILERONS ARE PRESET UPWARDS**

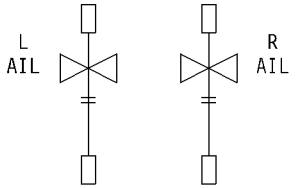

GFCS-03-0227-009-A001AA

The autopilot is not available.

– SPD BRK . . . . . DO NOT USE
– MAX FL 350
– MAX SPEED M0.80
– DISREGARD AFT CG WARNING

Use the ECAM CG indication to monitor the center of gravity.

F/CTL ELEV REDUND LOST (CONT'D)

– Fuel consumption is increased by approximately 16 %
– T TANK MODE ..... FWD

Note : If the trim tank pump is not available :
- *Check that pitch attitude is below 3 degrees, before initiating the transfer.*
- *Interrupt manual forward transfer (MODE pushbutton at AUTO), when aircraft attitude is above 3 degrees, to avoid inadvertent aft transfer.*

Note : In case of an engine-out, the aileron preset is cancelled, and the autopilot may be recovered.

Apply normal engine-out procedures.

Below 2000 feet RA, or when in CONF ≥ 2, the aileron preset is cancelled. The autopilot is available (provided it is not lost due to another failure, such as an elevator failure).

■ AILERONS ARE NOT PRESET

The autopilot is available.

– SPD BRK ..... DO NOT USE
– MAX FL 300
– MAX SPEED M0.75
– T TANK MODE ..... FWD

Fuel consumption is increased by approximately 1 %.

Note : If the trim tank pump is failed, or not installed :
- *Check that pitch attitude is below 3 degrees, before initiating the forward transfer.*
- *Interrupt manual forward transfer (MODE pushbutton at AUTO), when aircraft attitude is above 3 degrees, to*

F/CTL ELEV REDUND LOST

This caution is triggered, in case of dual failure cases, when a subsequent third failure affecting the F/CTL system may lead to degraded pitch control, or to pitch mechanical backup. Certain failure combinations lead to an aileron preset to limit the pitch up effect, in case of a third failure. If this third failure occurs, the ELEV REDUND LOST PROC and associated FL and speed limitations no longer apply. In this case, the MAN PITCH TRIM ONLY message is displayed. It is recommended that the autothrust be disconnected to improve longitudinal control of the aircraft.

■ Ailerons are preset upwards

The autopilot is not available.

– SPD BRK . . . . . DO NOT USE
– MAX FL 350
– MAX SPEED M0.80

● **WHEN SPD > 270 KT AND NOT IN CLIMB :**

– T TANK MODE . . . . . FWD

Displayed if the trim tank pump is failed. In case of an engine-out, the aileron preset is cancelled, and the autopilot may be recovered. Apply normal engine-out procedures. Below 2000 feet RA, or when in CONF ≥ 2, the aileron preset is cancelled. The autopilot is available (provided, it is not lost due to another failure, such as an elevator failure).

STATUS

	INOP SYS
SPD BRK . . . . . DO NOT USE	CAT 3 DUAL
MAX FL 350	
MAX SPEED M0.80	
● **WHEN SPD>270KT AND NOT IN CLIMB :**	
– T TANK MODE . . . . . FWD	
Displayed, if the trim tank pump is failed.	
APPR PROC	
● **AT SLATS EXTENSION**	
– T TANK XFR . . . . . AUTO	
– LDG DIST . . . . . PROC APPLY	
AP MAY BE AVAIL IN CONF 2	
UNDUE AFT CG WARNG RISK	
FUEL CONSUMP : + 16 %	
CAT 3 SINGLE ONLY	
● **IF NEW F/CTL FAILURE :**	
EXPECT MAN P. TRIM ONLY	

F/CTL ELEV REDUND LOST (CONT'D)

Note : The STATUS and the INOP SYS list is completed according to the failures, which led to the loss of elevator redundancy (green system, PRIM 2 or SEC 2).

■ **Ailerons are not preset**

The autopilot is available

– SPD BRK ..... DO NOT USE
– MAX FL 300
– MAX SPEED M0.75

● **WHEN SPD > 270 KT AND NOT IN CLIMB :**

– T TANK MODE ..... FWD

Fuel consumption is increased by approximately 1 %.
Displayed, if the trim tank pump is failed.

STATUS

	INOP SYS
SPD BRK ..... DO NOT USE	CAT 3 DUAL
MAX FL 300	
MAX SPEED M0.75	
● **WHEN SPD > 270 KT AND NOT IN CLIMB :**	
– T TANK MODE ..... FWD	
Displayed, if the trim tank pump is failed.	
APPR PROC	
● **AT SLATS EXTENSION**	
– T TANK XFR ..... AUTO	
– LDG DIST ..... PROC APPLY	
Refer to the QRH Part 2, or to the FCOM 3.02.80.	

R

Note : The STATUS and the INOP SYS list is completed according to the failures, which led to the loss of elevator redundancy (green system, PRIM 2 or SEC 2).

F/CTL STAB CTL FAULT

– MAN PITCH TRIM . . . . . CHECK

The force needed on the PITCH TRIM wheel may be higher than usual (pre-takeoff manual setting).

● **IF MAN TRIM AVAIL :**

– TRIM FOR NEUTRAL ELEV

If man pitch trim is available, trim to maintain elevator at zero position (indications on ECAM F/CTL page).

To improve the longitudinal control of the aircraft, it is recommended that the autothrust be disconnected.

● **IF TRIM LOCKED > 8 UP :**

MAX SPEED . . . . . 180 KT

If trim is locked above 8 degrees UP, pitch down authority may be insufficient for speed above 180 knots.

Select the configuration, as appropriate. Fuel consumption is increased.

F/CTL ALTN LAW (PROT LOST)

MAX SPEED 330/.82

STATUS

MAX SPEED 330/.82

INOP SYS

F/CTL PROT

AP 1 + 2

● **IF TRIM LOCKED > 8 UP :**

MAX SPEED . . . . . 180 KT

APPR PROC :

– FOR LDG . . . . . USE FLAP 3

● **IF MAN TRIM NOT AVAIL :**

– PITCH AUTHORITY REDUCED

Start the flare slightly earlier. More stick deflection may be needed to achieve the flare.

– GPWS FLAP MODE . . . . . OFF

– FOR LDG . . . . . USE FLAP 2

Do not select CONF FULL, or CONF 3, so as not to degrade handling qualities.

– APPR SPD . . . . . VLS + 10 KT

– LDG DIST PROC . . . . . APPLY

R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*

ALTN LAW : PROT LOST

CAT 1 ONLY

F/CTL SPLR FAULT

Loss of one or more spoilers.

Crew awareness

	STATUS
– LDG DIST PROC . . . . . APPLY	INOP SYS
R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*	PART SPLRS (HALF) (MOST) (ALL)

F/CTL GND SPLR FAULT

Crew awareness

	STATUS
– LDG DIST PROC . . . . . APPLY	INOP SYS
R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*	GND SPLRS

F/CTL SPD BRK FAULT

Loss of speedbrake surfaces, due to failure of speedbrake lever transducer. In addition, associated ground spoilers are only available through reverse selection.

Crew awareness

STATUS
INOP SYS
SPD BRK

F/CTL SPD BRK DISAGREE

Disagree between the spoiler position and the speedbrake lever order.

– SPD BRK LEVER . . . . . RETRACT

SPD BRK . . . . . DO NOT USE

STATUS
SPD BRK . . . . . DO NOT USE

F/CTL SPD BRK STILL OUT

The speedbrakes are commanded to extension and the engines are not at idle.

CONFIG SPD BRK NOT RETRACTED

Crew awareness

F/CTL L (R) ELEV FAULT

SPD BRK . . . . . DO NOT USE

F/CTL ALTN LAW (PROT LOST)

MAX SPEED 330/.82

STATUS

	INOP SYS
SPD BRK . . . . . DO NOT USE	F/CTL PROT
MAX SPEED 330/.82	AP 1 + 2
APPR PROC :	L (R) ELEV
– GPWS FLAP MODE . . . . . OFF	
– FOR LDG . . . . . USE FLAP 2	
– APPR SPD . . . . . VLS + 10 KT	
– LDG DIST PROC . . . . . APPLY	
Refer to the QRH Part 2, or to the FCOM 3.02.80.	
ALTN LAW : PROT LOST	
CAT 1 ONLY	

F/CTL ELEV SERVO FAULT

Crew awareness

The remaining servojack controls the elevator

STATUS

	INOP SYS
CAT 3 SINGLE ONLY	CAT 3 DUAL

F/CTL L + R ELEV FAULT

PITCH MECH BACK UP

SPD BRK . . . . . DO NOT USE

Do not use speed brakes because it is difficult to control induced pitch moment with manual pitch trim only.

MAX SPEED 305/.80

Due to loss of high speed protections.

– MAN PITCH TRIM . . . . . USE

Only manual trim is available for pitch control.

To improve the longitudinal control of the aircraft, it is recommended to disconnect the autothrust.

MANEUVER WITH CARE

● **IF CG AFT 32 % :**

– T. TANK MODE . . . . . FWD

Fuel consumption is increased by approximately 1%.

Note : If the T TK pump is inoperative, this part of the procedure is replaced by :

· IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE ..... FWD

STATUS

INOP SYS

L + R ELEV F/CTL PROT AP 1 + 2

SPD BRK . . . . . DO NOT USE

MAX SPEED 305/.80

MANEUVER WITH CARE

APPR PROC :

– GPWS FLAP MODE . . . . . OFF

– FOR LDG . . . . . USE FLAP 2

Do not select CONF FULL so as not to degrade handling qualities.

– APPR SPD . . . . . VLS + 10 KT

– MAN PITCH TRIM . . . . . USE

● **IF CG AFT 32% :**

– T TANK MODE . . . . . FWD

Note : If the T TK pump is inoperative, this part of the procedure is replaced by :

· IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE ..... FWD

R – LDG DIST PROC . . . . . APPLY

Refer to the QRH Part 2, or to the FCOM 3.02.80.

PITCH MECH BACK UP

ROLL DIRECT LAW

CAT 1 ONLY

CONFIG SPD BRK NOT RETRACTED

Crew awareness.

F/CTL L (R) ELEV FAULT

Failure of one elevator or elevator frozen at zero subsequent to elevator oscillation detection. In the latter case, the ECAM caution will require that the autopilot be disconnected during the approach to get sufficient pitch authority.

SPD BRK . . . . . DO NOT USE

F/CTL ALTN LAW (PROT LOST)

MAX SPEED 330/.82

STATUS

SPD BRK . . . . . DO NOT USE
MAX SPEED 330/.82
APPR PROC :
- **If elevator oscillation is detected :**
  - AP . . . . . OFF
  - GPWS FLAP MODE . . . . . OFF
  - FOR LDG . . . . . USE FLAP 2
  - APPR SPD . . . . . VLS + 10 KT
- LDG DIST PROC . . . . . APPLY

Refer to the QRH Part 2, or to the FCOM 3.02.80.

ALTN LAW : PROT LOST
CAT 1 ONLY

INOP SYS
F/CTL PROT
AP 1 + 2 (a)
L (R) ELEV

(a) Not displayed, in case the elevator is frozen at zero, subsequent to elevator oscillation.

F/CTL ELEV SERVO FAULT

Crew awareness.

The remaining servojack controls the elevator.

STATUS

CAT 3 SINGLE ONLY

INOP SYS
CAT 3 DUAL

F/CTL L + R ELEV FAULT

PITCH MECH BACK UP
SPD BRK . . . . . DO NOT USE
Do not use speed brakes because it is difficult to control induced pitch moment with manual pitch trim only.
MAX SPEED 305/.80
Due to loss of high speed protections.
– MAN PITCH TRIM . . . . . USE
Only manual trim is available for pitch control.
To improve the longitudinal control of the aircraft, it is recommended to disconnect the autothrust.
MANEUVER WITH CARE
● **IF CG AFT 32 % :**
– T. TANK MODE . . . . . FWD
Fuel consumption is increased by approximately 1%.
Note : If the T TK pump is inoperative, this part of the procedure is replaced by :
· IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :
– T TANK MODE ..... FWD

STATUS

SPD BRK . . . . . DO NOT USE
MAX SPEED 305/.80
MANEUVER WITH CARE
APPR PROC :
– GPWS FLAP MODE . . . . . OFF
– FOR LDG . . . . . USE FLAP 2
Do not select CONF FULL so as not to degrade handling qualities.
– APPR SPD . . . . . VLS + 10 KT
– MAN PITCH TRIM . . . . . USE
● **IF CG AFT 32% :**
– T TANK MODE . . . . . FWD
Note : If the T TK pump is inoperative, this part of the procedure is replaced by :
· IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :
– T TANK MODE ..... FWD
– LDG DIST PROC . . . . . APPLY
R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*
PITCH MECH BACK UP
ROLL DIRECT LAW
CAT 1 ONLY

INOP SYS
L + R ELEV
F/CTL PROT
AP 1 + 2

F/CTL AIL SERVO FAULT

Crew awareness

F/CTL L (R) INR (OUTR) AIL FAULT

Crew awareness

STATUS

INOP SYS
L(R) OUTR (INR) AIL

INCREASED FUEL CONSUMP

R Note : *For one aileron (INR or OUTR) fault, fuel consumption*
R *is increased by approximately + 6 %.*
R *For two or more ailerons fault, fuel consumption is*
R *increased by approximately + 16%.*

F/CTL FCDC 1(2) FAULT

Crew awareness

STATUS

INOP SYS
FCDC 1(2)

F/CTL FCDC 1 + 2 FAULT

● **ABOVE FL 200** :
SPD BRK . . . . . DO NOT USE
Audio stall warning is available. It is not corrected for speedbrakes extension and may come early with speedbrakes out.
– RUD WITH CARE ABV 160 KT (if DC 2 or DC ESS bus failed)
– MONITOR F/CTL OVHD PNL

Note : – *Control law remains normal*
– *All information is flagged on the F/CTL system page*
– *F/CTL warnings are not available on ECAM.*
– *Stall warning is available.*
– *Bank and pitch limits become amber on PFD*
– *Vα.max, Vα prot and Vsw indications are lost on PFD*

STATUS

● **ABOVE FL 200** :
SPD BRK . . . . . DO NOT USE
RUD WITH CARE ABV 160 KT
This line is displayed if DC 2 or DC ESS bus is failed.
F/CTL INDICATIONS LOST

INOP SYS
FCDC 1 + 2

F/CTL YAW DAMPER 1(2)

Crew awareness

CAT 3 SINGLE ONLY

STATUS

INOP SYS
YAW DAMPER 1(2)
CAT 3 DUAL

F/CTL YAW DAMPER FAULT

Loss of yaw damper 1 + 2

USE RUD FOR TURN COORD

F/CTL ALTN LAW (PROT LOST)

MAX SPEED 330/.82

STATUS

MAX SPEED 330/.82
APPR PROC :
– FOR LDG . . . . . USE FLAP 3
USE RUD FOR TURN COORD
ALTN LAW : PROT LOST
CAT 1 ONLY

INOP SYS
F/CTL PROT
YAW DAMPER
AP 1 + 2

CONFIG RUD TRIM NOT IN T.O RANGE

Crew awareness

CONFIG PITCH TRIM NOT IN T.O RANGE

Crew awareness

F/CTL AIL SERVO FAULT

Crew awareness.

F/CTL L (R) INR (OUTR) AIL FAULT

Crew awareness.

STATUS

	INOP SYS
INCREASED FUEL CONSUMP *Note : For one aileron (INR or OUTR) fault, fuel consumption is increased by approximately + 6 %.* *For two or more ailerons' fault, fuel consumption is increased by approximately + 16%.*	L(R) OUTR (INR) AIL

F/CTL FCDC 1(2) FAULT

Crew awareness.

STATUS

	INOP SYS
	FCDC 1(2)

F/CTL FCDC 1 + 2 FAULT

● **ABOVE FL 200** :

SPD BRK . . . . . DO NOT USE

Audio stall warning is available. It is not corrected for speedbrakes' extension and may come early with the speedbrakes out.

– MONITOR F/CTL OVHD PNL

Note : – Control law remains normal.
– All information is flagged on the F/CTL system page.
– F/CTL warnings are not available on the ECAM.
– Stall warning is available.
– Bank and pitch limits become amber on the PFD.
– Vα.max, Vα. prot, and Vsw indications are lost on the PFD.

STATUS

	INOP SYS
● **ABOVE FL 200** : SPD BRK . . . . . DO NOT USE F/CTL INDICATIONS LOST	FCDC 1 + 2

CONFIG RUD TRIM NOT IN T.O RANGE

Crew awareness.

CONFIG PITCH TRIM NOT IN T.O RANGE

Crew awareness.

F/CTL PITCH TRIM/MCDU/CG DISAGREE

Crew awareness.

R *The system detects a disagreement between any of the following : The real pitch trim value,*
R *the pitch trim value calculated by the FCMC, based in the CG, and the pitch trim value*
R *entered in the MCDU.*

F/CTL RUD TRIM 1(2) FAULT

Crew awareness

STATUS

CAT 3 SINGLE ONLY

INOP SYS
RUD TRIM 1(2)
CAT 3 DUAL

F/CTL RUD TRIM FAULT

Crew awareness

STATUS

CAT 1 ONLY

INOP SYS
RUD TRIM
AP 1 + 2

F/CTL RUD TRV LIM 1(2) FAULT

Crew awareness

STATUS

INOP SYS
RUD TRV LIM 1(2)

F/CTL RUD G (Y)(B) SERVO JAM

Crew awareness

Note : If the F/CTL RUD G (Y) (B) SERVO JAM caution occurs at engine start :

- *Reset FCDC 1 and 2.*
- *Select the non affected LEAK MEASUREMENT valves OFF.*
- *Perform a rapid and total deflection of the rudder.*

If no new caution is triggered, disregard the previous one, and reselect the LEAK MEASUREMENT valves ON.

R *Note : If the Y and G LEAK MEASUREMENT valves have been selected OFF, at the end of the*
R *above test the rudder will be deflected 1.5 degrees to the right.*

F/CTL SENSOR FAULT

A failure affecting a sensor in the F/CTL system is detected.

Crew awareness

F/CTL RUD TRV LIM FAULT

RUD WITH CARE ABV 160 KT

Depending on when the failure occurs, the rudder travel limiter system may not be in the correct position for the flight speed. Therefore, at speeds above 160 knots, rudder inputs must be limited, so as not to damage the structure.

At slats extension, the low speed TLU authority may be recovered.

● **If TLU (rudder or pedals) remains locked at high speed after slat extension :**

MAX X WIND FOR LDG 15 KT

● **At LDG ROLL :**

– DIFF BRAKING . . . . . AS RQRD

STATUS

– RUD WITH CARE ABV 160 KT

● **If TLU (rudder or pedals) remains locked at high speed after slat extension :**

– MAX X WIND FOR LDG 15 KT

● **AT LDG ROLL :**

– DIFF BRAKING . . . . . AS RQRD

APPR PROC :

– GPWS FLAP MODE . . . . . OFF
– FOR LDG . . . . . USE FLAP 2
– APPR SPD . . . . . VLS + 10 KT
– LDG DIST PROC . . . . . APPLY

R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*

APPR PROC : (ONE ENGINE INOPERATIVE)

– GPWS FLAP MODE . . . . . OFF
– AP/ATHR . . . . . OFF
– FOR LDG . . . . . USE FLAP 2
– APPR SPD . . . . . 160 KT

■ **IN CASE OF GO AROUND**

– SPD . . . . . SELECT 160 KT
– LDG DIST PROC . . . . . APPLY

R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*

INOP SYS

RUD TRV LIM

F/CTL RUD TRIM 1(2) FAULT

Crew awareness.

CAT 3 SINGLE ONLY

STATUS

INOP SYS
RUD TRIM 1(2) CAT 3 DUAL

F/CTL RUD TRIM FAULT

Crew awareness.

CAT 1 ONLY

STATUS

INOP SYS
RUD TRIM AP 1 + 2

F/CTL SENSOR FAULT

A failure, affecting a F/CTL system sensor, is detected.

Crew awareness

F/CTL PEDAL SENSOR FAULT

A failure, affecting a pedal sensor, is detected.

Crew awareness.

LEFT INTENTIONALLY BLANK

F/CTL PRIM 1(2)(3)(SEC 1)(2) PITCH FAULT

Failure of the pitch channel in the associated computer.

Crew awareness.

F/CTL TURB DAMP FAULT

The turbulence damper function is inoperative.

Crew awareness.

STATUS

INOP SYS
TURB DAMPER

Note : When no caution is triggered, but abnormal vibrations are present in non-turbulent conditions, this function may be disconnected via the TURB DAMP pushbutton. Note the effect and report.

F/CTL RUDDER TRIM RUNAWAY

– LATERAL CONTROL . . . . . USE TO LEVEL WINGS
– RUDDER . . . . . CENTRALIZE

Check the rudder position on the ECAM F/CTL page.

Note : This failure is mainly seen as an uncommanded roll (induced by yaw). In most conditions, the aircraft will self-stabilize in a steady heading sideslip.
For continued flight, either maintain the rudder central, or leave the aircraft in a steady stabilized heading sideslip. But ensure that all changes between the centralized rudder and the steady heading sideslip are done smoothly. As speed is reduced, the TLU may gradually open to allow more rudder to be applied by the trim runaway.

DURING APPROACH

● **BEFORE SLATS EXTENSION** :

– LOWEST SAFE SPEED . . . . . SELECT

In case of TLU failure, the TLU fully opens when slats are extended, and allows more rudder to be applied than is safe for the structure.
Full rudder is not permitted above 160 knots.

– RUDDER . . . . . MAINTAIN CENTRAL

Care must be taken to maintain the rudder steady, and approximately centralized during slats extension, until the TLU has released.

– SEC 1 . . . . . OFF THEN ON
– SEC 2 . . . . . OFF THEN ON
– FOR LDG . . . . . USE NORMAL CONF

F/CTL RUDDER JAM / RUDDER PEDAL JAM

Rudder jamming may be detected by undue (and adverse) pedal movement during rolling maneuvers.
This is because yaw damper orders can no longer be sent to the rudder, but are fed back to the pedals.
Use the ECAM F/CTL page for a visual check of the rudder position.
This procedure also applies to RUDDER PEDAL JAM cases.

FOR APPROACH

- AVOID LANDING WITH CROSSWIND from the side where the rudder is deflected.
- FOR LANDING ..... USE FLAP 2
- GPWS FLAP MODE ..... OFF
- **If all engines are operative** :
  - APPR SPEED ..... VLS + 10
  - SPEED and TRAJECTORY ..... STABILIZE ASAP
  - LDG DIST PROC ..... APPLY

R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*

- **In case of Engine Out** :
  - APPR SPEED ..... 160 knots
  - SPEED and TRAJECTORY ..... STABILIZE ASAP
  - AP + A/THR ..... OFF
  - **In case of a Go-Around** :
    - SPD ..... SELECT 160 knots
  - LDG DIST PROC ..... APPLY

R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*

ON GROUND

- DIFFERENTIAL BRAKING ..... USE ASAP

Do not use asymmetrical reverse.
R *Use the nosewheel steering handle below 100 knots only in case of RUDDER PEDAL*
R *JAM.*

F/CTL PRIM 1(2)(3)(SEC 1)(2) PITCH FAULT

Failure of the pitch channel in the associated computer.

Crew awareness.

F/CTL TURB DAMP FAULT

The turbulence damper function is inoperative.

Crew awareness.

STATUS

| INOP SYS
| TURB DAMPER

Note : When no caution is triggered, but abnormal vibrations are present in non-turbulent conditions, this function may be disconnected via the TURB DAMP pushbutton. Note the effect and report.

F/CTL RUDDER TRIM RUNAWAY

– LATERAL CONTROL . . . . . USE TO LEVEL WINGS
– RUDDER . . . . . CENTER

Check the rudder position on the ECAM F/CTL page.

Note : This failure is mainly seen as an uncommanded roll (induced by yaw). In most conditions, the aircraft will self-stabilize in a steady heading sideslip.

For continued flight, either maintain the rudder central, or leave the aircraft in a steady stabilized heading sideslip. But ensure that all changes between the centralized rudder and the steady heading sideslip are done smoothly. As speed is reduced, the TLU may gradually open to allow more rudder to be applied by the trim runaway.

– FOR LDG . . . . . USE NORMAL CONF

F/CTL RUDDER JAM / RUDDER PEDAL JAM

Use the ECAM F/CTL page for a visual check of the rudder position.
This procedure also applies to RUDDER PEDAL JAM cases.

FOR APPROACH

- AVOID LANDING WITH CROSSWIND from the side where the rudder is deflected.
- FOR LANDING ..... USE FLAP 2
- GPWS FLAP MODE ..... OFF

● **If all engines are operative** :
- SPEED and TRAJECTORY ..... STABILIZE ASAP
- LDG DIST PROC ..... APPLY

Refer to the QRH Part 2, or to the FCOM 3.02.80.

● **In case of an Engine-Out** :
- APPR SPEED ..... 170 knots
- SPEED and TRAJECTORY ..... STABILIZE ASAP
- AP + A/THR ..... OFF

■ **In case of a Go-Around** :
- SPD ..... SELECT 170 knots
- LDG DIST PROC ..... APPLY

Refer to the QRH Part 2, or to the FCOM 3.02.80.

ON GROUND

- DIFFERENTIAL BRAKING ..... USE ASAP

Do not use asymmetrical reverse.
Use the nosewheel steering handle below 100 knots only in case of RUDDER PEDAL JAM.

F/CTL RUD B(Y)(G) SERVO FAULT

Crew awareness.

Loss of the blue, green, or yellow rudder servojack.

F/CTL RUDDER FAULT

This warning is triggered, when the rudder is detected to be faulty or jammed in the 0° position.

MAX X WIND FOR LDG : 15 KT

- **AT LDG ROLL** :
  - DIFF BRAKING . . . . . AS RQRD

STATUS

MAX X WIND FOR LDG : 15 KT
APPR PROC
- GPWS FLAP MODE . . . . . OFF
- FOR LDG . . . . . USE FLAP 2
- **AT LDG ROLL** :
  - DIFF BRAKING . . . . . AS RQRD

CAT 1 ONLY

INOP SYS
RUDDER
AP 1 + 2
RUD TRIM
CAT 2

F/CTL RUD PEDAL FAULT

MAX X WIND FOR LDG : 15 KT

● **AT LDG ROLL :**

– DIFF BRAKING . . . . . AS RQRD

STATUS

MAX X WIND FOR LDG : 15 KT

APPR PROC

R ● **BEFORE AUTOLAND**

R – RUD TRIM . . . . . RESET

R *Manual landing is prefered, however autoland can*
R *be performed.*
R *The autopilot normally adjusts the rudder trim by*
R *comparing the rudder trim command with the*
R *feedback on the rudder pedal. As the rudder pedal*
R *is faulty, the autopilot cannot apply rudder trim on*
R *the rudder surface, but it still internally computes a*
R *rudder trim up to its maximum value. During the*
R *flight, the AP maintains the correct flight path, if*
R *necessary by a permanent rudder deflection (as the*
R *AP' trim order would have done). However, just*
R *before landing, during the align mode, the*
R *computed maximum rudder trim is added to the*
R *rudder demand and could cause lateral deviation.*
R *To prevent this, the rudder trim must be reset to its*
R *zero position, before the align mode, at around*
R *1000 feet.*
R *To perform this reset, the autopilot must be*
R *disconnected and then reconnected to perform the*
R *autoland.*

● **AT LDG ROLL :**

– DIFF BRAKING . . . . . AS RQRD

INOP SYS

RUD PEDAL

RUD TRIM

Loss of nosewheel steering via the pedals. However, it remains available using the handwheel. The rudder may be deflected by the yaw damper.

F/CTL RUD NORM CTL FAULT

RUD WITH CARE ABV 160 KT

The Back up Control Module takes over the rudder control but cannot ensure the rudder travel limit function. Therefore, rudder inputs must be limited at speeds above 160 knots, so as not to damage structure. However, aerodynamic limitations ensure that excessive load cannot be reached on the rudder.

STATUS

RUD WITH CARE ABV 160 KT
RUD BACKUP CTL
Rudder, via the rudder backup module.

F/CTL RUD PRIM (SEC) 1 FAULT

Crew awareness.

FUEL LEFT (RIGHT) PUMP 1 (2) LO PR

The corresponding standby pump automatically replaces the faulty main pump.

– PUMP (affected) . . . . . OFF

STATUS

INOP SYS
FUEL AFT XFR
L (R)FUEL PUMP 1(2)

R

FUEL L (R) STBY PUMP LO PR

– STBY PUMP (affected) . . . . . OFF

STATUS

INOP SYS
FUEL AFT XFR
L (R) FUEL STBY

R

FUEL L (R) WING PUMPS LO PR

– WING X FEED . . . . . ON
– PUMPS (affected) . . . . . OFF
– STBY PUMP (affected side) . . . . . OFF

● **WHEN L (R) TK FUEL RQRD :**

L (R) FUEL GRVTY FEED ONLY

– GRVTY FEED PROC . . . . . APPLY

STATUS

L (R) FUEL GRVTY FEED ONLY

INOP SYS
FUEL AFT XFR
L (R) FUEL PUMPS

GRVTY FUEL FEEDING

– ENG START SEL ..... IGN

AVOID NEGATIVE G FACTOR

● **DETERMINE GRVTY FEED CEILING :**

Depending when the fuel pumps have failed, the flight altitude must be limited to the following value :

Flight conditions at the time of gravity feeding	Gravity feed ceiling
Flight time from take-off greater than 30 min (fuel deaerated)	20 000 ft
Flight time from take-off less than 30 min (fuel non deaerated)	15 000 ft

DESCEND TO GRVTY FEED CEILING (if applicable)

● **WHEN REACHING GRVTY FEED CEILING :**

– WING X FEED ..... AUTO

FUEL LEFT (RIGHT) PUMP 1 (2) LO PR

The corresponding standby pump automatically replaces the faulty main pump.

– PUMP (affected) . . . . . OFF

STATUS

INOP SYS
FUEL AFT XFR
L (R)FUEL PUMP 1(2)

FUEL L (R) STBY PUMP LO PR

– STBY PUMP (affected) . . . . . OFF

STATUS

INOP SYS
FUEL AFT XFR
L (R) FUEL STBY

FUEL L (R) WING PUMPS LO PR

– WING X FEED . . . . . ON
– PUMPS (affected side) . . . . . OFF
– STBY PUMP (affected side) . . . . . OFF

● **WHEN L (R) TK FUEL RQRD :**

L (R) FUEL GRVTY FEED ONLY

– GRVTY FEED PROC . . . . . APPLY

STATUS

L (R) FUEL GRVTY FEED ONLY

INOP SYS
FUEL AFT XFR (only if center tank empty)
L (R) FUEL PUMPS

FUEL L (R) CTR PUMP LO PR

– CTR PUMP (affected) . . . . . OFF

STATUS

INOP SYS
L (R) CTR PUMP

GRVTY FUEL FEEDING

– ENG START SEL ..... IGN

AVOID NEGATIVE G FACTOR

● **DETERMINE GRVTY FEED CEILING :**

Depending when the fuel pumps have failed, the flight altitude must be limited to the following value :

Flight conditions at the time of gravity feeding	Gravity feed ceiling
Flight time from take-off greater than 30 min (fuel deaerated)	20 000 ft
Flight time from take-off less than 30 min (fuel non deaerated)	15 000 ft

DESCEND TO GRVTY FEED CEILING (if applicable)

● **WHEN REACHING GRVTY FEED CEILING :**

– WING X FEED ..... AUTO

FUEL ENG 1 (2) LP VALVE FAULT

Crew awareness

Valve open or closed disagree

FUEL APU LP VALVE FAULT

Crew awareness

Valve open or closed disagree

FUEL WING X FEED FAULT

Valve disagree

R ■ **If the WING X FEED is failed open :**

– FUEL IMBALANCE ..... MONITOR

■ **If the WING X FEED is failed closed :**

– FUEL IMBALANCE PROC ..... APPLY

Refer to FUEL IMBALANCE procedure (WING X FEED failed closed case).

STATUS

INOP SYS

F WING XFEED

FUEL L(R) WING TK LO LVL

– OUTR TK XFR ..... ON

● **If the TRIM TK not empty :**

– T TANK MODE ..... FWD

Fuel consumption is increased by approximately 1 %.

● **IF NO FUEL LEAK AND FUEL IMBALANCE :**

– WING X FEED ..... ON

– L(R) STBY PUMP (side with LO LVL) ..... OFF

– LEFT (RIGHT) PUMPS 1 + 2 (side with LO LVL) ..... OFF

STATUS

– LVL OFF FOR MAN FWD XFR |

Displayed, if the trim tank pump is failed.

FUEL L + R WING TK LO LVL

LAND ASAP

– OUTR TK XFR ..... ON

● **If TRIM TK not empty :**

– T TANK MODE ..... FWD

Fuel consumption is increased by approximately 1 %.

– WING PUMPS ..... ON

– WING X FEED ..... ON

STATUS

– LVL OFF FOR MAN FWD XFR |

Displayed, if the trim tank pump is failed.

FUEL ENG 1 (2) LP VALVE FAULT

Crew awareness

Valve open or closed disagree

FUEL APU LP VALVE FAULT

Crew awareness

Valve open or closed disagree

FUEL WING X FEED FAULT

Valve disagree

■ **If the WING X FEED is failed open :**

– FUEL IMBALANCE ..... MONITOR

■ **If the WING X FEED is failed closed :**

– FUEL IMBALANCE PROC ..... APPLY

Refer to FUEL IMBALANCE procedure (WING X FEED failed closed case).

STATUS

INOP SYS
F WING XFEED

FUEL L + R CTR PUMPS LO PR

– L + R CTR PUMP ..... OFF

● **WHEN EITHER INR < 17 T :**

– CTR TANK XFR ..... MAN

CTR TK XFR BY GRVTY

CTR TK UNUSABLE IF < 15 T

Note : The trim tank is transfered to the center tank unless the center tank is empty. If the quantity of trim and center tank fuel is less than 15 T, the trim tank fuel is unusable.

STATUS

CTR TK UNUSABLE IF < 15 T

INOP SYS
FUEL AFT XFR (only if CTR TK not empty)
F CTR PUMPS

FUEL L(R) WING TK LO LVL

- **If the center tank is not empty :**
  - CTR TANK XFR ..... MAN
- OUTR TK XFR ..... ON
- **If the TRIM TK not empty :**
  - T TANK MODE ..... FWD

  Fuel consumption is increased by approximately 1 %.
- **IF NO FUEL LEAK AND FUEL IMBALANCE :**
  - WING X FEED ..... ON
  - L(R) STBY PUMP (side with LO LVL) ..... OFF
  - LEFT (RIGHT) PUMPS 1 + 2 (side with LO LVL) ..... OFF

STATUS

- LVL OFF FOR MAN FWD XFR |

  Displayed, if the trim tank pump is failed.

FUEL L + R WING TK LO LVL

LAND ASAP

- **If the center tank is not empty :**
  - CTR TANK XFR ..... MAN
- OUTR TK XFR ..... ON
- **If the TRIM TK not empty :**
  - T TANK MODE ..... FWD

  Fuel consumption is increased by approximately 1 %.
  - WING PUMPS ..... ON
  - WING X FEED ..... ON

STATUS

- LVL OFF FOR MAN FWD XFR |

  Displayed, if the trim tank pump is failed.

R

FUEL OUTR TO INR FAULT

– OUTR TK XFR ..... ON

● **WHEN BOTH OUTR EMPTY :**

– OUTR TK XFR ..... AUTO

FUEL TRIM TK PUMP LO PR

– T TANK MODE ..... AUTO

FWD XFR BY GRVTY ONLY

	STATUS
– LVL OFF FOR MAN FWD XFR *The pitch attitude must be less than 3 degrees to permit a fuel forward transfer by gravity.*	INOP SYS F T.TK PUMP

R

FUEL EXCESS AFT CG

R – PITCH ATT ..... BELOW 3 DEG

R *This line is only displayed if the trim tank pump is failed. Decrease pitch attitude below*
R *3 degrees before initiating the forward transfer.*

R – T TANK MODE ..... FWD

R *Fuel consumption increases by approximately 1 %.*

	STATUS
R – LVL OFF FOR MAN FWD XFR R *Displayed if the trim tank pump is failed.*	

FUEL TRIM LINE FAULT

– T TANK FEED ..... ISOL
– APU MASTER SW ..... OFF
● **IF T TK ISOL AFTER TO :**
– T TANK FEED ..... AUTO
Trim tank may be recovered after takeoff, if manual isolation was selected on ground.

STATUS

APPR PROC	INOP SYS
● **IF T TANK NOT EMPTY :**	
– T TANK FEED ..... ISOL	FUEL AFT XFR APU (When T TK isol)

R

FUEL CTR TO INNER FAULT

This caution is triggered if an anomaly is detected during the center to inner transfer or, the left (right) outer inlet valve is failed open or, the left (right) inner inlet valve is failed open.

– L + R CTR PUMPS . . . . . OFF

● **WHEN EITHER INR < 17 T** :

– OUTR TK XFR (if OUTR inlet valve open) . . . . . ON

– CTR TANK XFR (if low level sensor failed) . . . . . MAN

– L + R CTR PUMPS . . . . . ON

● **WHEN CTR TK EMPTY** :

– CTR TANK XFR . . . . . AUTO

STATUS

– CTR TO INR : MAN ONLY | I

FUEL OUTR TO INR FAULT

– L + R CTR PUMPS (if center tank not empty) . . . . . OFF

– OUTR TK XFR . . . . . ON

● **WHEN BOTH OUTR EMPTY** :

– OUTR TK XFR . . . . . OFF

– L + R CTR PUMPS (if center tank not empty) . . . . . ON

Note : This caution is recalled when the center tanks become empty.

FUEL TRIM TK PUMP LO PR

– T TANK MODE . . . . . AUTO

FWD XFR BY GRVTY ONLY

STATUS

– LVL OFF FOR MAN FWD XFR | INOP SYS F T.TK PUMP

The pitch attitude must be less than 3 degrees to permit a fuel forward transfer by gravity.

FUEL EXCESS AFT CG

– PITCH ATT . . . . . BELOW 3 DEG

This line is only displayed if the trim tank pump is failed.

– T TANK MODE . . . . . FWD

Fuel consumption increases by approximately 1 %.

STATUS

– LVL OFF FOR MAN FWD XFR |

Displayed if the trim tank pump is failed.

FUEL TRIM LINE FAULT

– T TANK FEED ..... ISOL
– APU MASTER sw ..... OFF
● **IF T TK ISOL AFTER TO :**
– T TANK FEED ..... AUTO
Trim tank may be recovered after takeoff, if manual isolation was selected on ground.

STATUS

APPR PROC	INOP SYS
● **IF T TANK NOT EMPTY :**	FUEL AFT XFR
R – T TANK FEED ..... ISOL	APU (When T TK isol)

R ■ **If trim line isol valve failed open and CTR TK not empty**
– JETTISON ◁ ..... OFF
– L + R CTR PUMPS ..... OFF
– T TANK MODE ..... FWD
Note : If the trim tank pump is failed, this part of the procedure is replaced by :
. WHEN SPD > 270 KT AND NOT IN CLIMB :
– T TANK MODE ..... FWD

● **If CG is further forward than 32 % :**
Trim tank transfer has to be initiated in two steps.
● **WHEN T TANK < 2.4 T :**
– T TANK FEED ..... ISOL
– L + R CTR PUMPS ..... ON
● **WHEN CTR TK EMPTY :**
– L + R CTR PUMPS ..... OFF
– T TANK FEED ..... AUTO
● **WHEN T TANK EMPTY :**
– T TANK MODE ..... AUTO
– L + R CTR PUMPS ..... ON
– JETTISON ◁ ..... AS RQRD
Note : The caution is recalled at each step of the procedure, or when the tank becomes empty. If unsuccessful, and if fuel is trapped in the trim tank, refer to the TRIM TANK FUEL UNUSABLE procedure.

STATUS

INOP SYS
FUEL AFT XFR
R APU (When T TK isol)

FUEL T TANK XFR FAULT

– T TANK MODE (b) . . . . . FWD
– T TANK FEED (a) . . . . . OPEN

Fuel consumption is increased by approximately 1 %.

Either line (a) or (b) will be displayed.

(a) Displayed if the trim tank isolation valve is failed closed or if the trim tank low level sensor is failed.

(b) Displayed in all other cases.

Note : 1. If the trim tank pump is failed, the above procedure is preceded by :
WHEN SPD > 270 KT AND NOT IN CLIMB.
2. If forward transfer is initiated by T TANK FEED switch, do not completely empty the trim tank. This avoids drainage of the trim line and so ensures APU supply.

● **If either aft transfer valve is failed open :**
– FUEL IMBALANCE . . . . . MONITOR
● **IF TRIM TK QUANTITY NOT DECREASING :**
– T TANK MODE . . . . . AUTO
– T TANK FEED . . . . . ISOL
T TK FUEL UNUSABLE
These steps prevent uncommanded aft transfer via a failed aft transfer valve.

FUEL T TANK XFR FAULT (CONT'D)

- **WHEN T TANK EMPTY :**
  - T TANK FEED (a) . . . . . AUTO
  - T TANK MODE (b) . . . . . AUTO
  - **If either aft transfer valve is failed open :**
    - T TANK FEED . . . . . ISOL
- **IF T TK FUEL UNUSABLE :**
  - T TK UNUSBL PROC . . . . . APPLY

STATUS

- **WHEN SPD > 270 KT AND NOT IN CLIMB**
  - T TANK MODE . . . . . FWD
  - T TANK FEED . . . . . OPEN

Displayed if the trim tank pump is failed.

FUEL FUEL LO TEMP

Inner tank temperature is below – 37°C or outer tank temperature is below – 40°C or trim tank temperature is below – 40°C

■ **On the ground before takeoff :**

● **IF JET A :**

– DELAY T.O.

Do not takeoff until temperature is within limits.

■ **In flight**

● **If inner tank temp < – 37°C (automatic recall at – 44°C)**

Crew awareness.

● **If outer tank temp < – 40°C (automatic recall at – 47°C)**

● **IF JET A (not displayed at – 47°C – cf. note 1) :**

– OUTR TK XFR . . . . . ON

● **If trim tank temp < – 40°C (automatic recall at – 47°C)**

● **IF JET A (not displayed at – 47°C – cf. note 1) :**

– T TANK MODE . . . . . FWD

Note : 1. If the trim tank pump is failed, this part of the procedure is replaced by :

. WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE . . . . . FWD

2. Fuel consumption increases by approximately 1%.

● **IF NECESSARY :**

– TAT . . . . . INCREASE

Consider descending to a lower altitude and/or increasing Mach to increase TAT

Note : 1. ". IF JET A" is displayed once at the first time, i.e. when : Inner tank temperature is below – 37°C or outer tank temperature is below – 40°C or trim tank temperature is below – 40°C, since this temperature threshold is only applicable when JET A fuel is used.

2. If a fuel type other than Jet A is used, see 3.01.28 page 1 for the appropriate limits and apply the procedure according to those limits.

STATUS

● **WHEN SPD > 270 KT AND NOT IN CLIMB**

– T TANK MODE . . . . . FWD

Displayed only if the trim tank pump is failed.

FUEL T TANK XFR FAULT (CONT'D)

R ● **If CG forward of 32 % :**
R *Trim tanks transfer has to be done in two steps.*
R ● **WHEN T TANK < 2.4 T :**
R – T TANK MODE (b) . . . . . AUTO
R – T TANK FEED (a) . . . . . AUTO
R *This stops the transfer after the first step.*
R ● **WHEN CTR TANK EMPTY :**
R – T TANK MODE (b) . . . . . FWD
R – T TANK FEED (a) . . . . . OPEN
R *If the trim tank pump is failed or not installed, the above step is preceded by : WHEN CTR TANK EMPTY AND WHEN SPD > 270 KT AND NOT IN CLIMB.*
R ● **WHEN T TANK EMPTY :**
R – T TANK MODE (b) . . . . . AUTO
R – T TANK FEED (a) . . . . . AUTO
R ● **If either aft transfer valve is failed open :**
R – T TANK FEED . . . . . ISOL
R ● **IF T TK FUEL UNUSABLE :**
R – T TK UNUSBL PROC . . . . . APPLY

STATUS

● **WHEN SPD > 270 KT AND NOT IN CLIMB**
– T TANK MODE . . . . . FWD
– T TANK FEED . . . . . OPEN
Displayed if the trim tank pump is failed.

FUEL FUEL LO TEMP

Inner tank temperature is below – 37°C or outer tank temperature is below – 40°C or trim tank temperature is below – 40°C

■ **On the ground before takeoff :**

● **IF JET A FUEL :**

– DELAY T.O.

Do not takeoff until temperature is within limits.

■ **In flight**

● **If inner tank temp < – 37°C (automatic recall at – 44°C)**

● **IF JET A FUEL (not displayed at – 44°C – cf. note 1) :**

– CTR TANK XFR . . . . . MAN

● **If outer tank temp < – 40°C (automatic recall at – 47°C)**

● **IF JET A FUEL (not displayed at – 47°C – cf. note 1) :**

– OUTR TK XFR . . . . . ON

Note : If center tank is not empty, center tank pumps must be selected OFF to avoid inadvertent fuel transfer from center to outer tanks.

● **If trim tank temp < – 40°C (automatic recall at – 47°C)**

● **IF JET A FUEL (not displayed at – 47°C – cf. note 1) :**

– T TANK MODE . . . . . FWD

Note : 1. If the trim tank pump is failed this part of the procedure will be replaced by :

. WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE . . . . . FWD

2. If the CG is further forward than 26 %, the CG should be monitored during the forward transfer, ensuring forward CG limits are not exceeded.

3. Fuel consumption increases by approximately 1 %.

● **IF NECESSARY :**

– TAT . . . . . INCREASE

Consider descending to a lower altitude and/or increasing Mach to increase TAT

Note : 1. ". IF JET A" is displayed once at the first time, i.e. when :

Inner tank temperature is below – 37°C or outer tank temperature is below – 40°C or trim tank temperature is below – 40°C, since this temperature threshold is only applicable when JET A fuel is used.

2. If a fuel type other than Jet A is used, see 3.01.28 page 1 for the appropriate limits and apply the procedure according to those limits.

STATUS

● **WHEN SPD > 270 KT AND NOT IN CLIMB**

– T TANK MODE . . . . . FWD

Displayed only if the trim tank pump is failed or not installed.

FUEL FCMC 1 (2) FAULT

Crew awareness

STATUS

| INOP SYS
| FCMC 1(2)

FUEL FCMC 1 + 2 FAULT

Transfers are controlled using the T TANK MODE, and the OUTR XFR pushbutton switches.

– FCMC 1+2 . . . . . RESET

– WEIGHT/CG . . . . . INITIALIZE

In flight, after a dual FCMC reset, the weight and CG displayed on the FUEL PRED page are those computed by the FE.

R *GW and CG must be re-initialized in the FCMC by manually re-entering in the FUEL PRED*
R *page these values.*

FUEL TK XFR : MAN ONLY

● **IF CG AFT 32 % :**

Read the CG on the MCDU FUEL PRED page.

– T TANK MODE . . . . . FWD

Fuel consumption increases by approximately 1 %.

Note : If the trim tank pump is failed, this part of the procedure is replaced by :

· IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :
- T TANK MODE ..... FWD

● **WHEN FOB BELOW 60 T :**

Determine FOB from engine start fuel minus fuel used

– OUTR TK XFR . . . . . ON

● **WHEN FL < 250 IN DESCENT :**

– T TANK MODE . . . . . FWD

Note : If the trim tank pump is failed, this part of the procedure is replaced by :

· WHEN FL < 250 IN DESCENT AND SPD > 270 KT :
- T TANK MODE ..... FWD

STATUS

– LVL OFF FOR MAN FWD XFR | INOP SYS
Displayed if the trim tank pump is failed. | FCMC 1+2

FUEL TK XFR : MAN ONLY

FUEL ZFW ZFCG DISAGREE

This caution is triggered in case of disagree between ZFW or ZFCG values from FMGC 1 and 2.

– FMGC VALUES . . . . . CONFIRM

Confirm that the ZFW and ZFCG values from each FMGC are the same as the loadsheet values.

FUEL APU AFT PUMP FAULT

● **IF APU RQRD :**

MAX FL 250

These lines are displayed on ECAM if the trim tank is not empty.

STATUS

● **IF T TANK NOT EMPTY :**

APU AVAIL BELOW FL 250 |

FUEL ABNORM MAN FWD XFR

This warning is triggered when the T TANK MODE pushbutton is selected FWD or when the TRIM TANK FEED selector is set OPEN if :

– The trim tank pump is not available and

– The aircraft pitch attitude is above 3.4 degrees for more than 30 seconds.

This warning is not triggered in case of inner tank low level or in case of AFT CG warning.

● **FOR SPD < 270 KT OR IN CLIMB :**

– T TANK MODE . . . . . AUTO

– T TANK FEED . . . . . AUTO

● **WHEN SPD > 270 KT AND NOT IN CLIMB :**

– T TANK MODE . . . . . FWD

– T TANK FEED . . . . . OPEN

FUEL NO WEIGHT/CG DATA

This caution is triggered at engine start if no WEIGHT/CG has been entered by the crew.

– WEIGHT/CG . . . . . INITIALIZE

FUEL MAN XFR COMPLETED

The outers tanks are empty, the manual OUTR TK XFR pushbutton is ON.

– OUTR TK XFR . . . . . AUTO

FUEL FCMC 1 (2) FAULT

Crew awareness

STATUS

| INOP SYS
| FCMC 1(2)

FUEL FCMC 1 + 2 FAULT

Transfers are controlled using the T TANK MODE, and the OUTR XFR pushbutton switches.

– FCMC 1 + 2 . . . . . RESET

– WEIGHT/CG . . . . . INITIALIZE

In flight, after a dual FCMC reset, the weight and CG displayed on the FUEL PRED page are those computed by the FE.

R *The GW and CG must be re-initialized in the FCMC by manually re-entering in the FUEL*
R *PRED page these values.*

FUEL TK XFR : MAN ONLY

● **IF CG AFT 32 % :**

Read the CG on the MCDU FUEL PRED page.

– T TANK MODE . . . . . FWD

Fuel consumption increases by approximately 1 %.

Note : If the trim tank pump is failed, this part of the procedure is replaced by :

· IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :

- T TANK MODE . . . . . FWD

● **WHEN FOB BELOW 60 T :**

Determine FOB from engine start fuel minus fuel used.

– CTR TANK XFR . . . . . MAN

– OUTR TK XFR . . . . . ON

● **WHEN FL < 250 IN DESCENT**

– T TANK MODE . . . . . FWD

Note : If the trim tank pump is failed, this part of the procedure is replaced by :

· WHEN FL < 250 IN DESCENT AND SPD > 270 KT :

- T TANK MODE . . . . . FWD

STATUS

● **WHEN SPD > 270 KT AND NOT IN CLIMB**

– T TANK MODE . . . . . FWD | INOP SYS FCMC 1+2

FUEL TK XFR : MAN ONLY

FUEL ZFW ZFCG DISAGREE

This caution is triggered in case of disagree between ZFW or ZFCG values from FMGC 1 and 2.

– FMGC VALUES ..... CONFIRM
Confirm that the ZFW and ZFCG values from each FMGC are the same as the loadsheet values.

FUEL APU AFT PUMP FAULT

● **IF APU RQRD :**
MAX FL 250
These lines are displayed on ECAM if the trim tank is not empty.

STATUS

● **IF T TANK NOT EMPTY :**
APU AVAIL BELOW FL 250 |

FUEL ABNORM MAN FWD XFR

This warning is triggered when the T TANK MODE pushbutton is selected FWD or when the TRIM TANK FEED selector is set OPEN if :
– The trim tank pump is not available and
– The aircraft pitch attitude is above 3.4 degrees for more than 30 seconds.
This warning is not triggered in case of inner tank low level or in case of AFT CG warning.

● **FOR SPD < 270 KT OR IN CLIMB :**
– T TANK MODE ..... AUTO
– T TANK FEED ..... AUTO

● **WHEN SPD > 270 KT AND NOT IN CLIMB :**
– T TANK MODE ..... FWD
– T TANK FEED ..... OPEN

FUEL NO WEIGHT/CG DATA

This caution is triggered at engine start if no WEIGHT/CG has been entered by the crew.

– WEIGHT/CG ..... INITIALIZE

FUEL MAN XFR COMPLETED

The center and outers tanks are empty, the manual XFR pushbuttons are ON.

– CTR TANK XFR ..... AUTO
– OUTR TK XFR ..... AUTO

FUEL LEAK

A fuel leak may either be detected by :

R · *The sum of FOB and F. USED significantly less than FOB at departure or decreasing, or*
· *Passenger observation (fuel spray from engine or from wing tip), or*
· *Total fuel quantity decreasing at an abnormal rate, or*
· *A fuel imbalance, or*
· *A tank emptying too fast (leak from engine, or a hole in a tank), or*
· *A tank overflowing (due to a pipe rupture in a tank), or*
R · *An excessive fuel flow (leak from engine), or*
· *A smell of fuel in the cabin.*

R *If visibility permits, a visual check from the cabin may enable identification of the leak*
R *source.*

WHEN A LEAK IS CONFIRMED

LAND ASAP

■ **LEAK FROM ENGINE :**

– THR LEVER (of affected engine) ..... IDLE
– ENG MASTER (of affected engine) ..... OFF
R – WING X-FEED ..... USE AS RQRD
The crossfeed valve can be opened for re-balancing, or to allow use of the fuel from both wings. Do not restart the engine.

■ **LEAK NOT FROM ENGINE or LEAK NOT LOCATED :**

– WING X FEED ..... AUTO
The crossfeed valve must remain closed to prevent the leak from affecting both sides. Selecting AUTO maintains the crossfeed valve closed.
– L + R INR TK SPLIT ..... ON
Shut the INR TK SPLIT valves to isolate the fuel leak.
– T TANK MODE (if not empty) ..... FWD
R *A manual trim tank transfer must be done, to symmetrically transfer fuel to both inner tanks, and avoid automatic transfer to only the least full inner tank.*

● **When Trim Tank empty :**

R – T TANK MODE ..... AUTO
– T TK FEED ..... ISOL

FUEL LEAK (CONT'D)

– DESCEND TO GRVTY FUEL FEEDING CEILING
See the gravity fuel feeding procedure.
– ENG START SEL . . . . . IGN
– ALL TK PUMPS (when gravity ceiling is reached) . . . . OFF
In almost all cases, switching the pumps off will prevent any further loss of fuel. All pumps must be switched off, even if the leak is from only one wing, as there are some failures on one side that will result in fuel loss from the other side.
– AVOID NEGATIVE G FACTOR

CAUTION
Do not apply the FUEL IMBALANCE procedure : Even with one inner tank full/one inner tank empty, no special procedure is required for approach and landing.

● **If one engine flames out when there is still fuel in the feeding tank :**
R – ALL TK PUMPS . . . . . ON
R – LEAK FROM ENGINE proc . . . . . APPLY
Note : The flameout is due to air suction from a leak from the engine.

FOR LANDING

CAUTION
– Notify the ATC, and do not use reverse.

FUEL LEAK

A fuel leak may either be detected by :

R *· The sum of FOB and F. USED significantly less than FOB at departure or decreasing, or*
· Passenger observation (fuel spray from engine or from wing tip), or
· Total fuel quantity decreasing at an abnormal rate, or
· A fuel imbalance, or
· A tank emptying too fast (leak from engine, or a hole in a tank), or
· A tank overflowing (due to a pipe rupture in a tank), or
R *· An excessive fuel flow (leak from engine), or*
· A smell in the cabin.

R *If visibility permits, a visual check from the cabin may enable identification of the leak*
R *source.*

WHEN A LEAK IS CONFIRMED

LAND ASAP

■ **LEAK FROM ENGINE :**

– THR LEVER (of affected engine) ..... IDLE
– ENG MASTER (of affected engine) ..... OFF
R – WING X-FEED ..... USE AS RQRD
The crossfeed valve can be opened for re-balancing, or to allow use of the fuel from both wings. Do not restart the engine.

■ **LEAK NOT FROM ENGINE or LEAK NOT LOCATED :**

– WING X FEED ..... AUTO
The crossfeed valve must remain closed to prevent the leak from affecting both sides. Selecting AUTO maintains the crossfeed valve closed.
R – L + R INR TK SPLIT ..... ON
R *Shut the INR TK SPLIT valves to isolate the fuel leak.*

● **If Center Tank or Trim Tank not empty :**

R – CTR TK XFR ..... MAN
R – T TANK MODE (if not empty) ..... FWD
R *A manual trim tank transfer(via the center tank), and/or manual center tank*
R *transfer must be done, to symmetrically transfer fuel to both inner tanks, and*
R *avoid automatic transfer to only the least full inner tank.*

R ● **When Trim Tank empty :**

R – T TANK MODE ..... AUTO
– T TK FEED ..... ISOL

● **When Center Tank empty :**

R – CTR TK XFR ..... AUTO

FUEL LEAK (CONT'D)

– DESCEND TO GRVTY FUEL FEEDING CEILING
See the gravity fuel feeding procedure.
– ENG START SEL . . . . . IGN
– ALL TK PUMPS (when gravity ceiling is reached) . . . . OFF
In almost all cases, switching the pumps off will prevent any further loss of fuel. All pumps must be switched off, even if the leak is from only one wing, as there are some failures on one side that will result in fuel loss from the other side.
– AVOID NEGATIVE G FACTOR

CAUTION
Do not apply the FUEL IMBALANCE procedure : Even with one inner tank full/one inner tank empty, no special procedure is required for approach and landing.

● **If one engine flames out when there is still fuel in the feeding tank :**
R – ALL TK PUMPS . . . . . ON
R – LEAK FROM ENGINE proc . . . . . APPLY
Note : The flameout is due to air suction from a leak from the engine.

FOR LANDING

CAUTION
– Notify the ATC, and do not use reverse.

FUEL L(R) INNER TK HI TEMP

■ **On ground before takeoff :**

● **If JET B FUEL :**

– DELAY T.O

– ENG MASTER (affected side) ..... OFF

– APU ..... AS RQRD

R *Note : The ECAM caution is triggered at 45°C (without procedure) and*
R *automatically recalled at 49°C (with the procedure for JET B) and 60°C*
R *(with the procedure for all fuels).*
For JET A, delay takeoff when fuel temperature reaches 55°C.

R ■ **in flight :**

R Crew awareness.

FUEL WING TK OVERFLOW

– T TANK FEED ..... ISOL

To prevent forward transfer into the inner tanks.

● **WHEN EITHER INR < 17 T :**

– T TANK FEED ..... AUTO

TRIM TANK FUEL UNUSABLE

– T TANK MODE ..... FWD
– T TANK FEED ..... OPEN
● **If TRIM TANK FUEL is still unusable :**
– OUTR TK XFR ..... ON
The CG moves forward.
MAXIMUM FLIGHT TIME ..... 4 HOURS
After 4 hours, depending on the fuel distribution, the aft CG limit may be reached.

FOR LANDING

● **If CG > 39 % :**
– APPR SPD ..... VLS + 10 KT
– LDG DIST PROC ..... APPLY
R *Refer to QRH Part 2, or to the FCOM 3.02.80.*
To keep the nosewheel on the runway and prevent the aircraft from sitting on its tail, apply continuous braking throughout the landing rollout.

FUEL FU/FOB DISCREPANCY

Difference between initial FOB and current FOB plus fuel used data is more than 3500 kg.

– FUEL LEAK . . . . . PROC APPLY

FUEL L(R) INNER TK HI TEMP

■ **On ground, before takeoff :**

● **If JET B FUEL :**

– DELAY T.O

– ENG MASTER (affected side) . . . . . OFF

– APU . . . . . AS RQRD

Note : The ECAM caution is triggered at 45°C (without procedure), and automatically recalled at 49°C (with procedure for JET B) and 60°C (with the procedure for all fuels).

For JET A, delay takeoff when fuel temperature reaches 55°C.

■ **In flight :**

Crew awareness.

FUEL WING TK OVERFLOW

– L + R CTR PUMPS . . . . . OFF

To stop the center to inner transfer.

– T TANK MODE (only if CTR TANK empty) . . . . . FWD

To force transfer into the center tank, and prevent forward transfer into the inner tanks.

Note : If the trim tank pump is failed, this part of the procedure is replaced by :

. WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE . . . . . FWD

● **WHEN EITHER INR < 17 T :**

– L + R CTR PUMPS . . . . . ON

STATUS

● **WHEN SPD > 270 KT AND NOT IN CLIMB:**

– T TANK MODE . . . . . FWD

Displayed, if the trim tank pump is failed.

TRIM TANK FUEL UNUSABLE

– T TANK MODE ..... FWD
– T TANK FEED ..... OPEN

● **If TRIM TANK FUEL is still unusable :**

– OUTR TK XFR ..... ON
The CG moves forward.

– CTR TK PUMPS ..... OFF

R *If the center tank is not yet empty, maintain fuel in the aircraft's center tank by*
R *switching off the pumps. This will reduce the effect of unusable trim tank fuel on the*
R *aircraft's center of gravity.*

MAXIMUM FLIGHT TIME ..... 4 HOURS
After 4 hours, depending on the fuel distribution, the aft CG limit may be reached.

FOR LANDING

● **If CG > aft CG limit shown below :**

– APPR SPD ..... VLS + 10 KT
– LDG DIST PROC ..... APPLY

R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*
To keep the nosewheel on the runway and prevent the aircraft from sitting on its tail, apply continuous braking throughout the landing rollout.

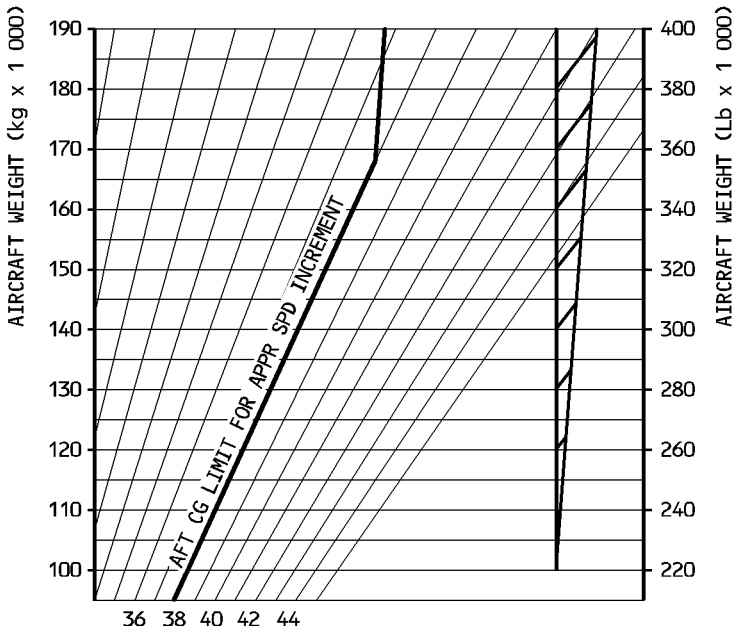

FUEL IMBALANCE

– FOB ..... CHECK

Compare the FOB+FU with the FOB at departure. If the difference is significant, or if the FOB+FU decreases, suspect a fuel leak.

CAUTION

A fuel imbalance may indicate a fuel leak. Do not apply this procedure, if a fuel leak is suspected. Refer to the FUEL LEAK procedure.

– WING X FEED ..... ON

■ **If the WING X FEED valve is open :**

● **On the lighter side :**

– (ALL) FUEL PUMPS (STBY then NORM) ..... OFF

● **When fuel balanced :**

– PUMPS (NORM then STBY) ..... ON

– WING X FEED ..... AUTO

■ **If the WING X FEED valve is failed closed :**

– OUTER TK XFR ..... ON

This will allow inner fuel tanks' communication via the refuelling gallery.

– BANK ANGLE .... 3 DEG WING DOWN ON LIGHTER SIDE

Fuel transfer only occurs if the bank angle is at, or above, 2 to 3 degrees. Modulate the fuel imbalance through the bank angle.

– RUDDER TRIM ..... USE

Use rudder trim to get constant course and neutral stick.

FUEL IMBALANCE

– FOB ..... CHECK

Compare the FOB+FU with the FOB at departure. If the difference is significant, or if the FOB+FU decreases, suspect a fuel leak.

CAUTION

A fuel imbalance may indicate a fuel leak. Do not apply this procedure, if a fuel leak is suspected. Refer to the FUEL LEAK procedure.

– WING X FEED ..... ON

■ **If the WING X FEED valve is open :**

● **On the lighter side :**

– (ALL) FUEL PUMPS (STBY then NORM) ..... OFF

● **When fuel balanced :**

– PUMPS (NORM then STBY) ..... ON

– WING X FEED ..... AUTO

■ **If the WING X FEED valve is failed closed :**

– OUTER TK XFR ..... ON

This will allow inner fuel tanks' communication via the refuelling gallery.

– BANK ANGLE .... 3 DEG WING DOWN ON LIGHTER SIDE

Fuel transfer only occurs if the bank angle is at, or above, 2 to 3 degrees. Modulate the fuel imbalance through the bank angle.

– RUDDER TRIM ..... USE

Use rudder trim to get constant course and neutral stick.

FUEL JETTISON NOT CLOSED

– JETTISON ..... OFF

● **IF JETTISON CONFIRMED :**

Jettison is confirmed, if the quantity still decreases at an abnormally high rate, or if fuel can be seen coming from the jettison outlet.

– L + R CTR PUMPS ..... OFF

Selecting the center tank pumps off stops jettison.

● **WHEN EITHER INR < 17 T :**

– CTR TANK XFR ..... MAN

Allows some center tank fuel to be recovered.

CTR TK XFR BY GRVTY
CTR TK UNUSABLE IF < 15 T

STATUS

CTR TK UNUSABLE IF < 15 T

INOP SYS
FUEL CTR PUMPS
FUEL AFT XFR

FUEL JETTISON FAULT

Jettison system is inhibited.
JETTISON NOT AVAIL

HYD G RSVR LO AIR PR/OVHT/LO LVL

■ **RSVR OVHT or LO LVL :**

Note : False fluid temperature signal leads to undue related pump FAULT lt illumination without ECAM warning.

– GREEN PUMPS (ENG 1 + 2 + ELEC) . . . . . OFF

■ **RSVR LO AIR PR :**

● **IF PRESS FLUCTUATES :**

– GREEN PUMPS (ENG 1 + 2 + ELEC) . . . . . OFF

G SYS LO PR

Secondary Failure
* WHEEL
* F/CTL

Note : · As a general rule, do not manually select an HYD ELEC PUMP ON, except temporarily, to retract the SPLRS if they remain out after an hydraulic failure.
· On ground, avoid to retract the FLAPS when the aircraft is moving, to prevent a loss of alternate brakes efficiency.

HYD G RSVR LO AIR PR/OVHT/LO LVL (CONT'D)

STATUS

APPR PROC

■ **If system lost by RSVR LO AIR PR :**

The probability of cavitation increases with altitude. Therefore, it may be possible to restore the system after descending to a lower altitude.

– GREEN ENG 1 + 2 PUMPS . . . ON

● **IF HYD NOT RECOVERED :**

Same as RSVR LO LVL

■ **If system lost by RSVR OVHT :**

● **IF GREEN OVHT OUT :**

– GREEN ENG 1 + 2 PUMPS .. ON

● **IF HYD NOT RECOVERED :**

Same as RSVR LO LVL

■ **If system lost by RSVR LO LVL :**

● **BEFORE S/F EXTENSION :**

– YELLOW ELEC PUMP . . . . . OFF

Switch OFF the yellow electrical pump to avoid flight control jerk, in case Engine 2 is additionally lost.

● **FOR L/G GRVTY EXTN :**

MAX SPEED . . . . . 200 KT

– LDG GRVTY EXTN . . . . . DOWN

● **WHEN L/G DOWNLOCKED :**

– L/G . . . . . DOWN

– LDG DIST PROC . . . . . APPLY

R *Refer to the QRH part 2, or to the FCOM 3.02.80*

SLATS/FLAPS SLOW

CAT 3 SINGLE ONLY

INOP SYS

GREEN HYD
L/G RETRACT
PART SPLRS
CAT 3 DUAL
N/W STRG
AUTO BRK
NORM BRK
YAW DAMPER 1

HYD G RSVR LO AIR PR/OVHT/LO LVL

■ **RSVR OVHT or LO LVL :**

Note : False fluid temperature signal leads to undue related pump FAULT lt illumination without ECAM warning.

– GREEN PUMPS (ENG 1 + 2 + ELEC) . . . . . OFF

■ **RSVR LO AIR PR :**

● **IF PRESS FLUCTUATES :**

– GREEN PUMPS (ENG 1 + 2 + ELEC) . . . . . OFF

G SYS LO PR

Secondary Failure
* WHEEL
* F/CTL

Note : · As a general rule, do not manually select an HYD ELEC PUMP ON, except temporarily, to retract the SPLRS if they remain out after an hydraulic failure.
· On ground, avoid to retract the FLAPS when the aircraft is moving, to prevent a loss of alternate brakes efficiency.

HYD G RSVR LO AIR PR/OVHT/LO LVL (CONT'D)

STATUS

APPR PROC

■ **Sys lost by RSVR LO AIR PR :**

The probability of cavitation increases with altitude. Therefore, it may be possible to restore the system after descending to a lower altitude.

– GREEN ENG 1 + 2 PUMPS . . . ON

● **IF HYD NOT RECOVERED :**

Same as RSVR LO LVL

■ **Sys lost by RSVR OVHT :**

● **IF GREEN OVHT OUT :**

– GREEN ENG 1 + 2 PUMPS .. ON

● **IF HYD NOT RECOVERED :**

Same as RSVR LO LVL

■ **Sys lost by RSVR LO LVL :**

R ● **FOR L/G GRVTY EXTN :**

MAX SPEED . . . . . 200 KT

– LDG GRVTY EXTN . . . . . DOWN

● **WHEN L/G DOWNLOCKED :**

– L/G (lever) . . . . . DOWN

– LDG DIST PROC . . . . . APPLY

R *Refer to the QRH Part 2, or to the FCOM*

R *3.02.80.*

SLATS/FLAPS SLOW

CAT 3 SINGLE ONLY

INOP SYS

GREEN HYD

L/G RETRACT

PART SPLRS

CAT 3 DUAL

N/W STRG

AUTO BRK

NORM BRK

HYD B RSVR LO AIR PR/OVHT/LO LVL

LAND ASAP

"LAND ASAP" is only triggered if the green hydraulic system is supplied by the RAT.

■ **RSVR OVHT or LO LVL :**

Note : A false fluid temperature signal leads to undue related pump FAULT light illumination, without an ECAM warning.

– BLUE PUMPS (ENG 1 + ELEC) . . . . . OFF

■ **RSVR LO AIR PR :**

● **IF PRESS FLUCTUATES :**

– BLUE PUMPS (ENG 1 + ELEC) . . . . . OFF

B SYS LO PR

● **If G HYD SYS is supplied by the RAT :**

– A/SKID NWS . . . . . OFF
– MAX BRK PR . . . . . 1000 PSI
– BRK B ACCU PR ONLY

Secondary Failure
* F/CTL

Note : As a general rule, do not manually select an HYD ELEC PUMP ON, except temporarily, to retract the spoilers if they remain out after a hydraulic failure.

STATUS

R MAX BRK PR . . . . . 1000 PSI (a)

HYD B RSVR LO AIR PR/OVHT/LO LVL (CONT'D)

STATUS

APPR PROC

■ **Sys lost by RSVR LO AIR PR :**

The probability of cavitation increases with altitude. Therefore, it may be possible to restore the system after descending to a lower altitude.

– BLUE ENG 1 PUMP . . . . . ON

● **IF HYD NOT RECOVERED :**

Same as RSVR LO LVL

■ **Sys lost by RSVR OVHT :**

● **IF BLUE OVHT OUT :**

– BLUE ENG 1 PUMP . . . . . ON

● **IF HYD NOT RECOVERED :**

Same as RSVR LO LVL

■ **Sys lost by RSVR LO LVL :**

R – LDG DIST PROC . . . . . APPLY

SLATS SLOW
BRK B ACCU PR ONLY (a)
CAT 3 SINGLE ONLY

INOP SYS

BLUE HYD
PART SPLRS
REV 1 (PW or RR engines)
CAT 3 DUAL
ALTN BRK
AUTO BRK (a)
ANTI SKID (a)
NORM BRK (a)
N/W STRG (a)

(a) If the G HYD SYS is supplied by RAT.

Note : *Following a blue hydraulic system failure, the parking brake may be inoperative due to blue accumulator low pressure.*

HYD Y RSVR LO AIR PR/OVHT/LO LVL

LAND ASAP

"LAND ASAP" is only triggered, if the green hydraulic system is supplied by the RAT.

■ **RSVR OVHT or LO LVL :**

Note : False fluid temperature signal leads to undue related pump FAULT light illumination without ECAM warning.

– YELLOW PUMPS (ENG 2 + ELEC) . . . . . OFF

■ **RSVR LO AIR PR :**

● **IF PRESS FLUCTUATES :**

– YELLOW PUMPS (ENG 2 + ELEC) . . . . . OFF

Y SYS LO PR

Secondary Failure
* F/CTL

Note : As a general rule, do not manually select a HYD ELEC PUMP ON, except temporarily, to retract the SPLRS if they remain out after a hydraulic failure.

STATUS

APPR PROC

■ **Sys lost by RSVR LO AIR PR :**

The probability of cavitation increases with altitude. Therefore, it may be possible to restore the system after descending to a lower altitude.

– YELLOW ENG 2 PUMP . . . . . ON

● **IF HYD NOT RECOVERED :**

Same as RSVR LO LVL

■ **Sys lost by RSVR OVHT :**

● **IF YELLOW OVHT OUT :**

– YELLOW ENG 2 PUMP . . . . . ON

● **IF HYD NOT RECOVERED :**

Same as RSVR LO LVL

■ **Sys lost by RSVR LO LVL :**

– LDG DIST PROC . . . . . APPLY

FLAPS SLOW
CAT 3 SINGLE ONLY

INOP SYS

YELLOW HYD
PART SPLRS
REV 2 (PW or RR engines)
CAT 3 DUAL
YAW DAMPER 2
CARGO DOORS (if Y LO LVL)

HYD Y RSVR LO AIR PR/OVHT/LO LVL

LAND ASAP

"LAND ASAP" is only triggered, if the green hydraulic system is supplied by the RAT.

■ **RSVR OVHT or LO LVL :**

Note : False fluid temperature signal leads to the undue illumination of the related pump FAULT light, without the ECAM warning.

– YELLOW PUMPS (ENG 2 + ELEC) . . . . . OFF

■ **RSVR LO AIR PR :**

● **IF PRESS FLUCTUATES :**

– YELLOW PUMPS (ENG 2 + ELEC) . . . . . OFF

Y SYS LO PR

Secondary Failure
* F/CTL

Note : As a general rule, do not manually select a HYD ELEC PUMP ON, except temporarily to retract the SPLRS, if they remain out after a hydraulic failure.

STATUS

APPR PROC

■ **Sys lost by RSVR LO AIR PR :**

The probability of cavitation increases with altitude. Therefore, it may be possible to restore the system after descending to a lower altitude.

– YELLOW ENG 2 PUMP . . . . . ON

● **IF HYD NOT RECOVERED :**

Same as RSVR LO LVL

■ **Sys lost by RSVR OVHT :**

● **IF YELLOW OVHT OUT :**

– YELLOW ENG 2 PUMP . . . . . ON

● **IF HYD NOT RECOVERED :**

Same as RSVR LO LVL

■ **Sys lost by RSVR LO LVL :**

– LDG DIST PROC . . . . . APPLY

FLAPS SLOW
CAT 3 SINGLE ONLY

INOP SYS

YELLOW HYD
PART SPLRS
REV 2 (PW or RR engines)
CAT 3 DUAL
CARGO DOORS
(if Y LO LVL)

HYD G + B SYS LO PR

LAND ASAP

– RAT ..... MAN ON

"RAT MAN ON" is only triggered on the ECAM in case of G + B or G + Y hydraulic system low level.

– CONSIDER RAT MAN USE

"CONSIDER RAT MAN USE" is not triggered in case of green reservoir overheat, or in case of G + B or G + Y hydraulic system low level.

Note : With the RAT extended, the green system is recovered. This permits slat extension recovery. However, green pressure will be lost when the speed drops below 140 knots.

At that time, the red "G + B SYS LO PR" warning will be triggered again, and antiskid will be lost. To anticipate the loss of antiskid, the ECAM "HYD B RSVR LO AIR PR/OVHT/LO LVL" procedure requests to select it OFF. With the RAT extended, fuel consumption increases by approximately 1 %.

MIN RAT SPD (if RAT extended) ..... 140 KT

– Affected PUMPS ..... OFF

SPD BRK ..... DO NOT USE

Due to the loss of one elevator.

– MANEUVER WITH CARE

To avoid high hydraulic demand on the remaining system.

Note : As a general rule, do not manually select HYD ELEC PUMP ON, except temporarily, to retract the spoilers if they remain out after a hydraulic failure.

F/CTL ALTN LAW (PROT LOST)

MAX SPEED 330/.82

Secondary Failure
* WHEEL
* F/CTL

STATUS

CONSIDER RAT MAN USE

"CONSIDER RAT MAN USE" is not triggered in case of green reservoir overheat, or in case of G + B or G + Y hydraulic system low level.

SPD BRK ..... DO NOT USE

MAX SPEED 330/.82

MIN RAT SPEED (if RAT extended) .. 140 KT

MANEUVER WITH CARE

MAX BRK PR ..... 1000 PSI

HYD G + B SYS LO PR (CONT'D)

STATUS

APPR PROC

■ **If system lost by RSVR LO AIR PR :**

– Affected ENG PUMP . . . . . ON

■ **If system lost by RSVR OVHT :**

● **IF GREEN OVHT OUT :**

– GREEN ENG 1 + 2 PUMPS .. ON

● **IF BLUE OVHT OUT :**

– BLUE ENG 1 PUMP . . . . . ON

■ **If HYD not recovered :**

● **BEFORE S/F EXTENSION :**

– YELLOW ELEC PUMP . . . . . OFF

Switch OFF the yellow electrical pump to avoid flight control jerk, in case Engine 2 is additionally lost.

– GPWS FLAP MODE (if S < 2) . OFF

● **FOR GO AROUND :**

– S/F JAMMED PROC . . . . APPLY

– FOR LDG (if S < 2) . . USE FLAP 2

– FOR LDG (if S ≥ 2) . . . USE FLAP 3

● **FOR L/G GRVTY EXTN :**

MAX SPEED . . . . . 200 KT

– L/G GRVTY EXTN . . . . . DOWN

● **WHEN L/G DOWNLOCKED :**

– L/G lever . . . . . DOWN

– APPR SPD (if S ≥ 1) . . VLS+10 KT

Approach speed increases, due to the loss of one elevator.

– LDG DIST PROC . . . . . APPLY

R *Refer to the QRH part 2, or to the FCOM 3.02.80*

HYD G + B SYS LO PR (CONT'D)

STATUS

ALTN LAW : PROT LOST

BRK B ACCU PR ONLY

7 full brake applications are available.

INCREASED FUEL CONSUMP

Fuel consumption increases by approximately 16 %, due to the inner ailerons in the upfloat position.

FLAPS SLOW

CAT 1 ONLY

Note : *Following a blue hydraulic system failure, the parking brake may be inoperative, due to blue accumulator low pressure.*

INOP SYS

F/CTL PROT
G + B HYD
ANTI SKID
L/G RETRACT
AP 1 + 2
SLATS
L ELEV
MOST SPLRS
REV 1
(PW/RR Eng)
L + R INR AIL
N/W STRG
AUTO BRK
NORM BRK
ALTN BRK
YAW DAMPER 1

HYD G + B SYS LO PR (CONT'D)

STATUS

ALTN LAW : PROT LOST

BRK B ACCU PR ONLY

7 full brake applications are available.

INCREASED FUEL CONSUMP

Fuel consumption increases by approximately 16 %, due to the inner ailerons in the upfloat position.

FLAPS SLOW

CAT 1 ONLY

Note : Following a blue hydraulic system failure, the parking brake may be inoperative, due to blue accumulator low pressure.

INOP SYS

F/CTL PROT
G + B HYD
ANTI SKID
L/G RETRACT
AP 1 + 2
SLATS
L ELEV
MOST SPLRS
REV 1
(PW/RR Eng)
L + R INR AIL
N/W STRG
AUTO BRK
NORM BRK
ALTN BRK

HYD G + Y SYS LO PR

LAND ASAP

– RAT ..... MAN ON

"RAT MAN ON" is only triggered on the ECAM in case of G + B or G + Y hydraulic system low level.

– CONSIDER RAT MAN USE

"CONSIDER RAT MAN USE" is not triggered in case of green reservoir overheat or in case of G + B or G + Y hydraulic system low level.

Note : With RAT extended, the green system is recovered. This permits to recover the flap extension.

However, green pressure will be lost when the speed will drop below 140 kt.

At that time, the red warning "G + Y SYS LO PR" will be triggered again.

With RAT extended, the fuel consumption is approximately increased by 1 %.

MIN RAT SPD (if RAT extended) ..... 140 KT

– Affected PUMPS ..... OFF

– USE RUD FOR TURN COORD

Due to the loss of yaw damper 1 + 2.

SPD BRK ..... DO NOT USE

Due to the loss of one elevator.

– MANEUVER WITH CARE

To avoid high hydraulic demand on the remaining system.

Note : As a general rule, do not manually select an HYD ELEC PUMP ON, except temporarily, to retract the spoilers if they remain out after an hydraulic failure.

F/CTL ALTN LAW (PROT LOST)

MAX SPEED 330/.82

Secondary Failure
* WHEEL
* F/CTL

STATUS

CONSIDER RAT MAN USE

"CONSIDER RAT MAN USE" is not triggered in case of green reservoir overheat or in case of G + B or G + Y hydraulic system low level.

SPD BRK ..... DO NOT USE

MAX SPEED 330/.82

MIN RAT SPEED (if RAT extended) .. 140 KT

MANEUVER WITH CARE

HYD G + Y SYS LO PR (CONT'D)

STATUS

APPR PROC

■ **If system lost by RSVR LO AIR PR :**
- Affected ENG PUMP . . . . . ON

■ **If system lost by RSVR OVHT :**

● **IF GREEN OVHT OUT :**
- GREEN ENG 1 + 2 PUMP . . ON

● **IF YELLOW OVHT OUT :**
- YELLOW ENG 2 PUMP . . . . . ON

■ **If HYD not recovered :**

● **BEFORE S/F EXTENSION :**
- YELLOW ELEC PUMP . . . . . OFF

Switch OFF yellow elec pump to avoid flight control jerk, if Engine 2 also fails.

● **If FLAPS < 3 :**
- GPWS FLAP MODE . . . . . OFF
- FOR LDG . . . . . USE FLAP 2

Selecting FLAP 2, instead of FLAP 3, permits VMAX display on PFD to be increased.

● **FOR GO AROUND :**
- S/F JAMMED PROC . . . . APPLY

● **If FLAPS = 3 :**
- FOR LDG . . . . . USE FLAP 3

● **FOR GO AROUND :**
- S/F JAMMED PROC . . . . APPLY

● **If FLAPS > 3 :**
- FOR LDG . . . . . USE FLAP FULL

● **FOR GO AROUND :**
- S/F JAMMED PROC . . . . APPLY

● **FOR L/G GRVTY EXTN :**

MAX SPEED . . . . . 200 KT
- LDG GRVTY EXTN . . . . . DOWN

HYD G + Y SYS LO PR

LAND ASAP

– RAT ..... MAN ON

"RAT MAN ON" is only triggered on the ECAM, in case of a G + B or G + Y hydraulic system low level.

– CONSIDER RAT MAN USE

"CONSIDER RAT MAN USE" is not triggered, in case of a green reservoir overheat, or in case of a G + B or G + Y hydraulic system low level.

Note : With the RAT extended, the green system is recovered. This enables recovery of the flap extension.

However, green pressure will be lost when the speed drops below 140 knots.

At that time, the red "G + Y SYS LO PR" warning will retrigger.

With the RAT extended, fuel consumption is increased by approximately 1 %.

MIN RAT SPD (if RAT extended) ..... 140 KT

– Affected PUMPS ..... OFF

SPD BRK ..... DO NOT USE

Due to the loss of one elevator.

– MANEUVER WITH CARE

To avoid high hydraulic demand on the remaining system.

Note : As a general rule, do not manually select a HYD ELEC PUMP ON, except temporarily, to retract the spoilers if they remain out after a hydraulic failure.

F/CTL ALTN LAW (PROT LOST)

MAX SPEED 330/.82

Secondary Failure
* WHEEL
* F/CTL

STATUS

CONSIDER RAT MAN USE

"CONSIDER RAT MAN USE" is not triggered, in case of a green reservoir overheat, or in case, of a G + B or G + Y hydraulic system low level.

SPD BRK ..... DO NOT USE

MAX SPEED 330/.82

MIN RAT SPEED (if RAT extended) .. 140 KT

MANEUVER WITH CARE

HYD G + Y SYS LO PR (CONT'D)

STATUS

APPR PROC

■ **If system lost by RSVR LO AIR PR :**
- Affected ENG PUMP . . . . . ON

■ **If system lost by RSVR OVHT :**

● **IF GREEN OVHT OUT :**
- GREEN ENG 1 + 2 PUMP . . ON

● **IF YELLOW OVHT OUT :**
- YELLOW ENG 2 PUMP . . . . . ON

■ **If HYD not recovered :**

R ● **BEFORE S/F EXTENSION and if**
R **ENG 2 S/D :**
- YELLOW ELEC PUMP . . . . . OFF

R *Switch OFF the yellow electrical pump to avoid*
R *flight control jerk, in case Engine 2 is lost.*

● **If FLAPS < 3 :**
- GPWS FLAP MODE . . . . . OFF
- FOR LDG . . . . . USE FLAP 2

Selecting FLAP 2, instead of FLAP 3, permits the VMAX display on PFD to be increased.

● **If FLAPS = 3 :**
- FOR LDG . . . . . USE FLAP 3

● **If FLAPS > 3 :**
- FOR LDG . . . . . USE FLAP FULL

- S/F JAMMED PROC . . . . . APPLY

● **FOR L/G GRVTY EXTN :**

MAX SPEED . . . . . 200 KT
- LDG GRVTY EXTN . . . . . DOWN

HYD G + Y SYS LO PR (CONT'D)

STATUS

● **WHEN L/G DOWNLOCKED :**
- L/G (lever) . . . . . DOWN
- APPR SPD (if F ≥ 2) . . . . . VLS + 10 KT

Approach speed increases, due to the loss of one elevator.
- USE RUD FOR TURN COORD
- LDG DIST PROC . . . . . APPLY

R *Refer to the QRH part 2, or to the FCOM 3.02.80*

ALTN LAW : PROT LOST
SLATS SLOW
CAT 1 ONLY
INCREASED FUEL CONSUMP

Fuel consumption increases by approximately 16 %, due to the outer ailerons in the upfloat position.

INOP SYS
F/CTL PROT
G + Y HYD
YAW DAMPER
L/G RETRACT
AP 1 + 2
FLAPS
L + R OUTR AIL
R ELEV
MOST SPLRS
N/W STRG
AUTO BRK
NORM BRK
CARGO DOORS
(if Y LO LVL)
REV 2
(PW/RR Eng)
L/G DOOR

HYD G + Y SYS LO PR (CONT'D)

STATUS

● **WHEN L/G DOWNLOCKED :**
– L/G (lever) . . . . . DOWN
– APPR SPD (if F ≥ 2) . . . . . VLS + 10 KT
Approach speed increases, due to the loss of one elevator.
– LDG DIST PROC . . . . . APPLY
R *Refer to the QRH part 2, or to the FCOM 3.02.80*
ALTN LAW : PROT LOST
SLATS SLOW
CAT 1 ONLY
INCREASED FUEL CONSUMP
Fuel consumption increases by approximately 16 %, due to the outer ailerons in the upfloat position.

INOP SYS
F/CTL PROT
G + Y HYD
L/G RETRACT
AP 1 + 2
FLAPS
L + R OUTR AIL
R ELEV
MOST SPLRS
N/W STRG
AUTO BRK
NORM BRK
CARGO DOORS
(if Y LO LVL)
REV 2
(PW/RR Eng)
L/G DOOR

HYD B + Y SYS LO PR

LAND ASAP

– Affected PUMPS ..... OFF

MANEUVER WITH CARE

To avoid high hydraulic demand on the remaining system.

Note : As a general rule, do not manually select HYD ELEC PUMP ON, except temporarily, to retract the spoilers if they remain out after a hydraulic failure.

● **IF TRIM LOCKED > 8 UP**

MAX SPEED ..... 180 KT

R *Select the configuration, as appropriate. Fuel consumption is increased.*
180 knots is the limit speed. Recommended speed is 160 knots.
Use manual thrust.

F/CTL ALTN LAW (PROT LOST)

MAX SPEED 330/.82

Secondary Failure
* F/CTL

HYD B + Y SYS LO PR (CONT'D)

STATUS

MAX SPEED 330/.82

● **IF TRIM LOCKED > 8 UP** :
MAX SPEED . . . . . 180 KT

MANEUVER WITH CARE

APPR PROC

■ **If system lost by RSVR LO AIR PR** :
– affected ENG PUMP . . . . . ON

■ **If system lost by RSVR OVHT** :

● **IF BLUE OVHT OUT** :
– BLUE ENG 1 PUMP . . . . . ON

● **IF YELLOW OVHT OUT** :
– YELLOW ENG 2 PUMP . . . . . ON

R ■ **If HYD not recovered** :
– PITCH AUTHORITY . . . . REDUCED
Start the flare slightly earlier. More stick deflection may be needed to achieve the flare.
– GPWS FLAP MODE . . . . . OFF
– FOR LDG . . . . . USE FLAP 2
Due to the loss of the stabilizer, do not select CONF FULL or CONF 3, so as not to degrade handling qualities.

● **FOR L/G GRVTY EXTN** :
MAX SPEED . . . . . 200 KT
– LDG GRVTY EXTN . . . . . DOWN

● **WHEN L/G DOWNLOCKED** :
– L/G lever . . . . . DOWN
– APPR SPD . . . . . VLS + 10 KT
Approach speed must be increased, due to the partial loss of spoilers and stabilizers.
– LDG DIST PROC . . . . . APPLY
Multiply the landing distance by 1.3 due to increase in approach speed, and partial loss of spoilers.

ALTN LAW : PROT LOST

SLATS/FLAPS SLOW

CAT 1 ONLY

Note : Following a blue hydraulic system failure, the parking brake may be inoperative, due to blue accumulator low pressure.

INOP SYS

F/CTL PROT
STABILIZER
B + Y HYD
AP 1 + 2
MOST SPLRS
ALTN BRK
YAW DAMPER 2
N/W STRG
CARGO DOORS (if Y LO LVL)
REVERSERS (PW/RR Eng.)
L/G DOORS

HYD B + Y SYS LO PR

LAND ASAP

– Affected PUMPS ..... OFF

MANEUVER WITH CARE

To avoid high hydraulic demand on the remaining system.

Note : As a general rule, do not manually select HYD ELEC PUMP ON, except temporarily, to retract the spoilers if they remain out after a hydraulic failure.

● **IF TRIM LOCKED > 8 UP**

MAX SPEED ..... 180 KT

R *Select the configuration, as appropriate. Fuel consumption is increased.*
180 knots is the limit speed. Recommended speed is 160 knots.
Use manual thrust.

F/CTL ALTN LAW (PROT LOST)

MAX SPEED 330/.82

Secondary Failure
* F/CTL

HYD B + Y SYS LO PR (CONT'D)

STATUS

MAX SPEED 330/.82

● **IF TRIM LOCKED > 8 UP** :
MAX SPEED . . . . . 180 KT

MANEUVER WITH CARE

APPR PROC

■ **If system lost by RSVR LO AIR PR** :
– affected ENG PUMP . . . . . ON

■ **If system lost by RSVR OVHT** :

● **IF BLUE OVHT OUT** :
– BLUE ENG 1 PUMP . . . . . ON

● **IF YELLOW OVHT OUT** :
– YELLOW ENG 2 PUMP . . . . . ON

■ **If HYD not recovered** :
– PITCH AUTHORITY . . . . REDUCED
Start the flare slightly earlier. More stick deflection may be needed to achieve the flare.
– GPWS FLAP MODE . . . . . OFF
– FOR LDG . . . . . USE FLAP 2
Due to the loss of the stabilizer, do not select CONF FULL or CONF 3, so as not to degrade handling qualities.

● **FOR L/G GRVTY EXTN** :
MAX SPEED . . . . . 200 KT
– LDG GRVTY EXTN . . . . . DOWN

● **WHEN L/G DOWNLOCKED** :
– L/G lever . . . . . DOWN
– APPR SPD . . . . . VLS + 10 KT
Approach speed must be increased, due to the partial loss of spoilers and stabilizers.
– LDG DIST PROC . . . . . APPLY
Refer to the QRH Part 2, or to the FCOM 3.02.80.

ALTN LAW : PROT LOST

SLATS/FLAPS SLOW

CAT 1 ONLY

Note : Following a blue hydraulic system failure, the parking brake may be inoperative, due to blue accumulator low pressure.

INOP SYS

F/CTL PROT
STABILIZER
B + Y HYD
AP 1 + 2
MOST SPLRS
ALTN BRK
N/W STRG
CARGO DOORS
(if Y LO LVL)
REVERSERS
(PW/RR Eng.)
L/G DOORS

HYD G (B) (Y) ELEC PUMP FAULT

In case of an electrical pump overheat, or if an electrical pump fails while in use :

– Affected ELEC PUMP . . . . . OFF

STATUS

R *Note : In case of an electrical pump overheat, and until the*
R *system is reset on ground, the electrical pump*
R *pushbutton FAULT light (on the overhead panel) stays*
R *on, and the OVHT indication (on the ECAM) stays*
R *displayed, even if the overheat has stopped.*

INOP SYS
G ELEC PUMP (B) (Y)

HYD G ENG 1 (2) PUMP LO PR

– GREEN ENG PUMP (affected) . . . . . OFF

STATUS

Note : On ground, avoid retracting the FLAPS when the aircraft is moving, to prevent a loss of normal braking.

INOP SYS
G ENG 1(2) PUMP

HYD G ENG 1+2 PUMP LO PR

– GREEN ENG 1+2 PUMPS . . . . . OFF

G SYS LO PR

Secondary Failure
* F/CTL
* WHEEL

STATUS

APPR PROC

- **BEFORE S/F EXTENSION** :
  – YELLOW ELEC PUMP . . . . . OFF
  Switch OFF the yellow electrical pump to avoid flight control jerk, in case Engine 2 is additionally lost.
- **FOR L/G GRAVITY EXTN** :
  MAX SPEED . . . . . 200 KT
  – L/G GRVTY EXTN . . . . . DOWN
- **WHEN L/G DOWNLOCKED** :
  – L/G . . . . . DOWN
  – LDG DIST PROC . . . . . APPLY

SLATS/FLAPS SLOW
CAT 3 SINGLE ONLY

INOP SYS
GREEN HYD
L/G RETRACT
PART SPLRS
CAT 3 DUAL
N/W STRG
AUTO BRK
NORM BRK
YAW DAMPER 1
G ENG 1 PUMP
G ENG 2 PUMP

HYD G (B) (Y) ELEC PUMP FAULT

In case of an electrical pump overheat, or if an electrical pump fails while in use :

– Affected ELEC PUMP . . . . . OFF

STATUS

R *Note : In case of an electrical pump overheat, and until the*
R *system is reset on ground, the electrical pump*
R *pushbutton FAULT light (on the overhead panel) stays*
R *on, and the OVHT indication (on the ECAM) stays*
R *displayed, even if the overheat has stopped.*

INOP SYS
G ELEC PUMP (B) (Y)

HYD G ENG 1 (2) PUMP LO PR

– GREEN ENG PUMP (affected) . . . . . OFF

STATUS

Note : On ground, avoid retracting the FLAPS when the aircraft is moving, to prevent a loss of normal braking.

INOP SYS
G ENG 1(2) PUMP

HYD G ENG 1+2 PUMP LO PR

– GREEN ENG 1+2 PUMPS . . . . . OFF

G SYS LO PR

Secondary Failure
* F/CTL
* WHEEL

STATUS

APPR PROC

R
- **FOR L/G GRAVITY EXTN :**
  MAX SPEED . . . . . 200 KT
  – L/G GRVTY EXTN . . . . . DOWN
- **WHEN L/G DOWNLOCKED :**
  – L/G (lever) . . . . . DOWN
  – LDG DIST PROC . . . . . APPLY

SLATS/FLAPS SLOW
CAT 3 SINGLE ONLY

INOP SYS
GREEN HYD
L/G RETRACT
PART SPLRS
CAT 3 DUAL
N/W STRG
AUTO BRK
NORM BRK
G ENG 1 PUMP
G ENG 2 PUMP

HYD B ENG 1 PUMP LO PR

R LAND ASAP
R "LAND ASAP" is only triggered, if the green hydraulic system is
R supplied by the RAT.
– BLUE ENG 1 PUMP ..... OFF

B SYS LO PR

● **If G HYD SYS is supplied by the RAT :**
– A/SKID NWS ..... OFF
– MAX BRK PR ..... 1000 PSI
– BRK B ACCU PR ONLY

Secondary Failure
* F/CTL

STATUS

MAX BRK PR ..... 1000 PSI (a)
– LDG DIST PROC ..... APPLY
BRK B ACCU PR ONLY (a)
SLATS SLOW
CAT 3 SINGLE ONLY

INOP SYS
BLUE HYD
PART SPLRS
REV 1 (PW or RR engines)
CAT 3 DUAL
ALTN BRK
AUTO BRK (a)
ANTI SKID (a)
NORM BRK (a)
N/W STRG (a)
B ENG 1 PUMP

(a) If green HYD SYS is supplied by RAT

Note : Following a blue hydraulic system failure, the parking brake may be inoperative due to a blue accumulator low pressure.

HYD Y ENG 2 PUMP LO PR

LAND ASAP

"LAND ASAP" is only triggered, if the green hydraulic system is supplied by the RAT.

– YELLOW ENG 2 PUMP ..... OFF

Y SYS LO PR

Secondary Failure
* F/CTL

STATUS

– LDG DIST PROC ..... APPLY
FLAPS SLOW
CAT 3 SINGLE ONLY

INOP SYS
YELLOW HYD
PART SPLRS
REV 2 (PW or RR engines)
CAT 3 DUAL
YAW DAMPER 2
Y ENG 2 PUMP

HYD B ENG 1 PUMP LO PR

R LAND ASAP

R "LAND ASAP" is only triggered, if the green hydraulic system is

R supplied by the RAT.

– BLUE ENG 1 PUMP ..... OFF

B SYS LO PR

● **If G HYD SYS is supplied by the RAT :**

– A/SKID NWS ..... OFF

– MAX BRK PR ..... 1000 PSI

– BRK B ACCU PR ONLY

Secondary Failure
* F/CTL

STATUS

MAX BRK PR ..... 1000 PSI (a)
– LDG DIST PROC ..... APPLY
BRK B ACCU PR ONLY (a)
SLATS SLOW
CAT 3 SINGLE ONLY

INOP SYS
BLUE HYD
PART SPLRS
REV 1 (PW or RR engines)
CAT 3 DUAL
ALTN BRK
AUTO BRK (a)
ANTI SKID (a)
NORM BRK (a)
N/W STRG (a)
B ENG 1 PUMP

(a) If green HYD SYS is supplied by RAT

Note : Following a blue hydraulic system failure, the parking brake may be inoperative due to a blue accumulator low pressure.

HYD Y ENG 2 PUMP LO PR

LAND ASAP

"LAND ASAP" is only triggered, if the green hydraulic system is supplied by the RAT.

– YELLOW ENG 2 PUMP ..... OFF

Y SYS LO PR

Secondary Failure
* F/CTL

STATUS

– LDG DIST PROC ..... APPLY
FLAPS SLOW
CAT 3 SINGLE ONLY

INOP SYS
YELLOW HYD
PART SPLRS
REV 2 (PW or RR engines)
CAT 3 DUAL
Y ENG 2 PUMP

HYD RAT FAULT (on ground)

Crew awareness.

STATUS

| INOP SYS
RAT

HYD MONITORING FAULT

Crew awareness.

HSMU not properly connected.

Note : The following functions are lost :

- *Automatic control of the electrical pumps*
- *Automatic RAT extension*
- *Automatic closure of the fire shutoff valves*
- *OVHT warning on the hydraulic circuit*
- *Reservoir fluid level on the ECAM*

STATUS

| INOP SYS
HYD MONG

HYD G RSVR UNDERFILLED (on ground)

This caution is triggered on the ground, if the reservoir quantity is below 17 l when the temperature is above 0°C, or below a quantity function of the temperature when the temperature is below 0°C. Maintenance action is due.

HYD G SYS LEAK

This caution is triggered in flight, with the same logic as the G RSVR UNDERFILLED caution.

– LEAK RATE . . . . . MONITOR

● **IF LEVEL DECREASES**

– GREEN ENG 1 + 2 PUMP . . . . . OFF

– GREEN ELEC PUMP . . . . . OFF

A. ICE L(R) WSHLD HEAT

R ● **If due to a WHC command failure :**
L(R) WINDOW HEAT
– PROBE WINDOW HEAT ..... ON

STATUS

INOP SYS
L (R) WSHLD HEAT

A. ICE L + R WSHLD HEAT

● **If due to a WHC command failure :**
L + R WINDOW HEAT
– PROBE WINDOW HEAT ..... ON

STATUS

INOP SYS
WSHLD HEAT
WINDOW HEAT (If WHC command failed)

A. ICE L (R) (L + R) WINDOW HEAT

Crew awareness.

STATUS

INOP SYS
L(R) WNDW HEAT (WINDOW HEAT)

A. ICE CAPT PITOT or L (R) STAT or AOA HEAT

– AIR DATA SWTG (if ADR 3 avail and not used) . . CAPT ON 3

ADR 3 supplies data to PFD 1 and ND 1.

STATUS

INOP SYS
CAPT PITOT
(CAPT L STAT)
(CAPT R STAT)
(CAPT AOA)

A. ICE F/O PITOT or L (R) STAT or AOA HEAT

– AIR DATA SWTG (if ADR 3 avail, and not used) . . . . F/O ON 3

ADR 3 supplies data to PFD 2 and ND 2.

STATUS

INOP SYS
F/O PITOT
(F/O L STAT)
(F/O R STAT)
(F/O AOA)

A. ICE STBY PITOT or L (R) STAT or AOA HEAT

– AIR DATA SWTG . . . . . AS RQRD

If stby instruments are used, monitor air data information.

STATUS

INOP SYS
STBY PITOT
(STBY L(R) STAT)
(STBY AOA)

A. ICE L(R) WSHLD HEAT

R ● **If due to a WHC command failure :**
L(R) WINDOW HEAT
– PROBE WINDOW HEAT ..... ON

STATUS

INOP SYS
L (R) WSHLD HEAT

A. ICE L + R WSHLD HEAT

● **If due to a WHC command failure :**
L + R WINDOW HEAT
– PROBE WINDOW HEAT ..... ON

STATUS

INOP SYS
WSHLD HEAT
WINDOW HEAT (If WHC command failed)

A. ICE L (R) (L + R) WINDOW HEAT

Crew awareness.

STATUS

INOP SYS
L(R) WNDW HEAT (WINDOW HEAT)

A. ICE CAPT PITOT or L (R) STAT or AOA HEAT

– AIR DATA SWTG (if ADR 3 avail and not used) . . CAPT ON 3

ADR 3 supplies data to PFD 1 and ND 1.

● **IF ICING EXPECTED :**

Only for PITOT HEAT FAULT, and if ADR 2 or 3 are FAULT or OFF.

– UNREL SPD PROC . . . . . CONSIDER

STATUS

INOP SYS
CAPT PITOT
(CAPT L STAT)
(CAPT R STAT)
(CAPT AOA)

A. ICE F/O PITOT or L (R) STAT or AOA HEAT

– AIR DATA SWTG (if ADR 3 avail, and not used) . . . . F/O ON 3

ADR 3 supplies data to PFD 2 and ND 2.

● **IF ICING EXPECTED :**

Only for PITOT HEAT FAULT, and if ADR 1 or 3 are FAULT or OFF.

– UNREL SPD PROC . . . . . CONSIDER

STATUS

INOP SYS
F/O PITOT
(F/O L STAT)
(F/O R STAT)
(F/O AOA)

A. ICE STBY PITOT or L (R) STAT or AOA HEAT

– AIR DATA SWTG . . . . . AS RQRD

If standby instruments are used, monitor air data information.

STATUS

INOP SYS
STBY PITOT
(STBY L(R) STAT)
(STBY AOA)

A. ICE CAPT (F/O) TAT HEAT

● **If TAT abnormally heated on ground :**
TAT HEATED ON GND

A. ICE CAPT (F/O) (STBY) PROBES HEAT

– PROBE WINDOW HEAT . . . . . ON
● **IF UNSUCCESSFUL :**
– AIR DATA SWTG . . . . . CAPT ON 3 (F/O ON 3) (AS RQRD)

STATUS

INOP SYS
CAPT PROBES (F/O) (STBY)

R **DOUBLE PROBE HEAT FAILURE**

R *In case of double failure of pitot or alpha probe heaters in icing conditions, the choice made*
R *by the computers among the 3 ADR values may be erroneous.*
R ● **If icing conditions cannot be avoided :**
R – One of affected ADRs . . . . . OFF
R *There will be a disagreement between the two remaining ADRs and will trigger the*
R *F/CTL ADR DISAGREE ECAM caution.*

A. ICE ENG 1 (2) VALVE CLOSED

AVOID ICING CONDITIONS

	STATUS
AVOID ICING CONDITIONS	INOP SYS ENG 1 (2) A. ICE

A. ICE ENG 1 (2) VALVE OPEN

R *This warning is triggered, if one ENG ANTI ICE pushbutton is selected OFF, and the*
R *corresponding ENG ANTI ICE valve is detected OPEN.*
R *If the fault is present before takeoff, it may lead to an ENG THRUST LOSS warning upon*
R *takeoff power application.*
R *Refer to the MMEL for dispatch.*

Crew awareness.

Note : Continuous ignition remains selected on the 2 engines, if one nacelle anti-ice valve is open.

A. ICE WING OPEN ON GND

Following ground test the valves are still open after 40 seconds.
This caution is automatically recalled in phase 9.

– WING ANTI ICE . . . . . OFF

WAI AVAIL IN FLT

	STATUS
WAI AVAIL IN FLT	

A. ICE CAPT (F/O) TAT HEAT

- **If TAT abnormally heated on ground :**
  TAT HEATED ON GND

A. ICE CAPT (F/O) (STBY) PROBES HEAT

– PROBE WINDOW HEAT . . . . . ON

- **IF UNSUCCESSFUL :**
  – AIR DATA SWTG . . . . . CAPT ON 3 (F/O ON 3) (AS RQRD)

STATUS

INOP SYS
CAPT PROBES (F/O) (STBY)

DOUBLE STAT (AOA) HEAT FAILURE

In case of double failure of the static probe or alpha probe heaters in icing conditions, the choice made by the computers among the 3 ADR values may be erroneous.

- **If icing conditions cannot be avoided :**
  – One of affected ADRs . . . . . OFF
  There will be a disagreement between the two remaining ADRs, which will trigger the F/CTL ADR DISAGREE ECAM caution.

A. ICE ENG 1 (2) VALVE CLOSED

AVOID ICING CONDITIONS

	STATUS
AVOID ICING CONDITIONS	INOP SYS ENG 1 (2) A. ICE

A. ICE ENG 1 (2) VALVE OPEN

R *This warning is triggered, if one ENG ANTI ICE pushbutton is selected OFF, and the*
R *corresponding ENG ANTI ICE valve is detected OPEN.*
R *If the fault is present before takeoff, it may lead to an ENG THRUST LOSS warning upon*
R *takeoff power application.*
R *Refer to the MMEL for dispatch.*

Crew awareness.

Note : Continuous ignition remains selected on the 2 engines, if one nacelle anti-ice valve is open.

A. ICE WING OPEN ON GND

Following ground test the valves are still open after 40 seconds.
This caution is automatically recalled in phase 9.

– WING ANTI ICE . . . . . OFF

WAI AVAIL IN FLT

	STATUS
WAI AVAIL IN FLT	

A. ICE L(R) INR (OUTR) WING LO PR

In flight low pressure is detected when wing anti ice is selected on.

– THRUST ..... INCREASE

● **IF UNSUCCESSFUL** :

– WING ANTI ICE ..... OFF

AVOID ICING CONDITIONS

STATUS

AVOID ICING CONDITIONS

APPR PROC

● **IF ICE ACCRETION** :

– APPR SPD ..... VLS + 10 KT

– LDG DIST PROC ..... APPLY

R *Refer to the QRH part 2, or to the FCOM 3.02.80.*

Note : In case of severe ice accretion, with wing anti ice failed, the angle of attack protections are still efficient. However, if full back stick is maintained while at maximum angle of attack, a divergent roll oscillation may appear. Releasing slightly the stick will stop this oscillation.

INOP SYS

WING A. ICE

A. ICE WING VLVE NOT OPEN

In flight one wing valve remains closed when WAI is selected on.

– WING ANTI ICE ..... OFF

AVOID ICING CONDITIONS

STATUS

AVOID ICING CONDITIONS

APPR PROC

● **IF ICE ACCRETION** :

– APPR SPD ..... VLS + 10 KT

– LDG DIST PROC ..... APPLY

R *Refer to the QRH part 2, or to the FCOM 3.02.80.*

Note : In case of severe ice accretion, with wing anti ice failed, the angle of attack protections are still efficient. However, if full back stick is maintained while at maximum angle of attack, a divergent roll oscillation may appear. Releasing slightly the stick will stop this oscillation.

INOP SYS

WING A. ICE

A. ICE L (R) INR (OUTR) WING OPEN

One wing anti ice valve is abnormally not closed.

■ **Failure detected on ground :**

– WING ANTI ICE ..... OFF
– X BLEED (if not closed) ..... CLOSE
– ENG BLEED (affected side) ..... OFF
– APU BLEED (if left wing affected) ..... OFF

WAI AVAIL IN FLT

● **After take-off when above 1500 ft (automatic recall)**

– ENG BLEED (affected side) ..... ON
– X BLEED ..... AUTO
– WING ANTI ICE ..... AS RQRD

R *On the failed side, wing anti ice is continually ON and so is available if needed.*

WAI AVAIL IN FLT.

● **After landing (automatic recall) :**

– WING ANTI ICE ..... OFF
– X BLEED (if not closed) ..... CLOSE
– ENG BLEED (affected side) ..... OFF
– APU BLEED (if left wing affected) ..... OFF

	STATUS
	INOP SYS
WAI AVAIL IN FLT	ENG BLEED
	PACK

■ **Failure detected in flight :**

– WING ANTI ICE ..... AS RQRD

WAI AVAIL IN FLT

Wing anti ice is available if needed and anyway is continuously on, on failed side.

● **Depending on Bleed configuration :**

– X BLEED ..... OPEN or AUTO

R ● **After landing (automatic recall) :**

Refer to failure detected on ground.

	STATUS
WAI AVAIL IN FLT	I

A. ICE L (R) INR (OUTR) WING HI PR

Crew awareness

A. ICE WAI SYS FAULT

The wing anti ice command relay is failed.

■ **WING ANTI ICE pb ON – All WAI valves CLOSED**

The wing anti ice valves stay closed.

– WING ANTI ICE ..... OFF

AVOID ICING CONDITIONS

STATUS

	INOP SYS
AVOID ICING CONDITIONS	WING A. ICE

APPR PROC

● **IF ICE ACCRETION**

– APPR SPD ..... VLS + 10 KT

– LDG DIST PROC ..... APPLY

R *Refer to the QRH part 2, or to the FCOM 3.02.80.*

Note : In case of severe ice accretion, with anti ice failed, the angle of attack protections are still efficient. However, if full back stick is maintained while at maximum angle of attack, a divergent roll oscillation may appear. Releasing slightly the stick will stop this oscillation.

■ **WING ANTI ICE pb OFF – All WAI valves OPEN**

The wing anti ice valves are abnormally open.

WING ANTI ICE ON

● **If on the ground :**

– X BLEED (if not closed) ..... CLOSE

– ENG BLEED (1 + 2) ..... OFF

– APU BLEED ..... OFF

WAI AVAIL IN FLT

STATUS

	INOP SYS
WAI AVAIL IN FLT	ENG BLEED
	PACK

● **If in flight or after TO when above 1500 ft (automatic recall)**

– ENG BLEED (1 + 2) ..... ON

– X BLEED (depending on Bleed Config) . . . OPEN or AUTO

● **After landing (automatic recall)**

– X BLEED (if not closed) ..... CLOSE

– ENG BLEED (1 + 2) ..... OFF

– APU BLEED ..... OFF

LEFT INTENTIONALLY BLANK

A. ICE WAI SYS FAULT

The wing anti ice command relay is failed.

■ **WING ANTI ICE pb ON – All WAI valves CLOSED**

The wing anti ice valves stay closed.

– WING ANTI ICE ..... OFF

AVOID ICING CONDITIONS

STATUS

	INOP SYS
AVOID ICING CONDITIONS	WING A. ICE

APPR PROC

● **IF ICE ACCRETION**

– APPR SPD ..... VLS + 10 KT

– LDG DIST PROC ..... APPLY

R *Refer to the QRH part 2, or to the FCOM 3.02.80.*

Note : In case of severe ice accretion, with anti ice failed, the angle of attack protections are still efficient. However, if full back stick is maintained while at maximum angle of attack, a divergent roll oscillation may appear. Releasing slightly the stick will stop this oscillation.

■ **WING ANTI ICE pb OFF – All WAI valves OPEN**

The wing anti ice valves are abnormally open.

WING ANTI ICE ON

● **If on the ground :**

– X BLEED (if not closed) ..... CLOSE

– ENG BLEED (1 + 2) ..... OFF

– APU BLEED ..... OFF

WAI AVAIL IN FLT

STATUS

	INOP SYS
WAI AVAIL IN FLT	ENG BLEED PACK

● **If in flight or after TO when above 1500 ft (automatic recall)**

– ENG BLEED (1 + 2) ..... ON

– X BLEED (depending on Bleed Config) . . . OPEN or AUTO

● **After landing (automatic recall)**

– X BLEED (if not closed) ..... CLOSE

– ENG BLEED (1 + 2) ..... OFF

– APU BLEED ..... OFF

A. ICE ICE DETECTED

Ice is signalled by either detector in flight with TAT < 10°C.

– ENG (all) ANTI ICE . . . . . ON

SEVERE ICE DETECTED

Ice accretion is signalled by either detector in flight with TAT < 10°C.

– ENG (all) ANTI ICE . . . . . ON
– ENG START SEL . . . . . IGN

The line is displayed if continuous ignition is not automatically selected.

- **If bleed configuration (due to failures) permits WAI selection:**
  – WING ANTI ICE . . . . . ON
- **If bleed configuration (due to failures) does not permit WAI selection :**
  – WING ANTI ICE . . . . . OFF
  AVOID ICING CONDITIONS

A. ICE DETECT FAULT

Ice detection is lost.

– ANTI ICE . . . . . AS RQRD

STATUS
| INOP SYS
ICE DETECT

ANTI ICE CAPT + F/O PITOT HEAT

Capt and F/O pitot heating is lost. In case of simultaneous pitot icing and in the same amount, ADR 1 and ADR 2 speeds will be in agreement, but incorrect. Therefore, flight controls will consider the remaining correct source as being faulty, and will reject the only correct source. The following ECAM procedure avoids that the flight controls use 2 erroneous, but coherent, sources.

- **If all probes heating is lost on the CAPT and/or F/O side :**
  - PROBE/WINDOW HEAT . . . . . ON

    In some failure conditions, probe heating may be recovered.
- **IF UNSUCCESSFUL :**
  - **If ADR 3 operative and ON**
    - ADR 1 (2) . . . . . OFF

      Depending on the status of the static, AOA, and TAT heating, the ECAM requires that either ADR 1 or 2 be switched OFF.

      Note : In case of subsequent, significant, speed discrepancy between the 2 remaining ADRs, the "ADR DISAGREE" ECAM caution will be triggered.
  - **If ADR 3 failed or OFF**

    No action is required, as long as there are no icing conditions, in order to keep 2 independent speed sources.
    - **IF ICING EXPECTED :**
      - ADR 1 (2) . . . . . OFF

        Depending on the status of the static, AOA, and TAT heating, the ECAM requires that either ADR 1 or 2 be switched OFF.
      - UNREL SPD PROC . . . . . CONSIDER

        Only one ADR is available, and the corresponding pitot probe may be affected by ice accretion. Be prepared to use the unreliable speed procedure.

NAV ADR FAULT

- **If ADR 3 failed or OFF**
  - **IF ICING EXPECTED :**
    - ADR 1 (2) . . . . . OFF
    - UNREL SPD PROC . . . . CONSIDER

STATUS

INOP SYS
CAPT PITOT
F/O PITOT
CAPT PROBES (If all CAPT PROBES heating is lost)
F/O PROBES (If all F/O PROBES heating is lost)

ANTI ICE CAPT + STBY PITOT HEAT

Capt and STBY pitot heating is lost. In case of simultaneous pitot icing and in the same amount, ADR 1 and ADR 3 speeds will be in agreement, but incorrect. Flight controls will consider the remaining correct source as being faulty, and will reject the only correct source. The following ECAM procedure avoids that the flight controls use 2 erroneous, but coherent, sources.

● **If all probes heating is lost on the CAPT and/or STBY side :**

– PROBE/WINDOW HEAT . . . . . ON

In some failure conditions, probe heating may be recovered.

● **IF UNSUCCESSFUL :**

■ **If ADR 2 operative and ON**

– ADR 1 (3) . . . . . OFF

Depending on the status of the static, AOA, and TAT heating, the ECAM requires that either ADR 1 or 3 be switched OFF.

Note : In case of subsequent, significant, speed discrepancy between the 2 remaining ADRs, the "ADR DISAGREE" ECAM caution will be triggered.

■ **If ADR 2 failed or OFF**

No action is required, as long as there are no icing conditions, in order to keep 2 independent speed sources.

● **IF ICING EXPECTED :**

– ADR 1 (3) . . . . . OFF

Depending on the status of the static, AOA, and TAT heating, the ECAM requires that either ADR 1 or 3 be switched OFF.

– UNREL SPD PROC . . . . . CONSIDER

Only one ADR is available, and the corresponding pitot probe may be affected by ice accretion. Be prepared to use the unreliable speed procedure.

NAV ADR FAULT

■ **If ADR 2 failed or OFF**

● **IF ICING EXPECTED :**

– ADR 1 (3) . . . . . OFF

– UNREL SPD PROC . . . . CONSIDER

STATUS

INOP SYS
CAPT PITOT
STBY PITOT
CAPT PROBES (If all CAPT PROBES heating is lost)
STBY PROBES (If all STBY PROBES heating is lost)

ANTI ICE F/O + STBY PITOT HEAT

F/O and STBY pitot heating is lost. In case of simultaneous pitot icing and in the same amount, ADR 2 and ADR 3 speeds will be in agreement, but incorrect. Therefore, flight controls will consider the remaining correct source as being faulty, and will reject the only correct source. The following ECAM procedure avoids that the flight controls use 2 erroneous, but coherent, sources.

- **If all probes heating is lost on the F/0 and/or STBY side :**
  - PROBE/WINDOW HEAT . . . . . ON

    In some failure conditions, probe heating may be recovered.
- **IF UNSUCCESSFUL :**
  - **If ADR 1 operative and ON**
    - ADR 2 (3) . . . . . OFF

      Depending on the status of the static, AOA, and TAT heating, the ECAM requires that either ADR 2 or 3 be switched OFF.

      Note : In case of subsequent, significant, speed discrepancy between the 2 remaining ADRs, the "ADR DISAGREE" ECAM caution will be triggered.
  - **If ADR 1 failed or OFF**

    No action is required, as long as there are no icing conditions, in order to keep 2 independent speed sources.
    - **IF ICING EXPECTED :**
      - ADR 2 (3) . . . . . OFF

        Depending on the status of the static, AOA, and TAT heating, the ECAM requires that either ADR 2 or 3 be switched OFF.
      - UNREL SPD PROC . . . . . CONSIDER

        Only one ADR is available, and the corresponding pitot probe may be affected by ice accretion. Be prepared to use the unreliable speed procedure.

NAV ADR FAULT

- **If ADR 1 failed or OFF**
  - **IF ICING EXPECTED :**
    - ADR 2 (3) . . . . . OFF
    - UNREL SPD PROC . . . . CONSIDER

STATUS

INOP SYS
F/O PITOT
STBY PITOT
F/O PROBES
(If all F/O PROBES heating is lost)
STBY PROBES
(If all STBY PROBES heating is lost)

ANTI ICE ALL PITOT HEAT

Capt, F/O and STBY pitot heating is lost. In case of simultaneous pitot icing and in the same amount, ADR 1, ADR 2, and ADR 3 speeds will be in agreement, but incorrect. The following ECAM procedure avoids that the flight controls use erroneous, but coherent, sources.

- **If all probes heating is lost on the CAPT and/or F/O and/or STBY side :**
  - PROBE/WINDOW HEAT . . . . . ON
- **IF UNSUCCESSFUL :**
  - ADR 1 (2) (3) . . . . . OFF

  Depending on the status of the static, AOA, and TAT heating, the ECAM requires that either ADR 1, 2 or 3 be switched OFF.

  Note : In case of subsequent, significant, speed discrepancy between the 2 remaining ADRs, the "ADR DISAGREE" ECAM caution will be triggered.
- **IF ICING EXPECTED :**
  - ADR 2 (3) . . . . . OFF

    Depending on the status of the static, AOA, and TAT heating, the ECAM requires that either ADR 1, 2 or 3 be switched OFF.
  - UNREL SPD PROC . . . . . CONSIDER

    Only one ADR is available, and the corresponding pitot probe may be affected by ice accretion. Be prepared to use the unreliable speed procedure.

NAV ADR FAULT

Single ADR FAULT or double ADR FAULT ECAM cautions may be triggered, depending on the number of ADRs switched OFF.

F/CTL ALTN LAW (PROT LOST)

Alternate law becomes active, if :

- *One ADR has already been switched OFF, and the 2 remaining ADRs are not in agreement, or*
- *Two ADRs have been switched OFF.*

ANTI ICE ALL PITOT HEAT (CONT'D)

STATUS

● **IF ICING EXPECTED :**
- ADR 2 (3) . . . . . OFF
- UNREL SPD PROC . . . . . CONSIDER

INOP SYS
CAPT PITOT
F/O PITOT
STBY PITOT
CAPT PROBES
(If all CAPT PROBES heating is lost)
F/O PROBES
(If all F/O PROBES heating is lost)
STBY PROBES
(If all STBY PROBES heating is lost)

RECORDER DFDR FAULT

Crew awareness

STATUS

INOP SYS
DFDR

RECORDER FDIU FAULT

Crew awareness

STATUS

INOP SYS
FDIU

FWS ECP FAULT

ECP KEYS AVAIL :
CLR, RCL, STS, ALL,
EMER CANC.

CLR, STS, RECALL, EMERGENCY CANCEL, ALL keys are directly wired to the EIS computers.

FWS FWC 1(2) FAULT

Crew awareness

CAT 3 SINGLE ONLY

STATUS

INOP SYS
FWC 1(2)
CAT 3 DUAL

FWS FWC 1 + 2 FAULT

– MONITOR SYS
– MONITOR OVERHEAD PANEL
CAT 1 ONLY

NOT AVAIL
ECAM WARN
ALTI ALERT
STATUS
A/CALL OUT
MEMO

ECAM Cautions and Warnings, aural warnings, master caution and warning lights are lost.
ECAM system pages are still available. Therefore cockpit panels must be monitored for local warnings and ECAM system pages must be regularly called for system checks.
Check the general status of the systems for the DES/APPR preparation.

FWS SDAC 1(2) FAULT

Crew awareness

STATUS

INOP SYS
SDAC 1(2)

FWS SDAC 1 + 2 FAULT

– MONITOR OVERHEAD PANEL
Part of amber cautions is lost.
All red warnings, engine and fuel parameters are available on ECAM upper DU.
ECAM SYS PAGES AVAIL :
ENG, F/CTL, FUEL, WHEEL,
PRESS, C/B

STATUS

INOP SYS
SDAC 1 + 2

EIS EFIS DMC 1(2) FAULT

– CAPT (F/O) EFIS DMC (if EFIS DMC3 avail) 3
– CAPT (F/O) EFIS DMC (if EFIS DMC3 failed) . . . . . 2(1)

STATUS

INOP SYS
EFIS DMC 1(2)

EIS EFIS DMC 3 FAULT

Crew awareness

● **if EFIS DMC 1 failed :**
– CAPT EFIS DMC 2
The message EFIS SINGLE SOURCE 2 is displayed on both PFDs.

● **if EFIS DMC 2 failed :**
– F/O EFIS DMC 1
The message EFIS SINGLE SOURCE 1 is displayed on both PFDs.

STATUS

INOP SYS
EFIS DMC 3

EFIS ECAM DMC 3 FAULT

– ECAM SWTG DMC 1
ECAM DMC 1 replaces automatically ECAM DMC 3. However manual confirmation is required.

● **if ECAM DMC 1 failed :**
– ECAM SWTG DMC 2
These two lines are not displayed on ECAM as ECAM DMC 1 + 3 are lost.

STATUS

INOP SYS
ECAM DMC 3

EIS ECAM DMC 1(2) FAULT

● **If ECAM DMC 3 failed :**

– ECAM SWTG DMC 2

In case of ECAM DMC 1 failure these two lines are not displayed on ECAM as ECAM DMC 1+3 are lost.

STATUS

| INOP SYS
ECAM DMC 1(2)

EIS DISPLAY DISCREPANCY

CHECK EWD
CHECK SD
CHECK PFD
CHECK ND

The DMC detects a discrepancy between acquisition and display on a DU.
This warning is associated with an amber message displayed on the concerned DU. In case of EWD display discrepancy, the amber message is displayed on the EWDU and on both NDUs.

– DMC/DU SWTG . . . . . AS RQRD

R *Note : The failure may be due to a DMC or a DU problem.*

The following part of the procedure is not displayed on ECAM :

■ **In case of CHECK EWD or CHECK SD :**

– ECAM SWTG DMC . . . . . 1 or 2

DMC 1 or 2 may be selected if not failed.

● **If unsuccessful :**

Return to normal DMC configuration
In case of CHECK EWD :

R – ECAM UPPER DISPLAY . . . . . OFF

EWD is automatically transferred on SDU

– ECAM/ND . . . . . CAPT or F/O

SD display may be recovered on CAPT or on F/O ND.

In case of CHECK SD :

– ECAM/ND . . . . . AS RQRD
– SDU . . . . . AS RQRD

The DU may be switched off.

EIS DMC 1(2) FAULT

– CAPT (F/O) EFIS DMC (if EFIS DMC3 avail) 3
– CAPT (F/O) EFIS DMC (if EFIS DMC2 or 1 avail) . . . . . 2(1)

STATUS

INOP SYS
DMC 1(2)

EIS DMC 3 FAULT

Crew awareness

● **If DMC 1(2) failed :**
– ECAM SWTG DMC . . . . . 2(1)
– CAPT (F/O) EFIS DMC . . . . . 2(1)

STATUS

INOP SYS
DMC 3

EIS ECAM DMC 1(2) FAULT

● **If ECAM DMC 3 failed :**

– ECAM SWTG DMC 2

In case of ECAM DMC 1 failure these two lines are not displayed on ECAM as ECAM DMC 1+3 are lost.

STATUS

| INOP SYS
ECAM DMC 1(2)

EIS DISPLAY DISCREPANCY

CHECK EWD
CHECK SD
CHECK PFD
CHECK ND

The DMC detects a discrepancy between acquisition and display on a DU.
This warning is associated with an amber message displayed on the concerned DU. In case of EWD display discrepancy, the amber message is displayed on the EWDU and on both NDUs.

– DMC/DU SWTG . . . . . AS RQRD

R *Note : The failure may be due to a DMC or a DU problem.*

The following part of the procedure is not displayed on ECAM :

■ **In case of CHECK EWD or CHECK SD :**

– ECAM SWTG DMC . . . . . 1 or 2

DMC 1 or 2 may be selected if not failed.

● **If unsuccessful :**

Return to normal DMC configuration
In case of CHECK EWD :

R – ECAM UPPER DISPLAY . . . . . OFF

EWD is automatically transferred on SDU

– ECAM/ND . . . . . CAPT or F/O

SD display may be recovered on CAPT or on F/O ND.

In case of CHECK SD :

– ECAM/ND . . . . . AS RQRD
– SDU . . . . . AS RQRD

The DU may be switched off.

EIS DISPLAY DISCREPANCY (CONT'D)

■ **In case of CHECK PFD or CHECK ND :**

– Crosscheck with standby instrument.

– EFIS DMC (affected side) 3

● **If unsuccessful :**

– Return to normal DMC configuration.

– PFD/ND XFR (affected side) . . . . . AS RQRD

– DU (affected) . . . . . AS RQRD

The DU can be switched off.

DISPLAY UNIT FAILURE

■ **AFFECTED DU IS BLANK or DISPLAY IS DISTORTED :**

– DU (affected) . . . . . AS RQRD

The DU can be switched off.

– ECAM/ND SEL (if ECAM DUs affected) . . . . . USE

Transfer SD to F/O or CAPT ND.

– PFD/ND XFR (if EFIS DUs affected) . . . . . USE

■ **DIAGONAL LINE ON THE AFFECTED DU :**

This failure may be due to a DMC FAULT, or a communication interruption between the DMC and DU.

– DMC SWITCHING (EFIS OR ECAM) . . . . . AS RQRD

● **If unsuccessful :**

– DU (affected) . . . . . OFF THEN ON

Note : ND display may disappear, in case too many waypoints and associated information are displayed. Reduce the range, or deselect WPT or CSTR, and the display will automatically recover after about 30 seconds.

R ■ **DIAGONAL LINE ON ECAM DUs (EWD and SD) :**

– ECAM DMC SWITCHING 2

This action permits the recovery of both ECAM DUs.

■ **INVERSION OF EWD AND SD :**

– ECAM UPPER DISPLAY . . . . . OFF THEN ON

The action on the ECAM DMC SWITCHING selector produces the same effect.

ECAM SINGLE DISPLAY

Only the EWD is available. No SD on the other DUs.

■ **To call a SYS page :**

– PRESS AND MAINTAIN SYS page key on ECP.

■ **OVERFLOW ON THE STATUS page :**

– PRESS AND MAINTAIN STS KEY ON ECP
First page of STATUS is displayed.

– RELEASE IT THEN PRESS AGAIN WITHIN 2 SECONDS
Second page of STATUS is displayed.

– CONTINUE UNTIL DISAPPEARANCE OF THE OVERFLOW ARROW
When the STS key is released for more than 2 seconds, EWD is displayed again.

FWS OEB/FWC DISCREPANCY

– OEB DATABASE . . . . . X CHECK

EIS DISPLAY DISCREPANCY (CONT'D)

■ **In case of CHECK PFD or CHECK ND :**

– Crosscheck with standby instrument.

– EFIS DMC (affected side) 3

● **If unsuccessful :**

– Return to normal DMC configuration.

– PFD/ND XFR (affected side) . . . . . AS RQRD

– DU (affected) . . . . . AS RQRD

The DU can be switched off.

DISPLAY UNIT FAILURE

■ **DU is blank, or display is distorted, or INVALID DISPLAY UNIT message is displayed :**

– DU (affected) . . . . . AS RQRD

The DU can be switched off.

– ECAM/ND SEL (if ECAM DUs affected) . . . . . USE

Transfer SD to F/O or CAPT ND.

– PFD/ND XFR (if EFIS DUs affected) . . . . . USE

■ **INVALID DATA message displayed :**

This failure may be due to a DMC FAULT, or a communication interruption between the DMC and DU.

– DMC SWITCHING (EFIS OR ECAM) . . . . . AS RQRD

● **If unsuccessful :**

– DU (affected) . . . . . OFF THEN ON

Note : ND display may disappear, in case too many waypoints and associated information are displayed. Reduce the range, or deselect WPT or CSTR, and display will automatically recover after about 30 seconds.

■ **INVALID DATA message displayed on ECAM DUs (EWD and SD) :**

– ECAM DMC SWITCHING 2

This action permits the recovery of both ECAM DUs.

■ **Inversion of EWD and SD :**

– ECAM UPPER DISPLAY . . . . . OFF THEN ON

The action on the ECAM DMC SWITCHING selector produces the same effect.

ECAM SINGLE DISPLAY

Only the EWD is available. No SD on the other DUs.

■ **To call a SYS page :**

– PRESS AND MAINTAIN SYS page key on ECP.

■ **OVERFLOW ON THE STATUS page :**

– PRESS AND MAINTAIN STS KEY ON ECP
First page of STATUS is displayed.

– RELEASE IT THEN PRESS AGAIN WITHIN 2 SECONDS
Second page of STATUS is displayed.

– CONTINUE UNTIL DISAPPEARANCE OF THE OVERFLOW ARROW
When the STS key is released for more than 2 seconds, EWD is displayed again.

FWS OEB/FWC DISCREPANCY

– OEB DATABASE . . . . . X CHECK

L/G DOORS NOT CLOSED

This warning appears, if the landing gear sequence is not completed after 30 seconds.

MAX SPEED 250/.55

● **WHEN SPD < 250/.55 :**

– L/G lever . . . . . RECYCLE

Recycling the landing gear switches landing gear control to the other LGCIU.

STATUS	
MAX SPEED 250/.55	INOP SYS
INCREASED FUEL CONSUMP	L/G DOOR

L/G GEAR NOT UPLOCKED

This warning appears, if the landing gear sequence is not completed after 30 seconds.

■ **L/G doors closed :**

AVOID EXCESS G FACTOR

Since the gears rest on the doors, avoid excessive load factors in order not to damage the door structure.

STATUS	
AVOID EXCESS G FACTOR	

■ **L/G doors not closed :**

MAX SPEED 250/.55

● **WHEN SPD < 250/.55 :**

– L/G leve . . . . . RECYCLE

Recycling the landing gear switches landing gear control to the other LGCIU.

● **IF UNSUCCESSFUL :**

– L/G . . . . . DOWN

MAX SPEED 250/.55

STATUS	
MAX SPEED 250/.55	INOP SYS
INCREASED FUEL CONSUMP	L/G RETRACT

R *Note :* – *Flight with landing gear extended has a significant effect on fuel consumption*
R *and climb gradient (see "SPECIAL OPERATIONS" FLIGHT WITH GEAR DOWN*
R *FCOM 2.04.25). Multiply fuel consumption by approximately 2.8. Disregard*
R *FM fuel predictions.*
R – *Other predictions should also be disregarded (altitude, speed and time),*
R *except time predictions at waypoints when in cruise.*
R – *Do not use managed speed (except in approach), and CLB and DES autopilot*
R *modes.*

L/G GEAR UPLOCK FAULT

MAX SPEED 250/.55
– L/G lever ..... KEEP DOWN

Landing gear must be left down to avoid structural damage, as the uplock device will stay in the locked position.

STATUS

MAX SPEED 250/.55
– L/G lever ..... KEEP DOWN
INCREASED FUEL CONSUMP

INOP SYS
L/G RETRACT

R *Flight with the landing gear extended has a significant effect on fuel consumption and climb*
R *gradient (See "SPECIAL OPERATIONS", FLIGHT WITH GEAR DOWN). Multiply fuel consumption by approximately 2.8.*

L/G GEAR NOT DOWNLOCKED

This warning appears if the landing gear sequence is not completed after 30 seconds.

R – L/G lever . . . . . RECYCLE

Recycling the landing gear, switches the landing gear control to the other LGCIU.

- **IF UNSUCCESSFUL :**
  - **FOR L/G GRVTY EXTN :**
    MAX SPEED . . . . . 200 KT
    – LDG GRVTY EXTN . . . . . DOWN
  - **WHEN L/G DOWNLOCKED :**
    – L/G lever . . . . . DOWN
- **IF WARNING AFTER 40 S :**
  – LDG GRVTY EXTN . . . . . RESET
  – L/G lever . . . . . UP
- **FOR L/G GRVTY EXTN :**
  MAX SPEED . . . . . 200 KT
  – LDG GRVTY EXTN . . . . . DOWN
- **WHEN L/G DOWNLOCKED :**

R – L/G lever . . . . . DOWN

STATUS

R APPR PROC	INOP SYS
R ● **FOR L/G GRVTY EXTN :**	CAT 3 DUAL
R MAX SPEED . . . . . 200 KT	N/W STRG(a)
R – L/G GRVTY EXTN . . . . . DOWN	
R ● **WHEN L/G DOWNLOCKED :**	
R – L/G LEVER . . . . . DOWN	
CAT 3 SINGLE ONLY	
If the second gravity extension is unsuccessful refer to "LDG WITH ABNORMAL L/G" procedure.	

(a) As nose gear doors remain open, the hydraulic power for nose wheel steering is lost.

L/G GEAR NOT DOWN

This warning appears in approach at 750 feet RA if the landing gear is not selected DOWN although the system is not failed.
This warning is associated with the illumination of the red arrow on the instrument panel.
Crew awareness

L/G RETRACTION FAULT

MAX SPEED 250/.55
– L/G lever ..... RECYCLE
R ● **IF UNSUCCESSFUL :**
R – L/G lever ..... KEEP DOWN

STATUS

MAX SPEED ..... 250/.55 – L/G lever ..... KEEP DOWN INCREASED FUEL CONSUMP	INOP SYS L/G RETRACT

L/G L (R) LENGTHENING FAULT

MAX SPEED 250/.55
– L/G lever ..... KEEP DOWN
Note : The shock absorber performance of the affected gear is degraded. Touch down as smooth as possible.

STATUS

MAX SPEED ..... 250/.55 – L/G lever ..... KEEP DOWN INCREASED FUEL CONSUMP	INOP SYS L/G RETRACT

L/G SYS DISAGREE

R *Disagreement between the landing gear positions detected by LGCIU 1 and by LGCIU 2.*
R *Provided there is no other landing gear ECAM warning, the landing gear position is in agreement with the landing gear lever position.*
Crew awareness

L/G LGCIU 1 (2) (1 + 2) FAULT

■ One LGCIU FAULT

– GPWS (if LGCIU 1 affected) . . . . . OFF

As LGCIU 1 is lost, GPWS receives "L/G in up position" information, even if the L/G is down. Setting the GPWS SYS pushbutton OFF, prevents untimely warnings in approach.

STATUS

INOP SYS
LGCIU 1(2)
GPWS (if LGCIU 1 failed)

■ Both LGCIU FAULT :

– GPWS . . . . . OFF

As LGCIU 1 is lost, GPWS receives "L/G in up position" information, even if the L/G is down. Setting the GPWS SYS pushbutton OFF, prevents untimely warnings in approach.

● **FOR L/G EXTN :**

– L/G NORMAL EXTN . . . . . TRY

● **IF UNSUCCESSFUL :**

L/G GRVTY EXTN ONLY

Refer to the L/G GRAVITY EXTENSION procedure.

● **FOR L/G GVRTY EXTN :**

– MAX SPEED . . . . . 200 KT

STATUS

R APPR PROC :

● **FOR L/G EXTN**

– L/G NORMAL EXTN . . . . . TRY

● **IF UNSUCCESSFUL :**

● **FOR L/G GRVTY EXTN :**

– MAX SPEED . . . . . 200 KT

L/G GRVTY EXTN ONLY

ENG HI IDLE

When idle is selected on ground, only approach idle is available.

CAT 3 SINGLE ONLY

Note : Partial spoiler extension at landing, when only one MLG is compressed, is not available.

Spoilers extend normally on ground, when the wheel speed > 72 knots.

INOP SYS
LGCIU 1 + 2
REVERSERS
N/W STRG
GPWS
CAT 3 DUAL

L/G GRAVITY EXTENSION

MAX SPEED . . . . . 200 KT

Speed with main landing gear doors open is limited to 200 knots to avoid vibrations transmitted through the cabin floor.

– LDG GRVTY EXTN . . . . . DOWN

Note : Both switch guards have to be open before selecting DOWN.

– L/G lever . . . . . DOWN

The landing gear lever should be confirmed in the DOWN position for the following reasons :

- *To extinguish the UNLK lts on landing gear indications panel.*
- *To prevent the L/G CTL ECAM message on WHEEL page and the L/G NOT DOWN warning on ECAM.*
- *To minimize the risk of landing gear retraction on the ground, due to unknow system fault, when the free fall system is reset.*

– GEAR DOWN indications . . . . . CHECK

R

CAUTION

Nose wheel steering is lost.

■ **If successful :**

The free fall system should not be reset to avoid undesirable effect such as further fluid loss in the event of a leak or possible landing gear unlocking in the event of a gear selector valve jammed in UP position.

Note : The free fall system may be reset in flight after use for training.
Provided the green hydraulic system is available resetting the free fall system may permit to restore landing gear doors closure and nose wheel steering operation.

STATUS

● **WHEN L/G DOWNLOCKED**
– L/G lever . . . . . DOWN |

■ **If unsuccessful :**

Refer to "LDG WITH ABNORMAL L/G" procedure.

Note : 1. One gravity extension reset is allowed in case of "L/G GEAR NOT DOWNLOCKED" warning display.
2. In all cases the free fall system should not be reset by flight crew on the ground following free fall extension.

LDG WITH ABNORMAL L/G

The procedure is intended for use when nose or main landing gear fail to extend and/or lockdown following the application of L/G GRVTY EXTN procedure.
It is preferable to use any available landing gear, rather than carry out a belly landing.
Under these circumstances, a hard surface runway landing is recommended.
Full advantage should be taken of any foam spread on the runway.

PREPARATION

– CABIN CREW ..... NOTIFY
Notify the cabin crew of the nature of emergency encountered and state intention.
Specify the amount of preparation time available.

R – ATC ..... NOTIFY
Notify ATC of the nature of the emergency and state intentions.
Consider fuel reduction to safe minimum. This reduces VREF and, as a consequence, the load factor at impact and the energy to be dissipated.

● **If NOSE L/G abnormal**

– CG location (if possible) ..... AFT
· 10 passengers from front to rear about + 2 %

● **If one MAIN L/G abnormal**

– FUEL IMBALANCE ..... CONSIDER
Open the fuel X-FEED valve and switch off the pumps on the side with landing gear normally extended.

– OXYGEN CREW SUPPLY ..... OFF
– SEAT BELTS/NO SMOKING ..... ON
– CABIN and COCKPIT ..... PREPARE
· Loose equipment secured
· Survival equipment prepared
· Belts and shoulder harnesses locked

LDG WITH ABNORMAL L/G (CONT'D)

APPROACH

– GPWS SYS ..... OFF
– L/G LEVER ..... CHECK DOWN
– L/G GRVTY EXTN ..... RESET
– AUTOBRAKE ..... DO NOT ARM

R *Manual braking will enable better pitch and roll control. Moreover, with at least one*
R *main landing gear in the abnormal position, the autobrake cannot be activated (ground*
R *spoilers not armed).*

– EMER EXIT LT ..... ON
– COMMERCIAL ..... OFF
– CABIN REPORT ..... OBTAIN
– T TANK FEED ..... ISOL

● **If one or both MAIN L/G abnormal**

– A/SKID & N/S STRG ..... OFF

R *With one main landing gear not extended the reference speed used by the*
R *anti-skid to detect a wheel blockage is not correctly initialized. Consequently, the*
R *anti-skid must be switched off to prevent permanent brake relase.*

– MAX BRAKE PR 1000PSI

R *Modulate the brake pressure to 1000 psi because the anti-skid is off.*

R – GROUND SPOILERS ..... DO NOT ARM

To keep as much roll authority as possible for maintaining the wings level.
Ground spoiler extension would prevent spoilers from acting as roll surfaces.

BEFORE LANDING

– RAM AIR ..... ON

to ensure full depressurization of the aircraft before impact.

– BRACE FOR IMPACT ..... ORDER

FLARE, TOUCH DOWN AND ROLL OUT

Engines should be shut down sufficiently early to ensure fuel is shut off before the nacelles impact, but sufficiently late to ensure adequate hydraulic supplies for the flight controls.
Engine pumps continue to supply adequate hydraulic pressure for 30 seconds after engine shutdown.

– REVERSE ..... DO NOT USE

R *Do not use reverse to prevent ground spoiler extension, and because the engine will*
R *touch the ground during roll-out.*

LDG WITH ABNORMAL L/G

The procedure is intended for use when nose or main landing gear fail to extend and/or lockdown following the application of L/G GRVTY EXTN procedure.
It is preferable to use any available landing gear, rather than carry out a belly landing.
Under these circumstances, a hard surface runway landing is recommended.
Full advantage should be taken of any foam spread on the runway.

PREPARATION

– CABIN CREW ..... NOTIFY
Notify the cabin crew of the nature of emergency encountered and state intention. Specify the amount of preparation time available.
– ATC ..... NOTIFY
Notify ATC of the nature of the emergency and state intentions.
– JETTISON ..... CONSIDER
Consider fuel reduction to safe minimum. This reduces VREF and, as a consequence, the load factor at impact and the energy to be dissipated.

● **If NOSE L/G abnormal**
– CG location (if possible) ..... AFT
· 10 passengers from front to rear about + 2 %

● **If one MAIN L/G abnormal**
– FUEL IMBALANCE ..... CONSIDER
Open the fuel X-FEED valve and switch off the pumps on the side with landing gear normally extended.

– OXYGEN CREW SUPPLY ..... OFF
– SEAT BELTS/NO SMOKING ..... ON
– CABIN and COCKPIT ..... PREPARE
· Loose equipment secured
· Survival equipment prepared
· Belts and shoulder harnesses locked

LDG WITH ABNORMAL L/G (CONT'D)

APPROACH

– GPWS SYS ..... OFF
– L/G LEVER ..... CHECK DOWN
– L/G GRVTY EXTN ..... RESET
– AUTOBRAKE ..... DO NOT ARM

R *Manual braking will enable better pitch and roll control. Moreover, with at least one*
R *main landing gear in the abnormal position, the autobrake cannot be activated (ground*
R *spoilers not armed).*

– EMER EXIT LT ..... ON
– COMMERCIAL ..... OFF
– CABIN REPORT ..... OBTAIN
– JETTISON ..... OFF
– T TANK FEED ..... ISOL

● **If one or both MAIN L/G abnormal**

– A/SKID & N/S STRG ..... OFF

R *With one main landing gear not extended the reference speed used by the*
R *anti-skid to detect a wheel blockage is not correctly initialized. Consequently, the*
R *anti-skid must be switched off to prevent permanent brake relase.*

– MAX BRAKE PR 1000PSI

R *Modulate the brake pressure to 1000 psi because the anti-skid is off.*

– GROUND SPOILERS ..... DO NOT ARM

To keep as much roll authority as possible for maintaining the wings level.
Ground spoiler extension would prevent spoilers from acting as roll surfaces.

BEFORE LANDING

– RAM AIR ..... ON

To ensure full depressurization of the aircraft before impact.

– BRACE FOR IMPACT ..... ORDER

FLARE, TOUCH DOWN AND ROLL OUT

Engines should be shut down sufficiently early to ensure fuel is shut off before the nacelles impact, but sufficiently late to ensure adequate hydraulic supplies for the flight controls.
Engine pumps continue to supply adequate hydraulic pressure for 30 seconds after engine shutdown.

– REVERSE ..... DO NOT USE

R *Do not use reverse to prevent ground spoiler extension, and because the engine will*
R *touch the ground during roll-out.*

LDG WITH ABNORMAL L/G (CONT'D)

- **If NOSE L/G abnormal**
  - NOSE ..... MAINTAIN UP
    After touchdown, keep the nose off the runway by using the elevator. Then, lower the nose onto the runway before elevator control is lost.
  - BRAKES (compatible with elevator efficiency) . . . APPLY
  - ENG MASTERS ..... OFF
    Shut down the engines before nose impact.
- **If one MAIN L/G abnormal**
  - ENG MASTERS (in sequence) ..... OFF
    After main gear touchdown, shut down the engine on the failure side first, then the other engine before nacelle touchdown.
  - FAILURE SIDE WING ..... MAINTAIN UP
    Use roll control, as needed, to keep unsupported wing up as long as possible.
  - DIRECTIONAL CONTROL ..... MAINTAIN
    Use rudder and brakes (maximum 1000 psi) to maintain runway axis as long as possible.
- **If both MAIN L/G abnormal**
  - ENG MASTERS ..... OFF
    Shut down the engines in the flare, before touchdown.
  - PITCH ATTITUDE (at touchdown) . . NOT LESS THAN 6°

WHEN A/C STOPPED

- ENG (all) and APU FIRE pushbutton ..... PUSH
  Pressing the ENG FIRE pb shuts off the related hydraulic pressure within a short time.
- ALL ENG and APU AGENT ..... DISCH
- R EVACUATION ..... INITIATE
  · *Announce : "PASSENGER EVACUATION" over the Passenger Address system, and press the EVAC COMMAND pushbutton.*
  · *All emergency and passenger doors may be used to evacuate the aircraft.*

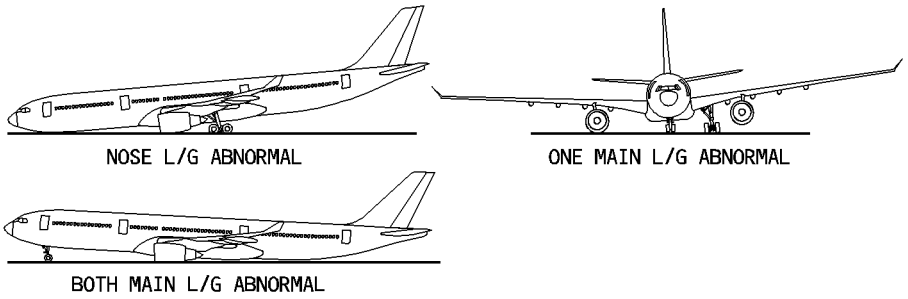

GFCS-03-0232-009-A001AA

BRAKES AUTO BRK FAULT

Crew awareness.

A tachometer is failed, or a servovalve is jammed closed, on one or two wheels.

	STATUS
CAT 3 SINGLE ONLY	INOP SYS AUTO BRK CAT 3 DUAL

BRAKES A/SKID FAULT or A/SKID NWS OFF

Antiskid is failed, or A/SKID & N/W STRG switch is at OFF. Braking is in alternate mode. For any pedal deflection, the braking effect is higher in alternate mode than in normal mode.

MAX BRK PR . . . . . 1000 PSI

Monitor brake pressure on the BRAKES PRESS indicator. Limit brake pressure to approximately 1000 psi and, at low ground speed, adjust brake pressure as required. Avoid landing on an icy runway.

	STATUS
MAX BRK PR . . . . . 1000 PSI – LDG DIST PROC . . . . . APPLY *Refer to the QRH Part 2, or to the FCOM 3.02.80.* CAT 3 SINGLE ONLY *Note : As specified in the QRH 5.04, automatic rollout is not permitted.*	INOP SYS ANTI SKID CAT 3 DUAL N/W STRG (only if sw at OFF) AUTO BRK

R

BRAKES RELEASED

A tachometer is failed, or a servovalve is jammed closed, on one or two wheels.

BRAKE 1 (2, 3, 4, 5, 6, 7, 8) RELEASED

	STATUS
– LDG DIST PROC . . . . . APPLY *Refer to the QRH Part 2, or to the FCOM 3.02.80.* CAT 3 SINGLE ONLY	INOP SYS AUTO BRK CAT 3 DUAL

R

BRAKES PARK BRK LO PR

– BRK ACCU PR . . . . . CHECK

The blue electrical pump can be used to pressurize the accumulators.

● **BEFORE ENG S/D :**

– CHOCKS . . . . . CONSIDER

Consider requesting the chocks before shutting down the engine, if the parking brake accumulator pressure is not in the green band.

CONFIG PARK BRK ON

Crew awareness.

Check that the parking brake handle is in the OFF position. If the warning stays on, check that the brake pressure, on the BRAKES PRESSURE indicator, is at zero.

R

BRAKES HOT

■ **On ground :**

– BRK FAN (if installed) . . . . . ON

R *Note : The brake temperature sensor is located close to the carbon, but not inside. Consequently, when the brake fan is ON, the indicated temperatures decrease rapidly.*

– PARK BRK : PREFER CHOCKS

· *If the BRAKES HOT message is still on, when the aircraft is parked, the flight crew should not set the parking brake ON.*

– DELAY T.O. FOR COOLG

· *Delay takeoff, until the brake temperature is below 300°C (or 150°C, if the brake fans are on).*

· *Refer to 3.04.32, for brake temperature limitations requiring maintenance action.*

■ **In flight :**

● **IF PERF PERMITS :**

– L/G . . . . . DN FOR COOLG

MAX SPEED 250/.55

· *If performance permits, landing gear retraction should be delayed to improve brake cooling.*

· *Reduce the speed to 250 knots for landing gear operation.*

STATUS

MAX SPEED . . . . . 250/.55 ▌

WHEEL HYD SEL VALVE

Failure of the normal brake selector valve, or the steering selector valve, in the open position.

– *If the normal brake selector valve is failed open, full green hydraulic pressure is present at normal servovalves' entry.*
Nosewheel steering remains available.
– *On ground, do not tow the aircraft with the green hydraulic system pressurized. Nosewheel steering remains pressurized, and so towing may break either the towbar shear pin, or the nose gear (if towbarless towing).*
– *Setting A/SKID & N/W STRG to OFF, or resetting the BSCU, will cause the nosewheel to go to maximum deflection.*
– A/SKID N/WS . . . . . KEEP ON
As long as antiskid is operative, brake pressure is regulated by normal servovalves.

STATUS

– A/SKID N/WS . . . . . KEEP ON

BRAKES SYS 1 (2) FAULT

One BSCU channel has failed.
Crew awareness.

STATUS

INOP SYS
BRAKES SYS 1 (2)

WHEEL N/W STRG FAULT

Crew awareness.

STATUS

CAT 3 SINGLE ONLY

R *Note : As specified in the QRH 5.04, automatic rollout is not*
R *authorized.*

INOP SYS
CAT 3 DUAL
N/W STRG

CONFIG PARK BRK ON

Crew awareness.

Check that the parking brake handle is in the OFF position. If the warning stays on, check that the brake pressure, on the BRAKES PRESSURE indicator, is at zero.

R

BRAKES HOT

■ **On ground :**

– BRK FAN (if installed) . . . . . ON

R *Note : The brake temperature sensor is located close to the carbon, but not inside. Consequently, when the brake fan is ON, the indicated temperatures decrease rapidly.*

– PARK BRK : PREFER CHOCKS

· *If the BRAKES HOT message is still on, when the aircraft is parked, the flight crew should not set the parking brake ON.*

– DELAY T.O. FOR COOLG

· *Delay takeoff, until the brake temperature is below 300°C (or 150°C, if the brake fans are on).*

· *Refer to 3.04.32, for brake temperature limitations requiring maintenance action.*

■ **In flight :**

● **IF PERF PERMITS :**

– L/G . . . . . DN FOR COOLG

MAX SPEED 250/.55

· *If performance permits, landing gear retraction should be delayed to improve brake cooling.*

· *Reduce the speed to 250 knots for landing gear operation.*

STATUS

MAX SPEED . . . . . 250/.55 ▌

WHEEL HYD SEL VALVE

Failure of the normal brake selector valve, or the steering selector valve, in the open position.

- *If the normal brake selector valve is failed open, full green hydraulic pressure is present at normal servovalves' entry.*
  Nosewheel steering remains available.
- *On ground, do not tow the aircraft with the green hydraulic system pressurized. Nosewheel steering remains pressurized, and so towing may break either the towbar shear pin, or the nose gear (if towbarless towing).*
- *Setting A/SKID & N/W STRG to OFF, or resetting the BSCU, will cause the nosewheel to go to maximum deflection.*
- A/SKID N/WS . . . . . KEEP ON
  As long as antiskid is operative, brake pressure is regulated by normal servovalves.

STATUS

- A/SKID N/WS . . . . . KEEP ON

BRAKES SYS 1 (2) FAULT

One BSCU channel has failed.

Crew awareness.

STATUS

INOP SYS
BRAKES SYS 1 (2)

WHEEL N/W STRG FAULT

Crew awareness.

STATUS

CAT 3 SINGLE ONLY

R *Note : As specified in the QRH 5.04, automatic rollout is not*
R *authorized.*

INOP SYS
CAT 3 DUAL
N/W STRG

WHEEL TIRE LO PR

Crew awareness.

R

NWS OVERSTEER

Maintenance action is due, when the NWS TOWING FAULT light comes on.

R

LOSS OF BRAKING

- **IF AUTOBRAKE IS SELECTED :**
  - BRAKE PEDALS ..... PRESS
    This will override the autobrake.
- **IF NO BRAKING AVAILABLE :**
  - REV ..... MAX
  - BRAKE PEDALS ..... RELEASE
    Brake pedals shoud be released when the A/SKID & N/W STRG selector is switched
R *OFF, since the pedal force or displacement produces more braking action in alternate*
R *mode than in normal mode.*
  - A/SKID & N/W STRG ..... OFF
    Braking system reverts to alternate mode.
  - BRAKE PEDALS ..... PRESS
    Apply brakes with care since initial pedal force or displacement produces more braking action in alternate mode than in normal mode.
  - MAX BRK PR ..... 1000 PSI
    Monitor brake pressure or BRAKES PRESS indicator. Limit brake pressure to approximately 1000 psi and at low ground speed adjust brake pressure as required.
- **If STILL NO BRAKING :**
  - PARKING BRAKE ..... USE
    Use short successive parking brake applications to stop the aircraft. Brake onset asymmetry may be felt at each parking brake application. If possible delay use of parking brake until low speed to reduce the risk of tyre burst and lateral control difficulties.

BRAKES RESIDUAL BRAKING

ON BRAKE 1 (2, 3, 4, 5, 6, 7, 8)

Residual brake pressure is detected, with the pedals released :

– On at least one wheel, if on the normal braking system, or

– On the left or right main gear side (affecting the four wheels).

Maintenance action is due.

RESIDUAL BRAKING PROC

■ **ON GROUND :**

On ground, a BSCU reset may be attempted, since the "BRAKES RESIDUAL BRAKING" ECAM caution may be spurious, due to :

– Drifted pressure transducer, after aircraft electrical power-up.

– BSCU detection of residual pressure decay after brake release.

The aircraft must be stopped, and the parking brake applied, before switching the A/SKID & N/W STRG selector OFF then ON.

■ **IN FLIGHT :**

For simplification purposes, the following procedure must be applied in all residual braking cases (of the normal or alternate system), even if some actions are not really necessary in the case of actual residual pressure on the normal braking system.

– BRAKES PEDALS . . . . . APPLY SEVERAL TIMES

Press the brakes pedals several times. This could zero a residual pressure on the alternate system.

● **IF RESIDUAL PRESSURE REMAINS :**

– A/SKID & N/W STRG selector . . . . . KEEP ON

■ **IF AUTOBRAKE IS AVAILABLE :**

– FOR LANDING . . . . . AUTO/BRK MED

Using MED mode gives immediate priority to normal braking upon landing gear touchdown, which cancels alternate pressure.

■ **IF AUTOBRAKE IS NOT AVAILABLE :**

– JUST AFTER TOUCHDOWN . . . . . APPLY BRAKING

Pressing the brake pedals gives immediate priority to normal braking, which cancels residual alternate pressure.

– Beware of possible braking asymmetry after touchdown, which can be controlled by using the pedals.

Note : In case of taxi with deflated or damaged tires, refer to the TAXI WITH DEFLATED TIRES procedure (FCOM 3.01.32, page 2).

R

LOSS OF BRAKING

● **IF AUTOBRAKE IS SELECTED :**

– BRAKE PEDALS ..... PRESS

This will override the autobrake.

● **IF NO BRAKING AVAILABLE :**

– REV ..... MAX

– BRAKE PEDALS ..... RELEASE

R *Brake pedals shoud be released when the A/SKID & N/W STRG selector is switched*
R *OFF, since the pedal force or displacement produces more braking action in alternate mode than in normal mode.*

– A/SKID & N/W STRG ..... OFF

Braking system reverts to alternate mode.

– BRAKE PEDALS ..... PRESS

Apply brakes with care since initial pedal force or displacement produces more braking action in alternate mode than in normal mode.

– MAX BRK PR ..... 1000 PSI

Monitor brake pressure or BRAKES PRESS indicator. Limit brake pressure to approximately 1000 psi and at low ground speed adjust brake pressure as required.

● **If STILL NO BRAKING :**

– PARKING BRAKE ..... USE

Use short successive parking brake applications to stop the aircraft. Brake onset asymmetry may be felt at each parking brake application. If possible delay use of parking brake until low speed to reduce the risk of tyre burst and lateral control difficulties.

BRAKES RESIDUAL BRAKING

ON BRAKE 1 (2, 3, 4, 5, 6, 7, 8)

Residual brake pressure is detected with the pedals released :

– On at least one wheel, if on the normal braking system, or

– On the left or right main gear side (affecting the four wheels).

Maintenance action is due.

– RESIDUAL BRK PROC . . . . . APPLY

RESIDUAL BRAKING PROC

■ **ON GROUND :**

On ground, a BSCU reset may be attempted, since the "BRAKES RESIDUAL BRAKING" ECAM caution may be spurious, due to :

– Drifted pressure transducer, after aircraft electrical power-up.

– BSCU detection of residual pressure decay after brake release.

The aircraft must be stopped, and the parking brake applied, before switching the A/SKID & N/W STRG selector OFF then ON.

■ **IN FLIGHT :**

For simplification purposes, the following procedure must be applied in all residual braking cases (of the normal or alternate system), even if some actions are not really necessary in the case of actual residual pressure on the normal braking system.

– BRAKES PEDALS . . . . . APPLY SEVERAL TIMES

Press the brakes pedals several times. This could zero a residual pressure on the alternate system.

● **IF RESIDUAL PRESSURE REMAINS :**

– A/SKID & N/W STRG selector . . . . . KEEP ON

■ **IF AUTOBRAKE IS AVAILABLE :**

– FOR LANDING . . . . . AUTO/BRK MED

Using MED mode gives immediate priority to normal braking upon landing gear touchdown, which cancels alternate pressure.

■ **IF AUTOBRAKE IS NOT AVAILABLE :**

– JUST AFTER TOUCHDOWN . . . . . APPLY BRAKING

Pressing the brake pedals gives immediate priority to normal braking, which cancels residual alternate pressure.

– Beware of possible braking asymmetry after touchdown, which can be controlled by using the pedals.

Note : In case of taxi with deflated or damaged tires, refer to the TAXI WITH DEFLATED TIRES procedure (FCOM 3.01.32, page 2).

NAV ADR 1 (2) (3) FAULT

■ **ADR 1 FAULT :**

– AIR DATA SWTG ..... CAPT ON 3

Select ADR 3 to captain side

– ADR 1 ..... OFF

– GPWS ..... OFF

R *The GPWS TERR amber FAULT light comes as the enhanced functions of the EGPWS*
R *are inhibited. As such, the GPWS TERR pushbutton switch should be switched OFF.*

■ **ADR 2 FAULT :**

– AIR DATA SWTG ..... F/O ON 3

Select ADR 3 to F/O side

– ADR 2 ..... OFF

■ **ADR 3 FAULT :**

– AIR DATA SWTG (if ADR 3 in use) ..... NORM

– ADR 3 ..... OFF

STATUS

CAT 3 SINGLE ONLY

INOP SYS
ADR 1 (2)(3) CAT 3 DUAL
GPWS (in case of ADR 1 failure)

NAV ADR 1 + 2 (1 + 3) (2 + 3) FAULT

– AIR DATA SWTG ..... CAPT ON 3 (NORM) (NORM)
– ADRs (affected) ..... OFF

Note : The crewmember on the affected side may recover air data information by using the EFIS DMC selector.

● **If ADR 1 + 2 failed :**
– GPWS ..... OFF
The GPWS TERR amber FAULT light comes on, as the enhanced functions of the EGPWS are inhibited. As such, the GPWS TERR pushbutton should be switched OFF.

● **If ADR 1 + 3 failed :**
– ATC ..... SYS 2
– GPWS ..... OFF
The GPWS TERR amber FAULT light comes on, as the enhanced functions of the EGPWS are inhibited. As such, the GPWS TERR pushbutton should be switched OFF.

● **If ADR 2 + 3 failed :**
– ATC ..... SYS 1

F/CTL ALTN LAW (PROT LOST)

MAX SPEED 330/.82

STATUS

MAX SPEED 330/.82
APPR PROC :
– FOR LDG ..... USE FLAP 3
ALTN LAW : PROT LOST
R BOTH PFDs ON SAME FMGC
CAT 1 ONLY

INOP SYS
F/CTL PROT
ADR 1+2 (1+3)
(ADR 2+3)
AP 1+2
A/THR
GPWS (if ADR 1 failed)

ADR 1+2+3 FAULT

This procedure is not displayed on the ECAM. Only dual ADR warnings are displayed, in case of a detected triple ADR failure.

– ADR (all) . . . . . OFF
– STBY INST (ALT + ASI) . . . . . USE

Note : Disregard ECAM actions for AIR DATA SWTG and ATC, since these have no effect in case of a total loss of ADRs.

F/CTL ALTN LAW (PROT LOST)

Note : The STALL WARNING is lost.

MAX SPEED 330/.82

See the following table for the IAS/M relationship for .82.

FL	410	390	370	350	330	310	290	270 and below
MAX SPD	243	252	265	278	290	305	317	330

Note : Use manual control for cabin pressurization (Refer to 3.02.21) .

STATUS

MAX SPEED 330/.82
RUD WITH CARE ABV 160 KT
The rudder travel limit value is frozen at the value it had at the moment when the failure occurred. Therefore, rudder inputs must be limited at speeds above 160 knots, so as not to damage structure. At slats' extension, full rudder travel authority is recovered.
APPR PROC :

- **FOR L/G GRVTY EXTN :**
  MAX SPEED . . . . . 200 KT
  – LDG GRVTY EXTN . . . . . DOWN
- **WHEN L/G DOWNLOCKED :**
  – L/G . . . . . DOWN

– FOR LDG . . . . . USE FLAP 3
– APPR SPD . . . . . VREF + 10 KT
Note : VLS is not displayed on the PFD.

- **DURING FINAL APPR**
  – MAN V/S CTL . . . . . FULL UP
  – LDG DIST PROC . . . . . APPLY

R *Refer to the QRH part 2, or to the FCOM 3.02.80.*

ALTN LAW : PROT LOST
BOTH PFDs ON SAME FMGC

ADR 1+2+3 FAULT (CONT'D)

STATUS

CAT 1 ONLY

R *Note : Check speed is below VFE of CONF 1+F (215 knots) before selecting Flaps 1; since ADR parameters are lost, the SFCCs will set CONF 1+F instead of CONF1.*

CAUTION

Check that the △P is at zero before opening doors.

INOP SYS

See below

INOP SYS DISPLAYED ON ECAM

R

F/CTL PROT	ADR 1+2+3	L/G RETRACT
YAW DAMPER	AP 1+2	RUD TRV LIM
A/THR	WINDSHEAR DET	GPWS
		CAB PR 1+2

OTHER INOP SYS

R

FLAPS AUTO RETRACT	ALPHA LOCK	FLAPS LOAD RELIEF
	ATC ALTI MODE	TCAS

Note : Both FCMC use default reference values for ADR parameters, resulting in an automatic one or two step forward transfer.

ADR 1+2+3 FAULT

This procedure is not displayed on the ECAM. Only dual ADR warnings are displayed, in case of a detected triple ADR failure.

– ADR (all) . . . . . OFF
– STBY INST (ALT + ASI) . . . . . USE

Note : Disregard ECAM actions for AIR DATA SWTG and ATC, since these have no effect in case of a total loss of ADRs.

F/CTL ALTN LAW (PROT LOST)

Note : The STALL WARNING is lost.

MAX SPEED 330/.82

See the following table for the IAS/M relationship for .82.

FL	410	390	370	350	330	310	290	270 and below
MAX SPD	243	252	265	278	290	305	317	330

Note : Use manual control for cabin pressurization (Refer to 3.02.21) .

STATUS

MAX SPEED 330/.82
RUD WITH CARE ABV 160 KT
The rudder travel limit value is frozen at the value it had at the moment when the failure occurred. Therefore, rudder inputs must be limited at speeds above 160 knots, so as not to damage structure. At slats' extension, full rudder travel authority is recovered.
APPR PROC :

- **FOR L/G GRVTY EXTN :**
  MAX SPEED . . . . . 200 KT
  – LDG GRVTY EXTN . . . . . DOWN
- **WHEN L/G DOWNLOCKED :**
  – L/G . . . . . DOWN

– FOR LDG . . . . . USE FLAP 3
– APPR SPD . . . . . VREF + 10 KT
Note : VLS is not displayed on the PFD.

- **DURING FINAL APPR**
  – MAN V/S CTL . . . . . FULL UP
  – LDG DIST PROC . . . . . APPLY

R *Refer to the QRH part 2, or to the FCOM 3.02.80.*

ALTN LAW : PROT LOST
BOTH PFDs ON SAME FMGC

ADR 1+2+3 FAULT (CONT'D)

STATUS

CAT 1 ONLY

Note : Check speed is below VFE of CONF 1+F (215 knots) before selecting Flaps 1; since ADR parameters are lost, the SFCCs will set CONF 1+F instead of CONF1.

INOP SYS
See below

CAUTION
Check that the △P is at zero before opening doors.

INOP SYS DISPLAYED ON ECAM

F/CTL PROT	ADR 1+2+3	L/G RETRACT
	AP 1+2	
A/THR	WINDSHEAR DET	GPWS
		CAB PR 1+2

OTHER INOP SYS

FLAPS AUTO RETRACT	ALPHA LOCK	FLAPS LOAD RELIEF
	ATC ALTI MODE	TCAS

Note : Both FCMC use default reference values for ADR parameters, resulting in an automatic one or two step forward transfer.

NAV IR 1(2) (3) FAULT

R *Note : In case of a simultaneous ADR and IR (same ADIRU) failure, apply the ADR FAULT*
R *procedure prior to the IR FAULT procedure.*

– ATT HDG SWTG . . . . . CAPT ON 3 (F/O ON 3) (NORM)

Select IR 3 to the affected side.

In case of a NAV IR 1 FAULT, the GPWS TERR amber FAULT light comes on, as the enhanced functions of the EGPWS are inhibited. As such, the GPWS TERR pushbutton should be switched OFF.

● **If IR available in ATT mode :**

– IR MODE SEL . . . . . ATT

For IR alignment in ATT mode, refer to page 5.

● **If IR totally faulty :**

– IR . . . . . OFF

Set the IR pushbutton OFF.

Note : If desired, one attempt may be made to realign a faulty IRS (light steady) in ATT mode by selecting IR MODE SEL to OFF, then to ATT. But, in this case, ATT HDG SWTG must be in the same position as the AIR DATA SWTG selector during the reset, to avoid the flight controls from temporarily reverting to ALTN law, and to avoid AP/A-THR disconnection.

STATUS	
CAT 3 SINGLE ONLY	INOP SYS CAT 3 DUAL IR 1 (2) (3) GPWS TERR (if IR1 fault) TCAS (*)

R *Note : (*) In case of an IR 1 fault, the TCAS may be inoperative (depending on the TCAS*
R *manufacturer).*

IR ALIGNMENT IN ATT MODE

If IR alignment is lost in flight, the navigation mode is inoperative (red ATT flag on the PFD, and red HDG flag on the ND).
Aircraft attitude and heading may be recovered by applying the following procedure :
The aircraft must stay level, with a constant speed for 30 seconds.

– MODE SELECTOR ..... ATT
– LEVEL A/C ATTITUDE ..... HOLD
– CONSTANT A/C SPEED ..... MAINTAIN

■ **MCDU INITIALIZATION :**

– DATA (MCDU KEY) ..... PRESS
The DATA INDEX page is displayed.
– IRS MONITOR (2L KEY) ..... PRESS
The IRS MONITOR page is displayed.
– A/C HEADING ..... ENTER
The heading must be entered in the SET HDG field (5R KEY).

■ **CDU INITIALIZATION :** ◁

– DISPLAY SYS switch ..... AFFECTED SYS
– DISPLAY DATA switch ..... HDG
– H key ..... PRESS
Degree marker, zero decimal point, ENT and CLR lights come on.
– A/C HEADING ..... ENTER
Enter the aircraft's magnetic heading on the CDU keyboard. Then press the ENT key to enter data.
Example : To enter the 320° heading, dial 3, 2, 0, 0 then press ENT.
The heading will be displayed on the associated ND.
"HDG ... ATT MODE" will be displayed on the CDU.
Note : The CDU-entered heading is sent to the FMGC and displayed in the SET HDG field of the IRS MONITOR page.

Due to IR drift, the magnetic heading must be periodically crosschecked with the standby compass and updated, if required.

R

NAV IR NOT ALIGNED

This caution is available in Phase 2 (after first engine start, until takeoff)

■ **POSITION MISMATCH**

■ **POSITION MISSING**

– PRESENT POSITION ..... INSERT

■ **EXCESS MOTION**

■ **IR 1 (2) (3) (1+2) (2+3) (1+2+3) IN ALIGN**

NAV FM/IR POS DISAGREE

This message is generated by the FWC when it detects a significant drift between any of the FMS positions and any of the IRS positions. For flight continuation, consider periodic NAV ACCURACY check.

– A/C POS . . . . . CHECK

Use the MCDU's POSITION and IRS MONITOR pages.

IR ALIGNMENT IN ATT MODE

If IR alignment is lost in flight, the navigation mode is inoperative (red ATT flag on the PFD, and red HDG flag on the ND).
Aircraft attitude and heading may be recovered by applying the following procedure :
The aircraft must stay level, with a constant speed for 30 seconds.

– MODE SELECTOR ..... ATT
– LEVEL A/C ATTITUDE ..... HOLD
– CONSTANT A/C SPEED ..... MAINTAIN

■ **MCDU INITIALIZATION :**

– DATA (MCDU KEY) ..... PRESS
The DATA INDEX page is displayed.
– IRS MONITOR (2L KEY) ..... PRESS
The IRS MONITOR page is displayed.
– A/C HEADING ..... ENTER
The heading must be entered in the SET HDG field (5R KEY).

■ **CDU INITIALIZATION :** ◁

– DISPLAY SYS switch ..... AFFECTED SYS
– DISPLAY DATA switch ..... HDG
– H key ..... PRESS
Degree marker, zero decimal point, ENT and CLR lights come on.
– A/C HEADING ..... ENTER
Enter the aircraft's magnetic heading on the CDU keyboard. Then press the ENT key to enter data.
Example : To enter the 320° heading, dial 3, 2, 0, 0 then press ENT.
The heading will be displayed on the associated ND.
"HDG ... ATT MODE" will be displayed on the CDU.
Note : The CDU-entered heading is sent to the FMGC and displayed in the SET HDG field of the IRS MONITOR page.

Due to IR drift, the magnetic heading must be periodically crosschecked with the standby compass and updated, if required.

R

NAV IR NOT ALIGNED

This caution is available in Phase 2 (after first engine start, until takeoff)

■ **POSITION MISMATCH**

■ **POSITION MISSING**

– PRESENT POSITION ..... INSERT

■ **EXCESS MOTION**

■ **IR 1 (2) (3) (1+2) (2+3) (1+2+3) IN ALIGN**

NAV FM/IR POS DISAGREE

This message is generated by the FWC, when it detects a significant drift between any of the FMS positions and any of the IRS positions. For flight continuation, consider periodic NAV ACCURACY checks.

– A/C POS . . . . . CHECK

Use the MCDU's POSITION and IRS MONITOR pages.

NAV FM/GPS POS DISAGREE

The FMS and GPS positions differ by more than :

– *A longitude threshold that depends on the latitude :*
  · *0.5 minutes for latitudes below 45°*
  · *0.7 minutes for latitudes at, or above, 45° and below 60°*
  · *1 minute for latitude at, or above, 60° and below 70°*
– *A latitude threshold of 0.5 minutes, regardless of the latitude.*

– A/C POS . . . . . CHECK

The following procedure is not displayed on the ECAM :

● **If the message occurs at takeoff initiation, or in ILS/LOC approach (LOC green)** :
  – Disregard it.

● **If the message occurs in climb, cruise, or descent** :
  – Check navigation accuracy, using raw data :
  ■ **If the check is positive** :
    – NAV mode and ND ARC/ROSE NAV may be used.
  ■ **If the check is negative** :
    – HDG/TRK mode and raw data must be used.
    – Consider switching off the terrain functions of the EGPWS.
  – When possible, compare the FM position with the GPIRS position on the POSITION MONITOR page :
  ■ **If one FM position agrees with the GPIRS position on the POSITION MONITOR page** :
    – Use the associated FD/AP.
  ■ **If not** :
    – Deselect GPS and revert to basic information.

● **If the message occurs during a non precision approach** :
  ■ **Overlay approach** :
    – SELECT HDG or TRK, and use raw data.
  ■ **GPS or RNAV approach** :
    – GO AROUND or fly visual, if visual conditions are met.

NAV IR 1 + 2 (1 + 3) (2 + 3) FAULT

– ATT HDG SWTG . . . . . CAPT ON 3 (NORM) (NORM)

● **If IR (affected) available in ATT mode :**

– IR (affected) MODE SEL . . . . . ATT

● **If IR (affected) totally faulty :**

– IR (affected) . . . . . OFF

Note : The crewmember on the affected side can recover IR information by using the EFIS DMC selector (copy of the opposite side).

SPD BRK . . . . . DO NOT USE

In case of IR 1 + 2 or IR 1 + 3 FAULT, the GPWS TERR amber FAULT light comes on as the enhanced functions of the EGPWS are inhibited. As such, the GPWS TERR pushbutton should be switched OFF.

● **IF CG AFT 32 % :**

– T TANK MODE . . . . . FWD

Fuel consumption is increased by approximately 1 %.

Note : If the trim tank pump is not available, this part of the procedure is replaced by:

· IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE . . . . . FWD

F/CTL ALTN LAW (PROT LOST)

MAX SPEED 330/.82

STATUS

SPD BRK . . . . . DO NOT USE

MAX SPEED 330/.82

APPR PROC :

– FOR LDG . . . . . USE FLAP 3

● **IF CG AFT 32 % :**

– T TANK MODE . . . . . FWD

Fuel consumption is increased by approximately 1 %.

Note : If the trim tank pump is not available, this part of the status is replaced by:

· IF CG AFT 32 % AND WHEN SPD > 270 KT AND NOT IN CLIMB :

– T TANK MODE . . . . . FWD

ALTN LAW : PROT LOST

CAT 1 ONLY

INOP SYS

F/CTL PROT

IR 1+2(1+3)(2+3)

AP 1+2

A/THR

GPWS TERR (if IR 1 fault)

TCAS (*)

Note : (*) In case of an IR 1 fault, the TCAS may be inoperative (depending on the TCAS manufacturer).

NAV EXTREME LATITUDE

– NORTH REF SEL ..... TRUE

Magnetic heading is replaced by true heading on EFIS and DDRMI.

OVERSPEED

VMO/MMO 330/.86

(255/.60 in case of dispatch with landing gear down)

VLE 250/.55

VFE ..... see below

CONF	VFE
FULL	180
3	186
2	196
1*	205
1 + F	215
1	240

NAV HDG DISCREPANCY

– HDG ..... X CHECK

Compare the 3 IR headings on MCDU page or cross check with standby compass.

– ATT HDG SWTG ..... AS RQRD

Select IR 3 to faulty side.

NAV ATT DISCREPANCY

– ATT ..... X CHECK

Cross check with standby horizon.

– ATT HDG SWTG ..... AS RQRD

Select IR 3 to faulty side.

NAV ALTI DISCREPANCY

– ALT ..... X CHECK

Cross check with standby altimeter.

– AIR DATA SWTG ..... AS RQRD

Select ADR 3 to faulty side.

NAV BARO REF DISCREPANCY

This caution is triggered if the barometer reference selections are different on both FCU control panels.

– BARO REF ..... X CHECK

NAV RA 1 (2) (1+2) FAULT

– GPWS (only in case of an RA 1, or RA 1 + 2 fault) . . . . . OFF

STATUS

■ **One RA FAULT :**
CAT 2 ONLY

INOP SYS
CAT 3
GPWS (if RA 1 fault)
RA 1 (2)

■ **Both RA FAULT :**

On the ECAM, only one of the following two statements are displayed, depending on the autopilot status.
Use manual pitch trim when flare law is active.

● **WHEN L/G DN :**
– MAN PITCH TRIM . . . . . USE
Provided the autopilot is off, switching to flare law occurs at landing gear extension.

● **WHEN L/G DN AND AP OFF :**
– MAN PITCH TRIM . . . . . USE
When the autopilot is engaged, and the landing gear is extended, switching to flare law occurs at autopilot disengagement.

CAT 1 ONLY

R *ILS APPR mode cannot be engaged ; LOC mode is*
R *available via the FCU LOC pushbutton.*

INOP SYS
RA 1 + 2
A/CALL OUT
AP 1 + 2 (in APPR)
CAT 2
GPWS

NAV ILS 1 (2) (1 + 2) FAULT

Crew awareness.

STATUS

■ **One ILS FAULT :**
CAT 1 ONLY

INOP SYS
ILS 1 (2)
CAT 2
GPWS G/S (if ILS 1 fault)

■ **Both ILS FAULT :**
CAT 1 ONLY

INOP SYS
ILS 1 + 2
CAT 2
GPWS G/S
AP 1 + 2 (in APPR)

NAV GPWS FAULT

– GPWS . . . . . OFF
This line remains displayed on the ECAM after action.

STATUS

INOP SYS
GPWS

R

NAV TCAS FAULT

– TCAS MODE . . . . . STBY
Set the TCAS on standby mode (refer to 1.34.80).The TCAS is electrically-supplied, but it is inoperative.

STATUS

INOP SYS
TCAS

NAV RA 1 (2) (1+2) FAULT

– GPWS (only in case of an RA 1, or RA 1 + 2 fault) . . . . . OFF

STATUS

■ **One RA FAULT :**
CAT 2 ONLY

INOP SYS
CAT 3
GPWS (if RA 1 fault)
RA 1 (2)

■ **Both RA FAULT :**

On the ECAM, only one of the following two statements are displayed, depending on the autopilot status.
Use manual pitch trim, when flare law is active.

● **WHEN L/G DN :**
– MAN PITCH TRIM . . . . . USE
Provided the autopilot is off, switching to flare law occurs at landing gear extension.

● **WHEN L/G DN AND AP OFF :**
– MAN PITCH TRIM . . . . . USE
When the autopilot is engaged, and the landing gear is extended, switching to flare law occurs at autopilot disengagement.

CAT 1 ONLY
ILS APPR mode cannot be engaged ; LOC mode is available via the FCU LOC pushbutton.

INOP SYS
RA 1 + 2
A/CALL OUT
AP 1 + 2 (in APPR)
CAT 2
GPWS

NAV IAS DISCREPANCY

– AIR SPD . . . . . X CHECK
– AIR DATA SWTG . . . . . AS RQRD

STATUS

CAT 3 SINGLE ONLY

INOP SYS
CAT 3 DUAL

NAV ILS 1 (2) (1 + 2) FAULT

Crew awareness.

STATUS

■ **One ILS FAULT :**
CAT 1 ONLY

INOP SYS
ILS 1 (2)
CAT 2
GPWS G/S (if ILS 1 fault)

■ **Both ILS FAULT :**
CAT 1 ONLY

INOP SYS
ILS 1 + 2
CAT 2
GPWS G/S
AP 1 + 2 (in APPR)

NAV GPWS FAULT

– GPWS . . . . . OFF
This line remains displayed on the ECAM after action.

STATUS

INOP SYS
GPWS

R

NAV TCAS FAULT

– TCAS MODE . . . . . STBY
Set the TCAS on standby mode (refer to 1.34.80).The TCAS is electrically-supplied, but it is inoperative.

STATUS

INOP SYS
TCAS

NAV GPS 1 (2) FAULT ◁*

Crew awareness

STATUS

| INOP SYS
GPS 1 (2)

STALL WARNING

When the threshold is reached, a permanent aural warning is triggered "STALL + CRICKET" as long as a correct angle-of-attack is not recovered. (Refer to 3.04.27).

R

NAV PRED W/S DET FAULT ◁*

R *The predictive windshear function is lost.*

R Crew awareness

STATUS

R | INOP SYS

R | PRED W/S DET

R

EGPWS ALERTS

CAUTION

During night or IMC conditions, apply the procedure immediately. Do not delay reaction for diagnosis.
During daylight VMC conditions, with terrain and obstacles clearly in sight, the alert may be considered cautionary. Take positive corrective action until the alert ceases, or a safe trajectory is ensured.

■ **"PULL UP" - "TERRAIN TERRAIN PULL UP" - "TERRAIN AHEAD PULL UP"**

Simultaneously :

– AP ..... OFF
– PITCH ..... PULL UP
Pull up to full backstick and maintain.
– THRUST LEVERS ..... TOGA
– SPEEDBRAKE lever ..... CHECK RETRACTED
– BANK ..... WINGS LEVEL or adjust
For "TERRAIN AHEAD PULL UP" only, in addition to climbing, and if the crew concludes that turning is the safest way of action, a turning maneuver can be initiated.

● **When the flight path is safe and GPWS warning ceases** :
Decrease pitch attitude and accelerate.

● **When speed is above VLS and vertical speed is positive** :
Clean up aircraft, as required.

■ **"TERRAIN TERRAIN" "TOO LOW TERRAIN"** :

Adjust the flight path, or initiate a go-around.

■ **"TERRAIN AHEAD"** :

Adjust the flight path. Stop descent. Climb and/or turn, as necessary, based on analysis of all available instruments and information.

■ **"SINK RATE" "DON'T SINK"** :

Adjust pitch attitude and thrust to silence the alert.

■ **"TOO LOW GEAR" - "TOO LOW FLAPS"** :

Correct the configuration, or perform a go-around.

■ **"GLIDE SLOPE"** :

Establish the airplane on the glideslope, or switch OFF the G/S mode pushbutton, if flight below the glideslope is intentional (non precision approach).

NAV GPS 1 (2) FAULT ◁*

Crew awareness

STATUS

| INOP SYS
GPS 1 (2)

STALL WARNING

When the threshold is reached, a permanent aural warning is triggered "STALL + CRICKET" as long as a correct angle-of-attack is not recovered. (Refer to 3.04.27).

R

NAV PRED W/S DET FAULT ◁*

R *The predictive windshear function is lost.*

R Crew awareness

STATUS

R | INOP SYS
R PRED W/S DET

EGPWS ALERTS

CAUTION

During night or IMC conditions, apply the procedure immediately. Do not delay reaction for diagnosis.
During daylight VMC conditions, with terrain and obstacles clearly in sight, the alert may be considered cautionary. Take positive corrective action until the alert ceases, or a safe trajectory is ensured.

■ **"PULL UP" - "TERRAIN TERRAIN PULL UP" - "TERRAIN AHEAD PULL UP" - "OBSTACLE OBSTACLE PULL UP" - "OBSTACLE AHEAD PULL UP"** :

Simultaneously :
- AP . . . . . OFF
- PITCH . . . . . PULL UP

Pull up to full backstick and maintain.
- THRUST LEVERS . . . . . TOGA
- SPEEDBRAKE lever . . . . . CHECK RETRACTED
- BANK . . . . . WINGS LEVEL or adjust

For "TERRAIN AHEAD PULL UP" only, in addition to climbing, and if the crew concludes that turning is the safest way of action, a turning maneuver can be initiated.

● **When the flight path is safe and GPWS warning ceases** :
Decrease pitch attitude and accelerate.

● **When speed is above VLS, and vertical speed is positive** :
Clean up aircraft, as required.

■ **"TERRAIN TERRAIN" - "TOO LOW TERRAIN"** :

Adjust the flight path, or initiate a go-around.

■ **"TERRAIN AHEAD" - "OBSTACLE AHEAD" - "CAUTION OBSTACLE"**:

Adjust the flight path. Stop descent. Climb and/or turn, as necessary, based on analysis of all available instruments and information.

■ **"SINK RATE" "DON'T SINK"** :

Adjust pitch attitude and thrust to silence the alert.

■ **"TOO LOW GEAR" - "TOO LOW FLAPS"** :

Correct the configuration, or perform a go-around.

■ **"GLIDE SLOPE"** :

Establish the airplane on the glideslope, or switch OFF the G/S mode pushbutton, if flight below the glideslope is intentional (non precision approach).

NAV GPWS TERR DET FAULT

The enhanced Terrain Clearance Floor and Terrain Awereness and Display modes of the EGPWS are inoperative.

– GPWS TERR ..... OFF

The basic GPWS Modes 1 to 5 are still operative, if the SYS pushbutton FAULT or OFF lights are not on.

STATUS

R R | INOP SYS
GPWS TERR

TCAS WARNINGS

■ **Traffic advisory : "TRAFFIC" messages.**

Do not maneuver based on a TA alone.
Attempt to see the reported traffic.

■ **Preventive resolution advisory : "MONITOR VERTICAL SPEED" message.**

R Maintain or adjust vertical speed, as required, to avoid the red area of the vertical speed scale.
Notify the ATC.
When "CLEAR OF CONFLICT" is announced :
Resume normal navigation, in accordance with ATC clearance.

■ **Corrective resolution advisory : All "CLIMB" and "DESCEND" "MAINTAIN VERTICAL SPEED MAINTAIN" or "ADJUST VERTICAL SPEED ADJUST" type messages.**

Respond promptly and smoothly to an RA.

– AP (if engaged) . . . . . OFF

TCAS orders may require an incremental load factor, which is greater than that achieved by the autopilot.

– BOTH FDs . . . . . OFF

Adjust the vertical speed, as required, to that indicated on the green area of the vertical speed scale.

Note : Avoid excessive maneuvers while aiming to keep the vertical speed just outside the red area of the VSI and within the green area. If necessary, use the full speed range between Vαmax and Vmax.

R Respect stall, GPWS, or windshear warning.
Notify the ATC.
When "CLEAR OF CONFLICT" is announced :

– Resume normal navigation, in accordance with ATC clearance.

The AP/FD can be re-engaged, as desired.

● **The GO AROUND procedure must be performed, when an RA "CLIMB" or "INCREASE CLIMB" is triggered on final approach.**

Note : Resolution Advisories (RA) are inhibited below 900 feet.

F/CTL IR DISAGREE

Disagreement between two IRs, the third one being failed or rejected by the PRIMs.

DIRECT LAW

Direct law becomes active. All protections (pitch and roll) are lost.

– ATT ..... X CHECK

Use the standby horizon to determine the faulty IR.

● **IF DISAGREE CONFIRMED :**

– FAULTY IR ..... OFF
– PRIM 3 ..... OFF THEN ON
– PRIM 2 ..... OFF THEN ON
– PRIM 1 ..... OFF THEN ON

After corrective action (faulty IR switched off and PRIMs reset), pitch alternate law with reduced protections is recovered.

F/CTL ALTN LAW

Refer to the associated procedure.

● **If disagree not confirmed (both IRs remain on) :**

F/CTL DIRECT LAW

Refer to the associated procedure.

F/CTL ADR DISAGREE

This caution is triggered by the PRIMs, when they only use 2 ADRs, and these 2 ADRs are not in agreement. This may occur, when :

– One ADR has already been selected OFF by the pilot, or

– One ADR has been eliminated by the PRIM, without any caution, because it deviated from the others.

– AIR SPD . . . . . X CHECK

Check airspeed information on both PFDs, and on the standby airspeed indicator.

■ **IF NO SPD DISAGREE :**

AOA DISCREPANCY

■ **IF SPD DISAGREE :**

– ADR CHECK PROC . . . . . APPLY

Refer to the associated procedure.

R ## F/CTL ALTN LAW (PROT LOST)

Note : Following an ADR DISAGREE, detected by the PRIMs, ALTN law is latched. Resetting the PRIMs by using the pushbutton does not allow normal law recovery.

Refer to the associated procedure.

R – MAX SPEED 330/.82

STATUS

R	– MAX SPEED 330/.82	INOP SYS
R	CAT 3 SINGLE ONLY	RUD TRV LIM
R	RISK OF UNDUE STALL WARN	CAT 3 DUAL
	Undue stall warnings may mainly occur, in case of an AOA discrepancy.	
R	RUD WITH CARE ABV 160 KT	
R R R R R	*The rudder travel limit value is frozen at the value it had at the moment when the failure occurred. Therefore, rudder inputs must be limited at speeds above 160 knots, so as not to damage structure. At slats' extension, full rudder travel authority is recovered.*	

NAV IR DISAGREE

Disagreement between two IRs, the third one being failed or rejected by the PRIMs.

DIRECT LAW

Direct law becomes active. All protections (pitch and roll) are lost.

– ATT ..... X CHECK

Use the standby horizon to determine the faulty IR.

● **IF DISAGREE CONFIRMED :**

– FAULTY IR ..... OFF
– PRIM 3 ..... OFF THEN ON
– PRIM 2 ..... OFF THEN ON
– PRIM 1 ..... OFF THEN ON

After corrective action (faulty IR switched off and PRIMs reset), pitch alternate law with reduced protections is recovered.

F/CTL ALTN LAW

Refer to the associated procedure.

● **If disagree not confirmed (both IRs remain on) :**

F/CTL DIRECT LAW

Refer to the associated procedure.

NAV ADR DISAGREE

This caution is triggered by the PRIMs, when they only use 2 ADRs, and when these 2 ADRs disagree. This may occur, when :

– One ADR has already been selected OFF by the pilot, or

– One ADR has been eliminated by the PRIM, without any caution, because it deviated from the others.

– AIR SPD . . . . . X CHECK

Check airspeed information on both PFDs, and on the standby airspeed indicator.

■ **IF NO SPD DISAGREE :**

AOA DISCREPANCY

■ **IF SPD DISAGREE :**

– ADR CHECK PROC . . . . . APPLY

Refer to the associated procedure.

F/CTL ALTN LAW (PROT LOST)

Note : Following an ADR DISAGREE, detected by the PRIMs, ALTN law is latched. Resetting the PRIMs, by using the pushbutton, does not allow normal law recovery.

Refer to the associated procedure.

– MAX SPEED 330/.82

	STATUS
– MAX SPEED . . . . . 330/.82 CAT 3 SINGLE ONLY RISK OF UNDUE STALL WARN *Undue stall warnings may mainly occur, in case of an AOA discrepancy.* RUD WITH CARE ABV 160 KT *The rudder travel limit value is frozen at the value it had at the moment when the failure occurred. Therefore, rudder inputs must be limited at speeds above 160 knots, in order to not damage the structure. At slats' extension, full rudder travel authority is recovered.*	INOP SYS CAT 3 DUAL

ADR CHECK PROC

Use this procedure :

– Following an ADR DISAGREE, if there is a speed disagree (16 knots minimum) between the remaining ADRs.
– In case of an erroneous speed/altitude, which can either be suspected by :
  · Speed discrepancies (between ADR 1, 2, 3, and standby instruments).
  · Fluctuating or unexpected increase/decrease/permanent indicated speed, or pressure altitude.
  · Abnormal correlation of the basic flight parameters (speed, pitch attitude, thrust, climb rate).
  · Abnormal AP/FD/ATHR behavior.
  · STALL warning, or OVERSPEED warnings, or a Flap RELIEF ECAM message, that contradicts with at least one of the indicated speeds.
    * Rely on the stall warning that could be triggered in alternate or direct law. It is not affected by unreliable speeds, because it is based on angle of attack.
    * Depending on the failure, the OVERSPEED warning may be false or justified. Buffet, associated with the OVERSPEED VFE warning, is a symptom of a real overspeed condition.
  · Inconsistency between radio altitude and pressure altitude.
  · Reduction in aerodynamic noise with increasing speed, or increase in aerodynamic noise with decreasing speed.
  · Impossibility of extending the landing gear by the normal landing gear control.

To determine the correct ADR, refer to the :

– UNRELIABLE SPEED INDICATION procedure to fly the target pitch and thrust setting (Refer to the FCOM 3.02.34), or
– SEVERE TURBULENCE procedure, if in cruise, to set a thrust and deduce the correct speed indication (Refer to the FCOM 3.04.91).
– FAULTY ADR . . . . . OFF

UNRELIABLE SPEED INDICATION

Unreliable speed indication may be due to radome damage, or due to air probe failure or obstruction.

The indicated altitude may also be affected, if static probes are affected.

Unreliable speed cannot be detected by the ADIRU. The flight control and flight guidance computers normally reject erroneous speed/altitude source(s), provided a significant difference is detected.

However, they will not be able to reject two erroneous speeds or altitudes that synchronously and similarly drift away. In this remote case, the aircraft systems will consider the remaining correct source as being faulty and will reject it. Consequently, the flight control and flight guidance computers will use the remaining two wrong ADRs for their computation.

Therefore, in all cases of unreliable speed situation, the pilots must identify the faulty ADR(s) and then switch it (them) OFF. During this failure identification time, since the flight control laws may be affected, it is recommended to maneuver the aircraft with care until the ADR(s) is (are) switched OFF.

Unreliable speed indications may be suspected, either by :

- Speed discrepancies (between ADR 1, 2, 3, and standby instruments).
- Fluctuating or unexpected increase/decrease/permanent indicated speed, or pressure altitude.
- Abnormal correlation of the basic flight parameters (speed, pitch attitude, thrust, climb rate).
- Abnormal AP/FD/ATHR behavior.
- STALL warning, or OVERSPEED warnings, or a Flap RELIEF ECAM message, that contradicts with at least one of the indicated speeds.
  - · Rely on the stall warning that could be triggered in alternate or direct law. It is not affected by unreliable speeds, because it is based on angle of attack.
  - · Depending on the failure, the OVERSPEED warning may be false or justified. Buffet, associated with the OVERSPEED VFE warning, is a symptom of a real overspeed condition.
- Inconsistency between radio altitude and pressure altitude.
- Reduction in aerodynamic noise with increasing speed, or increase in aerodynamic noise with decreasing speed.
- Impossibility of extending the landing gear by the normal landing gear control.

UNRELIABLE SPEED INDICATION (CONT'D)

How to apply the procedure :

– If the wrong speed or altitude information does not affect the safe conduct of the flight, first apply the ADR CHECK procedure to identify the faulty ADR(s) and switch it (them) OFF. If necessary, enter the unreliable speed procedure, or severe turbulence table (if in cruise), to set the pitch and thrust corresponding to the current flight phase. Check the resulting speed indicated on the table with all the indicated speeds/altitudes (from ADR 1, 2, 3 and standby instruments) to positively identify the faulty ADR(s).

– If the safe conduct of the flight is affected (all the speed indications are unreliable, or the wrong speed indication cannot be positively identified) :
  · Immediately apply the memory items : AP/FD/ATHR OFF, and fly the memory pitch – thrust settings.
  · Then, once stabilized, refer to the QRH in order to determine the pitch and thrust settings required by the current flight phase.
  · Determine the faulty ADR(s) once the aircraft is stabilized, by comparing all of the indicated speeds/altitudes (from ADR 1, 2, 3 and standby instruments) with the expected speed, as per the table ; use ground speed and GPS speed/altitude variations for reasonableness considerations.
  · In the extreme case where the faulty ADR(s) cannot be identified and all speed indications remain unreliable, apply the proper pitch-thrust settings for each flight phase until landing and refer to ground speed and GPS speed/altitude variations for assistance.

UNRELIABLE SPEED INDICATION (CONT'D)

CAUTION

If the failure is due to radome destruction, the drag will increase and therefore N1 must be increased by 3 % (CRZ) or 1.5 % (APP). Fuel flow will increase by about 13 %.

IMMEDIATE ACTIONS

- AP/FD ..... OFF
- A/THR ..... OFF
- FLAPS ..... MAINTAIN CURRENT CONFIG
- SPEEDBRAKES ..... CHECK RETRACTED

  Note : If failure is detected while in CONF FULL and go-around is initiated, select CONF 3.
- L/G ..... UP WHEN AIRBORNE

IMMEDIATE PITCH ATTITUDE AND THRUST GUIDANCE

■ **If the failure occurs before thrust reduction :**
- THRUST LEVER ..... TOGA
- PITCH ATTITUDE ..... 15°

■ **If the failure occurs after thrust reduction :**
- THRUST LEVER ..... CLB
- PITCH ATTITUDE below FL 100 ..... 10°
- PITCH ATTITUDE above FL 100 ..... 5°

UNRELIABLE SPEED INDICATION (CONT'D)

Respect the Stall warning.
Ground speed variations and radio altimeter indications can provide valuable short-term information at low altitude.
If the altitude information is affected, the FPV is unreliable. In that case, GPS (◁) altitude variations may be a valuable aid for flying in level flight. ATC altitude will also be unreliable.
In other cases, if the altitude information is not affected, the FPV is a valuable aid in establishing a safe flight path.

WHEN FLIGHT PATH IS STABILIZED

- PROBE WINDOW HEAT ..... ON
- ATTITUDE/THRUST ..... ADJUST

Takeoff phase	Pitch	Thrust	Remark
Before thrust reduction	15°	TOGA	Keep at least till thrust reduction altitude
Above thrust reduction	10°	CL	Up to MSA or Circuit Altitude
Acceleration	7.5°	CL	At MSA or Circuit Altitude, TO RETRACT SURFACE : CONF 3(2) to CONF 1 : * IMMEDIATE CONF 1 to CONF 0 : If TO in CONF 2 or 3 : *30 s. If TO in CONF 1 : . Failure before thrust reduction : *15 s. . Failure after thrust reduction : *30 s.

* Time from pitch 7.5° / thrust CL setting.
In case of immediate return to departure airport, keep the flaps in the takeoff configuration and climb to the circuit altitude or MSA. Level off at maneuvering speed : see approach table.
In case the flight continues, climb to MSA or Circuit Altitude. Retract the surfaces as explained in the above table. Then establish initial climb as per climb table.

Phase	Weight	Flight Level	Speed	Pitch Attitude	N1
CLIMB	ANY WEIGHT	Below FL50	240 knots	12.0°	CL
		FL50 to FL100		11.0°	
		FL100 to FL150		9.5°	
		FL150 to FL200		8.5°	
		FL200 to FL250	260 knots / M0.78	6.5°	
		FL250 to FL300		5.0°	
		Above FL300		4.0°	

The speeds indicated in the above table correspond to the turbulence speeds.

UNRELIABLE SPEED INDICATION (CONT'D)

Phase	Weight	Flight Level	Speed	Pitch Attitude	N1
CRUISE	Above 190 T	Below FL200	240 knots	4.5°	Adjust N1 to maintain approximate level flight with pitch attitude held constant. When time permits, refer to FCOM 3.04.91 SEVERE TURBULENCE and adjust pitch to maintain level flight
	190 T to 160 T			3.5°	
	Below 160 T			2.5°	
	Above 190 T	FL200 to FL360	260 knots	3.5°	
	190 T to 160 T			2.5°	
	Below 160 T			2.0°	
	Above 160 T	Above FL360	M0.78	3.0°	
	160 T to 140 T			2.5°	
	Below 140 T			2.0°	
DESCENT	Above 160 T	Above FL360	M0.78	0.5°	IDLE
		FL360 to FL200	260 knots	0.5°	
		FL200 to FL100	240 knots	1.5°	
		Below FL100	240 knots	1.0°	
	Below 160 T	Above FL360	M0.78	– 0.5°	
		FL360 to FL200	260 knots	– 0.5°	
		FL200 to FL100	240 knots	0°	
		Below FL100	240 knots	– 0.5°	

The speeds indicated in the above table correspond to the turbulence speeds.

UNRELIABLE SPEED INDICATION (CONT'D)

Respect the Stall warning. Ground speed variations and radio altimeter indications can provide valuable short-term information at low altitude. If the altitude information is affected, the FPV is unreliable. In that case, GPS (◁) altitude variations may be a valuable aid for flying in level flight. ATC altitude will also be unreliable.
In other cases, if the altitude information is not affected, the FPV is a valuable aid in establishing a safe flight path.

WHEN FLIGHT PATH IS STABILIZED

– PROBE WINDOW HEAT ..... ON
– ATTITUDE/THRUST ..... ADJUST

Takeoff phase	Pitch	Thrust	Remark
Before thrust reduction	15°	TOGA	Keep at least till thrust reduction altitude
Above thrust reduction	10°	CL	Up to MSA or Circuit Altitude
Acceleration	7.5°	CL	At MSA or Circuit Altitude, TO RETRACT SURFACE : CONF 3(2) to CONF 1 : * IMMEDIATE CONF 1 to CONF 0 : If TO in CONF 2 or 3 : *30 s. If TO in CONF 1 : . Failure before thrust reduction : *15 s. . Failure after thrust reduction : *30 s.

* Time from pitch 7.5° / thrust CL setting.
In case of immediate return to departure airport, keep the flaps in the takeoff configuration and climb to the circuit altitude or MSA. Level off at maneuvering speed : see approach table.
In case the flight continues, climb to MSA or Circuit Altitude. Retract the surfaces as explained in the above table. Then establish initial climb as per climb table.

Phase	Weight	Flight Level	Speed	Pitch Attitude	N1
CLIMB	ANY WEIGHT	Below FL50	240 knots	12.0°	CL
		FL50 to FL100		11.0°	
		FL100 to FL150		10.0°	
		FL150 to FL200		8.5°	
		FL200 to FL250	260 knots / M0.80	6.5°	
		FL250 to FL300		5.5°	
		FL300 to FL370		4.0°	
		Above FL370		3.5°	

The speeds indicated in the above table correspond to the turbulence speeds.

UNRELIABLE SPEED INDICATION (CONT'D)

Phase	Weight	Flight Level	Speed	Pitch Attitude	N1
CRUISE	Above 190 T	Below FL200	240 knots	4.5°	Adjust N1 to maintain approximate level flight with pitch attitude held constant. When time permits, refer to FCOM 3.04.91 SEVERE TURBULENCE and adjust pitch to maintain level flight
	190 T to 160 T			3.5°	
	Below 160 T			2.5°	
	Above 190 T	FL200 to FL370	260 knots	3.5°	
	190 T to 160 T			2.5°	
	Below 160 T			2.0°	
	Above 170 T	Above FL370	M0.80	3.0°	
	170 T to 150 T			2.5°	
	Below 150 T			2.0°	
DESCENT	Above 160 T	Above FL370	M0.80	0°	IDLE
		FL370 to FL200	260 knots	0.5°	
		FL200 to FL100	240 knots	1.5°	
		Below FL100	240 knots	1.0°	
	Below 160 T	Above FL370	M0.80	– 1.0°	
		FL370 to FL200	260 knots	– 0.5°	
		FL200 to FL100	240 knots	0°	
		Below FL100	240 knots	– 0.5°	

The speeds indicated in the above table correspond to the turbulence speeds.

UNRELIABLE SPEED INDICATION (CONT'D)

The approach phase between Green Dot speed (clean configuration) and the landing configuration (CONF 3 or CONF FULL), is flown in level flight.

R

INITIAL AND INTERMEDIATE APPROACH IN LEVEL FLIGHT						
A/C CONF		Speed	FPA	Weight	Pitch	N1
Gear Up	0	Green Dot Speed	0	Above 210 T	5.0°	67 %
				210 T to 140 T	5.0°	59 %
				below 140 T	5.0°	53 %
	1	S Speed	0	Above 210 T	9.0°	71 %
				210 T to 140 T	9.0°	62 %
				below 140 T	9.0°	57 %
	2	F Speed CONF 2	0	Above 210 T	6.0°	74 %
				210 T to 140 T	6.0°	66 %
				below 140 T	5.0°	60 %
Gear Down	3	F Speed CONF 3	0	Above 210 T	7.0°	80 %
				210 T to 140 T	7.0°	72 %
				below 140 T	5.0°	66 %
	FULL	VREF + 10	0	Above 210 T	6.0°	83 %
				210 T to 140 T	6.0°	74 %
				below 140 T	3.0°	69 %
FINAL APPROACH AT STANDARD – 3° DESCENT PATH						
A/C CONF		Speed	FPA	Weight	Pitch/AOA	N1
Gear Down	3	VLS + 10	– 3°	Above 210 T	5.0°/8.0°	59 %
				210 T to 140 T	4.0°/7.0°	51 %
				below 140 T	3.0°/6.0°	47 %
	FULL	VREF + 10	– 3°	Above 210 T	3.0°/6.0°	64 %
				210 T to 140 T	3.0./6.0°	55 %
				below 140 T	0°/3.0°	50 %

Flying technique :

– Adjust pitch, in order to fly the required path.
– When target pitch is reached, flying the intended flight path, adjust thrust to target :
  · If the aircraft pitch tends to increase to fly intended FPA, then increase thrust ;
  · If the aircraft pitch tends to decrease to fly intended FPA, then decrease thrust.

AIR ENG 1(2) BLEED FAULT

This caution appears in case of overheat, overpressure or low pressure.

– ENG BLEED affected (if not automatically closed) . . . . . OFF

The ENG BLEED is not automatically closed in case of LO PR.

The FAULT lt extinguishes when the failure disappears (overheat or overpressure).

R *PACK FLOW is limited to 80 %.*

STATUS

INOP SYS

ENG 1 (2) BLEED

AIR ABNORM BLEED CONFIG

Refer to associated procedure.

AIR ENG 1(2) BLEED NOT CLSD

This caution appears if engine bleed valve is unduly open during engine start or when APU BLEED is selected on.

– ENG BLEED (affected) . . . . . OFF

● **When engine start is completed or APU BLEED is deselected (automatic recall) :**

– ENG BLEED (affected) . . . . . ON

AIR ABNORM BLEED CONFIG

At least one BLEED system is faulty, off, or not supplied.

● **If BLEED is abnormally selected off** :
ENG 1(2) BLEED OFF

● **IF BLEED NOT RECOVERED**
– X BLEED . . . . . CLOSE or OPEN
CLOSE, if :
– LEAK, or
– ENG FIRE (detected, or FIRE pushbutton pressed), or
– Engine start valve failed open, or
– Overpressure with bleed valve failed open.
OPEN in all other cases.

■ **X BLEED OPEN**

● **If WING A. ICE off, and no engine failed** :
– PACK FLOW . . . . . LO
Pack flow is limited to 80 %

● **If WING A. ICE on or one engine failed** :
– PACK (affected side if opposite pack healthy) . . . . . OFF
Note : If the pack is switched off following an engine shutdown, it may be recovered, provided performance permits and wing anti-ice is selected off.

STATUS

	INOP SYS
ONE PACK ONLY IF WAI ON	ENG 1 (2) BLEED PACK 1 (2) (if selected off)

■ **X BLEED CLOSE**

– WING A. ICE . . . . . OFF
AVOID ICING CONDITIONS
Note : APU BLEED must not be used for wing anti-ice purposes, or after ENG 1 FIRE.

STATUS

	INOP SYS
● **IF ICE ACCRETION** : – APPR SPD . . . . . VLS + 10 KT – LDG DIST PROC . . . . . APPLY *Refer to the QRH Part 2, or to the FCOM 3.02.80.*	WING A. ICE ENG 1 (2) BLEED PACK 1(2)

R
R

AIR ENG 1(2) BLEED FAULT

This caution appears in case of overheat, overpressure or low pressure.

– ENG BLEED affected (if not automatically closed) . . . . . OFF

The ENG BLEED is not automatically closed in case of LO PR.

The FAULT lt extinguishes when the failure disappears (overheat or overpressure).

R *PACK FLOW is limited to 80 %.*

STATUS

INOP SYS

ENG 1 (2) BLEED

AIR ABNORM BLEED CONFIG

Refer to associated procedure.

AIR ENG 1(2) BLEED NOT CLSD

This caution appears if engine bleed valve is unduly open during engine start or when APU BLEED is selected on.

– ENG BLEED (affected) . . . . . OFF

● **When engine start is completed or APU BLEED is deselected (automatic recall) :**

– ENG BLEED (affected) . . . . . ON

AIR ABNORM BLEED CONFIG

At least one BLEED system is faulty, off, or not supplied.

● **If BLEED is abnormally selected off** :
ENG 1(2) BLEED OFF

● **IF BLEED NOT RECOVERED**
– X BLEED . . . . . CLOSE or OPEN
CLOSE, if :
– LEAK, or
– ENG FIRE (detected, or FIRE pushbutton pressed), or
– Engine start valve failed open, or
– Overpressure with bleed valve failed open.
OPEN in all other cases.

■ **X BLEED OPEN**

● **If WING A. ICE off, and no engine failed** :
– PACK FLOW . . . . . LO
Pack flow is limited to 80 %
– FWD CRG COOLING . . . . . OFF

● **If WING A. ICE on or one engine failed** :
– PACK (affected side if opposite pack healthy) . . . . . OFF
Note : If the pack is switched off following an engine shutdown, it may be recovered, provided performance permits and wing anti-ice is selected off.

ONE PACK ONLY IF WAI ON

STATUS
INOP SYS
ENG 1 (2) BLEED
FWD CRG TEMP
PACK 1 (2)
(if selected off)

■ **X BLEED CLOSE**
– WING A. ICE . . . . . OFF
AVOID ICING CONDITIONS
Note : APU BLEED must not be used for wing anti-ice purposes, or after ENG 1 FIRE.

STATUS

● **IF ICE ACCRETION** :
– APPR SPD . . . . . VLS + 10 KT
– LDG DIST PROC . . . . . APPLY
R *Refer to the QRH Part 2, or to the*
R *FCOM 3.02.80.*

INOP SYS
WING A. ICE
ENG 1 (2) BLEED
FWD CRG TEMP
PACK 1(2)

AIR L(R) WING or ENG 1(2) BLEED LEAK

– ENG BLEED (affected side, if not automatically closed) . . OFF
  · *With the ENG BLEED pushbutton on, the FAULT light remains on*
  · *With the ENG BLEED pushbutton OFF, the FAULT light goes off, when the overheat disappears.*
– APU BLEED (if not closed, only in case of L WING LEAK or ENG 1 BLEED LEAK) . . . . . OFF

AIR ABNORM BLEED CONFIG

– X BLEED (if not closed) . . . . . CLOSE
– WING A. ICE . . . . . OFF
AVOID ICING CONDITIONS

STATUS

AVOID ICING CONDITIONS
APPR PROC
● **IF ICE ACCRETION** :
– APPR SPD . . . . . VLS + 10 KT
– LDG DIST PROC . . . . . APPLY
Refer to the QRH Part 2, or to the FCOM 3.02.80.

INOP SYS
WING A. ICE
ENG 1(2) BLEED
PACK 1 (2)
APU BLEED
(left side affected)

R

AIR APU BLEED LEAK

– APU BLEED (if not automatically closed) . . . . . OFF
  · *With the APU BLEED pushbutton on, the FAULT light remains on.*
  · *With the APU BLEED pushbutton OFF, the FAULT light goes off, when the overheat disappears.*

STATUS

INOP SYS
APU BLEED

AIR ENG 1(2) HPV NOT OPEN

Crew awareness.

	STATUS
NO BLEED 1 (2) AT LOW PWR	

AIR APU BLEED FAULT

The valve position disagrees with the commanded position, when the APU is running.

Crew awareness.

STATUS
INOP SYS
APU BLEED
(if valve closed)

AIR L(R) WNG LEAK DET FAULT

Crew awareness.

STATUS
INOP SYS
L(R) LEAK DET

AIR X BLEED FAULT

– X BLEED . . . . . MAN CTL

Select OPEN, when the APU BLEED VALVE pushbutton is ON, or for engine start, or when WING ANTI ICE is ON with one bleed inoperative.

R

● **If manual opening is inoperative, and one BLEED is off :**

AIR ABNORM BLEED CONFIG

Refer to the associated procedure.

	STATUS
AIR X BLEED MAN CTL	INOP SYS
	AIR X BLEED
	(if closed)

AIR L(R) WING or ENG 1(2) BLEED LEAK

– ENG BLEED (affected side, if not automatically closed) . . OFF
  · *With the ENG BLEED pushbutton on, the FAULT light remains on*
  · *With the ENG BLEED pushbutton OFF, the FAULT light goes off, when the overheat disappears.*
– APU BLEED (if not closed, only in case of L WING LEAK or ENG 1 BLEED LEAK) . . . . . OFF

AIR ABNORM BLEED CONFIG

– X BLEED (if not closed) . . . . . CLOSE
– FWD CRG COOLING . . . . . OFF
– WING A. ICE . . . . . OFF

AVOID ICING CONDITIONS

STATUS

AVOID ICING CONDITIONS
APPR PROC
- **IF ICE ACCRETION** :
  – APPR SPD . . . . . VLS + 10 KT
  – LDG DIST PROC . . . . . APPLY

R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*

INOP SYS
WING A. ICE
ENG 1(2) BLEED
PACK 1 (2)
APU BLEED
(left side affected)
FWD CRG TEMP

AIR APU BLEED LEAK

– APU BLEED (if not automatically closed) . . . . . OFF
  · *With the APU BLEED pushbutton on, the FAULT light remains on.*
  · *With the APU BLEED pushbutton OFF, the FAULT light goes off, when the overheat disappears.*

STATUS

INOP SYS
APU BLEED

AIR ENG 1(2) HPV NOT OPEN

Crew awareness.

	STATUS
NO BLEED 1 (2) AT LOW PWR	

AIR APU BLEED FAULT

The valve position disagrees with the commanded position, when the APU is running.

Crew awareness.

STATUS
INOP SYS
APU BLEED (if valve closed)

AIR L(R) WNG LEAK DET FAULT

Crew awareness.

STATUS
INOP SYS
L(R) LEAK DET

AIR X BLEED FAULT

– X BLEED . . . . . MAN CTL

Select OPEN, when the APU BLEED VALVE pushbutton is ON, or for engine start, or when WING ANTI ICE is ON with one bleed inoperative.

R

● **If manual opening is inoperative, and one BLEED is off :**

AIR ABNORM BLEED CONFIG

Refer to the associated procedure.

	STATUS
AIR X BLEED MAN CTL	INOP SYS
	AIR X BLEED (if closed)

AIR BMC 1(2) FAULT

- **If APU bleed is selected ON :**
  - ENG (affected) BLEED . . . . . OFF
- **If APU bleed is selected OFF :**
  - ENG (affected) BLEED . . . . . ON

STATUS

INOP SYS
BMC 1(2)

AIR BLEED LO TEMP

If the "BLEED LO TEMP" warning is triggered when crossing 1500 feet, whilst the wing anti-ice system is "off", it is to be considered as a spurious warning. It can be cleared by setting the wing anti-ice pushbutton "ON", then "off".

ON BLEED 1(2)

In flight, engine bleed temperature is too low for wing deicing.

– ENG PWR . . . . . INCREASE

The thrust lever of the affected engine must be advanced with the autothrust OFF.

R *Low bleed temperature may be due to low outside air temperature. Therefore, increasing*
R *engine thrust may increase bleed temperature and clear the ECAM caution.*

■ **If one BLEED LO TEMP :**

● **IF UNSUCCESSFUL :**

– ENG BLEED (affected) . . . . . OFF

■ **If both BLEEDs LO TEMP :**

– WING ANTI ICE . . . . . OFF

AVOID ICING CONDITIONS

AIR ABNORM BLEED CONFIG

STATUS

● **If both BLEEDs LO TEMP :**
AVOID ICING CONDITIONS

APPR PROC

● **IF ICE ACCRETION**

– APPR SPD . . . . . VLS + 10 KT

– LDG DIST PROC . . . . . APPLY

R *Refer to the QRH part 2, or to the FCOM 3.02.80*

INOP SYS
WING A. ICE
ENG 1(2) BLEED

AIR DUAL BLEED FAULT

Do not apply this procedure if ENG BLEED 1 was lost due to :
· LEAK on side 1
· ENG 1 FIRE
· Start Air Valve 1 failed open

MAX FL 220

Descend rapidly to FL 220 with full speedbrakes to recover the BLEED supply from the APU.

– APU ..... START

Start the APU during the descent.

● **AT OR BELOW FL 220 :**

● **If ENG 2 BLEED loss due to :**

LEAK on side 2 or
ENG 2 FIRE or
Start air valve 2 failed open

– X BLEED ..... CLOSE

R – PACK 2 (if above 17500 ft) ..... OFF

R *Only if PACK 1 is available.*

– WING A.ICE ..... OFF

APU BLEED must not be used for wing anti-ice.

– APU BLEED ..... ON

AVOID ICING CONDITIONS

DATALINK ATSU FAULT

Crew awareness.
ATSU INIT FAULT
Displayed in case of failure at ATSU initialization. Refer to 3.04.46 for ATSU initialization.

STATUS

	INOP SYS
ATC COM VOICE ONLY	ATSU
COMPANY COM VOICE ONLY	DATALINK ATC
	DATA COMPANY

DATALINK ATC FAULT

Crew awareness.
ATC COM VOICE ONLY

STATUS

	INOP SYS
ATC COM VOICE ONLY	DATALINK ATC

DATALINK COMPANY FAULT

Crew awareness.

STATUS

	INOP SYS
	DATA COMPANY

APU FAULT

■ EMER SHUT DOWN

EMER SHUT DOWN is triggered if :

- *the ground crew presses the APU SHUT OFF pushbutton on the nose gear interphone panel, or*
- *the flight crew presses the APU FIRE pushbutton in the cockpit, or*
- *the ground crew presses the APU EMER SHUT DOWN pushbutton on the Refuel/Defuel panel.*

– MASTER SW ..... OFF

■ AUTO SHUT DOWN

– MASTER SW ..... OFF

■ Non automatic APU shut down

A failure has been detected by the ECB, but the APU remains available.
Shut down the APU manually, except if it is required in flight for electrical or pneumatic purposes.

R ● **IF USE NOT ESSENTIAL :**

– MASTER SW ..... OFF

STATUS

INOP SYS
APU

DOOR

DOOR L(R) FWD CABIN, or
DOOR L(R) MID CABIN, or
DOOR L(R) AFT CABIN, or
DOOR L(R) EMER EXIT, or
DOOR FWD (AFT) (BULK) CARGO, or
DOOR AVIONIC, or
DOOR UPPER DECK CARGO ◁

Crew may confirm a cabin door warning by checking the visual indicator on the door.

R *Prior to taxi-out, the FWD (AFT) CARGO warning can be confirmed by checking the visual*
R *indicator flags on the base of the cargo doors.*

■ **On ground :**

PACKS + CAB PR NOT AVAIL

STATUS

INOP SYS
CAB PR 1+2
PACK 1+2

■ **In flight :**

No crew action is required, as long as cabin pressure is normal.

● **IF ABN CAB V/S :**

Limit maximum flight level to FL 100, or MEA, or minimum obstacle clearance altitude.

MAX FL 100/MEA

If the door warning is accompanied by an abnormal increase in cabin altitude, the flight crew must reduce cabin △P and altitude by descending.

Cabin and Avionic doors are of the plug type. Therefore, full depressurization is not recommended.

STATUS

MAX FL . . . . . 100/MEA ▌

DOOR POS DET 1(2) (1+2)

- **on ground before take off :**
  PACKS + CAB PR NOT AVAIL
  Failure of PSCU channel 1(2) (1+2)

STATUS

INOP SYS
PACK 1+2
CAB PR 1+2
DOOR DET 1(2)
(DOORS DET)

ENG 1 (2) FAIL

An engine flame-out may be recognized by a rapid decrease in EGT, N2, FF, followed by a decrease in N1.

Engine damage may be accompanied by :

- *Explosions*
- *Significant increase in aircraft vibrations, and/or buffeting*
- *Repeated, or uncontrollable engine stalls*
- *Associated abnormal indications, such as hydraulic fluid loss, no N2 indication.*

■ **Before takeoff, or after landing :**

- THR LEVER (affected engine) . . . . . IDLE
- ENG MASTER (affected engine) . . . . . OFF

On ground, after 15 minutes, the FADEC is no longer supplied. So, the THR LEVER.....IDLE line reappears, even if the thrust lever is at idle.

● **IF DAMAGE :**

- ENG FIRE P/B (affected engine) . . . . . PUSH

If the ENG FIRE pushbutton is pushed, the FADEC is no longer supplied. So, the THR LEVER.....IDLE line reappears, even if the thrust lever is at idle.

- AGENT 1 . . . . . DISCH
- L + R INR TK SPLIT . . . . . ON

● **IF NO DAMAGE :**

- ENG (affected) RELIGHT . . . . . CONSIDER

ENG 1(2) SHUT DOWN

Apply the After ENG SHUT DOWN procedure, if damage, or if engine relight is unsuccessful.

ENG 1 (2) FAIL (CONT'D)

■ **In flight**

– ENG START SEL ..... IGN

Selection of continuous ignition confirms the FADEC's immediate relight attempt.

– THR LEVER (affected engine) ..... IDLE

Note : In case of GPWS (EGPWS ◁) alerts, reduce speed with care below VLS with flaps extended (at light weights VMC may be reached before α.max), when applying the GPWS (EGPWS ◁) procedure.

● **IF NO ENG RELIGHT AFTER 30 S :**

– ENG MASTER (affected engine) ..... OFF

● **IF DAMAGE :**

– ENG FIRE P/B (affected engine) ..... PUSH

If the ENG FIRE pushbutton is pushed, the FADEC is no longer supplied. So, the THR LEVER....IDLE line reappears, even if the thrust lever is at idle.

– AGENT 1 AFT 10 S ..... DISCH

– L + R INR TK SPLIT ..... ON

Note : If no fuel leak is evident, set both INR TK SPLIT pushbuttons back to the normal position.

● **IF NO DAMAGE :**

– ENG (affected) RELIGHT ..... CONSIDER

Apply the ENG RELIGHT (in flight) procedure.

ENG 1(2) SHUT DOWN

Apply the After ENG SHUT DOWN procedure, if damage, or if engine relight is unsuccessful. If high vibration occurs and continues after engine shutdown, reduce airspeed and descend to a safe altitude.

Attempt to define, and use, a practical airspeed and altitude for minimum vibrations. For performance reasons, the landing is in CONF 3. CONF 3 should be selected, as the landing configuration, on the MCDU.

ENG 1 (2) FAIL

An engine flame-out may be recognized by a rapid decrease in EGT, N2, FF, followed by a decrease in N1.

Engine damage may be accompanied by :

- *Explosions*
- *Significant increase in aircraft vibrations, and/or buffeting*
- *Repeated, or uncontrollable, engine stalls*
- *Associated abnormal indications, such as hydraulic fluid loss, no N2 indication.*

■ **Before takeoff, or after landing :**

- THR LEVER (affected engine) . . . . . IDLE
- ENG MASTER (affected engine) . . . . . OFF

● **IF DAMAGE :**

- ENG FIRE P/B (affected engine) . . . . . PUSH
- AGENT 1 . . . . . DISCH
- L + R INR TK SPLIT . . . . . ON

● **IF NO DAMAGE :**

- ENG (affected) RELIGHT . . . . . CONSIDER

ENG 1(2) **SHUT DOWN**

Apply the After ENG SHUT DOWN procedure, if damage, or if engine relight is unsuccessful.

ENG 1 (2) FAIL (CONT'D)

■ **In flight**

– ENG START SEL ..... IGN

Selection of continuous ignition confirms the FADEC's immediate relight attempt.

– THR LEVER (affected engine) ..... IDLE

Note : In case of GPWS (EGPWS ◁) alerts, reduce speed with care below VLS with flaps extended (at light weights VMC may be reached before α.max), when applying the GPWS (EGPWS ◁) procedure.

● **IF NO ENG RELIGHT AFTER 30 S :**

– ENG MASTER (affected engine) ..... OFF

● **IF DAMAGE :**

– ENG FIRE P/B (affected engine) ..... PUSH

If the ENG FIRE pushbutton is pushed, the FADEC is no longer supplied. So, the THR LEVER....IDLE line reappears, even if the thrust lever is at idle.

– AGENT 1 AFT 10 S ..... DISCH

– L + R INR TK SPLIT ..... ON

Note : If no fuel leak is evident, set both INR TK SPLIT pushbuttons back to the normal position.

● **IF NO DAMAGE :**

– ENG (affected) RELIGHT ..... CONSIDER

Apply the ENG RELIGHT (in flight) procedure.

ENG 1(2) SHUT DOWN

Apply the After ENG SHUT DOWN procedure, if damage, or if engine relight is unsuccessful. If high vibration occurs and continues after engine shutdown, reduce airspeed and descend to a safe altitude.

Attempt to define, and use, a practical airspeed and altitude for minimum vibrations. For performance reasons, the landing is in CONF 3. CONF 3 should be selected, as the landing configuration, on the MCDU.

After ENG 1(2) SHUTDOWN

LAND ASAP

– ENG START SEL ..... IGN

Continuous ignition is selected to protect the remaining engine.

Note : If the Y ELEC PUMP is running after ENG 2 failure (engine failure before flaps retraction), SWITCH OFF the pump when in clean configuration.

– L/G (displayed during the takeoff phase) ..... UP

– FUEL IMBALANCE ..... MONITOR

Note : If engine windmilling induces transient HYD SYS LO PR warnings, it is recommended that the hydraulic pumps, associated with the failed engine, be switched off. This procedure is only applicable if the engine will not be restarted.

– TCAS MODE SEL ◁ ..... TA

Secondary Failure
* ELEC
* HYD
* F/CTL

Note : In some conditions, with full asymmetric power, the aircraft may be control-limited before reaching the limits of the protection system. Therefore, in extreme conditions, where low speed may be advantageous (GPWS, WINDSHEAR, etc), reduce speed with care below VLS and respect the minimum control speed.

AIR ABNORM BLEED CONFIG

Refer to 3.02.36.

STATUS

APPR PROC

● **BEFORE S/F EXTENSION (if ENG 2 shutdown) :**

– YELLOW ELEC PUMP ..... OFF

– FOR LDG ..... USE FLAP 3

– FUEL IMBALANCE ..... MONITOR

– LDG DIST PROC ..... APPLY

R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*

CONSIDER APU GEN USE

SLATS SLOW (if ENG 1 shutdown)

FLAPS SLOW (if ENG 2 shutdown)

CAT 3 SINGLE ONLY

Note : If one ENG FIRE pushbutton has been pushed, A/THR may be inoperative for RR and PW engines. Therefore, landing capability is degraded to CAT 2.

INOP SYS

BLUE HYD
(YELLOW HYD)
PART SPLRS
REV 1 (2)
CAT 3 DUAL
ENG 1 (2) BLEED
PACK 1(2)
G ENG 1 (2) PUMP
B ENG 1 PUMP
(Y ENG 2 PUMP)
GEN 1 (2)
ALTN BRK (if ENG 1 shutdown)
PART GALLEY
YAW DAMPER 2 (if ENG 2 shutdown)

ENG ALL ENG FLAME OUT

LAND ASAP

This warning inhibits the EMER ELEC CONFIG warning.

– RAT ..... MAN ON
This confirms RAT extension.

– ENG START SEL ..... IGN
This confirms immediate relight attempt.

– THR LEVERS ..... IDLE

– OPTIMUM RELIGHT SPD 300/.82
300/.82 is the optimum airspeed for a windmilling start. One fuel pump is supplied down to 260 knots. Increase speed during descent toward 300 knots. Do not exceed MMO.
Note : · At 300/.82 with all engines stopped, it takes about 15 minutes to descend from FL 400 to the ground. Distance is about 100 NM.
· In case of a speed indication failure (volcanic ash), the pitch attitude for optimum relight speed is – 2 degrees (for weights above 150 tons, add 1/2 degree for each additional 20 tons).

– EMER ELEC PWR ..... MAN ON
Only displayed, if the emergency generator is not automatically coupled.

– VHF1 ..... USE
Only VHF1 is supplied. Notify traffic control of the nature of the emergency, and state intentions. Transmit a distress message on VHF frequency 121.5 MHz (ATC not supplied).

● **IF NO RELIGHT AFTER 30 SEC :**

– ENG MASTERS ..... OFF 30S/ON
ENG MASTERS must be left OFF for 30 seconds, to allow ventilation of the combustion chamber.

● **IF UNSUCCESSFUL :**

– CREW OXY MASK (above FL 100) ..... ON

● **WHEN BELOW FL 250 :**

– APU (if operative) ..... START

● **WHEN BELOW FL 200 :**

– WING ANTI ICE ..... OFF

– APU BLEED ..... ON

● **IN SEQUENCE**

– ENG MASTERS (one at a time) ..... OFF 30S/ON

– OPTIMUM SPEED (when APU BLEED available) . . . 230 KT
Green dot speed is not displayed on the Captain's PFD. Use 230 knots initially, then use the one engine-out green dot value (Refer QRH 4.01).

After ENG 1(2) SHUTDOWN

LAND ASAP

– ENG START SEL ..... IGN

Continuous ignition is selected to protect the remaining engine.

Note : If the Y ELEC PUMP is running after ENG 2 failure (engine failure before flaps retraction), SWITCH OFF the pump when in clean configuration.

– L/G (displayed during the takeoff phase) ..... UP

– FUEL IMBALANCE ..... MONITOR

Note : If engine windmilling induces transient HYD SYS LO PR warnings, it is recommended that the hydraulic pumps, associated with the failed engine, be switched off. This procedure is only applicable if the engine will not be restarted.

– TCAS MODE SEL ◁ ..... TA

Secondary Failure
* ELEC
* HYD
* F/CTL

Note : In some conditions, with full asymmetric power, the aircraft may be control-limited before reaching the limits of the protection system. Therefore, in extreme conditions, where low speed may be advantageous (GPWS, WINDSHEAR, etc), reduce speed with care below VLS and respect the minimum control speed.

AIR ABNORM BLEED CONFIG

Refer to 3.02.36.

STATUS

APPR PROC

- **BEFORE S/F EXTENSION :**
  - **If ENG 1 S/D and green hyd lost :**
    - BLUE ELEC PUMP ..... OFF
  - **If ENG 2 S/D and green hyd lost :**
    - YELLOW ELEC PUMP ..... OFF
  - FOR LDG ..... USE FLAP 3
- FUEL IMBALANCE ..... MONITOR
- LDG DIST PROC ..... APPLY

R *Refer to the QRH Part 2, or the FCOM 3.02.80.*

CONSIDER APU GEN USE

SLATS SLOW (if ENG 1 shutdown)

FLAPS SLOW (if ENG 2 shutdown)

CAT 3 SINGLE ONLY

Note : If one ENG FIRE pushbutton has been pressed, A/THR may be inoperative for RR and PW engines. Therefore, landing capability is degraded to CAT 2.

INOP SYS
BLUE HYD
(YELLOW HYD)
PART SPLRS
REV 1 (2)
CAT 3 DUAL
ENG 1 (2) BLEED
PACK 1(2)
G ENG 1 (2) PUMP
B ENG 1 PUMP
(Y ENG 2 PUMP)
GEN 1 (2)
ALTN BRK (if ENG 1 shutdown)
PART GALLEY

ENG ALL ENG FLAME OUT

LAND ASAP

This warning inhibits the EMER ELEC CONFIG warning.

– RAT ..... MAN ON
This confirms RAT extension.

– ENG START SEL ..... IGN
This confirms immediate relight attempt.

– THR LEVERS ..... IDLE

– OPTIMUM RELIGHT SPD 300/.82
300/.82 is the optimum airspeed for a windmilling start. One fuel pump is supplied down to 260 knots. Increase speed during descent toward 300 knots. Do not exceed MMO.
Note : · At 300/.82 with all engines stopped, it takes about 15 minutes to descend from FL 400 to the ground. Distance is about 100 NM.
· In case of a speed indication failure (volcanic ash), the pitch attitude for optimum relight speed is – 2 degrees (for weights above 150 tons, add 1/2 degree for each additional 20 tons).

– EMER ELEC PWR ..... MAN ON
Only displayed, if the emergency generator is not automatically coupled.

– VHF1 ..... USE
Only VHF1 is supplied. Notify traffic control of the nature of the emergency, and state intentions. Transmit a distress message on VHF frequency 121.5 MHz (ATC not supplied).

● **IF NO RELIGHT AFTER 30 SEC :**

– ENG MASTERS ..... OFF 30S/ON
ENG MASTERS must be left OFF for 30 seconds, to allow ventilation of the combustion chamber.

● **IF UNSUCCESSFUL :**

– CREW OXY MASK (above FL 100) ..... ON

● **WHEN BELOW FL 250 :**

– APU (if operative) ..... START

● **WHEN BELOW FL 200 :**

– WING ANTI ICE ..... OFF

– APU BLEED ..... ON

● **IN SEQUENCE**

– ENG MASTERS (one at a time) ..... OFF 30S/ON

– OPTIMUM SPEED (when APU BLEED available) . . . 230 KT
Green dot speed is not displayed on the Captain's PFD. Use 230 knots initially, then use the one engine-out green dot value (Refer QRH 4.01).

ENG ALL ENG FLAME OUT (CONT'D)

– USE RUD WITH CARE

If forced landing or ditching is expected, use the forced landing or ditching procedure found in the QRH.

● **WHEN BELOW FL 150 :**

– RAM AIR ..... ON

● **EARLY IN APPROACH :**

– CAB SECURE ..... ORDER

● **FOR SLATS EXTENSION :**

– LAND RECOVERY ..... ON

– FOR LDG ..... USE FLAP 1

At FLAP 1 selection the emergency generator stops.

– MIN RAT SPEED ..... 140 KT

F/CTL servos are supplied by the RAT down to 130 knots.

● **FOR L/G GRVTY EXTN :**

MAX SPEED ..... 200 KT

– L/G GRVTY EXTN (if no ditching expected) ..... DOWN

Disregard "USE MAN PITCH TRIM" on the PFD since the stabilizer control is lost.

● **WHEN L/G DOWNLOCKED :**

– L/G lever ..... DOWN

TARGET SPD ..... 170 KT

● **AT TOUCH DOWN :**

– ENG MASTERS ..... OFF

– APU MASTER SW ..... OFF

– EVACUATION ..... INITIATE

HYD B + Y SYS LO PR

– AFFECTED PUMPS ..... OFF

MANEUVER WITH CARE

F/CTL ALTN LAW (PROT LOST)

SPD BRK ..... DO NOT USE

MAX SPEED 330/.82

ENG ALL ENG FLAME OUT (CONT'D)

STATUS

SPD BRK . . . . . DO NOT USE
MAX SPEED 330/.82
MIN RAT SPEED . . . . . 140 KT
MANEUVER WITH CARE
AVOID ICING CONDITIONS
MAX BRK PR . . . . . 1000 PSI
APPR PROC
- **FOR SLATS EXTENSION :**
  - LAND RECOVERY . . . . . ON
  - FOR LDG . . . . . USE FLAP 1
- **AT SLATS EXTENSION (if a FUEL FWD XFR has been selected) :**
  - TTK MODE . . . . . AUTO
  - TTK FEED . . . . . AUTO
- **FOR L/G GRVTY EXTN :**
  MAX SPEED . . . . . 200 KT
  - L/G GRVTY EXTN . . . . . DOWN
- **WHEN L/G DOWNLOCKED :**
  - L/G . . . . . DOWN
- PITCH AUTHORITY REDUCED
- TARGET SPD . . . . . 170 KT

ALTN LAW : PROT LOST
CONSIDER APU GEN USE
MCDU BACK UP NAV AVAIL
CAT 1 ONLY

INOP SYS
F/CTL PROT
STABILIZER
B + Y HYD
PACK 1 + 2
PRIM 2 + 3
ADR 2+3
RA 1 + 2
A/CALL OUT
ANTI SKID
RUD TRIM
WING A.ICE
MOST SPLRS
REVERSERS
HF 1 + 2
N/W STRG
AUTO BRK
ALTN BRK
MOST F.PUMPS
GPS 1+2 ◁

AFTER LAND RECOVERY : ILS 1, LGCIU 1, SLATS CHANNEL 1, are recovered. SLATS SLOW is displayed on the STATUS. Remaining Fuel pump stops. ALL F.PUMPS is displayed in INOP SYS list.

Note : STATUS is simplified in ALL ENG FLAME OUT configuration, only the most important STATUS items are kept.

ENG ALL ENG FLAME OUT (CONT'D)

If forced landing or ditching is expected, use the forced landing or ditching procedure found in the QRH.

- **EARLY IN APPROACH :**
  - CAB SECURE ..... ORDER
- **FOR SLATS EXTENSION :**
  - LAND RECOVERY ..... ON
  - FOR LDG ..... USE FLAP 1

  At FLAP 1 selection, the emergency generator stops.
  - MIN RAT SPEED ..... 140 KT

  F/CTL servos are supplied by the RAT down to 130 knots.
- **FOR L/G GRVTY EXTN :**

  MAX SPEED ..... 200 KT
  - L/G GRVTY EXTN (if no ditching expected) ..... DOWN

  Disregard "USE MAN PITCH TRIM" on the PFD, since stabilizer control is lost.
- **WHEN L/G DOWNLOCKED :**
  - L/G lever ..... DOWN

  TARGET SPD ..... 170 KT
- **AT TOUCHDOWN :**
  - ENG MASTERS ..... OFF
  - APU MASTER SW ..... OFF
  - EVACUATION ..... INITIATE

HYD B + Y SYS LO PR

– AFFECTED PUMPS ..... OFF

MANEUVER WITH CARE

F/CTL ALTN LAW (PROT LOST)

SPD BRK ..... DO NOT USE

MAX SPEED 330/.82

ENG ALL ENG FLAME OUT (CONT'D)

STATUS

SPD BRK . . . . . DO NOT USE
MAX SPEED 330/.82
MIN RAT SPEED . . . . . 140 KT
MANEUVER WITH CARE
AVOID ICING CONDITIONS
MAX BRK PR . . . . . 1000 PSI
APPR PROC
- **FOR SLATS EXTENSION :**
  - LAND RECOVERY . . . . . ON
  - FOR LDG . . . . . USE FLAP 1
- **AT SLATS EXTENSION (if a FUEL FWD XFR has been selected) :**
  - TTK MODE . . . . . AUTO
  - TTK FEED . . . . . AUTO
- **FOR L/G GRVTY EXTN :**
  MAX SPEED . . . . . 200 KT
  - L/G GRVTY EXTN . . . . . DOWN
- **WHEN L/G DOWNLOCKED :**
  - L/G . . . . . DOWN
- PITCH AUTHORITY REDUCED
- TARGET SPD . . . . . 170 KT

ALTN LAW : PROT LOST
CONSIDER APU GEN USE
MCDU BACK UP NAV AVAIL
CAT 1 ONLY

INOP SYS
F/CTL PROT
STABILIZER
B + Y HYD
PACK 1 + 2
PRIM 2 + 3
ADR 2+3
RA 1 + 2
A/CALL OUT
ANTI SKID
RUD TRIM
WING A.ICE
MOST SPLRS
REVERSERS
HF 1 + 2
N/W STRG
AUTO BRK
ALTN BRK
MOST F.PUMPS
GPS 2

AFTER LAND RECOVERY : LGCIU 1, SLATS CHANNEL 1, are recovered. SLATS SLOW is displayed on the STATUS. Remaining Fuel pump stops. ALL F.PUMPS is displayed in INOP SYS list.

Note : STATUS is simplified in ALL ENG FLAME OUT configuration, only the most important STATUS items are kept.

ENG 1(2) CTL SYS FAULT

■ **On ground :**

– THR LEVER 1(2) . . . . . IDLE
– ENG MASTER 1(2) . . . . . OFF

■ **In flight :**

■ **In case of VBV or VSV failures :**

AVOID RAPID THR CHANGES

STATUS

■ **In case of VBV or VSV failures :**

AVOID RAPID THR CHANGES

ENG 1(2) BLEED STATUS FAULT

Bleed valves, pack valves, wing and engine anti-ice valves, crossbleed valve position status is not received by the active FADEC channel.

HI IDLE

The FADEC increases minimum idle on the related engine, as if bleed and pack valves were open.

● **BEFORE T.O :**

– PACK 1+2 . . . . . OFF
– WING ANTI ICE (if ENG ANTI ICE on) . . . . . ON

BOTH PACKS AVAIL IN FLT (displayed on ground)

STATUS

BOTH PACKS AVAIL IN FLT (displayed on ground)
ENG (affected) HI IDLE

ENG 1(2) COOL VALVE FAULT

- **If IDG valve failed closed (open) :**
  IDG VALVE CLOSED (OPEN)
- **If core valve failed closed :**
  CORE VALVE CLOSED

ENG 1(2) FADEC SYS FAULT

This caution is triggered only on ground, if one NO DISPATCH failure affects one or both channels.

– THR LEVER 1(2) . . . . . IDLE
– ENG MASTER 1(2) . . . . . OFF

ENG 1(2) MINOR FAULT

This caution is triggered when a failure, requiring repair before 150 flight hours, is detected by the FADEC.

Crew awareness.

ENG 1(2) CTL SYS FAULT

■ **On ground :**
- THR LEVER 1(2) . . . . . IDLE
- ENG MASTER 1(2) . . . . . OFF

■ **In flight :**

■ **In case of VBV or VSV failures :**
AVOID RAPID THR CHANGES

■ **In case of a FMV failure :**
ENG 1(2) AT IDLE

STATUS

■ **In case of VBV or VSV failures :**
AVOID RAPID THR CHANGES

■ **In case of a FMV failure**
ENG 1(2) AT IDLE

ENG 1(2) BLEED STATUS FAULT

Bleed valves, pack valves, wing and engine anti-ice valves, crossbleed valve position status is not received by the active FADEC channel.

HI IDLE

The FADEC increases minimum idle on the related engine, as if bleed and pack valves were open.

● **BEFORE T.O :**
- PACK 1+2 . . . . . OFF
- WING ANTI ICE (if ENG ANTI ICE on) . . . . . ON

BOTH PACKS AVAIL IN FLT (displayed on ground)

STATUS

BOTH PACKS AVAIL IN FLT (displayed on ground)
ENG (affected) HI IDLE

ENG 1(2) COOL VALVE FAULT

- **If IDG valve failed closed (open) :**
  IDG VALVE CLOSED (OPEN)
- **If core valve failed closed :**
  CORE VALVE CLOSED

ENG 1(2) FADEC SYS FAULT

This caution is triggered only on ground, if one NO DISPATCH failure affects one or both channels.

– THR LEVER 1(2) . . . . . IDLE
– ENG MASTER 1(2) . . . . . OFF

ENG 1(2) MINOR FAULT

This caution is triggered when a failure, requiring repair before 150 flight hours, is detected by the FADEC.

Crew awareness.

ENG 1(2) FADEC OVHT or FAULT

CONFIRM ENG STATUS
ON DISPLAYS
Since engine indications are lost, other system pages such as HYD, ELEC AC or BLEED must be used to confirm engine status.

- **IF ABN ENG OPERATION :**
  - THR LEVER (affected engine) . . . . . IDLE
  - ENG MASTER (affected engine) . . . . . OFF

ENG 1(2) **SHUT DOWN**

Apply ENG SHUT DOWN procedure.

ENG THR LEVERS NOT SET

This caution is triggered when one thrust lever is set between CLB and FLEX MCT at takeoff and in case of disagree between the thrust levers position and the thrust mode selected by the FADECs.

- **Aircraft without derated takeoff option :**
  - **If FLEX temp not set and thrust levers at FLX MCT:**
    - THR LEVERS . . . . . TO GA
- **Aircraft with derated takeoff option :**
  - **If no FLX temp neither derate level set and thrust levers at FLX-MCT :**
    - THR LEVERS . . . . . IDLE
  - **If derate level it set and thrust levers at TO GA :**
    - THR LEVERS . . . . . MCT/DRTO

ENG T.O THRUST DISAGREE

The two FADECs select different thrust takeoff mode (FLEX, MAX) on the ground.
Crew awareness.

ENG 1(2) FUEL FILTER CLOG

Crew awareness.
Maintenance action is due.

ENG 1(2) EIU FAULT

The data bus between EIU and FADEC fails. Therefore :

- *Autothrust control is lost.*
- *Thrust reverser is lost on the affected engine.*
- *When idle is selected, only high ground idle is available on the affected engine.*
- *Bleed corrections on N1 limit are lost on the affected engine.*
- *Manual start is lost on the affected engine.*
- *Flex takeoff is lost.*
- *On ground, the affected engine's anti-ice fault light may be ON, if the affected engine does not run.*
- *On ground, when the crossbleed valve is open, the 2 packs may be controlled closed.*

Note : If continuous ignition is selected, the engine anti-ice valves open, triggering the A.ICE ENG 1(2) VALVE OPEN cautions. Set ENG A.ICE to ON to suppress the cautions.

■ ON GROUND

T.O THR : TOGA ONLY
HI IDLE

The FADEC increases minimum idle on the related engine, as if the bleed and pack valves were opened.

● **BEFORE T.O :**

– PACK 1+2 . . . . . OFF
– WING ANTI ICE (if ENG ANTI ICE on) . . . . . ON

As the FADEC directly receives the ENG ANTI ICE pushbutton position, it assumes that wing anti-ice is selected ON, when engine anti-ice is selected ON.
Wing anti-ice must be selected ON, to have the selection in accordance with the FADEC Bleed status.

BOTH PACKS AVAIL IN FLT

	STATUS
T.O THR : TOGA ONLY	INOP SYS
ENG (affected) AUTOSTART ONLY	PACK 1+2
BOTH PACKS AVAIL IN FLT	A/THR
ENG (affected) HI IDLE	REV 1(2)
CAT 2 ONLY	CAT 3

■ IN FLIGHT

– THR LEVER (affected engine) . . . . . MAN ADJUST
HI IDLE

	STATUS
ENG (affected) AUTOSTART ONLY	INOP SYS
ENG (affected) HI IDLE	A/THR
CAT 2 ONLY	REV 1 (2)
	CAT 3

ENG 1(2) CTL VALVE FAULT

HPTCC, LPTCC or nacelle cooling valve is failed open.

- **HPTCC VALVE OPEN**
- **LPTCC VALVE OPEN**
- **NAC COOL VALVE OPEN**

ENG 1(2) IGN A(B) FAULT

Crew awareness.

STATUS

INOP SYS
ENG 1 (2) IGN A (B)

ENG 1(2) IGN A+B FAULT

AVOID ADVERSE WEATHER

AVOID ADVERSE WEATHER

STATUS

INOP SYS
ENG 1 (2) IGN

ENG 1(2) N1/N2 OVERLIMIT

■ **Maximum pointer indications :**

N1 above 115.5 %
N2 above 113 %

– THR LEVER (affected engine) . . . . . BELOW LIMIT
Normal operation may be resumed to next landing.
Report in maintenance logbook.

● **If THR LEVER at idle for more than 3 seconds :**

– ENG MASTER (affected engine) . . . . . OFF
If conditions do not permit engine shut down land as soon as possible using the minimum thrust required to sustain safe flight.

ENG 1(2) SHUT DOWN

Apply after ENG SHUT DOWN procedure.

ENG 1(2) EGT OVERLIMIT

■ **Maximum pointer indications :**

EGT above 940°C or above 975°C at takeoff power.

– THR LEVER (affected engine) . . . . . BELOW LIMIT
Normal operation may be resumed to next landing.
Report in maintenance logbook.

● **If THR LEVER at idle for more than 5 seconds :**

– ENG MASTER (affected engine) . . . . . OFF
If conditions do not permit engine shut down land as soon as possible using the minimum thrust required to sustain safe flight.

ENG 1(2) SHUT DOWN

Apply after ENG SHUT DOWN procedure.

ENG 1(2) EGT EXCEEDED

DURING AIR START.
This is triggered when there was an EGT amber line exceedance during an air start of the previous flight.
Crew awareness.

ENG TYPE DISAGREE

Crew awareness.

The engine ratings seen by the FWC are not identical for both engines, or they are different from the rating memorized by the FWC.

ENG 1 (2) REV PRESSURIZED

Reverse thrust system is pressurized without reverse deployment order.

- **If IDLE automatically selected by FADEC :**

  ENG (affected) AT IDLE

– THR LEVER (affected engine) . . . . . IDLE

Select thrust lever at idle, even if idle is automatically selected by the FADEC.

ENG 1(2) REV INHIBITED

Reverse is inhibited by maintenance action.

Crew awareness.

STATUS

| INOP SYS

REV 1 (2)

ENG 1(2) REV FAULT

A failure affects the reverser system.

STATUS

Crew awareness.

| INOP SYS

REV 1 (2)

ENG 1(2) REV SET

Reverse thrust has been selected in flight.

– THR LEVER (affected engine) . . . . . FWD THR

ENG 1(2) REV UNLOCKED

■ **On ground :**

● **If IDLE not automatically selected by the FADEC :**

– THR LEVER (affected engine) . . . . . IDLE

● **IDLE automatically selected by the FADEC :**

ENG (affected) AT IDLE

– THR LEVER (affected engine) . . . . . IDLE

Select thrust lever at idle, even if idle is automatically selected by the FADEC.

■ **In flight :**

MAX SPEED 300/.82

ENG (affected) AT IDLE

Displayed, only if the engine is automatically set at idle.

– THR LEVER (affected engine) . . . . . IDLE

Select thrust lever at idle, even if idle is automatically selected by the FADEC.

● **IF BUFFET :**

MAX SPEED 250/.70

– THR LEVER . . . . . IDLE

– ENG MASTER (affected engine) . . . . . OFF

ENG 1(2) SHUT DOWN

Apply the ENG SHUT DOWN procedure.

Note : 1. Lateral control (up to the equivalent of 1/2 stick) will be applied by the normal lateral law and thus spoilers will be extended and large aileron deflection will be used. However, adequate roll control remains.

2. Do not follow beta and beta target.
Apply full rudder and rudder trim towards the live engine.

ENG 1(2) REV UNLOCKED (CONT'D)

STATUS

MAX SPEED 300/.82
● **IF BUFFET** :
MAX SPEED 250/.70
APPR PROC
– FOR LDG . . . . . USE FLAP 3
● **IF BUFFET** :
– GPWS FLAP MODE . . . . . OFF
– FOR LDG . . . . . USE FLAP 2
– APPR SPD . . . . . VLS + 15 Kts
– LDG DIST PROC . . . . . APPLY
R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*
– FUEL UNBALANCE . . . . . MONITOR
ENG 1 (2) AT IDLE (if selected by FADEC)
SLATS SLOW (if ENG 1 shutdown)
FLAPS SLOW (if ENG 2 shutdown)
CAT 3 SINGLE ONLY

INOP SYS
BLUE HYD
(YELLOW HYD)
PART SPLRS
REV 1(2)
CAT 3 DUAL
ENG 1 (2) BLEED
G ENG 1 (2) PUMP
B ENG 1 PUMP
(Y ENG 2 PUMP)
GEN 1 (2)
ALTN BRK
(if ENG 1 shut dn)
PART GALLEY
YAW DAMPER 2
(if ENG 2 shut dn)

Note : The approach speed of VLS + 15 knots is recommended, both to increase lateral control and to maintain the approach angle-of-attack at a reasonable value. Note that a reduction in lift may result from this failure and, therefore, a higher angle-of-attack than normal may be advised at a given speed.

ENG 1(2) THR LEVER DISAGREE

LAND ASAP

Both thrust lever angle TLA sensors are not in agreement on one engine.
If the failure occurs during takeoff (with thrust lever in TOGA or FLX/MCT gate), FADEC maintains T.O., FLEX, TO, DRT TO ◁ thrust until thrust reduction, after which the maximum available thrust is MCT. If the failure occurs while thrust lever is between idle and MCT, the FADEC selects the higher TLA limited at MCT in flight, or the FADEC selects idle thrust on the ground or in approach phase (at landing gear down).

■ **On ground :**

ENG (affected) AT IDLE (if TLA not at TO.GA or FLX/MCT)
FADEC automatically selects idle power.

■ **In flight :**

MAX AVAIL PWR : MCT (if TLA at or below MCT and L/G up)
ENG (affected) AT IDLE (if TLA not at TOGA/FLX/MCT and L/G DOWN)
At landing gear extension (or when Mn < 0.40 if the onside EIU is failed), the FADEC automatically selects idle thrust.

– A/THR (if on) . . . . . KEEP ON
– A/THR (if not on) . . . . . ON
With autothrust engaged, thrust is automatically managed between idle and the higher TLA position as long as the landing gear is up.

STATUS

■ **On ground :**

ENG (affected) AT IDLE (if TLA not at TO. GA or FLX/MCT)

■ **In flight :**

ENG (affected) AVAIL MAX PWR : MCT
- **WHEN L/G DOWN or**
- **WHEN MN < 0.40 :**
  (Displayed if the onside EIU is failed)
  ENG (affected) AT IDLE

APPR PROC
– FOR LDG . . . . . USE FLAP 3

INOP SYS
ENG 1 (2) THR

ENG 1(2) REV UNLOCKED (CONT'D)

STATUS

MAX SPEED 300/.82
● **IF BUFFET** :
MAX SPEED 250/.70
APPR PROC
– FOR LDG . . . . . USE FLAP 3
● **IF BUFFET** :
– GPWS FLAP MODE . . . . . OFF
– FOR LDG . . . . . USE FLAP 2
– APPR SPD . . . . . VLS + 15 Kts
– LDG DIST PROC . . . . . APPLY
R *Refer to the QRH Part 2, or to the FCOM 3.02.80.*
– FUEL UNBALANCE . . . . . MONITOR
ENG 1 (2) AT IDLE (if selected by FADEC)
SLATS SLOW (if ENG 1 shutdown)
FLAPS SLOW (if ENG 2 shutdown)
CAT 3 SINGLE ONLY

INOP SYS
BLUE HYD
(YELLOW HYD)
PART SPLRS
REV 1(2)
CAT 3 DUAL
ENG 1 (2) BLEED
G ENG 1 (2) PUMP
B ENG 1 PUMP
(Y ENG 2 PUMP)
GEN 1 (2)
ALTN BRK
(if ENG 1 shut dn)
PART GALLEY

Note : The approach speed of VLS + 15 knots is recommended, both to increase lateral control and to maintain the approach angle-of-attack at a reasonable value. Note that a reduction in lift may result from this failure and, therefore, a higher angle-of-attack than normal may be advised at a given speed.

ENG 1(2) THR LEVER DISAGREE

LAND ASAP

Both thrust lever angle TLA sensors are not in agreement on one engine.
If the failure occurs during takeoff (with thrust lever in TOGA or FLX/MCT gate), FADEC maintains T.O., FLEX, TO, DRT TO ◁ thrust until thrust reduction, after which the maximum available thrust is MCT. If the failure occurs while thrust lever is between idle and MCT, the FADEC selects the higher TLA limited at MCT in flight, or the FADEC selects idle thrust on the ground or in approach phase (at landing gear down).

■ **On ground :**

ENG (affected) AT IDLE (if TLA not at TO.GA or FLX/MCT)
FADEC automatically selects idle power.

■ **In flight :**

MAX AVAIL PWR : MCT (if TLA at or below MCT and L/G up)
ENG (affected) AT IDLE (if TLA not at TOGA/FLX/MCT and L/G DOWN)
At landing gear extension (or when Mn < 0.40 if the onside EIU is failed), the FADEC automatically selects idle thrust.

– A/THR (if on) . . . . . KEEP ON
– A/THR (if not on) . . . . . ON
With autothrust engaged, thrust is automatically managed between idle and the higher TLA position as long as the landing gear is up.

STATUS

■ **On ground :**

ENG (affected) AT IDLE (if TLA not at TO. GA or FLX/MCT)

■ **In flight :**

ENG (affected) AVAIL MAX PWR : MCT
- **WHEN L/G DOWN or**
- **WHEN MN < 0.40 :**
  (Displayed if the onside EIU is failed)
  ENG (affected) AT IDLE

APPR PROC
– FOR LDG . . . . . USE FLAP 3

INOP SYS
ENG 1 (2) THR

ENG 1(2) THR LEVER FAULT

R LAND ASAP

No validated thrust lever angle for one engine thrust lever

■ **On the ground :**

ENG (affected) AT IDLE

FADEC selects idle power automatically.

If associated thrust reverser is already deployed, FADEC commands restow.

■ **In flight :**

If the selected thrust lever position at the time of fault detection is :

TOGA or FLEX : FADEC freezes takeoff or flex takeoff thrust until slat retraction. At slat retraction it will select MCT thrust.

Between IDLE and MCT : in manual thrust setting mode, engine rating increases and freezes at maximum continuous. At slats or landing gear extension, FADEC selects idle power automatically.

It is possible to activate autothrust. If selected, autothrust mode will manage thrust between idle and MCT as long as the landing gear is up and the slats are in.

● **During takeoff or when slats and landing gear are retracted :**

ENG (affected) HI PWR IN MAN THR

● **If A/THR on :**

– A/THR ..... KEEP ON

● **If A/THR not on**

– A/THR ..... ON

● **BEFORE SLATS IN :**

– A/THR ..... ON

● **If EIU not avail and FLX/MCT/TOGA selected :**

ENG (affected) HI PWR ONLY

Engine thrust is frozen at takeoff power.

STATUS

APPR PROC

– FOR LDG ..... USE FLAP 3

● **WHEN L/G DOWN OR SLATS OUT :**

● **WHEN MN < 0.40 :**

(Displayed if the onside EIU is failed)

ENG (affected) AT IDLE

INOP SYS

ENG 1 (2) THR LVR

REV 1 (2)

ENG THRUST LOCKED

Thrust is frozen on one or more engines, after a failure or an involuntary autothrust disconnection. This caution is automatically repeated every 5 seconds, until the thrust levers are moved.

– THR LEVERS ..... MOVE

ENG 1(2) OIL LO TEMP

The engine oil temperature is less than - 10°C.

– THR LEVER (affected engine) ..... IDLE
– DELAY T.O. FOR WARM UP

ENG 1(2) OIL HI TEMP

The engine oil temperature is between 160°C and 175°C for more than 15 minutes, or the oil temperature is above 175°C.

– THR LEVER (affected engine) ..... IDLE
– ENG MASTER (affected engine) ..... OFF

ENG 1(2) **SHUT DOWN**

Apply the ENG SHUT DOWN procedure.

ENG 1(2) OIL LO PR

– THR LEVER (affected engine) ..... IDLE
– ENG MASTER (affected engine) ..... OFF

ENG 1(2) **SHUT DOWN**

Apply the ENG SHUT DOWN procedure

ENG 1(2) OIL FILTER CLOG

– THR LEVER (affected engine) ..... REDUCE
Reduce the thrust lever until the caution disappears.
– ENG MASTER (affected engine) ..... OFF
If the caution is still present with thrust lever at idle, shut down the engine.

ENG 1(2) **SHUT DOWN**

Apply the ENG SHUT DOWN procedure.

ENG 1(2) THR LEVER FAULT

R LAND ASAP

No validated thrust lever angle for one engine thrust lever

■ **On the ground :**

ENG (affected) AT IDLE

FADEC selects idle power automatically.

If associated thrust reverser is already deployed, FADEC commands restow.

■ **In flight :**

If the selected thrust lever position at the time of fault detection is :

TOGA or FLEX : FADEC freezes takeoff or flex takeoff thrust until slat retraction. At slat retraction it will select MCT thrust.

Between IDLE and MCT : in manual thrust setting mode, engine rating increases and freezes at maximum continuous. At slats or landing gear extension, FADEC selects idle power automatically.

It is possible to activate autothrust. If selected, autothrust mode will manage thrust between idle and MCT as long as the landing gear is up and the slats are in.

● **During takeoff or when slats and landing gear are retracted :**

ENG (affected) HI PWR IN MAN THR

● **If A/THR on :**

– A/THR ..... KEEP ON

● **If A/THR not on**

– A/THR ..... ON

● **BEFORE SLATS IN :**

– A/THR ..... ON

● **If EIU not avail and FLX/MCT/TOGA selected :**

ENG (affected) HI PWR ONLY

Engine thrust is frozen at takeoff power.

STATUS

APPR PROC

– FOR LDG ..... USE FLAP 3

● **WHEN L/G DOWN OR SLATS OUT :**

● **WHEN MN < 0.40 :**

(Displayed if the onside EIU is failed)

ENG (affected) AT IDLE

INOP SYS

ENG 1 (2) THR LVR

REV 1 (2)

ENG THRUST LOCKED

Thrust is frozen on one or more engines, after a failure or an involuntary autothrust disconnection. This caution is automatically repeated every 5 seconds, until the thrust levers are moved.

– THR LEVERS ..... MOVE

ENG 1(2) OIL LO TEMP

The engine oil temperature is less than - 10°C.

– THR LEVER (affected engine) ..... IDLE
– DELAY T.O. FOR WARM UP

ENG 1(2) OIL HI TEMP

The engine oil temperature is between 160°C and 175°C for more than 15 minutes, or the oil temperature is above 175°C.

– THR LEVER (affected engine) ..... IDLE
– ENG MASTER (affected engine) ..... OFF

ENG 1(2) SHUT DOWN

Apply the ENG SHUT DOWN procedure.

ENG 1(2) OIL LO PR

– THR LEVER (affected engine) ..... IDLE
● **IF WARNING PERSISTS :**
  – ENG MASTER (affected engine) ..... OFF

ENG 1(2) SHUT DOWN

Apply the ENG SHUT DOWN procedure

ENG 1(2) OIL FILTER CLOG

– THR LEVER (affected engine) ..... REDUCE
Reduce the thrust lever until the caution disappears.
– ENG MASTER (affected engine) ..... OFF
If the caution is still present with thrust lever at idle, shut down the engine.

ENG 1(2) SHUT DOWN

Apply the ENG SHUT DOWN procedure.

LEFT INTENTIONALLY BLANK

ENG START FAULT

THR LEVERS NOT AT IDLE
– THR LEVERS ..... IDLE

ENG 1(2) START VALVE FAULT

■ **START VALVE STUCK CLOSED**

The valve is mechanically stuck closed.
On ground, consider application of "START VALVE MANUAL OPERATION" procedure.
– MAN START (affected engine, if manual start performed) ..... OFF
– ENG MASTER (affected engine) ..... OFF

■ **START VALVE NOT OPEN**

WINDMILL START AVAIL (in flight only)
– X BLEED (if opposite engine is running or APU available when right side affected) ..... OPEN
– APU BLEED (if APU available below FL 220 and opposite engine not running) ..... ON

● **IF UNSUCCESSFUL** :
– MAN START (affected engine) ..... OFF
– ENG MASTER (affected engine) ..... OFF

■ **START VALVE NOT CLOSED**

Remove all bleed sources supplying the faulty starter valve.
– APU BLEED (only for left side) ..... OFF
– X BLEED (if opposite engine is running or APU available from left side) ..... CLOSE
– ENG BLEED (affected side) ..... OFF

● **On ground** :
– MAN START (affected engine) ..... OFF
– ENG MASTER (affected engine) ..... OFF
Maintenance action is due.

● **In flight** :
– WING ANTI ICE ..... OFF

AIR **ABNORM BLEED CONFIG**

Refer to chapter 3.02.36 for the associated procedure.

ENG 1(2) START FAULT

■ LOW N1 (on the ground)

No N1 rotation during start.

– THR LEVER (affected engine) ..... IDLE
– ENG MASTER (affected engine) ..... OFF

R ## ■ ENG STALL or EGT OVERLIMIT or NO LIGHT UP

● **In flight :**

– ENG MASTER (affected engine) ..... OFF

Wait 30 seconds before a new start attempt (to drain the engine).

● **On the ground (auto start) :**

In case of hot start, start stall or overtemperature, the FADEC reduces the start fuel schedule in steps of 7 % down to 14 % until start is successful.
Following message is displayed on ECAM.

NEW START IN PROGRESS

If start is unsuccessful, the fuel valve is closed.

● **If start still unsuccessful :**

– ENG MASTER (affected engine) ..... OFF

Fuel metering valve and starter air valve are automatically closed. Both igniters are turned off.
In case of stall consider X BLEED start if pressure is low.

● **On the ground (manual start) :**

– MAN START (affected engine) ..... OFF
– ENG MASTER (affected engine) ..... OFF
– ENG START SEL ..... CRANK
– MAN START ..... ON

Dry crank the engine for 30 seconds. The start valve reopens automatically when N2 below 15 %.

Note : These last two lines are not displayed on ECAM. The pilot must decide whether to attempt a new start or report the no start condition for appropriate maintenance condition.

R ## ■ STARTER FAULT or STARTER TIME EXCEEDED

– MAN START (affected engine) ..... OFF
– ENG MASTER (affected engine) ..... OFF

ENG 1(2) HP FUEL VALVE

■ **Associated engine below idle**

HP FUEL VALVE NOT OPEN

Failure of high pressure fuel valve.

– MAN START (affected engine) . . . . . OFF
– ENG MASTER (affected engine) . . . . . OFF

■ **Associated engine at or above idle**

HP FUEL VALVE NOT CLSD

Failure of high pressure fuel valve.

Engine will shut down by closure of the fuel low pressure valve.

– MAN START (affected engine) . . . . . OFF
– ENG MASTER (affected engine) . . . . . OFF

Note : In case there is no fuel in the engine fuel system, the high pressure fuel valve may be unduly detected open while being closed.

ENG THRUST LOSS

■ **Bleed configuration as seen by the FADEC is not in accordance with the bleed configuration requested by the crew.**

● **if abnormal engine anti ice :**
ABNORMAL ENG A. ICE

● **if abnormal wing anti ice :**
ABNORMAL WING A. ICE

● **if abnormal bleed or pack :**
ABNORMAL BLEED OR PACK
– THR LEVERS . . . . . IDLE

ENG 1(2) START FAULT

■ LOW N1 (on the ground)

No N1 rotation during start.

– THR LEVER (affected engine) ..... IDLE
– ENG MASTER (affected engine) ..... OFF

■ ENG STALL or EGT OVERLIMIT or NO LIGHT UP

● **In flight :**

– ENG MASTER (affected engine) ..... OFF

Wait 30 seconds before a new start attempt (to drain the engine).

● **On ground (auto start) :**

In case of hot start, start stall, or overtemperature, the FADEC reduces the start fuel schedule in steps of 7 %, down to 14 %, until the start is successful.
The following message is displayed on the ECAM.

NEW START IN PROGRESS

If the start is unsuccessful, the fuel valve closes.

● **If the start is still unsuccessful :**

– ENG MASTER (affected engine) ..... OFF

The fuel metering valve, and the starter air valve close automatically. Both igniters are turned off.
In case of stall, consider X BLEED start if pressure is low.

● **On ground (manual start) :**

– ENG MASTER (affected engine) ..... OFF
– MAN START (affected engine) ..... OFF
– ENG START SEL ..... CRANK
– MAN START ..... ON

Dry crank the engine for 30 seconds. The start valve automatically reopens, when N2 below is 15 %.

Note : These last two lines are not displayed on the ECAM. The pilot must decide whether to attempt a new start, or to report the no start condition for appropriate maintenance condition.

■ STARTER FAULT or STARTER TIME EXCEEDED

R – ENG MASTER (affected engine) ..... OFF
R – MAN START (affected engine) ..... OFF

ENG 1(2) HP FUEL VALVE

■ **Associated engine below idle**

HP FUEL VALVE NOT OPEN

Failure of high pressure fuel valve.

– MAN START (affected engine) . . . . . OFF
– ENG MASTER (affected engine) . . . . . OFF

■ **Associated engine at or above idle**

HP FUEL VALVE NOT CLSD

Failure of high pressure fuel valve.

Engine will shut down by closure of the fuel low pressure valve.

– MAN START (affected engine) . . . . . OFF
– ENG MASTER (affected engine) . . . . . OFF

Note : In case there is no fuel in the engine fuel system, the high pressure fuel valve may be unduly detected open while being closed.

ENG THRUST LOSS

■ **Bleed configuration as seen by the FADEC is not in accordance with the bleed configuration requested by the crew.**

● **if abnormal engine anti ice :**
ABNORMAL ENG A. ICE

● **if abnormal wing anti ice :**
ABNORMAL WING A. ICE

● **if abnormal bleed or pack :**
ABNORMAL BLEED OR PACK
– THR LEVERS . . . . . IDLE

ENG 1 (2) STALL

A stall may be indicated by varying degrees of abnormal engine noises, accompanied by flame from the engine exhaust (and possibly from engine inlet in severe cases), fluctuating performance parameters, sluggish or no thrust lever response, high EGT and/or a rapid EGT rise when thrust lever is advanced. Engine stalls must be reported for maintenance action.

– THR LEVER (affected engine) . . . . . IDLE
– ENG PARAMETERS (affected engine) . . . . . CHECK

● **If abnormal parameters** :

– ENG MASTER (affected engine) . . . . . OFF

ENG 1(2) SHUT DOWN

Apply ENG SHUT DOWN procedure.
Engine restart at crew discretion.

● **If normal parameters** :

– ENG A ICE (affected engine) . . . . . ON
– WING A ICE . . . . . ON
Operation of the engine and wing anti ice will increase the stall margin but EGT will increase accordingly.
– THR LEVER . . . . . SLOWLY ADVANCE

● **If stall does not reoccur** :

Continue engine operation

LEFT INTENTIONALLY BLANK

ENG TAILPIPE FIRE

Internal engine fire may be encountered during engine start or engine shutdown.
It may be seen by the ground crew, or the EGT may fail to decrease after the MASTER switch is turned off.

CAUTION

External fire agents can cause severe corrosive damage and should, therefore, only be considered after having applied the following procedure :

– ENG MASTER (affected) . . . . . OFF

Note : Do not press the engine fire pushbutton, since this would cut off the FADEC power supply, which would prevent motoring sequence.

– AIR BLEED PRESS . . . . . ESTABLISH

· *Select the APU, or opposite ENG BLEED, to motor the engine.*
· *If APU BLEED is not available, and the other engine is shut down, connect external pneumatic power (if readily available).*

R – BEACON . . . . . ON

● **When N2 < 30 % :**

– ENG START SEL . . . . . CRANK
– MAN START . . . . . ON

The start valve automatically reopens, when N2 is below 15 %.

● **When burning has stopped :**

– MAN START . . . . . OFF
– ENG START SEL . . . . . NORM

Maintenance action is due.

HIGH ENGINE VIBRATION

The ECAM's vibration advisory (N1 greater than 5.7 units, N2 greater than 5.6 units) is mainly a guideline to induce the crew to monitor engine parameters more closely.
Vibration detection alone does not require engine shutdown.

Note : 1. High engine vibrations may be accompanied by cockpit and cabin smoke and/or the smell of burning. This may only be due to compressor blade tip contact with associated abradable seals.
2. High N1 vibrations are generally accompanied by perceivable airframe vibrations. High N2 vibrations can occur without perceivable airframe vibrations.

■ **IF NO ICING CONDITIONS EXIST :**

– ENG PARAMETERS . . . . . CHECK
Check engine parameters and especially EGT, crosscheck with other engine.
Report in maintenance logbook.

● **If rapid increase above the advisory :**

– THRUST LEVER (affected engine) . . . . . RETARD
Flight conditions permitting, reduce N1 to maintain the vibration level below the advisory threshold.
Note : If the VIB indication does not decrease following thrust reduction, this may indicate other problems on the engine. Apply adequate procedure.

■ **IF ICING CONDITIONS EXIST :**

An increase of N1 vibration in icing conditions, with or without engine anti-ice, may be due to fan blades and/or spinner icing.

– A/THR . . . . . OFF
– ENG ANTI ICE . . . . . CHECK
If ENG ANTI ICE is off, switch it ON at idle fan speed, one engine after the other with approximately 30 seconds interval.
– THRUST LEVER (one engine at a time) . INCREASE THRUST
Increase thrust with power setting compatible with the flight phase. Vibration level will return to normal after ice shedding, despite a light increase during acceleration. Resume normal operation.

Note : If possible, shut down the engine after landing for taxiing, when vibrations above the advisory level have been experienced during the flight.

ENG RELIGHT (in flight)

MAX GUARANTEED ALTITUDE . . . . . 30 000 FT
– ENG MASTER (affected engine) . . . . . OFF
– THR LEVER (affected engine) . . . . . check IDLE
– MAN START pb (affected engine) . . . . . OFF

Note : Auto start is recommended in flight.
Be aware that, contrary to auto start on ground, the crew must take appropriate action in case of abnormal start.

– ENG START SEL . . . . . IGN
– X BLEED . . . . . OPEN

If outside windmilling start envelope, FADEC opens starter valve.

– WING ANTI ICE (for starter assisted start) . . . . . OFF
– ENG MASTER . . . . . ON

Note : Engine light up must be achieved within 30 seconds after fuel flow increases.
– Monitor N2
– If uncertain about successful relight, move the thrust lever forward and check engine response.

■ **When idle reached (AVAIL indication pulses in green) :**

– ENG START SEL . . . . . NORM
R – TCAS MODE SEL ◁ . . . . . check TA/RA
R *Check that the selector is at TA/RA since if the ENG SHUT DOWN procedure has been*
R *applied, the TCAS mode selector may have been set at TA position.*
– Affected SYS . . . . . RESTORE

Restore affected systems and set XBLEED selector at AUTO.

ENG RELIGHT (in flight) (CONT'D)

■ **if no relight :**

– ENG MASTER (affected engine) . . . . . OFF

Wait 30 seconds before new start attempt (to drain the engine)

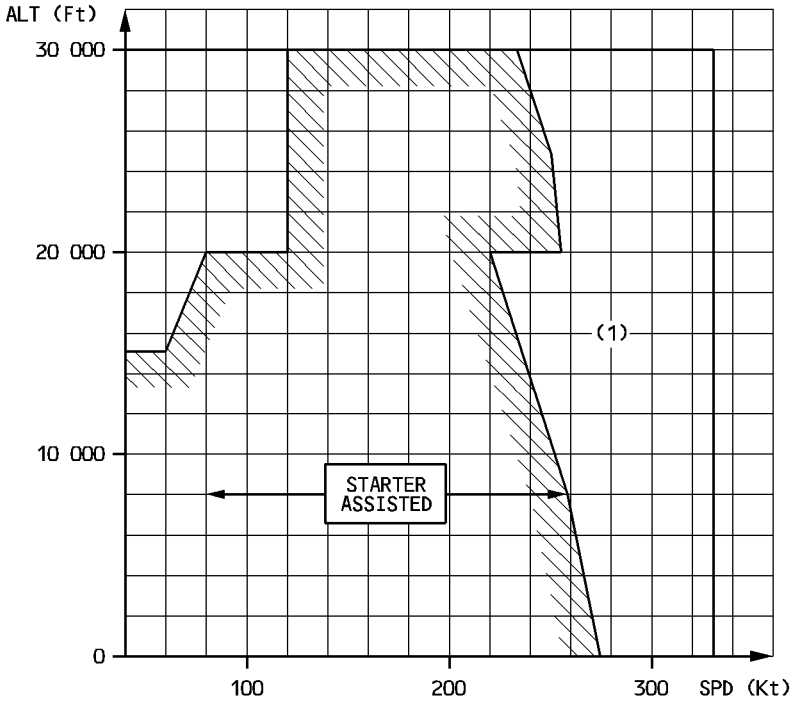

(1) A windmilling relight can be attempted in this zone while N2 is decreasing provided N2 has not dropped below 15%.

ON GROUND EMER/EVACUATION

Carefully analyze the situation before deciding to evacuate passengers. However, do not waste valuable time.

– AIRCRAFT/PARKING BRK ..... STOP/ON

– ATC (VHF 1) ..... NOTIFY

Notify ATC of the nature of the emergency, and state intentions.
Only VHF 1 is available on batteries.

R – △P ..... CHECK ZERO

R *If △P is not at zero, select manual mode and V/S CTL FULL UP, in order to fully open the*
R *outflow valves.*

– ENG MASTER (all) ..... OFF

Associated LP and HP valves close.

– CABIN CREW (PA) ..... NOTIFY

Notify the cabin crew of the nature of the emergency, and state intentions.

– ENG (all) and APU FIRE pushbutton ..... PUSH

– AGENT (ENG and APU) ..... AS RQRD

R – EVACUATION ..... INITIATE

Using the Passenger Address system, announce an appropriate command such as "PASSENGER EVACUATION - EVACUATE THROUGH LH or RH DOORS", and press the EVAC COMMAND pushbutton.

DITCHING

This procedure has been established, based on the assumption that APU generator was not available.

PREPARATION

– OPTIMUM SPEED . . . . . 230 KT/GREEN DOT
Fly 230 kt initially.
When time permits, check Green dot speed on QRH 4.01.
– CABIN CREW . . . . . NOTIFY
Notify the cabin crew of the nature of the emergency and state intentions.
Specify the available time.
– ATC/TRANSPONDER (if available) . . . . . NOTIFY/AS RQRD
Notify ATC of the nature of emergency encountered and state intentions.
If not in contact with ATC, select transponder code A7700 or transmit the distress message on : (VHF) 121.5 MHZ or (HF) 2182 KHZ or 8364 KHZ.
– GPWS SYS . . . . . OFF
R *Pressing the SYS pushbutton off avoids nuisance warnings.*
– SEAT BELTS/NO SMOKING . . . . . ON
– EMER EXIT LT . . . . . ON
– COMMERCIAL . . . . . OFF
– CABIN and COCKPIT . . . . . PREPARE
· *Loose equipment secured*
· *Survival equipment prepared*
· *Belts and shoulder harnesses locked*
– LDG ELEV . . . . . SELECT 00
– V. BUGS . . . . . SET
See QRH 4.01 VLS CONF1
– BARO . . . . . SET
Omit normal approach and landing check list.
– CREW MASKS/OXY SUPPLY (below FL 100) . . . . . OFF

ON GROUND EMER/EVACUATION

Carefully analyze the situation before deciding to evacuate passengers. However, do not waste valuable time.

– AIRCRAFT/PARKING BRK ..... STOP/ON

– ATC (VHF 1) ..... NOTIFY

Notify ATC of the nature of the emergency, and state intentions.
Only VHF 1 is available on batteries.

R – △P ..... CHECK ZERO

R *If △P is not at zero, select manual mode and V/S CTL FULL UP, in order to fully open the*
R *outflow valves.*

– ENG MASTER (all) ..... OFF

Associated LP and HP valves close.

– CABIN CREW (PA) ..... NOTIFY

Notify the cabin crew of the nature of the emergency, and state intentions.

– ENG (all) and APU FIRE pushbutton ..... PUSH

– AGENT (ENG and APU) ..... AS RQRD

R – EVACUATION ..... INITIATE

Using the Passenger Address system, announce an appropriate command such as "PASSENGER EVACUATION - EVACUATE THROUGH LH or RH DOORS", and press the EVAC COMMAND pushbutton.

DITCHING

This procedure has been established, based on the assumption that APU generator was not available.

PREPARATION

– OPTIMUM SPEED . . . . . 230 KT/GREEN DOT
Fly 230 kt initially.
When time permits, check Green dot speed on QRH 4.01.
– CABIN CREW . . . . . NOTIFY
Notify the cabin crew of the nature of the emergency and state intentions.
Specify the available time.
– ATC/TRANSPONDER (if available) . . . . . NOTIFY/AS RQRD
Notify ATC of the nature of emergency encountered and state intentions.
If not in contact with ATC, select transponder code A7700 or transmit the distress message on : (VHF) 121.5 MHZ or (HF) 2182 KHZ or 8364 KHZ.
– JETTISON (if engines running) . . . . . ON
– GPWS SYS . . . . . OFF
R *Pressing the SYS pushbutton off avoids nuisance warnings.*
– SEAT BELTS/NO SMOKING . . . . . ON
– EMER EXIT LT . . . . . ON
– COMMERCIAL . . . . . OFF
– CABIN and COCKPIT . . . . . PREPARE
· *Loose equipment secured*
· *Survival equipment prepared*
· *Belts and shoulder harnesses locked*
– LDG ELEV . . . . . SELECT 00
– V. BUGS . . . . . SET
See QRH 4.01 VLS CONF1
– BARO . . . . . SET
Omit normal approach and landing check list.
– CREW MASKS/OXY SUPPLY (below FL 100) . . . . . OFF

DITCHING (CONT'D)

APPROACH

- L/G lever ..... UP
- **If engines running :**
  - SLATS and FLAPS ..... MAX AVAIL
- **If engines not running :**
  - **3 minutes before landing :**
    - LAND RECOVERY ..... ON
    - FLAP 1 ..... SELECT

      EMER GEN is lost at slat extension. The aircraft is supplied by batteries only.
    - FLY VLS CONF1
  - **At slats extension, if FUEL MAN FWD XFR has been selected :**
    - T TK MODE ..... AUTO
    - T TK FEED ..... AUTO
  - R – USE RUDDER WITH CARE
  - R – MIN RAT SPEED ..... 140 KT
  - ENG START SEL ..... NORM
  - CABIN REPORT ..... OBTAIN

BEFORE DITCHING

- CAB PRESS MODE SEL ..... CHECK AUTO
- BLEED (ENGs and APU) ..... OFF

  Touch down with approximately 11° pitch attitude, and minimum aircraft V/S.
- R – DITCHING pushbutton ..... ON
- BRACE FOR IMPACT ..... ORDER

DITCHING (CONT'D)

The direction of ditching depends mainly on wind direction and sea state and these factors may be considered as follows:

1. Wind direction :
   This may be determined by observation of the waves, which move and break downwind. Spray from wave tops is also a reliable indicator.
2. Wind speed :
   The following guidelines can be used to evaluate wind speed:
   A few white crests . . . . . 8-17 Kt
   Many white crests . . . . . 17-26 Kt
   Streaks of foam along water . . . . . 23-35 Kt
   Spray from waves . . . . . 35-43 Kt
3. Sea state :
   This is best determined from a height of 500 to 1000 feet. At lower height, the direction of the swell may be less obvious than the direction of the waves, even though the waves are much smaller.
   When there is no swell, align into the wind. In the presence of swell, and provided that drift does not exceed 10 degrees, ditch parallel to the swell and as nearly into the wind as possible. If drift exceeds 10 degrees, ditch into wind. The presence of drift on touchdown is not dangerous, but every effort should be made to minimize roll.
   Touchdown with approximately 11 degrees of pitch and minimum aircraft vertical speed.

JUST BEFORE DITCHING

– ENG MASTERS . . . . . OFF

AFTER DITCHING

– ATC (VHF 1) . . . . . NOTIFY
With engines and APU shutdown, only VHF 1 is supplied.
– FIRE pb (ENG and APU) . . . . . PUSH
– AGENT (ENG and APU) . . . . . DISCH
– EVACUATION . . . . . INITIATE

DITCHING (CONT'D)

APPROACH

- L/G lever ..... UP
- **If engines running :**
  - SLATS and FLAPS ..... MAX AVAIL
- **If engines not running :**
  - **3 minutes before landing :**
    - LAND RECOVERY ..... ON
    - FLAP 1 ..... SELECT

      EMER GEN is lost at slat extension. The aircraft is supplied by batteries only.
    - FLY VLS CONF1
  - **At slats extension, if FUEL MAN FWD XFR has been selected :**
    - T TK MODE ..... AUTO
    - T TK FEED ..... AUTO
  - R – USE RUDDER WITH CARE
  - R – MIN RAT SPEED ..... 140 KT
  - ENG START SEL ..... NORM
  - CABIN REPORT ..... OBTAIN
  - JETTISON ..... OFF

BEFORE DITCHING

- CAB PRESS MODE SEL ..... CHECK AUTO
- BLEED (ENGs and APU) ..... OFF

  Touch down with approximately 11° pitch attitude, and minimum aircraft V/S.
- R – DITCHING pushbutton ..... ON
- BRACE FOR IMPACT ..... ORDER

DITCHING (CONT'D)

The ditching direction mainly depends on wind direction and the state of the sea. These factors may be considered as follows:

1. Wind direction : May be determined by observing the waves, which move and break downwind. Spray from the wave tops is also a reliable indicator.
2. Wind speed : The following guidelines can be used to evaluate wind speed :
   A few white crests . . . . . 8-17 knots
   Many white crests . . . . . 17-26 knots
   Streaks of foam along the water . . . . . 23-35 knots
   Spray from the waves . . . . . 35-43 knots
3. State of the sea :
   This is best determined from a height of 500 to 1000 feet. At a lower height, the direction of the swell may be less obvious than the direction of the waves, even though the waves are much smaller. When there is no swell, align into the wind. In the presence of swell, and provided that drift does not exceed 10 degrees, ditch parallel to the swell and as closely into the wind as possible. If drift exceeds 10 degrees, ditch into wind. The presence of drift on touchdown is not dangerous, but every effort should be made to minimize roll.
   Touchdown with approximately 11 degrees of pitch, and minimum aircraft vertical speed.

JUST BEFORE DITCHING

– ENG MASTERS . . . . . OFF

AFTER DITCHING

– ATC (VHF 1) . . . . . NOTIFY
With engines and APU shutdown, only VHF 1 is supplied.
– FIRE pushbutton (ENG and APU) . . . . . PUSH
– AGENT (ENG and APU) . . . . . DISCH
– EVACUATION . . . . . INITIATE
– ELT . . . . . CHECK EMITTING
If not, switch on the transmitter.

FORCED LANDING

This procedure has been established, based on the assumption that APU generator was not available.

PREPARATION

– OPTIMUM SPEED . . . . . 230 KT/GREEN DOT
Fly 230 kt initially.
When time permits, check Green dot speed on QRH 4.01.

– CABIN CREW . . . . . NOTIFY
Notify the cabin crew of the nature of the emergency and state intentions.
Specify the available time.

– ATC/TRANSPONDER (if available) . . . . . NOTIFY/AS RQRD
Notify ATC of the nature of emergency encountered and state intentions.
If not in contact with ATC, select transponder code A7700 or transmit the distress message on : (VHF) 121.5 MHZ or (HF) 2182 KHZ or 8364 KHZ.

R – GPWS SYS . . . . . OFF
Switching SYS pushbutton OFF avoids nuisance warnings.

– SEAT BELTS/NO SMOKING . . . . . ON

– EMER EXIT LT . . . . . ON

– COMMERCIAL . . . . . OFF

– CABIN and COCKPIT . . . . . PREPARE
· *Loose equipment secured*
· *Survival equipment prepared*
· *Belts and shoulder harnesses locked*

– LDG ELEV . . . . . SET
· *If not known, select an approximate value.*

– V BUGS . . . . . SET
See QRH 4.01 VLS CONF1

– BARO . . . . . SET
Omit normal approach and landing check list.

– CREW MASKS/OXY SUPPLY (below FL 100) . . . . . OFF

APPROACH

– RAM AIR . . . . . ON
Switch ON the RAM AIR to ensure complete depressurization on the ground.

● **If engines running :**
– L/G lever . . . . . DOWN
– SLATS and FLAPS . . . . . MAX AVAIL

FORCED LANDING (CONT'D)

- **If engines not running :**
  - **3 minutes before landing :**
    - LAND RECOVERY ..... ON
    - FLAP 1 ..... SELECT

    EMER GEN is lost at slat extension. The aircraft is supplied by batteries only.
  - **At slat extension, if FUEL MAN FWD XFR has been selected :**
    - T TK MODE ..... AUTO
    - T TK FEED ..... AUTO
  - **2 minutes before landing :**
    - L/G GRVTY EXTN ..... DOWN

    Flight controls revert to direct law.
    - FLY VLS CONF1
  - **When L/G is downlocked :**
    - L/G lever ..... DOWN
  - USE RUDDER WITH CARE
  - MIN RAT SPEED ..... 140 KT
  - MAX BRK PR ..... 1000 PSI
- GND SPLR ..... ARM
- ENG START SEL ..... NORM
- CABIN REPORT ..... OBTAIN

BEFORE LANDING

- BRACE FOR IMPACT ..... ORDER

JUST BEFORE TOUCHDOWN

- ENG MASTERS ..... OFF

AFTER TOUCHDOWN

- **When the aircraft has stopped :**
  - PARKING BRK ..... ON
  - ATC (VHF 1) ..... NOTIFY

    With engines and APU shutdown, only VHF 1 is supplied.
  - FIRE pushbutton (ENG and APU) ..... PUSH
  - AGENTS (ENG and APU) ..... DISCH
  - EVACUATION ..... INITIATE

R

FORCED LANDING

This procedure has been established, based on the assumption that APU generator was not available.

PREPARATION

– OPTIMUM SPEED ..... 230 KT/GREEN DOT
Fly 230 kt initially.
When time permits, check Green dot speed on QRH 4.01.

– CABIN CREW ..... NOTIFY
Notify the cabin crew of the nature of the emergency and state intentions.
Specify the available time.

– ATC/TRANSPONDER (if available) ..... NOTIFY/AS RQRD
Notify ATC of the nature of emergency encountered and state intentions.
If not in contact with ATC, select transponder code A7700 or transmit the distress message on : (VHF) 121.5 MHZ or (HF) 2182 KHZ or 8364 KHZ.

– JETTISON (if engines running) ..... ON

– GPWS SYS ..... OFF
R *Switching SYS pushbutton OFF avoids nuisance warnings.*

– SEAT BELTS/NO SMOKING ..... ON

– EMER EXIT LT ..... ON

– COMMERCIAL ..... OFF

– CABIN and COCKPIT ..... PREPARE
· *Loose equipment secured*
· *Survival equipment prepared*
· *Belts and shoulder harnesses locked*

– LDG ELEV ..... SET
· *If not known, select an approximate value.*

– V BUGS ..... SET
See QRH 4.01 VLS CONF1

– BARO ..... SET
Omit normal approach and landing check list.

– CREW MASKS/OXY SUPPLY (below FL 100) ..... OFF

APPROACH

– RAM AIR ..... ON
Switch ON the RAM AIR to ensure complete depressurization on the ground.

● **If engines running** :

– L/G lever ..... DOWN

– SLATS and FLAPS ..... MAX AVAIL

FORCED LANDING (CONT'D)

- **If engines not running :**
  - **3 minutes before landing :**
    - LAND RECOVERY ..... ON
    - FLAP 1 ..... SELECT

    EMER GEN is lost at slat extension. The aircraft is supplied by batteries only.
  - **At slat extension, if FUEL MAN FWD XFR has been selected :**
    - T TK MODE ..... AUTO
    - T TK FEED ..... AUTO
  - **2 minutes before landing :**
    - L/G GRVTY EXTN ..... DOWN

    Flight controls revert to direct law.
    - FLY VLS CONF1
  - **When L/G downlocked :**
    - L/G lever ..... DOWN
  - USE RUDDER WITH CARE
  - MIN RAT SPEED ..... 140 KT
  - MAX BRK PR ..... 1000 PSI
- GND SPLR ..... ARM
- ENG START SEL ..... NORM
- CABIN REPORT ..... OBTAIN
- JETTISON ..... OFF

BEFORE LANDING

- BRACE FOR IMPACT ..... ORDER

JUST BEFORE TOUCHDOWN

- ENG MASTERS ..... OFF

AFTER TOUCHDOWN

- **When aircraft has stopped :**
  - PARKING BRK ..... ON
  - ATC (VHF 1) ..... NOTIFY

    With engines and APU shutdown, only VHF 1 is supplied.
  - FIRE pushbutton (ENG and APU) ..... PUSH
  - AGENTS (ENG and APU) ..... DISCH
  - EVACUATION ..... INITIATE
  - ELT ..... CHECK EMITTING

    If not, switch on the transmitter.

R

EMER DESCENT

R **IMMEDIATE ACTIONS**

– CREW OXY MASKS ..... ON

The recommendation is to descend with the autopilot engaged :

– Turn the ALT selector knob and pull.

– Turn the HDG selector knob and pull.

– Adjust the target SPD/MACH.

– THR LEVER (if A/THR not engaged) ..... IDLE

· If autothrust is engaged, check IDLE on the UPPER ECAM.

· If not engaged, retard the thrust levers.

– SPD BRK ..... FULL

R **WHEN DESCENT ESTABLISHED**

EMER DESCENT FL 100 or minimum allowable altitude.

– SPEED ..... MAX/APPROPRIATE

CAUTION

Descend at the maximum appropriate speed. If structural damage is suspected, use the flight controls with care and reduce speed as appropriate.

Landing gear may be extended below 21000 feet. Speed must be reduced to 250 knots.

– SIGNS ..... ON

– ENG START SEL ..... IGN

– ATC ..... NOTIFY

Notify ATC of the nature of the emergency, and state intentions. If not in contact with ATC, select transponder code A 7700, or transmit a distress message on one of the following frequencies : (VHF) 121.5 MHZ, or (HF) 2182 KHZ, or 8364 KHZ.

To save oxygen, set the oxygen diluter selector to the N position.

With the oxygen diluter selector left at 100 %, oxygen quantity may be insufficient to cover the entire emergency descent profile.

· Ensure crew communication is established with oxygen masks. Avoid continuous use of the interphone to minimize interference from the oxygen mask breathing noise.

● **IF CAB ALT > 14000 feet :**

– PAX OXY MASKS ..... MAN ON

Confirm passenger oxygen masks released.

Note : Notify the cabin crew, when a safe flight level has been reached and oxygen mask use can be terminated.

OVERWEIGHT LANDING

Automatic landing is certified up to MLW, but has been demonstrated in flight up to MTOW. In determining the best course of action, the flight crew may consider the option to perform an automatic landing, provided the runway is approved for automatic landing.

– JETTISON ◁ . . . . . CONSIDER

– LDG CONF . . . . . AS REQUIRED

R *Use the ECAM flap setting, if required for abnormal operations. In all other cases :*

R – *FULL is preferred for optimized landing performance.*

– *If the aircraft weight is above the maximum weight for go-around (given in the table below), use FLAP 3 for landing.*

R *In all cases, if landing configuration is different from FLAP FULL, use 1 + F for go-around.*

– LDG DIST . . . . . CHECK

– PACK 1 and 2 . . . . . OFF or supplied by APU

Selecting packs OFF (or supplied from APU) will increase the maximum thrust available from the engines, in the event of a go-around.

● **In the final stages of approach**

– TARGET SPEED . . . . . VLS

Reduce speed to reach VLS at runway threshold.

For automatic landing, maintain VLS + 5.

Touch down as smoothly as possible (Maximum V/S at touchdown 360 ft/min).

● **At main landing gear touchdown**

– REVERSE THRUST . . . . . USE MAX AVAILABLE

● **After nosewheel touchdown**

– BRAKES . . . . . APPLY AS NECESSARY

Max braking may be used after nosewheel touchdown. But, if landing distance permits, delay or reduce braking to take full benefit of the available runway length.

● **Landing complete**

– BRAKE FANS . . . . . ON if available

Be prepared for tire deflation, if temperatures exceed 800° C.

MAXIMUM WEIGHT FOR GO AROUND IN CONF 3 (1000 kg)

OAT °C	AIRPORT ELEVATION (FT)							
	0	2000	4000	6000	8000	10000	12000	14000
10	238	227	214	200	187	173	159	145
15	238	226	214	200	185	169	154	140
20	237	226	213	197	180	164	148	135
25	237	226	209	191	174	157	143	131
30	235	218	202	184	167	151	138	
35	227	210	194	177	160			
40	218	202	187	170				
45	209	193	179					
50	198	182						
55								

EMER DESCENT

R **IMMEDIATE ACTIONS**

– CREW OXY MASKS . . . . . ON

The recommendation is to descend with the autopilot engaged :

– Turn the ALT selector knob and pull.

– Turn the HDG selector knob and pull.

– Adjust the target SPD/MACH.

– THR LEVER (if A/THR not engaged) . . . . . IDLE

· If autothrust is engaged, check IDLE on the UPPER ECAM.

· If not engaged, retard the thrust levers.

– SPD BRK . . . . . FULL

R **WHEN DESCENT ESTABLISHED**

EMER DESCENT FL 100 or minimum allowable altitude.

– SPEED . . . . . MAX/APPROPRIATE

CAUTION

Descend at the maximum appropriate speed. If structural damage is suspected, use the flight controls with care and reduce speed as appropriate.

Landing gear may be extended below 21000 feet. Speed must be reduced to 250 knots.

– SIGNS . . . . . ON

– ENG START SEL . . . . . IGN

– ATC . . . . . NOTIFY

Notify ATC of the nature of the emergency, and state intentions. If not in contact with ATC, select transponder code A 7700, or transmit a distress message on one of the following frequencies : (VHF) 121.5 MHZ, or (HF) 2182 KHZ, or 8364 KHZ.

To save oxygen, set the oxygen diluter selector to the N position.

With the oxygen diluter selector left at 100 %, oxygen quantity may be insufficient to cover the entire emergency descent profile.

· Ensure crew communication is established with oxygen masks. Avoid continuous use of the interphone to minimize interference from the oxygen mask breathing noise.

● **IF CAB ALT > 14000 feet :**

– PAX OXY MASKS . . . . . MAN ON

Confirm passenger oxygen masks released.

Note : Notify the cabin crew, when a safe flight level has been reached and oxygen mask use can be terminated.

OVERWEIGHT LANDING

Automatic landing is certified up to MLW, but has been demonstrated in flight up to MTOW. In determining the best course of action, the flightcrew may consider the option to perform an automatic landing, provided the runway is approved for automatic landing.

– LDG CONF . . . . . AS REQUIRED

Use the ECAM flap setting, if required for abnormal operations. In all other cases :

– FULL is preferred for optimized landing performance.

– If the aircraft weight is above the maximum weight for go-around (given in the table below), use FLAP 3 for landing.

In all cases, if landing configuration is different from FLAP FULL, use 1 + F for go-around.

– LDG DIST . . . . . CHECK

– PACK 1 and 2 . . . . . OFF or supplied by APU

Selecting packs OFF (or supplied from APU) will increase the maximum thrust available from the engines, in the event of a go-around.

● **In the final stages of approach**

– TARGET SPEED . . . . . VLS

Reduce speed to reach VLS at runway threshold.

Touchdown as smoothly as possible (Maximum V/S at touchdown 360 ft/min).

● **At main landing gear touchdown**

– REVERSE THRUST . . . . . USE MAX AVAILABLE

● **After nosewheel touchdown**

– BRAKES . . . . . APPLY AS NECESSARY

Maximum braking may be used after nosewheel touchdown. But, if landing distance permits, delay or reduce braking to take full benefit of the available runway length.

● **Landing complete**

– BRAKE FANS ◁ . . . . . ON

Be prepared for tire deflation, if temperatures exceed 800° C.

MAXIMUM WEIGHT FOR GO AROUND IN CONF 3 (1000 kg)

OAT °C	AIRPORT ELEVATION (FT)							
	0	2000	4000	6000	8000	10000	12000	14000
10	218	208	198	187	177	164	151	139
15	218	208	198	187	175	160	147	135
20	218	207	197	184	170	155	141	132
25	218	207	192	178	165	149	137	128
30	216	200	186	172	158	143	134	
35	209	193	179	165	150			
40	201	186	171	157				
45	191	176	164					
50	181	168						
55								

CREW INCAPACITATION

The remaining crew member must call a cabin attendant as soon as practicable.

The best way to request assistance from the cabin crew, is by passenger address system :

"ATTENTION", "PURSER TO COCKPIT PLEASE". The Purser or any other cabin attendant must proceed to the cockpit immediately.

The cabin attendant must then :

- tighten and manually lock the shoulder harness of the incapacitated crew member ;
- push the seat completely aft ;
- recline the seat back.

It takes 2 people to remove the dead weight of an unconscious body from a seat without endangering any controls and switches.

If it is not possible to remove the body, one cabin attendant must stay in the cockpit to take care of and observe the incapacitated crew member.

In coordination with the purser :

- request assistance from any medically qualified passenger ;
- check if a type qualified company pilot is on board to replace the incapacitated crew member.

BOMB ON BOARD

R IF POSSIBLE, LAND AND EVACUATE THE AIRCRAFT IMMEDIATELY.
If it is not possible to land and evacuate the aircraft within 30 minutes, apply the following procedures :

COCKPIT PROCEDURES

Background

To avoid the activation of an altitude-sensitive bomb, the cabin altitude should not exceed the value at which the bomb has been discovered.
To reduce the effects of the explosion, the aircraft should fly as long as possible with approximately 1 PSI differential pressure, to help the blast go outwards. 1 PSI differential pressure corresponds to a 2500 feet difference between the aircraft and the cabin altitude.
These conditions are achieved by using the manual pressure control.

Procedure

The following procedure assumes that it is initiated during climb or cruise :
- First, maintain the cabin altitude.
- While maintaining the cabin altitude, descend the aircraft to the cabin altitude + 2500 feet and maintain delta P at 1 PSI.
- During further steps of descent, maintain delta P at 1 PSI.
- For landing, reduce the differential pressure to zero, until the final approach.

If flight conditions are different, the crew should adapt the procedure, bearing in mind the above-mentioned principles (background paragraph).

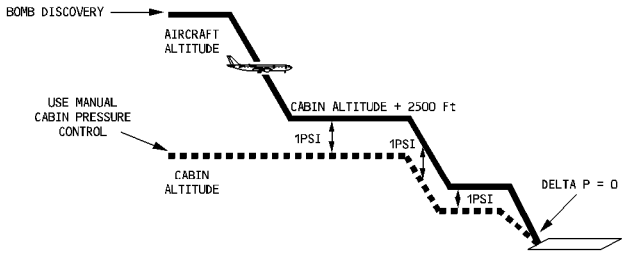

GFC5-03-0208-010-A001AA

BOMB ON BOARD (CONT'D)

R – AIRCRAFT (if climbing) ..... LEVEL OFF
R – CABIN PRESS MODE SEL ..... MAN
R *The purpose is to immediately prevent the cabin altitude from increasing, in order to avoid*
R *the activation of an altitude-sensitive bomb.*
R – CAB ALT ..... MAINTAIN
R *Use MAN V/S CTL to maintain the cabin altitude at the value it had when the bomb was*
R *discovered.*
R – CABIN CREW ..... NOTIFY
R – ATC/COMPANY OPERATIONS ..... NOTIFY
R *To obtain expert advice from explosive specialists.*
R – FUEL RESERVES ..... DETERMINE
R *Keep in mind that when flying at cabin altitude + 2500ft, the fuel consumption in CONF1,*
R *with landing gear down, will be about 2.1 times that consumed in clean configuration.*
R – NEXT SUITABLE AIRPORT ..... DETERMINE
R – FCU SPEED SELECTION KNOB ..... PULL AND TURN
R *Select the most appropriate speed, taking into account the time to destination, the fuel*
R *consumption and the fact that low speed could reduce the consequences of possible*
R *structural damage, if the bomb explodes.*
R – DESCENT TO CAB ALT + 2500 FT or MEA or minimum obstacle
R clearance altitude ..... INITIATE
R *Descending to 2500ft above the cabin altitude gives a cabin differential pressure of*
R *approximately 1 PSI, which helps to ensure that the blast goes outwards, if the bomb*
R *explodes.*
R – AVOID SHARP MANEUVERS
R *which might result in the bomb moving.*
R – CAB ALT ..... MAINTAIN
R *Use MAN V/S CTL to maintain the cabin altitude. Initially brief UP input should be*
R *required; but, be careful not to increase the cabin altitude.*
R ● **When at CAB ALT + 2500 FT :**
R – 1 PSI DELTA P ..... MAINTAIN
R *Use MAN V/S CTL to adjust delta P to 1 PSI. Brief DN input should be initially required*
R *to set 0 ft/min cabin vertical speed.*
R – GALLEY/COMMERCIAL ..... OFF
R – FLAPS (fuel permitting) ..... AT LEAST CONF 1
R *For landing, use normal configuration.*

BOMB ON BOARD (CONT'D)

– LANDING GEAR (fuel permitting, except for flight over water) . . . . . DOWN

The detonation could damage the landing systems. Therefore, if fuel permits, configure the aircraft for landing as soon as possible. Reducing the speed will minimize stress on the aircraft structure.

- **For any other steps of descent :**
  – 1 PSI DELTA P . . . . . MAINTAIN
  Use MAN V/S CTL to DN to adjust delta P to 1 PSI.
- **During approach :**
  – CABIN PRESS MODE SEL . . . . . AUTO
  The purpose is to allow the CPC to automatically control the cabin altitude to 0 during final approach.
- **When the aircraft is on ground and stopped in a remote area (if possible) :**

R – EVACUATION . . . . . INITIATE

Avoid exits and exiting on the same side as the bomb and near the bomb.

CABIN PROCEDURES

CAUTION

The least risk bomb location for the aircraft's structure and systems is the CENTER OF THE RH AFT CABIN DOOR.

– EOD PERSONNEL ON BOARD . . . . . CHECK

Announce "Is there any EOD personnel on board ?". By using the initials, only persons familiar with EOD (Explosive Ordnance Disposal) will be made aware of the problem.

– BOMB . . . . . DO NOT OPEN, DO NOT CUT WIRES, SECURE AGAINST SLIPPING, AVOID SHOCKS

Secure in the attitude found, and do not lift before having checked for an anti-lift ignition device.

– PASSENGERS . . . . . LEAD AWAY FROM BOMB

Move passengers at least 4 seat rows away from the bomb location. If the other seats are full, these passengers should sit on the floor in protected areas.

Passengers near the bomb should protect their heads with pillows, blankets, etc, and sit in the brace position.

All passengers must remain seated with seatbelts on and, if possible, head below the top of the head rest. Seat backs and tray tables should be in their full upright position.

BOMB ON BOARD (CONT'D)

– BOMB . . . . . CHECK NO ANTI-LIFT DEVICE

To check for an anti-lift switch or lever, slide a string or stiff card, (such as the emergency information card) under the bomb, without disturbing the bomb.

If the string or card cannot be slipped under the bomb, it may indicate that an anti-lift
R *switch or lever is present and that the bomb cannot be moved.*

If a card is used and can be slid under the bomb, leave it under the bomb and move together with the bomb. If it is indicated that an anti-lift device is present, it may be possible to move the bomb together with the surface on which the bomb is located such as a shelf or seat cushion.

R *If it is not possible to move the bomb, then it should be surrounded with a single thin*
R *sheet of plastic (e.g. trash bag), then with wetted materials, and other blast attenuation materials, such as seat cushions and soft carry-on baggage. Move personnel as far away from the bomb location as possible.*

● **If the bomb can be moved :**

PLACE THE BOMB AS CLOSE TO THE CENTER OF THE RH AFT CABIN DOOR AS POSSIBLE.

– PASSENGERS . . . . . MOVE/ADVISE

Move passengers at least 4 seat rows away from the least risk bomb location (RH aft cabin door). If the other seats are full, these passengers should sit on the floor in protected areas towards the front of the aircraft.

Passengers near the bomb should protect their heads with pillows, blankets, etc, and sit in the brace position.

All passengers must remain seated with seatbelts on and, if possible, head below the
R *top of the head rest. Seat backs and tray tables should be in their full upright position.*

R – RH AFT CABIN DOOR SLIDE . . . . . DISARM

– LEAST RISK BOMB LOCATION (LRBL) . . . . . PREPARE

Build up a platform of solid baggage against the door up to about 25cm (10 in) below the middle of the door.

On top of this, build up at least 25cm (10 in) of wetted material such as blankets and pillows.

R *Place a single thin sheet of plastic (e.g. : trash bag) on top of the wetted materials.*
R *This prevents any possible short circuit.*

BOMB ON BOARD (CONT'D)

– BOMB ..... MOVE TO LRBL

Carefully carry in the attitude found and place on top of the wetted materials in the same attitude and as close to the door structure as possible.

– LEAST RISK BOMB LOCATION ..... COMPLETE

R *Place an additional single thin sheet of plastic over the bomb.*

Build up at least 25cm (10in) of wetted material around the sides and on top of the bomb.

DO NOT PLACE ANYTHING BETWEEN THE BOMB AND THE DOOR, AND MINIMIZE AIRSPACE AROUND THE BOMB.

The idea is to build up a protective surrounding of the bomb so that the explosive force is directed in the only unprotected area into the door structure.

Fill the area around the bomb with seat cushions and other soft materials such as
R *hand luggage (saturated with water or any other nonflammable liquid) up to the cabin*
R *ceiling, compressing as much as possible. Secure the LRBL stack in place using belt,*
R *ties, or other appropriate materials. The more material stacked around the bomb, the less the damage will be.*

USE ONLY SOFT MATERIAL. AVOID USING MATERIALS CONTAINING ANY INFLAMMABLE LIQUID AND ANY METAL OBJECTS WHICH COULD BECOME DANGEROUS PROJECTILES.

– EVACUATION/DISEMBARKATION ..... EXECUTE

Evacuate through normal and emergency exits on the opposite side of the bomb location.
Do not use the door just opposite the bomb.
Use all available airport facilities to disembark without delay.

R

COCKPIT WINDSHIELD/WINDOW CRACKED

In case of a one-ply failure, whichever the one may be, the windshield is still able to sustain the maximum differential pressure. Nevertheless, because the pilot is unable to accurately determine how many plies have failed, differential pressure must be reduced to 5 PSI by applying the following procedure :

MAX FL 230

The maximum flight level is restricted to FL230 to obtain △P 5 PSI, without resulting in an excessive cabin altitude and corresponding EXCESS CAB ALT warning. The following procedure allows maintaining △P 5 PSI in manual cabin pressure mode.

– CAB PRESS MODE SEL . . . . . MAN
– MAN V/S CTL . . . . . AS RQRD

Set the cabin altitude, according to the table below :

△P = 5 PSI	FL	100	150	200	230
	CABIN ALTITUDE	0	3000	6000	8000

● **When starting the final descent :**

– CAB PRESS MODE SEL . . . . . AUTO

R ## ECAM ADVISORY CONDITIONS

SYST	CONDITIONS	RECOMMENDED ACTION
CAB PRESS	CAB VERT SPD V/S > 1800 ft/mn or V/S < – 1800 ft/mn	CPC changeover is recommended : MODE SEL . . . . . MAN ● AFTER 3 SEC MODE SEL . . . . . AUTO
	CAB ALT alt ≥ 8800 ft	MODE SEL . . . . . MAN Manual press control
	CAB DIFF PRESS △P ≥ 1.5 PSI in phase 7	LDG ELEV . . . . . MAN ADJUST ● If unsuccessful : MODE SEL . . . . . MAN Manual press control
COND	PACK LO FLOW Pack flow insufficient to satisfy temperature demand	PACK FLOW . . . . . INCREASE
ELEC	IDG OIL TEMP T > 142°C	Reduce IDG load, if possible (GALLEY or COMMERCIAL or GEN OFF). If required, restore when temperature has dropped. Restrict use of the generator to a short time, if temperature rises again excessively.
FUEL	Difference between L and R inner tank fuel quantities is greater than 3000 kg	FUEL MANAGEMENT . . . . . CHECK If a fuel leak is suspected, refer to the FUEL LEAK procedure.
APU	LOW OIL LEVEL The oil level is below 4.4 l	
	EGT high (inhibited during APU start)	
OXY/ DOOR	PAX OXY ◁ 200 < pressure < 1200 PSI	

R

COCKPIT WINDSHIELD/WINDOW CRACKED

In case of a one-ply failure, whichever the one may be, the windshield is still able to sustain the maximum differential pressure. Nevertheless, because the pilot is unable to accurately determine how many plies have failed, differential pressure must be reduced to 5 PSI by applying the following procedure :

MAX FL 230

The maximum flight level is restricted to FL230 to obtain △P 5 PSI, without resulting in an excessive cabin altitude and corresponding EXCESS CAB ALT warning. The following procedure allows maintaining △P 5 PSI in manual cabin pressure mode.

– CAB PRESS MODE SEL . . . . . MAN
– MAN V/S CTL . . . . . AS RQRD

Set the cabin altitude, according to the table below :

△P = 5 PSI	FL	100	150	200	230
	CABIN ALTITUDE	0	3000	6000	8000

● **When starting the final descent :**

– CAB PRESS MODE SEL . . . . . AUTO

ECAM ADVISORY CONDITIONS

SYST	CONDITIONS	RECOMMENDED ACTION
CAB PRESS	CAB VERT SPD V/S > 1800 ft/mn or V/S < – 1800 ft/mn	CPC changeover is recommended : MODE SEL . . . . . MAN ● AFTER 3 SEC MODE SEL . . . . . AUTO
	CAB ALT alt ≥ 8800 ft	MODE SEL . . . . . MAN Manual press control
	CAB DIFF PRESS △P ≥ 1.5 PSI in phase 7	LDG ELEV . . . . . MAN ADJUST ● If unsuccessful : MODE SEL . . . . . MAN Manual press control
COND	PACK LO FLOW Pack flow insufficient to satisfy temperature demand	PACK FLOW . . . . . INCREASE
ELEC	IDG OIL TEMP T > 142°C	Reduce IDG load, if possible (GALLEY or COMMERCIAL or GEN OFF). If required, restore when the temperature has dropped. Restrict use of the generator to a short time, if temperature rises again excessively.
FUEL	Difference between L and R inner tank fuel quantities is greater than 3000 kg	FUEL MANAGEMENT . . . . . CHECK If a fuel leak is suspected, refer to the FUEL LEAK procedure.
APU	LOW OIL LEVEL The oil level is below 4.4 l	
	EGT high (inhibited during APU start)	
OXY/ DOOR	CKPT OXY Pulsing Green : When pressure is < 600 PSI Amber : When pressure is < 300 PSI	If mask is not being used, check if it is correctly stowed, as per FCOM 1.35.20.
	PAX OXY ◁ 200 < pressure < 1200 PSI	

R

SYST	CONDITIONS	RECOMMENDED ACTION
ENG	OIL TEMP 160°C < T < 175° C for 15 min	An increase in oil temperature, during normal steady-state operation, indicates a system malfunction and should be closely-monitored for other engine malfunction symptoms. An increase in oil temperature could be related to the IDG oil cooling system. To reduce the increase in oil temperature before limits are reached, the following are recommended : Reduce GEN load, or turn off GEN. If the oil temperature continues to rise, mechanically disconnect the IDG.
	OIL QTY < 2 Qts	If the oil quantity is low, at high power setting, expect level increase after power reduction.
	NAC TEMP > 260° C	Monitor engine parameters and crosscheck with other engine.
	VIBRATION N1 ≥ 5.7 units N2 ≥ 5.6 units	(Refer to 3.02.70)

LDG CONF/APPR SPD/LDG DIST FOLLOWING FAILURES

A330	FAILURE		FLAPS LEVER POSITION FOR LDG	△ VREF APPR SPD INCREMENT	MULTIPLY DRY RWY LDG DIST (CONF FULL) BY
ELEC	EMER CONFIG		3	–	1.1
	DC BUS 1+2 FAULT		NORM (1)	–	1.1
	DC BUS 2 FAULT		NORM (1)	–	1.1
	· if ice accretion : DC ESS BUS FAULT/ DC ESS SHED		NORM (1)	10	1.2
S/F	FLAPS FAULT	0 ≤ FLAPS < 1 + F	2	30	1.5*
		1 + F≤ FLAPS < 2	2	15	1.3*
		2 ≤ FLAPS < 3	2	10	1.2*
		FLAPS = 3	3	5	1.1*
		FLAPS > 3	FULL	5	1.1*
	SLATS FAULT	0 ≤ SLATS < 1	2	30	1.4*
		1 ≤ SLATS < 2	2	15	1.2*
		SLATS ≥ 2	3	5	1.1*
	NO FLAPS NO SLATS		1	50	1.7*
F/CTL	STAB CTL FAULT (MAN TRIM NOT AVAIL)		2	20	1.3*
	L/R/L + R ELEV FAULT		2	20	1.3*
	RUD TRV LIM FAULT (2)		2 (2)	20 (2)	1.3* (2)
	RUD TRV LIM FAULT (engine-out) (2)		2 (2)	APPR SPD : 160 KT (2)	1.6* (2)
	RUDDER JAM		2	20	1.3*
	RUDDER JAM (engine-out)		2	APPR SPD : 160 KT	1.6*
	ALTN/DIRECT LAW		3	–	1.1*
	PRIM 1+3, 2+3, FAULT		NORM (1)	–	1.1
	PRIM 1+2+3 FAULT		3	–	1.2
SPLR	ONE/TWO SPLRS per wing		NORM (1)	–	NEGLIGIBLE
	THREE/FOUR SPLRS per wing		NORM (1)	–	1.1
	FIVE/ALL SPLRS per wing		NORM (1)	–	1.2

(1) If CONF 3 is used when "NORM" is indicated in the table, multiply the resulting landing distance by an additional factor of 1.1.

R (2) This landing configuration and associated parameters only have to
R be applied if the Travel Limiter Unit (TLU) remains locked in the
R high-speed position after slats' extension.

R

SYST	CONDITIONS	RECOMMENDED ACTION
ENG	OIL TEMP 160°C < T < 175° C for 15 min	An increase in oil temperature, during normal steady-state operation, indicates a system malfunction and should be closely-monitored for other engine malfunction symptoms. An increase in oil temperature could be related to the IDG oil cooling system. To reduce the increase in oil temperature before limits are reached, the following are recommended : Reduce GEN load, or turn off GEN. If the oil temperature continues to rise, mechanically disconnect the IDG.
	OIL QTY < 2 Qts	If the oil quantity is low, at high power setting, expect level increase after power reduction.
	NAC TEMP > 260° C	Monitor engine parameters and crosscheck with other engine.
	VIBRATION N1 ≥ 5.7 units N2 ≥ 5.6 units	(Refer to 3.02.70)

LDG CONF/APPR SPD/LDG DIST FOLLOWING FAILURES

A330	FAILURE		FLAPS LEVER POSITION FOR LDG	△ VREF APPR SPD INCREMENT	MULTIPLY DRY RWY LDG DIST (CONF FULL) BY
ELEC	EMER CONFIG		3	–	1.1
	DC BUS 1+2 FAULT		NORM (1)	–	1.1
	DC BUS 2 FAULT		NORM (1)	–	1.1
	· if ice accretion : DC ESS BUS FAULT/ DC ESS SHED		NORM (1)	10	1.2
S/F	FLAPS FAULT	0 ≤ FLAPS < 1 + F	2	30	1.5*
		1 + F≤ FLAPS < 2	2	15	1.3*
		2 ≤ FLAPS < 3	2	10	1.2*
		FLAPS = 3	3	5	1.1*
		FLAPS > 3	FULL	5	1.1*
	SLATS FAULT	0 ≤ SLATS < 1	2	30	1.4*
		1 ≤ SLATS < 2	2	15	1.2*
		SLATS ≥ 2	3	5	1.1*
	NO FLAPS NO SLATS		1	50	1.7*
F/CTL	STAB CTL FAULT (MAN TRIM NOT AVAIL)		2	20	1.3*
	L/R/L + R ELEV FAULT		2	20	1.3*
	RUDDER JAM/ RUDDER FAULT		2	10	1.7*
	RUDDER JAM (engine out)		2	APPR SPD : 170 KT	2.3*
	ALTN/DIRECT LAW		3	–	1.1*
	PRIM 1+3, 2+3, FAULT		NORM (1)	–	1.1
	PRIM 1+2+3 FAULT		3	–	1.2
SPLR	ONE/TWO SPLRS per wing		NORM (1)	–	NEGLIGIBLE
	THREE/FOUR SPLRS per wing		NORM (1)	–	1.1
	FIVE/ALL SPLRS per wing		NORM (1)	–	1.2

(1) If CONF 3 is used when "NORM" is indicated in the table, multiply the resulting landing distance by an additional factor of 1.1.

R

A330	FAILURE		FLAPS LEVER POSITION FOR LDG	△ VREF APPR SPD INCREMENT	MULTIPLY DRY RWY LDG DIST (CONF FULL) BY
FUEL	T TANK UNUSABLE If CG > limit shown on 3.02.28 p 14		NORM (1)	10	1.2
HYD	G SYS LO PR		NORM (1)	–	1.1
	B SYS LO PR		NORM (1)	–	NEGLIGIBLE (2)
	Y SYS LO PR		NORM (1)	–	NEGLIGIBLE
	G +B	SLATS < 1	2	30	2.4
		1 ≤ SLATS < 2	2	25	2.3
		SLATS ≥ 2	3	15	1.9
	G +Y	0 ≤ FLAPS < 1+F	2	30	1.7
		1+F ≤ FLAPS < 2	2	15	1.4
		2 ≤ FLAPS < 3	2	20	1.5
		FLAPS = 3	3	15	1.4
		FLAPS > 3	FULL	15	1.4
	B +Y		2	20	1.3
A.ICE	If ice accretion : WING LO PR/WING VLVE NOT OPEN/WAI SYS FAULT		NORM (1)	10	1.2
BRK	ANTI SKID		NORM (1)	–	1.4
	NORM BRK (ALTN with ANTI SKID)		NORM (1)	–	1.1
	RELEASE FAULT		NORM (1)	–	1.4
NAV	TRIPLE ADR FAULT		3	10	1.2*
	DOUBLE ADR FAULT/ IR FAULT		3	–	1.1*
BLEED	If ice accretion : WING LEAK/ENG BLEED LEAK/ABNORM BLEED CONFIG/BLEED LO TEMP		NORM (1)	10	1.2

(1) If CONF 3 is used when "NORM" is indicated in the table, multiply the resulting landing distance by an additional factor of 1.1.

(2) If the green hydraulic system is supplied by the RAT, the landing distance coefficient to be applied is 1.4 on dry runway, (A/SKID lost).

R

A330	FAILURE	FLAPS LEVER POSITION FOR LDG	△ VREF APPR SPD INCREMENT	MULTIPLY DRY RWY LDG DIST (CONF FULL) BY
ENG	SHUTDOWN	3	–	1.1
	THR LEVER FAULT	3	–	1.1*
	REV UNLOCKED (WITH BUFFET)	2	25	1.4*
	REV UNLOCKED (WITHOUT BUFFET)	3	–	1.1*

USE OF THE TABLE

- *The APPR SPD INCREMENT accounts for corrections due to the failure, and to the required landing configuration. These values are rounded off to cover the entire weight range. LDG DIST factors have to be applied to the actual LANDING DISTANCE WITHOUT AUTOBRAKE - CONFIGURATION FULL (4.03).*
- *For a single failure :*
  - *Determine the required LDG CONF to be selected.*
  - *Determine the APPR SPD INCREMENT.*
  - *VAPP = VREF + APPR SPD INCREMENT + WIND CORRECTION (refer QRH page 2.40).*
  - *Determine the LDG DIST factor.*
- *For multiple failures :*
  - *Only SINGLE or PRIMARY failures should be combined. In case of a PRIMARY failure, the effect of the related SECONDARY failures are already taken into account in △ VREF and LDG DIST factor computation.*
  - *Use the lowest LDG CONF.*
  - *Use the highest APPR SPD INCREMENT to compute VAPP.*
  - *LDG DIST factors : Multiply the landing distance factors together, except when all failures are indicated by an asterisk (*). In this case, the highest factor has to be taken.*
  - *Examples*

FLAPS FAULT (2 ≤ F < 3)	LDG CONF 2	△ VREF = 10 KT	LDG DIST × 1.2*
NORM BRK FAULT	NORM CONF	△ VREF = 0	LDG DIST × 1.1
TOTAL	LDG CONF 2	△ VREF = 10 KT	LDG DIST × 1.32

VREF = 131 KT → VAPP = 131 + 10 + WIND (10 KT MAX)
= 141 KT + WIND (10 KT MAX)

R

STAB CTL FAULT	LDG CONF 2	△ VREF = 20 KT	LDG DIST × 1.3*
FLAPS FAULT (2 ≤ F < 3)	LDG CONF 2	△ VREF = 10KT	LDG DIST × 1.2*
TOTAL	LDG CONF 2	△ VREF = 20 KT	LDG DIST × 1.3

VREF = 139 KT → VAPP = 139 + 20 + 0 (no wind correction) = 159 KT

WINDSHEAR

A red flag "WINDSHEAR" message is displayed on each PFD, associated with an aural "WINDSHEAR" message repeated three times.

If windshear is detected, either by the system or by pilot observation, apply the following recovery technique :

■ **At takeoff :**

● **If before V1**

The takeoff should only be rejected, if significant airspeed variations occur below the indicated V1, and the pilot decides that there is sufficient runway remaining to stop the airplane.

● **If after V1**

– THR LEVERS . . . . . TOGA
– REACHING VR . . . . . ROTATE
– SRS ORDERS . . . . . FOLLOW

■ **Airborne - initial climb or landing :**

– THR LEVERS AT TOGA . . . . . SET OR CONFIRM
– AP (if engaged) . . . . . KEEP
– SRS ORDERS . . . . . FOLLOW

This includes use of full backstick, if demanded.

Note : 1. Autopilot will disengage, when α greater than α prot.

2. If FD is unavailable, use a initial pitch attitude up to 12.5 degrees. If necessary, to minimize the loss of height, increase this pitch attitude.

– DO NOT CHANGE CONFIGURATION (SLATS/FLAPS, GEAR) UNTIL OUT OF SHEAR.
– CLOSELY MONITOR FLIGHT PATH AND SPEED.
– RECOVER SMOOTHLY TO NORMAL CLIMB OUT OF SHEAR.

LEFT INTENTIONALLY BLANK

WINDSHEAR

A red flag "WINDSHEAR" message is displayed on each PFD, associated with an aural "WINDSHEAR" message repeated three times.

If windshear is detected, either by the system or by pilot observation, apply the following recovery technique :

■ **At takeoff :**

● **If before V1**

The takeoff should only be rejected, if significant airspeed variations occur below the indicated V1, and the pilot decides that there is sufficient runway remaining to stop the airplane.

● **If after V1**

– THR LEVERS . . . . . TOGA
– REACHING VR . . . . . ROTATE
– SRS ORDERS . . . . . FOLLOW

■ **Airborne - initial climb or landing :**

– THR LEVERS AT TOGA . . . . . SET OR CONFIRM
– AP (if engaged) . . . . . KEEP
– SRS ORDERS . . . . . FOLLOW

This includes use of full backstick, if demanded.

Note : 1. Autopilot will disengage, when α greater than α prot.

2. If FD is unavailable, use a initial pitch attitude up to 12.5 degrees. If necessary, to minimize the loss of height, increase this pitch attitude.

– DO NOT CHANGE CONFIGURATION (SLATS/FLAPS, GEAR) UNTIL OUT OF SHEAR.
– CLOSELY MONITOR FLIGHT PATH AND SPEED.
– RECOVER SMOOTHLY TO NORMAL CLIMB OUT OF SHEAR.

WINDSHEAR AHEAD

The "W/S AHEAD" message is displayed on each PFD. The color of the message depends on the severity and location of the windshear.

W/S AHEAD red

■ **Takeoff :**

Associated with a synthetic aural voice : "WINDSHEAR AHEAD, WINDSHEAR AHEAD".

- **Before takeoff :**
  - Delay takeoff, or select the most favorable runway.
- **During takeoff run :**
  - Reject takeoff.

  Note : The predictive windshear alerts are inhibited above 100 knots, until 50 feet.
- **When airborne :**
  - THR LEVERS ..... TOGA

    As usual, the slat/flap configuration can be changed, provided the windshear is not entered.
  - SRS ORDERS ..... FOLLOW

    Note : If engaged, the autopilot disengages when α greater than α prot.

■ **Landing :**

Associated with a synthetic aural voice : "GO AROUND, WINDSHEAR AHEAD".

Note : If a positive verification is made that no hazard exists, the warning may be considered cautionary.

- THR LEVERS ..... TOGA
- ANNOUNCE ..... "GO AROUND-FLAPS"
- FLAPS ..... RETRACT ONE STEP
- L/G UP ..... SELECT

This includes use of full backstick, if demanded.

Note : If engaged, the autopilot disengages when α greater than α prot.

W/S AHEAD amber

Apply precautionary measures, as indicated in the SUPPLEMENTARY TECHNIQUES (3.04.91).

VOLCANIC ASH ENCOUNTER

Accomplish the following, while making a 180 degree turn :

– ATC ..... NOTIFY

– A/THR ..... OFF

This prevents autothrust from generating thrust variations.

– THRUST (conditions permitting) ..... DECREASE

To reduce ash ingestion.

If altitude permits, reduce thrust to idle : This maximizes the engine surge margin, and lowers engine turbine temperature.

– CREW OXYGEN MASKS ..... ON/100 %

– CABIN CREW ..... NOTIFY

– PASSENGER OXYGEN ..... AS RQRD

Depending on contamination.

– ENG ANTI ICE ..... ON

– WING ANTI ICE ..... ON

– PACK FLOW ..... HI

– APU ..... START

If possible, start the APU and have it ready for an assisted engine relight in the event of an engine flame-out. Refer to APU Limitations (3.01.49).

– ENGINE PARAMETERS ..... MONITOR

Monitor EGT, in particular. If the EGT exceeds limits, it may become necessary to consider a precautionary engine shutdown and engine restart in flight.

– AIRSPEED INDICATIONS ..... MONITOR

If airspeed is unreliable or lost, use the UNRELIABLE SPEED INDICATION procedure.

Note : If both engines flame out and speed indications are lost, use the ALL ENGINE FLAME OUT procedure to obtain the required pitch attitude for the optimum relight speed. In case of an engine failure, switch off the wing anti-ice before engine restart.

GENERAL

R A successful outcome of an emergency situation depends, first of all, upon each crew
R member's perfect knowledge and execution of the duties assigned to him.
The captain should frequently check that all crew members know exactly their assigned positions and their specific duties, as well as the duties of the other crew members, in case of an abnormal or an emergency condition.
R Since it is not possible to cover all the situations which may occur, the captain will be
R responsible for adapting the following instructions, to obtain the best coordination of the
R emergency operation. Should it be physically impossible for the captain to carry out his
R duties, another crew member will substitute for him according to the chain of command.
R The procedures in this manual are AIRBUS INDUSTRIE procedures and should be
R considered to be a reference.

R **COCKPIT-ASSIGNED DUTIES FOR EVACUATION**

– If it is NOT POSSIBLE to reach the passenger cabin :
The cockpit crew should evacuate the aircraft via the cockpit clearview windows, by using the escape ropes.
On ground, each crewmember must help passengers, and direct them away from the aircraft.
– If it is POSSIBLE to reach the passenger cabin :

CAPT	– Is the last person to leave the cockpit : Proceeds to the cabin, and helps with passenger evacuation, as necessary. – Is the last person to leave the aircraft : Checks that all persons have evacuated the aircraft. – Evacuates the aircraft via the rear door, or any other available exit, if he/she cannot reach the rear door. – On ground, he/she takes command of operations until rescue units arrive.
F/O	– Proceeds to the cabin, and takes the emergency equipment. – Evacuates the aircraft, using any available exit. – Helps passengers on ground, and directs them away from the aircraft.

CABIN CREW-ASSIGNED AREAS FOR EVACUATION

R

CABIN CREW DESIGNATION	ASSIGNED JUMPSEAT AND DOOR	ASSIGNED AREA
1 PURSER	DOOR 1 LH	FWD - ALL CABIN
1 CABIN CREW	DOOR 1 RH	FWD
2 CABIN CREWS	DOOR 2 RH/LH	MID/FWD
2 CABIN CREWS	DOOR 3 RH/LH	MID/AFT
2 CABIN CREWS	DOOR 4 RH/LH	AFT/MID

R *Note : These procedures are established for the minimum required number of 8 cabin*
R *crews.*

GENERAL

R A successful outcome of an emergency situation depends, first of all, upon each crew
R member's perfect knowledge and execution of the duties assigned to him.
The captain should frequently check that all crew members know exactly their assigned positions and their specific duties, as well as the duties of the other crew members, in case of an abnormal or an emergency condition.
R Since it is not possible to cover all the situations which may occur, the captain will be
R responsible for adapting the following instructions, to obtain the best coordination of the
R emergency operation. Should it be physically impossible for the captain to carry out his
R duties, another crew member will substitute for him according to the chain of command.
R The procedures in this manual are AIRBUS INDUSTRIE procedures and should be
R considered to be a reference.

R **COCKPIT-ASSIGNED DUTIES FOR EVACUATION**

– If it is NOT POSSIBLE to reach the passenger cabin :
The cockpit crew should evacuate the aircraft via the cockpit clearview windows, by using the escape ropes.
On ground, each crewmember must help passengers, and direct them away from the aircraft.
– If it is POSSIBLE to reach the passenger cabin :

CAPT	– Is the last person to leave the cockpit : Proceeds to the cabin, and helps with passenger evacuation, as necessary. – Is the last person to leave the aircraft : Checks that all persons have evacuated the aircraft. – Evacuates the aircraft via the rear door, or any other available exit, if he/she cannot reach the rear door. – On ground, he/she takes command of operations until the rescue units arrive.
F/O	– Proceeds to the cabin, and takes the emergency equipment. – Evacuates the aircraft, using any available exit. – Helps passengers on ground, and directs them away from the aircraft.

CABIN CREW-ASSIGNED AREAS FOR EVACUATION

R

CABIN CREW DESIGNATION	ASSIGNED JUMPSEAT AND DOOR	ASSIGNED AREA
1 PURSER	DOOR 1 LH	FWD - ALL CABIN
1 CABIN CREW	DOOR 1 RH	FWD
2 CABIN CREWS	DOOR 2 RH/LH	MID/FWD
1 CABIN CREW	DOOR 2 OR 3 RH OR LH	MID
2 CABIN CREWS	DOOR 3 RH/LH	MID/AFT
2 CABIN CREWS	DOOR 4 RH/LH	AFT/MID

R *Note : These procedures are established for the minimum required number of 9 cabin crews.*
R *For customized seating configurations, the maximum number of cabin crews can be reduced, in accordance with JAR OPS 1.990. So, for an A330–customized seating configuration of 390 passenger seats, or less, the maximum number of cabin crews can be reduced to 8. Based on this, the number of cabin crews at Door 2 or 3 can be reduced from 3 to 2.*

COMMUNICATIONS

R

1. EMERGENCY CALL			
FROM	TO	COMMUNICATION METHOD(S)	REMARKS
COCKPIT	CABIN	– Press "EMER" CALL pushbutton on the CALLS panel, or – Passenger Address (PA) System : "PURSER TO COCKPIT PLEASE! "	The Purser must immediately go to the cockpit.
CABIN	COCKPIT	– Interphone : "PRIO CAPT"	Any cabin crewmember can make such a call. The cockpit crew must reply.

R

2. EMERGENCY ALERT			
FROM	TO	COMMUNICATION METHOD(S)	REMARKS
COCKPIT	CABIN	– PA System : "ATTENTION CREW! AT STATIONS!"	The cockpit crew makes a short and precise announcement to warn that an emergency evacuation may soon be required. Cabin crews must proceed to their emergency stations, and fasten their seatbelts.

R

3. NOTIFICATION TO PASSENGERS			
FROM	TO	COMMUNICATION METHOD(S)	REMARKS
COCKPIT	CABIN	– "NO SMOKING/SEAT BELT" signs ON. – PA System	For psychological reasons, the cockpit crew should be the first to inform of an intended emergency landing.
PURSER	CABIN	– CABIN LIGHTS 100 % – PA System	Purser informs passengers that they have to pay special attention to these warnings : – "FINISH PREPARATION" – "BRACE FOR IMPACT" – "PASSENGER EVACUATE"

R

4. FINISH PREPARATION			
FROM	TO	COMMUNICATION METHOD(S)	REMARKS
COCKPIT	CABIN	– Passenger Address (PA) System : "FINISH PREPARATION!"	The cockpit crew gives this order a short time before an emergency landing.

R

5. BRACE FOR IMPACT			
FROM	TO	COMMUNICATION METHOD(S)	REMARKS
COCKPIT	CABIN	– PA System : "BRACE FOR IMPACT!"	The cockpit crew gives this order no later than 1 minute before impact.

R

6. INITIATE EVACUATION (RESTRICTED EXITS)			
FROM	TO	COMMUNICATION METHOD(S)	REMARKS
COCKPIT	CABIN	– PA System : "PASSENGERS EVACUATE!" – Activate EVAC signals.	The cockpit crew orders an immediate evacuation, and the cabin crew directs passengers to all available exits.
CABIN	COCKPIT AND CABIN	– EVAC SIGNAL SYSTEM on FWD ATTND panel (FAP) – PA System or megaphone	Used by the cabin crew, if there is no signal or order from the cockpit, and if it is unmistakably clear that the aircraft must be evacuated.
CABIN	CABIN	– Verbal	The cabin crew stands up and shouts : – "SEATBELTS OFF!" – "LEAVE EVERYTHING!" – "GET OUT!" – "COME THIS WAY!"

R

7. EVACUATION NOT REQUIRED			
FROM	TO	COMMUNICATION METHOD(S)	REMARKS
COCKPIT	CABIN	– PA System : "CABIN CREW and PASSENGERS REMAIN SEATED!"	When the Captain decides that an evacuation is not required, the cockpit crew makes an immediate annoncement to this effect.

R **ON GROUND EVACUATION**

R **COCKPIT CREW PROCEDURES**

R – **The cockpit crew notifies the cabin crew of the nature of the emergency, and states intentions.**

R – **The cockpit crew uses the Passenger Address System to make an appropriate announcement, such as : "PASSENGERS EVACUATE", and presses the EVAC COMMAND pushbutton.**

R **CABIN CREW PROCEDURES**

R When the cabin receives the order to evacuate, each cabin crewmember must proceed as follows :

R – **STAND UP AND SHOUT . . . . . "UNFASTEN SEATBELTS"**

R – **OUTSIDE CONDITIONS . . . . . CHECK**

R ● **If outside conditions are safe :**

R – **DOOR IN ARMED POSITION . . . . . OPEN FIRMLY**

R – **SHOUT . . . . . "COME THIS WAY"**

R ● **If the door does not open automatically :**

R – **DOOR . . . . . PUSH AND OPEN MANUALLY**

R – **SLIDE (or SLIDERAFT) DEPLOYMENT . . . . . CHECK FULL DEPLOYMENT**
R It takes approximately four seconds for the slide (or slideraft) to deploy.

R ● **If the slide (or slideraft) does not automatically inflate :**

R – **RED, MANUAL INFLATION HANDLE . . . . . PULL**
R The red, manual inflation handle is located on the right-hand side of the slide (or
R slideraft) girt extension.

R – **ORDER . . . . . "PASSENGERS EVACUATE"**

R – **PASSENGER EVACUATION . . . . . EXPEDITE**

R ● **If the slide (or slideraft) becomes unserviceable :**

R – **PASSENGER EVACUATION . . . . . STOP**

R – **PASSENGERS TO ANOTHER USABLE EXIT . . . . . REDIRECT**

R – **TOTAL ZONE EVACUATION . . . . . CHECK**

R – **CABIN CREW . . . . . EVACUATE**

R – **PASSENGERS AWAY FROM THE AIRCRAFT . . . . . DIRECT**

R ● **If outside conditions are unsafe :**

R – **EXIT DOOR . . . . . BLOCK**

R – **PASSENGERS TO NEAREST USABLE EXIT . . . . . REDIRECT**

EVACUATION ON WATER

CABIN CREW RESPONSIBLE FOR TYPE "A" DOORS

When the cabin receives the order to evacuate, each cabin crewmember must proceed as follows :

– **CHILDREN LIFEVESTS . . . . . DISTRIBUTE**

– **STAND UP AND SHOUT . . "UNFASTEN SEATBELTS - PUT ON YOUR LIFEVEST"**
Inflate the lifevest, only once outside the aircraft.

– **ORDER . . . . . "REMOVE SHOES"**

● **If the Type A door is usable :**

– **DOOR IN ARMED POSITION . . . . . OPEN**

– **SLIDERAFT . . . . . DEPLOY**

– **RED, MANUAL INFLATION HANDLE . . . . . PULL**
Do not wait for automatic inflation of the slideraft.

■ **If the water level is close to the door sill :**
The slideraft inflates on the water.

– **SLIDERAFT . . . . . LEAVE ATTACHED TO CABIN FLOOR**

– **PASSENGER LIFEVESTS . . . . . INFLATE WHEN BOARDING SLIDERAFT**

– **PASSENGERS . . . . . BOARD SLIDERAFT**

– **TOTAL ZONE EVACUATION . . . . . CHECK**

– **LAST CREWMEMBER . . . . . BOARD SLIDERAFT**

– **SLIDERAFT . . . . . SEPARATE FROM DOOR SILL**
The last crewmember must separate the slideraft from the door sill, and board with all necessary safety equipment.

– **MOORING LINE . . . . . CUT**

– **SURVIVAL KIT . . . . . RETRIEVE**
The survival kit is attached to the slideraft via a lanyard.

■ **If the water level is too far away from the door sill :**

– **SLIDERAFT . . . . . DISCONNECT FROM DOOR SILL**
The slideraft remains tied to the aircraft by a 6–meter (20 feet) mooring line.

– **MOORING LINE . . . . . HOLD**
To keep the slideraft close to the exit, hold the mooring line.

– **PASSENGER LIFEVESTS . . . . . INFLATE WHEN BOARDING SLIDERAFT**

– **PASSENGERS . . . . . BOARD SLIDERAFT**

– **TOTAL ZONE EVACUATION . . . . . CHECK**

– **LAST CREWMEMBER . . . . . BOARD SLIDERAFT**
The last crewmember must board with all the necessary safety equipment.

– **MOORING LINE . . . . . CUT**

– **SURVIVAL KIT . . . . . RETRIEVE**
The survival kit is attached to the slideraft via a lanyard.

CABIN CREW RESPONSIBLE FOR EMERGENCY EXIT TYPE "I" DOORS

When the cabin receives the order to evacuate, each cabin crewmember must proceed as follows :

– **CHILDREN LIFEVESTS . . . . . DISTRIBUTE**

– **STAND UP AND SHOUT . . "UNFASTEN SEATBELTS - PUT ON YOUR LIFEVEST"**

– **ORDER . . . . . "REMOVE SHOES"**
Evacuation is usually done through the passenger doors. However, if one of the passenger doors is not usable, Exit 3 door (Type 1) may be used for evacuation, and the slide may be used as a flotation device.

EVACUATION ON WATER

CABIN CREW RESPONSIBLE FOR TYPE "A" DOORS

When the cabin receives the order to evacuate, each cabin crewmember must proceed as follows :

– **CHILDREN LIFEVESTS . . . . . DISTRIBUTE**

– **STAND UP AND SHOUT . . "UNFASTEN SEATBELTS - PUT ON YOUR LIFEVEST"**
Inflate the lifevest, only once outside the aircraft.

– **ORDER . . . . . "REMOVE SHOES"**

● **If the Type A door is usable :**

– **DOOR IN ARMED POSITION . . . . . OPEN**

– **SLIDERAFT . . . . . DEPLOY**

– **RED, MANUAL INFLATION HANDLE . . . . . PULL**
Do not wait for automatic inflation of the slideraft.

■ **If the water level is close to the door sill :**
The slideraft inflates on the water.

– **SLIDERAFT . . . . . LEAVE ATTACHED TO CABIN FLOOR**

– **PASSENGER LIFEVESTS . . . . . INFLATE WHEN BOARDING SLIDERAFT**

– **PASSENGERS . . . . . BOARD SLIDERAFT**

– **TOTAL ZONE EVACUATION . . . . . CHECK**

– **LAST CREWMEMBER . . . . . BOARD SLIDERAFT**

– **SLIDERAFT . . . . . SEPARATE FROM DOOR SILL**
The last crewmember must separate the slideraft from the door sill, and board with all necessary safety equipment.

– **MOORING LINE . . . . . CUT**

– **SURVIVAL KIT . . . . . RETRIEVE**
The survival kit is attached to the slideraft via a lanyard.

■ **If the water level is too far away from the door sill :**

– **SLIDERAFT . . . . . DISCONNECT FROM DOOR SILL**
The slideraft remains tied to the aircraft by a 6–meter (20 feet) mooring line.

– **MOORING LINE . . . . . HOLD**
To keep the slideraft close to the exit, hold the mooring line.

– **PASSENGER LIFEVESTS . . . . . INFLATE WHEN BOARDING SLIDERAFT**

– **PASSENGERS . . . . . BOARD SLIDERAFT**

– **TOTAL ZONE EVACUATION . . . . . CHECK**

– **LAST CREWMEMBER . . . . . BOARD SLIDERAFT**
The last crewmember must board with all the necessary safety equipment.

– **MOORING LINE . . . . . CUT**

– **SURVIVAL KIT . . . . . RETRIEVE**
The survival kit is attached to the slideraft via a lanyard.

03.00 CONTENTS
03.01 GENERAL INFORMATION
03.02 FLIGHT PREPARATION
03.03 SAFETY EXTERIOR INSPECTION
03.04 PRELIMINARY COCKPIT PREPARATION
03.05 EXTERIOR INSPECTION
03.06 COCKPIT PREPARATION
03.07 BEFORE PUSHBACK OR START
03.08 ENGINE START
03.09 AFTER START
03.10 TAXI
03.11 BEFORE TAKEOFF
03.12 TAKEOFF
03.13 AFTER TAKEOFF
03.14 CLIMB
03.15 CRUISE
03.16 DESCENT PREPARATION
03.17 DESCENT
03.18 ILS APPROACH
03.19 NON PRECISION APPROACH
03.20 VISUAL APPROACH
03.21 PRECISION APPROACH
03.22 LANDING
03.23 GO AROUND
03.24 AFTER LANDING
03.25 PARKING
03.26 SECURING THE AIRCRAFT
R 03.90 STANDARD CALLS

FOREWORD

R The procedures contained in this Chapter are recommended by Airbus, and are consistent with the other Chapters of this manual.
The Authorities do not certificate Standard Operating Procedures. The manufacturer presents them herein as the best way to proceed, from a technical and operational standpoint. They are continually updated and the revisions take into account Operator input, as well as manufacturer experience.
In addition, Operators may amend them, as needed. However, the manufacturer recommends that Operators using the FCOM as onboard operational manual submit suggested changes to expedite publication, and maintain consistency of the manual.
The Operator should note that they may rewrite this Chapter, at their own responsibility ; this could, however, make it difficult to update the manual and keep it consistent with the other Chapters.

PRELIMINARY

The following sections contain expanded information on normal procedures.
Standard Operating Procedures consist of inspections, preparations, and normal procedures. All items of a given procedure are listed in a sequence that follows a standardized scan of the cockpit panels, unless that sequence goes against the action priority logic, to ensure that all actions are performed in the most efficient way.
Standard Operating Procedures are divided into flight phases, and are performed by memory.
These procedures assume that all systems are operating normally, and that all automatic functions are used normally.
Some normal procedures, that are non-routine will be found in the SUPPLEMENTARY TECHNIQUES Chapter (3.04), and in the SPECIAL OPERATIONS Chapter (2.04).

NORMAL CHECKLIST

After completing a given procedure, the flight crew uses the related normal checklist to ascertain that they have checked the safety points.
The crewmember that reads the checklist should announce completion of the checklist (Example : "LANDING CHECKLIST COMPLETED").

R The normal checklist, developed by Airbus, takes advantage of the ECAM system and only includes the items that may directly impact safety and efficiency if done incorrectly.
All normal checklists are requested by the PF, and read by the PNF. They are of the challenge/response type. The responding crewmember only responds to the challenge after having checked the configuration. If the configuration does not agree with the checklist response, he must take corrective action before answering.

If corrective action is not possible, the pilot modifies the response to reflect the actual situation (specific answer). Whenever necessary, the other crewmember crosschecks the validity of the response. The challenger waits for the response, before proceeding any further.
For the checklist items identified "AS RQRD", the response states the actual condition or configuration of the system (for example "ANTI ICE".....ON").

Note : Normal checklists are not "TO DO" lists. The flight crew should have performed the actions, or checks, prior to going through the checklist.
Obviously, the flight crew must take corrective action on any item that is not in the proper condition, when it reads the list.

COMMUNICATION

R · Cross-cockpit communications :
Cross-cockpit communication is VITAL for any two-pilot crew. Whenever a crewmember makes any adjustments or changes to any information or equipment on the flight deck, he must advise the other crewmember and obtain an acknowledgement. This includes such items as : FMGS alterations, changes in speed or Mach, the tuning of navigation aids, flight plan modifications, and the selection of such systems as anti-ice and pack low flow.
The flight crew must use headsets from engine startup to top of climb, and from top of descent until the aircraft is parked.

R · Sterile cockpit rule :
R Below 10 000 feet, any non-essential conversation within the cockpit and between the
R cabin and cockpit crews should be avoided. Adherence to this policy facilitates effective
R crew communication, as well as communication of emergency or safety-related
R information by cabin crew.

USE OF THE FLIGHT MANAGEMENT AND GUIDANCE SYSTEM

The FMGC has 3 functions :
- The two FG (Flight Guidance) functions :
  - Autopilot (AP) and Flight Director (FD)
  - Autothrust (A/THR)
- The FM (Flight Management) function.

AUTOPILOT AND FLIGHT DIRECTOR

The design objective of the autopilot and flight dorector is to provide assistance to the crew throughout the flight :
- By freeing up the Pilot Flying from routine handling tasks, and thus providing time and resources to assess the overall operational situation.
- By providing the Pilot Flying with adequate attitude or flight path orders, with the flight director symbol on the Primary Flight Display, so as to facilitate accurate handling of the aircraft.

The AP/FD guides the aircraft along the intended flight path, or at the intended speed, according to the guidance modes engaged by the pilot on the Flight Control Unit (FCU) (Example : NAV-HDG-V/S...).

The FCU is the short-term interface between the pilot and the FMGC, used to select guidance targets and arm/engage guidance modes.

There are 2 types of modes and associated targets :

- Managed modes and targets : The aircraft is guided along the FMS lateral and vertical flight plan and speed profile. These modes and targets are armed or engaged by pressing the FCU knobs.
- Selected modes and targets : The aircraft is guided by selected targets according to the modes selected on the FCU. These modes and targets are armed or engaged by the pilot by turning and pulling the FCU knobs.

The PF's task is to set the desired modes and targets to fly the aircraft where he wants to go.

- If the autopilot is used, the PF may select the modes on the FCU.
- R If the autopilot is not used. The PF asks the PNF to select the intended modes and targets on the FCU.

The armed and engaged modes are indicated on the Flight Mode Annunciator (FMA) on top of the PFD ; the targets (SPD, ALT, HDG...) are indicated on the associated scales on the PFD.

- The crew must check the FCU-selected targets on the PFD.
- The crew must monitor the engaged/armed modes on the FMA.

If the autopilot and/or flight director do not guide the aircraft where the crew is expecting:

- The PF should disengage the autopilot using the instinctive disconnect pushbutton on the side stick, or both pilots should delete the flight director symbols from the PFDs with the flight director pushbuttons located on the EFIS control panel, and fly the aircraft manually.
- The PF should not disengage the autopilot by sidestick override except if instinctive reaction.

The autopilot may be used from after takeoff down to a late stage of the approach (including autoland when permitted).

The autopilot may be used in most failure case, when available :

- In case of engine failure, without any restriction including autoland on CATII/CATIII ILS.
- In case of abnormal configuration, down to 500 feet AGL in all modes.

When the autopilot is engaged, there is no backdriven feedback system to the sidestick since this is no longer necessary with fly-by-wire controls.

When the PF handflies the aircraft using the flight director, he must obey the flight director orders ; in other words, the crossbars must be centered, or the flight path vector must be on the flight path director symbol so as to fly according to the selected modes and targets.

- If the PF does not wish to fly the flight director orders, both pilots must delete the flight director symbols from the PFDs.
- When flying a visual approach, the flight directors should be deselected.

AUTOTHRUST (A/THR)

The A/THR's design objective is to provide assistance to the crew for thrust management throughout the flight.

The A/THR may be engaged in one of the following modes, which automatically depend on the AP/FD vertical modes :

- THRUST mode : The A/THR maintains a fixed thrust level (e.g. THR CLB or THR IDLE), when the AP/FD guides the aircraft in climb or descent at a constant speed (e.g. CLB or DES modes)
- SPEED/MACH mode : The A/THR varies the thrust, so as to maintain a target speed, when the AP/FD guides the aircraft on a given trajectory (e.g. V/S, ALT, G/S modes).

When the A/THR is active, the thrust levers are set to detents (e.g. MCT, CLB) ; they remain in this fixed position, while the A/THR varies or sets the thrust according to the active mode.

When the A/THR is active, the thrust lever position defines the maximum thrust available for the A/THR.

The crew must monitor the A/THR to ensure correct operation :

- On the PFD, by checking the active mode on the FMA, the current speed versus the target speed and, most importantly, the speed trend vector on the speed scale.
- On the ECAM, by checking the thrust command symbols on the engine thrust indication (N1 or EPR).

In case the PF is not satisfied with the A/THR operation, he must disengage it using one of the instinctive disconnect pushbuttons located on the thrust levers.

He can then command the thrust manually, which is totally conventional.

R The A/THR may be used from thrust reduction, after takeoff, down to flare, at landing.

The A/THR may be used in most failure cases, when available, in case of :

- One engine failure, without any restrictions
- Abnormal configuration, with selected target speed for the approach.

FLIGHT MANAGEMENT SYSTEM (FMS)

The FMS is designed to provide assistance to the crew for :

- Navigation,
- Flight planning,
- Aircraft performance (optimum speeds/altitudes),
- Predictions.

The FMS is an important long-term planning and management tool, linked to the AP/FD.

When the AP/FD is engaged in managed modes, the aircraft is guided along the FMS flight plan, using the FMS target speeds.

The Multipurpose Control and Display Unit (MCDU) is used to insert and retrieve data to/from the FMS.

The FMS MCDU is a major interface between the pilots and the FMS. However, the various FMS entries required at successive flight phases should not distract the crew from the general flight conduct and duties.

The prime concern for the flight crew should be :
– Is the aircraft flying as expected NOW ?
– What is the aircraft expected to fly NEXT ?
If any doubt is raised about the aircraft current trajectory, or proposed target speed..., the PF must immediately select the appropriate modes and targets on the FCU (which automatically disengages the managed modes).
Subsequently and if time permits, the PNF will analyze and correct whatever might have gone wrong on the MCDU.

GENERAL RULES FOR GOOD USE OF THE FMGS

– Monitor the AP/FD/ATHR modes and engagement status on the FMA
– Any FMA modification must be announced.
– Monitor the result of any target selection performed on the FCU, on the related scales of the PFD (e.g. SPD target, on SPD scale)
– Monitor the AP/FD/ATHR resulting guidance, on the basic flight instrument scales of the PFD (HDG, SPD, ALT, attitude...)
– If the PF is not satisfied with the guidance he must :
. REVERT TO BASICS
. FLY THE AIRCRAFT where he wants to go.

The FMGS description and procedures are provided in the FCOM VOL 4 called FMGS PILOT'S GUIDE.

TAKING OVER THE FLIGHT CONTROLS

Because of the nature of "fly by wire" and "sidestick" system, the PNF should not make control inputs to correct the PF's handling of the aircraft.
If a take-over becomes necessary during flight, the PNF must call clearly "I have control", and press the sidestick priority pushbutton keeping it pressed until the transfer of control is clearly established.

TECHNICAL CONDITION OF THE AIRCRAFT

– The crew will verify the technical state of the aircraft (deferred defect list), with regard to airworthiness, acceptability of malfunctions (MEL), and influence on the flight plan.

WEATHER BRIEFING

– The crew will get a weather briefing.
– The briefing should include :
  · Actual and expected weather conditions, including runway conditions for takeoff and climb-out.
  · Significant weather enroute, including winds and temperatures.
  · Terminal forecasts for destination and alternate airports.
  · Actual weather for destination and alternates, for short range flights and recent past weather, if available.
  · Survey of the meteorological conditions at airports along the planned route.

Weather can affect the choice of routing (for example, influence which route is quickest) and the choice of flight level. The flight crew must also consider the possibility of runways being contaminated at the departure and destination airfields. The flight crew must also verify ISA deviations and enroute icing conditions, and must consider the possibility of holding due to weather at the destination.

NOTAMS

– The flight crew must examine NOTAMs for changes to routings, unserviceable navaids, availability of runways and approach aids etc, all of which may affect the final fuel requirement.

FLIGHT PLAN and OPERATIONAL REQUIREMENTS

– The crew will check the company flight plan for routing, altitudes and flight time.
– The Captain will check the ATC flight plan and ensure that it :
R · Is filled in an filed, in accordance with the prescribed procedures,
  · Agrees with the fuel flight plan routing.
– The crew will check the estimated load figures, and will calculate the maximum allowable takeoff and landing weights.

OPTIMUM FLIGHT LEVEL

The flight crew should choose a flight level that is as close to the optimum as possible. To obtain the optimum flight level, use the chart in the QRH or in the FCOM (Refer to FCOM 2.05.20).

R As a general rule, an altitude that is 4000 feet below the optimum produces a significant
R penalty (approximately 5 % of fuel). Flight 8000 feet below the optimum altitude produces
R a penalty of more than 10 % against trip fuel. (The usual contingency allowance is 5 %).
R If flight above optimum (up to ceiling) is intended. The increase in consumption may reach
R 3%.

FUEL REQUIREMENTS

COMPUTERIZED FLIGHT PLAN CHECK

In most cases the flight crew uses a computer-derived flight plan to obtain the correct fuel requirements. Although these computerized requirements are normally accurate, the flight crew must check them for gross errors.

The easiest way to do this is to use the "Quick Determination of F-PLN" tables in FCOM 2.05.40. Although the aircraft will fly at ECON MACH that is based on the cost index, the
R 0.82 Mach table is accurate enough to permit the crew to check for gross error.

Ensure that both the captain and the first officer have verified that the fuel calculations and required fuel on board are correct and that the figure complies with the applicable regulations.

FUEL TRANSPORTATION

The flight crew must check the policy covering the "tankering" of fuel on sectors where there is a favourable fuel price differential or operational requirement.

Remember that carrying unnecessary extra fuel increases the fuel consumption for that sector and therefore reduces the economy of the operation (lower flex temperature, more tire and brake wear, more time in climb phase, lower optimum flight level etc).

SAFETY EXTERIOR INSPECTION

Items marked by (*) are the only steps to be completed during a transit stop.
This inspection ensures that the aircraft and its surroundings are safe for operations. On arriving at the aircraft, check for obstructions in the vicinity, engineering activity, refueling etc.

*– **WHEEL CHOCKS** . . . . . **CHECK IN PLACE**

*– **LANDING GEAR DOORS** . . . . . **CHECK POSITION**

WARNING

Do not pressurize the green hydraulic system without clearance from ground personnel if any gear door is open.

*– **APU AREA** . . . . . **CHECK**
Observe that the APU inlet and outlet are clear.

PRELIMINARY COCKPIT PREPARATION

Items marked by (*) are the only steps to be completed during a transit stop.
The following procedure, performed by the PNF, ensures that all required safety checks are performed before the application of electrical power to avoid inadvertent operation of systems and danger to the aircraft and personnel.
Included is APU starting and the establishment of electrical and pneumatic power.

ENG

– **ENG MASTER 1 and 2 . . . . . OFF**

– **ENG START selector . . . . . NORM**

L/G

– **L/G lever . . . . . Check DOWN position**

WIPERS

– **WIPERS . . . . . OFF**

ELEC

■ **If the aircraft has not been electrically supplied for 6 hours or more, perform the following check :**

– **BAT 1 and 2 and APU BAT . . . . . CHECK OFF**

– **BAT 1 and 2 and APU BAT VOLTAGE . . . . . CHECK ABOVE 25.5 V**
Battery voltage above 25.5 V ensures a charge above 50 %.
R After, the check, the selector should remain on APU position to avoid discharge of
R BAT 1 or 2.

● **If battery voltage is below 25.5 V :**
a charging cycle of about 20 minutes is required.

– **BAT 1 and 2 and APU BAT . . . . . AUTO**

– **EXT PWR . . . . . ON**
Check on ECAM ELEC DC page, battery contactors closed and batteries charging.

● **After 20 minutes :**

– **BAT 1 + 2 and APU BAT . . . . . OFF**

– **BAT 1 and 2 and APU BAT VOLTAGE . . . . . CHECK ABOVE 25.5 V :**
After the check, the selector should remain on APU position.

● **If battery voltage is above 25.5 V :**

– **BAT 1 and 2 and APU BAT . . . . . AUTO**

Note : The ground horn will be triggered, associated with the ventilation EXTRACT FAULT illumination and ECAM warning after 5 minutes when the aircraft is supplied with batteries only.

■ **If the aircraft has been electrically supplied during the last 6 hours**

– **BAT 1 and 2 and APU BAT . . . . . AUTO**

Note : In case of APU start on battery only, perform the following check :
– BAT 1 and 2 and APU BAT . . . . . AUTO
– BAT 1 and 2 and APU BAT . . . . . CHECK ABOVE 23.5 V
If one battery voltage is lower than 23.5 V, there is a risk of aborted APU start. A charging cycle of the battery is required.

– **EXT PWR (when AVAIL light is on) . . . . . ON**
AVAIL light goes out.

Note : 1. When only one electrical power is available, it is recommended to connect EXT PWR A since :
– EXT PWR B does not permit GND/FLT buses to be supplied directly, without energizing the total aircraft network.
– EXT PWR B cannot be used simultaneously, with APU GEN.
2. If AVAIL light does not come on (external power connected) or ON/AVAIL lights go out during external power operation, the GPCU protection has tripped. Reset using the EXT PWR pushbutton.

HYD

WARNING
Do not pressurize hydraulic systems without clearance from ground crew.

APU FIRE

– **APU FIRE pushbutton . . . . . IN and GUARDED**

– **AGENT light . . . . . OUT**

If the APU is already running, ensure that the following check has already been completed. If not, perform it.

– **APU FIRE TEST pushbutton . . . . . PRESS**

Check :
· APU FIRE warning on ECAM + CRC + MASTER WARN light.
· APU FIRE pushbutton lighted red.
· SQUIB and DISCH lights on.

APU START

– **APU MASTER switch . . . . . ON**

ON light comes on.
APU page appears on ECAM.

Note : If only batteries are supplying, press the APU pushbutton on the ECAM control panel during the start sequence (to permit the ECAM upper display to display the APU page).

– **APU START . . . . . ON**

FLAP OPEN indication appears on the ECAM APU page.
On the ECAM APU page, N and EGT rise.
When N = 95 % :
. On ECAM APU page, AVAIL indication appears.
. On APU panel : START ON light goes out.
AVAIL light comes on.
10 seconds later :
. ECAM DOOR/OXY page replaces the ECAM APU page

R *Note : Bleed pressure up to 12 psi, with possible fluctuations, can be observed on*
R *the ECAM APU and BLEED pages, in cold weather conditions (below approx.*
R *10°C).*

ELEC

*– **EXT PWR (if ON) . . . . . AS RQRD**

External power may be kept on to reduce APU load, especially in hot conditions.

COCKPIT LIGHTS

*– **COCKPIT LIGHTS . . . . . AS RQRD**
· Set STBY COMPASS, DOME, ANN LT switches as required.
· Set FLOOD LT and INTEG LT as required.

PARKING BRAKE

*– **PARKING BRAKE . . . . . ON**
The parking brake must be on during the exterior inspection to allow the flight crew to check brake wear indicators.

*– **ACCU PRESS & BRAKES PRESS indicators . . . . . CHECK**
– Check for normal indications.
– The ACCU PRESS indication must be in the green band. If required use the electric pump on blue hydraulic system to recharge the brake accumulators.

WARNING
Blue hydraulic system is pressurized from blue electric pump. Get ground crew clearance before using the electric pump.

ALTERNATE BRAKING SYSTEM

Note : The purpose of this check is to verify, before the first flight of the day, the efficiency of the alternate braking system (absence of "spongy pedals").

– **CHOCKS . . . . . CHECK IN PLACE**

– **PARKING BRAKE . . . . . OFF**

– **BRAKE PEDALS . . . . . PRESS**
Apply maximum pressure on both pedals.

– **BRAKE PRESSURE (on BRAKE press indicator). . . . . CHECK**
Pressure must build up without delay symmetrically on left and right sides for the same application simultaneously applied on left and right pedals. The maximum pressure (2538 psi ± 145 psi) must be reached with full pedal deflection.

– **BRAKE PEDALS . . . . . RELEASE**

– **PARKING BRAKE . . . . . ON**
The parking brake must be on during the exterior inspection to allow the flight crew to check brake wear indicators.

APU FIRE

– **APU FIRE pushbutton . . . . . IN and GUARDED**

– **AGENT light . . . . . OUT**

If the APU is already running, ensure that the following check has already been completed. If not, perform it.

– **APU FIRE TEST pushbutton . . . . . PRESS**

Check :
· APU FIRE warning on ECAM + CRC + MASTER WARN light.
· APU FIRE pushbutton lighted red.
· SQUIB and DISCH lights on.

APU START

– **APU MASTER switch . . . . . ON**

ON light comes on. APU page appears on ECAM.

Note : If only batteries are supplying, press the APU pushbutton on the ECAM control panel during the start sequence (to permit the ECAM upper display to display the APU page).

– **APU START . . . . . ON**

FLAP OPEN indication appears on the ECAM APU page. On the ECAM APU page, N and EGT rise. When N = 95 % :
. On ECAM APU page, AVAIL indication appears.
. On APU panel : START ON light goes out.
AVAIL light comes on.
10 seconds later : ECAM DOOR/OXY page replaces the ECAM APU page.

R *Note : A bleed pressure up to 12 psi can be observed on the ECAM APU and BLEED*
R *pages in cold weather conditions (below approx. 10°C), when the APU bleed*
R *valve is indicated closed.*

ELEC

*– **EXT PWR (if ON) . . . . . AS RQRD**

External power may be kept on to reduce APU load, especially in hot conditions.

COCKPIT LIGHTS

*– **COCKPIT LIGHTS . . . . . AS RQRD**
· Set STBY COMPASS, DOME, ANN LT switches as required.
· Set FLOOD LT and INTEG LT as required.

PARKING BRAKE

*– **PARKING BRAKE . . . . . ON**
The parking brake must be on during the exterior inspection to allow the flight crew to check brake wear indicators.

*– **ACCU PRESS & BRAKES PRESS indicators . . . . . CHECK**
– Check for normal indications.
– The ACCU PRESS indication must be in the green band. If required use the electric pump on blue hydraulic system to recharge the brake accumulators.

WARNING
Blue hydraulic system is pressurized from blue electric pump. Get ground crew clearance before using the electric pump.

ALTERNATE BRAKING SYSTEM

Note : The purpose of this check is to verify, before the first flight of the day, the efficiency of the alternate braking system (absence of "spongy pedals").

– **CHOCKS . . . . . CHECK IN PLACE**

– **PARKING BRAKE . . . . . OFF**

– **BRAKE PEDALS . . . . . PRESS**
Apply maximum pressure on both pedals.

– **BRAKE PRESSURE (on BRAKE press indicator). . . . . CHECK**
Pressure must build up without delay symmetrically on left and right sides for the same application simultaneously applied on left and right pedals. The maximum pressure (2538 psi ± 145 psi) must be reached with full pedal deflection.

– **BRAKE PEDALS . . . . . RELEASE**

– **PARKING BRAKE . . . . . ON**
The parking brake must be on during the exterior inspection to allow the flight crew to check brake wear indicators.

F/CTL

– **FLAPS . . . . . CHECK POSITION**
Check the upper ECAM display to confirm that the FLAPS position agrees with the handle position.

R *– **SPEEDBRAKE lever . . . . . CHECK RETRACTED and DISARMED**

WARNING
If flight control surface positions do not agree with the control handle positions, check with the maintenance crew before applying hydraulic power.

PROBE/WINDOW HEAT

– **PROBE/WINDOW HEAT . . . . . CHECK AUTO**

AIR COND

– **APU BLEED . . . . . ON**
R Do not use APU BLEED, if ground personnel confirms that ground air unit is connected.
R Pilots should also check the ECAM BLEED page to determine whether an HP ground air
R unit is connected (pressure in the bleed system).

– **ALL WHITE LIGHTS . . . . . OFF**

– **X BLEED . . . . . AUTO**

– **Cabin and cockpit temperature selectors . . . . . AS RQRD**
Full range temperature 24 ± 6°C (75 ± 11°F).
The temperature selection recommended for the cabin is 21.5° C (about 10 o'clock).

CARGO AIR COND ◁

– **SELECTORS . . . . . AS RQRD**
Set temperature selectors, as required.
Set cargo cooling selector to OFF, unless livestock, plants, food, or dry ice are carried.

ELEC

– **Scan and check that there are no amber lights, except GEN FAULT lights.**

VENT

– **Check all lights off.**

*** ECAM**

*– **RECALL . . . . . PRESS**
· Press the RECALL pushbutton for at least 3 seconds to recall all warnings that have been cleared or cancelled.
· If applicable, check warnings compatible with MEL, then CLEAR or CANCEL them. If any action is required, call maintenance personnel as soon as possible.

*– **DOOR . . . . . PRESS**
If oxygen pressure is below 1500 psi (boxed in amber), check "MIN FLT CREW OXY CHART" to ascertain if it is sufficient for the scheduled flight (Refer to 3.01.35).

*– **HYD . . . . . PRESS**
Check that the quantity indexes are in the normal filling range.

*– **ENG . . . . . PRESS**
· Set the FADEC GND POWER pushbutton on the overhead panel to ON, to supply the FADEC.
· Check that the oil quantity is at, or above, 12 qt + estimated consumption
R (maximum average estimated consumption = 0.56 qt/h. Engine operation with
R engine oil consumption above 0.56 and up to 0.87 qt/h, is allowed, provided the
R engine oil consumption permits fulfillment of the mission.

EMERGENCY EQUIPMENT

– **Check the following equipment :**
· Life jackets stowed
· Axe stowed
· Smoke hoods ◁ or portable oxygen equipment and full face masks ◁ stowed and serviceable.
· Portable fire extinguisher lockwired and pressure in the green area
· Smoke goggles stowed (smoke hoods if installed)
· Oxygen masks stowed
· Flashlights stowed
· Escape ropes stowed.

RAIN REPELLENT (if installed and operative)

– **Pressure and quantity indicators . . . . . CHECK**

CAUTION
Never use rain repellent to wash the windshield, and never use it on a dry windshield.

GENERAL

The exterior inspection ensures that the overall condition of the aircraft and its visible components and equipment are safe for the flight.
Complete inspection is normally performed by maintenance personnel or, in the absence of maintenance personnel, by a flight crewmember before each originating flight.
Items marked by (*) must be performed again by a flight crewmember before each flight.
The parking brake must be ON during the exterior inspection, to allow the flight crew to check break wear indicators.

- Check structure for impact damage.
- Check that there is no evident fuel, oil, or hydraulic leaks.

R - Check that all ground access doors are closed.

WARNING

If a landing gear door is open, contact the maintenance crew before applying hydraulic power.

EXTERIOR WALKAROUND

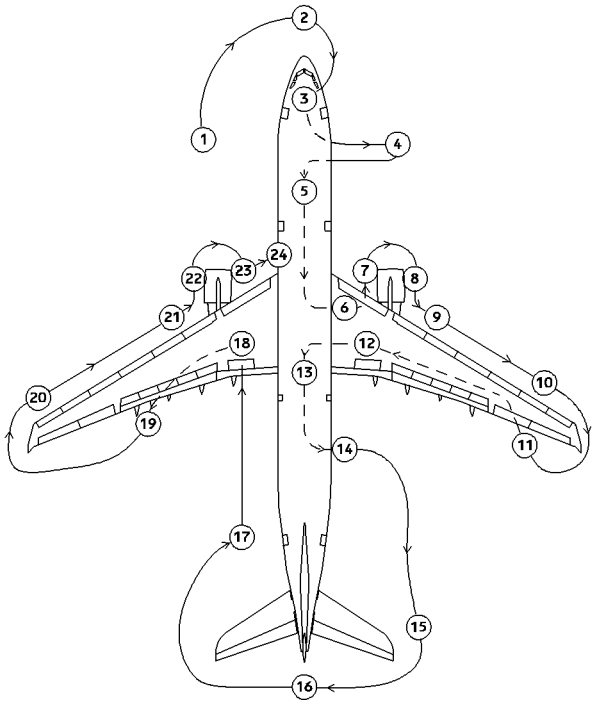

GFC5-03-0305-001-A001AA

(1) LH FWD FUSELAGE

- Outflow valve . . . . . CONDITION
- Static ports . . . . . CLEAR
- *— AOA probe . . . . . CONDITION

R — Wing and engine scan lights . . . . . CONDITION

(2) NOSE SECTION

- *— Pitot probes . . . . . CONDITION
- *— TAT probes . . . . . CONDITION
- *— Radome and latches . . . . . CONDITION/LATCHED
- Avionics compartment door . . . . . CLOSED
- Ice detection probes . . . . . CONDITION
- Crew oxygen discharge indicator . . . . . GREEN

(3) NOSE L/G

- Taxi and turn off lights . . . . . CONDITION
- *— Nosewheel chocks . . . . . IN PLACE
- *— Wheels and tires . . . . . CONDITION
- Nose gear structure . . . . . CONDITION
- Hydraulic lines and electrical wires . . . . . CONDITION
- Wheel well . . . . . CHECK
- Safety pin . . . . . REMOVED
- Ground electrical power door (if not required) . . . . . CLOSED
- Avionic ventilation overboard valve . . . . . CONDITION

(4) RH FWD FUSELAGE

- *— AOA probes . . . . . CONDITION
- Pax oxygen discharge indicator ◁ . . . . . GREEN
- Cargo loading operation access door . . . . . CLOSED
- Cargo door operation access door . . . . . CLOSED
- Cargo door . . . . . CLOSED
- Static ports . . . . . CLEAR
- Antennas . . . . . CONDITION
- *— Drain mast . . . . . CONDITION

R — Wing and engine scan lights . . . . . CONDITION

(5) LOWER CENTER FUSELAGE

– RAM air inlet flap . . . . . CONDITION
– LP ground connection door . . . . . CLOSED
– Anticollision light . . . . . CHECK
– Pack air intakes and outlets . . . . . CLEAR
– HP ground connection door . . . . . CLOSED
– Ground hydraulic connection blue . . . . . CLOSED
– Left L/G ground opening handle access door . . . . . CLOSED
– Right L/G ground opening handle access door . . . . . CLOSED
– Ground hydraulic connection yellow . . . . . CLOSED

(6) RH CENTER WING

– Inner tank magnetic fuel levels R1 and R2 . . . . . FLUSH
– Fuel water drain valves (inner tank) . . . . . NO LEAK
– Water drain valve door . . . . . CLOSED
– Landing light . . . . . CONDITION
*– Slat 1 . . . . . CONDITION

(7) ENG 2 LH SIDE

– IDG Oil fill access door . . . . . CLOSED
*– Thrust reversers cowl door . . . . . CLOSED
– Pressure relief doors . . . . . CLOSED
*– Fan cowl door . . . . . CLOSED/LATCHED
*– Drain masts . . . . . CONDITION/NO LEAK
– Access to starter valve manual override . . . . . CLOSED
– Access door to reversers latches . . . . . CLOSED
*– Engine inlet and fan blades . . . . . CHECK

(8) ENG 2 RH SIDE

– Engine Oil fill access door . . . . . CLOSED
*– Fan cowl door . . . . . CLOSED/LATCHED
*– Thrust reverser cowl door . . . . . CLOSED
– Pressure relief door . . . . . CLOSED
– Turbine exhaust . . . . . CLEAR

(9) RH WING LEADING EDGE

R
- — Refuel coupling door . . . . . CLOSED
- — Magnetic fuel levels R3, R4, R5 and R6 . . . . . FLUSH
- — Fuel water drain valve (outer tank) . . . . . NO LEAK
- — RAT doors . . . . . CLOSED
- *— Slats 2, 3, 4 . . . . . CONDITION

(10) RH WING TIP

- *— Fuel ventilation overpressure disc . . . . . INTACT
- — Wing fence . . . . . CONDITION
- — Magnetic fuel levels R7 and R8 . . . . . FLUSH
- — Fuel water drain valve (surge tank) . . . . . NO LEAK
- — Surge tank air inlet . . . . . CLEAR
- *— Slats 5, 6, 7 . . . . . CONDITION
- — Navigation light . . . . . CONDITION
- — Antennas on top of fuselage . . . . . CONDITION

(11) RH WING TRAILING EDGE

- — Static dischargers . . . . . CHECK
- *— Control surfaces . . . . . CONDITION
- *— Flaps and fairings . . . . . CONDITION

(12) RH LANDING GEAR

- *— Chocks . . . . . REMOVED
- *— Wheels and tires . . . . . CONDITION
- — Brakes and brake wear indicators. . . . . CONDITION
- — Hydraulic lines . . . . . CHECK
- — Landing gear structure . . . . . CHECK
- — Downlock springs . . . . . CHECK
- — Safety pin . . . . . REMOVED

(13) CENTER FUSELAGE

- — Refuel electric control panel . . . . . CLOSED
- — APU FUEL Drain . . . . . CONDITION/NO LEAK
- — Ground hydraulic connection green and reservoir filling . . . . . CLOSED

(14) RH AFT FUSELAGE

- Antennas . . . . . CONDITION
- Drain mast . . . . . CONDITION
- Potable water aft drain panel . . . . . CLOSED
- Cargo loading operation access door . . . . . CLOSED
- Cargo door operation access door . . . . . CLOSED
- Cargo door . . . . . CLOSED
- Bulk door . . . . . CLOSED
- *– Potable water service panel . . . . . CLOSED
- *– Waste service panel . . . . . CLOSED

(15) * TAIL

- *– Stabilizer, elevator, fin and rudder . . . . . CONDITION
- Surge tank air inlet . . . . . CLEAR
- Fuel water drain valves (3) . . . . . NO LEAK
- Static dischargers (elevator rudder) . . . . . CHECK
- *– Lower fuselage structure (tail impact on runway) . . . . . CONDITION
- Flight records access door . . . . . CLOSED

R *– Fuel ventilation overpressure disc . . . . . INTACT

(16) APU

- Access door . . . . . CLOSED
- Air intake . . . . . CONDITION
- Exhaust . . . . . CLEAR
- Navigation light . . . . . CONDITION
- Fire extinguishing overpressure indication (red disc) . . . . . IN PLACE

(17) LH AFT FUSELAGE

- *– Stabilizer, elevator, fin and rudder . . . . . CONDITION
- Outflow valve . . . . . CONDITION

(18) LH L/G AND FUSELAGE

- *– Chocks . . . . . REMOVED
- *– Wheels and tires . . . . . CONDITION
- Brakes and brake wear indicator . . . . . CONDITION
- Hydraulic lines . . . . . CHECK
- L/G structure . . . . . CHECK
- Downlock spring . . . . . CHECK
- Safety pin . . . . . REMOVED

(19) LH WING TRAILING EDGE

*– Flaps and fairing . . . . . CONDITION
*– Control surfaces . . . . . CONDITION
– Static dischargers . . . . . CHECK

(20) LH WING TIP

– Navigation light . . . . . CONDITION
*– Slats 7, 6, 5 . . . . . CONDITION
– Surge tank air inlet . . . . . CLEAR
– Fuel water drain valve (surge tank) . . . . . NO LEAK
– Magnetic fuel levels L8 and L7 . . . . . FLUSH
– Wing fence . . . . . CONDITION
*– Fuel ventilation overpressure disc . . . . . INTACT

(21) LH WING LEADING EDGE

– Magnetic fuel levels L6, L5, L4 and L3 . . . . . FLUSH
– Fuel water drain valve (outer tank) . . . . . NO LEAK
*– Slats 4, 3, 2 . . . . . CONDITION
R – Refuel coupling door . . . . . CLOSED

(22) ENG 1 LH SIDE

Identical to ENG 2

(23) ENG 1 RH SIDE

Identical to ENG 2

(24) LH CENTER WING

– Inner tank magnetic fuel levels L2 and L1 . . . . . FLUSH
– Fuel water drain valves (inner tank) . . . . . NO LEAK
– Water drain valve panel . . . . . CLOSED
– Landing light . . . . . CONDITION
*– Slat 1 . . . . . CONDITION

INTRODUCTION

Items marked by (*) are the only steps to be completed during a transit stop.
The PF and PNF should perform the cockpit preparation according to the panel scan sequence, defined below, and the task sharing defined in the Quick Reference Handbook (QRH).

DOCUMENTATION AND MAINTENANCE

On entering the aircraft, obtain the technical (maintenance) log and verify that the certificate of maintenance and daily inspection (or similar) are up to date and signed. Check the deferred or carried-forward defects. If refueling has already been completed, check the uplift.

PANEL SCAN SEQUENCE

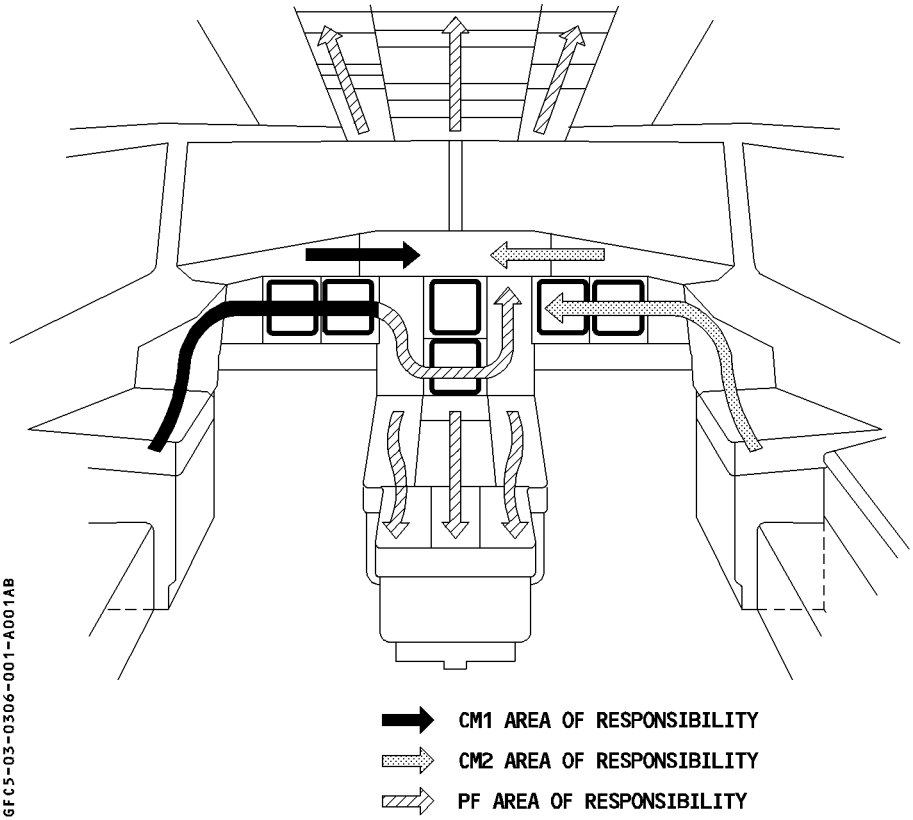

GFC5-03-0306-001-A001AB

*– **GEAR PINS and COVERS** . . . . . **CHECK**
Check that three are onboard and stowed.

OVERHEAD PANEL

IT IS A GENERAL RULE TO TURN OFF ALL WHITE LIGHTS FOR ALL THE SYSTEMS DURING THE SCAN SEQUENCE. THESE ACTIONS ARE, THEREFORE, NOT LISTED HERE.

*** RCDR**

*– **RCDR GND CTL** . . . . . **ON**

EVAC ◁

– **CAPT and PURS/CAPT switch** . . . . . **AS RQRD**
Usual position is CAPT.

*** ADIRS**

*– **Mode rotary selectors (3)** . . . . . **NAV**
· The ADIRS outputs are used by many of the aircraft's systems, so it is essential to set the selectors to NAV as early as possible to provide data to the related systems.
· For a complete realignment, select the OFF position for more than 5 seconds (approximately 10 minutes, depending on the latitude).
· IRS IN ALIGN is indicated on the ECAM MEMO.
· Enter the present position, just after switching the three mode selectors to NAV, to avoid excessive ADIRS drift.

Note : For flights with long segments on which there are no FMGC position updates with radio navigation, perform a complete alignment. For other flights, a fast alignment is sufficient.

EXT LT

– **EXTERIOR LIGHTS** . . . . . **AS RQRD**
Set the STROBE switch to AUTO, the BEACON switch to OFF, and remaining switches as required.

INTRODUCTION

Items marked by (*) are the only steps to be completed during a transit stop.
The PF and PNF should perform the cockpit preparation according to the panel scan sequence, defined below, and the task sharing defined in the Quick Reference Handbook (QRH).

DOCUMENTATION AND MAINTENANCE

On entering the aircraft, obtain the technical (maintenance) log and verify that the certificate of maintenance and daily inspection (or similar) are up to date and signed. Check the deferred or carried-forward defects. If refueling has already been completed, check the uplift.

PANEL SCAN SEQUENCE

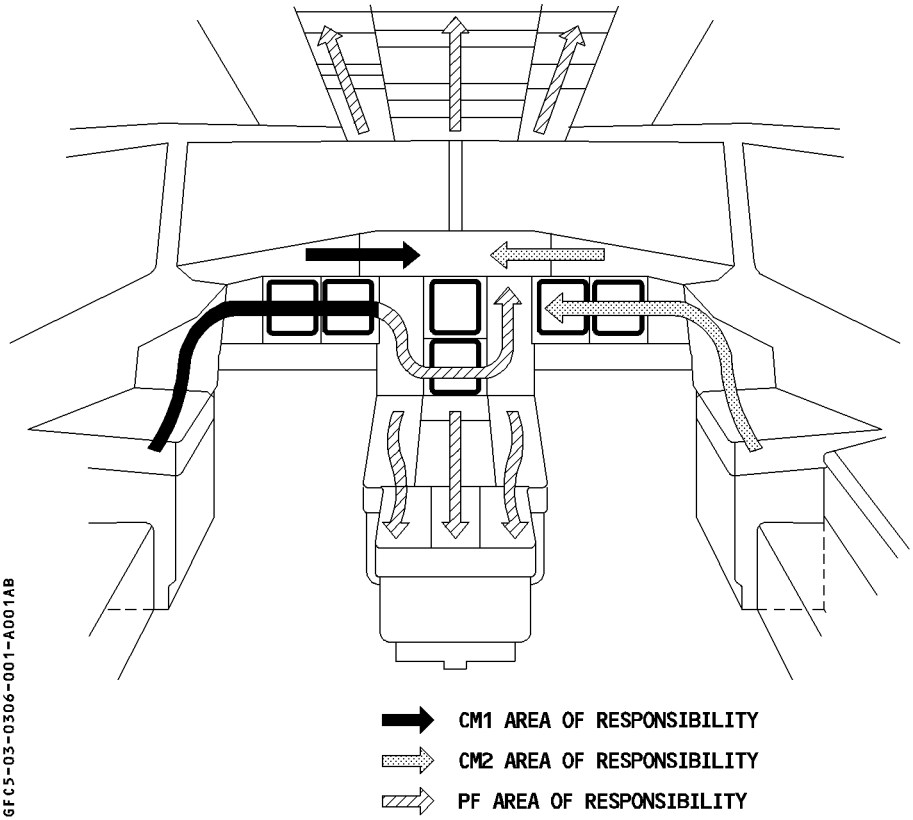

GFC5-03-0306-001-A001AB

*– **GEAR PINS and COVERS** . . . . . **CHECK**
Check that three are on board and stowed.

OVERHEAD PANEL

IT IS A GENERAL RULE TO TURN OFF ALL WHITE LIGHTS FOR ALL THE SYSTEMS DURING THE SCAN SEQUENCE. THEREFORE, THESE ACTIONS ARE NOT LISTED HERE.

*** RCDR**

*– **RCDR GND CTL** . . . . . **ON**

EVAC ◁

– **CAPT and PURS/CAPT switch** . . . . . **AS RQRD**
The usual position is CAPT.

*** ADIRS**

*– **Mode rotary selectors (3)** . . . . . **NAV**
· The ADIRS outputs are used by many of the aircraft's systems, so it is essential to set the selectors to NAV as early as possible to provide data to the related systems.
· For a complete realignment, select the OFF position for more than 5 seconds (approximately 10 minutes, depending on the latitude).
· IRS IN ALIGN is indicated on the ECAM MEMO.

Note : For flights with long segments on which there are no FMGC position updates with radio navigation, perform a complete alignment. For other flights, a fast alignment is sufficient.

CKPT DOOR LKG SYS

– **ON/OFF CONTROL SWITCH** . . . . . **ON**
This position must be maintained throughout the entire flight.

EXT LT

– **EXTERIOR LIGHTS** . . . . . **AS RQRD**
Set the STROBE switch to AUTO, the BEACON and the WING switches to OFF, and remaining switches as required.
WING lights may be used briefly for wing inspection. However, as this light can cause heat damage to the jetway, it must be switched off, if the jetway is on the aircraft.

*** SIGNS**

*– **SEATBELTS** . . . . . **ON/AUTO**

*– **NO SMOKING** . . . . . **AUTO**

Note : Leaving the NO SMOKING selector ON prevents the emergency batteries from charging.

*– **EMER EXIT LT** . . . . . **ARM**

CABIN PRESS

– **LDG ELEV** . . . . . **AUTO**

– **VALVE SEL** . . . . . **BOTH**

*** AIR COND**

*– **PACK FLOW** . . . . . **AS RQRD**

Select :

LO : If less than 60 % of the seats in the economy class are occupied, but not more than 200 passengers in all classes.

HI : For abnormally hot and humid conditions.

NORM : For all other normal operating cases.

If the APU is supplying, pack controllers select HI flow automatically, independent of the selector position.

ELEC

– **ECAM ELEC DC PAGE** . . . . . **CALL**

– **BAT 1 and 2 and APU BAT** . . . . . **OFF then ON**

10 seconds after selecting ON, check on the ECAM ELEC page that the three battery charge currents are below 60 A and decreasing.

FUEL

– **T. TANK** . . . . . **AUTO**

ENG 1 – ENG 2 FIRE

– **ENG 1 and 2 FIRE pushbuttons . . . . . CHECK IN and GUARDED**

– **AGENT 1 and AGENT 2 lights . . . . . CHECK OUT**

– **TEST pushbutton . . . . . PRESS**
Check :
· ENG 1 FIRE warning on the ECAM + CRC + MASTER WARN light
· ENG 2 FIRE indication on the ECAM MEMO
· ENG FIRE pushbutton is red.
· SQUIB and DISCH lights on.
· FIRE light (on ENG panel) on.

DATA LOADER

– **DATA LOADER . . . . . CHECK OFF**

MAINTENANCE PANEL

– **Check that all lights are out. If not, select associated pushbutton to turn off.**

THIRD OCCUPANT AUDIO CONTROL PANEL

– **PA reception knob . . . . . Select reception**
· This allows cabin attendant announcements to be recorded on the CVR.
· For proper recording, set the volume at or above medium range.

CVR

– **CVR TEST . . . . . PRESS**
R Check that at least one green LED is illuminated on the test result indicator.

RMP

– **RMP . . . . . ON**

– **Green NAV light . . . . . CHECK OFF**

– **SEL light . . . . . CHECK OFF**

– **COM FREQUENCIES . . . . . TUNE**
Use VHF 1 for ATC (only VHF 1 is available in emergency electrical configuration), VHF 2 for ATIS and company frequencies. VHF 3 is normally devoted to ACARS.

*** SIGNS**

*– **SEATBELTS** . . . . . **ON/AUTO**

*– **NO SMOKING** . . . . . **AS RQRD**

*– **EMER EXIT LT** . . . . . **ARM**

CABIN PRESS

– **LDG ELEV** . . . . . **AUTO**

– **VALVE SEL** . . . . . **BOTH**

*** AIR COND**

*– **PACK FLOW** . . . . . **AS RQRD**

Select :

LO : If less than 60 % of the seats in economy class are occupied, but no more than 200 passengers in all classes.

HI : For abnormally hot and humid conditions.

NORM : For all other normal operating cases.

If the APU is supplying, pack controllers automatically select HI flow, irrespective of the selector position.

ELEC

– **ECAM ELEC DC PAGE** . . . . . **CALL**

– **BAT 1 and 2 and APU BAT** . . . . . **OFF then ON**

10 seconds after selecting ON, check on the ECAM ELEC page that the three battery charge currents are below 60 A and decreasing.

FUEL

– **T. TANK** . . . . . **AUTO**

ENG 1 – ENG 2 FIRE

– **ENG 1 and 2 FIRE pushbuttons . . . . . CHECK IN and GUARDED**

– **AGENT 1 and AGENT 2 lights . . . . . CHECK OUT**

– **TEST pushbutton . . . . . PRESS**
Check :
· ENG 1 FIRE warning on the ECAM + CRC + MASTER WARN light
· ENG 2 FIRE indication on the ECAM MEMO
· ENG FIRE pushbutton is red.
· SQUIB and DISCH lights on.
· FIRE light (on ENG panel) on.

DATA LOADER

– **DATA LOADER . . . . . CHECK OFF**

MAINTENANCE PANEL

– **Check that all lights are out. If not, select associated pushbutton to turn off.**

THIRD OCCUPANT AUDIO CONTROL PANEL

– **PA reception knob . . . . . Select reception**
· This allows cabin attendant announcements to be recorded on the CVR.
· For proper recording, set the volume at or above medium range.

CVR

– **CVR TEST . . . . . PRESS**
R Check that at least one green LED is illuminated on the test result indicator.

RMP

– **RMP . . . . . ON**

– **Green NAV light . . . . . CHECK OFF**

– **SEL light . . . . . CHECK OFF**

– **COM FREQUENCIES . . . . . TUNE**
Use VHF 1 for ATC (only VHF 1 is available in emergency electrical configuration), VHF 2 for ATIS and company frequencies. VHF 3 is normally devoted to ACARS.

*** AIRFIELD DATA**

Obtain data needed for initializing the system and preparing the cockpit. This should include: RUNWAY IN USE, ALTIMETER SETTING, and WEATHER DATA.

*** ATC CLEARANCE**

Obtain ATC clearance, or use the probable clearance.

*** ACARS**

Initialize ACARS at that point, or after FMGS INITIALIZATION, as per company policy.

***FMGS INITIALIZATION**

At electrical power-up, the FMGSs and FCU run through various internal tests. Allow enough time (3 minutes) for tests' completion, and do not start to press pushbuttons until the tests are over. If the "PLEASE WAIT" appears, do not press any MCDU key until the message clears.

*– **ENGINE & AIRCRAFT TYPE** . . . . . **CHECK**

*– **FM database validity** . . . . . **CHECK**
- Press the DATA key, and display the STATUS page (if not displayed).
- Check DATA BASE validity and stored WPT/NAVAIDS/RWY/ROUTES, if any. If applicable, review the stored data for deletion decision.

*– **NAVAID DESELECTION** . . . . . **AS RQRD**
If NOTAMs warn of any unreliable DME or VOR/DME, display DATA, then POSITION MONITOR. Access the SEL NAVAID page, and deselect the related navaid.

*– **FLIGHT PLAN INITIALIZATION** . . . . . **COMPLETE**
- Press the INIT key.
- Insert CO RTE or city pair, and check FROM/TO.
- Check/modify ALTN/CO RTE.
- Enter flight number.

R For ATC needs, the crew should enter exactly the entire flight number, as shown on
R the ICAO flight plan, without inserting any space, on the MCDU INIT page.

- Enter (and/or check) cost index.
- Enter intended initial CRZ FL, or check it if it was already supplied by the database. Modify it, if necessary, taking into account ATC constraints or expected gross weight.
- Check and modify CRZ FL TEMP and tropopause level to agree with forecast.
- Check latitude/longitude.

*– **ALIGN IRS prompt . . . . . PRESS**

· Enter the present position, just after switching the three mode selectors to NAV, to avoid excessive ADIRS drift.

· Do not move the aircraft, as long as alignment is not completed.

· The IRS are usually aligned to the departure airport reference point coordinates. It is recommended to use these coordinates, as stored in the navigation database, for transit flights or for any flight with GPS. When published, use of the gate coordinates (insert/slew in the INIT A page) should be reserved for aircraft without GPS, and when flying long segments without radio updates.

· When IRS alignment is completed, the RESET IRS TO NAV message on the MCDU may indicate that the INIT page coordinates have been modified and are different from the IRS coordinates.

*– **F-PLN A page . . . . . COMPLETE AND CHECK**

If CO RTE has been inserted, the F-PLN should automatically include the preferential or most probable takeoff runway, approach and landing runway, associated SIDs, STARs, transition and enroute waypoints. However some databases will only include departure and arrival airport idents and enroute waypoints.

The crew must check, modify, or insert (as applicable) the F-PLN in the following order according to the data given by ATIS, ATC or MET :

· Lateral revision at departure airport. Select RWY, then SID, then TRANS, using the scroll keys.

· Lateral revision at WPT for ROUTE modification, if needed. (Refer to 4.04.10).

· Vertical revision. Check or enter climb speed limit/constraints according to ATC clearance. Enter step altitude, as appropriate.

*– **WINDS . . . . . AS APPROPRIATE**

Choose between using TRIP WIND (INIT B page), or forecast wind, for CLB or CRZ phases. (Refer to 4 04.20)

*– **F-PLN . . . . . CHECK**

· Check the F-PLN either by using the ROUTE SELECTION page versus ATC F-PLN or F-PLN page, or the ND PLAN mode versus the computer (paper) flight plan or navigation chart.

· Check DIST TO DEST along the F-PLN. Compare it with the total distance computed for the flight with the computer (paper) flight plan.

*– **SECONDARY FLIGHT PLAN . . . . . AS APPROPRIATE**

This is routinely a copy of the active flight plan. However, consideration may be given to the following :

a) Copy the active F-PLN, but modify it at a suitable WPT for an immediate return to the departure airfield in the event of, for example, engine failure.

b) If weather is below landing minimums at the departure airfield, the secondary flight plan should be that required for a diversion immediately after takeoff.

c) If there is a chance of a runway or SID change during taxi, prepare for it by copying the active flight plan and making the necessary modifications.

*** AIRFIELD DATA**

Obtain data needed for initializing the system and preparing the cockpit. This should include: RUNWAY IN USE, ALTIMETER SETTING, and WEATHER DATA.

*** ATC CLEARANCE**

Obtain ATC clearance, or use the probable clearance.

*** ACARS**

Initialize ACARS at that point, or after FMGS INITIALIZATION, as per company policy.

***FMGS INITIALIZATION**

At electrical power-up, the FMGSs and FCU run through various internal tests. Allow enough time (3 minutes) for tests' completion, and do not start to press pushbuttons until the tests are over. If the "PLEASE WAIT" appears, do not press any MCDU key until the message clears.

*– **ENGINE & AIRCRAFT TYPE** . . . . . **CHECK**

*– **FM database validity** . . . . . **CHECK**
- Press the DATA key, and display the STATUS page (if not displayed).
- Check DATA BASE validity and stored WPT/NAVAIDS/RWY/ROUTES, if any. If applicable, review the stored data for deletion decision.

*– **NAVAID DESELECTION** . . . . . **AS RQRD**
If NOTAMs warn of any unreliable DME or VOR/DME, display DATA, then POSITION MONITOR. Access the SEL NAVAID page, and deselect the related navaid.

*– **FLIGHT PLAN INITIALIZATION** . . . . . **COMPLETE**
- Press the INIT key.
- Insert CO RTE or city pair, and check FROM/TO.
- Check/modify ALTN/CO RTE.
- Enter flight number.

R For ATC needs, the crew should enter exactly the entire flight number, as shown on
R the ICAO flight plan, without inserting any space, on the MCDU INIT page.

- Enter (and/or check) cost index.
- Enter intended initial CRZ FL, or check it if it was already supplied by the database. Modify it, if necessary, taking into account ATC constraints or expected gross weight.
- Check and modify CRZ FL TEMP and tropopause level to agree with forecast.
- Check latitude/longitude.

*– **ALIGN IRS prompt . . . . . AS APPROPRIATE**
Do not move the aircraft, as long as alignment is not completed. The IRS are automatically initialized using the GPS position. Pilot intervention is not required. If the pilot has entered a CO RTE or FROM/TO, the INIT page displays the departure airport reference point coordinates (as stored in the navigation database), and the ALIGN IRS prompt appears. Do not press the ALIGN IRS prompt key. The ADIRS is initialized to the GPS position at the end of the alignment time. If the GPS position is not available, the pilot manually initializes the ADIRS by pressing the ALIGN IRS prompt key. By doing this, the airport reference point coordinates are sent to the ADIRS. When flying long segments without radio position update, initialize the ADIRS to the gate coordinates (insert/slew in the INIT page). When IRS alignment is completed, the MCDU's RESET IRS TO NAV message may indicate that the INIT page coordinates have been modified and are different from the IRS coordinates.

*– **F-PLN A page . . . . . COMPLETE AND CHECK**
If CO RTE has been inserted, the F-PLN should automatically include the preferential or most probable takeoff runway, approach and landing runway, associated SIDs, STARs, transition and enroute waypoints. However, some databases will only include departure and arrival airport idents and enroute waypoints. The crew must check, modify, or insert (as applicable) the F-PLN in the following order according to the data given by ATIS, ATC or MET :
· Lateral revision at departure airport. Select RWY, then SID, then TRANS.
· Lateral revision at WPT for ROUTE modification, if needed. (Refer to 4.04.10).
· Vertical revision. Check or enter climb speed limit/constraints according to ATC clearance. Enter step altitude, as appropriate.

*– **WINDS . . . . . AS APPROPRIATE**
Choose between using TRIP WIND (INIT B page), or forecast wind, for CLB or CRZ phases (Refer to 4 04.20).

*– **F-PLN . . . . . CHECK**
· Check the F-PLN, either by using the ROUTE SELECTION page versus ATC F-PLN, or F-PLN page, or the ND PLAN mode versus the computer (paper) flight plan or navigation chart.
· Check DIST TO DEST along the F-PLN. Compare it with the total distance computed for the flight with the computer (paper) flight plan.

*– **SECONDARY FLIGHT PLAN . . . . . AS APPROPRIATE**
This is routinely a copy of the active flight plan. However, consideration may be given to the following :
a) Copy the active F-PLN, but modify it at a suitable WPT for an immediate return to the departure airfield in the event of, for example, engine failure.
b) If weather is below landing minimums at the departure airfield, the secondary flight plan should be that required for a diversion immediately after takeoff.
c) If there is a chance of a runway or SID change during taxi, prepare for it by copying the active flight plan and making the necessary modifications.

*– **RADIO NAV** . . . . . **CHECK**
· Check the VOR and ILS tuned by the FMGC.
· Modify them, if required, and check that the correct identifier is displayed on the ND and PFD (ILS). If unsatisfactory, go through the audio check.

*** FMGS DATA INSERTION**

GROSS WEIGHT INSERTION (INIT B page) :

*– **ZFCG/ZFW** . . . . . **INSERT**

*– **BLOCK FUEL** . . . . . **INSERT**
Block fuel may be automatically computed by the FMGC, using the FLIGHT PLANNING function.

CAUTION
Part of characteristic speeds, displayed on the PFD (green dot, F, S, VLS), are computed from the ZFW and ZFCG entered by the crew on the MCDU. Therefore, this data must be carefully checked (Captain's responsibility).

The flight crew should insert the weights after completing all other insertions. This is to avoid cycles of prediction computations at each change in flight plan, constraints, etc...
If ZFCG and ZFW are not available, it is acceptable to enter the expected values in order to obtain predictions. Similarly, the flight crew may enter the expected fuel on board, if refueling has not been completed at that time.
If ZFCG, ZFW, and BLOCK FUEL are inserted, the FM will provide all predictions, as well as the EXTRA fuel, if any.

TAKEOFF DATA INSERTION (PERF TAKEOFF page)

*– **V1, VR, V2** . . . . . **INSERT**

R *– **FLEX TO TEMP** . . . . . **INSERT**

*– **THR RED/ACC altitude** . . . . . **SET or CHECK**
For noise abatement procedure "A", the crew must set the acceleration altitude at, or above, 3000 feet.

*– **ENG OUT ACC altitude** . . . . . **SET or CHECK**

*– **FLAPS/THS reminder** . . . . . **INSERT**

*– **TO SHIFT** . . . . . **AS RQRD**
Enter takeoff SHIFT distance, if takeoff is to be from an intersection. This is essential for position updating at takeoff and, consequently, for navigation accuracy.

R **CLIMB, CRUISE, DESCENT SPEED PRESELECTION**

*– **PRESET SPEEDS** . . . . . **AS RQRD**

If the flight is cleared for a close-in turn or close-in altitude constraint, the flight crew may preselect green dot speed on the PERF CLB page. Once the CLB phase is active, the preselected speed will be displayed in the FCU speed window and on the PFD as a selected speed (blue symbol). Once the turn is completed or the altitude cleared, the pilot will resume the managed speed profile by pressing the SPD selector on the FCU. Similarly, the pilot may select a CRZ MACH number on the PERF CRZ page (constant CRZ Mach segment, for example). When the CRZ phase is active, the preselected CRZ MACH number will be displayed in the FCU speed window and on the PFD. When ECON MACH number may be resumed, the crew presses the FCU SPD selector.

In either of the above cases, the pilot may cancel the CLB or CRZ preselected SPD/MACH prior to activating the related phase, by selecting ECON on the PERF CLB or CRZ pages

SPD LIM is defaulted to 250 knots below 10000 feet in the managed speed profile. This may either be cleared, or modified, on the VERT REV page at the origin (or a climb waypoint).

*** GLARESHIELD**

– **Glareshield and FCU integral light** . . . . . **AS RQRD**

*– **LOUDSPEAKER** . . . . . **SET**

Approximately at the 1 o'clock position.

*– **BARO REF** . . . . . **SET**

· Set QNH on the EFIS control panel and on the standby altimeter.
· Check barometer settings and altitude indications on the PFD and standby altimeter. (Tolerance limits are given in 3.04.34).

*– **FD** . . . . . **CHECK ON**

*– **LS** . . . . . **AS RQRD**

Note : Do not engage the autothrust on ground, as it may generate the AUTO FLT A/THR OFF warning at engine start.

*– **RADIO NAV** . . . . . **CHECK**
· Check the VOR and ILS tuned by the FMGC.
· Modify them, if required, and check that the correct identifier is displayed on the ND and PFD (ILS). If unsatisfactory, go through the audio check.

* FMGS DATA INSERTION

GROSS WEIGHT INSERTION (INIT B page) :

*– **ZFCG/ZFW** . . . . . **INSERT**

*– **BLOCK FUEL** . . . . . **INSERT**
Block fuel may be automatically computed by the FMGC, using the FLIGHT PLANNING function.

CAUTION
Part of characteristic speeds, displayed on the PFD (green dot, F, S, VLS), are computed from the ZFW and ZFCG entered by the crew on the MCDU. Therefore, this data must be carefully checked (Captain's responsibility).

The flight crew should insert the weights after completing all other insertions. This is to avoid cycles of prediction computations at each change in flight plan, constraints, etc...
If ZFCG and ZFW are not available, it is acceptable to enter the expected values in order to obtain predictions. Similarly, the flight crew may enter the expected fuel on board, if refueling has not been completed at that time.
If ZFCG, ZFW, and BLOCK FUEL are inserted, the FM will provide all predictions, as well as the EXTRA fuel, if any.

TAKEOFF DATA INSERTION (PERF TAKEOFF page)

*– **V1, VR, V2** . . . . . **INSERT**

*– **FLEX TO TEMP/DERATE** . . . . . **INSERT**

*– **THR RED/ACC altitude** . . . . . **SET or CHECK**
For noise abatement procedure "A", the crew must set the acceleration altitude at, or above, 3000 feet.

*– **ENG OUT ACC altitude** . . . . . **SET or CHECK**

*– **FLAPS/THS reminder** . . . . . **INSERT**

*– **TO SHIFT** . . . . . **AS RQRD**
Enter takeoff SHIFT distance, if takeoff is to be from an intersection. This is essential for position updating at takeoff and, consequently, for navigation accuracy.

R **CLIMB, CRUISE, DESCENT SPEED PRESELECTION**

*– **PRESET SPEEDS** . . . . . **AS RQRD**

If the flight is cleared for a close-in turn or close-in altitude constraint, the flight crew may preselect green dot speed on the PERF CLB page. Once the CLB phase is active, the preselected speed will be displayed in the FCU speed window and on the PFD as a selected speed (blue symbol). Once the turn is completed or the altitude cleared, the pilot will resume the managed speed profile by pressing the SPD selector on the FCU. Similarly, the pilot may select a CRZ MACH number on the PERF CRZ page (constant CRZ Mach segment, for example). When the CRZ phase is active, the preselected CRZ MACH number will be displayed in the FCU speed window and on the PFD. When ECON MACH number may be resumed, the crew presses the FCU SPD selector.

In either of the above cases, the pilot may cancel the CLB or CRZ preselected SPD/MACH prior to activating the related phase, by selecting ECON on the PERF CLB or CRZ pages

SPD LIM is defaulted to 250 knots below 10000 feet in the managed speed profile. This may either be cleared, or modified, on the VERT REV page at the origin (or a climb waypoint).

*** GLARESHIELD**

– **Glareshield and FCU integral light** . . . . . **AS RQRD**

*– **LOUDSPEAKER** . . . . . **SET**

Approximately at the 1 o'clock position.

*– **BARO REF** . . . . . **SET**

· Set QNH on the EFIS control panel and on the standby altimeter.
· Check barometer settings and altitude indications on the PFD and standby altimeter. (Tolerance limits are given in 3.04.34).

*– **FD** . . . . . **CHECK ON**

*– **LS** . . . . . **AS RQRD**

Note : Do not engage the autothrust on ground, as it may generate the AUTO FLT A/THR OFF warning at engine start.

*** EFIS CONTROL PANEL**

*– **ND mode and range . . . . . AS RQRD**
MODE : Display the ARC mode on the ND, if the takeoff direction is approximately the departure direction or the ROSE NAV mode, if the direction change will be more than 70° after takeoff (to allow the ND to display the area behind the aircraft).
RANGE : Set the minimum range to display the first waypoint after departure, or as required for weather radar.

*– **VOR/ADF selector . . . . . AS RQRD**
Display VOR and ADF needles, as needed.

*** FCU**

*– **SPD MACH window . . . . . DASHED**

*– **HDG V/S-TRK FPA . . . . . HDG V/S**

*– **ALT window . . . . . INITIAL EXPECTED CLEARANCE ALT**

LATERAL CONSOLES

OXYGEN MASK TEST

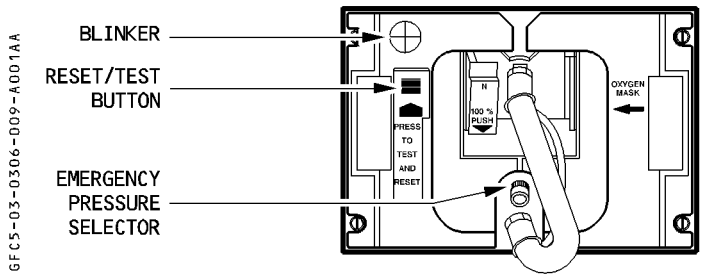

On the OXYGEN panel :

– **CREW SUPPLY . . . . . CHECK ON**

On the glareshield :

– **LOUDSPEAKERS . . . . . ON**

On the audio control panel :

— **INT reception knob . . . . . PRESS OUT - ADJUST**

— **INT/RAD switch . . . . . INT**

On the mask stowage box :

· Press and hold the reset/test button in the direction of the arrow.
  — Check that the blinker turns yellow for a short time, and then goes black.
· Hold the reset/test button down, and press the emergency pressure selector.
  — Check that the blinker turns yellow, and remains yellow as long as the emergency pressure selector is pressed.
  — Listen for oxygen flow through the loudspeakers. Warn any engineer, whose headset may be connected to the nose intercom, that a loud noise may be heard.
· Check that the reset/test button returns to the up position and the N 100 % selector is in the 100 % position.
R · Press the emergency pressure selector again, and check that the blinker does not turn
R yellow. This ensures that the mask is not supplied.

On the ECAM DOOR/OXY page :

— **REGUL LO PR message . . . . . CHECK OFF**
  · The crew must perform this check after having checked all masks. It ensures that the LP valve is open. (Due to residual pressure between the LP valve and the oxygen masks, an LP valve failed closed may not be detected during the oxygen mask test).

CM 1/2 INSTRUMENT PANELS

– **EFIS DMC selector . . . . . CHECK NORM**

– **PFD and ND brightness knob . . . . . AS RQRD**
Check the ND outer ring to maximum range (radar display).

*– **PFD . . . . . CHECK**
– Check PFD/ND not transferred.
– Check for correct display, when ATT and HDG are available.
– Check IAS, FMA, initial target ALT, altimeter readings, VSI, altimeter settings, heading and attitude display.

*– **ND . . . . . CHECK**
– Check for correct display.
– Crosscheck compass indication on the ND and DDRMI.
– Check ground speed less than 5 knots, heading, initial waypoint, VOR/ADF indications.

CTR INSTRUMENT PANEL

*– **STBY ASI . . . . . CHECK**

R *– **STBY ALTI . . . . . CHECK**

*– **STBY HORIZON . . . . . CHECK**
Check no flag – Erect if necessary.

*– **NORTH REF . . . . . CHECK**
Check TRUE blue light off.

*** ECAM SWITCHING panel**

– **Check DMC at AUTO and ECAM/ND at NORM**

*** CLOCK**

– **Check time, adjust if necessary ; elapsed time at zero, chrono at zero.**

Note : If the clock is readjusted for a value above ten days, maintenance must perform the Wing Tip Brake engagement test.

LANDING GEAR

– **LDG GEAR GRVTY EXTN** . . . . . **OFF**

*– **A/SKID & N/W STRG** . . . . . **ON**

PEDESTAL

ACP

– **INT knob** . . . . . **PRESS OUT/VOLUME CHECK**
Ensure that INT volume is turned up, to enable contact with the ground crew.

– **VHF** . . . . . **CHECK**
Check transmission and reception.

– **HF** . . . . . **CHECK**
· Check transmission and reception.
· Do not transmit on HF during refueling.

*** WEATHER RADAR**

R *– **Power supply switch** . . . . . **CHECK OFF**

*– **GAIN** . . . . . **AUTO**

*– **Mode** . . . . . **AS RQRD**

*** PARKING BRK**

*– **PARKING BRK** . . . . . **ON then OFF**
– Check pressure on BRAKE PRESS indicator.
– If chocks are in place, release parking brake to increase brake cooling.

CM 1/2 INSTRUMENT PANELS

– **EFIS DMC selector . . . . . CHECK NORM**

– **PFD and ND brightness knob . . . . . AS RQRD**
Check the ND outer ring to maximum range (radar display).

*– **PFD . . . . . CHECK**
– Check that the PFD/ND is not transferred.
– Check for correct display, when ATT and HDG are available.
– Check IAS, FMA, initial target ALT, altimeter readings, VSI, altimeter settings, heading and attitude display.

*– **ND . . . . . CHECK**
– Check for correct display.
– Crosscheck compass indication on the ND and DDRMI.
– Check ground speed less than 5 knots, heading, initial waypoint, VOR/ADF indications.

CTR INSTRUMENT PANEL

*– **ISIS . . . . . CHECK**
– Adjust brightness.
– Check IAS, altimeter readings, altimeter settings and attitude display.
– Check no flags - Reset attitude, if necessary.

Note : Use of ISIS bugs function is not recommended (Refer to FCOM 1.34.25).

*– **NORTH REF . . . . . CHECK**
Check TRUE blue light off.

*** ECAM SWITCHING panel**

– **Check DMC at AUTO, and ECAM/ND at NORM.**

*** CLOCK**

– **Check time, and adjust if necessary ; elapsed time at zero, chrono at zero.**

Note : If the clock is readjusted for a value above ten days, maintenance must perform the Wing Tip Brake engagement test.

LANDING GEAR

– **LDG GEAR GRVTY EXTN** . . . . . **OFF**

*– **A/SKID & N/W STRG** . . . . . **ON**

PEDESTAL

ACP

– **INT knob** . . . . . **PRESS OUT/VOLUME CHECK**
Ensure that INT volume is turned up, to enable contact with the ground crew.

– **VHF** . . . . . **CHECK**
Check transmission and reception.

– **HF** . . . . . **CHECK**
· Check transmission and reception.
· Do not transmit on HF during refueling.

*** WEATHER RADAR**

*– **Power supply switch** . . . . . **CHECK OFF**

*– **WINDSHEAR switch** . . . . . **CHECK OFF**

*– **GAIN** . . . . . **AUTO**

*– **Mode** . . . . . **AS RQRD**

*** PARKING BRK**

*– **PARKING BRK** . . . . . **ON then OFF**
– Check pressure on BRAKE PRESS indicator.
– If chocks are in place, release parking brake to increase brake cooling.

*** SWITCHING panel**

R *– **SWITCHING panel** . . . . . **CHECK**
Check all selectors at NORM.

*** ECAM control panel**

*– **PRESS** . . . . . **PRESS**
Check that the CAB PRESS page displays LDG ELEV AUTO to confirm correct position of the LDG ELEV selector.

*** THRUST LEVERS**

*– **THRUST LEVERS** . . . . . **CHECK IDLE**
Check reverse levers stowed.

ENG

– **ENG MASTER switches** . . . . . **CHECK OFF**

– **ENG START selector** . . . . . **CHECK NORM**

ATC

R – **ATC** . . . . . **SET FOR OPERATION**

– **SYS 1** . . . . . **SELECT**
Only system 1 is available in the emergency electrical configuration.

*** FMGS DATA CONFIRMATION**

*– **AIRFIELD DATA** . . . . . **CONFIRM**

*– **ATC CLEARANCE** . . . . . **OBTAIN**

*– **IRS ALIGN** . . . . . **CHECK**
Confirm coordinates

*– **GROSS WEIGHT INSERTION** . . . . . **CHECK**
The PNF checks FMGS data.

*– **TO DATA** . . . . . **CALCULATE/CHECK**
The PNF calculates and checks takeoff data.

*– **F-PLN A and B pages** . . . . . **CHECK**

· Select EFIS CSTR pushbutton switch on.
· The PNF ensures that the inserted F-PLN agrees with planned routes.
(Refer to 4 05.10)
· If company policy requires it, use the scroll key to check the whole F-PLN thoroughly.
Tracks and distances between waypoints are displayed on the second line from the top of the MCDU.
Compare them with the navigation charts, if necessary.
Check correct stringing, using ND in PLAN mode.
SID and EOSID tracks and distances must be checked from the appropriate navigation charts.

*** ATC**

*– **ATC CODE** . . . . . **SET**

*** FUEL**

*– **FUEL QTY** . . . . . **CHECK**

· Check that ECAM fuel on board corresponds to the F-PLN.
· Check that fuel imbalance is within limits.
· Check that ECAM CG is within operational limits.

***TAKEOFF BRIEFING**

*– **TAKEOFF BRIEFING** . . . . . **PERFORM**

The purpose of the takeoff briefing is for the PF to inform the PNF of the planned cause of action for both normal and abnormal situations during takeoff.
Whenever practical, it is recommended, that as much of the takeoff briefing as possible be completed at the gate.
Prior to the first flight of a trip series the PF should conduct a complete departure briefing. It should include, but not necessarily be limited to, a review of the following areas :

· Adverse weather and runway conditions.
· Crew coordination in the event of a rejected takeoff.
· A discussion of any unusual, non-standard, or abnormal conditions which might affect the safety of the flight.
· SID with 1 engine out, making extensive use of FMGS
R · For airlines having different models of A330, mention if the aircraft is an A330–200
R or an A330–300. Awareness of the aircraft model may prevent tailstrike.

The PF will brief for all subsequent flights, however, the briefing may be substantially reduced when continuing with the same crew.
However, any change or items peculiar to the specific departure should be thoroughly covered.

R *** PC DEDICATED TO MAINTENANCE**

R Not applicable.

* PC DEDICATED TO MAINTENANCE

Check that the Personal Computer (PC), dedicated to maintenance use and located in front of the 4th occupant console, is stowed.
Check that the light of its manual switch is off. If not, switch it off.
Check that its associated printer, located in the LH rear corner of the cockpit, is stowed.

BEFORE PUSHBACK or START

— **LOADSHEET . . . . . CHECK**

The Captain should thoroughly check the load and trim sheet, particularly for gross errors. Make sure that the loadsheet data is correct : Correct flight, correct aircraft, dry operating index, configuration, fuel on board, etc.

Compare ZFW/ZFCG with the previously-entered data, and adjust if necessary.

· Check loadsheet CG, versus ECAM CG.

In case there is a discrepancy of more than 2 %, check that the ZFW and ZFCG have been correctly inserted in the MCDU, then rely on the ECAM CG.

If the difference is less than 2 %, no further action is required. Rely on the ECAM CG.

— **TAKEOFF DATA . . . . . PREPARE and CHECK/REVISE**

Once the loadsheet is checked :

— The PNF checks or recomputes the takeoff speeds and the flexible temperature, using the RTOW charts.

— The PF independently calculates the takeoff speeds and the flexible temperature, as a crosscheck.

Take particular care in determining the takeoff configuration. (Refer to 2 02.20).

R Confirm any takeoff weight limitation.

— The PF checks (or revises) the takeoff data in the INIT B and PERF pages of the MCDU.

— **SEATS, SEAT BELTS, HARNESSES, RUDDER PEDALS, ARMRESTS . . . ADJUST**

The seat is correctly adjusted when the pilot's eyes are in line with the red and white balls.

— **MCDU . . . . . IN TAKEOFF CONFIGURATION**

It is recommended that the crew displays F-PLN on the PNF side and PERF TAKEOFF on the PF side.

— **EXT PWR . . . . . CHECK OFF**

Request that external power be removed.

— **BEFORE START CHECKLIST down to the line . . . . . COMPLETE**

– **PUSHBACK/START UP CLEARANCE : . . . . . OBTAIN**
Obtain ATC pushback/startup clearance.
Make sure that the ground crew is aware of the 60° limitation, and that they ensure that this value is not exceeded, making use of markings on the nose landing gear doors.
Obtain ground crew clearance.

– **N/WS DISC . . . . . CHECK AS RQRD**
In case of pushback (conventional or towbarless), the nosewheel steering selector bypass pin must be in the tow position. The ECAM N/WS DISC memo indicates this to the flight crew.

CAUTION
If N/WS DISC is not displayed on the ECAM, but the ground crew confirms that the steering selector bypass pin is in the towing position, then the pushback must not be performed. This is to avoid possible nose landing gear damage upon green hydraulic pressurization.
To dispatch the aircraft in such a case, refer to the MMEL.

– **WINDOWS and DOORS . . . . . CHECK CLOSED**
– Check that the cockpit windows are closed and locked (flush, no red).
– Check, on the ECAM lower display, that all the aircraft the aircraft doors are closed.
– When required by local airworthiness authorities, check that the cockpit door is closed and locked (no cockpit door open/fault indication).
If entry is requested, identify the person requesting entry before unlocking the door. With the cockpit door selector on NORM, the cockpit door is closed and locked. If entry is requested from the cabin, and if no further action is performed by the pilot, the cabin crew will be able to unlock the door by using the emergency access procedure. Except for crew entry/exit, the cockpit door should remain closed until engine shutdown.

Note : Starting one engine, whilst a door is not closed, will result in pack valve closure.

BEFORE PUSHBACK or START

– **LOADSHEET . . . . . CHECK**

The Captain should thoroughly check the load and trim sheet, particularly for gross errors. Make sure that the loadsheet data is correct : Correct flight, correct aircraft, dry operating index, configuration, fuel on board, etc.

Compare ZFW/ZFCG with the previously-entered data, and adjust if necessary.

· Check loadsheet CG, versus ECAM CG.

In case there is a discrepancy of more than 2 %, check that the ZFW and ZFCG have been correctly inserted in the MCDU, then rely on the ECAM CG.

If the difference is less than 2 %, no further action is required. Rely on the ECAM CG.

– **TAKEOFF DATA . . . . . PREPARE and CHECK/REVISE**

Once the loadsheet is checked :

– The PNF checks or recomputes the takeoff speeds and the flexible temperature, using the RTOW charts.

– The PF independently calculates the takeoff speeds and the flexible temperature, as a crosscheck.

Take particular care in determining the takeoff configuration. (Refer to 2 02.20).

R Confirm any takeoff weight limitation.

– The PF checks (or revises) the takeoff data in the INIT B and PERF pages of the MCDU.

– **SEATS, SEAT BELTS, HARNESSES, RUDDER PEDALS, ARMRESTS . . . ADJUST**

The seat is correctly adjusted when the pilot's eyes are in line with the red and white balls.

– **MCDU . . . . . IN TAKEOFF CONFIGURATION**

It is recommended that the crew displays F-PLN on the PNF side and PERF TAKEOFF on the PF side.

– **EXT PWR . . . . . CHECK OFF**

Request that external power be removed.

– **BEFORE START CHECKLIST down to the line . . . . . COMPLETE**

– **PUSHBACK/START UP CLEARANCE : . . . . . OBTAIN**
Obtain ATC pushback/startup clearance.
Make sure that the ground crew is aware of the 65° limitation, and that they ensure that this value is not exceeded, making use of markings on the nose landing gear doors.
Obtain ground crew clearance.

– **N/WS DISC . . . . . CHECK AS RQRD**
In case of pushback (conventional or towbarless), the nosewheel steering selector bypass pin must be in the tow position. The ECAM N/WS DISC memo indicates this to the flight crew.

CAUTION
If N/WS DISC is not displayed on the ECAM, but the ground crew confirms that the steering selector bypass pin is in the towing position, then the pushback must not be performed. This is to avoid possible nose landing gear damage upon green hydraulic pressurization.
To dispatch the aircraft in such a case, refer to the MMEL.

– **WINDOWS and DOORS . . . . . CHECK CLOSED**
– Check that the cockpit windows are closed and locked (flush, no red).
– Check, on the ECAM lower display, that all the aircraft doors are closed.
– When required by local airworthiness authorities, check that the cockpit door is closed and locked (no cockpit door open/fault indication).
If entry is requested, identify the person requesting entry before unlocking the door. With the cockpit door selector on NORM, the cockpit door is closed and locked. If entry is requested from the cabin, and if no further action is performed by the pilot, the cabin crew will be able to unlock the door by using the emergency access procedure. Except for crew entry/exit, the cockpit door should remain closed until engine shutdown.

Note : Starting one engine, whilst a door is not closed, will result in pack valve closure.

– **BEACON** . . . . . **ON**

– **THR LEVERS** . . . . . **IDLE**

CAUTION

Engine will start, regardless of thrust lever position ; thrust will rapidly increase to the corresponding thrust lever position, causing a hazardous situation, if thrust levers are not at IDLE.

– **PARKING BRAKE ACCU PRESS** . . . . . **CHECK**

The ACCU PRESS indication must be in the green band.

– **PARKING BRAKE** . . . . . **AS RQRD**

– If no pushback is required, check that the PARKING BRK handle is ON, and check the BRAKES PRESS indication.

CAUTION

If, during engine start with the parking brake on, the aircraft starts to move due to a parking brake failure, immediately release the PARKING BRK handle to restore braking by pedals.

– If pushback is required, set the PARKING BRK to OFF.

CAUTION

Do not use brakes during pushback, unless required due to an emergency.

After pushback is completed, set the PARKING BRK to ON, and inform the ground crew to allow the towbar to be disconnected.

– **BEFORE START CHECKLIST below the line** . . . . . **COMPLETE**

AUTOMATIC ENGINE START

– **ENG START selector . . . . . IGN START**
Lower ECAM display shows the ENG page.

– **ANNOUNCE . . . . . "STARTING ENGINE 1"**
Engine 1 is usually started first (It powers the blue hydraulic system, which pressurizes the parking brake.)

– **MASTER switch 1 . . . . . ON**
Do not turn the MASTER switch ON before all amber crosses and messages have
R disappeared on the engine parameters (upper ECAM display). In addition, before setting
R the engine 1 master switch to ON, wait for three seconds after having selected "IGN
R START" in the engine start selector.

ON ECAM UPPER DISPLAY	ON ECAM LOWER DISPLAY
N2 increases	Corresponding start valve in line. Bleed pressure indication green. Oil pressure increases.
At 10 % N2 :	Indication of the active igniter (A or B)
At 15 % N2 : – FF increases 20 seconds (maximum) after fuel is on – EGT increases – N1 increases	
At 50 % N2 :	Start valve crossline.
At 54 % N2 :	Igniter indication off.

Parameter callouts are not mandatory.

● **When idle is reached (AVAIL indication is displayed) :**

– **MAIN AND SECONDARY ENG. IDLE PARAMETERS . . . . . CHECK NORMAL**
At ISA sea level : N1 about 23 %
N2 about 63 %
EGT about 360°C
FF about 550 kg/h (1210 lb/h)

– **ANNOUNCE . . . . . "STARTING ENGINE 2"**

– **MASTER switch 2 . . . . . ON**
Same procedure as for Engine 1.

GROUND RUN UP – DANGER AREAS

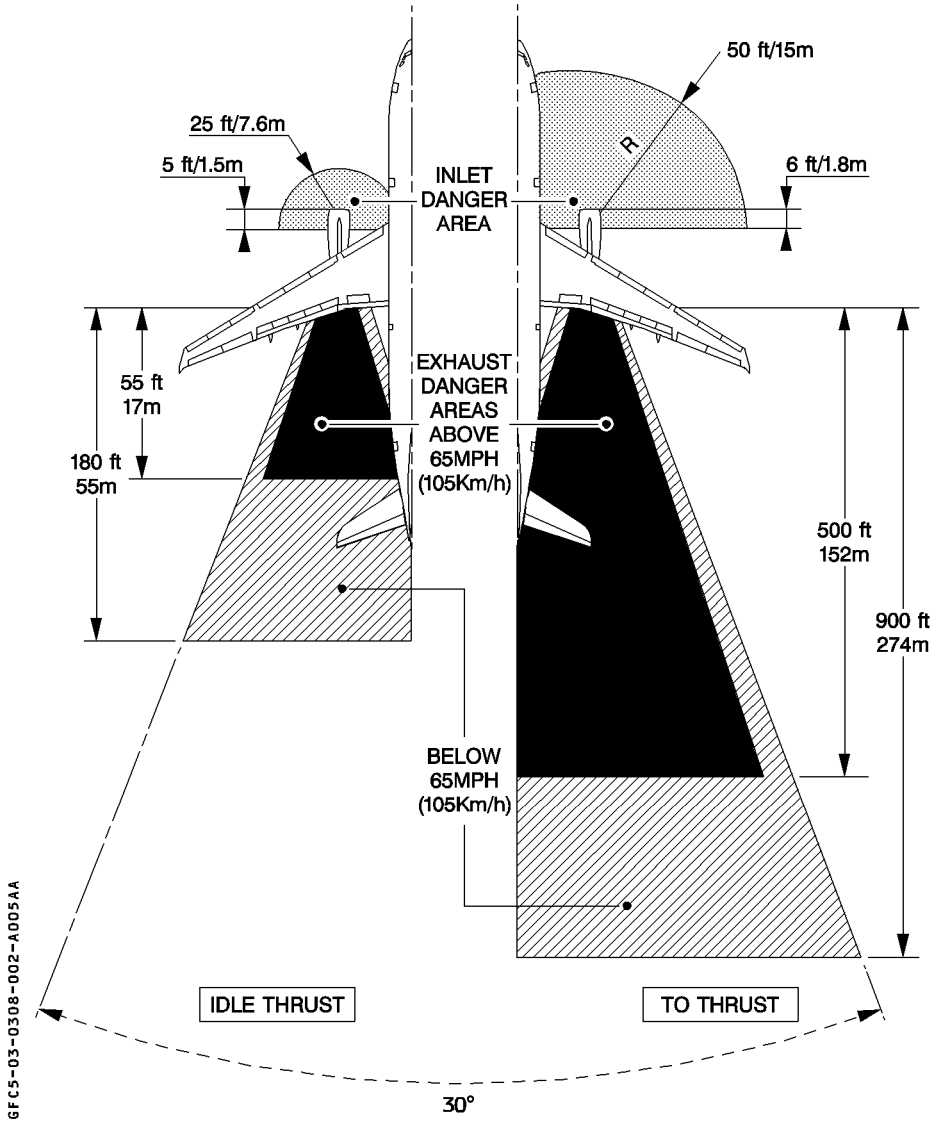

AFTER START

— **ENG START selector** . . . . . **NORM**
· Turning the ENG START selector to NORM indicates the end of the start sequence ; AFTER START actions may be performed.
· ON ECAM lower display the ENG page is replaced by the WHEEL page.

Note : If the ENG START selector is not switched to NORM, the ENG page is automatically replaced by the WHEEL page 15 seconds after second engine start.

· Leaving the ENG START Sel at START/IGN position would inhibit continuous relight selection on ground (would be supplied at lift off). The selector must be cycled to recover normal control of ignition.
· After start, to avoid thermal shock, the engine should be operated at idle or near idle for at least 3 minutes prior to advancing the thrust lever to high power. Taxi time at idle may be included in the warm-up period.

— **APU BLEED** . . . . . **OFF**
· APU BLEED is selected off just after engine start to avoid engine exhaust gases ingestion.
· APU BLEED valve closes, ENG BLEED valves open.

— **GROUND SPOILERS** . . . . . **ARM**

— **RUD TRIM** . . . . . **ZERO**
If RUD TRIM position indication not at zero, press the RESET pushbutton.

— **FLAP lever** . . . . . **SET**
· Set FLAPS for takeoff
· Check position on ECAM upper display
· If taxiing in slush conditions, keep flaps retracted until reaching the holding point before takeoff.

— **PITCH TRIM** . . . . . **SET**
R Set CG on pitch trim wheel. For this purpose use CG indicated on ECAM.

— **ECAM STATUS** . . . . . **CHECK**
· Check no status reminder on ECAM upper display
· If status reminder displayed, press the STS pushbutton

– **ENG ANTI ICE** . . . . . **AS RQRD**

R *Note : Icing conditions may be expected when the OAT (on ground and for takeoff), or*
R *the TAT (in flight), is 10°C or below, and there is visible moisture in the air (such as clouds, fog with low visibility, rain, snow, sleet, ice crystals), or when standing water, slush, ice or snow is present on the taxiways or runway.*

· If icing conditions exceed 30 minutes, or if significant engine vibration occurs, the engine should be accelerated to 60 % N1 minimum for approximately 30 seconds prior to higher thrust operation. (See also parking brake limitation 3.01.32).
· If switched on, the IGNITION memo appears on the ECAM, as continuous ignition is automatically selected.

– **WING ANTI ICE** . . . . . **AS RQRD**
When WING ANTI ICE is switched on, on ground, the anti-ice valves open for about 30 seconds (test sequence), then close as long as the aircraft is on ground.

– **APU MASTER switch (if APU not required)** . . . . . **OFF**
R AVAIL light goes off after the APU cooling period.

– **ECAM DOOR page** . . . . . **CHECK**
· Check all slides armed.
· Deselect DOOR page after slide verification.

– **ANNOUNCE** . . . . . **"CLEAR TO DISCONNECT"**
Request : Chocks removed.
R Nosewheel steering bypass pin removed.
Interphone disconnect.
Hand signal on the left/right side

– **AFTER START C/L** . . . . . **COMPLETE**

AFTER START

— **ENG START selector** . . . . . **NORM**

· Turning the ENG START selector to NORM indicates the end of the start sequence ; AFTER START actions may be performed.

· ON ECAM lower display the ENG page is replaced by the WHEEL page.

Note : If the ENG START selector is not switched to NORM, the ENG page is automatically replaced by the WHEEL page 15 seconds after second engine start.

· Leaving the ENG START Sel at START/IGN position would inhibit continuous relight selection on ground (would be supplied at lift off). The selector must be cycled to recover normal control of ignition.

· After start, to avoid thermal shock, the engine should be operated at idle or near idle for at least 3 minutes prior to advancing the thrust lever to high power. Taxi time at idle may be included in the warm-up period.

— **APU BLEED** . . . . . **OFF**

· APU BLEED is selected off just after engine start to avoid engine exhaust gases ingestion.

· APU BLEED valve closes, ENG BLEED valves open.

— **GROUND SPOILERS** . . . . . **ARM**

— **RUD TRIM** . . . . . **ZERO**

If RUD TRIM position indication not at zero, press the RESET pushbutton.

— **FLAP lever** . . . . . **SET**

· Set FLAPS for takeoff

· Check position on ECAM upper display

· If taxiing in slush conditions, keep flaps retracted until reaching the holding point before takeoff.

— **PITCH TRIM** . . . . . **SET**

R Set CG on pitch trim wheel. For this purpose use CG indicated on ECAM.

— **ECAM STATUS** . . . . . **CHECK**

· Check no status reminder on ECAM upper display

· If status reminder displayed, press the STS pushbutton

– **ENG ANTI ICE** . . . . . **AS RQRD**

Note : Icing conditions may be expected when the OAT (on ground and for takeoff), or the TAT (in flight), is 10°C or below, and there is visible moisture in the air (such as clouds, fog with low visibility, rain, snow, sleet, ice crystals), or when standing water, slush, ice or snow is present on the taxiways or runway.

· If icing conditions exceed 30 minutes, or if significant engine vibration occurs, the engine should be accelerated to 60 % N1 minimum for approximately 30 seconds prior to higher thrust operation. (See also parking brake limitation 3.01.32).
· If switched on, the IGNITION memo appears on the ECAM, as continuous ignition is automatically selected.

– **WING ANTI ICE** . . . . . **AS RQRD**
When WING ANTI ICE is switched on, on ground, the anti-ice valves open for about 30 seconds (test sequence), then close as long as the aircraft is on ground.

– **APU MASTER switch (if APU not required)** . . . . . **OFF**
AVAIL light goes off after the APU cooling period.

– **NWS TOWING FAULT light off** . . . . . **CHECK**

– **ECAM DOOR page** . . . . . **CHECK**
· Check all slides armed.
· Deselect DOOR page after slide verification.

– **ANNOUNCE** . . . . . **"CLEAR TO DISCONNECT"**
Request : Chocks removed.
Nosewheel steering bypass pin removed.
Nosewheel steering towing light on the nose landing gear checked off.
Interphone disconnect.
Hand signal on the left/right side

– **AFTER START C/L** . . . . . **COMPLETE**

TAXI

– **TAXI clearance** . . . . . **OBTAIN**

R – **NOSE light** . . . . . **TAXI**
R Turn on nosewheel light to TAXI day and night.
R RWY TURN OFF lights may be switched on, as required.

– **PARKING BRK** . . . . . **OFF**
Check that brake pressure is zero (triple indicator). Slight residual pressure may be indicated for a short period of time.

– **ELAPSED TIME** . . . . . **AS RQRD**
If ACARS is not installed, start ELAPSED TIME to record block time.

– **THRUST LEVERS** . . . . . **AS RQRD**
· In order to get the aircraft moving, little, if any, power above idle thrust will be required (max 40 % N1). Thrust should normally be used symmetrically. Once aircraft is moving, little thrust is required.
· Use of the engine anti-ice increases ground idle thrust so the pilot must take care on slippery surfaces.
· The engines are close to the ground. Avoid positionning them over unconsolidated, or unprepared ground (e.g over the edge of taxiways).
Avoid high thrust settings at low ground speeds, due to the risk of ingestion (FOD).
· "Square wheel effect" may be noticed, if the aircraft was parked for a long time (more than 6 hours) with high tire temperature conditions and with a high weight.

– **BRAKES . . . . . CHECK**

– Once the aircraft starts moving :

· Check the brake efficiency of the normal braking system : The aircraft must slow down when pressing the brake pedals.

CAUTION

R If the aircraft has been parked in wet conditions for a long period, the efficiency of
R the first brake application at low speed will be reduced.

· Also check that green pressure has taken over blue pressure : The blue pressure on the brake pressure triple indicator must be at 0 when pressing the brake pedals. Although green hydraulic power supplies the braking system, if pedals are quickly pressed a brief brake pressure indication appears on the BRAKE PRESS indicator.

· Thereafter, the normal maximum taxi speed should be 30 knots in a straight line on long taxiways, and 10 knots for a sharp turn. The ground speed is difficult to assess, so monitor ground speed on the ND. Do not "ride" the brakes. As 30 knots are exceeded with idle thrust, apply brakes smoothly and decelerate to 10 knots; release the brakes and allow the aircraft to accelerate again.

· If a "spongy" pedal is felt during taxi, this indicates a degraded performance of the alternate braking system.

· If an arc is displayed on the ECAM WHEEL page above the brake temperature, select brake fans on (if installed).

– **NOSEWHEEL STEERING . . . . . AS RQRD**

· Use smooth and progressive handwheel inputs. Avoid the use of large rapid inputs which introduce big variations in demand which cannot be satisfied by the steering mechanism (maximum rate for nosewheel deflection of about 12°/sec). Be aware that it will take approximately 7 seconds for the nosewheel to return to zero deflection from its full travel. Therefore some anticipation is needed to reduce nose wheel steering deflection when exiting a turn. When exiting a tight turn, roll straight a short distance to take the stress out of the main gears.

· The nose wheel steering angle is limited to 65°.

· Do not use differential braking during taxiing or turning at speeds below 20 knots.

· Asymmetric thrust may be used during turns at high NWS angles in order to initiate the turn and to keep the aircraft moving during the turn, but should not be used to tighten the turn.

TAXI

– **TAXI clearance** . . . . . **OBTAIN**

R – **NOSE light** . . . . . **TAXI**
R Turn on nosewheel light to TAXI day and night.
R RWY TURN OFF lights may be switched on, as required.

– **PARKING BRK** . . . . . **OFF**
Check that brake pressure is zero (triple indicator). Slight residual pressure may be indicated for a short period of time.

– **ELAPSED TIME** . . . . . **AS RQRD**
If ACARS is not installed, start ELAPSED TIME to record block time.

– **THRUST LEVERS** . . . . . **AS RQRD**
· In order to get the aircraft moving, little, if any, power above idle thrust will be required (max 40 % N1). Thrust should normally be used symmetrically. Once aircraft is moving, little thrust is required.
· Use of the engine anti-ice increases ground idle thrust so the pilot must take care on slippery surfaces.
· The engines are close to the ground. Avoid positionning them over unconsolidated, or unprepared ground (e.g over the edge of taxiways).
Avoid high thrust settings at low ground speeds, due to the risk of ingestion (FOD).
· "Square wheel effect" may be noticed, if the aircraft was parked for a long time (more than 6 hours) with high tire temperature conditions and with a high weight.

– **BRAKES . . . . . CHECK**

– Once the aircraft starts moving :

· Check the brake efficiency of the normal braking system : The aircraft must slow down when pressing the brake pedals.

CAUTION

R If the aircraft has been parked in wet conditions for a long period, the efficiency of
R the first brake application at low speed will be reduced.

· Also check that green pressure has taken over blue pressure : The blue pressure on the brake pressure triple indicator must be at 0 when pressing the brake pedals. Although green hydraulic power supplies the braking system, if pedals are quickly pressed a brief brake pressure indication appears on the BRAKE PRESS indicator.

· Thereafter, the normal maximum taxi speed should be 30 knots in a straight line on long taxiways, and 10 knots for a sharp turn. The ground speed is difficult to assess, so monitor ground speed on the ND. Do not "ride" the brakes. As 30 knots are exceeded with idle thrust, apply brakes smoothly and decelerate to 10 knots; release the brakes and allow the aircraft to accelerate again.

· If a "spongy" pedal is felt during taxi, this indicates a degraded performance of the alternate braking system.

· If an arc is displayed on the ECAM WHEEL page above the brake temperature, select brake fans on (if installed).

– **NOSEWHEEL STEERING . . . . . AS RQRD**

· Use smooth and progressive handwheel inputs. Avoid the use of large rapid inputs that introduce big variations in demand, which cannot be satisfied by the steering mechanism (maximum rate for nosewheel deflection of about 12°/sec). Be aware that it will take approximately 7 seconds for the nosewheel to return to zero deflection from its full travel. Therefore, some anticipation is needed to reduce the nosewheel steering deflection when exiting a turn.
When exiting a tight turn, roll straight a short distance to take the stress out of the main gears.

· The nosewheel steering angle is limited to 72°.

· No braked pivot turn is allowed (ie. differential braking cannot be used to fully stop one main gear).

· Asymmetric thrust may be used during turns at high NWS angles, in order to initiate the turn and to keep the aircraft moving during the turn. But, it should not be used to tighten the turn.

– **FLIGHT CONTROLS . . . . . CHECK**

R 1. At a convenient stage, prior to or during taxi, and before arming the autobrake, the
R PF silently applies full longitudinal and lateral sidestick deflection.
R On the F/CTL page, the PNF checks full travel of all elevators and all ailerons, and the
R correct deflection and retraction of all spoilers.
R The PNF calls out "full up", "full down", "neutral", "full left", "full right", "neutral", as
R each full travel/neutral position is reached.
R The PF silently checks that the PNF calls are in accordance with the sidestick order.

R *Note : In order to reach full travel, full sidestick must be held for a sufficient period*
R *of time.*

R 2. The PF presses the PEDAL DISC pushbutton on the nosewheel tiller, and silently
R applies full left rudder, full right rudder, and neutral. The PNF calls out "full left", "full
R right", "neutral", as each full travel/neutral position is reached.
R 3. The PNF applies full longitudinal and lateral sidestick deflection, and silently checks
R full travel and the correct sense of all elevators and all ailerons, and the correct
R deflection and retraction of all spoilers, on the ECAM F/CTL page.

R *Note : The F/CTL page is automatically displayed for 20 seconds.*

– **AUTO BRK . . . . . MAX**

· The ON light comes on.
· AUTO BRK may be armed, with the parking brake on.
· The selection of MAX mode prior to takeoff improves safety, in the event of an aborted takeoff.
If the takeoff must be aborted, the autobrake system applies maximum braking (if the ground speed is above 72 knots), as soon as the thrust levers are set to idle, which represents a single action done without delay.

– **ATC clearance . . . . . CONFIRM**

TAKE OFF DATA/CONDITIONS

If the takeoff data has changed, or in the case of a runway change, prepare updated takeoff data and, as appropriate :

– **F-PLN (Runway) . . . . . REVISED**

– **FLAP LEVER . . . . . AS APPROPRIATE**
Select takeoff position.

– **V1, VR, V2 . . . . . REINSERT**

– **FLEX TO temperature . . . . . REINSERT**

FMGS

– **F-PLN (SID,TRANS) . . . . . REVISE or CHECK**
Carefully confirm that the ATC clearance agrees with the FMGS, if NAV mode is to be used.

– **INITIAL CLIMB SPEED AND SPEED LIMIT . . . . . MODIFY or CHECK**
Use VERT REV at departure, or at a CLB waypoint.

– **CLEARED ALTITUDE ON FCU . . . . . SET**

– **HDG ON FCU . . . . . IF REQUIRED PRESET**
R · If an ATC HDG is required after takeoff, in case of a radar vector departure, preset the
R heading on the FCU. NAV mode will be disarmed.
· RWY TRK mode will keep the aircraft on the centerline.

– **FD . . . . . CHECK SELECTED ON**

– **FMA . . . . . CHECK**

– **FLIGHT INSTRUMENTS . . . . . CHECK**

– **RADAR (if required) . . . . . ON**
If the radar is required for the flight, use the following test procedure :
Adjust the tilt downward until ground returns appear, and then slowly adjust it in 1 to 2 degree steps, up to 15 degrees UP, for weather returns.
Select tilt at 4 degrees UP for takeoff.

– **ATC code . . . . . CONFIRM/SET**

– **TAKEOFF BRIEFING . . . . . CONFIRM**
This briefing should normally be only a brief confirmation of the thorough takeoff briefing made at the gate. Any changes in the clearance are to be addressed at this time.
Make as extensive use of the displays as possible. For example :
"Takeoff in RWY 07 (Perf page), weight 208 T (lower ECAM) configuration 2, 65 T of fuel, FLEX 50° , 93% N1 (upper ECAM) LMG 2D departure (FPLN page) V1 155 V2 158 (PFD), initial clearance 12 000 feet blue (FMA)".

– **CABIN REPORT . . . . . RECEIVED**
Check the CABIN READY message on the ECAM MEMO, or obtain a cabin report from the purser, as a minimum : "CABIN SECURED FOR TO"

– **FLIGHT CONTROLS . . . . . CHECK**

R 1. At a convenient stage, prior to or during taxi, and before arming the autobrake, the
R PF silently applies full longitudinal and lateral sidestick deflection.
R On the F/CTL page, the PNF checks full travel of all elevators and all ailerons, and the
R correct deflection and retraction of all spoilers.
R The PNF calls out "full up", "full down", "neutral", "full left", "full right", "neutral", as
R each full travel/neutral position is reached.
R The PF silently checks that the PNF calls are in accordance with the sidestick order.

R *Note : In order to reach full travel, full sidestick must be held for a sufficient period*
R *of time.*

R 2. The PF presses the PEDAL DISC pushbutton on the nosewheel tiller, and silently
R applies full left rudder, full right rudder, and neutral. The PNF calls out "full left", "full
R right", "neutral", as each full travel/neutral position is reached.
R 3. The PNF applies full longitudinal and lateral sidestick deflection, and silently checks
R full travel and the correct sense of all elevators and all ailerons, and the correct
R deflection and retraction of all spoilers, on the ECAM F/CTL page.

R *Note : The F/CTL page is automatically displayed for 20 seconds.*

– **AUTO BRK . . . . . MAX**

· The ON light comes on.
· AUTO BRK may be armed, with the parking brake on.
· The selection of MAX mode prior to takeoff improves safety, in the event of an aborted takeoff.
If the takeoff must be aborted, the autobrake system applies maximum braking (if the ground speed is above 72 knots), as soon as the thrust levers are set to idle, which represents a single action done without delay.

– **ATC clearance . . . . . CONFIRM**

TAKE OFF DATA/CONDITIONS

If the takeoff data has changed, or in the case of a runway change, prepare updated takeoff data and, as appropriate :

– **F-PLN (Runway) . . . . . REVISED**

– **FLAP LEVER . . . . . AS APPROPRIATE**
Select takeoff position.

– **V1, VR, V2 . . . . . REINSERT**

– **FLEX TO temperature . . . . . REINSERT**

FMGS

– **F-PLN (SID,TRANS) . . . . . REVISE or CHECK**
Carefully confirm that the ATC clearance agrees with the FMGS, if NAV mode is to be used.

– **INITIAL CLIMB SPEED AND SPEED LIMIT . . . . . MODIFY or CHECK**
Use VERT REV at departure, or at a CLB waypoint.

– **CLEARED ALTITUDE ON FCU . . . . . SET**

– **HDG ON FCU . . . . . IF REQUIRED PRESET**
R · If an ATC HDG is required after takeoff, in case of a radar vector departure, preset the
R heading on the FCU. NAV mode will be disarmed.
· RWY TRK mode will keep the aircraft on the centerline.

– **FD . . . . . CHECK SELECTED ON**

– **FMA . . . . . CHECK**

– **FLIGHT INSTRUMENTS . . . . . CHECK**

– **RADAR (if required) . . . . . ON**
If the radar is required for the flight, use the following test procedure :
Adjust the tilt downward until ground returns appear, and then slowly adjust it in 1 to 2 degree steps, up to 15 degrees UP, for weather returns.
Select tilt at 4 degrees UP for takeoff.

– **PREDICTIVE WINDSHEAR SYSTEM . . . . . AUTO**

– **ATC code . . . . . CONFIRM/SET**

– **TAKEOFF BRIEFING . . . . . CONFIRM**
This briefing should normally be only a brief confirmation of the thorough takeoff briefing made at the gate. Any changes in the clearance are to be addressed at this time.
Make as extensive use of the displays as possible. For example :
"Takeoff in RWY 07 (Perf page), weight 208 T (lower ECAM) configuration 2, 65 T of fuel, FLEX 50° , 93% N1 (upper ECAM) LMG 2D departure (FPLN page) V1 155 V2 158 (PFD), initial clearance 12 000 feet blue (FMA)").

– **CABIN REPORT . . . . . RECEIVED**
Check the CABIN READY message on the ECAM MEMO, or obtain a cabin report from the purser, as a minimum : "CABIN SECURED FOR TO"

– **TO CONFIG pb . . . . . PRESS**
Check "TO CONFIG NORMAL" displayed on ECAM upper display.

– **TO MEMO . . . . . CHECK NO BLUE LINE**

– **BEFORE TO C/L down to the line . . . . . COMPLETE**

VISUAL GROUND GEOMETRY

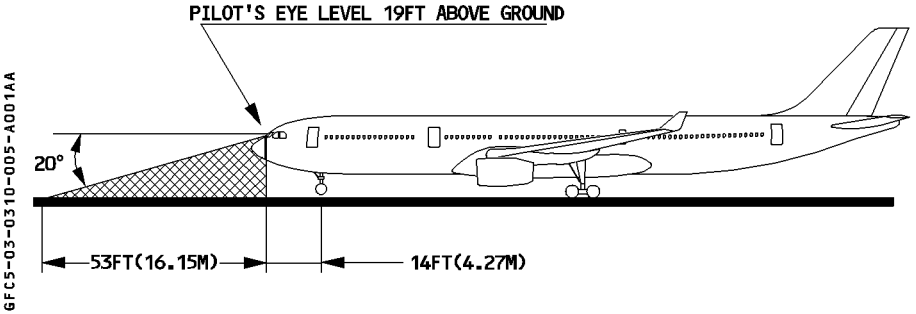

180 ° TURN ON RUNWAY

R A standard runway is 45 meters wide. Due to the 65° nose wheel steering limitation, the
R width of a 180° turn is 53 meters for an A330–300.
R To verify the required runway width, the appropriate safety margins must be added to the
R turning width.
The following procedure is recommended for making a turn in the most efficient way.

- **FOR THE CM1**
  - Taxi on the right hand side of the runway and turn left, maintaining 20° (check on PFD) divergence from the runway axis.
  - When the CM1 is physically over the runway edge, he turns the nose wheel 65° right.
  - Do not use differential braking during taxiing or turning at speeds below 20 knots.
  - Asymmetric thrust may be used during turns at high NWS angles in order to initiate the turn and to keep the aircraft moving during the turn, but should not be used to tighten the turn.
- **FOR THE CM2**
  The procedure is symmetrical. (Taxi on the left hand side of the runway).

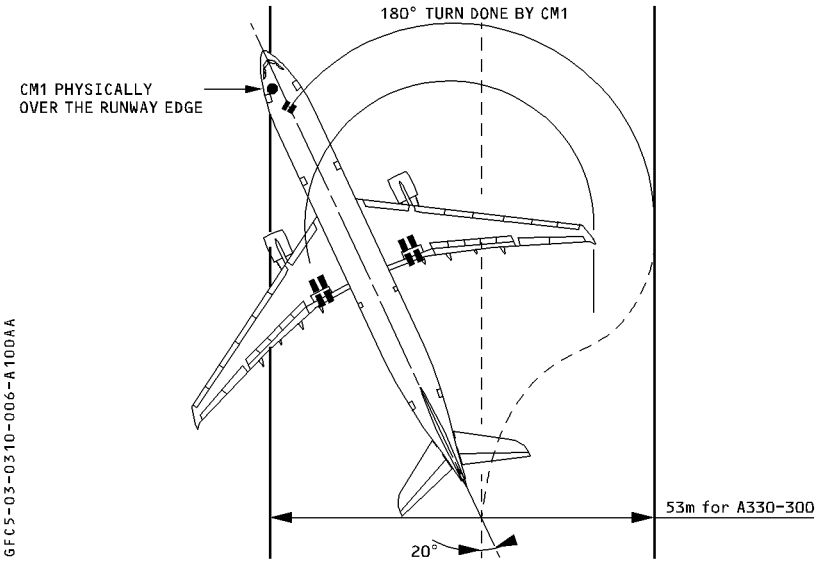

– **TO CONFIG pb . . . . . PRESS**
Check "TO CONFIG NORMAL" displayed on ECAM upper display.

– **TO MEMO . . . . . CHECK NO BLUE LINE**

– **BEFORE TO C/L down to the line . . . . . COMPLETE**

VISUAL GROUND GEOMETRY

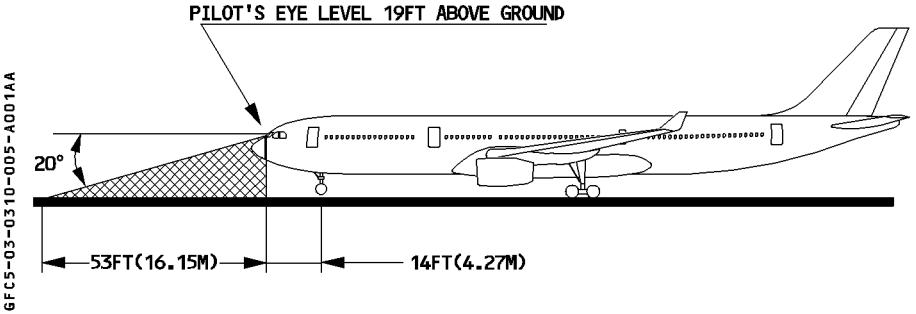

180 ° TURN ON RUNWAY

R A standard runway is 45 meters wide. With the maximum nosewheel steering angle (72°),
R the actual turn width (without margin) is 42 meters for an A330–200 and 46 meters for an
R A330–300. These distances are based on the following procedure :

- **FOR THE CM1**
  - R — Taxi on the right hand side of the runway and turn left, maintaining 20° (check on the R PFD) divergence from the runway axis.
  - R — Asymmetric thrust should be used during the turn, to maintain a continuous speed R (between 5 and 10 knots). Some anticipation is required to ensure that asymmetric R thrust is available at the beginning of the turn.
  - R — When the CM1 is physically over the runway edge, he turns and maintains the R nosewheel 72° right.
  - R — No braking pivot is allowed (ie. differential braking cannot be used to fully stop one R main gear).
- R **FOR THE CM2**

  The procedure is symmetrical. (Taxi on the left hand side of the runway).

R

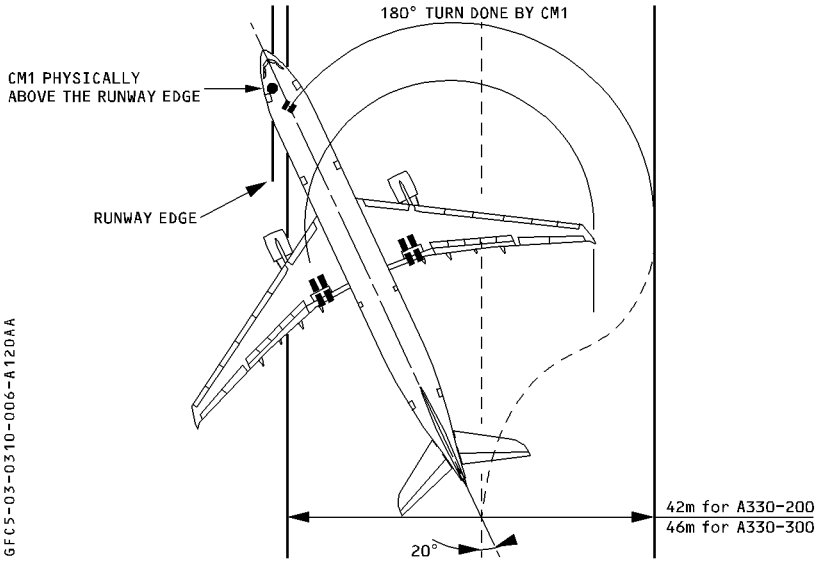

BEFORE TAKE OFF

- **If the brake fans are running ◁:**

  – **BRAKE TEMP . . . . . CHECK**

  - **If BRAKE TEMP above 150°C :**

    – **Delay takeoff**

  - **If BRAKE TEMP below 150°C :**

    – **BRAKE FANS . . . . . OFF**

– **TAKEOFF OR LINE UP CLEARANCE . . . . . OBTAIN**

– **APPROACH PATH CLEAR OF TRAFFIC . . . . . CHECK**

– **CABIN CREW . . . . . ADVISE**

– **ENG START selector . . . . . AS RQRD**
Select IGN/START if :
· Runway with standing water, or in case of heavy rain
· Heavy rain, or severe turbulence is expected after takeoff.

Note : Continuous ignition is automatically selected, if the ENG ANTI ICE pushbutton is ON.

– **TCAS (◁) Mode selector . . . . . TA or TA/RA**
FAA recommends selecting TA only mode :
– In case of known nearby traffic, which is in visual contact ;
– At particular airports, and during particular procedures identified by an operator as having a significant potential for unwanted, or inappropriate RAs. (Closely-spaced parallel or converging runways...)

R – **PACK 1 and 2 . . . . . AS RQRD**
R Consider selecting packs OFF or APU bleed ON.
R This will improve performance when using TOGA thrust.
R In the case of a FLEX takeoff, selecting packs OFF or APU bleed ON will reduce takeoff
R EGT, and thus reduce maintenance costs.
R The use of APU bleed is not authorized if wing anti-ice is to be used.
R Select APU bleed on, at least 20 seconds before takeoff power application. This will
R prevent triggering the ENG THRUST LOST ECAM warning due to incorrect valve
R positions.

– **EXTERIOR LIGHTS . . . . . SET**
Set the RWY TURN OFF, LAND, and NOSE switches to ON/TO, in order to minimize bird strike hazard during takeoff.

R Set the STROBE lights to ON, before entering the runway.

– **SLIDING TABLE ◁ . . . . . STOWED**

– **ATC . . . . . When cleared for takeoff : ON (or XPDR or XPNDR ◁)**
It is not applicable to ATC panels equipped with an AUTO position, if AUTO is selected.

– **BEFORE TO C/L below the line . . . . . COMPLETE**
Read the checklist below the line, when line up or takeoff clearance is received.

TAKEOFF

— **ANNOUNCE . . . . . "TAKEOFF"**

— **BRAKES . . . . . RELEASE**

R Rolling takeoff is recommended, when possible.

● **If the crosswind is at, or below, 20 knots and there is no tailwind :**

— **THRUST LEVERS . . . . . FLX or TOGA**

· To counter the nose-up effect of setting engine takeoff thrust, apply half forward stick until the airspeed reaches 80 knots. Gradually release the stick to reach neutral at 100 knots.

· For crosswind takeoffs, routine use of into-wind aileron is not recommended. In strong crosswind conditions, small amounts of lateral control may be used to maintain wings level, but the pilot should avoid using excessive amounts. This causes excessive spoiler deployment, which increases the aircraft's tendency to turn into wind.

· PF progressively adjusts engine thrust in two steps :

— From idle to about 50 % N1 (1.1 EPR).

— From engines at similar N1 to takeoff thrust.

· Once the thrust is set, the Captain maintains his hand on the thrust levers until the aircraft reaches V1.

● **In case of tailwind, or if crosswind is greater than 20 knots :**

— **THRUST LEVERS . . . . . FLX or TOGA**

· PF applies full forward stick.

R · For crosswind takeoffs, routine use of into-wind aileron is not recommended. In
R strong crosswind conditions, small amounts of lateral control may be used to
R maintain wings level, but the pilot should avoid using excessive amounts. This
R causes excessive spoiler deployment, which increases the aircraft's tendency to
R turn into wind.

· PF sets 50 % N1 (1.1 EPR) on both engines, then rapidly increases thrust to about 70 % N1 (1.3 EPR), then progressively to reach takeoff thrust at 40 knots ground speed, while maintaining stick full forward up to 80 knots. Gradually release the stick to reach neutral at 100 knots.

· Once the thrust is set, the Captain maintains his hand on the thrust levers until the aircraft reaches V1.

Note : The ENG page replaces the WHEEL page on the ECAM's lower display.

— **DIRECTIONAL CONTROL . . . . . USE RUDDER**

– **CHRONO** . . . . . **START**

– **PFD/ND** . . . . . **SCAN**
· Check the flight mode annunciator on the PFD. MAN TOGA (MAN FLX xx), SRS, RWY (or blank) 1FD2
· Check the FMGS position update (aircraft on runway centerline).

● **Reaching 80 knots :**

– **TAKEOFF N1** . . . . . **CHECK**
Check that the actual N1 of individual engines has reached the N1 rating limit before the aircraft reaches 80 knots. Check EGT.

Note : If there is a discrepancy of more than 1 % of N1 between the engines, it should be entered in the logbook after flight.

– **ANNOUNCE** . . . . . **"POWER SET"**

– **PFD and ENG indications** . . . . . **SCAN**
· Scan airspeed, N1, and EGT throughout the takeoff.

– **ANNOUNCE** . . . . . **"ONE HUNDRED KNOTS"**
· The PF crosschecks the speed indicated on the PFD and announces "checked".
· Below 100 knots, the Captain may decide to abort the takeoff, depending on the circumstances. Above 100 knots, rejecting the takeoff is a more serious matter.

– **ANNOUNCE** . . . . . **"V1"**

– **ANNOUNCE** . . . . . **"ROTATE"**

– **ROTATION** . . . . . **PERFORM**
R · At VR, initiate the rotation with a positive sidestick input to achieve a continuous
R rotation rate of about 3°/sec, towards a pitch attitude of 15° (12.5° if one engine is
R failed).
R · Minimize lateral inputs on ground and during the rotation, to avoid spoiler extension.
R · After lift-off, follow the SRS pitch command bar.

CAUTION
If a tailstrike occurs, avoid flying at an altitude requiring a pressurized cabin, and return to the originating airport for damage assessment.

– **ANNOUNCE** . . . . . **"POSITIVE CLIMB"**
Announce positive climb, when the vertical speed indication is positive and the radio altitude has increased.

TAKEOFF

— **ANNOUNCE . . . . . "TAKEOFF"**

— **BRAKES . . . . . RELEASE**

R Rolling takeoff is recommended, when possible.

● **If the crosswind is at, or below, 20 knots and there is no tailwind :**

— **THRUST LEVERS . . . . . FLX or TOGA**

· To counter the nose-up effect of setting engine takeoff thrust, apply half forward stick until the airspeed reaches 80 knots. Gradually release the stick to reach neutral at 100 knots.

· For crosswind takeoffs, routine use of into-wind aileron is not recommended. In strong crosswind conditions, small amounts of lateral control may be used to maintain wings level, but the pilot should avoid using excessive amounts. This causes excessive spoiler deployment, which increases the aircraft's tendency to turn into wind.

· PF progressively adjusts engine thrust in two steps :

— From idle to about 50 % N1 (1.1 EPR).

— From engines at similar N1 to takeoff thrust.

· Once the thrust is set, the Captain maintains his hand on the thrust levers until the aircraft reaches V1.

● **In case of tailwind, or if crosswind is greater than 20 knots :**

— **THRUST LEVERS . . . . . FLX or TOGA**

· PF applies full forward stick.

R · For crosswind takeoffs, routine use of into-wind aileron is not recommended. In
R strong crosswind conditions, small amounts of lateral control may be used to
R maintain wings level, but the pilot should avoid using excessive amounts. This
R causes excessive spoiler deployment, which increases the aircraft's tendency to
R turn into wind.

· PF sets 50 % N1 (1.1 EPR) on both engines, then rapidly increases thrust to about 70 % N1 (1.3 EPR), then progressively to reach takeoff thrust at 40 knots ground speed, while maintaining stick full forward up to 80 knots. Gradually release the stick to reach neutral at 100 knots.

· Once the thrust is set, the Captain maintains his hand on the thrust levers until the aircraft reaches V1.

Note : The ENG page replaces the WHEEL page on the ECAM's lower display.

— **DIRECTIONAL CONTROL . . . . . USE RUDDER**

– **CHRONO** . . . . . **START**

– **PFD/ND** . . . . . **SCAN**
· Check the flight mode annunciator on the PFD. MAN TOGA (MAN FLX xx), SRS, RWY (or blank) 1FD2.
· Check the FMGS position update (aircraft on runway centerline).

● **Reaching 80 knots :**

– **TAKEOFF N1** . . . . . **CHECK**
Check that the actual N1 of individual engines has reached the N1 rating limit before the aircraft reaches 80 knots. Check EGT.

Note : If there is a discrepancy of more than 1 % of N1 between the engines, it should be entered in the logbook after flight.

– **ANNOUNCE** . . . . . **"POWER SET"**

– **PFD and ENG indications** . . . . . **SCAN**
· Scan airspeed, N1, and EGT throughout the takeoff.

– **ANNOUNCE** . . . . . **"ONE HUNDRED KNOTS"**
· The PF crosschecks the speed indicated on the PFD and announces "checked".
· Below 100 knots, the Captain may decide to abort the takeoff, depending on the circumstances. Above 100 knots, rejecting the takeoff is a more serious matter.

– **ANNOUNCE** . . . . . **"V1"**
V1 synthetic voice is triggered.

– **ANNOUNCE** . . . . . **"ROTATE"**

– **ROTATION** . . . . . **PERFORM**
· At VR, initiate the rotation with a positive sidestick input to achieve a continuous rotation rate of about 3°/sec, towards a pitch attitude of 15° (12.5° if one engine is failed).
· Minimize lateral inputs on ground and during the rotation, to avoid spoiler extension.
· After lift-off, follow the SRS pitch command bar.

CAUTION
If a tailstrike occurs, avoid flying at an altitude requiring a pressurized cabin, and return to the originating airport for damage assessment.

– **ANNOUNCE** . . . . . **"POSITIVE CLIMB"**
Announce positive climb, when the vertical speed indication is positive and the radio altitude has increased.

– **ORDER** . . . . . **«GEAR UP»**

– **LDG GEAR** . . . . . **SELECT UP**

– **GRND SPLRS** . . . . . **DISARM**

– **EXTERIOR LIGHTS** . . . . . **SET**

R · Set NOSE and RWY TURN OFF light switches to OFF.

R · LAND lights may be left ON, according to the airline policy/regulatory recommendation.

– **AP** . . . . . **AS RQRD**

Above 100 feet, AP 1 or 2 may be engaged.

– **ANNOUNCE** . . . . . **FMA**

– **ANNOUNCE** . . . . . **"GEAR UP"**

● **At thrust reduction altitude (LVR CLB flashing on FMA).**

– **THRUST LEVERS** . . . . . **CL**

The thrust levers should be moved to the CL detent, when the flashing LVR CLB prompt annunciates on the FMA. Autothrust is now active.
In manual flight, the pitch attitude change must be anticipated, to prevent a speed decay at thrust reduction.

– **PACK 1 and 2 (if applicable)** . . . . . **ON**

· Select PACK 1 ON, after CLB thrust reduction
· Select PACK 2 ON, after FLAP retraction

Note : 1. Selecting both packs ON simultaneously may affect passenger comfort.
2. If packs are not switched ON after takeoff phase, an ECAM caution will be triggered.

R ● **At acceleration altitude :**

R – **ANNOUNCE FMA . . . . . "THR CLB/OP CLB" or "THR CLB/CLB"**
R Check target speed change from V2 + 10 to the first CLB speed (either preselected
R or managed).

R *Note : 1. For most normal operations, thrust reduction and acceleration altitudes will*
R *be the same. So the FMA will change from MAN FLX/SRS/RWY to THR*
R *CLB/CLB/NAV (or THR CLB/OP CLB/NAV).*
R *2. If the FCU-selected altitude is equal or close to acceleration altitude, the*
R *FMA will switch from SRS to ALT*.*

● **Above acceleration altitude (or once in CLB phase) :**
The following procedure ensures that the aircraft is effectively accelerating toward CLB speed.

• **At F speed**

Note : For takeoff in CONF 1+F, the "F" speed is not displayed.

– **ORDER . . . . . "FLAPS 1"**

– **FLAPS 1 . . . . . SELECT**

– **CONFIRM/ANNOUNCE . . . . . "FLAPS 1"**

• **At S speed**

– **ORDER . . . . . "FLAPS ZERO"**

– **FLAPS ZERO . . . . . SELECT**

– **CONFIRM/ANNOUNCE . . . . . "FLAPS ZERO"**

Note : The CRUISE page replaces the ECAM ENG page, when reaching 1500 feet.

R

NORMAL TAKE OFF PATTERN

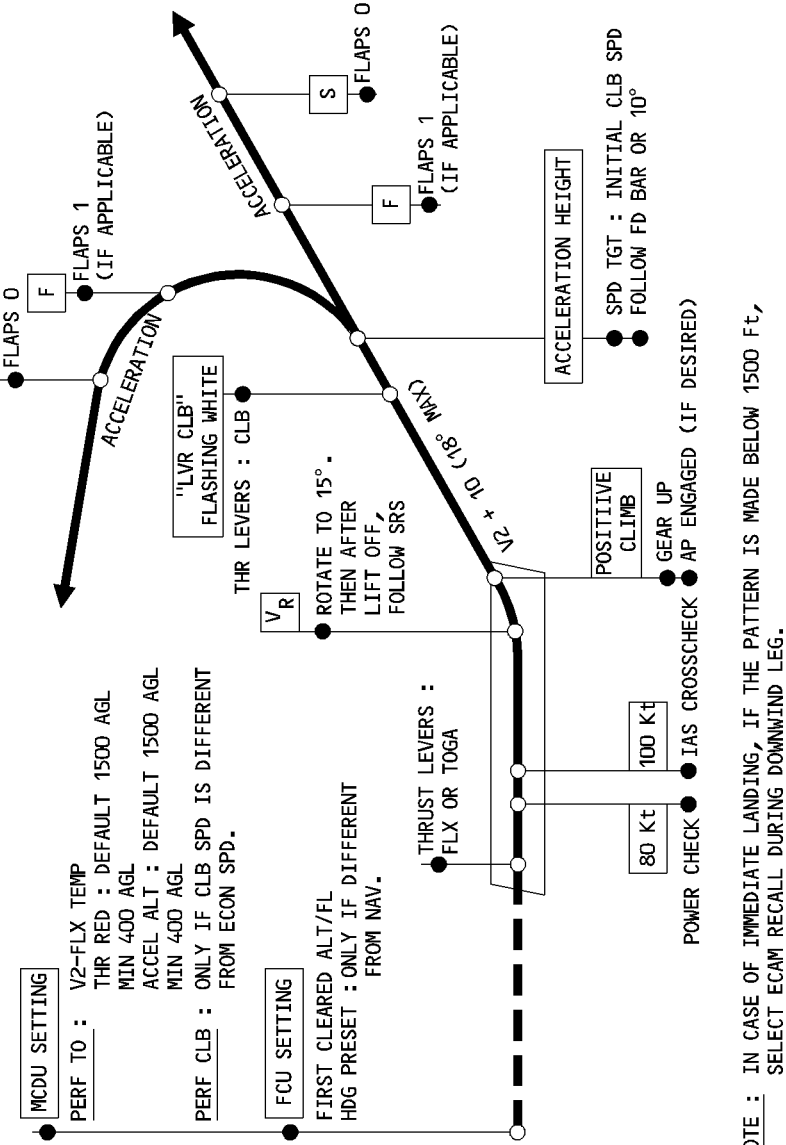

GFC5-03-0312-005-A001AA

NOTE : IN CASE OF IMMEDIATE LANDING, IF THE PATTERN IS MADE BELOW 1500 Ft, SELECT ECAM RECALL DURING DOWNWIND LEG.

AFTER TAKE OFF

– **APU BLEED . . . . . AS RQRD**
If the APU has been used to supply air conditioning during takeoff, set the APU BLEED to OFF. For use of the APU BLEED, refer to the APU LIMITATION Chapter (3.01.49).

– **APU MASTER switch . . . . . AS RQRD**

– **ENG START selector . . . . . AS RQRD**
Select IGN/START, if severe turbulence or heavy rain is encountered.

– **TCAS (◁) Mode selector . . . . . TA/RA**
Select TA/RA, if the takeoff has been performed with TA only.

– **ANTI ICE PROTECTION . . . . . AS RQRD**
R ENG ANTI ICE should be ON, when icing conditions are expected with a TAT at, or
R below, 10°C.

Note : With ENG ANTI ICE ON, the FADEC automatically selects continuous ignition. The IGNITION memo appears on ECAM.

– **AFTER TAKEOFF/CLIMB CHECKLIST down to the line . . . . . COMPLETE**

CLIMB

– **Normal vertical climb mode is CLB or OP CLB with managed speed active.**

– **PF MCDU . . . . . PERF CLB**
· PF MCDU should be preferably set on PERF CLB page (allowing to monitor when the FCU selected altitude is reached) but other pages as F-PLN may be selected as tactically necessary.
With the AP engaged, the PF will make any required F-PLN revisions.
· OPT FL and MAX REC FL are displayed on MCDU PROG page. It is worth noting that OPT FL displayed is function of the CI.
· The displayed MAX REC FL gives at least 0.3 g buffet margin. A cruise flight level entry may be made above this level in the MCDU and will be accepted by the FMGS, provided it does not exceed the level at which the margin is reduced to 0.2 g.

– **PNF MCDU . . . . . F-PLN**
PNF MCDU should be preferably set on F-PLN page (allowing to be carried out any ATC long term lateral or vertical revisions).

– **CLIMB SPEED MODIFICATIONS :**

- **If a speed change is required by ATC, or for turbulence or operational considerations (e.g. increase CLB rate) :**
  Select new speed with FCU SPD selection knob and pull.
  Speed target is now selected.
- **To resume to MANAGED SPD profile :**
  Push FCU SPD selection knob. Speed target is now managed.

Note : The best rate of climb speed for long term situations lies between green dot and ECON speed. Acceleration from green dot to ECON speed at high altitude can take a long time.

– **BARO REF . . . . . SET**
· At transition altitude (baro setting flashing on PFD) set STD on EFIS control panels and on standby altimeter.
· Cross check baro settings and altitude readings.

– **CRZ FL** . . . . . **SET AS RQRD**
· If ATC clears the aircraft to intended CRZ FL or above, there is no need to modify the CRZ FL inserted in INIT A page during cockpit prep. Higher CRZ FL will be taken automatically into account by FCU ALT knob selection.
· If ATC limits CRZ FL to a lower level than the one inserted in the INIT A page (or present on PROG page) it is necessary to insert this lower CRZ FL in the PROG page. Otherwise there is no transition into CRZ phase : consequently the managed speed targets and Mach are not modified and SOFT N1 mode is not available.
In that case FMA will display ALT instead of ALT CRZ in the 2nd column.

– **AFTER TAKE OFF/CLIMB C/L below the line** . . . . . **COMPLETE**

– **ENG ANTI ICE** . . . . . **AS RQRD**
ENG ANTI ICE should be ON when the aircraft encounters icing conditions, unless the SAT is below – 40°C.

– **RADAR TILT** . . . . . **ADJUST**
The tilt angle depends on aircraft altitude and on the selected range on ND. A slightly negative tilt is required to avoid overscanning and to provide some ground returns at the top edge of the ND.

R ● **At 10000 ft :**

R – **LAND light** . . . . . **OFF**

R – **SEAT BELTS** . . . . . **AS RQRD**

R – **EFIS option** . . . . . **ARPT**

R – **ECAM MEMO** . . . . . **REVIEW**

– **RAD NAV** . . . . . **CHECK**
Clear manually tuned VORs from MCDU RAD/NAV page.

– **SEC F-PLN** . . . . . **AS RQRD**
Recopy the active flight plan in the secondary if an immediate return flight plan has previously been constructed.

– **OPT/MAX ALT** . . . . . **CHECK**

CRUISE

– **ECAM MEMO . . . . . REVIEW**

– **ECAM SYS PAGES . . . . . REVIEW**

Periodically review the system display pages and, in particular :

ENG : Oil press and temperature
BLEED : BLEED parameters
ELEC : Parameters, GEN loads
HYD : Fluid quantity. Green system is lower than on ground, following landing gear retraction.
COND : Duct temperature, compared with zone temperature.
Avoid large differences for passenger comfort.
FLT CTL : Note any unusual control surface position.
FUEL : Fuel distribution, trim tank quantity, and CG.

– **FLIGHT PROGRESS . . . . . CHECK**

Note : VLS shown on the PFD ensures a 0.3g buffet margin and therefore, no additional margin is necessary in cruise.

Monitor flight progress in the conventional way.
When overflying a waypoint :
· Check track and distance to the next waypoint.

R When overflying a waypoint, or every 30 minutes :
· Check fuel : Check FOB (ECAM), and fuel prediction (FMGC), and compare with the computer flight plan or the in-cruise quick-check table (Refer to 3.06.20).(3.06.20).
· Check that the sum of the fuel on board and the fuel used is consistent with the fuel on board at departure. If the sum is either unusually smaller than the fuel on board at
R departure, or if it decreases, suspect a fuel leak.

CAUTION

This check must also be performed each time a FUEL IMBALANCE procedure is necessary. Perform the check before applying the FUEL IMBALANCE procedure. If a fuel leak is confirmed, apply the FUEL LEAK procedure.

– **STEP FLIGHT LEVEL . . . . . AS APPROPRIATE**

– **NAVIGATION ACCURACY . . . . . CHECK**

On aircraft equipped with GPS PRIMARY, the navigation accuracy check is not required, as long as GPS PRIMARY is available.

Otherwise, navigation accuracy must be monitored, particularly when any of the following occurs :

· IRS only navigation
· The PROG page displays LOW accuracy, or
· "NAV ACCUR DOWNGRAD" message appears.

Methods for checking accuracy :

· Manually tune VOR (VOR/DME or ADF) that is within range on RAD NAV page and select associated needles on ND.
Check that the needle (raw data) overlies the corresponding blue navaid symbol (FM computed) and that the DME distance is equal to the distance in between the aircraft symbol and the navaid symbol on the ND, or
· Insert a VOR/DME ident in the BRG/DIST TO field of the PROG page, and compare the computed BRG (DIST) with the raw data on the ND. This last method allows the FM error to be quantified.

If the check is positive (error ≤ 3NM EN ROUTE) : FM position is reliable.
– ND ARC or NAV and managed lateral guidance may be used.

If the check is negative (error > 3NM EN ROUTE) : FM position is not reliable.
– Use raw data for navigation and monitor it.
– If there is a significant mismatch between the display and the real position : Disengage MANAGED NAV mode and use raw data navigation (possibly switch to ROSE VOR so as not to be misled by FM data).

– **RADAR TILT . . . . . ADJUST**

Below 20000 feet : A near zero degree tilt setting should be adjusted. Should two different ranges be selected on both NDs it is recommended to set a down tilt with the shorter ND range (in order to monitor and detect weather activity) and a near zero tilt with the longer ND range (in order to monitor course changes).

Above 20000 feet : A slight downward tilt is recommended.

– **CABIN TEMP . . . . . MONITOR**

Pay regular attention to the ECAM CRUISE page in order to monitor passenger cabin temperatures and adjust them, as necessary.

R ● **If the oxygen mask has been used :**

R – **OXYGEN MASK . . . . . CHECK**
R Check that the oxygen mask has been properly stowed, as indicated in the FCOM
R 1.35.20.

DESCENT PREPARATION

Descent preparation and approach briefing can take approximately 10 minutes, so they should be initiated approximately at 80 NM before Top of Descent.

– **LDG ELEV** . . . . . **CHECK**
Check on ECAM CRUISE page that LDG ELEV AUTO is displayed.

– **WEATHER AND LANDING INFORMATION** . . . . . **OBTAIN**
Check weather reports at ALTERNATE and DESTINATION airports. Airfield data if any should give RWY in use for arrival.

FMGS

– **ARRIVAL page** . . . . . **COMPLETE/CHECK**
Insert APPR, STAR, TRANS and APPR VIA if applicable (access by LAT REV at destination.)

– **PERF DES page** . . . . . **CHECK**
Prior to descent, access PERF DES page and check ECON MACH/SPD.
If a different speed from ECON is required, insert that MACH or SPD into the ECON field. This new MACH and/or SPD is the one applicable for the descent path and TOD computation, and will be used for the managed speed descent profile (instead of ECON).
Below 10 000 ft a 250 kt SPD limit is defaulted in the managed speed descent profile: it may be deleted or modified if necessary on VERT REV at DEST.

– **PERF APPR page . . . . . COMPLETE/CHECK**

– Enter the QNH, temperature, and wind at destination.

Note : The entered wind should be the average wind given by the ATC or ATIS. Do not enter gust values, for example, if the wind is 150/20-25, insert the lower speed 150/20 (ground speed mini-function will cope with the gusts).

– Insert the MDA (MDH if QFE used) or DH, whichever applies.

R *Note : To avoid undershooting the MDA (MDH) during go-around, due to the aircraft*
R *inertia during pull-up, the flight crew should add an additional number of feet*
R *(defined by the operator) to the published MDA (MDH).*

WARNING

If QNH altimeter setting is used with an aircraft with QFE option, refer to 3.04.34.

Note : Changing the RWY or type of arrival (VOR, ILS) automatically erases the previous MDA/MDH or DH.

– Check or modify the landing configuration. Always select the landing configuration on the PERF APP page :

· The pilot may choose FLAP 3, rather than FLAP FULL for landing, depending on the available runway length and go-around performance, or if windshear/severe turbulence is considered possible on the approach.

· The ECAM may require a specific landing configuration, in case of a system failure:

* First read the VLS CONF FULL value on the PERF APP page to determine the VAPP (or use QRH 2.40).
* Then, keep CONF FULL on the PERF APP page, for landing in CONF 2 or FULL, or
* Select CONF 3 on the PERF APP page, for landing in CONF 3.

As a general rule, managed speed can be used if the landing configuration and the configuration selected on the PERF APP page are the same. (If they are not the same, the managed speed will not drop down to the approach speed).

– Check VAPP.

VAPP is computed as follows :

VAPP = VLS + 1/3 of headwind component. The wind correction is limited to a minimum of 5 knots and a maximum of 15 knots, and is derived from the wind entered on the PERF APPR page.

When using selected speed to compute VAPP, it is recommended that the same method be used to compute VAPP, as when in managed speed. The pilot can modify VAPP.

The new value will be taken into account for the ground speed mini-function.

– **PERF GO-AROUND page . . . . . CHECK/MODIFY**

Check THR RED ALT and ACC ALT, and modify if necessary.

– **RADIO NAV page . . . . . CHECK**
Set navaids, as required, and check idents on the NDs (VOR-ADF) and PFDs (ILS).
For an ILS approach, check the frequency and course of the selected ILS.
If a VOR/DME exists close to the airfield, select it and enter its ident in the BRG/DIST field of the PROG page, for NAV ACCY monitoring during descent.

– **SEC F PLN page . . . . . AS RQRD**
The SEC F-PLN should be set before the top of descent, either to an alternate runway for destination, or to the landing runway in case of circling. In all cases, the routing to the alternate should be available. If there is a last-minute runway change, then the flight crew only needs to activate the secondary F-PLN, without forgetting to set new MDA/DH and navaids.

– **APPROACH BRIEFING . . . . . PERFORM**
It is recommended to use FMGS pages as a guide for descent and approach briefing
· PERF page : Safe altitude is... Transition altitude is...
· RAD NAV page ILS, VOR, ADF + associated crossing altitudes.
· F PLN page to check STAR - APPR - missed approach.
· FMA MDA/DH.
· Go-around (Standard call/task sharing, Diversion decision).
· Terminal area topography to ensure a proper terrain awareness.
· Weather at destination.
· Fuel needed for diversion. Holding fuel avaibility (FUEL page).
· Landing configuration including ground spoilers, reverser application and autobrake selection.
· Runway condition, lighting, and dimensions
· For airlines having different A330 models, mention whether the aircraft is an A330-200, or an A330-300.
Awareness of the aircraft model may prevent tailstrike.

– **DESCENT CLEARANCE . . . . . OBTAIN**
When clearance is obtained, set the ATC-cleared altitude (FL) on FCU (considering also what is the safe altitude).
If the lowest safe altitude is higher than the ATC-cleared altitude, check with the ATC that this constraint applies.
If it is confirmed, set the FCU altitude to the safe altitude, until it is safe to go to the ATC-cleared altitude.

– **ANTI ICE PROTECTION . . . . . AS RQRD**
· During descent ENG ANTI ICE must be ON, when icing conditions are encountered.
· With engine ANTI ICE ON, the FADEC automatically controls continuous ignition and selects a higher idle thrust, which gives better protection against engine flame-out.
· IGNITION memo appears on ECAM.
· ANTI ICE ON reduces the descent path angle when at idle. The pilot can compensate for this by increasing descent speed, or by extending up to half speedbrakes.

DESCENT INITIATION

– **DESCENT . . . . . INITIATE**
The normal method of initiating the descent is to select DES mode at the FMGS calculated TOD.

■ **If ATC requires an early descent :**
DES mode is used and will guide the aircraft down with a reduced V/S in order to converge with the required descent path. (V/S - 1000 ft/min may also be used).

■ **If the descent is delayed by ATC :**
Beyond TOD, a DECELERATE message comes up on PFD and MCDU. This suggests to the crew to reduce the speed towards green dot speed (with ATC permission).
When cleared down for descent, select DES mode with managed speed active.

DESCENT MONITORING

– **PF MCDU . . . . . PROG/PERF DES**

R PF MCDU should be preferably set to PROG or PERF DES page :
· PROG page in order to get VDEV information
· PERF DES in order to get predictions down to any inserted altitude in DES/OP DES modes.

– **PNF MCDU . . . . . F-PLN**
With AP engaged the PF will usually make any required F-PLN revisions.

Note : On NDs a level off symbol ↘ is provided along F-PLN assuming current active AP/FD and A/THR modes.

– **DESCENT . . . . . MONITOR**
(Refer to FCOM 4 05.60)
– When flying in NAV mode, DES mode is normally used.

R The aircraft descends along the descent flight path : VDEV is provided on PFD and on PROG page, and may be thus monitored. All constraints of the FPLN will be taken into account for the guidance.

– When flying in HDG (TRK) modes, thus out of the lateral F-PLN, DES mode is not available.

R However VDEV is still provided on the PFD, and is useful whenever XTK is small (up to 5 NM)
The level ↘ symbols, as well as Energy Circle on ND may be used to monitor the descent.

R Predictions on MCDU assume a return to lateral FPLN and descent flight path.
Note that whenever the lateral mode is changed from NAV to HDG/TRK the vertical mode reverts to V/S at the value pertaining at the time of the mode change.

– From time to time, during stabilized descent FPA may be selected to check that the remaining distance to destination is approximately the FL change required divided by FPA in degrees.

FPA (°) = △ FL/DIST (NM)

DESCENT ADJUSTMENT

If RATE INCREASE is desired :
– PREFERABLY increase descent SPD (by use of selected speed) if comfort and ATC permit. It is economically better (Time/Fuel).
– Maintain high SPD as long as possible (SPD LIM may be cleared, subject to ATC clearance).
– If aircraft is high with high SPD, it is more efficient to keep high speed until ALT* and THEN decelerate rather than to mix descent and deceleration.
– If A/C goes below the desired profile, use SPEED V/S mode to adjust rate of descent.

– **SPEEDBRAKES . . . . . AS RQRD**
In OPEN DES : Use speedbrakes to increase the rate of descent. The pilot may use up to half speedbrake extension to maintain the required rate of descent, when engine anti-ice is used. In DES mode : If the aircraft is on, or below, the flight path and the ATC requires a higher rate of descent, do not use speedbrakes because the rate of descent is dictated by the planned flight path. Thus, the A/THR may increase thrust to compensate for the increase in drag. In this case, use OPEN DES with speedbrakes.

– **RADAR TILT . . . . . ADJUST**
Every 10000 feet of the planned descent, and down to about 15000 feet, adjust tilt upwards to eliminate ground clutter on the upper part of the ND. Every 5000 feet below 15000 feet, adjust tilt angle one degree upwards, to keep the ND relatively free of ground clutter.

– **BARO REF . . . . . SET**
R · Set QNH on the EFIS control panel and on the standby altimeter, when approaching the transition level and when cleared for an altitude.
· Crosscheck baro settings and altitude readings.

Note : When operating in low OAT, altitude corrections, as defined in 3.05.05 page 6, should be considered.

● **If EGPWS available :**

R – **TERR ON ND . . . . . ON**
R If the use of radar is required, consider selecting radar display on PF side, and TERR
R ON ND on PNF side only.

– **ECAM STATUS . . . . . CHECK**
· ECAM STATUS page automatically appears, if not empty, when the BARO setting is selected.
· Check ECAM status page before completing approach checks. Take particular note of any degradation in landing capability, or any other aspect affecting approach and landing.

● **At 10000 feet :**

– **LAND LIGHTS . . . . . ON**

– **SEATBELTS . . . . . AS RQRD**

– **EFIS option . . . . . CSTR**

– **LS pushbutton . . . . . AS RQRD**
Select LS, if an ILS or LOC approach is intended. PFD displays the LOC and glide scales and deviation symbol, if there is a valid ILS signal.

– **RAD NAVAIDS . . . . . SELECTED/IDENTFIED**
Ensure that appropriate radio navaids are tuned and identified.

– **NAV ACCURACY . . . . . CHECK**
On aircraft equipped with GPS primary, no navigation accuracy check is required as long as GPS PRIMARY function is available.
Otherwise, crosscheck NAV ACCURACY using the PROG page (BRG/DIST computed data) and the ND (VOR/DME raw data).
The navigation accuracy check determines which autopilot mode the flight crew should use for the approach, and the type of displays to be shown on the ND.

GENERAL

For precision approaches and more information on how to use the FMGS, see FMGS pilot's guide (Refer to 4 05.70) . The described approach procedures assume the use of managed speed guidance which is recommended.

INITIAL APPROACH

– **ENG START selector . . . . . AS RQRD**
Select IGN if runway covered with standing water, heavy rain or severe turbulence is expected in approach or go around area.

– **SEAT BELTS . . . . . ON/AUTO**

R – **APPROACH PHASE . . . . . CHECK/ACTIVATE**
· If in NAV, when overflying DECEL pseudo waypoint, the APPR phase will activate automatically.
· If in HDG/TRK mode, at approximately 15 NM from touchdown activate and confirm
R APPROACH phase on MCDU. (PERF DES page).

– **POSITIONING . . . . . MONITOR**
· In NAV mode, use V DEV information on PFD and PROG page.
· In HDG or TRK mode, use the energy circle on ND representing the required distance to land.

– **MANAGED SPEED . . . . . CHECK**
If ATC requires a particular speed to be flown then use selected speed. When the ATC speed constraint (e.g. "maintain 170 knots to the outer marker") no longer applies, return to managed speed.

– **SPEED BRAKES . . . . . AS RQRD**

– **NAV ACCURACY** . . . . . **MONITOR**
Monitor NAV accuracy, and be prepared to change approach strategy. If NAV ACCUR DOWNGRAD occurs, use raw data to crosscheck navigation accuracy.
Navigation accuracy determines which autopilot modes the flight crew should use, the type of displays to be shown on the ND, and the use of EGPWS.

R

NAVIGATION ACCURACY	ND		AP/FD mode	TERR pushbutton
	PF	PNF		
NAV ACCUR HIGH NAV ACCUR LOW and NAV ACCURACY check ≤ 1 NM	ARC or ROSE NAV with navaid raw data		NAV	ON
NAV ACCUR LOW and NAV ACCURACY check > 1 NM Aircraft flying within unreliable radio navaid area	ROSE ILS	ARC or ROSE NAV or ROSE ILS with navaid raw data	HDG or TRK	OFF

– **RADAR TILT** . . . . . **ADJUST**
Increase tilt, as required (+ 3° to + 4°).

– **APPROACH CHECKLIST** . . . . . **COMPLETE**

GENERAL

For precision approaches and more information on how to use the FMGS, see FMGS pilot's guide (Refer to 4 05.70) . The described approach procedures assume the use of managed speed guidance which is recommended.

INITIAL APPROACH

– **ENG START selector . . . . . AS RQRD**
Select IGN if runway covered with standing water, heavy rain or severe turbulence is expected in approach or go around area.

– **SEAT BELTS . . . . . ON/AUTO**

R – **APPROACH PHASE . . . . . CHECK/ACTIVATE**
· If in NAV, when overflying DECEL pseudo waypoint, the APPR phase will activate automatically.
· If in HDG/TRK mode, at approximately 15 NM from touchdown activate and confirm
R APPROACH phase on MCDU. (PERF DES page).

– **POSITIONING . . . . . MONITOR**
· In NAV mode, use V DEV information on PFD and PROG page.
· In HDG or TRK mode, use the energy circle on ND representing the required distance to land.

– **MANAGED SPEED . . . . . CHECK**
If ATC requires a particular speed to be flown then use selected speed. When the ATC speed constraint (e.g. "maintain 170 knots to the outer marker") no longer applies, return to managed speed.

– **SPEED BRAKES . . . . . AS RQRD**

– **NAV ACCURACY . . . . . MONITOR**

· When GPS PRIMARY is available, no NAV ACCURACY monitoring is required.

· When GPS PRIMARY is lost, check the PROG page to verify that the required navigation accuracy is appropriate to the flight phase. Monitor NAV accuracy, and be prepared to change ILS interception strategy. If NAV ACCUR DOWNGRAD occurs, use raw data to crosscheck navigation accuracy.

Navigation accuracy determines which autopilot mode the flight crew should use, the type of displays to be shown on the ND, and the use of EGPWS.

R

<table>
<tr><th rowspan="2">NAVIGATION ACCURACY</th><th colspan="2">ND</th><th rowspan="2">AP/FD mode</th><th rowspan="2">TERR pushbutton</th></tr>
<tr><th>PF</th><th>PNF</th></tr>
<tr><td>GPS PRIMARY</td><td colspan="2" rowspan="3">ARC or ROSE NAV
with navaid raw data</td><td rowspan="3">NAV</td><td rowspan="3">ON</td></tr>
<tr><td>NAV ACCUR HIGH</td></tr>
<tr><td>NAV ACCUR LOW and
NAV ACCURACY check ≤ 1 NM</td></tr>
<tr><td>GPS PRIMARY LOST and
NAV ACCUR LOW and
NAV ACCURACY
check > 1 NM</td><td rowspan="2">ROSE ILS</td><td rowspan="2">ARC or ROSE
NAV or ROSE
ILS with navaid
raw data</td><td rowspan="2">HDG or TRK</td><td rowspan="2">OFF</td></tr>
<tr><td>GPS PRIMARY LOST and
Aircraft flying within unreliable
radio navaid area</td></tr>
</table>

– **RADAR TILT . . . . . ADJUST**

Increase tilt, as required (+ 3° to + 4°).

– **APPROACH CHECKLIST . . . . . COMPLETE**

INTERMEDIATE/FINAL APPROACH (ILS approach entered in the flight plan)

The objective is to be stabilized on the final descent path at VAPP, thrust above idle, with landing configuration at 1000 feet after continuous deceleration on the glideslope.

R To be stabilized, all of the following conditions must be achieved prior to, or upon, reaching
R this stabilization height :
R – The aircraft is on the correct lateral flight plan,
R – The aircraft is in the desired landing configuration,
R – The thrust is stabilized above idle, to maintain the target speed on the desired glide path,
R – No excessive flight parameter deviation.

The advantages are :
· Lower fuel consumption ; lower noise levels ; time saving
· Flexibility and ability to vary speed to suit ATC.

If the aircraft is not stabilized on the approach and in landing configuration, at 1000 feet in instrument conditions, or 500 feet in visual conditions, or as restricted by airline
R policy/regulations, a go-around must be initiated.

– **APPR pushbutton on FCU . . . . . PRESS**
· APPR pushbutton is to be pressed only when ATC clears the aircraft for the approach. This arms LOC and G/S modes.
· LOC and/or G/S capture modes will engage, at the earliest, 3 sec. after arming them.

Note : ICAO defines the envelope where the quality of the G/S signal ensures a normal capture. This envelope is within 10 NM, +/– 8 deg of the centerline of the ILS glide path and up to 1.75 Θ and down to 0.3 Θ (Θ = nominal glide path angle). When arming the approach well outside of the normal G/S capture envelope, a spurious G/S engagement may occur due to a wrong G/S deviation signal. This spurious G/S capture will order a pitch up, if the aircraft is below the glide beam, and a pitch down attitude, if the aircraft is above the glide beam. Whenever the pilot notices the pitch movement, or the spurious G/S*, or the trajectory deviation, he will immediately disconnect the AP, if engaged, to re-establish a normal attitude and will disengage APPR mode. It is then recommended to arm/rearm APP (ILS) mode within the normal capture zone.*

– **Both AP . . . . . ENGAGE**
When APPR mode is selected, both autopilots should be engaged.

AT GREEN DOT SPEED

– **ORDER . . . . . "FLAPS 1"**

– **FLAPS 1 . . . . . SELECT**

– **CONFIRM/ANNOUNCE . . . . . "FLAPS 1"**
· FLAPS 1 should be selected no later than 3 NM prior to FAF (Final Approach Fix).
· Check deceleration towards "S" speed.
· The aircraft will reach, or be established on, the glideslope with FLAPS 1 and S speed at or above 2000 feet AGL.
· In the event that aircraft speed is significantly higher than S on the G/S, or the aircraft does not decelerate on the G/S, extend the landing gear to slow down the aircraft. Use of speedbrakes is not recommended, as it will cause an undesired VLS increase.

R – **TCAS Mode selector . . . . . TA or TA/RA**
FAA recommends selecting TA only mode :
· In case of known nearby traffic, which is in visual contact ;
· At particular airports, and during particular procedures identified by an operator as having a significant potential for unwanted, or inappropriate RAs (Closely-spaced, parallel runways, converging runways, low terrain along the final approach...).

– **FMA . . . . . CHECK**

– **LOC CAPTURE . . . . . MONITOR**

– **ANNOUNCE . . . . . « LOC* »**

– **G/S CAPTURE . . . . . MONITOR**

● **If above the glideslope :**

– **V/S mode . . . . . SELECT**

– **FCU ALTITUDE . . . . . SET ABOVE A/C ALTITUDE**

– **ANNOUNCE . . . . . « G/S* »**

– **GO AROUND ALTITUDE . . . . . SET**
Set GA altitude on FCU.

Note : · If the aircraft intercepts the ILS above radio altimeter validity range (no radio altitude indication available on the PFD), CAT 1 is displayed on FMA. Check that the FMA displays the correct capability for the intended approach when the aircraft is below 5000 feet.

AT 2000 FT AGL MINIMUM

– **ORDER . . . . . "FLAPS 2"**

– **FLAPS 2 . . . . . SELECT**

– **CONFIRM/ANNOUNCE . . . . . "FLAPS 2"**
- Check deceleration towards F speed.
- If the ILS glideslope is intercepted from below 2000 feet AGL, select FLAPS 2 at one dot below the glideslope.
- In the event that the aircraft speed is significantly higher than S on the G/S, or the aircraft does not decelerate on the G/S, extend landing gear in order to slow down the aircraft. Speed brake use is not recommended.

WHEN FLAPS ARE AT 2

– **ORDER . . . . . "GEAR DOWN"**

– **L/G DOWN . . . . . SELECT**

– **GROUND SPOILERS . . . . . ARM**

– **AUTO BRK . . . . . AS RQRD**
The Use of the autobrake is recommended.
Use of MAX mode is not recommended at landing.
On short or contaminated runways, use MED mode.
On long and dry runways, LO mode is recommended.

Note : If, on very long runways, the pilot anticipates that braking will not be needed, use of the autobrake is unnecessary.

Press the appropriate pushbutton, according to runway length and condition, and check that the related ON light comes on.

– **CONFIRM/ANNOUNCE . . . . . "GEAR DOWN"**

WHEN LANDING GEAR IS DOWN

– **ORDER** . . . . . **"FLAPS 3"**

– **FLAPS 3** . . . . . **SELECT**
· Select FLAPS 3 below VFE.

– **CONFIRM/ANNOUNCE** . . . . . **"FLAPS 3"**

– **ECAM WHEEL page** . . . . . **CHECK**
· The ECAM WHEEL page appears below 800 feet, or at landing gear extension.
· Check for three landing gear green indications.

R ● **If residual pressure is indicated on the ECAM WHEEL page and/or the triple**
R **indicator :**

R – **RESIDUAL BRAKING PROC** . . . . . **APPLY**

– **ORDER** . . . . . **"FLAPS FULL"**

– **FLAPS FULL** . . . . . **SELECT**
· Select FLAPS FULL below VFE.
· It is recommended to retract the speedbrakes before selecting FLAPS FULL.

– **CONFIRM/ANNOUNCE** . . . . . **"FLAPS FULL"**
Check deceleration towards VAPP.

– **A/THR** . . . . . **CHECK IN SPEED MODE OR OFF**

– **WING ANTI ICE** . . . . . **OFF**
Switch WING ANTI ICE ON, only if severe icing conditions exist.

– **EXTERIOR LIGHTS** . . . . . **SET**
Set NOSE switch to TAXI
RWY TURN OFF switch to ON, and
LAND switch to ON

– **CONFIRM/ANNOUNCE . . . . . "FLAPS 2"**
- Check deceleration towards F speed.
- If the ILS glideslope is intercepted from below 2000 feet AGL, select FLAPS 2 at one dot below the glideslope.
- In the event that the aircraft speed is significantly higher than S on the G/S, or the aircraft does not decelerate on the G/S, extend landing gear in order to slow down the aircraft. Speed brake use is not recommended.

WHEN FLAPS ARE AT 2

– **ORDER . . . . . "GEAR DOWN"**

– **L/G DOWN . . . . . SELECT**

– **GROUND SPOILERS . . . . . ARM**

– **AUTO BRK . . . . . AS RQRD**
The Use of the autobrake is recommended.
Use of MAX mode is not recommended at landing.
On short or contaminated runways, use MED mode.
On long and dry runways, LO mode is recommended.

Note : If, on very long runways, the pilot anticipates that braking will not be needed, use of the autobrake is unnecessary.

Press the appropriate pushbutton, according to runway length and condition, and check that the related ON light comes on.

– **CONFIRM/ANNOUNCE . . . . . "GEAR DOWN"**

WHEN LANDING GEAR IS DOWN

– **ORDER** . . . . . **"FLAPS 3"**

– **FLAPS 3** . . . . . **SELECT**
· Select FLAPS 3 below VFE.

– **CONFIRM/ANNOUNCE** . . . . . **"FLAPS 3"**

– **ECAM WHEEL page** . . . . . **CHECK**
· The ECAM WHEEL page appears below 800 feet, or at landing gear extension.
· Check for three landing gear green indications.

– **ORDER** . . . . . **"FLAPS FULL"**

– **FLAPS FULL** . . . . . **SELECT**
· Select FLAPS FULL below VFE.
· It is recommended to retract the speedbrakes before selecting FLAPS FULL.

– **CONFIRM/ANNOUNCE** . . . . . **"FLAPS FULL"**
Check deceleration towards VAPP.

– **A/THR** . . . . . **CHECK IN SPEED MODE OR OFF**

– **WING ANTI ICE** . . . . . **OFF**
Switch WING ANTI ICE ON, only if severe icing conditions exist.

– **EXTERIOR LIGHTS** . . . . . **SET**
Set NOSE switch to TAXI
RWY TURN OFF switch to ON, and
LAND switch to ON

– **SLIDING TABLE** ◁ . . . . . **STOWED**

– **LDG MEMO** . . . . . **CHECK NO BLUE LINE**

– **CABIN REPORT** . . . . . **OBTAIN**

– **CABIN CREW** . . . . . **ADVISE**

– **LANDING C/L** . . . . . **COMPLETE**

– **FLIGHT PARAMETERS** . . . . . **CHECK**
PF announces any FMA modification (LAND green at 350 feet and any other change).
PNF calls out if :
· the speed, becomes lower than speed target – 5 knots or greater than speed target + 10 knots.
· the pitch attitude becomes lower than 0° or greater than 10° nose up.
· the bank angle becomes greater than 7°.
· the descent rate becomes greater than 1000 ft/min.
· excessive LOC or GLIDE deviation occurs.

AT DH + 100 FT (or MDA/MDH + 100 FT) :

– **MONITOR or ANNOUNCE** . . . . . **« ONE HUNDRED ABOVE »**

AT DH (or MDA/MDH)

– **MONITOR or ANNOUNCE** . . . . . **« MINIMUM »**

– **ANNOUNCE** . . . . . **« LANDING » or « GO AROUND/FLAPS »**
Maintain a stabilized flight path down to flare.
At 50 feet, one dot below the glideslope is 14 feet below the glideslope.
Do not duck under the glideslope.

R

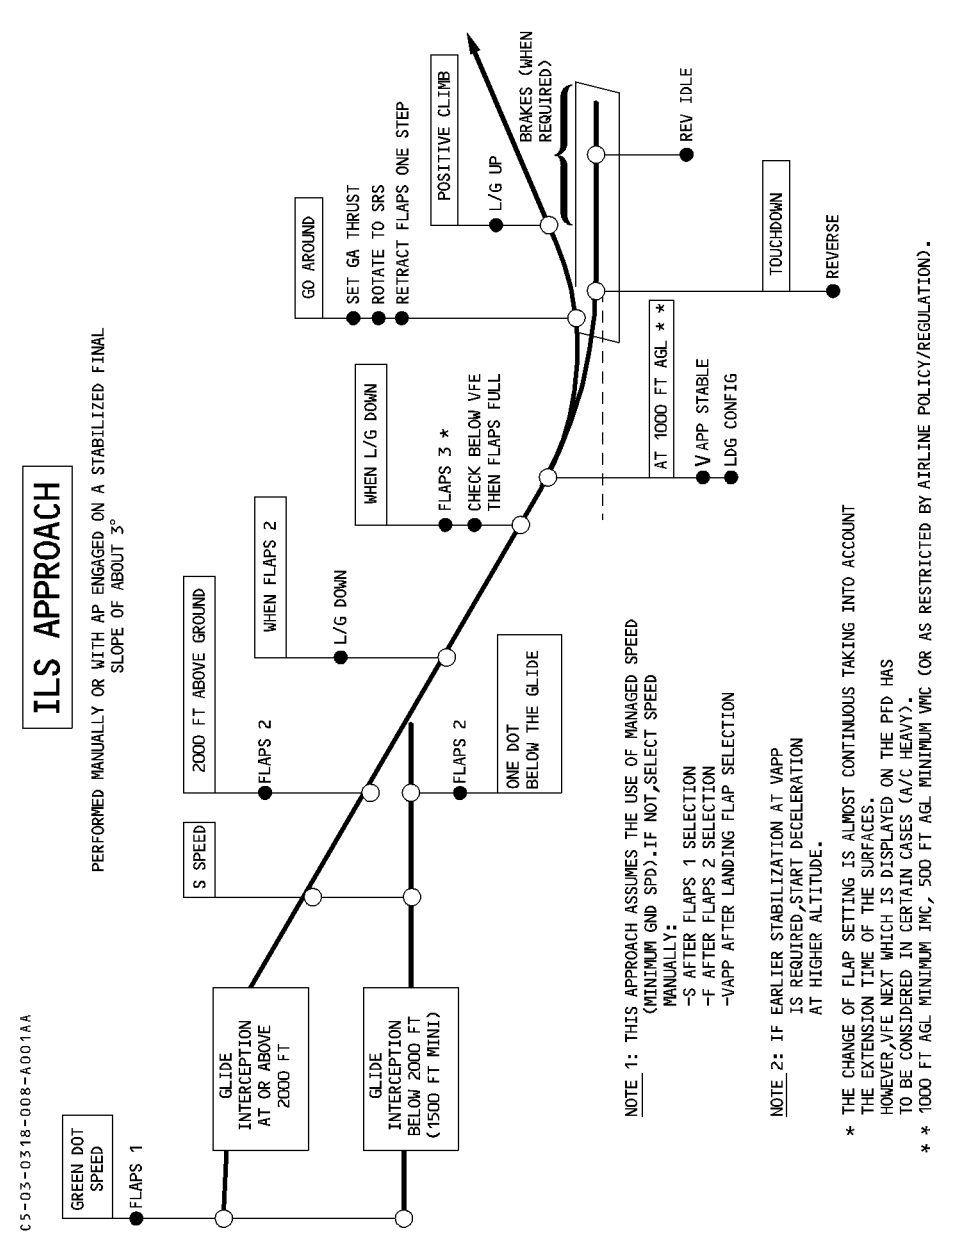
ILS APPROACH
PERFORMED MANUALLY OR WITH AP ENGAGED ON A STABILIZED FINAL SLOPE OF ABOUT 3°
GFC5-03-0318-008-A001AA
GREEN DOT SPEED
FLAPS 1
GLIDE INTERCEPTION AT OR ABOVE 2000 FT
GLIDE INTERCEPTION BELOW 2000 FT (1500 FT MINI)
S SPEED
2000 FT ABOVE GROUND
FLAPS 2
WHEN FLAPS 2
L/G DOWN
FLAPS 2
ONE DOT BELOW THE GLIDE
WHEN L/G DOWN
FLAPS 3 *
CHECK BELOW VFE THEN FLAPS FULL
GO AROUND
SET GA THRUST
ROTATE TO SRS
RETRACT FLAPS ONE STEP
POSITIVE CLIMB
L/G UP
BRAKES (WHEN REQUIRED)
REV IDLE
AT 1000 FT AGL * *
V APP STABLE
LDG CONFIG
TOUCHDOWN
REVERSE
NOTE 1: THIS APPROACH ASSUMES THE USE OF MANAGED SPEED (MINIMUM GND SPD).IF NOT,SELECT SPEED MANUALLY:
-S AFTER FLAPS 1 SELECTION
-F AFTER FLAPS 2 SELECTION
-VAPP AFTER LANDING FLAP SELECTION
NOTE 2: IF EARLIER STABILIZATION AT VAPP IS REQUIRED,START DECELERATION AT HIGHER ALTITUDE.
* THE CHANGE OF FLAP SETTING IS ALMOST CONTINUOUS TAKING INTO ACCOUNT THE EXTENSION TIME OF THE SURFACES.
HOWEVER,VFE NEXT WHICH IS DISPLAYED ON THE PFD HAS TO BE CONSIDERED IN CERTAIN CASES (A/C HEAVY).
* * 1000 FT AGL MINIMUM IMC, 500 FT AGL MINIMUM VMC (OR AS RESTRICTED BY AIRLINE POLICY/REGULATION).

INTRODUCTION

APPROACH GUIDANCE FOR NON PRECISION APPROACHES, OTHER THAN LOC, LOC B/C, AND RNAV NON PRECISION APPROACHES

Three different approach strategies are available to perform non-precision approaches :

1. Lateral and vertical guidance, selected by the crew : TRK-FPA (or HDG-V/S) modes.
2. Lateral guidance, managed by the FM, and vertical guidance selected by the crew : NAV-FPA (or NAV-V/S) modes.
3. Lateral and vertical guidance, managed by the FM : FINAL APP mode.

In all cases, the recommended flying reference is FPV, which should be selected during the initial approach.

– Approach procedures including a PI-CF leg (PROC-T indicated on the MCDU F-PLN) are not eligible for the use of NAV and FINAL APP modes.

– Lateral managed guidance (NAV) can be used, provided the approach is stored in the navigation database and the final approach is laterally and vertically monitored, using the adequate raw data (reference navaid, altimeter).

– Lateral and vertical managed guidance (FINAL APP) in IMC conditions can be used, provided the following conditions are met :

· The approach stored in the navigation database has been validated, and is approved by the operator for use of FINAL APP mode.

R This validation includes evaluation of the OAT effect on obstacle clearance : It is
R necessary to define a minimum OAT, below which selected vertical guidance must be
R used.

· The final approach (FAF to runway or MAP), as extracted from the navigation database and inserted in the primary F-PLN including altitude constraints, is not revised by the crew.

· Before starting the approach, the crew must check the lateral and the vertical FM F-PLN against the published approach chart, using the MCDU and ND.

· The approach trajectory is laterally and vertically intercepted, before the FAF, or equivalent waypoint in the FM F-PLN, so that the aircraft is correctly established on the final approach course before starting the descent.

· The final approach is laterally and vertically monitored, using the appropriate raw data (navaids, distance to the runway or MAP, altitude, FPV).

R *Note : For additional information on recommended flight crew procedures, and on*
R *navigation database flight path validation, refer to the FCOM Bulletin N° 10 and*
R *the FMGS Pilot's Guide (4.02.20 and 4.05.70).*

APPROACH GUIDANCE FOR RNAV APPROACH

Two different approach strategies are available to perform RNAV approaches :

1. Lateral guidance, managed by the FM, and vertical guidance selected by the crew : NAV-FPA (or NAV-V/S) modes.
   This strategy applies, when LNAV ONLY (Lateral Navigation only) RNAV approach is intended.
2. Lateral and vertical guidance, managed by the FM : FINAL APP mode.
   This strategy applies, when LNAV/VNAV (Lateral and Vertical Navigation) RNAV approach is intended.
   In all cases, the recommended flying reference is FPV, which should be selected during the initial approach.
   RNAV approach can be performed, provided :
   - The approach stored in the navigation database has been validated, and is approved by the operator.
     This validation includes evaluation of the OAT effect on obstacle clearance : It is necessary to define a minimum OAT, below which selected vertical guidance must be used.
   - The final approach (FAF to runway or MAP), as extracted from the navigation database and inserted in the primary F-PLN including altitude constraints, is not revised by the crew.
   - Before starting the approach, the crew must check the lateral and the vertical FM F-PLN against the published approach chart, using the MCDU and ND.
   - Before starting the approach, two navigation systems must be operative : 2 FMGS and 2 sensors (2 GPS, 2 DME, 2 VOR as appropriate).
   - The approach trajectory is laterally and vertically intercepted, before the FAF, or equivalent waypoint in the FM F-PLN, so that the aircraft is correctly established on the final approach course before starting the descent.
   - The final approach is laterally and vertically monitored, using the appropriate raw data (distance to the runway, altitude, FPV).

Note : For additional information on recommended flight crew procedures, and on navigation database flight path validation, refer to the FCOM Bulletin N° 10 and the FMGS Pilot's Guide (4.02.20 and 4.05.70).

INTRODUCTION

APPROACH GUIDANCE FOR NON PRECISION APPROACHES OTHER THAN LOC, LOC B/C AND RNAV NON PRECISION APPROACHES

Three different approach strategies are available to perform non-precision approaches :

1. Lateral and vertical guidance, selected by the crew : TRK-FPA (or HDG-V/S) modes.
2. Lateral guidance, managed by the FM, and vertical guidance selected by the crew : NAV-FPA (or NAV-V/S) modes.
3. Lateral and vertical guidance, managed by the FM : FINAL APP mode.

In all cases, the recommended flying reference is FPV, which should be selected during the initial approach.

– Approach procedures including a PI-CF leg (PROC-T indicated on the MCDU F-PLN) are not eligible for the use of NAV and FINAL APP modes.
– Lateral managed guidance (NAV) can be used, provided the approach is stored in the navigation database and the final approach is laterally and vertically monitored, using the adequate raw data (reference navaid, altimeter).
– Lateral and vertical managed guidance (FINAL APP) in IMC conditions can be used, provided the following conditions are met :
  · The approach stored in the navigation database has been validated, and is approved by the operator for use of FINAL APP mode.
R This validation includes evaluation of the OAT effect on obstacle clearance : It is
R necessary to define a minimum OAT, below which selected vertical guidance must be
R used.
  · The final approach (FAF to runway or MAP), as extracted from the navigation database and inserted in the primary F-PLN including altitude constraints, is not revised by the crew.
  · Before starting the approach, the crew must check the lateral and the vertical FM F-PLN against the published approach chart, using the MCDU and ND.
  · The approach trajectory is laterally and vertically intercepted, before the FAF, or equivalent waypoint in the FM F-PLN, so that the aircraft is correctly established on the final approach course before starting the descent.
  · The final approach is laterally and vertically monitored, using the appropriate raw data (navaids, distance to the runway or MAP, altitude, FPV).

R *Note : For additional information on recommended flight crew procedures, and on*
R *navigation database flight path validation, refer to the FCOM Bulletin N° 10 and*
R *the FMGS Pilot's Guide (4.02.20 and 4.05.70).*

If the FM/GPS POS DISAGREE ECAM caution is triggered during the approach, use selected guidance to continue the approach with radio navaid raw data.
If GPS PRIMARY is lost, NAV and FINAL APP mode can be used to continue the approach, provided the radio navaid raw date indicates the correct navigation.

APPROACH GUIDANCE FOR RNAV APPROACH

Two different approach strategies are available to perform RNAV approaches :

1. Lateral guidance, managed by the FM, and vertical guidance selected by the crew : NAV-FPA (or NAV-V/S) modes.
   This strategy applies, when LNAV ONLY (Lateral Navigation only) RNAV approach is intended.
2. Lateral and vertical guidance, managed by the FM : FINAL APP mode.
   This strategy applies, when LNAV/VNAV (Lateral and Vertical Navigation) RNAV approach is intended.
   In all cases, the recommended flying reference is FPV, which should be selected during the initial approach.
   RNAV approach can be performed, provided :
   - The approach stored in the navigation database has been validated, and is approved by the operator.
     This validation includes evaluation of the OAT effect on obstacle clearance : It is necessary to define a minimum OAT, below which selected vertical guidance must be used.
   - The final approach (FAF to runway or MAP), as extracted from the navigation database and inserted in the primary F-PLN including altitude constraints, is not revised by the crew.
   - Before starting the approach, the crew must check the lateral and the vertical FM F-PLN against the published approach chart, using the MCDU and ND.
   - Before starting the approach, two navigation systems must be operative : 2 FMGS and 2 sensors (2 GPS, 2 DME, 2 VOR as appropriate).
   - The approach trajectory is laterally and vertically intercepted, before the FAF, or equivalent waypoint in the FM F-PLN, so that the aircraft is correctly established on the final approach course before starting the descent.
   - The final approach is laterally and vertically monitored, using the appropriate raw data (distance to the runway, altitude, FPV).

Note : For additional information on recommended flight crew procedures, and on navigation database flight path validation, refer to the FCOM Bulletin N° 10 and the FMGS Pilot's Guide (4.02.20 and 4.05.70).

R **For RNAV approach without GPS PRIMARY**

R Before starting the approach, check FM position accuracy with radio navaid raw data.
R Check, in addition, that HIGH accuracy is displayed on the MCDU with the specified RNP
R value.
R If HIGH accuracy is lost on one FMGC, the approach can be continued with AP/FD
R associated to the other FMGC.
R If HIGH accuracy is lost on both FMGCs, discontinue the approach.

APPROACH GUIDANCE FOR LOC AND LOC B/C NON PRECISION APPROACHES

The Standard Operating Procedure of this section can be used for flying LOC or LOC B/C approaches, provided the following approach guidance items are observed.
The FM NAV mode can be used down to LOC or LOC B/C interception.
For LOC or LOC B/C intermediate and final approach, use the LOC or LOC B/C AP/FD mode for lateral navigation, associated with the FPA (or V/S) for vertical navigation.
Vertical navigation must be monitored using raw data (altimeter, distance to the runway given by radio-navaid).
The VDEV indication on the PFD must be disregarded, since it may be incorrect if the MAP is located before the runway threshold.

APPROACH SPEED TECHNIQUE

In all cases, the crew should use managed speed.
The standard speed technique is to make a stabilized approach using AP/FD and A/THR : The aircraft intercepts the final descent path in landing configuration, and at VAPP. For this purpose, the flight crew should insert VAPP as a speed constraint at the FAF.
If the operator adopts a decelerated approach technique and the crew uses managed guidance, the aircraft should intercept the final descent path at S speed in CONF 1.

R The objective is to be stabilized on the final descent path thrust above idle, in the landing
R configuration at 1000 feet.
R To be stabilized, all of the following conditions must be achieved prior to, or upon, reaching
R this stabilization height :
R – The aircraft is on the correct lateral flight plan,
R – The aircraft is in the desired landing configuration,
R – The thrust is stabilized above idle, to maintain the target speed on the desired descent
R path,
R – No excessive flight parameter deviation.
R If the aircraft is not stabilized on the approach and in landing configuration, at 1000 feet in
R instrument conditions, or at 500 feet in visual conditions, or as restricted by airline
R policy/regulations, a go-around must be initiated.

For RNAV approach with GPS PRIMARY

Unless an instrument approach procedure, not requiring GPS PRIMARY, is available at destination or destination alternate (and at required takeoff alternate, and enroute alternate), the GPS PRIMARY availability must be verified prior to flight.
RAIM is available worldwide, if 24 or more GPS satellites are operative.
If the number of GPS satellites is 23, check RAIM availability, using the approved version of the Honeywell ground-based prediction software.
If the number of GPS satellites is 22 or less, the GPS PRIMARY availability cannot be checked prior to flight. RAIM availability can be checked in flight, using the PREDICTIVE GPS MCDU page.
Before starting the approach, check that GPS PRIMARY is available on both MCDUs.
If the GPS PRIMARY LOST indication appears on the ND during the approach, discontinue the approach, unless :

- For RNAV approach not requiring GPS, HIGH accuracy is displayed on the MCDU with the appropriate RNP value.
- If GPS PRIMARY is lost on only one FMGC, the approach can be continued, using the AP/FD associated to the other FMGC.

If the FM/GPS POS DISAGREE ECAM caution is triggered during the approach, discontinue the approach.

For RNAV approach without GPS PRIMARY

Before starting the approach, check FM position accuracy with radio navaid raw data.
Check, in addition, that HIGH accuracy is displayed on the MCDU with the specified RNP value.
If HIGH accuracy is lost on one FMGC, the approach can be continued with the AP/FD associated to the other FMGC.
If HIGH accuracy is lost on both FMGCs, discontinue the approach.

APPROACH GUIDANCE FOR LOC AND LOC B/C NON PRECISION APPROACHES

The Standard Operating Procedure of this section can be used for flying LOC or LOC B/C approaches, provided the following approach guidance items are observed.
The FM NAV mode can be used down to LOC or LOC B/C interception.
For LOC or LOC B/C intermediate and final approach, use the LOC or LOC B/C AP/FD mode for lateral navigation, associated with the FPA (or V/S) for vertical navigation.
Vertical navigation must be monitored using raw data (altimeter, distance to the runway given by radio-navaid).
The VDEV indication on the PFD must be disregarded, since it may be incorrect if the MAP is located before the runway threshold.

APPROACH SPEED TECHNIQUE

In all cases, the crew should use managed speed.
The standard speed technique is to make a stabilized approach using AP/FD and A/THR : The aircraft intercepts the final descent path in landing configuration, and at VAPP. For this purpose, the flight crew should insert VAPP as a speed constraint at the FAF.
If the operator adopts a decelerated approach technique and the crew uses managed guidance, the aircraft should intercept the final descent path at S speed in CONF 1.

R The objective is to be stabilized on the final descent path thrust above idle, in the landing
R configuration at 1000 feet.
R To be stabilized, all of the following conditions must be achieved prior to, or upon, reaching
R this stabilization height :
R – The aircraft is on the correct lateral flight plan,
R – The aircraft is in the desired landing configuration,
R – The thrust is stabilized above idle, to maintain the target speed on the desired descent
R path,
R – No excessive flight parameter deviation.
R If the aircraft is not stabilized on the approach and in landing configuration, at 1000 feet in
R instrument conditions, or at 500 feet in visual conditions, or as restricted by airline
R policy/regulations, a go-around must be initiated.

INITIAL APPROACH

– **ENG START selector . . . . . AS RQRD**
Select IGN if the runway is covered with standing water, or heavy rain, or if severe turbulence is expected in the approach or go-around area.

– **SEATBELTS . . . . . ON/AUTO**

– **APPROACH PHASE . . . . . ACTIVATE**
· In NAV mode, the APPR phase automatically activates at the DECEL pseudo waypoint.
· In HDG or TRK mode, manually activate the APPR phase on the PERF APPR page, when the distance to land is approximately 15 NM.

– **POSITIONING . . . . . MONITOR**
· In NAV mode, use VDEV information on the PFD and PROG page.
· In HDG or TRK mode, use the energy circle displayed on ND, representing the required distance to land.

– **MANAGED SPEED . . . . . CHECK**
If the ATC requires a particular speed, use selected speed. When the ATC speed constraint no longer applies, return to managed speed.

– **SPEEDBRAKES . . . . . AS RQRD**

– **NAVIGATION ACCURACY . . . . . MONITOR**
If the approach is stored in the navigation database, determine the strategy to be used for the final approach, according to the table below :

R

NAVIGATION ACCURACY	Approach guidance	ND		AP/FD mode	TERR pushbutton
		PF	PNF		
NAV ACCUR HIGH	Managed***	ARC or ROSE NAV * With navaid raw data		NAV-FPA or APP-NAV/ FINAL ***	ON
NAV ACCUR LOW and NAV ACCURACY check ≤ 1NM					
NAV ACCUR LOW and NAV ACCURACY > 1 NM	Selected	ROSE VOR **	ARC or ROSE NAV or ROSE VOR ** With navaid raw data	TRK-PFA	OFF
Aircraft flying within unreliable radio navaid area					

(*) For VOR approaches, one pilot may select ROSE VOR.
(**) For LOC approaches, select ROSE ILS.
(***) Managed vertical guidance can be used, provided the approach coding in the navigation database has been validated.

R *Note : 1. During approach in overlay to a conventional radio navaid procedure, monitor raw*
R *data. If raw data indicates unsatisfactory managed guidance, revert to selected*
R *guidance.*
2. The pilot can continue to fly a managed approach, after receiving a NAV ACCUR DOWNGRADED message, if raw data indicates that the guidance is satisfactory.

– **RADAR TILT . . . . . ADJUST**
Increase tilt, as required (+ 3° to + 4°).

– **APPROACH CHECKLIST . . . . . PERFORM**

INITIAL APPROACH

– **ENG START selector . . . . . AS RQRD**
Select IGN if the runway is covered with standing water, or heavy rain, or if severe turbulence is expected in the approach or go-around area.

– **SEATBELTS . . . . . ON/AUTO**

– **APPROACH PHASE . . . . . ACTIVATE**
· In NAV mode, the APPR phase automatically activates at the DECEL pseudo waypoint.
· In HDG or TRK mode, manually activate the APPR phase on the PERF APPR page, when the distance to land is approximately 15 NM.

– **POSITIONING . . . . . MONITOR**
· In NAV mode, use VDEV information on the PFD and PROG page.
· In HDG or TRK mode, use the energy circle displayed on ND, representing the required distance to land.

– **MANAGED SPEED . . . . . CHECK**
If the ATC requires a particular speed, use selected speed. When the ATC speed constraint no longer applies, return to managed speed.

– **SPEEDBRAKES . . . . . AS RQRD**

– **NAVIGATION ACCURACY . . . . . MONITOR**

· When GPS PRIMARY is available, no accuracy is required.

· When GPS PRIMARY is lost, check the PROG page to ensure that the required navigation accuracy is appropriate to the phase of flight. Perform a navigation accuracy check (as described in 3.03.15).

If the approach is stored in the navigation database, determine the strategy to be used for the final approach, according to the table below :

R

NAVIGATION ACCURACY	Approach guidance	ND		AP/FD mode	TERR pushbutton
		PF	PNF		
GPS PRIMARY NAV ACCUR HIGH NAV ACCUR LOW and NAV ACCURACY check ≤ 1NM	Managed***	ARC or ROSE NAV * With navaid raw data		NAV-FPA or APP-NAV/ FINAL ***	ON
GPS PRIMARY LOST and NAV ACCUR LOW and NAV ACCURACY check > 1 NM	Selected	ROSE VOR **	ARC or ROSE NAV or ROSE VOR ** With navaid raw data	TRK-PFA	OFF
GPS PRIMARY LOST and aircraft flying within unreliable radio navaid area					

(*) For VOR approaches, one pilot may select ROSE VOR.
(**) For LOC approaches, select ROSE ILS.
(***) Managed vertical guidance can be used, provided the approach coding in the navigation database has been validated.

R *Note : 1. During approach in overlay to a conventional radio navaid procedure, monitor raw*
R *data. If raw data indicates unsatisfactory managed guidance, revert to selected*
R *guidance.*
2. The pilot can continue to fly a managed approach, after receiving a NAV ACCUR DOWNGRADED message, if raw data indicates that the guidance is satisfactory.

– **RADAR TILT . . . . . ADJUST**

Increase tilt, as required (+ 3° to + 4°).

– **APPROACH CHECKLIST . . . . . PERFORM**

INTERMEDIATE/FINAL APPROACH

R ● **For RNAV approach :**

R – **RNP for approach** . . . . . **CHECK/ENTER**

R – **HIGH accuracy** . . . . . **CHECK**

R *Note : RNAV approach without GPS is subject to a specific operational approval.*

● **For approach in managed vertical guidance :**

– **APPR pushbutton on FCU** . . . . . **PRESS**
Once cleared for the approach, press the pushbutton when flying towards the FAF. Check that APPR NAV is engaged, FINAL is armed, and the VDEV scale is on the PFD.

Note : For instructions for switching from a non ILS to an ILS approach, see the FMGS pilot's guide. (Refer to 4.05.70)

AT GREEN DOT SPEED

– **ORDER** . . . . . **"FLAPS 1"**

– **FLAPS 1** . . . . . **SELECT**

– **CONFIRM/ANNOUNCE** . . . . . **"FLAPS 1"**

– **TCAS Mode Selector** . . . . . **TA OR TA/RA**
· See ILS approach (Refer to 3.03.18)

– **ND DISPLAY** . . . . . **SELECT RANGE/MODE**

AT S SPEED

– **ORDER** . . . . . **"FLAPS 2"**

– **FLAPS 2** . . . . . **SELECT**

– **CONFIRM/ANNOUNCE** . . . . . **"FLAPS 2"**

WHEN FLAPS ARE AT 2

– **ORDER** . . . . . **"GEAR DOWN"**

– **L/G DOWN** . . . . . **SELECT**

– **GROUND SPOILERS** . . . . . **ARM**

– **AUTO BRK** . . . . . **AS RQRD**
Use of the autobrake is recommended.
The use of MAX mode is not recommended at landing.
On short or contaminated runways, use MED mode.
On long and dry runways, LO mode is recommended.

Note : If, on very long runways, the pilot anticipates that braking will not be needed, autobrake use is unnecessary.

Firmly press the appropriate pushbutton, depending on the runway length and condition, and check that the related ON light comes on.

– **CONFIRM/ANNOUNCE** . . . . . **"GEAR DOWN"**

WHEN LANDING GEAR IS DOWN

– **ORDER** . . . . . **"FLAPS 3"**

– **FLAPS 3** . . . . . **SELECT**
· Select FLAPS 3 below VFE.

– **CONFIRM/ANNOUNCE** . . . . . **"FLAPS 3"**

– **ECAM WHEEL page** . . . . . **CHECK**
· The ECAM WHEEL page appears below 800 feet, or at landing gear extension.
· Check for three landing gear green indications.

R ● **If residual pressure is indicated on the ECAM WHEEL page and/or the triple**
R **indicator :**

R – **RESIDUAL BRAKING PROC** . . . . . **APPLY**

INTERMEDIATE/FINAL APPROACH

R ● **For RNAV approach :**

R – **GPS 1+2 on GPS MONITOR page . . . . . CHECK BOTH IN NAV**

R – **GPS PRIMARY on PROG page . . . . . CHECK AVAILABLE**

R ● **If GPS PRIMARY is not available**

R – **RNP for approach . . . . . CHECK/ENTER**

R – **HIGH accuracy . . . . . CHECK**

R *Note : RNAV approach without GPS is subject to a specific operational approval.*

● **For approach in managed vertical guidance :**

– **APPR pushbutton on FCU . . . . . PRESS**
Once cleared for the approach, press the pushbutton when flying towards the FAF. Check that APPR NAV is engaged, FINAL is armed, and the VDEV scale is on the PFD.

Note : For instructions for switching from a non ILS to an ILS approach, see the FMGS pilot's guide. (Refer to 4.05.70)

AT GREEN DOT SPEED

– **ORDER . . . . . "FLAPS 1"**

– **FLAPS 1 . . . . . SELECT**

– **CONFIRM/ANNOUNCE . . . . . "FLAPS 1"**

– **TCAS Mode Selector . . . . . TA OR TA/RA**
· See ILS approach (Refer to 3.03.18)

– **ND DISPLAY . . . . . SELECT RANGE/MODE**

AT S SPEED

– **ORDER . . . . . "FLAPS 2"**

– **FLAPS 2 . . . . . SELECT**

– **CONFIRM/ANNOUNCE . . . . . "FLAPS 2"**

WHEN FLAPS ARE AT 2

– **ORDER** . . . . . **"GEAR DOWN"**

– **L/G DOWN** . . . . . **SELECT**

– **GROUND SPOILERS** . . . . . **ARM**

– **AUTO BRK** . . . . . **AS RQRD**
Use of the autobrake is recommended.
The use of MAX mode is not recommended at landing.
On short or contaminated runways, use MED mode.
On long and dry runways, LO mode is recommended.

Note : If, on very long runways, the pilot anticipates that braking will not be needed, autobrake use is unnecessary.

Firmly press the appropriate pushbutton, depending on the runway length and condition, and check that the related ON light comes on.

– **CONFIRM/ANNOUNCE** . . . . . **"GEAR DOWN"**

WHEN LANDING GEAR IS DOWN

– **ORDER** . . . . . **"FLAPS 3"**

– **FLAPS 3** . . . . . **SELECT**
· Select FLAPS 3 below VFE.

– **CONFIRM/ANNOUNCE** . . . . . **"FLAPS 3"**

– **ECAM WHEEL page** . . . . . **CHECK**
· The ECAM WHEEL page appears below 800 feet, or at landing gear extension.
· Check for three landing gear green indications.

– **ORDER** . . . . . **"FLAPS FULL"**

– **FLAPS FULL** . . . . . **SELECT**
· Select FLAPS FULL below VFE. VFE – 15 knots is recommended to minimize flaps wear.
· Retract the speedbrakes before selecting FLAPS FULL to avoid an unexpected pitch down when the speedbrakes automatically retract.

– **CONFIRM/ANNOUNCE** . . . . . **"FLAPS FULL"**
· Check deceleration towards VAPP.
R · Check correct TO waypoint on the ND.

MANAGED VERTICAL GUIDANCE	SELECTED VERTICAL OR SELECTED LATERAL AND VERTICAL GUIDANCE
. **After the FAF :** **– FINAL APP . . . . . CHECK** Check FINAL APP green on the FMA. **– GO AROUND ALTITUDE . . . . . SET** Set, when below the go-around altitude.	. **At FAF :** **– FPA for final approach . . . . . SET** . **After the FAF :** **– GO AROUND ALTITUDE . . . . . SET** Set, when below the go-around altitude.
– POSITION/FLIGHT PATH . . . . MONITOR · **For approach in overlay to a conventional radio navaid procedure :** Use radio navaid raw data and altitude to monitor the lateral and vertical navigation. If the navigation is unsatisfactory, revert to selected guidance. In particular, monitor the vertical guidance, using altitude indication versus radio navaid position, and be prepared to revert to NAV-FPA, if the vertical guidance is unsatisfactory. · **For RNAV approach :** Monitor VDEV and FPV (on the PFD) and XTK error (on the ND). Use altitude indication versus distance to the runway to monitor the vertical navigation. If the vertical guidance is unsatisfactory, revert to NAV/FPA or consider the go-around. If the lateral guidance is unsatisfactory, perform a go-around.	**– POSITION/FLIGHT PATH . . MONITOR/ADJUST** · **For approach in overlay to a conventional radio navaid procedure :** Use radio navaid raw data to monitor the lateral navigation. Using altitude indication versus radio navaid position, adjust the FPA, as necessary, to follow the published descent profile, taking into account the minimum altitudes. Do not use the FMGC VDEV on the PFD. If the lateral navigation is unsatisfactory, revert to TRK/FPA. · **For RNAV approach :** Monitor XTK error on ND. Using altitude indication versus distance to the runway, adjust the FPA as necessary to follow the published descent profile, taking into account the minimum altitudes. If the lateral guidance is unsatisfactory, perform a go-around.

– **A/THR** . . . . . **CHECK IN SPEED MODE OR OFF**

– **WING ANTI ICE** . . . . . **OFF**
Switch WING ANTI ICE ON, only in severe icing conditions.

– **EXTERIORS LIGHTS** . . . . . **SET**
Set NOSE switch to TAXI, RWY TURN OFF switch to ON, and LAND switch to ON.

– **SLIDING TABLE** . . . . . **STOW**

– **LDG MEMO** . . . . . **CHECK NO BLUE LINE**

– **CABIN REPORT** . . . . . **OBTAIN**

– **CABIN CREW** . . . . . **ADVISE**

– **LANDING CHECKLIST** . . . . . **COMPLETE**

– **FLIGHT PARAMETERS** . . . . . **CHECK**
PF announces any FMA modification.
PNF calls out :

R – "SPEED", when the speed goes below Vapp – 5 knots, or goes above the speed target + 10 knots.
R – "SINK RATE", when V/S is greater than – 1000 feet/minute.
R – "BANK", when the bank angle goes above 7 degrees.
R – "PITCH", when the pitch attitude goes below 0 degrees, or goes above + 10 degrees.
R – "COURSE", when greater than 1/2 dot (VOR) or 5 degrees (ADF).
R – "_ FT HIGH (LOW)" at altitude checkpoints.

R ● **AT ENTERED MDA/MDH + 100 FT :**

– **MONITOR or ANNOUNCE . . . . . "ONE HUNDRED ABOVE"**

R ● **AT ENTERED MDA/MDH**

– **MONITOR or ANNOUNCE . . . . . "MINIMUM"**

● **If ground references are visible :**

– **ANNOUNCE . . . . . "LANDING"**

– **AP . . . . . OFF**
Continue, as with a visual approach (Refer to 3.03.20).

● **If ground references are not visible :**

– **ANNOUNCE . . . . . "GO AROUND/FLAPS"**
Begin a go-around.

Note : 1. In managed guidance (FINAL APP mode engaged), when the aircraft reaches MDA (MDH) – 50 feet or MAP (whichever occurs first), the autopilot automatically disengages.

2. In selected guidance, if ground references are not visible when the aircraft reaches MDA, the pilot should make an immediate go-around. However, if the distance to the runway is not properly assessed, a step descent approach may be considered, and a level-off at MDA may be performed while searching for visual references. If the pilot has no visual reference at MAP, at the latest, he must begin a go-around.

CIRCLING APPROACH

For a circling approach, the flight crew should prepare the flight plan as follows :
Primary flight plan : Introduce the instrument approach
Secondary flight plan : – Copy the ACTIVE F-PLN
– Revise the landing runway
The aircraft should circle in CONF 3 at F speed.
Upon reaching MDA/MDH :
– Push the ALT pushbutton.
– Search for visual references.

- **If the flight crew finds no visual reference :**

  – **AT MAP : Initiate go-around**

- **If the flight crew finds sufficient visual references :**

  – **Select TRK for downwind**

  – **Early on downwind : Activate SEC F-PLN**

  CAUTION
  The PNF should activate the SEC F-PLN.
  The PF should maintain visual contact during all the circling.

  – **Disengage autopilot before reaching the base leg.**

LOW VISIBILITY CIRCLING APPROACH

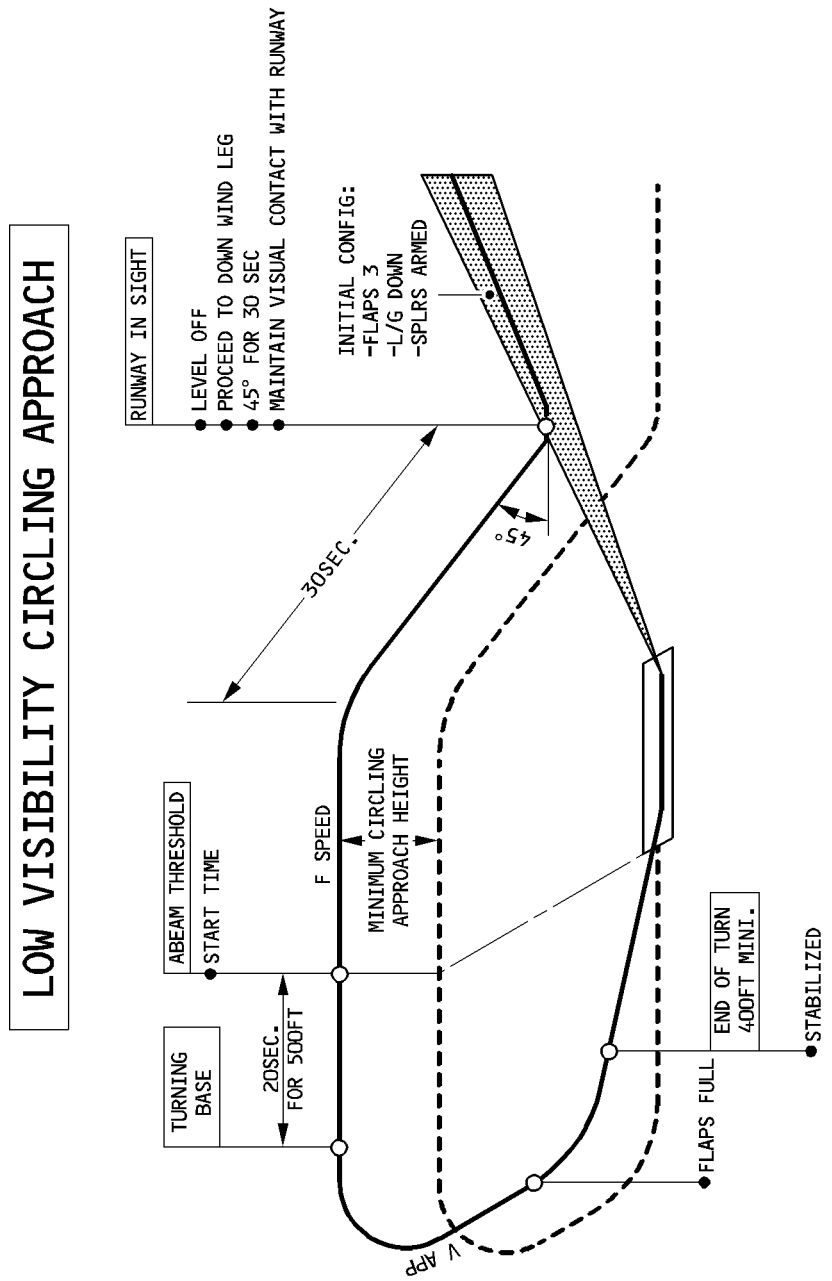

GFC5-03-0319-013-A001AA

OBJECTIVE

Perform the approach on a nominal 3 degree glideslope using visual references. Approach to be stabilized by 500 feet AGL on the correct approach path, in the landing configuration, at VAPP.

Method :

- The autopilot is not used.
- Both FDs are off.
- FPV use is recommended.
- A/THR use is recommended with managed speed.

R Bear in mind the possible risk of optical illusions due to hindered night vision.

VISUAL CIRCUIT

INITIAL/INTERMEDIATE APPROACH

The flight plan selected on the MCDU should include the selection of the landing runway. The downwind leg might also be part of the Flight plan. This may be a useful indication of the aircraft position in the circuit on the ND.

However, visual references must be used.

Therefore, at the beginning of the downwind leg :

- **Manually ACTIVATE APPR.**
- **Select FDs to OFF.**
- **Select TRK-FPA to display FPV.**
- **Check A/THR active in speed mode.**
  Downwind leg extension 45 seconds (± wind correction)
  Turn into base leg with a maximum of 30° bank. Descent with appropriate FPA, in FLAPS 2, at F speed.

FINAL APPROACH

- The speed trend arrow and FPV help the flight crew make timely and correct thrust settings (if in manual thrust), and approach path corrections. Avoid descending through the correct approach path with idle thrust. (Late recognition of this situation without a prompt thrust increase may lead to considerable speed decay and altitude loss).
- Have the aircraft "stabilized" by 500 feet AGL, on the correct approach path at VAPP (or ground speed mini) with the appropriate thrust applied. If not stabilized, a go-around should be considered.
- Avoid any tendency to "duck under" in the late stages of the approach.
- Avoid destabilizing the approach in the last 100 feet, in order to have the best chance of performing a good touchdown at the desired position.

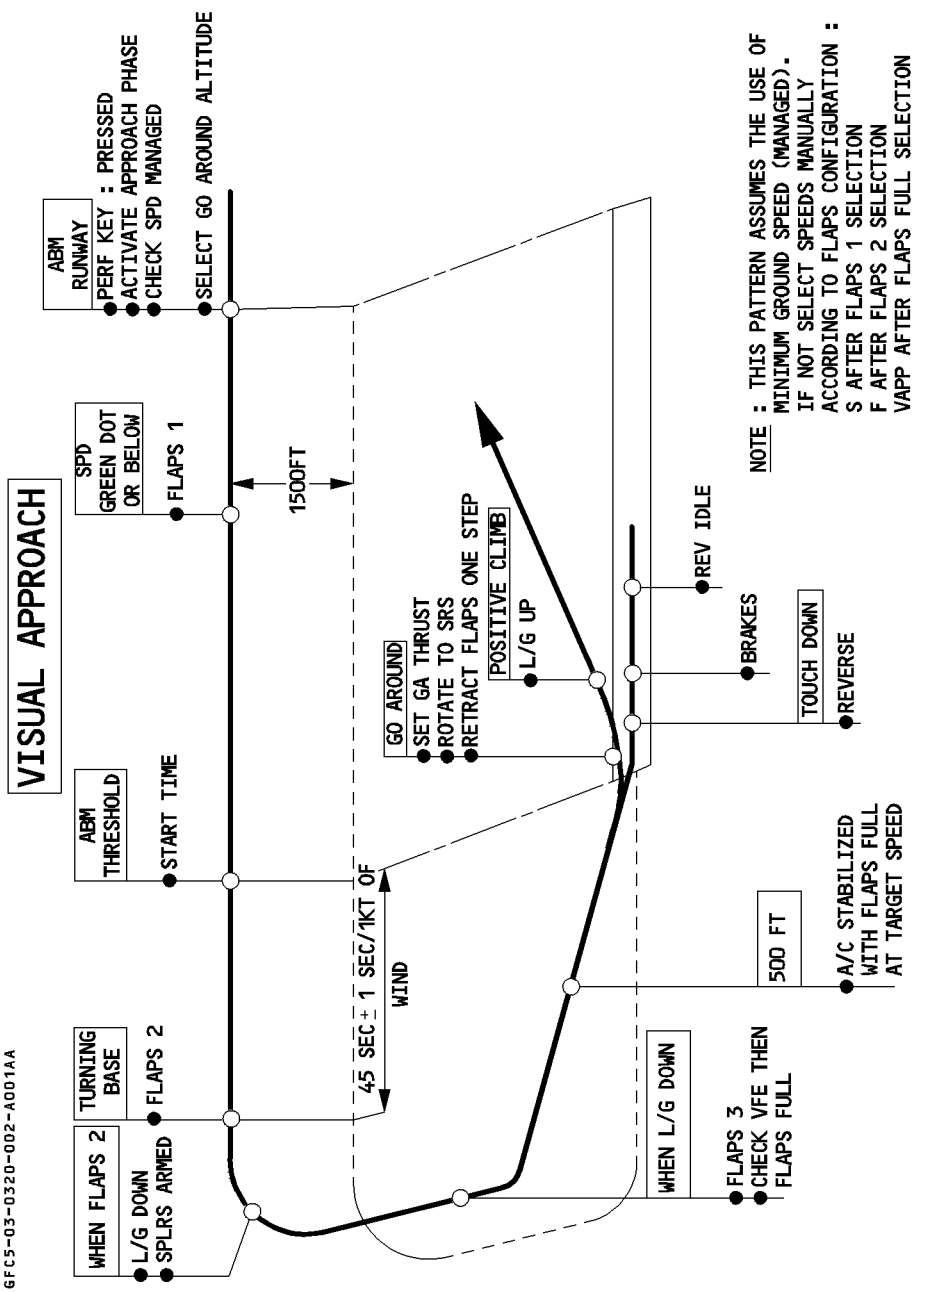
VISUAL APPROACH
ABM
RUNWAY
PERF KEY : PRESSED
ACTIVATE APPROACH PHASE
CHECK SPD MANAGED
SELECT GO AROUND ALTITUDE
SPD
GREEN DOT
OR BELOW
FLAPS 1
1500FT
ABM
THRESHOLD
START TIME
GO AROUND
SET GA THRUST
ROTATE TO SRS
RETRACT FLAPS ONE STEP
POSITIVE CLIMB
L/G UP
REV IDLE
BRAKES
TOUCH DOWN
REVERSE
NOTE : THIS PATTERN ASSUMES THE USE OF
MINIMUM GROUND SPEED (MANAGED).
IF NOT SELECT SPEEDS MANUALLY
ACCORDING TO FLAPS CONFIGURATION :
S AFTER FLAPS 1 SELECTION
F AFTER FLAPS 2 SELECTION
VAPP AFTER FLAPS FULL SELECTION
45 SEC ± 1 SEC/1KT OF
WIND
TURNING
BASE
FLAPS 2
WHEN FLAPS 2
L/G DOWN
SPLRS ARMED
500 FT
A/C STABILIZED
WITH FLAPS FULL
AT TARGET SPEED
WHEN L/G DOWN
FLAPS 3
CHECK VFE THEN
FLAPS FULL
GFCS-03-0320-002-A001AA

PRECISION APPROACH

(Refer to 4.05.70).

R

ILS FINAL APPROACH AND LANDING GEOMETRY

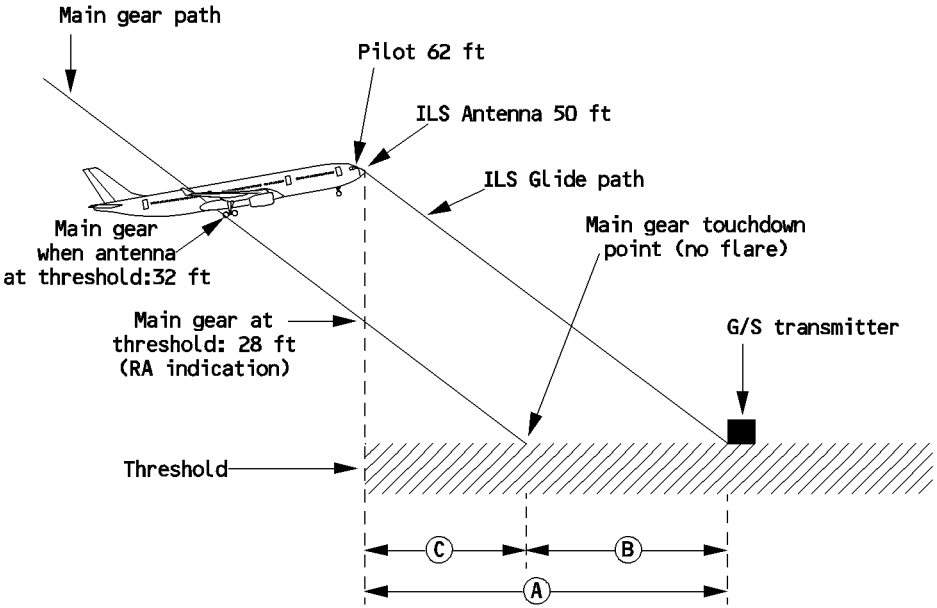

CONDITIONS :	GLIDE PATH (°)	G / S TRANS (A)	(B)	TOUCHDOWN POINT (C)
- FLAPS FULL - ILS ANTENNA AT 50 ft AT THRESHOLD - NO FLARE - PITCH ANGLE : 3.7°	2°5	348 m 1142 ft	153 m 502 ft	195 m 640 ft
	3°	291 m 955 ft	132 m 433 ft	159 m 522 ft

GFC5-03-0322-001-A001AA

R

MINIMUM VISUAL GROUND SEGMENTS (Flare phase)

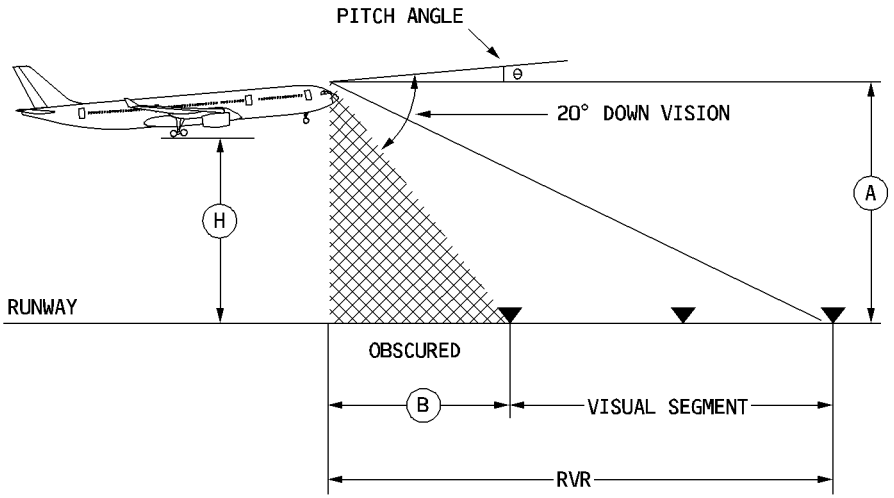

	CAT III		CAT II
(H)	15 ft (θ = 2°9)	50 ft (θ = 2°1)	100 ft (θ = 2°1)
VISUAL SEGMENT	60 m (197 ft)		120 m (394 ft)
(A)	44 ft	77 ft	127 ft
OBSCURED (B)	44 m (143 ft)	73 m (238 ft)	120 m (394 ft)
MINIMUM RVR	104 m (341 ft)	133 m (436 ft)	240 m (788 ft)

6FC5-03-0322-002-A001AA

R R *Note : This drawing illustrates that, for a CAT III landing (60 meters minimum visual segment), the minimum RVR is 104 meters at 15 feet.*

R

ILS FINAL APPROACH AND LANDING GEOMETRY

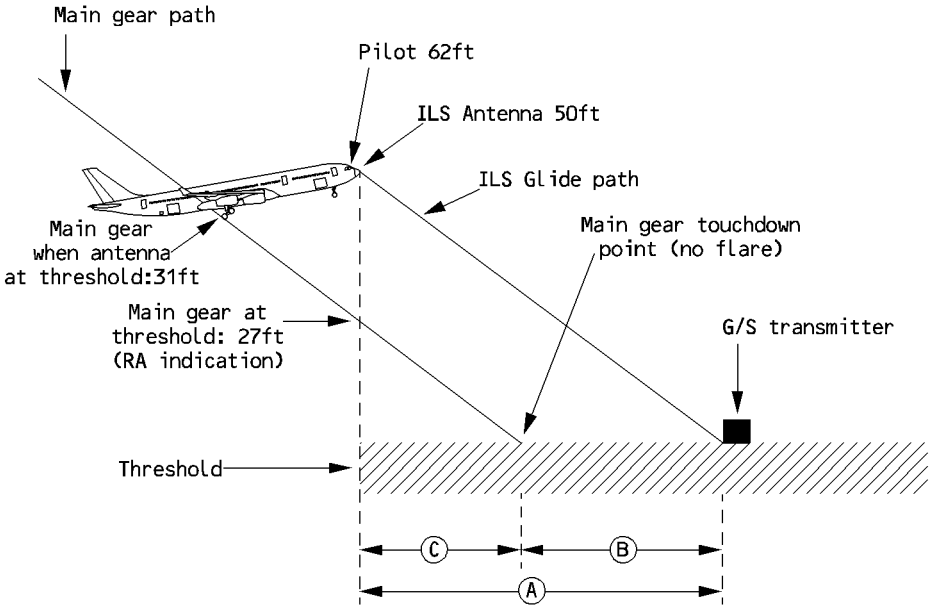

GFC5-03-0322-001-A100AA

CONDITIONS : - FLAPS FULL - ILS ANTENNA AT 50 ft AT THRESHOLD - NO FLARE - PITCH ANGLE : 5°	GLIDE PATH (°)	Ⓐ	Ⓑ	TOUCHDOWN POINT Ⓒ
	2°5	349 m 1145 ft	161 m 530 ft	185 m 615 ft
	3°	291 m 954 ft	140 m 457 ft	152 m 497 ft

R **MINIMUM VISUAL GROUND SEGMENTS (Flare phase)**

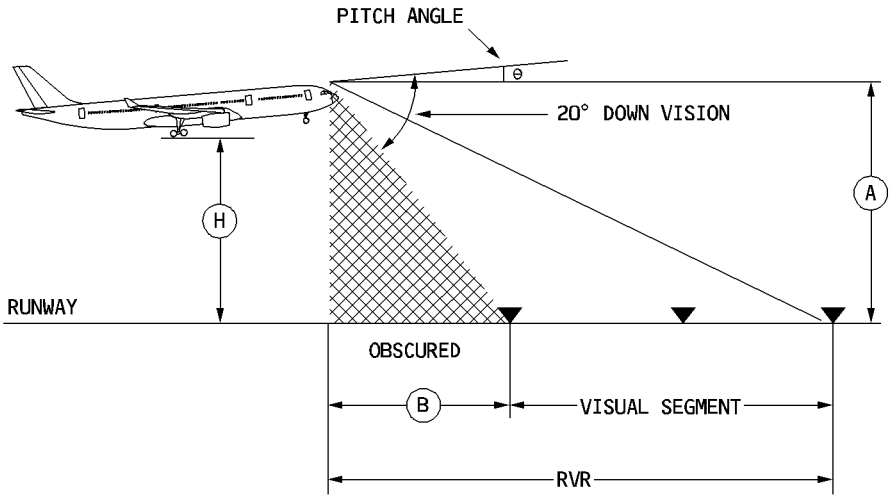

	CAT III		CAT II
(H)	15 ft (θ = 5°1)	50 ft (θ = 5°)	100 ft (θ = 5°)
VISUAL SEGMENT	60 m (197 ft)		120 m (394 ft)
(A)	47 ft	82 ft	132 ft
OBSCURED (B)	54 m (177 ft)	93 m (306 ft)	150 m (493 ft)
MINIMUM RVR	114 m (374 ft)	153 m (503 ft)	270 m (887 ft)

6FC5-03-0322-002-A100AA

R R *Note : This drawing illustrates that, for a CAT III landing (60 meters minimum visual segment), the minimum RVR is 114 meters at 15 feet.*

GROUND CLEARANCE DIAGRAM

R

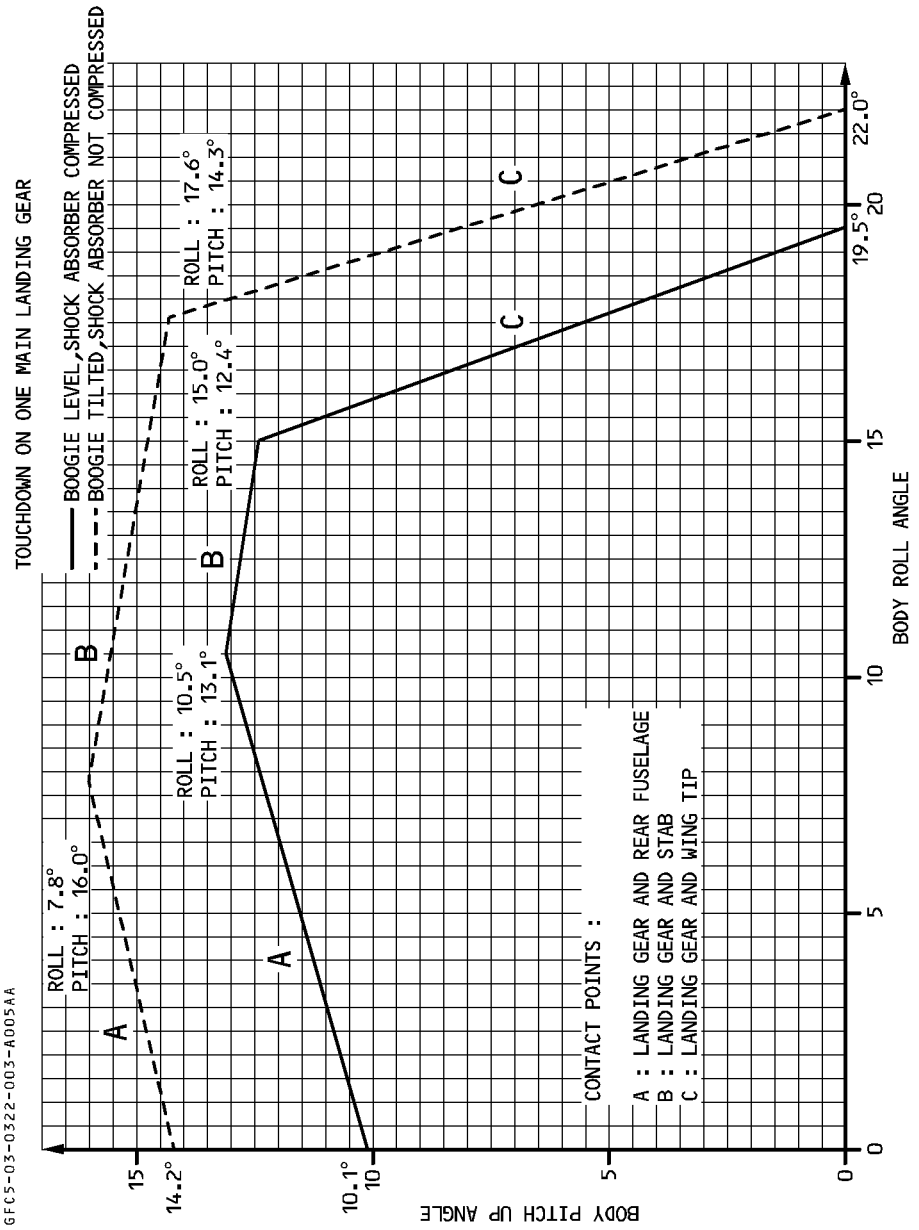

LANDING

The cockpit cut-off angle is 20 degrees.

● **At about 30 feet :**

– **FLARE** . . . . . **PERFORM**

R – **ATTITUDE** . . . . . **MONITOR**
R The PNF should monitor the attitude, and call out :
R – "PITCH, PITCH", if the pitch angle reaches 7.5°.
R – "BANK, BANK", if the bank angle reaches 7°.

– **THRUST levers** . . . . . **IDLE**
In manual landing conditions, the "RETARD" callout is generated at 20 feet RA, as a reminder. Start a gentle progressive flare, and allow the aircraft to touch down without prolonged float.

Crosswind landings

· The preferred technique is to use the rudder to align the aircraft with the runway heading, during the flare, whilst using lateral control to maintain the aircraft on the runway centerline.
· For a crosswind landing, routine use of into wind aileron is not recommended, because sidestick deflection commands the roll rate until touchdown.
In strong crosswind conditions, small amounts of lateral control may be used to maintain the wings level. This lateral stick input must be reduced to zero at first main landing gear touchdown.

Ground clearance

– Avoid flaring high.
R – A tailstrike occurs, if the pitch attitude exceeds : 10° (landing gear compressed) ; 14°
R (landing gear extended).
– A wingtip, or engine scrape occurs, if the roll angle exceeds 16.5°.

Derotation

Derotation should be started, as soon as the main wheels have touched down. In flare law, the aircraft will tend to nose down naturally, as the aft stick applied for flare is relaxed towards neutral. A comfortable nosewheel touchdown will be achieved, if the stick is maintained just aft of neutral during derotation. If brakes are applied with the nose high, the pilot must be prepared to use up to full backstick to restrain the nose down pitching moment.

GROUND CLEARANCE DIAGRAM

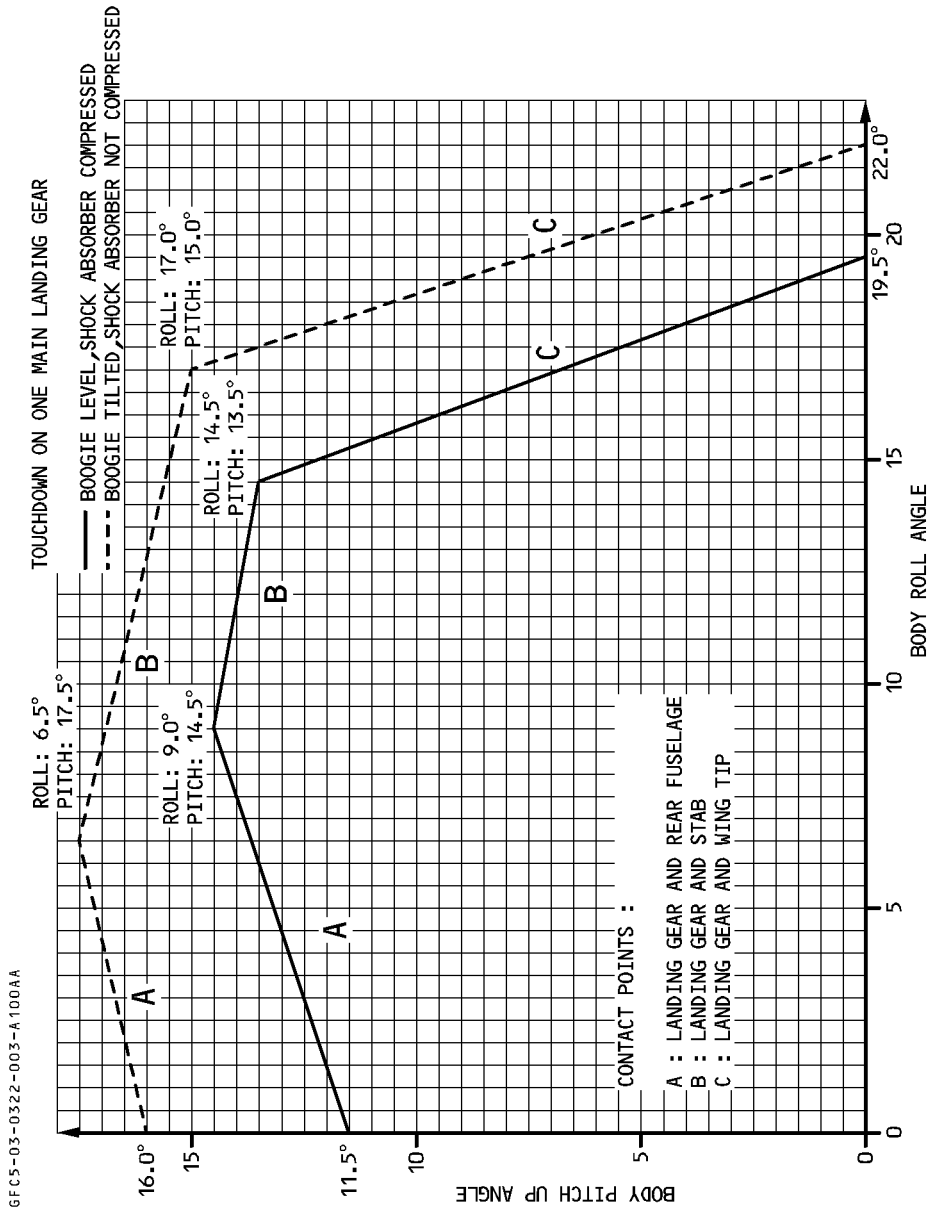

LANDING

The cockpit cut-off angle is 20 degrees.

● **At about 30 feet :**

– **FLARE** . . . . . **PERFORM**

R – **ATTITUDE** . . . . . **MONITOR**
R The PNF should monitor the attitude, and call out :
R – "PITCH, PITCH", if the pitch angle reaches 7.5°.
R – "BANK, BANK", if the bank angle reaches 7°.

– **THRUST levers** . . . . . **IDLE**
In manual landing conditions, the "RETARD" callout is generated at 20 feet RA, as a reminder. Start a gentle progressive flare, and allow the aircraft to touch down without prolonged float.

Crosswind landings

· The preferred technique is to use the rudder to align the aircraft with the runway heading, during the flare, whilst using lateral control to maintain the aircraft on the runway centerline.
· For a crosswind landing, routine use of into wind aileron is not recommended, because sidestick deflection commands the roll rate until touchdown.
In strong crosswind conditions, small amounts of lateral control may be used to maintain the wings level. This lateral stick input must be reduced to zero at first main landing gear touchdown.

Ground clearance

– Avoid flaring high.
R – A tailstrike occurs, if the pitch attitude exceeds : 11° (landing gear compressed) ; 16°
R (landing gear extended).
– A wingtip, or engine scrape occurs, if the roll angle exceeds 16.5°.

Derotation

Derotation should be started, as soon as the main wheels have touched down. In flare law, the aircraft will tend to nose down naturally, as the aft stick applied for flare is relaxed towards neutral. A comfortable nosewheel touchdown will be achieved, if the stick is maintained just aft of neutral during derotation. If brakes are applied with the nose high, the pilot must be prepared to use up to full backstick to restrain the nose down pitching moment.

– **REV** . . . . . **PULL**
· Pull to reverse idle at main landing gear touchdown (not before).
· When REV green indicated on ECAM select MAX REV.
· In case of engine failure, the use of the remaining reverser is recommended.
· If the airport regulations restrict the use of reversers, maintain reverse idle until taxi speed is reached.
· Lower the nose wheel without undue delay if MED is selected.
· Braking may be commenced before nose wheel is down if required for performance reasons, but when comfort is the priority it should be delayed until the nose wheel has touched down.
· During roll-out, sidestick inputs (either lateral or longitudinal) should be avoided. If directional control problems are encountered, reduce thrust to reverse idle until directional control is satisfactory.
· After reverse thrust is initiated, a full stop landing must be made.

– **GROUND SPOILERS** . . . . . **CHECK**
Check ground spoilers deployed after touch down on ECAM WHEEL page. Announce
R "Ground spoilers" then "Reverse green".

– **DIRECTIONAL CONTROL** . . . . . **ENSURE**
· Use rudder pedals for directional control
· Do not use nose wheel steering control handle before taxi speed is reached.

– **BRAKES** . . . . . **AS RQRD**
Monitor autobrake if on. If required use pedal braking.

● **At 70 knots :**

– **REVERSE levers** . . . . . **IDLE**

CAUTION

The use of high levels of reverse thrust at low airspeed should be avoided since the distortion of the air flow caused by gases re-entering the compressor can cause engine stalls which may result in excessive EGT.

● **At taxi speed :**

– **REVERSE levers . . . . . STOW**
Stow the reversers when taxi speed is reached and before leaving the runway.

CAUTION

On taxiways, the use of reversers, even restricted to idle thrust, may have the following effects :
– Fine sand and debris may be ingested which might be detrimental to both the engine and airframe systems.
– On snow covered areas, snow will be recirculated into the air inlet, which may result in engine flame out or roll back.Except in an emergency, reverse thrust should not be used to control aircraft speed while taxiing.

R ● **Before 20 kt :**
R
R – **AUTO BRK . . . . . DISENGAGE**
R Disengage the autobrake to avoid some brake jerks at low speed.

GO AROUND

Apply the following three actions simultaneously :

– **THRUST LEVERS** . . . . . **TOGA**

– **ANNOUNCE** . . . . . **"GO AROUND – FLAPS"**

– **ROTATION** . . . . . **PERFORM**
· Rotate the aircraft to achieve a positive rate of climb, and establish the required pitch attitude, as directed by SRS pitch command bar.
· Check and announce FMA : TOGA, SRS, GA TRK.

Note : The MCDU PERF page automatically switches to the GO AROUND phase.

– **FLAPS** . . . . . **RETRACT ONE STEP**

– **ANNOUNCE** . . . . . **"POSITIVE CLIMB"**

– **ORDER** . . . . . **"GEAR UP"**

– **L/G UP** . . . . . **SELECT**

– **CONFIRM/ANNOUNCE** . . . . . **"GEAR UP–FLAPS"**

Note : Consider retarding to CL detent, if TOGA thrust is not required.

– **NAV or HDG mode** . . . . . **SELECT**

Note : Go-around may be achieved with both AP engaged. Whenever any other mode engages AP 2 disengages.

● **At go-around thrust reduction altitude (LVR CLB flashing on FMA) :**

R – **THRUST LEVERS** . . . . . **CL**

- **At go-around acceleration altitude :**
  - **Monitor target speed increases to green dot.**
  - **If target speed does not increase to green dot :**
    - **FCU ALT . . . . . CHECK and PULL**
  - **Retract flaps on schedule.**

    Note : Consider the next step :
    - *Engage NAV mode, to follow the published missed approach procedure, or*
    - *Prepare for a second approach by selecting the ACTIVATE APP PHASE, and CONFIRM on the PERF page.*

AFTER LANDING

– **LAND LIGHTS . . . . . OFF**
Retract landing lights, unless they are needed.
R Set the STROBE lights to AUTO, when leaving the runway.

– **GROUND SPOILERS . . . . . DISARM**

– **FLAPS . . . . . RETRACT**
· Set the FLAP lever to position 0.
· If the approach was made in icing conditions, or if the runway was contaminated with slush or snow, do not retract the flaps until after engine shutdown, and after the ground crew has confirmed that flaps and slats are clear of obstructing ice.
· On ground, hot weather conditions may cause overheating to be detected around the bleed ducts in the wings, resulting in "AIR L(R) WING LEAK" warnings. Such warnings may be avoided during transit by keeping the Slats in Configuration 1, when the OAT is above 30°C.

– **ENG START selector . . . . . NORM**

– **ATC . . . . . STBY/OFF**
This is not applicable to transponder panels equipped with an AUTO position, if AUTO is selected.

– **TCAS Mode selector ◁ . . . . . STBY**
This is only applicable to transponder panels equipped with an AUTO position, if AUTO is selected.

– **ANTI ICE . . . . . AS RQRD**
If engine anti-ice is used, take care to control taxi speed, especially on wet or slippery surfaces (ground idle is increased).

– **APU . . . . . START**
APU START may be delayed until just prior to engine shutdown.

– **RADAR . . . . . OFF/STBY**

– **PREDICTIVE WINDSHEAR SYSTEM ◁ . . . . . OFF**
Switching the radar and predictive windshear system OFF after landing avoids risk of radiating persons at the gate area.

– **BRAKE TEMPERATURE . . . . . CHECK**

· Check brake temperature on the ECAM WHEEL page for discrepancies and high temperature.

· If brake fans are installed (◁) :

R Brake fans selection should be delayed for a minimum of about 5 minutes, or done just before stopping at the gate (whichever occurs first), to allow thermal equalization and stabilization, and thus avoid oxidation of brake surface hot spots.
However, when turnaround times are short, or brake temperatures are likely to exceed 500°C, use the brake fans, disregarding possible oxidation phenomenon.

· Refer to 3.04.32 for the brake temperature limitations requiring maintenance actions.

– **AFTER LANDING CHECKLIST . . . . . COMPLETE**

Ensure that the after landing checks are completed, once the aircraft has cleared the runway.

PARKING

– **PARKING BRAKE ACCU PRESS . . . . . CHECK**
The ACCU PRESS indication must be in the green band. In case of low accumulator pressure, chocks are required before engines shutdown.

– **PARKING BRK . . . . . ON**
· Above 500°C, parking brake application should be avoided, unless operationally necessary.

R – **ANTI-ICE . . . . . OFF**

– **APU BLEED . . . . . ON**
Select APU bleed ON just before engine shutdown to prevent engine exhaust fumes from entering the air conditioning.

– **ENG MASTER switch 1 and 2 . . . . . OFF**
· It is suggested that the engine be operated at, or near, idle for a 3–minute cooling period after landing, to minimize the potential for oil coking in the main engine-bearing compartment.
· A cooling period, between 90 seconds and three minutes, may be utilized at the airline's discretion, based on its experience.
· If APU is not available, set EXT PWR at ON before setting the ENG MASTER OFF.
· Check that engine parameters decrease.
· The DOOR/OXY page is displayed on the lower ECAM display.

– **GROUND CONTACT . . . . . ESTABLISH**
Establish ground communication
Check chocks in place.

– **SLIDE DISARMED . . . . . CHECK**
Check slides disarmed on the ECAM DOOR/OXY page. Warn the cabin crew, if any slide is not disarmed.

– **EXTERIOR LIGHTS . . . . . AS RQRD**
Switch off the BEACON switch, once both engines have obviously spooled down.

– **SEAT BELTS . . . . . OFF**

– **ELAPSED TIME (if applicable) . . . . . STOP**

– **FUEL PUMPS . . . . . OFF**

– **IRS PERFORMANCE . . . . . CHECK**
· Drift check
– Access the POSITION MONITOR page. Check that the drift does not exceed the following :

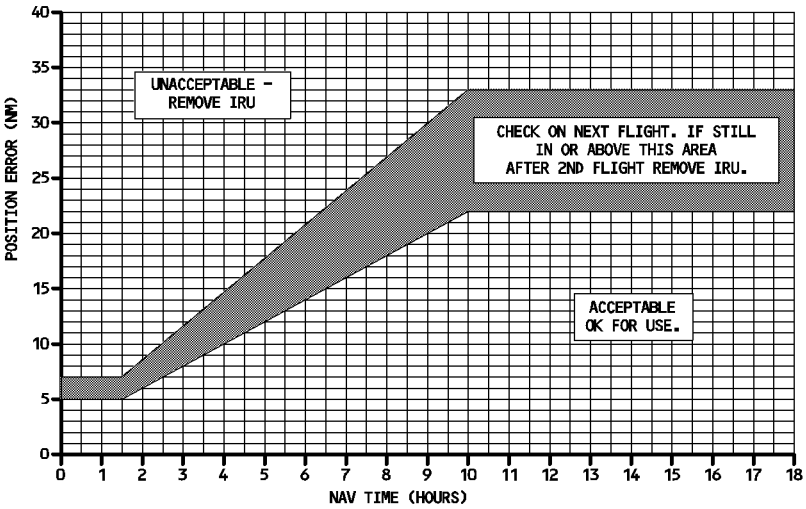

GFC5-03-0325-002-A001AA

· Residual ground speed check :
– Access the IRS page via the IRS MONITOR page :
* If the ground speed is above 15 knots : Report (The excessive deviation must be confirmed after two consecutive flights).
* If the ground speed is above 21 knots : Report (The IRU must be removed).

Note : On aircraft equipped with LITTON IRS, the ground speed check must be performed within the 2 minutes following aircraft stop. (Ground speed reset to 0 after 2 minutes).

R — **FUEL QUANTITY** . . . . . **CHECK**
R Check that the sum of the Fuel On Board and the Fuel Used is consistent with the Fuel
R On Board at departure. If an unusual discrepancy is found, maintenance action is due.

— **STATUS (ECAM Control panel)** . . . . . **DEPRESS**
— Check the STATUS page.
If MAINTENANCE status messages are displayed :
· At transit : Disregard.
· At main base, or at an airport where repairs can easily be made (at the end of the last flight of the day) : Report for maintenance analysis.

— **BRAKE FAN (◁)** . . . . . **OFF**
· Switch off, when not required.

— **PARKING BRAKE** . . . . . **AS RQRD**
· If the "BRAKES HOT" ECAM caution is displayed, the parking brake should be released after the chocks are in place.
Releasing the parking brake prevents the critical structures from being exposed to high temperature levels for an extended time. However, if operational conditions dictate (e.g. slippery tarmac), the parking brake may remain applied.

— **DUs** . . . . . **DIM**
Dim EFIS, ECAM and MCDU display units.

— **PARKING CHECKLIST** . . . . . **COMPLETE**

SECURING THE AIRCRAFT

Prior to performing this check, consideration should be given to COLD weather (Refer to 3.04.91)

– **PARKING BRAKE . . . . . CHECK ON**
Keep the parking brake on to reduce hydraulic leak rate in the brake accumulator.

– **OXYGEN CREW SUPPLY . . . . . OFF**

– **ADIRS (1 + 2 + 3) . . . . . OFF**
ADIRS should not be switched off during transits at latitudes above 70°N in order to avoid excessive alignment time.
After having switching off the ADIRS, wait at least 10 seconds before switching off the electrical supply to ensure that the ADIRS memorize the last data.

– **EXTERIOR LIGHTS . . . . . OFF**

– **GND SELECT CTL switch . . . . . AS RQRD**
· Should electrical power be required for crew or servicing personal, consider selecting the GND SELECT CTL switch in the forward cabin to the ON position prior to selecting aircraft power off.

– **APU BLEED . . . . . OFF**

– **EXT PWR . . . . . AS RQRD**

– **APU MASTER switch . . . . . OFF**
Switch off the APU after the passengers have disembarked.

– **EMER EXIT LT . . . . . OFF**

– **NO SMOKING . . . . . OFF**
Switching off the NO SMOKING signs permits the emergency batteries to be charged (provided external power is supplying the aircraft network).

– **BAT 1 and 2 and APU BAT . . . . . OFF**
R Wait until the APU flap is fully closed (about 2 minutes after the APU AVAIL light goes
R out) before switching off the APU battery. Switching the batteries off before the APU flap is closed may cause smoke in the cabin during the next flight.

– **SECURING THE AIRCRAFT CHECKLIST . . . . . COMPLETE**

COMMUNICATIONS AND STANDARD TERMS

Standard phraseology is essential to ensure effective crew communication. The phraseology should be concise and exact. The following Chapter lists the calls that should be used as standard. They supplement the callouts identified in the SOP.
These standard Airbus callouts are also designed to promote situational awareness, and to ensure crew understanding of systems and their use in line operation.

R CHECKLIST CALLOUTS

– "CHECK" : A command for the other pilot to check an item.
– "CHECKED" : A response that an item has been checked.
– "CROSSCHECKED" : A call verifying information from both pilots stations.

R If a checklist needs to be interrupted, announce : "HOLD CHECKLIST AT ___" and "RESUME
R CHECKLIST AT ___" for the continuation.
Upon completion of a checklist announce : "__CHECKLIST COMPLETE".

ACTIONS COMMANDED BY PF

The following commands do not necessarily initiate a guidance mode change, eg : selected to managed/managed to selected. The intent is to ensure clear, consistent, standard communication between crewmembers.
All actions performed on the FCU must be verified on the PFD/ND.

SET

The "SET" command means using an FCU knob to set a value, but not to change a mode. SET is accomplished by only rotating the appropriate selection knob. Example :
– "SET GO AROUND ALTITUDE__"
– "SET QNH __"
– "SET FL __"
– "SET HDG __"

MANAGE/PULL

The "MANAGE" command means pushing an FCU knob to engage, or arm, a managed mode or target.
The "PULL" command means pulling an FCU knob to engage, or arm, a selected mode or target. Example :

– "HDG 090 PULL"	(Heading knob is turned and pulled).
– MANAGE NAV	(Heading knob is pushed).
– "FL 190 PULL"	(Altitude knob is turned and pulled).
– "FL 190 MANAGE"	(Altitude knob is turned and pushed).
– SPEED 250 KTS PULL	(Speed knob is turned and pulled).
– MANAGE SPEED	(Speed knob is pushed).

Note : 1. If the value was previously set, there is no requirement to repeat the figure. Simply call e.g. HDG PULL : SPEED PULL : FL PULL
2. It is sometimes preferable to first pull the FCU knob before setting the value (e.g. a long turn).

The VS/FPA selector knob has no managed function. The standard calls for the use of this knob are as follows :
V/S Plus (or Minus) 700 PULL or –
FPA Minus 3° PULL (V/S (FPA) knob is turned and pulled)
PUSH TO LEVEL OFF (V/S (FPA) knob is pushed)

ARM

The "ARM __" command means arming a system by pushing the specified FCU button.
e.g. : "ARM APPROACH"
e.g. : "ARM LOC."

ON/OFF

The simple ON or OFF command is used for the autopilot, flight directors, autothrust and the bird (flight path vector).
e.g. : BIRD ON (The HDG-V/S/TRK-FPA pushbutton is pushed).

Note : All actions on the FCU and MCDU must be verified on the PFD and ND, as follows :
– First, ensure that the correct FCU knob is used, then verify indications on the PFD/ND.
– Mode changes should be confirmed by calling the color when appropriate (e.g. BLUE, MAGENTA).

FMA

Unless listed otherwise (eg CAT II & III task sharing), all FMA changes will be normally called by the PF.

ALTITUDE

The PNF calls when passing 1000 feet before the cleared altitude or FL, and is acknowledged by the PF calling "CHECKED".
R e.g. : 1000 below 4000
R e.g. : 1000 above 290

FLAP OR GEAR CONFIGURATION

FLAPS CALLS

FLAPS CONFIGURATION	CALL
1	One
1 + F	One
0	Zero

The reply will be given when selecting the new flap position.
e.g. :

	CALL	REMARK
PF	"FLAPS FULL"	PF commands Flaps Full
PNF	"SPEED CHECKED" "FLAPS FULL"	PNF replies when selecting the Flap position, and checks the blue number on the ECAM flap indicator to confirm the correct selection has been made.

GEAR CALL

	CALL	REMARK
PF	"GEAR UP (DOWN)"	PF commands Gear Up (Down)
PNF	"GEAR UP (DOWN)"	PNF replies when selecting the Gear position, and checks the lights on the landing gear indicator panel to confirm gear operation.

FLIGHT PARAMETERS

PNF will make call-outs for the following conditions during final approach. Attitude callouts also to be made through to landing.
– "SPEED" when speed becomes less than Vapp – 5 or more than speed target + 10.
– "SINK RATE" when V/S is greater than – 1000 ft/min.
– "BANK" when bank angle becomes greater than 7°.
– "PITCH" when pitch attitude becomes lower than 0° or higher than + 10°.
– 'LOC" or "GLIDE" when either localizer or glide slope deviation is one dot.
– "COURSE" when greater than 1/2 dot (VOR) or 5 degrees (ADF).
– "__ FT HIGH (LOW)" at altitude checks points.

PF/PNF DUTIES TRANSFER

Transfer of control is initiated by a command and followed by an acknowledgement.

- "I HAVE CONTROL" is either the command that the other pilot is to pass control and assume PNF duties ; or the acknowledgement by the other pilot that he has assumed PF duties.
- "YOU HAVE CONTROL" is either the command that the other pilot is to take control and assume PF duties ; or the acknowledgement by the other pilot that he has assumed PNF duties.

ABNORMAL AND EMERGENCY CALL OUTS

ECAM Procedures

1. "ECAM ACTION" is commanded by PF when required.
2. "CLEAR __ (title of the system)" is asked by the PNF for confirmation by the PF, that all actions have been taken/reviewed on the present ECAM WARNING/CAUTION or SYSTEM PAGE.
   e.g. : CLEAR HYDRAULIC
3. "CLEAR __ (title of the system)" is the command by the PF that the action and review is confirmed.
4. "ECAM ACTIONS COMPLETE" is the announcement by the PNF that all APPLICABLE ACTIONS have been completed.
5. Should the PF require an action from the PNF during ECAM procedures, the order "STOP ECAM" will be used. When ready to resume the ECAM the order "CONTINUE ECAM" will be used.

SUMMARY FOR EACH PHASE

TO REMOVE GROUND SUPPLY		
EVENT	**PF or PNF**	**GND Mech**
Initial ground contact	GROUND (from) COCKPIT	COCKPIT (from) GROUND
External __ disconnection	REMOVE EXTERNAL __	EXTERNAL__ REMOVED

BEFORE ENGINE START/PUSH BACK		
EVENT	**PF**	**PNF**
Before start up clearance received	BEFORE START C/L TO THE LINE	BEFORE START C/L TO THE LINE COMPLETE
After start up clearance received	BELOW THE LINE	BEFORE START C/L COMPLETE

PUSH BACK/ENGINE START		
EVENT	**PF**	**GND Mech.**
When ready for push back and push back clearance received from ATC	GROUND (from) COCKPIT, CLEARED FOR PUSH	COCKPIT (from) GROUND, RELEASE BRAKES
Start of push	BRAKES RELEASED CLEAR TO PUSH	
When ready to start engines	CLEAR TO START ? STARTING ENG(S)__	CLEAR TO START
When push back completed	BRAKES SET	SET BRAKES
When ready to disconnect (after engine started and parameters are stabilized)	CLEAR TO DISCONNECT (hand signals on left/right)	DISCONNECTING (hand signals on left/right)

AFTER ENGINE START		
EVENT	**PF**	**PNF**
All engines started and stabilized and GND is disconnected	AFTER START C/L	AFTER START C/L COMPLETE

TAXI		
EVENT	**PF**	**PNF**
When taxi clearance obtained	CLEAR LEFT (RIGHT) SIDE	CLEAR RIGHT (LEFT) SIDE
Brake transfer check	BRAKE CHECK	PRESSURE ZERO
Flight control check in following sequence (can be done before start of taxi)	FLIGHT CONTROL CHECK	
1. Elevators	FULL UP, FULL DOWN, NEUTRAL	CHECKED
2. Ailerons	FULL LEFT, FULL RIGHT, NEUTRAL	CHECKED
3. Rudder *	FULL LEFT, FULL RIGHT, NEUTRAL	CHECKED
During taxi	BEFORE TAKE-OFF CHECK LIST TO THE LINE	BEFORE TAKE-OFF C/L TO THE LINE COMPLETE
Lining up on the runway	BELOW THE LINE	BEFORE TAKE-OFF C/L COMPLETE

*Note : * The PNF should follow pedal movement with his/her feet*

TAKE-OFF		
EVENT	**PF**	**PNF**
Setting thrust levers to initial stabilisation value	TAKE-OFF	
When thrust levers set to FLEX/TOGA	ANNOUNCE FMA	CHECKED
Before passing 80 kts	CHECKED	POWER SET
At 100 kts	CHECKED	ONE HUNDRED KNOTS
At V1		V1
At VR		ROTATE
When climbing clear of the ground (positive increase of V/S, BARO and RAD ALT)	GEAR UP	POSITIVE CLIMB GEAR UP
If AP is engaged by PNF If AP is engaged by PF	AP 1(2) ON AP 1(2)	CHECKED
When F Speed and accelerating	FLAPS ONE	SPEED CHECKED FLAPS ONE
When S Speed and accelerating	FLAPS ZERO	SPEED CHECKED FLAPS ZERO
After T/O check (not normally requested before flap retraction completed)	AFTER TAKE-OFF C/L	AFTER TAKE-OFF C/L COMPLETED TO THE LINE

ALTIMETER SETTING CHANGES TO/FROM QNH/QFE-STD		
EVENT	**PF**	**PNF**
Barometric setting change and subsequent altimeter cross-check	PULL STANDARD (PUSH QNH/QFE) CHECKED	STANDARD (QNH/QFE) CROSS-CHECKED PASSING FL__(__FT) NOW

R

APPROACH AND LANDING		
EVENT	**PF**	**PNF**
When cleared below transition level or when appropriate	APPROACH C/L	APPROACH C/L COMPLETE
Activation of approach Phase (approx 15nm from touchdown ; automatic, if in managed nav)	ACTIVATE APPROACH PHASE	APPROACH PHASE ACTIVATED
Beginning of radio altimeter indication (could be auto callout of 2500 ft)	CROSS CHECKED	RAD ALT ALIVE (see Note 1 below)
At green dot speed or < VFE	FLAPS ONE	SPEED CHECKED FLAPS ONE
"GS*", "FINAL APP", or "FAF"	SET GA ALTITUDE__FT	GA ALTITUDE__SET,
2000 ft AGL min (ILS) ; or S speed (non-precision)	FLAPS TWO	SPEED CHECKED FLAPS TWO
When at flaps at two	GEAR DOWN	GEAR DOWN
When gear is down	FLAPS THREE	SPEED CHECKED FLAPS THREE
When flaps at three (unless landing with Flap 3)	FLAPS FULL	SPEED CHECKED FLAPS FULL
FAF	CHECKED	PASSING__(Fix Name),__FT,
When landing flaps set, and landing memo is displayed on ECAM	LANDING C/L	LANDING C/L COMPLETE
1000 ft above TDZE (may be auto callout)	CHECKED	ONE THOUSAND
FMA "LAND GREEN" (ILS approach)	LAND GREEN	CHECKED
100 ft above MDA/DH	CHECKED	ONE HUNDRED ABOVE (if no Auto Call out)
MDA/DH visual reference	LANDING	MINIMUM
MDA/DH no visual reference	GO AROUND-FLAPS	MINIMUM
PNF monitors pin-programmed auto callout, or announces if inoperative		ONE HUNDRED FIFTY
After touchdown		GROUND SPOILERS, REVERSE GREEN (See the note 2 below)
If autobrake armed		DECEL (See note 3 below)
At 70 kts	CHECK	SEVENTY KNOTS
Note 1 : Crew awareness : Crew should now keep RA in scan to landing. Note 2 : If reverse deployment is not as expected, call NO REVERSE ENGINE__ or NO REVERSE, as appropriate. Note 3 : If autobrake is armed and no positive deceleration is observed, call NO DECEL.		

04.00 CONTENTS

04.10 OPERATING SPEEDS DEFINITION
– GENERAL 1
– CHARACTERISTIC SPEEDS 1
– PROTECTION SPEEDS 3
– LIMIT SPEEDS 3
– OTHER SPEEDS 4

04.21 AIR COND/PRESS/VENT
– CABIN TEMPERATURE CONTROL 1
– AIR CONDITIONING 2
– CONTROLLER/AEVC/CPC RESET : REFER TO 3.04.24

04.22 AUTO FLIGHT
– FCU/FMGEC/FM/MCDU RESET : REFER TO 3.04.24

04.23 COMMUNICATIONS
– VHF, HF UTILIZATION 1
– SATCOM ◁ 3
– CIDS/ACP/AMU/RMP RESET : REFER TO 3.04.24

04.24 ELECTRICAL SYSTEM
– COMPUTER RESET 1

04.25 COCKPIT DOOR
– COCKPIT DOOR OPERATION 1
– OPENING THE COCKPIT DOOR FROM THE CABIN 3

04.26 FIRE PROTECTION
– SDCU RESET : REFER TO 3.04.24

04.27 FLIGHT CONTROLS (FLYING TECHNIQUES)
– GENERAL 1
– NORMAL OPERATIONS 1
– ABNORMAL OPERATIONS 4
– THE PROTECTION SYSTEMS 8
– AIRCRAFT TRIMMING 11
– PRIM/SEC/FCDC RESET : REFER TO 3.04.24

04.28 FUEL SYSTEM
– FUEL JETTISON ◁ 1
– FCMC RESET : REFER TO 3.04.24

04.30 ICE AND RAIN PROTECTION
– ICING CONDITIONS/OPERATIONS 1
– RAIN REPELLENT ◁ 2
– PHC/WHC RESET : REFER TO 3.04.24

04.31 ELECTRONIC INSTRUMENT SYSTEM
– USE OF FLIGHT PATH VECTOR 1
– DU/DMC/FWC/SDAC RESET : REFER TO 3.04.24

04.32 LANDING GEAR
– BRAKING IN ALTERNATE MODE 1
R – BSCU RESET 1
– BRK TEMP LIMITATIONS REQUIRING MAINT ACTIONS 1
– TIRE PRESSURE 2
– OPERATION WITH NOSEWHEEL STEERING OFFSET 3
R – LGCIU RESET : REFER TO 3.04.24

04.34 NAVIGATION
– PROCEDURES FOR TUNING STANDBY NAVIGATION RADIOS . . 1
– AUTOMATIC IDENTIFICATION OF ADF/VOR/ILS 2
– WEATHER RADAR 3
– FLIGHT INSTRUMENT TOLERANCES 5
– TCAS 6
– APPROACH ON PAPI 11
– QNH USE FOR TO/APPR/LDG ON QFE/QNH PIN PROGRAMMED A/C ◁ 11
– QFE USE FOR TO/APPR/LDG ON A/C WITH QNH ONLY PIN PROGRAMMING ◁ 12
– ENHANCED GROUND PROXIMITY WARNING SYSTEM ◁ . . . 13
R – ADIRS ALIGNMENT 14
R – PARA VISUAL INDICATOR ◁ 17

04.38 WATER/WASTE
– VSC RESET : REFER TO 3.04.24

04.46 INFORMATION SYSTEMS (◁)
– ATSU INITIALIZATION 1
– NOTIFICATION PROCEDURE AND CONNECTION ◁ 3
– CONTROLLER/PILOT DATA LINK COMMUNICATION PROCEDURE ◁ 5
– FLIGHT PLAN MODIFICATIONS ◁ 16
– AUTOMATIC TRANSFER TO NEXT ATC ◁ 20
R – AUTOMATIC DEPENDENT SURVEILLANCE ◁ 21

04.49 APU
– ECB RESET : REFER TO 3.04.24

R **04.52 DOORS**
R – LEAVING THE AIRCRAFT VIA AVIONIC BAY ACCESS DOOR . . 1
R – PSCU RESET : REFER TO 3.04.24

04.70 POWERPLANT
– THRUST CONTROL 1
– MAN ENG START 3
– ENG START WITH EXTERNAL PNEUMATIC POWER 5
– CROSSBLEED ENG START 6
– START VALVE MANUAL OPERATION 7
– DERATED CLIMB ◁ 8
– ENGINE START ON BATTERIES 9

04.80 MISCELLANEOUS
– EIVMU RESET : REFER TO 3.04.24

04.90 ONE ENGINE TAXI
– GENERAL 1
– AT DEPARTURE 1
– AT ARRIVAL 2

04.91 ADVERSE WEATHER
– SEVERE TURBULENCE 1
– OPERATION IN WINDSHEAR / DOWNBURST CONDITIONS . . . 4
– COLD WEATHER 6
– OPERATIONS IN VOLCANIC ASHES 13

04.92 LESS PAPER IN THE COCKPIT
– INTRODUCTION 1
– GENERAL 1
– LPC TAKEOFF MODULE 2
– LPC FCOM MODULE 4
– LPC MEL MODULE 4
– LPC W&B MODULE 4

GENERAL

R This section shows the symbology and definition of speeds.
R Source of computation is also given when applicable.

R CHARACTERISTIC SPEEDS

R The characteristic speeds displayed on the PFD are computed by the FE (Flight Envelope).
R VLS (of normal landing configuration : CONF 3 or FULL), F, S and Green Dot speeds are also
R displayed on the MCDU TAKEOFF and/or APPR, GO AROUND pages.
R These values are computed by the FMGC.
R Computations made by FE and FMGC are based on the gross weight information
R transmitted by the FCMC (Fuel Control and Monitoring Computer).

VS : Stalling speed.
Not displayed.
For a conventional aircraft, the reference stall speed, VSmin, is based on a load factor that is less than 1g. This gives a stall speed that is lower than the stall speed at 1g. All operating speeds are expressed as functions of this speed. (For example, VREF = 1.3 VSmin).
Because the A330 has a low-speed protection feature (alpha limit) that the flight crew cannot override, the airworthiness authorities have reconsidered the definition of stall speed for this aircraft.
All the operating speeds must be referenced to a speed that can be demonstrated by flight test. This speed is designated VS1g.
Airworthiness authorities have agreed that a factor of 0.94 represents the relationship between VS1g for A330 and VSmin for conventional aircraft types. As a result the authorities allow A330 to use the following factors :
V2 min = 1.2 × 0.94 VS1g = 1.13 VS1g
VREF = 1.3 × 0.94 VS1g = 1.23 VS1g
These speeds are identical to those that the conventional 94 % rule would have defined for this aircraft. The A330 has exactly the same maneuver margin that a conventional aircraft would have at its reference speeds.
The FCOM uses VS for VS1g.

VLS : Lowest Selectable speed.
Represented by the top of an amber strip along the airspeed scale on the PFD.
It is equal to :
– 1.13 VS, at takeoff
– 1.18 VS, when the flaps are retracted.
– 1.23 VS, when in clean configuration. (It remains at this value until landing).
VLS is corrected for Mach effect to maintain a 0.3g buffet margin.
In addition, VLS is increased when the speedbrakes are extended.
The VMC is taken into account for VLS computation as follows :
– At takeoff, until retraction of one step of flaps, VLS is equal to or greater than the lowest of :
· V2/1.05
· 1.05 VMCA maximum certified.
– In all the other phases, it is equal to or greater than VMCL.

F : Minimum speed at which the flaps may be retracted at takeoff.
In approach, used as a target speed when the aircraft is in CONF 2 or CONF 3.
Represented by "F" on the PFD airspeed scale.
At takeoff, it is equal to about 1.18 VS of CONF 1 + F, and is limited to a minimum of VMCL + 5 knots.
In approach, when the aircraft is in CONF 2, the takeoff value is increased by 14 %. It is limited to a minimum of VMCL + 15 knots and to a maximum of VFE CONF 3 – 2 knots.
Then, when the aircraft is in CONF 3, the takeoff value is increased by 4 %. It is limited to a minimum of VMCL + 10 knots and to a maximum of VFE CONF FULL – 2 knots.

S : Minimum speed at which the slats may be retracted at takeoff.
In approach, used as a target speed when the aircraft is in CONF 1.
Represented by "S" on the PFD airspeed scale.
Equal to about 1.21 VS of clean configuration.
In approach, S is limited to a maximum of VFE CONF 1* – 2 knots.

0 : Green dot speed.
Engine-out operating speed in clean configuration.
(Best lift-to-drag ratio speed).
Also corresponds to the final takeoff speed.
Represented by a green dot on the PFD scale.

R With all engines running :
R – Below 20000 feet equal to 0.6 × weight (tons) + 107 knots
– Above 20000 feet, add 1 knots per 1000 feet.
R With at least one engine-out, subtract 10 knots in the above situations.

PROTECTION SPEEDS

Vα PROT, Vα MAX and VSW are computed by the PRIM, based on aerodynamic data.

Vα PROT : Angle-of-attack protection speed.
Corresponds to the angle-of-attack at which the angle-of-attack protection becomes active.
Represented by the top of a black and amber strip along the PFD speed scale, in normal law.

Vα MAX : Maximum angle-of-attack speed.
Corresponds to the maximum angle-of-attack that may be reached in pitch normal law.
Represented by the top of a red strip along the PFD speed scale, in normal law.

VSW : Stall warning speed.
Represented by a red and black strip along the speed scale when the flight control normal law is inoperative.

VMAX : Represented by the bottom of a red and black strip along the speed scale.
Determined by the FE according to the aircraft configuration.
Is equal to VMO (or speed corresponding to MMO), VLE or VFE.

LIMIT SPEEDS

VMCG : Minimum speed, on the ground during takeoff, at which the aircraft can be controlled by the use of primary flight controls only, after a sudden failure of the critical engine, the other engine remaining at takeoff power.

VMCA : Minimum control speed in flight at which the aircraft can be controlled with a maximum bank of 5 degrees, if one engine fails, the other engine remaining at takeoff power (takeoff flap setting, gear retracted).

VMCL : Minimum control speed in flight at which the aircraft can be controlled with a maximum bank of 5 degrees, if one engine fails, the other engine remaining at takeoff power (approach flap setting).

VFE : Maximum speed for each flap configuration.

VLE : Maximum speed with landing gear extended.

R VLO : Maximum speed for landing gear operation.

VMO : Maximum speed.

VFE NEXT : Maximum speed for the next (further extended) flap lever position.

OTHER SPEEDS

V1 : The highest speed, during takeoff, at which the flight crew has a choice between continuing the takeoff or stopping the aircraft.
Represented by "1" on the airspeed scale (or the V1 value when it is off the airspeed scale).
Inserted manually through the MCDU by the crew.
Displayed on the MCDU TAKEOFF page.

VR : The speed at which the pilot rotates in order to reach V2 at an altitude of 35 feet at the latest after an engine failure.
Inserted manually through the MCDU by the crew.
Displayed on the MCDU TAKEOFF page.

V2 : Takeoff safety speed that the aircraft attains at the latest at an altitude of 35 feet with one engine failed and maintains during the second segment of the takeoff.
Represented by the SPEED SELECT symbol on the speed scale.
Minimum value equal to 1.13 VS for the corresponding configuration.
Inserted manually through the MCDU by the crew.
Displayed on the MCDU TAKEOFF page.

VREF : Reference speed used for normal final approach.
Equal to 1.23 × VS of configuration FULL.
Represented on the MCDU APPR page if landing is planned in CONF FULL (VLS CONF FULL).

VAPP : Final approach speed.
Displayed on MCDU APPR page.
Calculated by the FMGCs.
Represents : VAPP = VLS + wind correction.
The wind correction is limited to a minimum of 5 knots and a maximum of 15 knots.
The flight crew may modify VAPP through the MCDU.

R − During autoland or when autothrust is on or in case of ice accretion or
R gusty crosswind greater than 20 knots, VAPP must not be lower than VLS + 5 knots.

VAPP TARGET : Represented by a magenta triangle.
Calculated by FMGCs
Gives efficient speed guidance in approach during various windy conditions.
Represents :
VAPP TARGET = GS mini + actual headwind (measured by ADIRS)
GS mini = VAPP – TOWER WIND (headwind component along runway axis calculated by FMGC from tower wind entered on MCDU).

CABIN TEMPERATURE CONTROL

SYSTEM OPERATION

The cabin is divided into 3 temperature control zones : FWD, MID and AFT. The length of the three zones is, as far as practicable, adapted to the individual cabin class arrangement by respective programming of the CIDS.
The cockpit cabin temperature selector is used to select prior to flight a common cabin master temperature for all zones.
The common master temperature can be individually adapted for the three cabin zones at any time via the cabin temperature page of the Programming and Indication Modul (PIM) on the forward attendant panel. An individual zone correction up to +/– 2.5°C (4.5°F) can be selected for the FWD, MID or AFT cabin zones in steps of 0.5°C (0.9°F).

CABIN TEMPERATURE SELECTION

The system is designed to minimize flight crew workload. The cockpit and cabin selections should be set only once prior to flight. Throughout the flight the system takes care of cabin temperature regulation and under normal operating conditions there is no need to change the selection during flight.
It is recommended to follow these guidelines :

Note : Any change of selection makes the system blow either colder or hotter air into the cabin which may result in a temporary discomfort for the passengers. To reach a stabilized cabin temperature again the system needs about 20 minutes : 10 minutes cabin temperature adjustment plus 10 minutes to compensated for furniture and lining heat dissipation. After a selection has been changed allow the cabin temperature to stabilize again before the selection is changed again.

R **On ground, prior to flight :**

R 1. The cabin temperature selector in the cockpit (AIR panel) should be set to about the 10 o'clock position (21.5°C/70.7°F) for ground and flight operation.
2. The zone correction should be set to zero by pressing the <<RESET TO COCKPIT SELECTED TEMP>> soft key on the cabin temperature page of the PIM.
The above settings provide a good cabin temperature comfort for most operating conditions.

In flight :

1. The master temperature preselection on the cockpit panel should normally not be changed during flight.
   If a cockpit preselection change is required, the cabin crew should be informed since, in the cabin, there is no automatic indication associated.

   Note : The PIM cabin temperature page will show the newly selected cabin temperature (+ zone correction + altitude correction) in each of the cabin zones.

2. If required, the cabin crew should normally adjust the zone temperature on the forward attendant panel by no more than 0.5°C (0.9°F).

   Note : 1. Generally, the lowest comfortable temperature should be selected.
   2. It is recommended that the cabin crew judge the required zone temperature, based on the temperature that is felt, rather than on the indicated value.

AIR CONDITIONING

With passengers on board, it is not recommended to exceed 20 minutes without air conditioning supply. The lack of fresh air supply will significantly reduce the quality of the cabin air.

R An external HP source may be used for air conditioning, provided the air supply is
R confirmed to be free from oil contamination.

VHF, HF UTILIZATION

R *Note : 1. Reception of some frequencies could be noisy, on one or more VHFs. In such*
R *cases : try selecting an unaffected one.*
R *2. If two frequencies are closer than 2 MHz (between VHF1 and 2, or between VHF3*
R *and 2), or closer than 6 MHz (between VHF1 and 3), some interference may*
R *occur.*

TUNING

The pilot should normally use his onside RMP, to tune any one of the VHF or HF desired radios. If the SEL lights come on, when tuning the radio, the pilot should turn them off by selecting the appropriate radio system dedicated to his RMP.

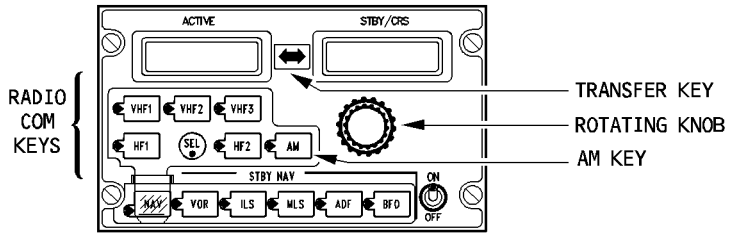

– **ON/OFF switch . . . . . CHECK ON**

– **VHF or HF key . . . . . PRESS**
The green light comes on.
ACTIVE and STBY/CRS windows display active and preset frequencies, respectively.

Note : The SEL light will come on both RMP if :
– VHF1 is selected on RMP 2 or 3 ;
– VHF2 is selected on RMP 1 or 3 ;
– VHF3, HF1, HF2 is selected on RMP 1 or 2.

To change the frequency :

– **Rotating knob . . . . . TURN**
Make the STBY/CRS window displays the new frequency.
Outer and inner rotating knobs are used for units and decimals, respectively.

– **Transfer key . . . . . PRESS**
This interchanges ACTIVE and STBY frequency. The receiver is now tuned to the new ACTIVE frequency.

– **AM key (if necessary)** . . . . . **PRESS**
The green light comes on.

– **SEL light** . . . . . **CHECK OFF**
If the SEL light is on, select the appropriate radio systems dedicated to the onside RMP.

Failure cases :

When an RMP fails :
– The affected RMP no longer controls the selected receiver.
– The frequency displays disappear, and the green VHF or HF lights go off.

– **Affected RMP** . . . . . **SWITCH OFF**
One RMP can control all receivers.
. If RMP1 is affected : Tune VHF1 via RMP 3.
. If RMP2 is affected : Tune VHF2 via RMP 3.
. If RMP3 is affected : Tune VHF3, HF1, HF2 via RMP 1 or 2.
. If two RMPs fail : Tune all receivers via the remaining RMP.

TRANSMISSION AND RECEPTION

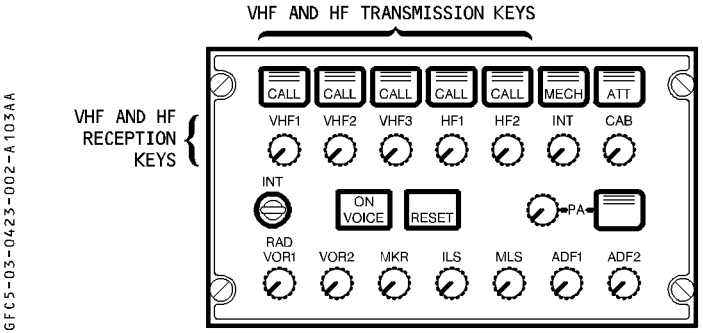

– **VHF or HF transmission key** . . . . . **PRESS**
The green bars of the desired system key light up.
Microphones and PTT command are connected to the selected system.

– **VHF or HF reception key** . . . . . **PRESS**
The integrated white light comes on.
The receiver brings in the selected system.
To adjust the volume, turn the key.

R *Note : Do not use VHF 3 for communications with the ATC, unless VHF 1 and 2 are inoperative.*

VHF, HF UTILIZATION

R *Note : 1. Reception of some frequencies could be noisy, on one or more VHFs. In such*
R *cases : try selecting an unaffected one.*
R *2. If two frequencies are closer than 2 MHz (between VHF1 and 2, or between VHF3*
R *and 2), or closer than 6 MHz (between VHF1 and 3), some interference may*
R *occur.*

TUNING

The pilot should normally use his onside RMP, to tune any one of the VHF or HF desired radios. If the SEL lights come on, when tuning the radio, the pilot should turn them off by selecting the appropriate radio system dedicated to his RMP.

GFCS-03-0423-001-A001AA

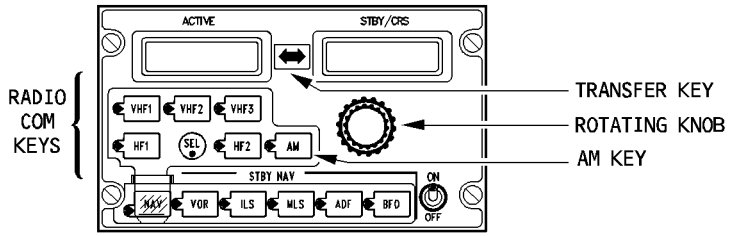

– **ON/OFF switch** . . . . . **CHECK ON**

– **VHF or HF key** . . . . . **PRESS**
The green light comes on.
ACTIVE and STBY/CRS windows display active and preset frequencies, respectively.

Note : The SEL light will come on both RMP if :
– VHF1 is selected on RMP 2 or 3 ;
– VHF2 is selected on RMP 1 or 3 ;
– VHF3, HF1, HF2 is selected on RMP 1 or 2.

To change the frequency :

– **Rotating knob** . . . . . **TURN**
Make the STBY/CRS window displays the new frequency.
Outer and inner rotating knobs are used for units and decimals, respectively.

– **Transfer key** . . . . . **PRESS**
This interchanges ACTIVE and STBY frequency. The receiver is now tuned to the new ACTIVE frequency.

– **AM key (if necessary)** . . . . . **PRESS**
Green light comes on.

– **SEL light** . . . . . **CHECK OFF**
If the SEL light is on, select the appropriate radio systems dedicated to the onside RMP.

Failure cases :

When an RMP fails :
– The affected RMP no longer controls the selected receiver.
– The frequency displays disappear, and the green VHF or HF lights go off.

– **Affected RMP** . . . . . **SWITCH OFF**
One RMP can control all receivers :
. If RMP1 affected, tune VHF1 through the RMP3.
. If RMP2 affected, tune VHF2 through the RMP3.
. If RMP3 affected, tune VHF3, HF1, HF2 through the RMP1 or RMP2.
. If two RMPs fail, tune all receivers through the remaining RMP.

TRANSMISSION AND RECEPTION

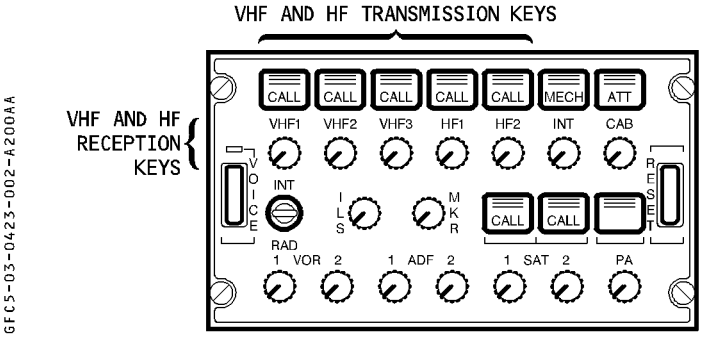

– **VHF or HF transmission key** . . . . . **PRESS**
Green bars of the desired system key light up.
Microphones and PTT command are connected to the selected system.

– **VHF or HF reception key** . . . . . **PRESS**
The integrated white light comes on.
The receiver brings in the selected system.
To adjust the volume, turn the key.

Note : Do not use VHF3 for communications with ATC, unless VHF1 and VHF2 are inoperative.

FROZEN RMP

An RMP is frozen, if it is impossible to interchange the ACTIVE and STBY radio navigation or communication frequencies.
To recover normal operation of the RMP, all RMPs must be reset, because a problem on one RMP may be due to another RMP.

PROCEDURE

All RMP's must be reset, one after the other.

On the RMP control panel :

– **ON/OFF switch . . . . . OFF**
Wait 5 seconds, then

– **ON/OFF switch . . . . . ON**

SATCOM

This chapter explains how to use the different Satellite Communication (SATCOM) functions for : Cockpit air to ground communication or, cockpit ground to air communication.
Due to highly customized programming, SATCOM functions may vary for different airlines. This description is, therefore, given only as an example.

COCKPIT AIR TO GROUND COMMUNICATION

The crew selects the phone number via the MCDU, then initiates and terminates the call via the ACPs.

PHONE NUMBER SELECTION

- **PRESS the SAT key on the MCDU main page to access the SATCOM MAIN MENU page.**

- **PRESS the MANUAL DIAL or DIRECTORY key.**
  For air to ground communication, the crew can use the SATCOM manual dialing function or the prerecorded phone numbers.

Manual dailing

On the SATCOM MANUAL DIAL page :

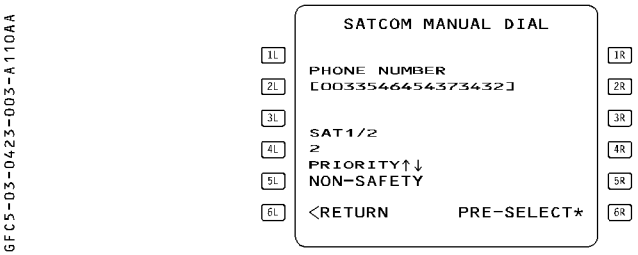

- **PRESS the slew up or down keys on the MCDU keyboard to select the priority (The default priority is NON-SAFETY).**

- **PRESS 4L to modify the SATCOM channel (after having entered the desired SATCOM channel in the scratchpad).**

- **ENTER the phone number in the scratchpad and PRESS 2L.**

- **PRESS 6R to pre-select the phone number.**
  The MCDU then switches automatically to the SATCOM MAIN MENU page.

Prerecorded phone number

On the SATCOM DIRECTORY page :

– **PRESS 1L, 2L, 3L or 4L**
The MCDU switches to the CATEGORY NUMBER page, where phone numbers have been stored according to their priority. (Example : SATCOM SAFETY) :

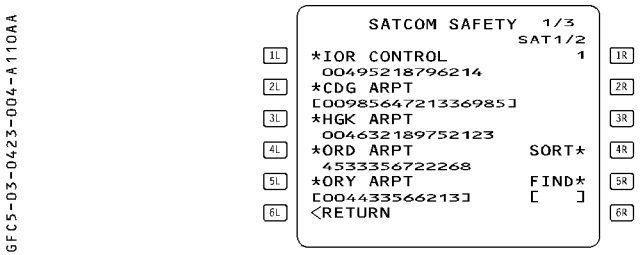

– **PRESS 1 R (after having entered the desired SATCOM channel in the scratchpad) to modify the SATCOM channel.**

– **PRESS the key (1L, 2L, 3L, 4L or 5L) facing the required phone number.**
The MCDU then switches automatically to the SATCOM MAIN MENU page where the title (of the selected phone number) is displayed. READY TO CONNECT is displayed in front of the selected SATCOM channel.

CALL INITIATION

Once all information, regarding the phone number, is entered in the MCDU, the crew uses the ACP to initiate the SATCOM call. On the SATCOM MAIN MENU page :

– **CHECK 2L or 4L field displays the phone number.**

– **CHECK the availability of the relevant SATCOM channel.**

Note : The SATCOM channel, used to initiate the call, is displayed above the phone number.

– **On the ACP, PRESS the SAT 1(2) transmission key, corresponding to the selected SATCOM channel.**
On the ACP, the green lines on the SAT1 (2) transmission key flash. On the MCDU SATCOM MAIN MENU page, the DIALING indication replaces the READY TO CONNECT indication in front of SAT1 (2). When the call is established, on the ACP, the green lines on the SAT1 (2) transmission key become steady. On the MCDU SATCOM MAIN MENU page, CONNECTED indication replaces the DIALING indication in front of SAT1 (2).

– **PROCEED as for a VHF or HF call.**

COCKPIT GROUND TO AIR TRANSMISSION

In case of an incoming call, the amber lines on the ACP's SAT1 (2) transmission key flash and the SATCOM ALERT green memo is triggered on the ECAM, when the priority level is below 4.

– **PRESS the SAT1 (2) transmission key to establish the communication.**
On the ACP, the green lines on the SAT1 (2) transmission key become steady. On the MCDU SATCOM MAIN MENU page, the CONNECTED indication replaces the DIALING indication in front of SAT1 (2).

– **PROCEED as for a VHF or HF call.**

HOLD FUNCTION

If the crew selects another radio communication (HF or VHF) when a SATCOM call is established, the SATCOM audio transmission is temporarily interrupted.
On the ACP :
– The green lines on the SAT1 (2) transmission key flash.
– The green lines on the selected radio (HF or VHF) transmission key come on.
To recover the SATCOM call : On the ACP, the crew reselects the same radio (HF or VHF) or the SAT1 (2) transmission key. This terminates the radio call.

CALL TERMINATION

AIR TO GROUND CALL

– **PRESS the corresponding SAT1 (2) transmission key on the ACP.**
The green lines on the selected SAT1 (2) transmission key go out.
After 3 seconds, the call is terminated.
If the SATCOM call is on HOLD, the crew must cancel the HOLD before terminating the call.

GROUND TO AIR CALL

The ground initiates the call termination.
The green lines of the corresponding SAT1 (2) transmission key go out.

R Do not select the PA after a SATCOM call. This will result in the PA being permanently
R selected.
R First select another system (VHF for example) and then the PA.

COMPUTER RESET

In most cases, computers may be recovered following an abnormal behaviour or a detected fault by either :

— a software reset (reset of the microprocessor), or

— interrupting the power supply of its processing part for a short time.

This may be achieved with the normal cockpit controls (engagement levers, pushbuttons) or by action on the corresponding reset button.

R For this purpose :

R — Select the related normal cockpit control OFF, or pull the corresponding reset button,

R — Wait 3 seconds if a normal cockpit control is used (unless a different time is indicated),

R or 1 second if a reset button is used,

R — Select the related normal cockpit control ON, or push the corresponding reset button,

R — Wait 3 seconds for the end of the reset.

WARNING

R Do not reset more than one computer at the same time, unless instructed to do so.

The following table, lists the various computers for which manual reset capability is provided :

· On the overhead RESET panels

· On the system controls panel.

For each computer, effects and/or precaution in case of reset (if any) are also listed.

— A computer reset has to be attempted when :

· recommended by an ECAM procedure or

· recommended by a paper procedure.

— In all other circumstances, where a failure is suspected or detected, there is no specific recommendations as to whether a reset should be performed or not, except those where a reset is specifically forbidden.

R — Before doing any reset that is not asked by the ECAM, or paper check list, consult the

R QRH to ensure that it is not forbidden.

Manual reset on ground will trigger complete power up test.

The number of reset attempt is not limited.

R

ATA	EQUIPMENT	MANUAL RESET		REMARKS
		OVHD RESET panel	System control panel	
21	PACK CONT	2		NIL
	ZONE CONT	1		
	VENT CONT	2		
	AEVC	1		
	CPC	2		To force a CPC changeover : – MODE SEL . . . . . MAN • AFTER 3 seconds : – MODE SEL . . . . . AUTO The inactive CPC may then be reset (check the CAB PRESS ECAM page).
22	FCU	2		– On ground : The FCU has to be reconfigured after reset. – In flight : Check FCU targets after reset. Following a total FCU reset, targets are selected targets.
	FMGEC and FM	4		· FMGEC or FM resets results in onside AP disconnection (if engaged). · Resynchronization of both FMs will occur after a reset sequence, with associated messages on the MCDU and ND : – PLEASE WAIT – MAP NOT AVAIL · It is recommended to use FMGEC R/B, rather than FM R/B.
	MCDU		BRT OFF CTL	In case the MCDU is blank or locked, refer to 4.06.20.

R

ATA	EQUIPMENT	MANUAL RESET		REMARKS
		OVHD RESET panel	System control panel	
23	CIDS	2		· In the event of reset of this active CIDS (usually CIDS 1 when both are operative) a complete power up test is performed. – In flight, test lasts about 20 seconds: · the cabin light illuminates at full intensity. If selected, dimming is lost and must be reselected after test. · PA, CALL and INTERPHONE functions are interrupted and have to be reselected after test. · FAP cabin temperature corrections are lost and have to be reselected after test. – On ground, test lasts about 80 seconds, and includes additionally : · a sequencial cabin loudspeakers test (triggers a tone for about 10 seconds) · the cabin light might flash shortly. Dimming selection is lost (as in flight)
	ACP/AMU	2		NIL
	RMP		ON/OFF CTL	In case of freezing of one RMP (impossibility to interchange the ACTIVE and STBY radio navigation or communication frequencies,...), all the RMP's have to be reset, one after the other, to recover a normal operation. In order to be reset RMP's must be switched off at least 5 seconds by using the ON/OFF selector on the RMP control panels.
24	GPCU		2 pb on ELEC panel	GPCU reset may be attempted if AVAIL and ON lights are not illuminated. 1. Press once the affected EXT A(B) pb sw to reset the functions of GPCU. 2. Switch on the external power unit to reset the GPU. 3. Check AVAIL light is ON and press the EXT A(B) pb sw to connect the GPU. · If unsuccessful, check GPU voltage and frequency (bite is available on batteries only)

R

ATA	EQUIPMENT	MANUAL RESET		REMARKS
		OVHD RESET panel	System control panel	
24	BCL		3 BAT pb on ELEC panel	Use the BAT pushbutton to reset the BCL. Do not reset the BCL when the BAT FAULT caution has been triggered and the BAT OFF selection has been requested by the ECAM.
26	SDCU	2		NIL
27	PRIM and SEC		FLT/CTL panel	– PRIMs or SECs may be reset, unless the DC ESS BUS FAULT caution is present, as this would result in a loss or the related PRIM or SEC. – If a reset is performed on ground, it must be followed by a flight controls' test (SOP 3-03-10). WARNING : – Do not reset more than one computer at a time. *Note : When a PRIM reset is performed on ground, the crew must check the pitch trim position.*
	FCDC	2		NIL

R

ATA	EQUIPMENT	MANUAL RESET		REMARKS
		OVHD RESET panel	System control panel	
28	FCMC	2		– If the reset is done before engine start, the ZFW and ZFCG must be re-entered on the MCDU (init B page). – If the reset is done after engine start, the actual GW and CG must be re-entered on the MCDU (FUEL PRED page).
30	PHC WHC	3 2		Associated heating is interrupted, when the reset button is pulled.
31	DU (ECAM, PFD,ND)		OFF/BRT CTL	If DU reset is unsucessful, a DMC (driving the affected DU) reset may be attempted.
	DMC	3		EFIS/ECAM displays are lost for 40 seconds on ground, after a reset or power up.
	FWC	2		NIL
	SDAC	2		NIL
32	LGCIU	2		An LGCIU reset must neither be made during landing gear maneuvers nor just prior to touchdown.
	BSCU		A/SKID and N/W STRG sw	Refer to 3.04.32

R

ATA	EQUIPMENT	MANUAL RESET		REMARKS
		OVHD RESET panel	System control panel	
38	VSC		Cabin aft C/B panel (VACUUM TOILET SYSTEM)	In case all toilets of one or both sides are shut down : – VACUUM TOILET SYSTEM (blue button) . . . . . RESET *The repeated use of the blue reset button is not recommended.* *If this does not fix the problem, apply the following procedure for both system sides on the cabin aft C/B panel (VACUUM TOILET SYSTEM).* *Do not apply the following procedure in case of a waste tank overfill.* – C/B SYSTEM (both) and VACUUM GEN (both) (4 C/B) . . . . . PULL – C/B LAVATORY POWER (LH and RH) (8 C/B) . . . . . PULL – C/B LAVATORY POWER (LH and RH) (8 C/B) . . . . . PUSH *LH and RH SYSTEM and both VACUUM GEN C/Bs remain pulled. In this configuration :* · *The waste quantity indication is lost,* · *The protection against waste tank overfill is lost,* · *Do not use the toilet below 16000 feet*
49	ECB		APU MASTER sw	Reset must only be attempted when the APU speed is below 7%.
52	PSCU	2		NIL

R

ATA	EQUIPMENT	MANUAL RESET		REMARKS
		OVHD RESET panel	System control panel	
28	FCMC	2		– If the reset is done before engine start, the ZFW and ZFCG must be re-entered on the MCDU (init B page). – If the reset is done after engine start, the actual GW and CG must be re-entered on the MCDU (FUEL PRED page).
30	PHC WHC	3 2		Associated heating is interrupted, when the reset button is pulled.
31	DU (ECAM, PFD,ND)		OFF/BRT CTL	If DU reset is unsucessful, a DMC (driving the affected DU) reset may be attempted.
	DMC	3		EFIS/ECAM displays are lost for 40 seconds on ground, after a reset or power up.
	FWC	2		NIL
	SDAC	2		NIL
32	LGCIU	2		An LGCIU reset must neither be made during landing gear maneuvers nor just prior to touchdown.
	BSCU		A/SKID and N/W STRG sw	Refer to 3.04.32

R

ATA	EQUIPMENT	MANUAL RESET		REMARKS
		OVHD RESET panel	System control panel	
38	VSC		Cabin aft C/B panel (VACUUM TOILET SYSTEM)	In case all toilets of one or both sides are shut down : – VACUUM TOILET SYSTEM (blue button) . . . . . RESET *The repeated use of the blue reset button is not recommended.* *If this does not fix the problem, apply the following procedure for both system sides on the cabin aft C/B panel (VACUUM TOILET SYSTEM).* *Do not apply the following procedure in case of a waste tank overfill.* – C/B SYSTEM (both) and VACUUM GEN (both) (4 C/B) . . . . . PULL – C/B LAVATORY POWER (LH and RH) (8 C/B) . . . . . PULL – C/B LAVATORY POWER (LH and RH) (8 C/B) . . . . . PUSH *LH and RH SYSTEM and both VACUUM GEN C/Bs remain pulled. In this configuration :* *· The waste quantity indication is lost,* *· The protection against waste tank overfill is lost,* *· Do not use the toilet below 16000 feet*
46	ATSU	1		ATSU reset, using the reset breaker ATSU1 7TX on 261VU (overhead panel), should be attempted, in case of : – Permanent display of "INVALID DATA" on the DCDU. – No key selection effect on the DCDU or MCDU ATC pages.
49	ECB		APU MASTER sw	Reset must only be attempted when the APU speed is below 7%.
52	PSCU	2		NIL

R

ATA	EQUIPMENT	MANUAL RESET		REMARKS
		OVHD RESET panel	System control panel	
70	EIVMU	2		During the reset, and for the next 5 seconds, the following occurs : – On the corresponding engine : · Loss of thrust reverser · Loss of vibration indication · If idle is selected, only high idle is available · Loss of man start and wet crank · Loss of bleed corrections on thrust limit – On both engines : · Loss of autothrust – Flex/Derated TO is lost.

COCKPIT DOOR OPERATION

This procedure should be applied, if local Airworthiness Authorities require that the cockpit door remain closed throughout the entire flight.

BEFORE PUSHBACK OR ENGINE START

– **COCKPIT DOOR . . . . . CLOSE**
With the cockpit door selector at NORM, the cockpit door is closed and locked.

AFTER ENGINE START

- **If ROUTINE ACCESS is requested from the cabin :**
The buzzer sounds in the cockpit for 1 to 9 seconds (3 seconds by default).
Prior to unlocking the door, the flight crew should identify the person requesting entry.
  - **If entry is NOT authorized by the flight crew :**
    – **DOOR LOCK switch . . . . . LOCK**
    Emergency access, the buzzer, and the keypad are inhibited for a preselected time between 5 and 20 minutes.
  - **If entry is authorized by the flight crew :**
    – **DOOR LOCK switch . . . . . UNLOCK**
    The flight crew should pull the switch and maintain it in the UNLOCK position, until the cabin crew pushes the door open.

Note : If the flight crew does not take any action after a routine cabin request, the cabin crew will be able to open the door by using the emergency access procedure.

- **If EMERGENCY ACCESS is initiated from the cabin :**
  The buzzer will sound continuously in the cockpit, and the OPEN light flashes on the center pedestal's cockpit door panel.

  Note : If the flight crew does not take any action, the door will unlock after a preselected time between 15 and 120 seconds.

  – **DOOR LOCK switch . . . . . LOCK**
  Emergency access, the buzzer, and the keypad are inhibited for a preselected time between 5 and 20 minutes.
  When the situation in the cockpit permits, the flight crew should identify the person requesting entry, prior to unlocking the door.

- **If entry is authorized by the flight crew :**

  – **DOOR LOCK switch . . . . . UNLOCK**
  The flight crew should pull the switch and maintain it in the UNLOCK position, until the cabin crew pushes the door open.

COCKPIT DOOR OPERATION

This procedure should be applied, if local Airworthiness Authorities require that the cockpit door remain closed throughout the entire flight.

BEFORE PUSHBACK OR ENGINE START

– **COCKPIT DOOR . . . . . CLOSE**
With the cockpit door selector at NORM, the cockpit door is closed and locked.

AFTER ENGINE START

- **If ROUTINE ACCESS is requested from the cabin :**
The buzzer sounds in the cockpit for 1 to 9 seconds (3 seconds by default).

– **CAMERA 1 DISPLAY . . . . . CHECK**
Camera 1 is automatically displayed upon entry request.

– **VIDEO CAMERA pushbutton . . . . . PRESS**

– **CAMERA 2 and 3 DISPLAY . . . . . CHECK**
Prior to unlocking the door, the flight crew should identify the person requesting entry.

- **If entry is NOT authorized by the flight crew :**

– **DOOR LOCK switch . . . . . LOCK**
Emergency access, the buzzer, and the keypad are inhibited for a preselected time between 5 and 20 minutes.

- **If entry is authorized by the flight crew :**

– **DOOR LOCK switch . . . . . UNLOCK**
The flight crew should pull the switch and maintain it in the UNLOCK position, until the cabin crew pushes the door open.

Note : If the flight crew does not take any action after a routine cabin request, the cabin crew will be able to open the door by using the emergency access procedure.

● **If EMERGENCY ACCESS is initiated from the cabin :**
The buzzer will sound continuously in the cockpit, and the OPEN light flashes on the center pedestal's cockpit door panel.

Note : If the flight crew does not take any action, the door will unlock after a preselected time between 15 and 120 seconds.

– **DOOR LOCK switch . . . . . LOCK**
Emergency access, the buzzer, and the keypad are inhibited for a preselected time between 5 and 20 minutes.

– **CAMERA 1 DISPLAY . . . . . CHECK**
Camera 1 is automatically displayed upon entry request.

– **VIDEO CAMERA pushbutton . . . . . PRESS**

– **CAMERA 2 and 3 DISPLAY . . . . . CHECK**
Prior to unlocking the door, the flight crew should identify the person requesting entry.

● **If entry is authorized by the flight crew :**

– **DOOR LOCK switch . . . . . UNLOCK**
The flight crew should pull the switch and maintain it in the UNLOCK position, until the cabin crew pushes the door open.

OPENING THE COCKPIT DOOR FROM THE CABIN

– **CABIN CREW ROUTINE ACCESS . . . . . REQUEST ON KEYPAD**

– **CABIN CREW . . . . . PRESS #, or N+#**
"N" represents an Operator-defined figure between 0 and 7 seven digits.

– **CABIN CREW . . . . . STAND IN COCKPIT DOOR AXIS**
The cabin crew should stand in the axis of the cockpit door.
A buzzer sounds in the cockpit.

- **If entry is NOT authorized by the flight crew :**
  – The flight crew locks the door via the DOOR LOCK switch.
  – The keypad's red light comes on steady, and indicates that the door is locked. Emergency access, the buzzer, and the keypad are inhibited for a preselected time between 5 and 20 minutes.
- **If entry is authorized by the flight crew :**
  – The flight crew unlocks the door via the DOOR LOCK switch.
  – The keypad's green light comes on steady, and indicates that the door is unlocked.

  – **CABIN CREW . . . . . PUSH DOOR TO OPEN**
- **If there is no reaction from the flight crew :**

  – **CABIN CREW SECOND ACCESS . . . . . REQUEST ON KEYPAD**
  Repeat the above procedure.
- **If there is no reaction from the flight crew, after a second request :**

  – **CABIN CREW . . . . . CALL THE COCKPIT**
  To establish contact with the flight crew and request access to the cockpit.
- **If there is no reaction from the flight crew, after a cabin crew interphone call :**

  – **CABIN CREW . . APPLY THE FOLLOWING EMERGENCY ACCESS PROCEDURE**

  – **EMERGENCY ENTRY CODE . . . . . ENTER and PRESS #**
  The emergency entry code is an Operator-defined figure between 2 and 7 seven digits. A buzzer will sound continuously in the cockpit and the keypad's green light flashes. After a preselected time between 15 and 120 seconds, the keypad's green light comes on steady, and the cabin crew can then push the door open.

  – **CABIN CREW . . . . . PUSH DOOR TO OPEN**
  The cockpit door unlocks for 5 seconds.
  The buzzer stops and indicates that the door is unlocked.

GENERAL

The fly-by-wire system has been designed and certificated to make the new generation of aircraft more cost effective and safer and smoother to fly or ride in than a conventionnal aircraft.

NORMAL OPERATIONS

The pilot uses the sidestick to fly the aircraft in pitch and roll (and indirectly, through turn coordination, in yaw).
The computers interpret the pilot's inputs and move the control surfaces as necessary.
However, regardless of the pilot's inputs the computers will prevent :
- Excessive maneuvering
- Loss of control leading to excursions outside the safe flight envelope.

AIRCRAFT ON THE GROUND

On the ground the sidesticks have full authority over the controls in pitch and roll.
With the aircraft in the normal configuration and engines running on the ground :
- When the wheel brakes are released, the aircraft usually rolls with no added thrust.
- Nose wheel steering is "fly by wire", with no mechanical connection between the nose wheel and the steering tiller. The control forces are light : the flight crew should be careful to move the tiller gently to avoid unnecessary high-rate turns.

The aircraft can make very tight turns, but the flight crew should resist any tendency to overcontrol. When making tight turns at low ground speed, the crew should hold the selected tiller position, even if the turn radius is shorter than intended, so as to maintain a smooth turn.

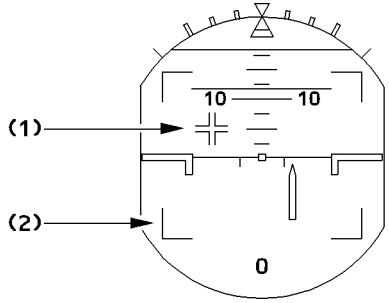

GFC5-03-0427-002-A001AA

The PFD includes a symbol (1) that is the sum of sidestick positions given to the computers. It permits the PNF to check that the PF is making an appropriate control input
R during takeoff roll.
Small limit marks (2) indicate the limits of stick travel (± 16° in pitch, ± 20° in roll).
They are displayed only with aircraft on ground. Flight crew must not use this display for control checks, because it does not necessarily indicate control position in failure cases. Flight crew must use the ECAM flight controls page for making that check.

IN FLIGHT

TAKEOFF MODE

R

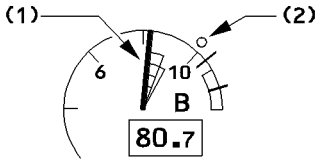

GFC5-03-0427-002-B001AA

Thrust management is very easy. The pilot selects a FLX thrust by stopping the thrust levers in the FLX/MCT detent and checking that the resulting N1 (or EPR) (1) is compatible with N1 (or EPR) target (2). For maximum takeoff thrust, the pilot moves the thrust levers fully forward and makes the same thrust check (N1 or EPR).
To counter the nose up effect of setting engine takeoff thrust, the pilot should apply half forward stick until the airspeed reaches 80 knots. Then he should release the stick
R gradually to reach neutral at 100 knots (Refer to SOP 3.03.12 for additional information).

R Rotation is conventional. As the A330 has a large inertia, it is important to initiate the
R rotation with a positive backward stick input (typically 2/3 backstick).
R The rotation rate produced by a given sidestick input takes time a build up ; once it has
R developed, it remains relatively constant for a given sidestick position. Rapid variations in
R stick position cause discomfort.

The pilot continues the rotation to a typical all-engines attitude of about 15°. As the attitude changes and stabilizes, the control laws change to those for the flight mode in pitch, allowing the sidestick to return to the neutral position to maintain 1g at the chosen attitude. Pitch trim can begin to work at 50 feet.

For crosswind takeoffs, routine use of into wind aileron is not recommended. In strong
R crosswind conditions, some lateral control may be used, but care should be taken to avoid
R using large deflections, resulting in excessive spoiler deployment which increases the
R tendency to turn into wind, reduces lift, and increases drag. Spoiler deflection starts to
R become significant with more than half sidestick deflection. As the aircraft lifts off, any
R lateral control applied will result in a roll rate demand.

FLIGHT MODE

The sidestick is normally in the neutral position, with the aircraft stable in pitch and roll at the chosen altitude in straight or turning flight within certain limits. As a result, even in turbulence, the aircraft is best flown with little, or no, stick input.

Hands off, the system maintains 1g in pitch, corrected for pitch and roll attitude, and zero roll rate, within certain limits (+ 30°, – 15° in pitch and ± 33° roll). Hands off, within these limits, the aircraft resists disturbance from the atmosphere and rides well even in heavy turbulence.

The system compensates almost 100% for trim changes, due to speed and configuration changes. Trim changes, due to thrust changes, can be too large for the system to compensate, and the aircraft may respond to them in pitch, in the conventional sense, and then hold the new attitude at which it stabilized after the trim change.

The pitch trim wheel moves as the control law compensates for these changes.

Control laws also make turning easier. They protect against overbanking and, at the chosen bank attitude (less than 33° of bank), the system maintains zero roll rate, stick free.

Steep turns can be made at up to 67° of bank. This is the steepest bank at which it is possible to maintain level flight at 2.5g.

Beyond 33° of bank, the pitch trim stops working and a lateral stability term is introduced. This term becomes progressively stronger, as the bank angle increases, so that it equals a full sidestick demand at 67° of bank, hence forming the limiting system.

The lack of pitch trim makes it necessary for the pilot to hold the nose up in a steep turn. If he releases the stick, the nose drops and the aircraft eases its roll angle to less than 33° of bank and stabilizes at the pitch and bank angles it achieves at less than 33° of bank.

During a normal entry into a turn, the pilot must make an intentional initial change to the pitch attitude in order to maintain level flight. Once he has done this, he can release the stick. The system then maintains a level turn.

In climb, cruise, descent, and approach all these basic rules remain in effect.

LANDING MODE

The system's landing mode gives the aircraft a stabilized flight path and makes a conventional flare and touchdown. It carries out the initial approach as this manual described earlier. At 100 feet, the normal flight law is changed to the flare law which is a full authority pitch direct law compensated for CG and for certain pitching effects so that the pilot has to exert a progressive pull to increase pitch gently in the flare. He should pull the thrust levers back at or above 20 feet, and the landing should occur without a long flare. An audible "RETARD" callout reminds the pilot if he has not pulled back the thrust levers when the aircraft has reached 20 feet.

R Crosswind landings are conventional. The preferred technique is to use the rudder to align
R the aircraft with the runway heading, during the flare, while using lateral control to maintain
R the aircraft on the runway centerline (Refer to SOP 3.03.22). The lateral control mode does not change until the wheels are on the ground, so there is no discontinuity in the control laws. The aircraft tends to roll gently in the conventional sense as drift decreases, and the pilot may have to use some normal cross control to maintain roll attitude.

Even during an approach in considerable turbulence, the control system resists the disturbances quite well without pilot inputs. In fact, the pilot should try to limit his control inputs to those necessary to correct the flight path trajectory and leave the task of countering air disturbances to the flight control system.

Derotation is conventional.

Pitch trim then resets to 4° UP after the transition to ground law, which happens 5 seconds after the ground condition is confirmed and if the ground spoilers are retracted.

ABNORMAL OPERATIONS

ENGINE FAILURE AT TAKEOFF

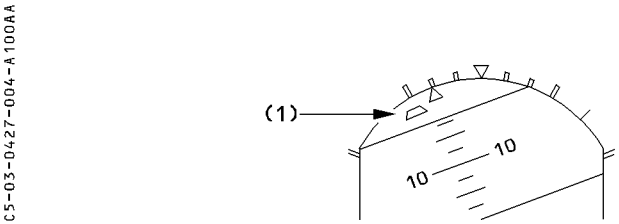

GFC5-03-0427-004-A100AA

On the ground the aircraft is conventional. The pilot uses rudder to maintain direction. He should rotate to about 12.5° of pitch and adjust as required. The sideslip indication (1) changes to the engine-out mode (blue). When it is centered, the aircraft is close to the zero aileron position (best drag condition). It is therefore important to zero the slip indication accurately.

Trim the rudder conventionally.

When time permits, the pilot should check the FLT CTL page on ECAM and refine the rudder trim to give neutral lateral control, and also trim the rudder toward the spoilers that are up or toward the aileron that is farthest up to bring the lateral controls back to neutral.

ENGINE-OUT LANDING

The engine-out landing is basically a conventional landing. The pilot should trim to maintain the slip indication centered. It is yellow, as long as N1 is less than 80 %. To make the landing run easier, it is recommended that, in the later stages of the approach, the rudder be reset to zero. With trim at zero, the neutral rudder pedal position corresponds to zero rudder and zero nosewheel deflection.

GO-AROUND WITH ONE ENGINE FAILURE

The piloting technique, in this case is, similar to that for an engine failure at takeoff :
- Zero beta target value for optimum performance with appropriate rudder application.
- At certain weights and CG positions, it will not be possible to satisfy beta target demands at VLS. When obstacle clearance is assured, accelerate to a speed at which beta target can be satisfied.

R BOUNCE AT LANDING

R In case of a light bounce, maintain the current pitch attitude and complete the landing,
R while maintaining the thrust at idle. In case of a strong bounce, initiate a go-around, initially
R maintaining the pitch attitude. Retract the flaps one step, and then the landing gear, once
R the aircraft is properly established on the go-around segment. In all cases, do not attempt
R to soften the (potential) second touchdown by increasing the pitch attitude.

TRAINING TOUCH-AND-GO

With the nosewheel on ground, pitch trim automatically resets to 4° UP : This normally occurs 5 seconds after the pitch attitude is less than 2.5°, and if the ground spoilers are retracted. The pilot should select CONF 2 and add thrust. He must always move the thrust levers to TOGA to bring up the speed reference system (SRS), and then reduce to a lower thrust (not less than CL), if he chooses. Takeoff may be a little out of trim, which may affect the rotation slightly, but once the aircraft is off the ground, the control law holds the “out of trim”, then retrims at 50 feet, provided the aircraft has transitioned to flight law.

ABNORMAL CONTROL LAWS – GENERAL

ALTERNATE LAW

Pitch alternate and roll normal is the first level of degraded control law.
Further failures result in pitch alternate and roll direct.
The autopilot may be available, depending on the cause and type of failure(s).

DIRECT LAW

The sidestick is directly coupled to the controls via the computers, but without any of the stabilization feedbacks. In effect, this law turns the aircraft into a conventional aircraft, but is compensated for configuration and CG. The pilot must use manual pitch trim, as signaled on the PFD. The autopilot is not available.

MECHANICAL BACKUP

The pilot can use the pitch trim and rudder to control the aircraft for short periods of total loss of fly-by-wire.

ABNORMAL CONTROL LAWS – IN DETAIL

ALTERNATE LAW

Pitch

Alternate law in pitch is almost the same for the pilot, as normal control law.

However, alternate law does not maintain any of the protections, except maneuver protection. As a result, the pilot must fly the aircraft more attentively to avoid inadvertently exceeding the normal limits.

R Alternate law reduces MMO to 0.82, and VMO to 330 knots.

An aural "STALL, STALL, STALL" warning sounds at low speeds. Upon hearing it, the pilot must return to the normal operating speed by taking conventional actions with the controls:

THRUST LEVERS . . . . . .TOGA

At the same time :

PITCH ATTITUDE . . . . . .REDUCE

BANK ANGLE . . . . . .ROLL WINGS LEVEL

SPEEDBRAKES . . . . . .CHECK RETRACTED

- If a danger of ground contact exists, reduce pitch attitude no more than necessary to allow airspeed to increase. After initial recovery, maintain speed close to VSW until it is safe to accelerate.
- If below 20000 feet, and if in clean, select FLAP 1.
- Out of stall, when there is no threat of ground contact :

  LANDING GEAR . . . . . .UP

  – Recover to normal speeds and select flaps as required.
  – In case one engine is inoperative, use power and rudder with care.

The aural stall warning may also sound at high altitude, where it warns that the aircraft is approaching the angle of attack for the onset of buffet. To recover, the pilot must relax the back pressure on the sidestick and reduce bank angle, if necessary. When the stall warning stops, the pilot can increase back pressure again, if necessary, to return to the planned trajectory.

ENGINE-OUT LANDING

The engine-out landing is basically a conventional landing. The pilot should trim to maintain the slip indication centered. It is yellow, as long as N1 is less than 80 %. To make the landing run easier, it is recommended that, in the later stages of the approach, the rudder be reset to zero. With trim at zero, the neutral rudder pedal position corresponds to zero rudder and zero nosewheel deflection.

GO-AROUND WITH ONE ENGINE FAILURE

The piloting technique, in this case is, similar to that for an engine failure at takeoff :
- Zero beta target value for optimum performance with appropriate rudder application.
- At certain weights and CG positions, it will not be possible to satisfy beta target demands at VLS. When obstacle clearance is assured, accelerate to a speed at which beta target can be satisfied.

R BOUNCE AT LANDING

R In case of a light bounce, maintain the current pitch attitude and complete the landing,
R while maintaining the thrust at idle. In case of a strong bounce, initiate a go-around, initially
R maintaining the pitch attitude. Retract the flaps one step, and then the landing gear, once
R the aircraft is properly established on the go-around segment. In all cases, do not attempt
R to soften the (potential) second touchdown by increasing the pitch attitude.

TRAINING TOUCH-AND-GO

With the nosewheel on ground, pitch trim automatically resets to 4° UP : This normally occurs 5 seconds after the pitch attitude is less than 2.5°, and if the ground spoilers are retracted. The pilot should select CONF 2 and add thrust. He must always move the thrust levers to TOGA to bring up the speed reference system (SRS), and then reduce to a lower thrust (not less than CL), if he chooses. Takeoff may be a little out of trim, which may affect the rotation slightly, but once the aircraft is off the ground, the control law holds the “out of trim”, then retrims at 50 feet, provided the aircraft has transitioned to flight law.

ABNORMAL CONTROL LAWS – GENERAL

ALTERNATE LAW

Pitch alternate and roll normal is the first level of degraded control law.
Further failures result in pitch alternate and roll direct.
The autopilot may be available, depending on the cause and type of failure(s).

DIRECT LAW

The sidestick is directly coupled to the controls via the computers, but without any of the stabilization feedbacks. In effect, this law turns the aircraft into a conventional aircraft, but is compensated for configuration and CG. The pilot must use manual pitch trim, as signaled on the PFD. The autopilot is not available.

BACKUP

The pilot can use the pitch trim and rudder to control the aircraft for short periods of total loss of fly-by-wire.

ABNORMAL CONTROL LAWS – IN DETAIL

ALTERNATE LAW

Pitch

Alternate law in pitch is almost the same for the pilot, as normal control law.

However, alternate law does not maintain any of the protections, except maneuver protection. As a result, the pilot must fly the aircraft more attentively to avoid inadvertently exceeding the normal limits.

Alternate law reduces MMO to 0.82.

An aural "STALL, STALL, STALL" warning sounds at low speeds. Upon hearing it, the pilot must return to the normal operating speed by taking conventional actions with the controls:

THRUST LEVERS . . . . . .TOGA

At the same time :

PITCH ATTITUDE . . . . . .REDUCE

BANK ANGLE . . . . . .ROLL WINGS LEVEL

SPEEDBRAKES . . . . . .CHECK RETRACTED

- If a danger of ground contact exists, reduce pitch attitude no more than necessary to allow airspeed to increase. After initial recovery, maintain speed close to VSW until it is safe to accelerate.
- If below 20000 feet, and if in clean, select FLAP 1.
- Out of stall, when there is no threat of ground contact :

  LANDING GEAR . . . . . .UP

  – Recover to normal speeds and select flaps as required.
  – In case one engine is inoperative, use power and rudder with care.

The aural stall warning may also sound at high altitude, where it warns that the aircraft is approaching the angle of attack for the onset of buffet. To recover, the pilot must relax the back pressure on the sidestick and reduce bank angle, if necessary. When the stall warning stops, the pilot can increase back pressure again, if necessary, to return to the planned trajectory.

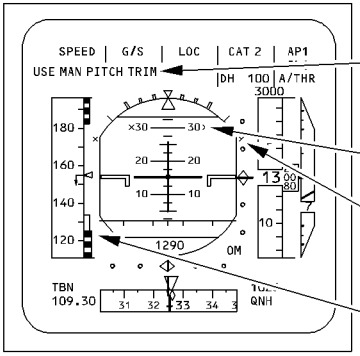

DISPLAYED WHEN IN PITCH DIRECT LAW
(AMBER)
REPLACED BY " MAN PITCH TRIM ONLY"
(RED) WHEN IN PITCH MECHANICAL BACKUP

AMBER INDICATION THAT PITCH ATTITUDE
LIMITATION IS NO LONGER AVAILABLE
(ALTERNATE OR DIRECT LAW)

AMBER INDICATION THAT BANK ANGLE
LIMITATION IS NO LONGER AVAILABLE
(ALTERNATE OR DIRECT LAW)

STALL WARNING SPEED (VSW)

At low speed, the change in the speed scale is very noticeable. VLS remains, but Vα PROT and Vα MAX disappear, replaced by a single black and red strip, the top of which is stall warning speed. Unlike VLS, which is stable, VSW is g sensitive so as to give additional margin in turns. As mentioned above, ALTERNATE reverts to DIRECT law for landing at 100 feet.

Roll

Roll control is direct. The roll rate is generally higher than with normal law and, at first, the aircraft appears to be very sensitive.

Bank stability and limits are no longer active, and the flight crew should be careful to remain within normal limits.

DIRECT LAW

Normally, direct law in pitch is transitory, due to undetected failures of, for example, a second IRS. Once the flight crew has isolated the failed system, the PRIMs can be reset to acquire alternate law in pitch.

When the system goes into direct law, “USE MAN PITCH TRIM” appears on the PFDs. This message flashes for five seconds, then remains steady.

The pilot should use small control inputs, when the aircraft is in direct law at high speed, because the controls are powerful. Good trimming in pitch is required.

The pilot should avoid using large thrust changes, or sudden speedbrake movements, particularly if the center of gravity is aft. If the speedbrakes are out, and the aircraft has been retrimmed, the pilot should gently retract the speedbrakes, giving time to retrim so as to avoid a large nose-down trim change.

The flight crew must fly the aircraft carefully at all times. Control is precise, but there are no protections.

The aural stall warning for alternate law also serves direct law, and the technique for recovery is the same.

Any tendency to roll stick free can be corrected by conventional use of rudder. Residual rudder forces can be trimmed out by using rudder trim in the direction of the applied force.

After trimming, the sideslip index will be slightly displaced from the center. With some failure conditions, the asymmetric rolling tendency may be increased. It will always be possible to trim the aircraft to flight straight, hands off. There may then be an asymmetry in roll response, but the achieved roll rate is always adequate. Landing in direct law is like landing a conventional aircraft. Trim changes to compensate for configuration changes are small, as is the trim change with speed change. Trim change with a large thrust change is quite large, so the pilot should make smooth thrust changes. The flare height for landing is the same (30 feet), and the pilot uses conventional techniques. (The controls remain light and powerful). Pilots have landed this aircraft in direct law, in moderate to heavy turbulence with gusting winds, without undue difficulty.
Direct law works with the yaw damper and provides a minimal turn coordination.

THE PROTECTION SYSTEMS

GENERAL

The aircraft has a comprehensive flight envelope protection system.
This system increases safety, if the pilot has to perform an extreme maneuver, or if the aircraft enters very violent meteorological conditions.
In either of these situations, the pilot can make full sidestick inputs in normal laws at any speed. The rudder is not protected in this way, but is not normally used during symmetrical flight.
The pilot will never see any aspect of this envelope protection take effect, as long as he flies the aircraft normally.

Note : The normal flight envelope is not different from that of a conventional aircraft, and is defined as VLS to VMO. Pilots should not deliberately fly at a speed that is lower than VLS, except for properly authorized training or testing.

ATTITUDE LIMITS

The system limits the aircraft to 67° of bank, which corresponds approximately to the bank angle needed for a level 2.5g turn.
The system limits pitch attitude to + 30° and – 15°. The + 30° limit decreases to 25° at low speed. If the aircraft attitude approaches these limits, the pitch and roll rates start to decrease 5° before the limit, so that it will stop at the limit without overshooting.

MANEUVER LIMIT

The aircraft is structurally designed to the same limits as any other large aircraft. The 2.5g limit (2g if not in clean configuration) allows the aircraft to make an abrupt maneuver, without structural risk, if such a maneuver becomes necessary.
When this occurs (after a ground proximity warning, for example), the pilot should quickly apply full control and hold it until the flight path is safe. Response time is a vital factor in avoidance : The system allows maneuvers that the pilot would normally not be able to safely perform at any altitude, low or high.

R EXCEEDING VMO/MMO

R During descent the aircraft may slightly exceed VMO/MMO with the autopilot engaged.
R This may happen when adverse conditions are encountered.
R Using the following procedure prevents such an exceedance during descent :
R 1. The current speed is close to VMO (maximum operating speed) :
R — Monitor the speed trend symbol on the PFD :
R · If the speed trend reaches or slightly exceeds the VMO limit :
R — Use the FCU immediately to select a lower speed target.
R · If the speed trend significantly exceeds the VMO red band, without high speed protection activation :
R — Select a lower target speed on the FCU and,if the aircraft continues to accelerate, consider disconnecting the AP.
R — Before re-engaging the autopilot, smoothly establish a shallower pitch attitude.
R 2. If the aircraft accelerates above VMO with the AP engaged :
R The AP will disengage upon reaching the high speed protection. The high speed protection will apply a nose-up order up to 1.75 g, in addition to pilot input during VMO recovery. Consequently :
R — Make a smooth pitch correction in order to recover proper speed.
R In all events :
R — Check AP engagement status and re-engage it when appropriate. It may have tripped if VMO/MMO was significantly exceeded. The associated aural warning may have been superseded by the overspeed aural warning.

HIGH SPEED PROTECTION

The aircraft automatically recovers following a high speed upset. Depending on the flight conditions (high acceleration, low pitch attitude) the High Speed Protection is activated at/or above VMO/MMO.
When it is activated, the pitch trim is frozen, spiral static stability is introduced to 0° bank
R angle (instead of 33° in normal law), and the bank angle limit is reduced from 67° to 45°.
As the speed increases above VMO/MMO, the side-stick nose-down authority is progressively reduced, and a permanent nose-up order is applied to aid recovery to normal flight conditions.
The High Speed Protection is deactivated when the aircraft speed decreases below VMO/MMO, where the usual normal control laws are recovered.
The flight crew should never deliberately fly the aircraft beyond VMO/MMO, unless absolutely necessary for operational reasons, such as avoiding another aircraft.
The pilot should, as soon as possible, reduce resistance to the High Speed Protection and allow the aircraft to return to a speed below VMO/MMO, by smoothly relaxing the forward stick force to attain a comfortable nose-up pitch rate. It is not usually necessary to apply a pull force to recover. If a quicker recovery is required for operational reasons, the pilot should pull back smoothly and progressively, monitoring the g indication on the ECAM".

STALL PROTECTION

The aircraft resists attemps by either a pilot or the atmosphere to stall it. If a pilot attemps a stall, he feels the aircraft trying to pitch down as speed approaches the amber and black strip. The pilot can resist this tendency until speed reaches the red band (alpha maximum), and then further nose-up control is not available. Between these two points alpha floor automatically sets go around thrust. The pilot can hold full back stick, if it is needed (see windshear), and the aircraft stabilizes at an angle of attack close to but short of the 1g stall. WHEN FLYING AT ALPHA MAX, THE PILOT CAN MAKE GENTLE TURNS, IF NECESSARY.
As the aircraft enters protection at the amber and black strip, the system inhibits further nose-up trim beyond the point already reached. Nose-down trim remains available if the pilot pushes the stick forward.
The pilot should not deliberately fly the aircraft in alpha protection except for brief periods when maximum maneuvering is required. If the pilot enters alpha protection inadvertently, he should get out of it as quickly as possible be easing forward on the sidestick to reduce the angle of attack while simultaneously adding power (if alpha floor has not already been activated or has been cancelled). The system will regain the normal load factor law if the stick is pushed forward of neutral, but it will re-enter alpha protection if the stick is released with the angle of attack still greater than the value set for alpha protection. Thus to exit alpha protection properly, the pilot should reduce angle attack to a value less than the value set for alpha protection.
The PFD shows this clearly, because the indicated speed is above the black and amber strip.
The pilot should now increase speed above VLS (clear of the amber strip) as soon as other considerations (ground clearance, for example) allow him to do so.
Alpha floor will usually be triggered just after alpha protection is entered, and go around thrust will automatically be applied. Thus, if the sidestick is held aft, either inadvertently or deliberately, the aircraft will start to climb at a relatively constant low airspeed. To recover to a normal flight condition, alpha protection should be exited by easing forward on the sidestick, as described above, and the alpha floor should be cancelled by using the disconnect pushbutton on either thrust lever as soon as a safe speed is regained.
The aircraft can also enter alpha protection at a high level, where it protects the aircraft from the buffet boundary. The PFD shows that alpha protection is active in the same way it does so at low speed or low level : the amber and black strip rises to the actual speed of the aircraft. As at low speed or low level, if the stick is merely released to neutral the aircraft maintains the alpha for alpha protection. (This value of alpha is not however the same as the values used at low speed : alpha for alpha protection is reduced as a function of Mach so that a typical cruise value is in the order of 5°). Thus the aircraft may climb, stick free, when leaving a turn after entering alpha protection. If the pilot has flown into alpha protection, he should leave it as soon as other considerations allow by easing forward on the stick to reduce alpha below the value of alpha protection while simultaneously increasing thrust or speed as appropriate.

WINDSHEAR

Most of the recommended techniques for flight in windshear apply. However, for this aircraft, the techniques are somewhat simpler.
The aircraft can only survive windshear if it has enough energy to carry it through the loss-of-performance field. It can sustain this energy level in the following three ways :
– Carry extra speed. In some cases, the aircraft does this automatically.
– Add maximum thrust. The aircraft does this automatically.
– Trade height energy for speed. Any aircraft can do this.
Proper pilot technique helps in this survival process. The pilot must follow orders from the Speed Reference System (SRS), even if he has to use full backstick in order to do so. At this stage, maintain full backstick until the shear is passed ; the aircraft will automatically hold close to the maximum angle of attack. The speed should stay close to the beginning of the red strip. But, in turbulence, it could be temporarily below it without significant effect. As speed begins to recover, the pilot can reduce backstick while still following SRS orders until well clear of the shear.

ABNORMAL CONFIGURATIONS

With the horizontal stabilizer jammed, control is much easier than it is in a conventional aircraft because the systems holds the elevator required to maintain the 1g flight path. The pitch control law reverts to alternate, and the lateral control law remains normal to touchdown.

AIRCRAFT TRIMMING

When the aircraft is :
– In the normal cruise range
– In straight flight,
– With the autopilot engaged,
– With symmetrical engine thrust, and
– With fuel symmetrically distributed in the wing tanks,
the rudder trim should stay between 1.9° right and 1.6° left.

R *Note : This indication corresponds to a true rudder deflection within ± 1°, taking into account the permanent rudder trim indication offset, when the aircraft is in cruise conditions (0.9° right, 0.6° left).*

FUEL JETTISON

Fuel jettison is provided for quick reduction of aircraft weight in order to :
- Comply with the approach and landing climb requirements (not required if the configuration is FLAP 3 for landing),
- Obtain the normal maximum landing weight (if time permits),
- Obtain the planned flight profile, in case of an engine failure en route.

It is possible to jettison in any convenient configuration and at any speed. When feasible, the height should be sufficient to avoid contamination on the ground (5 000 feet AGL is considered to be adequate).
Do not jettison in a thunderstorm.
When jettison is performed, avoid flying into the jettisoned flow (which is descending at about 500 feet/min).
Average weight reduction (by jettison only) is 1000 kg/min (2200 lbs/min).

AUTOMATIC MODE

On MCDU :

- **FUEL PRED key . . . . . SELECT**
- **JET GW . . . . . ENTER THE FINAL GW**

On OVERHEAD panel :

- **T TANK MODE . . . . . CHECK AUTO**
- **JETTISON ARM . . . . . ON**
- **JETTISON ACTIVE . . . . . ON**

Note : If T TANK XFR FAULT ECAM warning is triggered, disregard the ECAM procedure.

CAUTION

During jettison operation, monitor the CG.
R If either the forward or aft takeoff and landing limit is reached, stop jettison.

- **When jettison is completed, or to manually stop JETTISON operation :**

- **JETTISON ACTIVE . . . . . OFF**

– **JETTISON ARM . . . . . OFF**

Note : 1. Jettison operation is automatically stopped, when the actual GW reaches the value inserted in the MCDU.
2. Automatic jettison can be restarted by re-entering the JET GW.

MANUAL MODE

On the MCDU, if necessary :

– **FUEL PRED key . . . . . SELECT**

– **JET GW . . . . . CLEAR**

On the OVERHEAD panel :

– **T TANK MODE . . . . . CHECK AUTO**

– **JETTISON ARM . . . . . ON**

– **JETTISON ACTIVE . . . . . ON**

Note : If the T TANK XFR FAULT ECAM warning is triggered, disregard the ECAM procedure.

CAUTION
During jettison operation, monitor the CG.
If either the forward or aft takeoff and landing limit is reached, stop jettison.

- **To stop JETTISON operation :**

– **JETTISON ACTIVE . . . . . OFF**

– **JETTISON ARM . . . . . OFF**

CAUTION
The fuel will be jettisoned until both ETOPS level sensors become dry, or until the flight crew turns off the jettison pushbuttons.

ICING CONDITIONS

Icing conditions may be expected when the OAT (on ground and for takeoff), or the TAT (in flight) is 10°C or below, and there is visible moisture in the air (such as clouds, fog with low visibility of one mile or less, rain, snow, sleet, ice crystals), or when standing water, slush, ice or snow is present on the taxiways or runways.

WARNING

Pilots must turn on the engine anti-ice system, when temperature and visible moisture meet these criteria, and should not wait until they see ice building up.

OPERATIONS IN ICING CONDITIONS

Flight in icing conditions

- **Engine anti-ice**

  ENGINE ANTI ICE must be ON during all ground and flight operations, when icing conditions exist, or are anticipated, except during climb and cruise when the SAT is below – 40°C.

  ENGINE ANTI ICE must be ON before and during a descent in icing conditions, even if the SAT is below – 40°C.

- **Wing anti-ice**

  The flight crew may use WING ANTI ICE to either prevent ice formation, or to remove an ice accumulation from the wing leading edges.

  The flight crew should turn WING ANTI-ICE ON, whenever there is an indication that the airframe is icing up. The indication may be an accumulation of the ice on the ice detector (between the two cockpit windshields), or on the windshield wipers.

CAUTION

R 1. The pilot should avoid extended flight in icing conditions with the slats extended.
R 2. In case of suspected significant ice accumulation on non de-iced parts of the
R airframe, the approach speed must not be lower than :
R – In clean configuration, VLS + 15 knots.
R – In CONF 1, 2, 3, FULL, VLS + 5 knots, and multiply the landing distance by
R 1.1.
R 3. In case of suspected significant ice accumulation on de-iced parts (WING ANTI
R ICE inoperative) of the airframe, the approach speed must not be lower than:
R – In clean configuration, VLS + 15 knots ;
R – In CONF 1, 2, 3, FULL, VLS + 10 knots, and multiply the landing distance by
R 1.2.

Ground operation in icing conditions

See the Contaminated Runways section (2 04.10).
See the Adverse Weather section for aircraft preparation in cold weather (3.04.91).
See the Standard Operating Procedures for engine operations (3.03.09).

RAIN REPELLENT

If the rain repellent is operative, the flight crew should only use the rain repellent in moderate to heavy rain.

USE OF FLIGHT PATH VECTOR

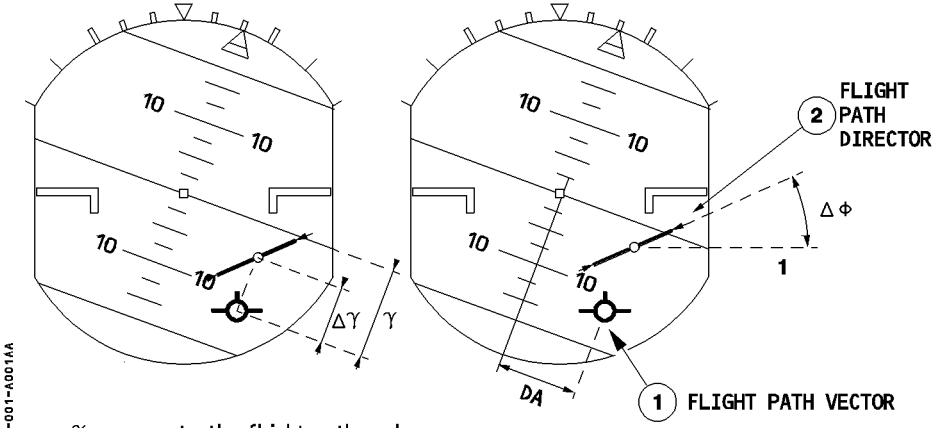

γ represents the flight path angle
DA represents the drift angle
Δγ represents the difference between the ordered flight path angle and the actual one
ΔΦ represents the difference between the ordered roll angle and the actual one

R The flight path vector (FPV) indicates performance and does not direct or command. Because there is always a slight lag between an attitude change and the change in flight path that results from it, when the pilot uses the FPV he should make an attitude change first, then use the FPV to check the resulting flight path.

R Vertically the FPV indicates the aircraft's flight path angle.

R The FPV is particularly useful when the aircraft is doing visual circuits. For example, when the aircraft is flying downwind the pilot simply adjusts the aircraft attitude to put the FPV symbol on the horizon. This establishes the aircraft in level flight. On the final approach, the pilot puts the FPV three degrees below the horizon to establish the aircraft at a normal angle of descent. If this results in the aircraft going below the chosen approach path (undershooting the touchdown point), the pilot can reduce the angle of descent by raising the FPV. As soon as the aircraft regains the correct descent path, he should bring the FPV back to –3°.

R Laterally, the FPV indicates the aircraft's track and its drift angle. It has the same displacement as the drift diamond on the heading scale and thus appears directly above it. It shows on the PFD the drift the aircraft is experiencing.

R The pilot must take care when making a go-around with the FPV selected. There is inevitably some lag between the pilot's raising the nose to commence the go-around and the aircraft's responding by changing its trajectory. For the same reason the pilot does not use the FPV on takeoff: the primary parameter for rotation, either on takeoff or on go-around, is attitude.

R The TRK-FPA Flight Director is particularly useful for guiding the aircraft during
R non-precision approaches, although it can also be used at other times. When using this
R mode of the FD, the pilot places the FPV symbol in the center of the flight path director
R (FPD) symbol. This is similar to using the FD in HDG-VS, when the pilot puts the center of
R the fixed aircraft symbol at the center of the crossed bars of the FD. If the FCU is set on
R the correct track and flight path angle, and if the FPV and the FPD are aligned, they will
R guide the aircraft along a trajectory that is stabilized with respect to the ground, whereas
R when the pilot is using HDG-VS the trajectory is stabilized with respect to the air. However,
R if the aircraft is disturbed from this ideal trajectory, merely following the FPD will result in
R its following a trajectory that is parallel to the intended trajectory. Thus, when the aircraft
R is disturbed from the original trajectory, the pilot must adjust either its track or its flight
R path angle or both in order to obtain guidance back to the original trajectory. Likewise,
R when the pilot uses the FPA to create a synthetic glide path, it will be positioned correctly
R only if it commences at the right point in space.

R **BSCU RESET**

R In case of braking/steering difficulty, the crew may perform a BSCU reset to recover correct
R functioning of the system. In particular, this applies in the case of any of the following
R ECAM warnings :
R – WHEEL N.W. STEER FAULT
R – BRAKES RESIDUAL BRAKING
R – BRAKES AUTO BRAKE FAULT (except in flight)
R – BRAKES BSCU CH1 (2) FAULT or SYS 1(2) FAULT
R · On ground, aircraft stopped and parking brake applied, by switching OFF then ON the
R A/SKID & N/W STRG selector.
R After any BSCU reset on ground, check the braking efficiency of the normal braking
R system once the aircraft starts moving again (the aircraft must slow down when
R pressing the brake pedals).
R · In flight, with the landing gear retracted, by switching OFF then ON the A/SKID & N/W
R STRG selector.
R In the case of an AUTO BRAKE FAULT, a reset should not be performed in flight so as
R to avoid clearing a real tachometer failure (no tachometer test in flight).
R If required, the autobrake has to be rearmed.

R *Note : Checking the normal braking after a BSCU reset in flight is not necessary (and*
R *not possible), since the BSCU would detect any loss of normal braking at*
R *touchdown, and the ECAM would inform the crew of the switch to alternate*
R *braking without antiskid.*

BRAKING IN ALTERNATE MODE

Apply brakes with care, since initial pedal force or displacement produces more braking action in alternate mode than in normal mode. If antiskid is lost, modulate brake pressure as required at or below 1000 psi. If nosewheel steering is lost, steer the aircraft with differential braking.

BRAKE TEMPERATURE LIMITATIONS REQUIRING MAINTENANCE ACTIONS

Maintenance action is due in the following cases :
– Temperature difference between 2 brakes on a same gear is greater than 150°C, and either temperature of one brake is higher or equal to 600°C, or
– Temperature difference between 2 brakes on a same gear is greater than 150°C, and the temperature of one brake is lower or equal to 60°C, or
– The difference between the LH and RH brake average temperature is higher or equal to 200°C , or
– A fuse plug has melt, or
– The brake temperature exceeds 800°C.

TIRE PRESSURE

R These tables present the different nominal tire pressures, depending on maximum takeoff weight and landing gear loading.

R

A330–200	NOSE				MAIN			
	Unloaded		Loaded		Unloaded		Loaded	
MAXIMUM TAKEOFF WEIGHT	bar	psi	bar	psi	bar	psi	bar	psi
202 000 KG / 445 329 LB 220 000 KG / 485 012 LB 230 000 KG / 507 058 LB 233 000 KG / 513 672 LB	12.2	177	12.7	184	13.6	198	14.2	206

A330–300	NOSE				MAIN			
	Unloaded		Loaded		Unloaded		Loaded	
MAXIMUM TAKEOFF WEIGHT	bar	psi	bar	psi	bar	psi	bar	psi
184 000 KG / 405 646 LB	10.2	148	10.7	155	12.6	183	13.1	189
205 000 KG / 451 943 LB	10.5	152	10.9	158	12.8	186	13.3	194
212 000 KG / 467 375 LB	10.2	148	10.7	155	12.6	183	13.1	189
215 000 KG / 473 989 LB 217 000 KG / 478 398 LB 218 000 KG / 480 603 LB	10.5	152	10.9	158	12.8	186	13.3	194
230 000 KG / 507 058 LB	11.0	160	11.4	165	13.6	198	14.2	206
233 000 KG / 513 672 LB	11.2	162	11.6	168	13.9	202	14.5	210

R **BSCU RESET**

R In case of braking/steering difficulty, the crew may perform a BSCU reset to recover correct
R functioning of the system. In particular, this applies in the case of any of the following
R ECAM warnings :
R – WHEEL N.W. STEER FAULT
R – BRAKES RESIDUAL BRAKING
R – BRAKES AUTO BRAKE FAULT (except in flight)
R – BRAKES BSCU CH1 (2) FAULT or SYS 1(2) FAULT
R · On ground, aircraft stopped and parking brake applied, by switching OFF then ON the
R A/SKID & N/W STRG selector.
R After any BSCU reset on ground, check the braking efficiency of the normal braking
R system once the aircraft starts moving again (the aircraft must slow down when
R pressing the brake pedals).
R · In flight, with the landing gear retracted, by switching OFF then ON the A/SKID & N/W
R STRG selector.
R In the case of an AUTO BRAKE FAULT, a reset should not be performed in flight so as
R to avoid clearing a real tachometer failure (no tachometer test in flight).
R If required, the autobrake has to be rearmed.

R *Note : Checking the normal braking after a BSCU reset in flight is not necessary (and*
R *not possible), since the BSCU would detect any loss of normal braking at*
R *touchdown, and the ECAM would inform the crew of the switch to alternate*
R *braking without antiskid.*

BRAKING IN ALTERNATE MODE

Apply brakes with care, since initial pedal force or displacement produces more braking action in alternate mode than in normal mode. If antiskid is lost, modulate brake pressure as required at or below 1000 psi. If nosewheel steering is lost, steer the aircraft with differential braking.

BRAKE TEMPERATURE LIMITATIONS REQUIRING MAINTENANCE ACTIONS

Maintenance action is due in the following cases :
– Temperature difference between 2 brakes on a same gear is greater than 150°C, and either temperature of one brake is higher or equal to 600°C, or
– Temperature difference between 2 brakes on a same gear is greater than 150°C, and the temperature of one brake is lower or equal to 60°C, or
– The difference between the LH and RH brake average temperature is higher or equal to 200°C , or
– A fuse plug has melt, or
– The brake temperature exceeds 900°C.

TIRE PRESSURE

R These tables present the different nominal tire pressures, depending on maximum takeoff weight and landing gear loading.

R

A330–200	NOSE				MAIN			
	Unloaded		Loaded		Unloaded		Loaded	
MAXIMUM TAKEOFF WEIGHT	bar	psi	bar	psi	bar	psi	bar	psi
202 000 KG / 445 329 LB 220 000 KG / 485 012 LB 230 000 KG / 507 058 LB 233 000 KG / 513 672 LB	12.2	177	12.7	184	13.6	198	14.2	206

A330–300	NOSE				MAIN			
	Unloaded		Loaded		Unloaded		Loaded	
MAXIMUM TAKEOFF WEIGHT	bar	psi	bar	psi	bar	psi	bar	psi
184 000 KG / 405 646 LB	10.2	148	10.7	155	12.6	183	13.1	189
205 000 KG / 451 943 LB	10.5	152	10.9	158	12.8	186	13.3	194
212 000 KG / 467 375 LB	10.2	148	10.7	155	12.6	183	13.1	189
215 000 KG / 473 989 LB 217 000 KG / 478 398 LB 218 000 KG / 480 603 LB	10.5	152	10.9	158	12.8	186	13.3	194
230 000 KG / 507 058 LB	11.0	160	11.4	165	13.6	198	14.2	206
233 000 KG / 513 672 LB	11.2	162	11.6	168	13.9	202	14.5	210

OPERATION WITH NOSEWHEEL STEERING OFFSET

GENERAL

During taxi, the crew may notice an aircraft veering tendency. It can be due to some external conditions (crosswind, slope....), or it can be due to the nosewheel steering
R system itself. The latter case is identifiable due to flight crews' repetitive reports of
R permanent aircraft veering tendency. Such reports enable maintenance to determine when
R corrective action or troubleshooting is required.

A veering aircraft may still be operated before corrective action is taken, provided nosewheel steering deviation is within the values specified in the following table.

NWS OFFSET OPERATIONAL LIMITATION

NWS Offset	Offset ≤ 0.8°	0.8° < Offset ≤ 2°	Offset > 2°
Rudder trim to taxi straight	Trim ≤ 4°	4° < Trim ≤ 10°	Trim > 10°
Dispatch	YES	YES	NO
Procedures	No operational limitation	Apply the following procedure At landing : – DIFF BRK . . . . . AS REQUIRED Manual landing : – MAX X WIND . . . . . 25KT Autoland : – MAX X WIND 14KT	Immediate maintenance action is due

CAUTION

The tolerance required by maintenance (± 0.5° NWS offset, corresponding to the ± 2.5°
R rudder trim necessary to taxi straight) remains valid. Operating the aircraft outside the
R maintenance tolerance is possible by using the applicable procedure. However, in such
R cases, the flight crew must accurately and systematically make logbook entries
R (indicating the rudder trim input value to taxi straight) to ensure that maintenance can
R take corrective action within the applicable timeframe.

When using rudder trim to taxi straight for NWS offset identification, takeoff must only be performed after a rudder trim reset.

OPERATION WITH NOSEWHEEL STEERING OFFSET

GENERAL

During taxi, the crew may notice an aircraft veering tendency. It can be due to some external conditions (crosswind, slope....), or it can be due to the nosewheel steering system itself. The latter case is identifiable due to repetitive flight crew reports of permanent aircraft veering tendency. Such reports enable maintenance to determine when corrective action or troubleshooting is required.
A veering aircraft may still be operated before corrective action is taken, provided nosewheel steering deviation is within the values specified in the following table.

NWS OFFSET OPERATIONAL LIMITATION

NWS Offset	Offset ≤ 0.8°	0.8° < Offset ≤ 2°	Offset > 2°
Rudder trim to taxi straight	Trim ≤ 6°	6° < Trim ≤ 12°	Trim > 12°
Dispatch	YES	YES	NO
Procedures	No operational limitation	Apply the following procedure At landing : – DIFF BRK . . . . . AS REQUIRED Manual landing : – MAX X WIND . . . . . 25KT Autoland : – MAX X WIND 14KT	Immediate maintenance action is due

CAUTION

The tolerance required by maintenance (± 0.5° NWS offset, corresponding to the ± 5° rudder trim necessary to taxi straight) remains valid. Operating the aircraft outside the maintenance tolerance is possible by using the applicable procedure. However, in such cases, the flight crew must accurately and systematically make logbook entries (indicating the rudder trim input value to taxi straight) to ensure that maintenance can take corrective action within the applicable timeframe.
When using rudder trim to taxi straight for NWS offset identification, takeoff must only be performed after a rudder trim reset.

PROCEDURES FOR TUNING STANDBY NAVIGATION RADIOS

CAUTION

Pilots should use these procedures only when both FMGCs or all MCDUs are inoperative.
In this case they must press both RMP NAV keys (lighting the green lights).

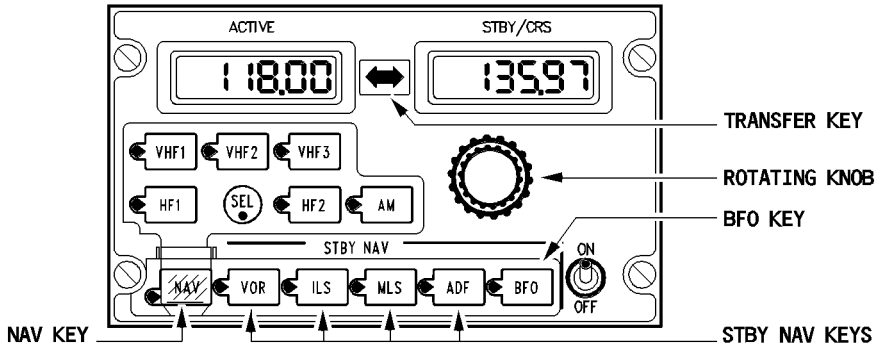

ON BOTH RMP

– **ON/OFF Switch** . . . . . **CHECK ON**

– **NAV key (guarded)** . . . . . **PRESS**

R The green light comes on.
System and frequencies previously selected in STBY NAV mode are indicated (STBY NAV key illuminated, ACTIVE and STBY frequencies displayed)

ON THE RMP ASSOCIATED WITH THE RECEIVER TO BE TUNED

Select a STBY NAV system :

● **ADF tuning :**

– **ADF key** . . . . . **PRESS**

R The green light comes on.
The windows show the previously selected frequencies.

– **Rotating knob** . . . . . **TURN**

Select the desired frequency displayed on STBY/CRS window.

R The outer knob changes units, inner knob decimals.

– **Transfer key** . . . . . **PRESS**
This interchanges the ACTIVE and STBY frequencies. The ADF receiver is now tuned to the new ACTIVE frequency.

– **BFO key (if necessary)** . . . . . **PRESS**
Green light comes on.

● **VOR (or ILS) tuning :**

– **VOR (or ILS) key** . . . . . **PRESS**
Green light comes on.
Both windows display previously selected frequencies.

– **Rotating knob** . . . . . **TURN**
Set the frequency in the STBY/CRS window.

– **Transfer key** . . . . . **PRESS**
The ACTIVE window displays the selected frequency.
The previous VOR (ILS) course is displayed on the STBY/CRS window.

– **Rotating knob** . . . . . **TURN**
Set the course on the STBY/CRS window.
The receiver is now tuned to the frequency of the new station, and the course is selected.
To select another station, press the transfer key making both windows display the previously selected frequency before retuning the VOR (or ILS).

Note : When the radio-nav standby mode is active (NAV key ON) and VHF or HF tuning is required, select the VHF or the HF key on the RMP (normal radio communications use). The NAV key, which has no effect on the selection of a radio communication frequency, must remain in the ON position in order to prevent radio navigation aid tuning from changing NAV receiver frequencies.

AUTOMATIC IDENTIFICATION OF ADF/VOR/ILS

Although the navigation display automatically identifies the tuned ADF, VOR, or ILS station (auto ident decoded), the flight crew must, in the following cases, confirm the correct tuning of the desired station via the audio system :

– A station has either been automatically tuned, or manually tuned by a crew member that enters the associated ident on the MCDU RAD NAV page ; and the decoded ident appearing on the ND is the wrong one.
– A crewmember manually tunes the station on an RMP, or enters the frequency on the MCDU RAD NAV page.

WEATHER RADAR

R Airborne weather radar gives the flight crew an efficient tool for detecting bad weather
R during flight. The digital weather radar with its multicolor navigation display allows the
R crew to follow the best route to avoid weather problems.
To this end, some operational advice, based upon a general knowledge of the radar capabilities, is given in this chapter.

R GENERAL

R The radar is nothing more than a precipitation detector. How much weather it detects
R depends upon the raindrops, their size, composition and number.
R The radar does not detect :
· clouds, fog or wind (too small droplets or no precipitation at all)
· clear air turbulence (no precipitation)
· windshear (no precipitation except in microburst)
· lightning.
R The radar does detect :
· rainfall
· wet hail and wet turbulence
· ice crystals, dry hail and dry snow (above 30 000 feet) will only give small reflections.

OPERATIONAL FUNCTIONS

TILT, RANGE AND GAIN

R The three things that the flight crew must understand in order to take full advantage of the
R weather radar are :
R — antenna tilt, which causes the center of the radar beam to scan above or below the
R attitude reference plane
R — range control which, in coordination with tilt governs the range of the navigation display
R — gain control, which adjusts the sensitivity of the receiver (and should normally be set
R to AUTO). The sensitivity of the receiver may vary from one type of radar system to
R another.

COLOR CODE

R A color code distinguishes areas by the intensity of the precipitation in them :
R — black for the lowest intensity (nothing appears on the ND)
R — green, amber and red for progressively higher intensities
R — magenta for saturated areas, in the weather and turbulence mode (WX + T).

GROUND MAPPING – GROUND CLUTTER SUPPRESSION

Furthermore, if provided, two more functions may be used.

- Ground Mapping mode enables more returns to be produced from less reflective targets on the ground. The associated color code is thus : Black for standing water (no returns), green for the ground, and amber/red for cities and mountains (strong returns).
- Ground Clutter Suppression erases up to 85 % of ground clutter targets. But this mode should only be used at shallow tilt angles (0 to 5° down), and only momentarily since stationary weather targets might be incorrectly identified.
  Steep tilt angles can cause ground and weather targets to be confused.

OPERATIONAL USE

CAUTION

Before selecting WX, WX/T, or MAP mode on the control unit, make certain that :

- No one is within a distance less than 5 meters from the antenna in movement within an arc of plus or minus 135° on either side of the aircraft centerline.
- The aircraft is not directed towards any large metallic obstacle, such as a hangar, which is within 5 meters in an arc of plus or minus 90° on either side of the aircraft centerline.

TILT AND RANGE MANAGEMENT

Refer to 3.03

DETECTION AND INTERPRETATION ADVICE

General

1. Weather monitoring should be done at longer ranges, in order to assess weather developments and, thus, plan course changes.
2. Shorter ranges should periodically be changed to larger ranges to observe distant conditions and avoid blind alley or box canyon situations.
3. Generally speaking, ground returns appear smaller, sharper, more packed, well-defined, and usually more angular than weather targets ; whereas, the latter usually appear with less definite shapes and tend to remain relatively unchanged.
4. It is recalled that the line of sight distance to the horizon is :
   $D(NM) = 1.25 \sqrt{\text{(Aircraft altitude (feet))}}$.

Red/magenta areas : Thunderstorm, tornado, hail

It is recalled that the greater the rate of rainfall, the stronger the turbulence (magenta color) and the possibility of hail.

- To cope with thunderstoms, the following ranges should be selected on the NDs (if possible) :
  at least : 160 NM on the PNF ND
  80 NM on the PF ND
- In case of a large storm, the avoidance decision should be taken at 40 NM from the cell. To this end, the following recommendations apply :
  - Avoid magenta (Wx/T mode) /red areas and fringes by at least 20 NM if above the FL 230 and by 5 to 10 NM if below FL 230.
  - Avoid single magenta areas of turbulence (not associated with heavy precipitation) by at least 5 NM.
- Frequent tilt readjustments are recommended to monitor the storm development and to provide the maximum cell echo.
- Do not forget that omission to periodically adjust the tilt downwards causes targets to disappear.
- The following formula may be used to determine the vertical distance between the top of the cell and the aircraft flight level :

$$\triangle h \text{ (feet)} \sim d(NM) \times \text{Tilt (degrees)} \times 100.$$

Example :
Cell at 40 NM disappearing at less than 3 degrees downtilt
$\triangle h \sim 40 \times 3 \times 100 = 12000$ feet.

- Penetration or overflying by less than 5000 feet should not be attempted since severe turbulence might be encountered.

R If the top of cell is at or above 25000 feet, overflying should be avoided due to the
R possibility of encountering turbulence stronger than expected.
In the same way, flight under a thunderstorm should be avoided due to possible windshears, microbursts, severe turbulence or hail.

Turbulence mode : Wx + T

- The turbulence detection mode provides the most effective detection when on the 40 nm range on ND and with an appropriate tilt such that no ground returns are produced.
- As for heavy rainfall areas it is recommended to adjust frequently the tilt antenna, when in Wx + T mode, since turbulence areas vary with altitude.
- It is worth noting that closely spaced (or thin lines between) color gradations are usually associated with severe turbulence.

FLIGHT INSTRUMENT TOLERANCES

The values given below apply to an aircraft in symmetrical flight (no side slip), in clean configuration, in a straight and level flight.

ALTITUDE TOLERANCES :

– PFD 1 or PFD 2 at ground check : ± 25 ft
– STBY ALTI at ground check : ± 300 ft

Note : On ground, the vibrator of stand-by altimeter is off ; this is why the STBY ALTI tolerance value is high. In flight, the vibrator is on and the value is reduced.

MAXIMUM DIFFERENCES BETWEEN ALTITUDE INDICATIONS.

	ALTITUDE (ft) COMPARISON BETWEEN		
	ADR 1 and ADR 2 (on PFD)	ADR 3 and ADR 1 or ADR 3 and ADR 2 (on PFD)	STBY ALTI and any ADR 1 or 2 or 3
GND CHECK	20	20	*
FL 50/250 kt	55	55	90
FL 100/250 kt	60	60	130
FL 200/300 kt	95	100	220
FL 300/0.82	120	130	320
FL 410/0.82	145	150	380

* on ground, the check is meaningless as the stand-by altimeter vibrator is off

MAXIMUM DIFFERENCES BETWEEN SPEED/MACH INDICATIONS.

	SPEED (kt) MACH COMPARISON BETWEEN					
	ADR 1 and ADR 2 (on PFD)		ADR 3 and ADR 1 or ADR 3 and ADR 2 (on PFD)		STBY ASI and any ADR 1 or 2 or 3	
	SPEED	MACH	SPEED	MACH	SPEED	MACH
GND CHECK	6	0.008	6	0.008	6	–
FL 50/250 kt	4	0.010	4	0.010	7	–
FL 100/250 kt	4	0.009	4	0.009	7	–
FL 200/300 kt	3	0.008	3	0.009	8	–
FL 300/0.82	3	0.009	3	0.009	8	–
FL 410/0.82	4	0.009	4	0.009	7	–

MAXIMUM DIFFERENCE BETWEEN ND MAGNETIC HEADING INDICATIONS :

R Maximum difference between magnetic heading indications on the NDs : 4 degrees.

TCAS

For system description refer to FCOM volume 1 chapter 34.
For operational procedures, refer to the ABN and EMER procedures of the FCOM Vol 3.

CONFLICT RESOLUTION PRINCIPLES

– **Traffic Advisory (TA)**
If an intruder represents a potential collision threat, a visual and aural TRAFFIC ADVISORY will be given. This advisory helps the crew to visually situate the intruder. It also prepares the crew for a possible RESOLUTION ADVISORY. However, not every RA is preceded by a TA.

– **Resolution Advisory (RA)**
If the intruder is considered to be a real collision threat, an aural and visual Resolution Advisory is given. TCAS determines the optimum vertical maneuver that ensures effective separation, with a minimum change in vertical speed. Depending on each situation, TCAS will generate a :
· Preventive Advisory (i.e. the actual vertical speed may be maintained). It displays the vertical speed range to be avoided.
· Corrective Advisory i.e. the actual vertical speed is within the range to be avoided and recommended vertical speed (fly to) range is displayed.
· Modified Corrective Advisory, which changes the already displayed RA (i.e. if the intruder changes their vertical speed).

R OPERATIONAL RECOMMENDATIONS

● **Avoidance generalities :**

R Always follow the RAs orders, even if they lead to cross the altitude of the intruders,
R as they ensure the best global separation.

CAUTION

R If a pilot does not follow a RA, he should be aware that the intruder may be TCAS
R equipped and may be maneuvering toward his aircraft in response to a coordinated
R RA. This could compromize safe separation.

R Pilots should comply with the vertical speed limitations during the last 2000 feet of climb or descent. In particular, pilots should limit vertical speeds to 1500 feet/min during the last 2000 feet of a climb or descent, especially when they are aware of traffic that is converging in altitude and intending to level off 1000 feet above or below the pilot's assigned altitude.

● **Select "TA only" mode in the following cases :**
– Engine failure.
– Dispatch with landing gear down (if applicable).
– In case of known nearby traffic, which is in visual contact.
– At particular airports, and during particular procedures identified by an Operator as having a significant potential for unwanted or inappropriate RAs (closely spaced parallel runways, converging runways, low terrain along the final approach...).

SCENARIO	AURAL WARNING and TYPICAL DISPLAY PFD | ND	CREW RESPONSE
TRAFFIC ADVISORY - one intruder is ahead at 12 o'clock beyond 6 NM, 200 ft below your altitude	"TRAFFIC, TRAFFIC" 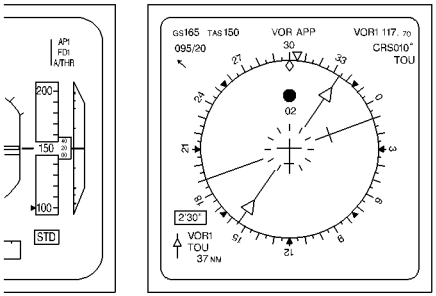	- Do not maneuver on the traffic advisory symbol. - Attempt to visually acquire the intruder. - Be prepared to maneuver if the TA changes to an RA
RESOLUTION ADVISORY (PREVENTIVE) - One intruder is ahead at 12 o'clock, 600 ft below your altitude	"MONITOR VERTICAL SPEED" 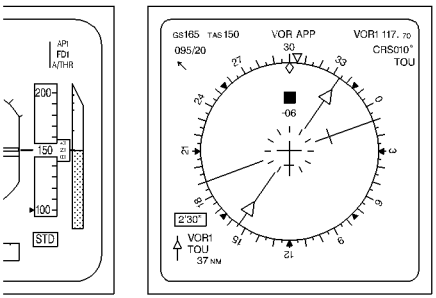	- Do not descend
RESOLUTION ADVISORY (CORRECTIVE) - Two intruders are ahead at 12 o'clock . one, at 500 ft above your altitude . the other, at 500 ft below your altitude	"MAINTAIN VERTICAL SPEED MAINTAIN" 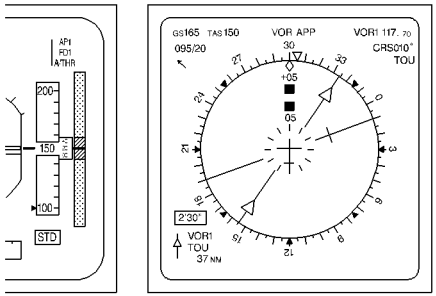	- Remain in level flight - Do not climb or descend

V/S scale color legend: : green : red

GF65-03-0434-008-A100AB

SCENARIO	AURAL WARNING and TYPICAL DISPLAY PFD | ND	CREW RESPONSE
RESOLUTION ADVISORY (CORRECTIVE) - The intruder is ahead at 12 o'clock, 400 ft above your altitude - You are already climbing at 2000 ft/mn	"ADJUST VERTICAL SPEED ADJUST" 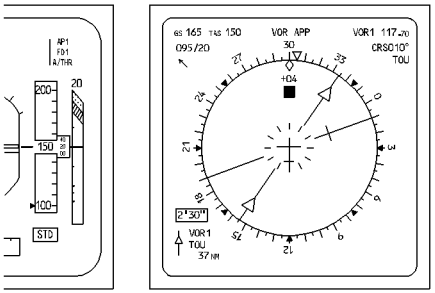	- Reduce climb
- The intruder is ahead at 12 o'clock, 200 ft below your altitude	"CLIMB, CLIMB" 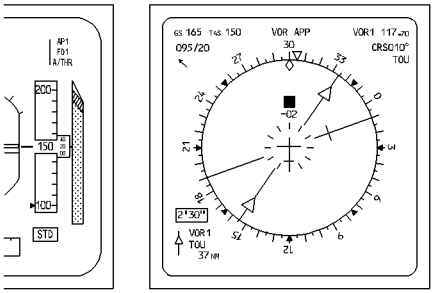	- Promptly (within 5 seconds) and smoothly establish a climb rate of 1 500 ft/mn
- The intruder is ahead at 12 o'clock, 200 ft above your altitude	"DESCEND, DESCEND" 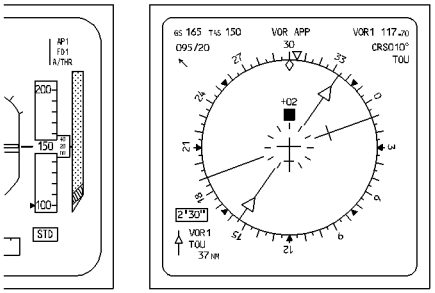	- Promptly (within 5 seconds) and smoothly establish a descent rate of 1 500 ft/mn

V/S scale color legend: : green : red

GFC5-03-0434-009-A100AB

SCENARIO	AURAL WARNING and TYPICAL DISPLAY PFD / ND	CREW RESPONSE
RESOLUTION ADVISORY (ADDITIONAL CORRECTIVE) - The intruder is ahead and has stopped its climb - It is now 100 ft below your altitude	"INCREASE DESCEND INCREASE DESCEND" 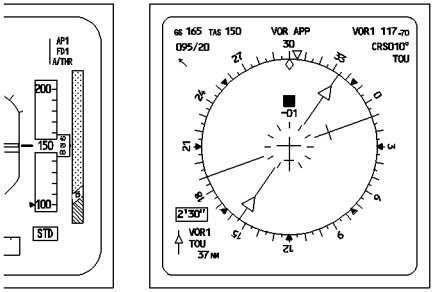	- Immediately (within 2.5 seconds) and smoothly increase your descent rate to 2 500 ft/mn
- The intruder ahead and above has changed from level flight to a rapid descent after TCAS issued a DESCEND RA - TCAS is now changing that to a CLIMB RA	"CLIMB, CLIMB, NOW CLIMB, CLIMB, NOW" 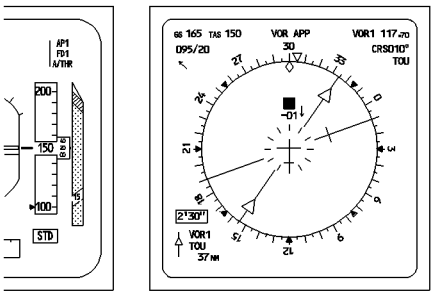	- Initiate a change from a descent to a climb maneuver, within 2.5 seconds.
RA CLEARED - The intruder has passed behind and is now 600 ft below your altitude - It is no longer a threat	"CLEAR OF CONFLICT" 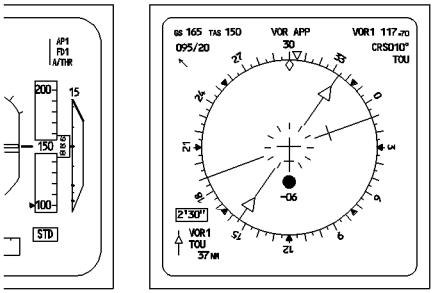	- Return promptly to the previous ATC clearance.

V/S scale color legend: : green : red

GFC5-03-0434-010-A001AA

APPROACH ON PAPI

Eye to wheel height on approach is 34 feet, and minimum recommended wheel clearance over the threshold is 20 feet. Do not follow the Precision Approach Path Indicator (PAPI) guidance below 200 feet, when the PAPI Minimum Eye Height over the Threshold (MEHT) is less than 54 feet.

QFE USE FOR TO/APPR/LDG ON AIRCRAFT WITH QNH ONLY PIN PROGRAMMING

The crew should not use QFE on aircraft with a "QNH only" pin programming (incorrect profile computation of the managed vertical modes CLB, DES and FINAL APPR, possible false GPWS warnings in mountainous aeras).

R ## QNH USE FOR TO/APPR/LDG ON QFE/QNH PIN PROGRAMMED AIRCRAFT

R The QNH option is the basic reference on the aircraft.
R For airlines using QFE reference, the switching from "QNH only" to "QNH/QFE can be done
R by activating a specific pin program on the following three computers : FMGC, GPWC, FCU.
R For various reasons, some airlines may use QNH reference for approach and landing on
R QNH/QFE pin programmed aircraft. The crew should be aware of the following
R consequences and should use the following procedures.

R **CONSEQUENCES**

R · When the pin program is the QNH/QFE option, the 2R field of the MCDU PERF APPR page
R is named "MDH", independently of the baro setting reference selected by the crew.
R · For some airports in mountainous areas, GPWS warnings may be delayed by a maximum
R of five seconds.

R **PROCEDURES**

R No specific procedures are necessary for takeoff, climb, cruise, descent and go around
R phases.
R Procedure for precision approaches (CAT2 and CAT3) :
R · Insert the DH into the DH field of the PERF APPR pages, as usual.
R Procedure for ILS approach (CAT1) :
R · Insert the DA into the MDH field of the PERF APPR page.
R Procedure for non precision approach :
R · Insert the MDA value into the MDH field of the PERF APPR page.

R *Note : If the MDA is greater than 5000 feet, the value is not accepted and the message*
R *OUT OF RANGE is displayed on the MCDU. In such a case, the MDH field remains*
R *blank and the PNF should announce the callouts.*

R · Do not use APPR NAV FINAL.
R · Use selected mode TRK/FPA until visual references are met.
R · The color changes from green to amber on the PFD altitude scale, and the auto callout
R "MINIMUM" will occur at the correct altitude.

ENHANCED GROUND PROXIMITY WARNING SYSTEM (EGPWS)

The Flight Management System (FMS) provides aircraft position inputs to the EGPWS for enhanced function processing purposes.

The TERR pushbutton, located on the overhead panel, enables the activation or de-activation of the enhanced functions of the EGPWS.

During all flight phases, when the navigation accuracy check performed by the pilots (as described in volumes 3.03 and 4.05) is positive, the enhanced functions should be switched ON.

During climb, descent, approach, and go-around phases, when GPS PRIMARY is not available (or not installed) and the FMS navigation accuracy check prevents the crew from using the NAV mode in a phase of flight, the TERR pushbutton must be switched OFF. When the TERR pushbutton is switched OFF, the ECAM "TERR OFF" memo is displayed. Only the basic GPWS modes 1 to 5 remain operative.

If the TERR ON ND is not selected, and a terrain alert is generated, the terrain is automatically displayed on the ND.

The brightness of the terrain indication on the ND is controlled via the weather radar brightness control knob. If the weather radar brightness was set to low (due to bad weather) and a terrain alert occurs, then the terrain display brightness will also be low. Thus when a terrain alert occurs, the ND weather/terrain image brightness may need to be adjusted.

ADIRS ALIGNMENT

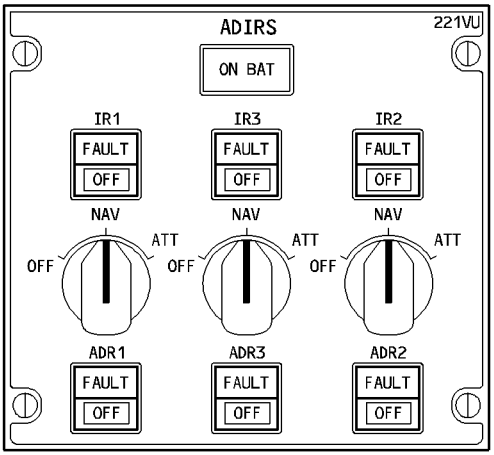

GFC5-03-0434-014-A001AA

ALIGNMENT (on the ground)

When an IR is off, the flight crew must align it before it can enter the navigation mode and supply data to various aircraft systems. The aircraft must be parked during alignment.
Any excessive aircraft motion while in ALIGN mode will restart he alignment process. Also avoid starting the alignment during engine start or while engines are running to avoid aircraft motion.
Alignment takes approximately 10 minutes.
The system first uses gravity to determine level attitude, then determines true heading, based on the earth's rotation. The flight crew must enter the latitude and longitude of the present position manually immediately after the switching of the three mode rotary selectors to NAV. This becomes the navigation starting point from which the IRs determine subsequent aircraft position during flight.

– **All 3 mode selectors . . . . . OFF for more than 10 seconds**

– **All 3 mode selectors . . . . . back to NAV**
If the ADIRU are already in "NAV" mode (fully aligned) and their actual position is within +/– 1 arc minute of the gate (or airport) PPOS, no further realignment is necessary.

ENHANCED GROUND PROXIMITY WARNING SYSTEM (EGPWS)

The Flight Management System (FMS) provides aircraft position inputs to the EGPWS for enhanced function processing purposes.

The TERR pushbutton, located on the overhead panel, enables the activation or de-activation of the enhanced functions of the EGPWS.

During all flight phases, when the navigation accuracy check performed by the pilots (as described in volumes 3.03 and 4.05) is positive, the enhanced functions should be switched ON.

During climb, descent, approach, and go-around phases, when GPS PRIMARY is not available (or not installed) and the FMS navigation accuracy check prevents the crew from using the NAV mode in a phase of flight, the TERR pushbutton must be switched OFF. When the TERR pushbutton is switched OFF, the ECAM "TERR OFF" memo is displayed. Only the basic GPWS modes 1 to 5 remain operative.

If the TERR ON ND is not selected, and a terrain alert is generated, the terrain is automatically displayed on the ND.

The brightness of the terrain indication on the ND is controlled via the weather radar brightness control knob. If the weather radar brightness was set to low (due to bad weather) and a terrain alert occurs, then the terrain display brightness will also be low. Thus when a terrain alert occurs, the ND weather/terrain image brightness may need to be adjusted.

ADIRS ALIGNMENT

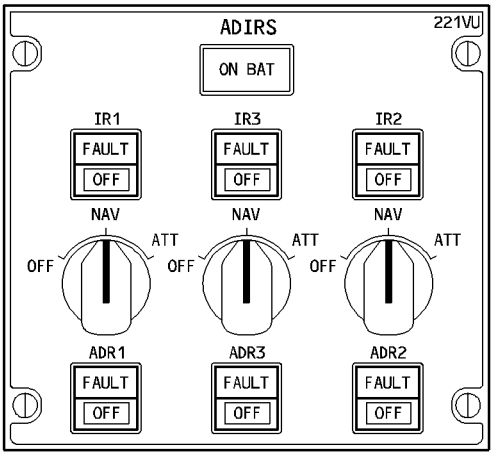

GFCS-03-0434-014-A100AA

ALIGNMENT (on the ground)

When an IR is off, the flight crew must align it, before it can enter the navigation mode and supply data to various aircraft systems. The aircraft must be parked during alignment.

Any excessive aircraft motion while in ALIGN mode will restart the alignment process. Also, avoid starting the alignment during engine start, or while engines are running, to avoid aircraft motion.

A normal alignment takes between 5 and 10 minutes (depending on the local latitude). At latitudes between 73° and 82° (North or South), the alignment takes about 17 minutes. The ADIRS cannot be aligned beyond 82° (North or South).

The system first uses gravity to determine level attitude, then determines true heading, based on the earth's rotation. If the GPS position is available, the GPS automatically sends the present position for completing the ADIRS alignment. This becomes the navigation starting point from which the IRs determine subsequent aircraft position during flight.

– **All 3 mode selectors . . . . . OFF for more than 10 seconds**

– **All 3 mode selectors . . . . . back to NAV**
If the ADIRU are already in "NAV" mode (fully aligned) and their actual position is within +/– 1 arc minute of the gate (or airport) PPOS, no further realignment is necessary.

– **Present position PPOS . . . . . ENTER**
Enter the present position, immediately after switching the three mode rotary selectors to NAV.
The flight crew uses the MCDU to enter local latitude and longitude. One entry serves all IRs during the alignment phase.

R *Note : Refer to Volume 4, for instructions on using the MCDU.*
R *For transit flights, or for any flight with GPS, the best PPOS to be used when*
R *performing an alignment are, by priority :*
R *1. The airport coordinates stored in the FMS database.*
R *2. The gate coordinates.*
R *3. The airport coordinates shown on the Jeppesen chart.*
R *For aircraft without GPS, and when flying long segments without radio*
R *updates, the best PPOS to be used when performing an alignment are, by*
R *priority :*
R *1. The gate coordinates.*
R *2. The airport coordinates stored in the FMS database.*
R *3. The airport coordinates shown on the Jeppesen chart.*

– **"IRS IN ALIGN" is indicated on the ECAM MEMO with maximum time until NAV.**

– **In the case of a discrepancy, the following message is displayed on the ECAM.**
NAV
IR 1(2)(3) NOT ALIGN
POSITION MISMATCH

– **PRESENT POS . . . . . INSERT**
The flight crew must check the present position it has entered and enter PPOS again.
After the 10 minute alignment, the system automatically goes to NAV.

FAST REALIGNMENT (on the ground)

During transit or enroute stops with brief ground times, the flight crew may perform a realignment and zero the ground speed error, by selecting OFF from NAV then reselecting NAV within 5 seconds.

– **All 3 ADIRS MSU selectors . . . . . OFF**

– **All 3 ADIRS MSU selectors . . . . . back to NAV within 5 seconds**
The IR starts a 30–second realignment with existing attitude and heading angles and velocities set to zero. The system does not enter the rapid alignment mode, if ground speed is greater than 20 knots.

– **Present position PPOS . . . . . ENTER**
Enter the local latitude and longitude, using the MCDU INIT page during the 30-second realignment.

R *Note : Refer to Volume 4, for instructions on using the MCDU.*
R *For transit flights, or for any flight with GPS, the best PPOS to be used when*
R *performing an alignment are, by priority :*
R *1. The airport coordinates stored in the FMS database.*
R *2. The gate coordinates.*
R *3. The airport coordinates shown on the Jeppesen chart.*
R *For aircraft without GPS, and when flying long segments without radio*
R *updates, the best PPOS to be used when performing an alignment are, by*
R *priority :*
R *1. The gate coordinates.*
R *2. The airport coordinates stored in the FMS database.*
R *3. The airport coordinates shown on the Jeppesen chart.*

If the present position has not been entered, or if the entered values disagree, within given limits, from the calculated values, the following message is displayed on the ECAM :
NAV
IR 1(2)(3) NOT ALIGN
POSITION MISMATCH

– **PRESENT POS . . . . . INSERT**
The flight crew must check the present position it has entered, and enter the present position again.
After the 30-second realignment, the system automatically goes to NAV mode.

● **If IRS IN ALIGN memo flashes at the end of the alignment time :**
The GPS position is not valid

– **Present position PPOS . . . . . ENTER**
The flight crew uses the MCDU to enter local latitude and longitude. One entry serves all IRs during the alignment phase.

Note : Refer to Volume 4, for instructions on using the MCDU.
For transit flights, the best PPOS to be used when performing an alignment are, by priority :
1. The airport coordinates stored in the FMS database.
2. The gate coordinates.
3. The airport coordinates shown on the Jeppesen chart.
When flying long segments without radio updates, the best PPOS to be used when performing an alignment are, by priority :
1. The gate coordinates.
2. The airport coordinates stored in the FMS database.
3. The airport coordinates shown on the Jeppesen chart.

– **"IRS IN ALIGN" is indicated on the ECAM MEMO with remaining align time.**

– **In the case of a discrepancy, the following message is displayed on the ECAM.**
NAV IR 1(2)(3) NOT ALIGNED
POSITION MISMATCH

– **PRESENT POS . . . . . INSERT**
The flight crew must check the present position and enter PPOS again. After the 10 minute alignment, the system automatically goes to NAV.

FAST REALIGNMENT (on the ground)

During transit or enroute stops with brief ground times, the flight crew may perform a realignment and zero the ground speed error, by selecting OFF from NAV then reselecting NAV within 5 seconds.

– **All 3 ADIRS MSU selectors . . . . . OFF**

– **All 3 ADIRS MSU selectors . . . . . back to NAV within 5 seconds**
The IR starts a 30–second realignment with existing attitude and heading angles and velocities set to zero. The system does not enter the rapid alignment mode, if ground speed is greater than 20 knots.

● **If IRS IN ALIGN memo flashes at the end of the alignment time :**
The GPS position is not valid

– **Present position PPOS . . . . . ENTER**
Enter the local latitude and longitude, using the MCDU INIT page during the 30-second realignment.

Note : Refer to Volume 4, for instructions on using the MCDU.
For transit flights, the best PPOS to be used when performing an alignment are, by priority :
1. The airport coordinates stored in the FMS database.
2. The gate coordinates.
3. The airport coordinates shown on the Jeppesen chart.
When flying long segments without radio updates, the best PPOS to be used when performing an alignment are, by priority :
1. The gate coordinates.
2. The airport coordinates stored in the FMS database.
3. The airport coordinates shown on the Jeppesen chart.

– **In case of discrepancy, the following message is displayed on the ECAM :**
NAV IR 1(2)(3) NOT ALIGNED
POSITION MISMATCH

– **PRESENT POS . . . . . INSERT**
The flight crew must check the present position, and enter the PPOS position again.
After the 30-second realignment, the system automatically goes to NAV mode.

ATSU INITIALIZATION

ATSU initialization must be carefully completed, since successful datalink communications require that all information be correctly entered, in accordance with the ICAO flight plan. ATSU is automatically initialized, provided a list of Service Providers has been scanned, and provided the following 3 parameters have been received and validated by the ATSU :

- Aircraft Registration Number (ARN)
- Airline two-letter Identity Code (A/L ID for datalink service providers)
- Airline three-letter Identity Code (A/L ID for ATC).

If one of the above 4 conditions is not fulfilled, then the ATSU or datalink is not available:

- The ECAM displays an ATSU FAULT warning, with the ATSU INIT FAULT line procedure, and
- The MCDU scratchpad displays a message to request crew action.

A manual entry of the missing parameter reinitializes the ATSU, and clears the ECAM and MCDU message.

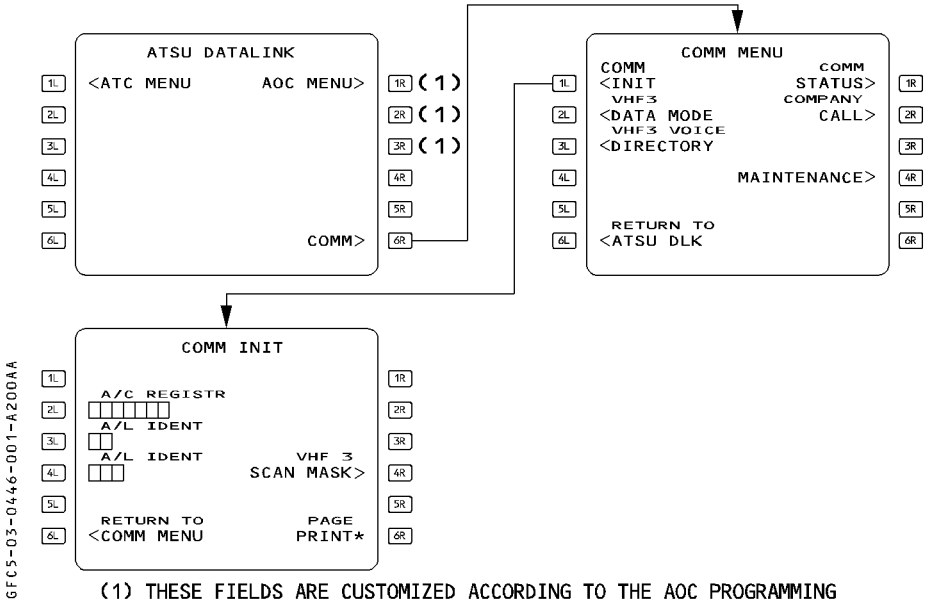

(1) THESE FIELDS ARE CUSTOMIZED ACCORDING TO THE AOC PROGRAMMING

If ARN is not valid

The MCDU scratchpad displays the "ENTER A/C REGISTER" message. After having cleared the scratchpad, the crew writes the ARN in the scratchpad. Pressing the 2L key on the COMM INIT page enters the ARN in the 2L field.

If the A/L ID is not valid

The MCDU scratchpad displays the "ENTER A/L IDENT" message. After clearing the scratchpad, enter the two-letter A/L ID code in the scratchpad. Press the 3L key to enter the A/L ID code in the 3L field. Repeat the same operation for the three-letter A/L ID code, by using the 4L key instead of the 3L key.

If no VHF Service Providers have been selected :

The MCDU scratchpad displays the "ENTER VHF3 SCAN MASK" message.
On the VHF3 SCAN MASK page, select a Service Providers' list, in the airline priority order, and activate the VHF SCAN MASK function.
Example : To select Service Providers SITA 725 and ARINC :

1. Press the 5L key : The star next to the ERASE indication disappears then reappears.
2. Press the 1L key to select SITA 725 : The SELECT indication goes off, and the priority
R number of selection # 1 appears.
3. Press the 1R key to select ARINC : The SELECT indication goes off, and the priority
R number of selection # 2 appears.
4. Press the 5R key to activate the VHF SCAN MASK function : The star next to the SCAN MASK LOAD indication disappears, then reappears.

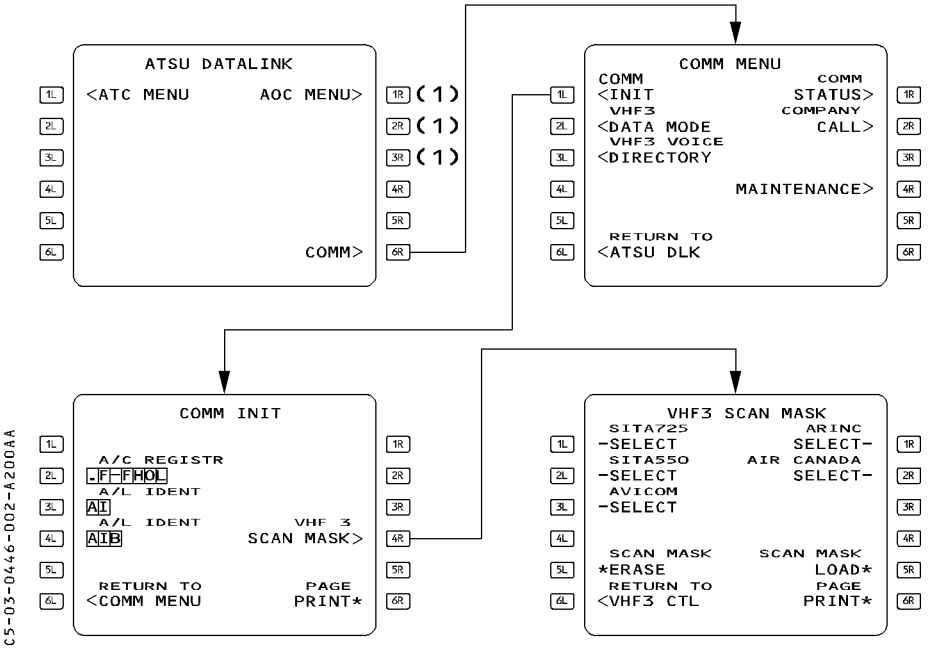

(1) THESE FIELDS ARE CUSTOMIZED ACCORDING TO THE AOC PROGRAMMING

R *Note : Modification of the SCAN MASK setting may result in the loss of air-ground VHF*
R *datalink communication. Therefore, the SCAN MASK setting should not be modified*
R *by the crew, unless they have been instructed to do so.*

NOTIFICATION PROCEDURE AND CONNECTION

Before connection, the DCDU screen appears as follows :

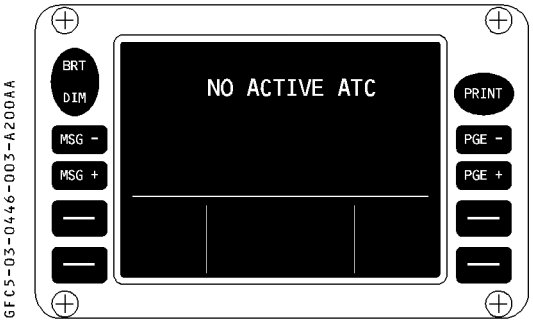

NOTIFICATION PROCEDURE :

Notification is made through the MCDU NOTIFICATION page :

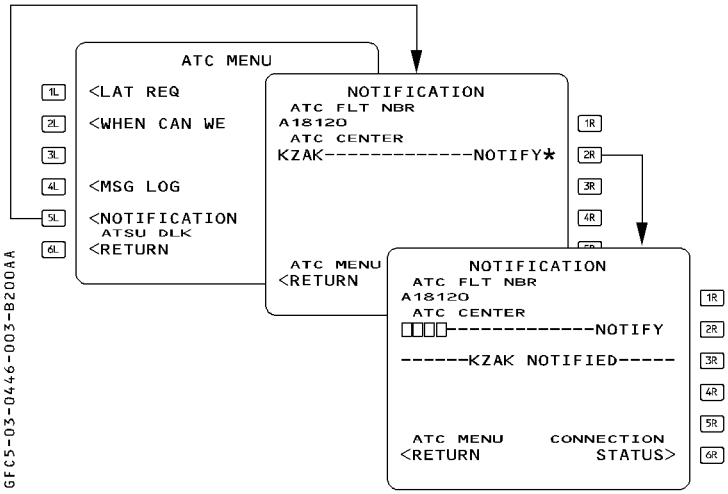

The FMGC provides the ATC FLT number.
The notification procedure is used by the ATC to correlate the aircraft with the ICAO flight number.
Consequently, it is essential to enter exactly the same number, shown on the ICAO flight plan (with the same number of letters), on the MCDU INIT page.
The ATC CENTER field defaults to the center which was connected during the previous flight. It can be changed, if applicable.

R *Note : 1. Once the ATC center has been notified ("NOTIFIED" is displayed on the MCDU*
R *"NOTIFICATION" Page), the ATC center will initiate the CPDLC and/or ADS*
R *connection. Therefore, re-notifications should be avoided.*
R *2. For ADS operations, check on the MCDU "CONNECTION STATUS" page that the*
R *ADS is set to ON prior to performing a notification.*

CONNECTION

Once notified, the connection is made at the ATC's discretion.

R – For operations in a CPDLC, or CPDLC and ADS environment :
R · When CPDLC connection is established, the active center is then displayed on the DCDU.
· The pilot should verify that the appropriate center is connected.

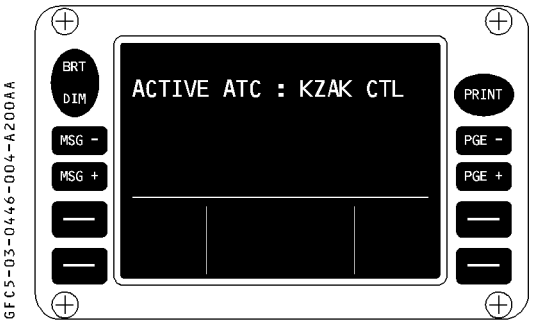

R – For operations in an "ADS only" environment (NO CPDLC), "NO ACTIVE ATC" remains
R displayed on the DCDU and does not reflect the ADS contract status.
R This is due to the fact that the DCDU is the interface which sustains CPDLC
R communication, whereas the ADS is an additional feature which is transparent to the
R crew.

CONTROLLER/PILOT DATA LINK COMMUNICATION PROCEDURE

GENERAL

This chapter gives only a few typical examples of the messages that are exchanged between the crew and the ATC.

General recommendations to avoid ambiguity :

- Avoid sending multiple clearance requests in the same message.
- Avoid duplicate messages. To this end :
  - Answer incoming messages as soon as possible.
  - Do not re-send your message, when the ATC does not answer it immediately. If, after a reasonable period of time, you feel it is necessary to re-send a message, (Example: a clearance request), do not re-send the same request. Use a negotiation query, such as :
    "WHEN CAN WE..."
- Close messages, when they are answered or sent, so as to keep the screen free for additional messages.
- Avoid using free text. If it is necessary to use free text, because pre-formatted messages do not allow for a specific message element, use standard ATC phraseology. Avoid non-standard abbreviations.
- Before each flight, erase the MSG LOG file by using the 4L key on the ATC menu.
- Use the printer to retrieve information on the DCDU. Essential data must first be read on the DCDU. The messages displayed on the DCDU are the reference.

POSITION REPORTS

For voice communications, a position report is due when passing a waypoint. This is entirely automatic, on some routes for which the Automatic Dependent Surveillance (ADS) function is active. In other cases, or in addition to the ADS reports (according to local regulations), the pilot has to send position reports by using the DCDU. Position report messages can either be :

- Automatically generated on the DCDU by the FMGS, if the AUTO POS REPORT function has been set to on, or
- Manually prepared by the pilot on the MCDU ATC REPORTS page.

For the ADS function, or the automatic generation of position reports on the DCDU by the FMGS, it is essential to ensure a correct waypoint sequencing. This is why it is recommended that the flight plan be updated. The FMGS offset function should be used, when appropriate. When the heading mode is used, the crew should monitor the waypoint sequencing and clear them when necessary.

POSITION REPORTS AUTOMATICALLY GENERATED BY THE FMGS

THIS REQUIRES THAT THE AUTO POS REPORT BE SET ON, ON THE ATC REPORT PAGE.

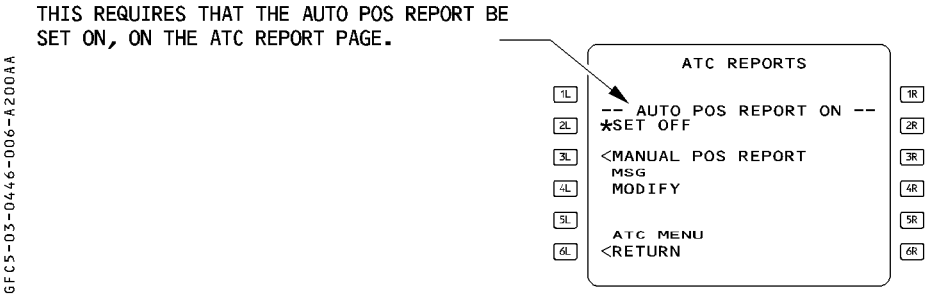

When sequencing a waypoint, the FMGC generates the position report message on the DCDU :

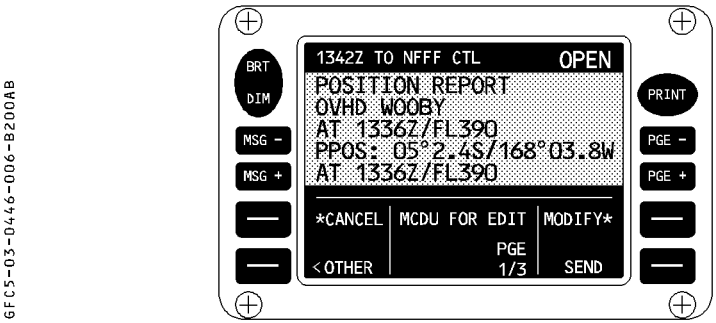

The pilot may modify it by using the MODIFY function key. Then, he sends it to the ATC. He may also use the MODIFY function key to update the parameters displayed on the DCDU before sending the position report.

- **Pilot action :**

On the DCDU :

– **SEND . . . . . SELECT (1)**
The message is displayed in green letters, and the OPEN status disappears.

– **CLOSE . . . . . SELECT (2)**
The message is removed from the screen.

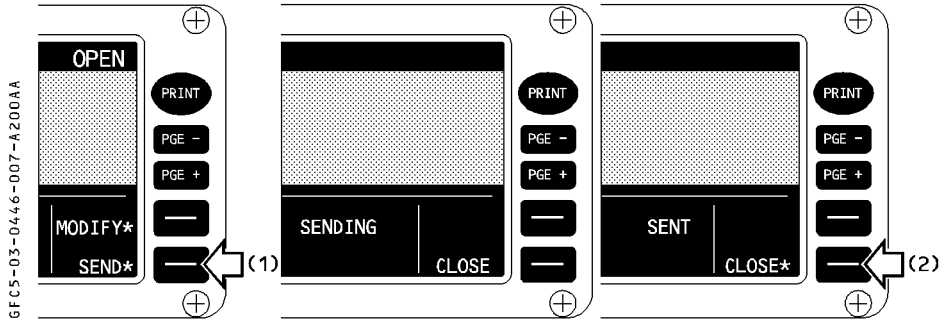

POSITION REPORTS, MANUALLY PREPARED BY THE PILOT

This has to be done when the AUTO POS REPORT on the ATC REPORTS page is set to OFF. The POSITION REPORT message must be prepared on the MCDU.

- **Pilot actions :**

On the MCDU ATC REPORTS PAGE :

– **MANUAL POSITION REPORT . . . . . SELECT (1)**
POSITION REPORTS pages 1/3, 2/3 and 3/3 show the data which is automatically provided by the FMGC. The crew can manually enter some fields, if desired.

– **REP DISPL . . . . . SELECT (2)**
This message is displayed on the DCDU with a blue background. It is ready to be sent.

On the DCDU :

As for the reports that are automatically generated by the FMGS, the pilot can modify a message displayed on the DCDU. It is then sent to the ATC by using the SEND function key, and is removed from the screen by using the CLOSE function key.

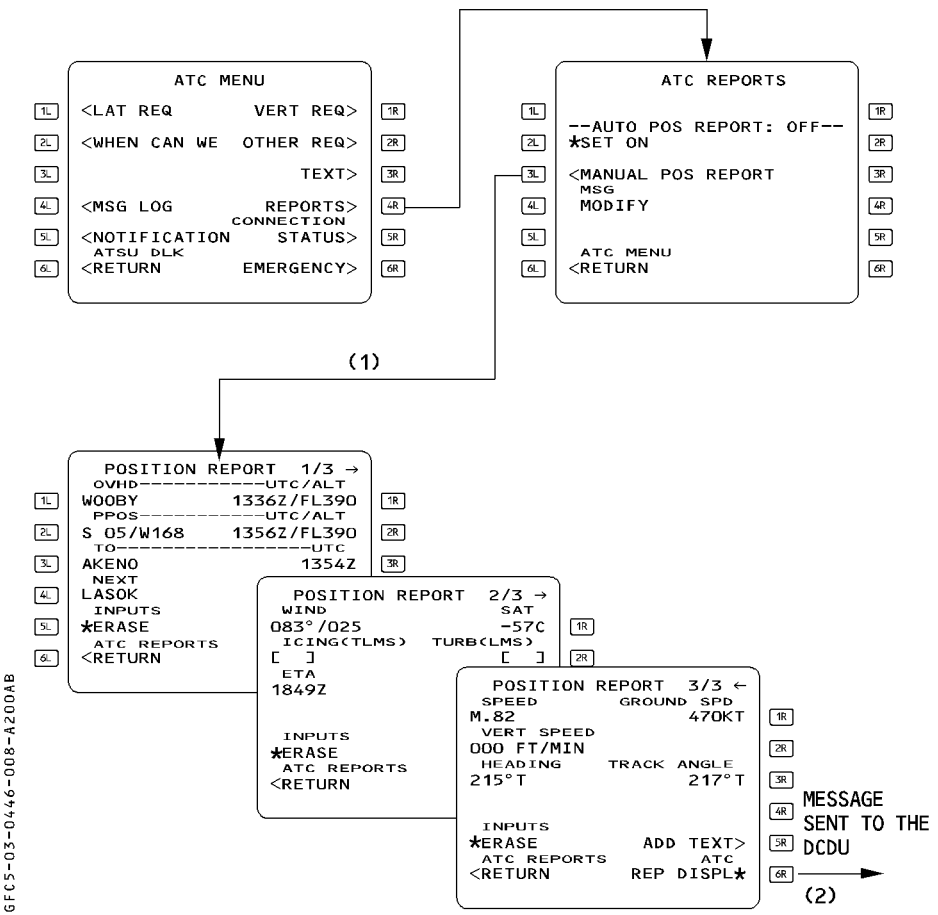
ATC MENU
<LAT REQ
VERT REQ>
<WHEN CAN WE
OTHER REQ>
TEXT>
<MSG LOG
REPORTS>
CONNECTION
<NOTIFICATION
STATUS>
ATSU DLK
<RETURN
EMERGENCY>
ATC REPORTS
--AUTO POS REPORT: OFF--
*SET ON
<MANUAL POS REPORT
MSG
MODIFY
ATC MENU
<RETURN
(1)
POSITION REPORT 1/3 →
OVHD----------UTC/ALT
WOOBY 1336Z/FL390
PPOS----------UTC/ALT
S 05/W168 1356Z/FL390
TO----------UTC
AKENO 1354Z
NEXT
LASOK
INPUTS
*ERASE
ATC REPORTS
<RETURN
POSITION REPORT 2/3 →
WIND
SAT
083°/025
-57C
ICING(TLMS)
TURB(LMS)
[ ]
[ ]
ETA
1849Z
INPUTS
*ERASE
ATC REPORTS
<RETURN
POSITION REPORT 3/3 ←
SPEED
GROUND SPD
M.82
470KT
VERT SPEED
000 FT/MIN
HEADING
TRACK ANGLE
215°T
217°T
INPUTS
*ERASE
ADD TEXT>
ATC REPORTS
ATC
<RETURN
REP DISPL*
MESSAGE SENT TO THE DCDU
(2)
GFC5-03-0446-008-A00AB

CREW REQUEST TO ATC :

EXAMPLE : REQUEST FOR WEATHER DEVIATION

This is the example of a request to be made by the crew, when a lateral flight plan deviation is desired due to weather reasons. The use of the "WX DEV UP TO" prompt ensures that the ATC attributes priority to this request.

On the MCDU ATC MENU PAGE :

– **LAT REQ . . . . . SELECT (1)**
The ATC LAT REQ page is displayed.

– **Fill the WX DEV UP TO field (2)**

– **REQ DISPL . . . . . SELECT (3)**
The request is displayed on the DCDU with a blue background. It is ready to be sent.

On the DCDU :

– **SEND . . . . . SELECT (4)**
The message is displayed on a green background.

– **CLOSE . . . . . SELECT (5)**
The message and its status are removed from the screen.

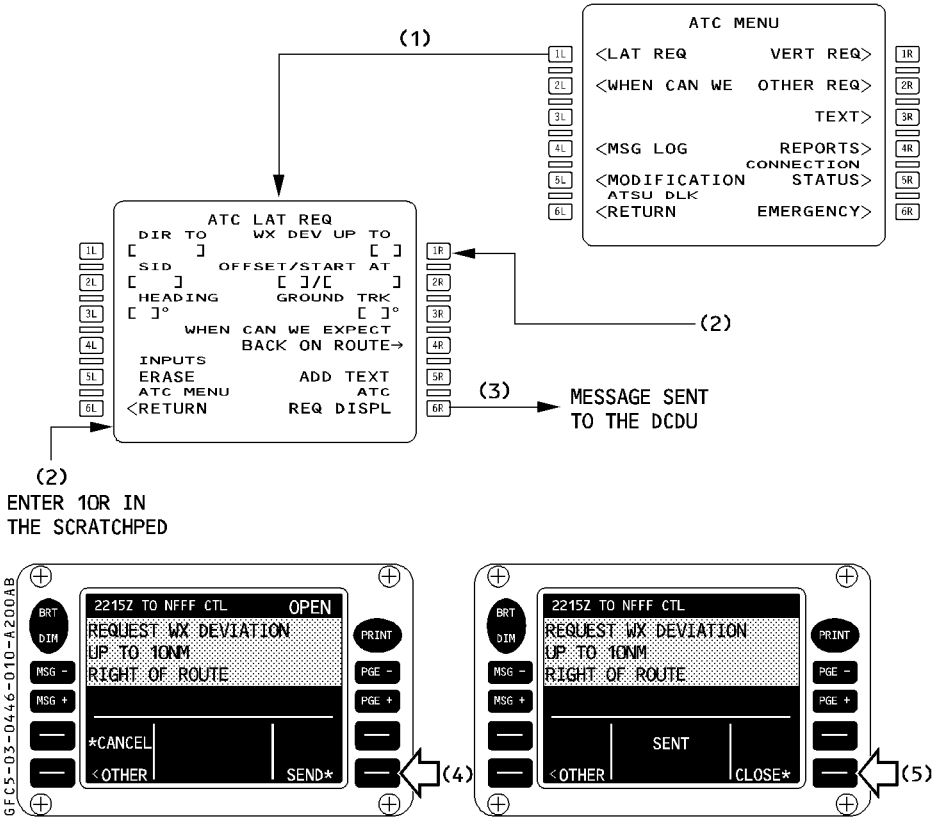
(1)
ATC MENU
<LAT REQ
VERT REQ>
<WHEN CAN WE
OTHER REQ>
TEXT>
<MSG LOG
REPORTS>
CONNECTION
<MODIFICATION
STATUS>
ATSU DLK
<RETURN
EMERGENCY>
ATC LAT REQ
DIR TO
WX DEV UP TO
SID
OFFSET/START AT
HEADING
GROUND TRK
WHEN CAN WE EXPECT
BACK ON ROUTE→
INPUTS
ERASE
ADD TEXT
ATC MENU
ATC
<RETURN
REQ DISPL
(2)
(3)
MESSAGE SENT
TO THE DCDU
(2)
ENTER 1OR IN
THE SCRATCHPED
2215Z TO NFFF CTL
OPEN
REQUEST WX DEVIATION
UP TO 10NM
RIGHT OF ROUTE
*CANCEL
<OTHER
SEND*
(4)
SENT
CLOSE*
(5)
BRT
DIM
PRINT
MSG -
MSG +
PGE -
PGE +
GFC5-03-0446-010-A200AB

CLEARANCES FROM ATC AND PILOT ANSWERS

IMMEDIATE CLEARANCE EXAMPLE : WEATHER DEVIATION (answer to the Pilot's request)

The ATSU triggers visual (ATC MSG light) and aural alerts, and displays the message on the screen in white and blue letters. The message status is OPEN and in blue.

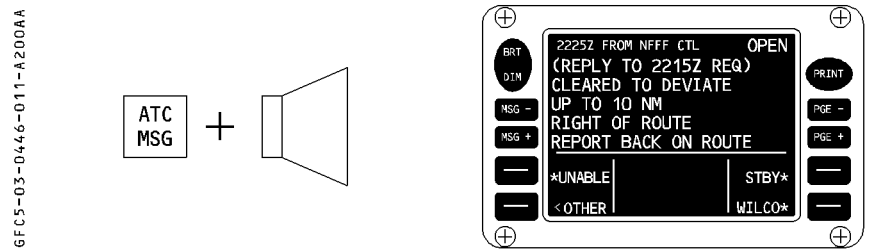

- **Pilot action :**

  – **ATC MSG** . . . . . **PRESS**
  This will turn off the light and stop the aural alert.

  On the DCDU :

  – **WILCO** . . . . . **SELECT (1)**
  The message status becomes WILCO, on a blue background. (2)

  – **SEND** . . . . . **SELECT (3)**
  The message is displayed in green letters, and the WILCO status is on a green background. (4)

  – **CLOSE** . . . . . **SELECT (5)**
  The message and its status are removed from the screen.

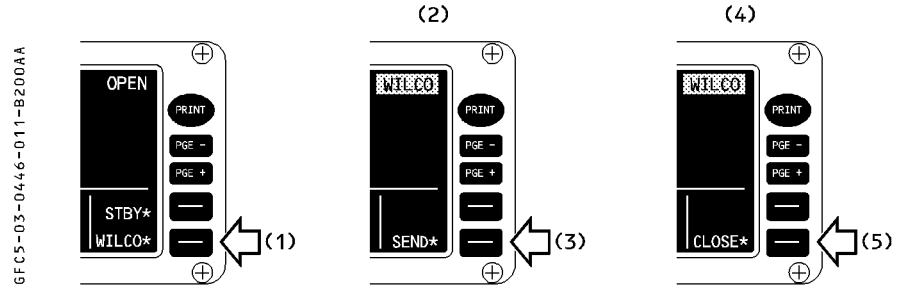

The crew has to insert the offset in the FMGS flight plan.

DEFERRED CLEARANCE, E.G CLIMB

The ATSU triggers visual (ATC MSG light) and aural alerts, and displays the message on the screen in white and blue letters. The message status is OPEN and in blue.

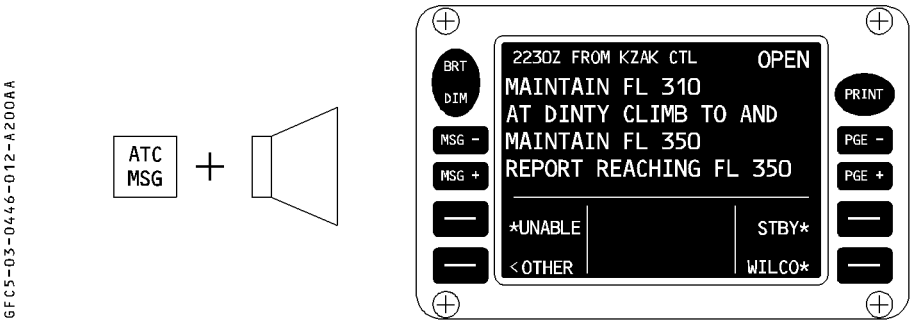

GFC5-03-0446-012-A200AA

- **Pilot action :**

  – **ATC MSG** . . . . . **PRESS**
  This will turn off the light and stop the aural alert.

  On the DCDU :

  – **WILCO** . . . . . **SELECT**
  The message status becomes WILCO, on a blue background.
  On the DCDU, the waypoint to which clearance is deferred (DINTY) and FL350, turn magenta. This indicates that they will be monitored by the FMGC.

  – **SEND** . . . . . **SELECT**
  The message is displayed in green letters, and the WILCO status is on a green background.

  – **CLOSE** . . . . . **SELECT**
  The message and its status are removed from the screen.

THE "MONITORING" DISPLAY (IN WHITE) AND THE DINTY AND FL350 DISPLAY IN MAGENTA, INDICATE THAT THESE TWO PARAMETERS ARE MONITORED BY THE FMGS.

GFC5-03-0446-012-B200AA

About 30 seconds before DINTY, the appropriate part of the message (related to the first reached parameter) is automatically recalled by the FMGS.

GFC5-03-0446-013-A200AA

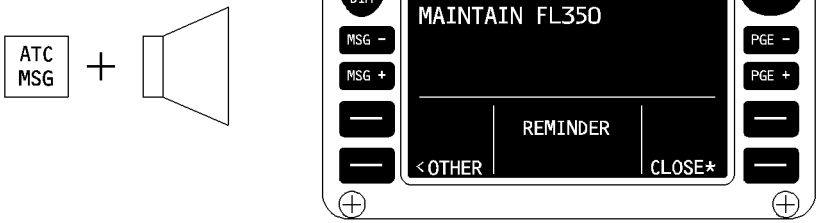

"REMINDER" information and the absence of ATC center identification indicates that this is not a new incoming message, but is only an FMGC recall. Flight plan modification has to be done by the crew.

NAVIGATION PARAMETER REQUEST FROM ATC AND PILOT ANSWER

When the ATC requests confirmation of a parameter, the ATSU triggers visual (ATC MSG light) and aural alerts and displays the message on the screen in white letters. The message status is OPEN and in blue.

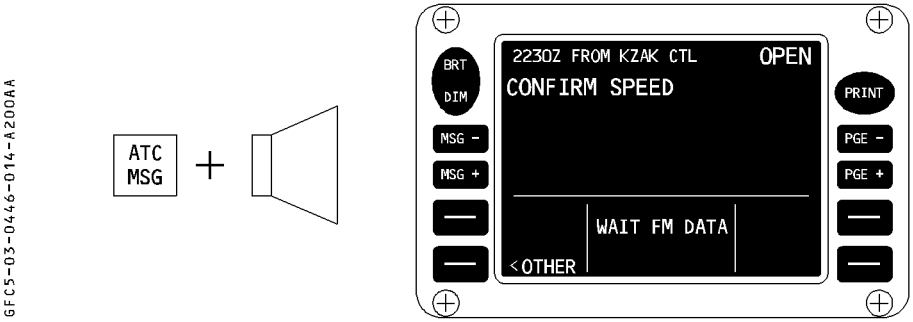

GFC5-03-0446-014-A200AA

- **Pilot action :**

  – **ATC MSG . . . . . PRESS**
  This will turn off the light and stop the aural alert.

- **Automatic answer from the FMGS :**

  The "WAIT FM DATA" information indicates that the FMGS is preparing an answer. Then, it displays it on the DCDU.

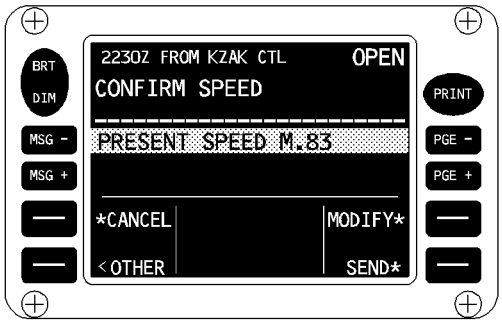

GFC5-03-0446-014-B200AA

- **Pilot action :**

On the DCDU :

– **SEND . . . . . SELECT (1)**
The message is displayed in green letters.

– **CLOSE . . . . . SELECT (2)**
The message is removed from the screen.

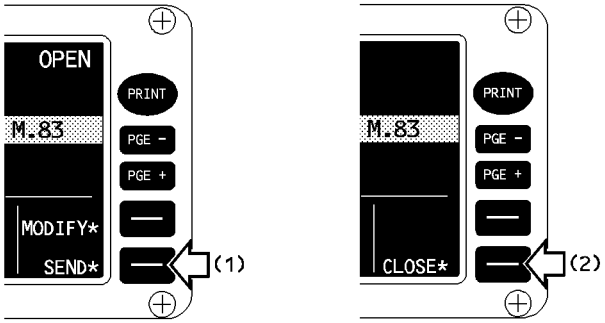

GFC5-03-0446-015-A200AA

FLIGHT PLAN MODIFICATIONS

Flight plan modifications, sent by the AOC, can be loaded in the FMGS secondary F-PLN. The crew can also manually prepare modifications. The crew has to obtain ATC clearance prior to activation.

- **When the AOC SEC F-PLN UPLINK message is displayed on the scratchpad (1) :**

On the SEC index page :

– **INSERT* . . . . . SELECT (2)**
The flight plan sent by the AOC is inserted in the secondary flight plan. The crew can review it and, if necessary, modify it.

– **REQ DISPL* . . . . . SELECT (3)**
The DCDU automatically prepares a message. The crew has to send it to ATC and close it.

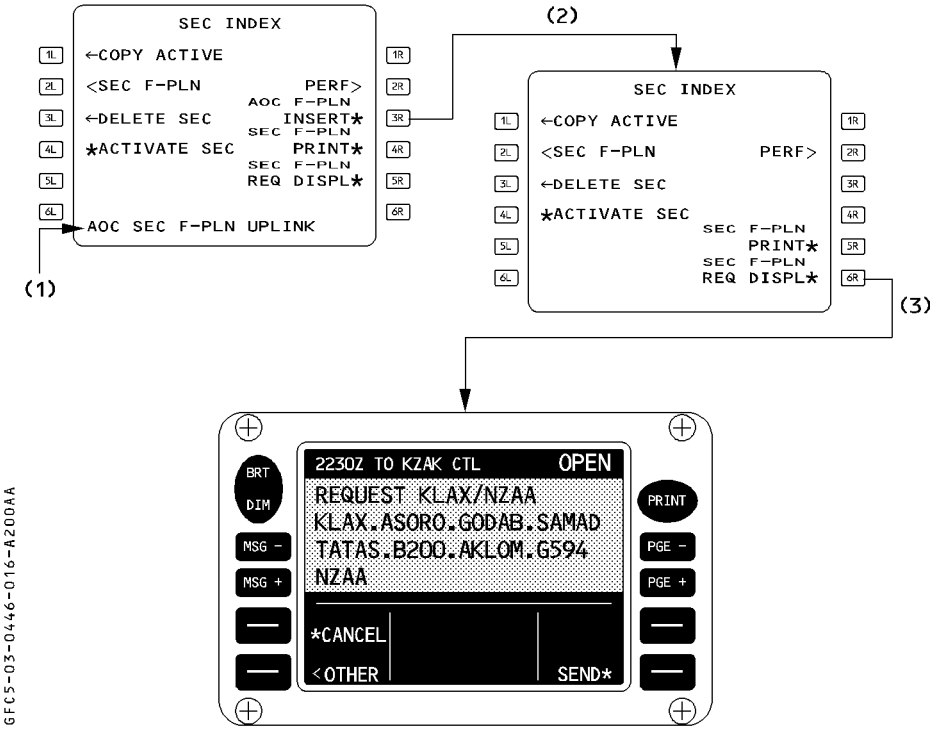

- **When ATC clearance is received :**
  - **Pilot action :**

    – **ATC MSG . . . . . PRESS**
    This will turn off the light and stop the aural alert.

  On the DCDU :

    – **OTHER . . . . . SELECT (1)**

    – **LOAD . . . . . SELECT (2)**
    LOAD must be selected at this point. Any other selection may prevent further loading of the clearance. The "LOAD OK" information is displayed to confirm that loading is successful. The clearance can be reviewed on the SEC F-PLN pages.

- **If the crew accepts the clearance :**

  – **OTHER . . . . . SELECT**

  – **WILCO . . . . . SELECT**
  This has to be sent and cleared, as with other WILCO answers.
  The crew has to activate the secondary F-PLN.

- **If the crew wants to modify the clearance :**
  The clearance should be loaded into SEC P-PLN, then modified.
  On the DCDU, the clearance should be rejected (UNABLE).
  Another request (modified F-PLN) should be submitted to the ATC.

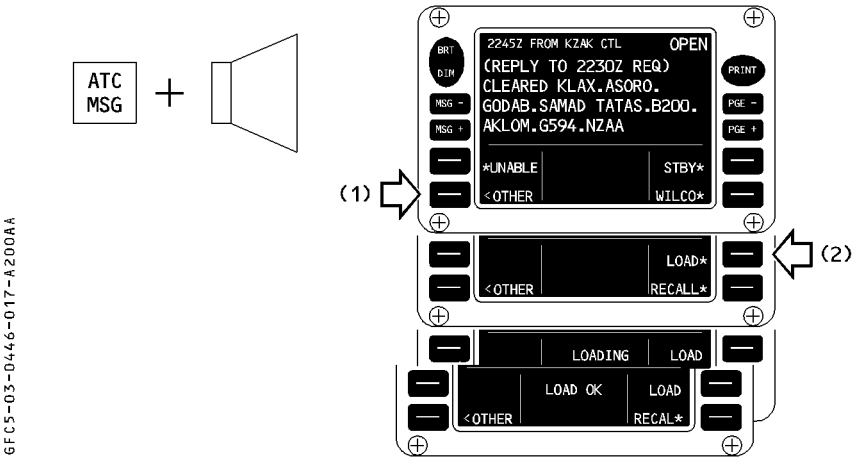

GFCS-03-0446-017-A200AA

EMERGENCY MESSAGES

EXAMPLE : PANPAN MESSAGE

ON the MCDU ATC MENU PAGE :

– **EMERGENCY** . . . . . **SELECT (1)**
The EMERGENCY Page 1/2 is displayed.

– **PANPAN** . . . . . **SELECT (2)**
The PANPAN prompt becomes blue.

– **Fill the DIVERTING/VIA field (3).**
The VIA field defaults to the present position, if it is not manually entered.

Note : The emergency can be cancelled by using the CANCEL EMERGENCY prompt on the EMERGENCY page 2/2 (4).

– **EMERG DISPL** . . . . . **SELECT (5)**
The message is displayed on the DCDU. The crew has to send it, then close it, as is done with any downklink message.

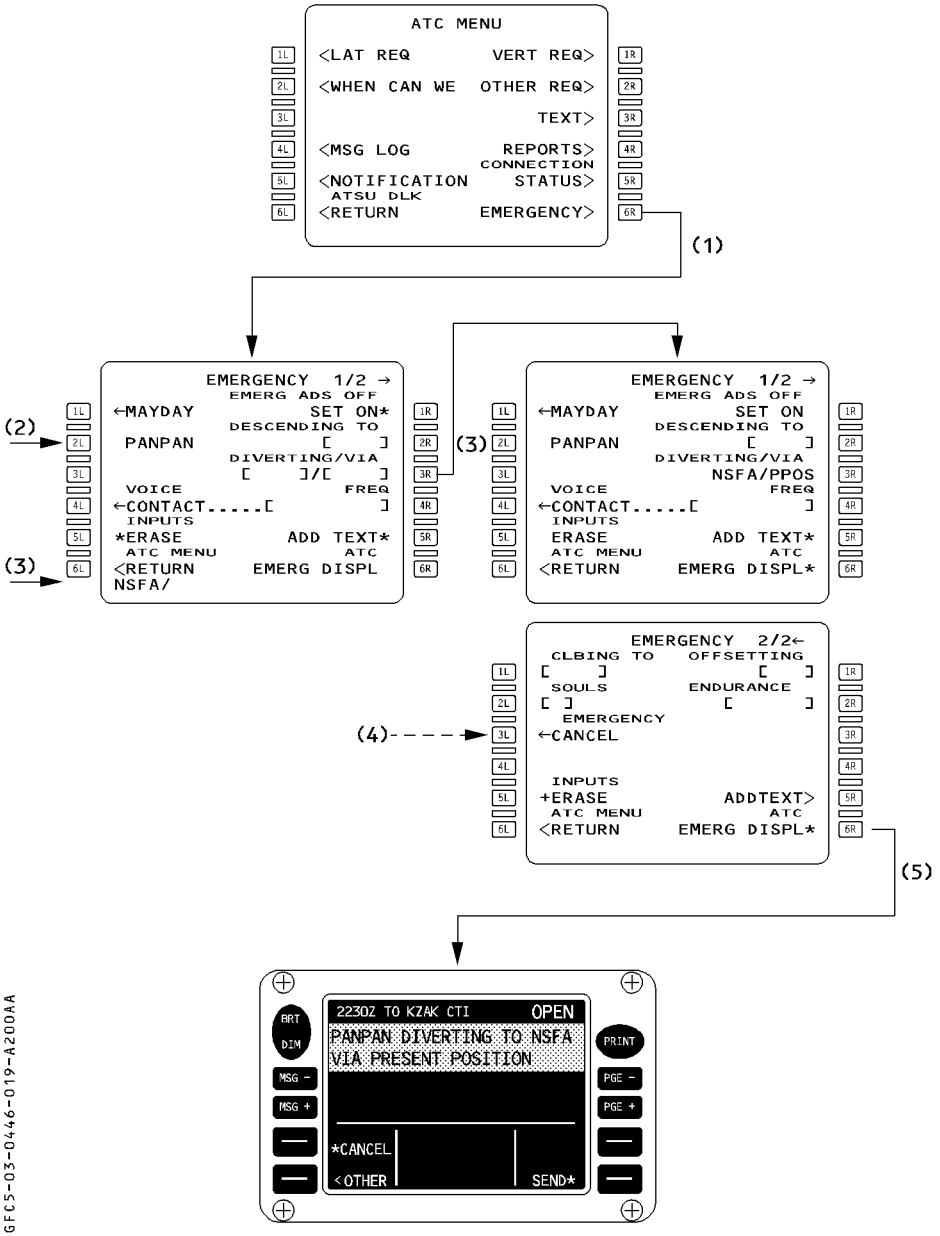

GFC5-03-0446-019-A200AA

AUTOMATIC TRANSFER TO NEXT ATC

The current ATC center sends the "NEXT DATA AUTHORITY" information message.
The crew only has to close it.

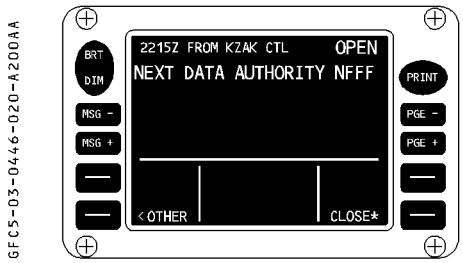

The current ATC center sends the "END SERVICE" message.
It indicates the frequency to be used for voice backup.

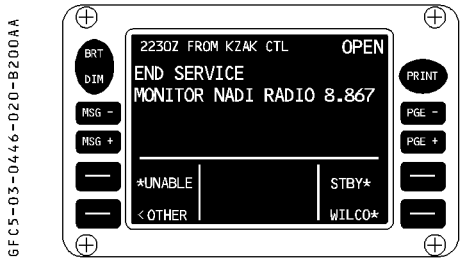

The crew has to answer "WILCO", as is done with other uplink messages.
When the message is closed, the new ATC center is shown as active.

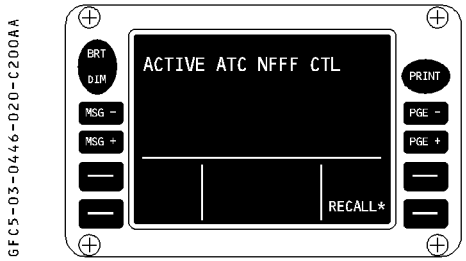

AUTOMATIC DEPENDENT SURVEILLANCE (ADS) PROCEDURE

The ADS is fully automatic and works transparently to the flight crew.
The flight crew may activate/deactivate the ADS function via the MCDU's 4L key on the CONNECTION STATUS page :

- When ADS is "ON" : ADS contracts may be established by ground ATC centers.
- When ADS is "OFF" : All ADS contracts are stopped, and no ADS contract can be established by ground ATC centers.

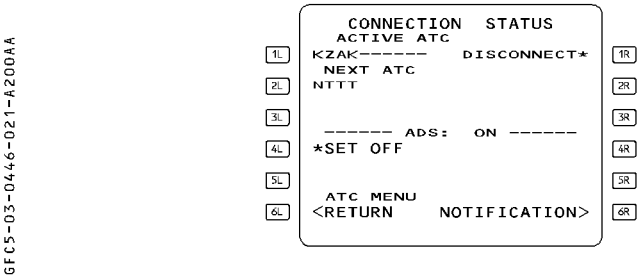

GFC5-03-0446-021-A200AA

Consequently, ADS should not be set to "OFF", unless instructed to do so (for example, via an ATC request).

LEAVING THE AIRCRAFT VIA AVIONIC BAY ACCESS DOOR

- Move forward the captain seat completely and open the floor hatch to get access to the avionic bay.
- Descend into the avionic bay and take a position RH side of the avionic bay access door

Note : Do not try to open the access door while standing on it.

- Open the floor panel (1) which covers the avionics bay access door handle (2), located at the aft, center part of the access door (coin may be needed to open the lock).
- To open the access door (3) lift the handle (2) and pull the door completely into the bay until it is latched in its upper stop (LH).
- Remove the strap which fixes the ladder assembly against motion.
- Lift the lever (4), located on the RH side aft of the lower rung of the aft ladder element, to unlock the ladder assembly and swing it simultaneously towards the opening.
- Release the lower locking device on the RH inner side of the first ladder element (5) by pulling the orange handle forward (indicated on a placard next to the locking device). Lower the element until it latches.
- Repeat with the second ladder element (locking device (6) is at the LH inner side).
- If the ladder does not touch the ground yet the last element is lowered by pulling forward its orange handle at the lower end on the LH outer side.
- If the ladder touches the ground leave the aircraft via the extended ladder.

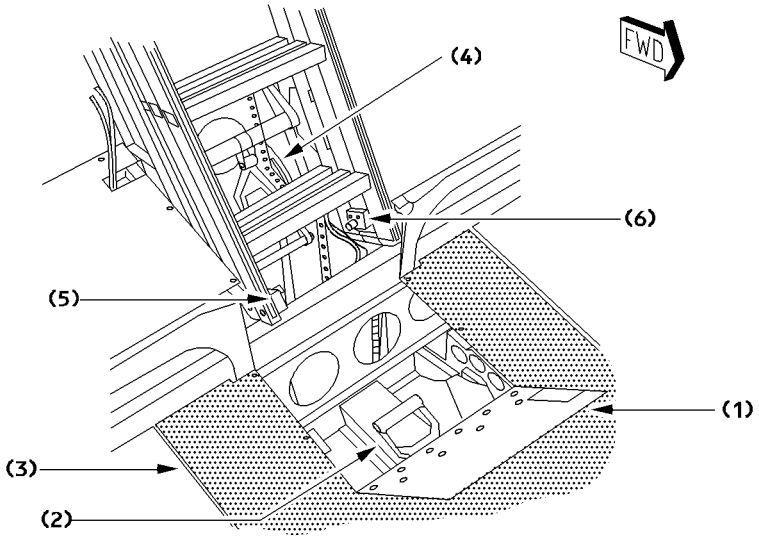

6FC5-03-0452-001-A001AA

THRUST CONTROL

GENERAL

Engine thrust is controlled by console mounted levers which electrically signal the FADEC of individual engines. FADEC responds to thrust lever position or auto thrust command to determine engine thrust.
The thrust lever quadrant provides the equivalent of a thrust rating panel. Two detents, one for climb thrust and the other for FLEX on the ground or MCT in flight are provided.
The forward stop of the quadrant always gives Max Take Off or go around thrust as appropriate, and signals the A/P or F/D to go to Take Off or Go Around as appropriate. The indications of the status of the thrust system are displayed to the pilot by the FMA left hand window on each PFD.
Additionally on the engine instrument display, there is a read out of the engine thrust mode (CL, MCT, etc) and the appropriate engine limit.
The actual limit set, thrust lever position, FADEC command, and the maximum engine rating limit are all continuously displayed.

MANUAL THRUST CONTROL

With auto thrust deactivated, thrust control between idle and maximum take off or go around thrust is entirely conventional.
Thrust lever angle determines the thrust demanded.
The rating limit selected by the pilot and the actual engine limit will appear on the engine instrument display.
With the thrust lever at less than the CL position on the quadrant, CL will be continuously displayed. If one of both thrust levers are above CL, MCT/FLEX will be displayed. If one or both thrust levers are above the MCT detent, TO GA will be displayed.
With the thrust lever(s) positioned in a detent the engine (s) will be controlled to that limiting parameter.

AUTO THRUST

With auto thrust active either speed, thrust or retard will be controlled as appropriate. The engine limit corresponds to the thrust lever position. If the thrust lever(s) is below the CL detent then the TLA determines the engine power limit.
With both thrust levers above the CL detent, auto thrust is deactivated, except if alpha-floor is active.
If the thrust levers are not aligned, an asymmetric (ASYM) message will appear in the FMA. Each engine in this case, will be limited to its appropriate TLA position.
This allows the continued use of auto thrust if one engine has to be RPM limited for operational reasons e.g. vibrations.

Autothrust disconnection

Autothrust disconnection occurs when :

- The A/THR fails, or
- The FCU's A/THR pushbutton is pressed, or
- Thrust levers' instinctive disconnect button is pressed, or
- Both thrust levers are set to IDLE.

R
- When the radio altitude is below 100 feet, and :

R
- · Both thrust levers are above CL detent, or

R
- · One thrust lever is above MCT detent.

1. Disconnection, due to a failure or to the use of the FCU A/THR pushbutton.
   If the thrust levers are set in the CL detent (2 engines operative), or one thrust lever in the MCT (one engine operative), thrust is locked at its actual value. The FMA displays "THR LK".
   Single chime, ECAM message, and caution light are triggered every 5 seconds, as long
R as thrust lock is active. (For more details, refer to FCOM 1.22.30).
   Movement of the thrust lever(s) unlocks the thrust, and the engine then responds to TLA at the normal rate.
2. Disconnection, due to the use of the instinctive disconnect button.
   When a pilot presses the instinctive disconnect button, the thrust corresponding to the thrust levers position is immediately recovered, whatever the thrust levers' position.

Instinctive Disconnection procedure

- Set the thrust levers to the current thrust setting by adjusting the levers until the N1 (or EPR) TLA white circle is adjacent to the actual N1 or EPR.
- Use the instinctive pushbutton to the disconnect the A/THR.
- Check that "AUTO FLT A/THR" OFF is displayed on the ECAM, and that there is no annunciator in the first column of the FMA.
- Set the correct manual thrust.

Use of autothrust in approach

R The pilot should use autothrust for approaches. On final approach, it usually gives more
R accurate speed control, although in turbulent conditions the actual airspeed may vary from
R the target speed, by as much as five knots. Although the changeover between auto and
R manual thrust is easy to make with a little practice, the pilot should, when using autothrust
R for the final approach, keep it engaged until he retards the thrust levers to idle for
R touchdown. If the pilot is going to make the landing using manual thrust, he should
R disconnect the A/THR by the time he has reached 1000 feet on the final approach.
R If he makes a shallow flare, with A/THR engaged, it will increase thrust to maintain the
R approach speed until he pulls the thrust levers back to idle. Therefore, he should avoid
R making a shallow flare, or should retard the thrust levers as soon as it is no longer
R necessary to carry thrust, and if necessary before he receives the "retards" reminder.

R When using autothrust, the pilot can always change thrust by moving the thrust levers
R above the CL detent. The thrust then increases to what corresponds to the thrust lever
R position. However, autothrust stays armed, and immediately takes effect when the thrust
R levers are returned to the CL detent. Therefore, the pilot should normally put the thrust
R levers back to CL, as soon as the aircraft has made the change for which he has increased
R thrust. This feature gives the pilot a means of advancing phase on the autothrust in very
R difficult environmental condition. But, it should only be needed in exceptional
R circumstances.

R *Note : When below 100 feet, moving thrust levers above the CL detent, will result in*
R *A/THR disconnection.*

R Although use of the autothrust is recommended for the entire approach, this does not
R absolve the pilot from his responsibility to monitor its performance, and to disconnect it if
R it fails to maintain speed at the selected value. Such monitoring should include checking
R whether or not the managed speed, calculated by the FMGC, is reasonable.
R For more information concerning aircraft handling during final approach, refer to the FCOM
R Bulletin "Aircraft handling in final approach".

R **Engine failure**

R The pilot can continue to use autothrust after an engine failure, but some pilots feel that
R directional control is more difficult, when autothrust changes the thrust instead of the pilot
R making the thrust changes manually. The choice between using, or not using, autothrust
R after engine failure is a personal one. As far as speed control is concerned, autothrust is
R usually more accurate than a pilot.

MANUAL ENGINE START

Pilots normally use automatic starting to start an engine.
However, manual starting is recommended, in the following cases :

– **After aborting a start, because of :**
  · Engine stall
  · Engine EGT overlimit
  · Low start air pressure

– **When expecting a start abort, because of :**
  · Degraded bleed performance, due to hot conditions, or at a high-altitude airfields.
  · An engine, with a reduced EGT margin, in hot conditions, or at a high-altitude airfields.
  · Marginal performance of the external pneumatic power group.

MAN ENG START PROCEDURE

– **THR LEVERS** . . . . . **IDLE**

CAUTION
Engine will start regardless of thrust lever position and thrust will rapidely increase to that demanded by the TLA causing a hazardous situation if idle not selected.

– **ENG START sel** . . . . . **NORM THEN IGN START**
ENG page is displayed on ECAM lower display

– **ENG MAN START** . . . . . **ON**
· Do not set MAN START pb to ON before all amber crosses have disappeared on engine parameters (upper ECAM display).
· On ECAM lower display check :
– START VALVE in line
· On ECAM displays check :
– OIL PRESS increases, N2 increases.

● **When N2 at maximum motoring speed (minimum 15%) :**
Max motoring speed is defined as when N2 acceleration is less than 1% per 5 seconds approximately.

– **MASTER SW** . . . . . **ON**
The PNF starts timing to monitor the delay in light up.

– **ECAM displays** . . . . . **CHECK**
Check :
– Indication of igniters A and B
– FF increase
– EGT and N1 increase within 20 seconds (max) after fuel is on.

● **When N2 at 50 %**

– **ECAM displays** . . . . . **CHECK**
Check :
– START VALVE cross line
– Igniter indication off

R ● **when idle is reached (AVAIL indication is displayed in green) :**

R – **MAIN AND SECONDARY ENG. IDLE PARAMETERS** . . . . . **CHECK NORMAL**

– **MAN START** . . . . . **OFF**

– **ENG START SEL** . . . . . **NORM**

ENG START WITH EXTERNAL PNEUMATIC POWER

- **Before connecting external pneumatic power :**

  – **PACKS 1 and 2 . . . . . OFF**
  (To prevent packs contamination)

- **Before start :**

  – **APU BLEED . . . . . CHECK OFF**

  – **ENG BLEED (Both engines) . . . . . OFF**

  – **X-BLEED . . . . . OPEN**

  Note : The X-BLEED is opened to avoid triggering the ABNORMAL BLEED CONFIG ECAM caution after the first engine start.

- **Cleared to start :**

  – **Start Engine 1 first.**

R *Note : As necessary, Engine 2 can also be started by using the external pneumatic*
R *power.*
R *If Engine 2 is started first, check the brake accu pressure prior to engine start.*

  – **Apply the normal engine start procedure.**
  The minimum recommended starter air supply pressure is 25 PSI, when the start valve is open.
  Two external pneumatic power units may be used in parallel, if the pressure/flow relation is expected to be marginal.

- **After Engine 1 start :**

  – **Request removal of the external pneumatic power unit(s).**

  – **PACKS 1 and 2 . . . . . ON**

  – **CROSSBLEED ENGINE START PROC for ENG 2 . . . . . APPLY**

CROSSBLEED ENG START

CAUTION

Simultaneous use of engine bleed supply and external pneumatic power supply is prohibited.

- **Before start :**

  – **APU BLEED . . . . . OFF**
  The BLEED valve of the running engine reopens and the X BLEED valve closes.

  – **ENG BLEED (running engine) . . . . . ON**

  – **ENG BLEED (receiving engine) . . . . . OFF**
  Bleed valve of engine not running is closed to eliminate reverse flow leakage.

R – **X BLEED . . . . . OPEN**

- **Cleared to start :**

  – **Apply the normal engine start procedure**

  – **Confirm area is clear of obstacles.**

  N1 of supplying engine may be increased up to 30% if required in order to obtain starter air supply pressure at about 30 psi.

- **After start :**

  – **X BLEED . . . . . AUTO**

  – **ENG BLEED (both) . . . . . ON**

  – **PACKS . . . . . CHECK ON**

START VALVE MANUAL OPERATION

Advise ground crew to prepare for manual start valve operation.

– **AUDIO CONTROL PANEL . . . . . CAB**

● **When ground crew member is ready, order "START 1 or 2"**

– **ENG START SEL . . . . . IGN**

– **ENG MASTER . . . . . ON**

– **START VALVE . . . . . ORDER "OPEN AND KEEP OPEN"**
If not maintained in OPEN position by the ground crew member, the start valve closes.

● **When N2 at 50 % :**

– **START VALVE . . . . . ORDER "CLOSE"**
Continue with normal procedure.

LEFT INTENTIONALLY BLANK

START VALVE MANUAL OPERATION

Advise ground crew to prepare for manual start valve operation.

– **AUDIO CONTROL PANEL . . . . . CAB**

● **When ground crew member is ready, order "START 1 or 2"**

– **ENG START SEL . . . . . IGN**

– **ENG MASTER . . . . . ON**

– **START VALVE . . . . . ORDER "OPEN AND KEEP OPEN"**
If not maintained in OPEN position by the ground crew member, the start valve closes.

● **When N2 at 50 % :**

– **START VALVE . . . . . ORDER "CLOSE"**
Continue with normal procedure.

DERATED CLIMB

GENERAL

The derated climb (DCLB) reduces the thrust during climb in order to increase the engine life. The crew can select two derated climb ratings :
– DCLB1 reduces the maximum climb thrust by 5 to 10%.
– DCLB2 reduces the maximum climb thrust by 10 to 15%.
The FADEC reduces the difference between derated and maximum climb thrust with the altitude, until zero at high altitude ; The ceiling is therefore not affected by the derated climb. The performance for each derated thrust is given in the IN FLIGHT PERFORMANCE, 3.05.10.

Note : The derated climb does not depend on autothrust, autopilot or flight director engagement.

SELECTION

The crew can select DCLB 1 or 2 on the DRT CLB field of the PERF CLB MCDU page during PREFLIGHT, TAKEOFF, CLIMB or GO-AROUND (with change of destination) phases. During any other phase, the DRT CLB field is not available.

– **PERF key . . . . . DEPRESS**
select the PERF CLB page.

– **D1 or D2 . . . . . WRITE in the scratchpad then ENTER**

ACTIVATION

The derated climb becomes active during the CLIMB phase when the thrust levers are set at or below the CLB detent.

Note : If the flight plan includes several climb phases (or step climb), the derated climb is available only during the first CLIMB phase.

DEACTIVATION

The derated climb is deselected when one of the following condition is met :
– Manually cleared on MCDU, or
– One of the thrust levers is set to MCT or above (in flight), or
– The FMGS leaves the CLIMB phase, or
– The slats are extended (in flight).

ENGINE START ON BATTERIES

Note : This procedure can be followed when the aircraft electrical network is only supplied with batteries.
Make sure that pneumatic power is available for starting the engines.

· Perform an autostart on Engine 1.
The secondary engine parameters are unavailable, as long as the aircraft's electrical network is supplied by the batteries.

Note : It is required that Engine 1 be started first, since the crossbleed valve does not automatically open on batteries. Moreover, the parking brake is pressurized by Engine 1.

· When all the parameters are stabilized, check that the aircraft's electrical network is normal.
· Start the other engines, following the autostart procedure.

R **GENERAL**

Except in some operational environments, such as an uphill slope, slippery taxiways or high gross weight, taxi on one engine may be preferred.
Caution must be exercised when taxiing on one engine to avoid excessive jet blast.
It is recommended to taxi with engine 1 to pressurize the blue hydraulic system to ensure brake accumulator pressure.

Note : If taxi is performed with the engine 2, check on BRAKE & ACCU. PRESS indicator that brake accumulator pressure is normal.

AT DEPARTURE

The following may be applied for taxi out if company policy and regulations permit.

– **ENGINE 1** . . . . . **START**

– **X BLEED** . . . . . **OPEN**
To supply both packs from engine 1

– **Apply "AFTER START" normal procedures (Refer to 3.03.09) except :**
· APU should be kept running to avoid additional elec transients and to allow galley operation.
· Delay WING A. ICE, ENG A. ICE checks.
· APU BLEED should be switched OFF to prevent ingestion of engine exhaust gases in the air conditioning system.

R – **Apply "TAXI" normal procedures (Refer to 3.03.10)**

• **Before ENG 2 start :**

– **APU BLEED** . . . . . **ON**

• **Not less than 3 minutes before take-off :**

– **ENGINE 2** . . . . . **START**

– **APU** . . . . . **AS RQRD**

– **X BLEED** . . . . . **AUTO**
Proceed with "AFTER START" check list (WING A. ICE, ENG A. ICE)

AT ARRIVAL

The flight crew may use the following procedure for taxiing in :

– **APU** . . . . . **START**

R • **No less than 3 minutes after high thrust operations, and when taxiing straight :**

– **ENG 2** . . . . . **SHUT DOWN**

SEVERE TURBULENCE

GENERAL

Whenever possible, avoid areas with known or forecasted severe turbulence. If turbulence is unavoidable, aim to keep the speed in the region of the target speed given in this section, so as to provide the best protection against the effect of gust on the structural limits, whilst maintaining an adequate margin above VLS.
Consider requesting a lower flight level to increase margin to buffet onset.

R Sufficient buffet margin exists at optimum altitude.

SIGNS

R Before entering an area of known turbulence the flight crew and the cabin crew must
R secure all loose equipment and turn on the "SEAT BELTS" and "NO SMOKING" signs.

AUTOPILOT/AUTOTHRUST

– **Keep the autopilot ON.**

R – **When thrust changes become excessive : Disconnect Autothrust.**

– **For approach : Use A/THR for managed speed.**

THRUST AND AIRSPEED

Set the thrust to give the recommended speed (see table on next page). This thrust setting aims to obtain, in stabilized conditions, the speed for turbulence penetration given in the graph below.

Change thrust only in case of an extreme variation in airspeed, and do not chase your Mach or airspeed.

R A transient increase is preferable to a loss of speed that decreases buffet margins and is difficult to recover.

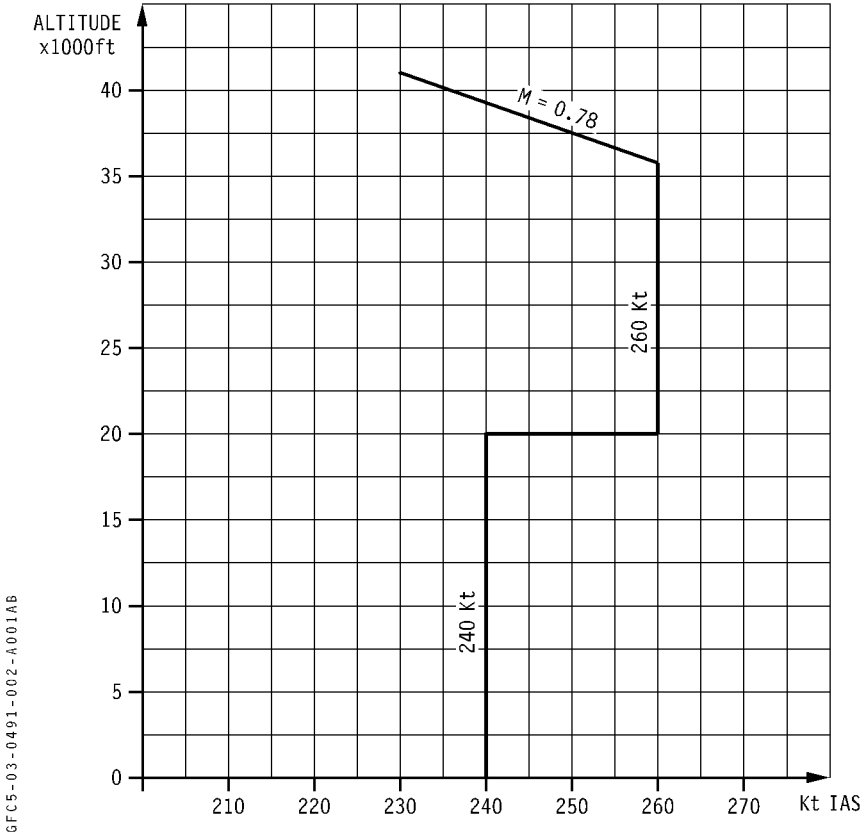

GFC5-03-0491-002-A001AB

SEVERE TURBULENCE

GENERAL

Whenever possible, avoid areas with known or forecasted severe turbulence. If turbulence is unavoidable, aim to keep the speed in the region of the target speed given in this section, so as to provide the best protection against the effect of gust on the structural limits, whilst maintaining an adequate margin above VLS.
Consider requesting a lower flight level to increase margin to buffet onset.

R Sufficient buffet margin exists at optimum altitude.

SIGNS

R Before entering an area of known turbulence the flight crew and the cabin crew must
R secure all loose equipment and turn on the "SEAT BELTS" and "NO SMOKING" signs.

AUTOPILOT/AUTOTHRUST

– **Keep the autopilot ON.**

R – **When thrust changes become excessive : Disconnect Autothrust.**

– **For approach : Use A/THR for managed speed.**

THRUST AND AIRSPEED

Set the thrust to give the recommended speed (see table on next page). This thrust setting aims to obtain, in stabilized conditions, the speed for turbulence penetration given in the graph below.

Change thrust only in case of an extreme variation in airspeed, and do not chase your Mach or airspeed.

R A transient increase is preferable to a loss of speed that decreases buffet margins and is difficult to recover.

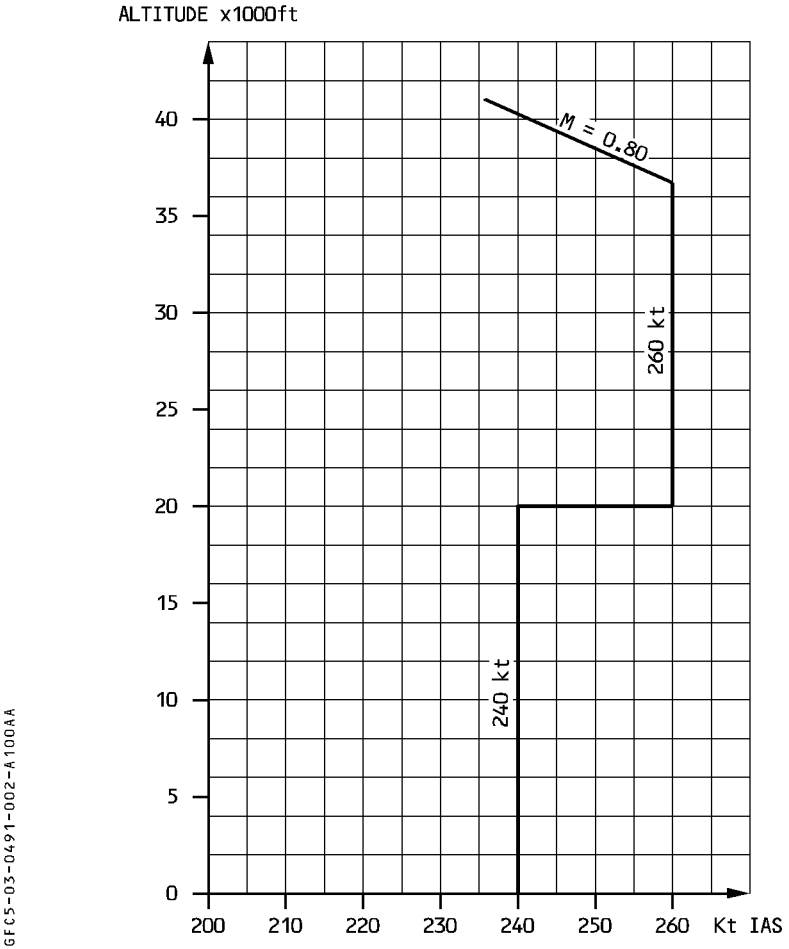

GFCS-03-0491-002-A100AA

R THRUST SETTING (N1) FOR RECOMMENDED SPEED

FL	SPD or Mach	WEIGHT (1000 KG)												
		120	130	140	150	160	170	180	190	200	210	220	230	240
410	0.78	88.6	89.7	90.8	91.9	93.5	95.4	–	–	–	–	–	–	–
390	0.78	87.5	88.3	89.3	90.3	91.3	92.5	94.1	96.0	–	–	–	–	–
370	0.78	86.5	87.2	88.0	88.8	89.7	90.7	91.6	92.9	94.4	96.2	–	–	–
350	260	85.5	86.1	86.9	87.6	88.4	89.3	90.2	91.1	92.1	93.3	94.8	96.4	–
330	260	84.2	84.8	85.4	86.2	87.0	87.8	88.7	89.6	90.6	91.6	92.6	93.9	95.3
310	260	82.7	83.4	84.1	84.8	85.5	86.3	87.1	88.1	89.0	90.1	91.1	92.1	93.2
290	260	81.3	81.9	82.6	83.3	84.1	84.8	85.6	86.5	87.4	88.5	89.5	90.5	91.6
270	260	80.1	80.7	81.2	81.9	82.6	83.4	84.2	85.1	86.0	86.9	87.9	88.9	90.0
250	260	78.5	79.2	79.8	80.5	81.2	81.9	82.6	83.5	84.5	85.4	86.3	87.3	88.3
200	240	72.0	72.7	73.5	74.3	75.3	76.3	77.3	78.3	79.4	80.6	81.7	82.8	83.9
150	240	68.1	68.8	69.6	70.4	71.2	72.2	73.2	74.2	75.3	76.4	77.5	78.6	79.7
100	240	64.1	64.8	65.6	66.5	67.4	68.4	69.4	70.3	71.3	72.4	73.5	74.5	75.6
50	240	60.2	60.9	61.7	62.5	63.4	64.4	65.4	66.4	67.4	68.5	69.7	70.7	71.7

IFP-V10E A330-301

ALTITUDE

If the crew manually flies the aircraft :
– Expect large variations in altitude, but do not chase altitude.
– Maintain attitude, and allow altitude to vary.

R SIGNS

R – Set the Seatbelts and No Smoking switch to ON, in advance of anticipated turbulence.

SPEEDBRAKES

Whenever speedbrakes are applied, keep a hand on the speedbrake handle, except while performing some other specific cockpit function (changing power, resetting altimeter, etc.).

OPERATION IN WINDSHEAR/DOWN BURST CONDITIONS

PRECAUTIONS INTO SUSPECTED WINDSHEAR

- **Before TAKEOFF**

  – **DELAY TAKEOFF until conditions are improved.**

  – **ASSESS CONDITIONS for a SAFE TAKEOFF by :**
  · Using observations and experience.
  · Checking weather conditions.

  – **SELECT the MOST FAVORABLE RUNWAY (considering location of the likely windshear).**

R – **USE the WEATHER RADAR before the takeoff run, to ensure a flight path clear of any potential problem areas.**

  – **SELECT TOGA thrust.**

  – **CLOSELY MONITOR AIRSPEED and AIRSPEED TREND during the takeoff run to detect early signs of windshear.**

- **During APPROACH**

  – **DELAY LANDING, or DIVERT to another airport, until conditions are more favorable.**

  – **ASSESS CONDITION for a SAFE LANDING by :**
  · Using observations and experience.
  · Checking weather conditions.

R – **USE the WEATHER RADAR.**

  – **SELECT the MOST FAVORABLE RUNWAY, in conjunction with the most appropriate runway approach aid.**

  – **SELECT FLAPS 3.**

  – **USE MANAGED SPEED IN APPROACH PHASE.**

  – **CHECK both FDs ENGAGED IN ILS, FPA or V/S.**

  – **ENGAGE AUTOPILOT, for more accurate approach and earlier information of beam deviation when ILS available.**

R **THRUST SETTING (N1) FOR RECOMMENDED SPEED**

FL	SPD or Mach	WEIGHT (1000 KG)												
		120	130	140	150	160	170	180	190	200	210	220	230	240
410	0.80	89.2	90.1	91.1	92.1	93.5	95.2	–	–	–	–	–	–	–
390	0.80	88.2	88.9	89.7	90.6	91.6	92.6	94.0	95.7	–	–	–	–	–
370	0.80	87.3	87.9	88.6	89.3	90.1	91.0	91.9	92.9	94.3	95.9	–	–	–
350	260	85.2	85.9	86.6	87.4	88.2	89.0	90.0	90.9	91.9	93.1	94.6	96.1	–
330	260	83.9	84.5	85.2	85.9	86.7	87.6	88.5	89.4	90.4	91.4	92.4	93.7	95.0
310	260	82.4	83.1	83.8	84.5	85.2	86.0	86.8	87.8	88.8	89.8	90.8	91.9	92.9
290	260	81.0	81.6	82.2	83.0	83.7	84.5	85.3	86.1	87.1	88.1	89.1	90.1	91.2
270	260	79.8	80.3	80.9	81.5	82.2	83.0	83.8	84.7	85.5	86.4	87.4	88.4	89.5
250	260	78.2	78.7	79.4	80.1	80.8	81.4	82.2	83.0	83.9	84.9	85.8	86.7	87.7
200	240	71.4	72.1	72.9	73.7	74.5	75.5	76.5	77.5	78.5	79.6	80.8	81.8	83.0
150	240	67.5	68.2	68.9	69.6	70.5	71.4	72.3	73.3	74.2	75.2	76.3	77.5	78.5
100	240	63.4	64.1	64.9	65.6	66.5	67.4	68.4	69.3	70.2	71.1	72.1	73.2	74.3
50	240	59.4	60.2	60.9	61.6	62.4	63.3	64.2	65.2	66.1	67.1	68.1	69.2	70.3

IFP-V11.0330-202

ALTITUDE

If the crew manually flies the aircraft :
– Expect large variations in altitude, but do not chase altitude.
– Maintain attitude, and allow altitude to vary.

R **SIGNS**

R – Set the Seatbelts and No Smoking switch to ON, in advance of anticipated turbulence.

SPEEDBRAKES

Whenever speedbrakes are applied, keep a hand on the speedbrake handle, except while performing some other specific cockpit function (changing power, resetting altimeter, etc.).

OPERATION IN WINDSHEAR/DOWN BURST CONDITIONS

PRECAUTIONS INTO SUSPECTED WINDSHEAR

- **Before TAKEOFF**

  – **DELAY TAKEOFF until conditions are improved.**

  – **ASSESS CONDITIONS for a SAFE TAKEOFF by :**
  · Using observations and experience.
  · Checking weather conditions.

  – **SELECT the MOST FAVORABLE RUNWAY (considering location of the likely windshear).**

R – **USE the WEATHER RADAR before the takeoff run, to ensure a flight path clear of any potential problem areas.**

  – **SELECT TOGA thrust.**

  – **CLOSELY MONITOR AIRSPEED and AIRSPEED TREND during the takeoff run to detect early signs of windshear.**

- **During APPROACH**

  – **DELAY LANDING, or DIVERT to another airport, until conditions are more favorable.**

  – **ASSESS CONDITION for a SAFE LANDING by :**
  · Using observations and experience.
  · Checking weather conditions.

R – **USE the WEATHER RADAR.**

  – **SELECT the MOST FAVORABLE RUNWAY, in conjunction with the most appropriate runway approach aid.**

  – **SELECT FLAPS 3.**

  – **USE MANAGED SPEED IN APPROACH PHASE.**

  – **CHECK both FDs ENGAGED IN ILS, FPA or V/S.**

  – **ENGAGE AUTOPILOT, for more accurate approach and earlier information of beam deviation when ILS available.**

Note : – When using the GS mini function associated with managed speed, the system will carry extra speed in strong wind condition.
– If downburst is expected, increase VAPP displayed on the MCDU up to a maximum of VLS + 15 kt.

R **RECOVERY TECHNIQUE AT TAKEOFF**

- **Before V1**

R The takeoff should be rejected only if unacceptable airspeed variations occur below indicated V1 and the pilot decides that there is sufficient runway remaining to stop the airplane.

- **After V1**

– **THRUST LEVERS : TOGA.**

– **ROTATE NORMALLY**

– **FOLLOW SRS ORDERS**

- **During initial climb**

– **SET or MAINTAIN TOGA**

– **IF ENGAGED, AUTO PILOT MAY BE USED, but be aware that automatic disengagement may occur if $\alpha > \alpha$ prot.**

– **FOLLOW SRS ORDERS (including use of full back stick if demanded)**

Note : If SRS not available, initially use pitch attitude up to 12,5° but this pitch attitude can be increased by using up to full back stick if necessary to minimize loss of height.

– **CLOSELY MONITOR THE FLIGHT PATH AND SPEED**

– **DO NOT CHANGE CONFIGURATION (gear, flaps) UNTIL OUT OF SHEAR**

– **RECOVER SMOOTHLY TO A NORMAL CLIMB WHEN OUT OF SHEAR**

RECOVERY TECHNIQUE AT LANDING

– **THRUST LEVERS : TOGA**

– **IF ENGAGED, AUTO PILOT MAY BE USED, but be aware that automatic disengagement may occur if $\alpha > \alpha$ prot.**

– **FOLLOW SRS ORDERS (including use of full back stick if demanded)**

Note : If SRS is not available, initially use pitch attitude up to 12.5°. But, this pitch attitude can be increased by using up to full back stick, if necessary, to minimize loss of height.

– **DO NOT CHANGE CONFIGURATION**

– **CLOSELY MONITOR THE FLIGHT PATH AND SPEED**

– **SMOOTHLY RECOVER NORMAL CLIMB when out of shear**

COLD WEATHER

For flight operations in icing conditions, see Ice and Rain Protection (Refer to 3.04.30) .
For ground operations on contaminated runways, see FCOM Volume 2 (Refer to 2.04.10).
Preparation and ground operation of the aircraft following cold soak in very low temperatures may present particular problems. The following recommendations, which complement the normal operating procedures, should be observed where applicable.
Ice accretion on ground can be expected when air temperature approaches or falls below freezing (0°C/32°F), and when moisture or ice occurs in the form of precipitation or condensation. The aircraft is also most vulnerable to ice build-up when exposed to any form of moisture, after the surfaces have been cold soaked during previous cruise flight at high altitudes, when refuelled with cold fuel or after overnight parking at low air temperatures.

EXTERIOR INSPECTION

– **PRELIMINARY COCKPIT PREPARATION (normal procedures) . . . . COMPLETED**
APU is started and air conditioning is on.

Note : 1. Ground power should be used for the APU start, if the OAT is –15°C (5°F) or lower.
2. For temperatures below –15° C (5°F) in the cockpit, the display units may not be available.

R

● **If avionic bay is cold soaked (aircraft parked without electrical ground supply or without air conditioning) :**

– **IRS . . . . . INITIATE ALIGNMENT**
For temperatures below – 15°C (5°F) in the avionic bay the IRS alignment needs 15 minutes.

– **PROBE/WINDOW HEAT . . . . . ON**

R – **SURFACES . . . . . CHECKED FREE OF FROST, ICE AND SNOW**
R All surfaces of the aircraft (critical surfaces : leading edges and upper surfaces of wings,
R vertical and horizontal stabilizers, all control surfaces, slats and flaps) must be clear of
R snow, frost and ice for takeoff.
R Thin hoarfrost is acceptable on the upper surface of the fuselage.

R *Note : Thin hoarfrost is typically a white crystalline deposit which usually develops*
R *uniformly on exposed surfaces on cold and cloudless nights ; it is so thin that a*
R *person can distinguish surface features (lines or markings) beneath it.*

R On the underside of the wing tank area, a maximum layer of 3 mm (1/8 inch) of frost
R will not penalize takeoff performance.

R – **FOLLOWING EQUIPMENT . . . . . CHECKED FREE OF FROST, ICE AND SNOW**
R – Landing gear assemblies (lever locks) and tires, landing gear doors.
R – Engine inlets, inlet lips, fans (check for rotation), spinners, fan exhaust ducts, reverser
R assemblies.
R – Drains, bleeds, probes (pitots, static ports, TAT sensors, angle of attack sensors)
R – Fuel tank ventilation.
R – Radome
R – Verify that the commercial water supplies are not frozen and have been refilled (these
R should have been emptied prior to cold soak).

● **after first engine start :**

– **PROBE/WINDOW HEAT . . . . . AUTO**
Heating will continue to operate but under automatic control.

PROCEDURE FOR GROUND DE-ICING/ANTI-ICING

In all circumstances, it is the Captain's responsibility to decide whether or not to de-ice/anti-ice the aircraft, or to order a repeated treatment.

CAUTION

R – Check that no external air is supplied to the aircraft, via the low or high pressure
R ground connectors.
– If repeated anti-icing is necessary, ground crew must de-ice the surfaces with a hot fluid mixture before applying a new layer of anti-icing fluid.

Ensure that the ground crew is using de-icing/anti-icing fluids, in accordance with applicable company requirements and Aircraft Maintenance Manual instructions.
The flight crew must establish good communication with the ground personnel, responsible for de-icing or anti-icing, before the procedure begins.

R The aircraft may be de-iced or anti-iced with its engines and APU stopped, or with the APU
R running, and/or with the engines running. However, the flight crew should not start the engines or APU while the fluid is being sprayed on the aircraft.

CAUTION

– Avoid indiscriminate use of de-icing fluid and its ingestion by the engine or APU.
– Do not move flaps or slats, flight control surfaces, or trim surfaces, if they are not free of ice.
– Always have the aircraft treated symmetrically : The left and right sides must receive the same and complete treatment.

BEFORE FLUID SPRAYING :

– **CAB PRESS MODE SEL . . . . . CHECK AUTO**

– **ENG BLEED 1, 2 . . . . . OFF**

– **APU BLEED . . . . . OFF**

– **DITCHING pushbutton . . . . . ON**
Outflow valves, pack flow control valves, avionic ventilation overboard valve close. This will prevent de-icing fluid from entering the aircraft. Avionic ventilation is provided by operating cabin fans, since air blows to the inboard valve. Considering the low OAT, there is no time limitation associated to this configuration. The "CAB PRESS FWD OFV NOT OPEN" and "CAB PRESS AFT OFV NOT OPEN" ECAM cautions will be triggered. Disregard the associated procedure.

Note : On ground with passengers on board, it is recommended to avoid packs inoperative for longer than 20 minutes because comfort may be affected.

– **THRUST LEVERS . . . . . CHECK IDLE**

– **"AIRCRAFT PREPARED FOR SPRAYING" . . . . . INFORM GND CREW**

UPON COMPLETION OF THE SPRAYING OPERATION :

– **DITCHING pushbutton . . . . . OFF**

R – **OUTFLOW VALVE . . . . . CHECK OPEN**
R On the ECAM PRESS page, confirm that the outflow valve indication reaches the open
R green position to avoid any unexpected aircraft pressurization.

CAUTION
If spraying is performed with the engines not running, a small negative cabin delta P may appear for a short time, just after selecting the ditching pushbutton to OFF. During this time, do not open any doors or windows.

– **ENG BLEED . . . . . ON**

• **At least 60 seconds after APU start, or on completion of spraying operation :**

– **APU BLEED . . . . . ON**

– **Ground equipment . . . . . REMOVE**

– **DE-ICING/ANTI-ICING REPORT . . . . . RECEIVED**
The information from ground personnel who carried out de-icing and post application check must include (ANTI-ICING CODE) :
· Type of fluid used.
· The mix ratio of fluid to water (example 75/25).
· When the holdover time began.
· Result of post application check : Aircraft critical parts are clean.

– **NORMAL PROCEDURE . . . . . RESUME**
Apply appropriate normal procedures. Pay special attention to the flight control check. In freezing precipitation, make the appropriate checks to evaluate aircraft icing. Base the decision on whether to takeoff, or to re-protect the aircraft, on the amount of ice that has built up on the critical surfaces since the last de-icing, as revealed by a personal inspection from the inside and outside of the aircraft. Make this inspection before the holdover time expires, or just before takeoff.

Note : If the fuselage has been sprayed, there is a risk of de-icing fluid ingestion by the APU air intake, resulting in specific odors, or SMOKE warnings. Thus, consider APU BLEED OFF during takeoff.

SECURING THE AIRCRAFT FOR COLD SOAK

Note : At the beginning of a cold soak, due to a transient temperature difference between fluid in the reservoir and the system piping, the G RSVR UNDERFILLED caution may be triggered on the ECAM. Check the reservoir quantity in the upper half part of the norm filling range. The caution may disappear with the operation of the green electrical pump.

Close the outflow valve before leaving the aircraft.

R ● **After switching off all bleeds and before switching off AC power :**

R – **DITCHING pushbutton . . . . . ON**
R This closes the outflow valve, the pack valves, and the avionic ventilation inlet and
R extract valves.

R – **PARKING BRAKE . . . . . OFF**
R Check chocks in place, and release the parking brake to prevent brakes from freezing.

R ● **After switching off the batteries :**

R – **DITCHING pushbutton . . . . . OFF**

– **CAPT SEAT . . . . . MOST FWD POSITION**
This facilitates access to the avionics bay, because seat operation becomes difficult once the mechanism is cold-soaked.

– **PROTECTIVE COVERS . . . . . INSTALL**

• **If no electrical ground supply or air conditioning is available :**

– **APU BATTERY . . . . . REMOVE**
If the APU battery is subject to cold soak for 12 hours or more, and the ambient temperature is below – 15°C (5°F), its remaining capacity may not allow starting the cold soaked APU. Remove the battery and store it in a warm place.

WATER SYSTEM DRAINING

If required, due to the OAT, drain the water system, as shown below :

Configuration			Exposure time	Water tank drain
Air Conditioning	Cabin temperature	Outside Air Temperature		
ON	Above 10°C (50°F)	Between 0°C and – 15°C (32°F and 5°F)	Any	Not required
		Below – 15°C (5°F)	1 h 15 min	Required
OFF		Between 0°C and – 7°C (32° and 19.4°F)	1 h 30 min	
		Between – 7°C and – 15°C (19.4°F and 5°F)	0 h 30 min	
		Below – 15°C (5°F)	Any	

WATER DRAINING PROCEDURE

The following procedure must be applied, when the water system needs to be drained, and when the aircraft is exposed to temperatures below the freezing point.
Draining is usually carried out with the electrical power supply on.

Potable-Water Panels :

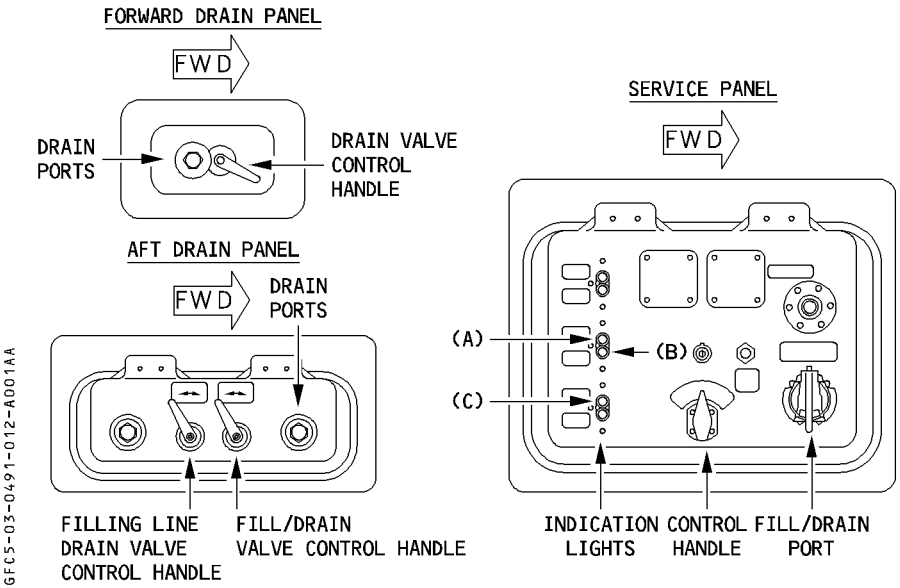

– **ACCESS PLATFORM(S) . . . . . PUT IN POSITION**

– **SHUT-OFF VALVES IN GALLEYS/TOILETS . . . . . CHECK OPEN**

– **WATER FAUCETS IN GALLEYS/TOILETS . . . CHECK MIDDLE (WARM) POSITION**

– **FWD AND AFT DRAIN, SERVICE PANELS' ACCESS DOORS . . . . . OPEN**

– **DRAIN PORT CAPS . . . . . REMOVE**
Remove the drain port cap of the potable water service panel.

– **DRAIN HOSES . . . . . CONNECT**
Connect drain hoses to the drain port on the :
· Forward and aft drain panels
· Potable water service panel

– **CONTROL HANDLE (SERVICE PANEL) . . . . . TURN TO "DRAIN" AND PULL**
To drain, turn the handle to the "DRAIN" position, and then pull it out until it reaches its mechanical stop. The (A), (B), (C) indicator lights come on. Water flows out of the drain ports of the forward and aft drain, and the potable water service panels.

● **If the aircraft's electrical network is de-energized :**

– **DRAIN CONTROL HANDLES (FWD and AFT DRAIN PANELS) . TURN TO "OPEN"**
The most aft (filling line drain valve control) handle on the aft drain panel is set to the "OPEN" position. It is no longer possible to close the aft and forward drain panel access doors.

● **When the system is drained :**

– **CONTROL HANDLE (SERVICE PANEL) . . . . PUSH AND TURN TO "NORMAL"**
The (A), (B), (C) indicator lights go off.

● **If the aircraft's electrical network is de-energized :**

– **DRAIN CONTROL HANDLES (FWD & AFT DRAIN PANELS) . . . . TURN TO "SHUT"**

Note : In freezing temperatures, all drain valves must remain open after draining to prevent damage to the system.

– **DRAIN HOSES . . . . . DISCONNECT**

– **PANELS . . . . . CLEAN AND DRY**

Note : In freezing conditions, when the drain valves must stay open, do not put the caps on the service panel drain port.

– **ACCESS DOORS (FWD, AFT) . . . . . CLOSE**
Water drainage is assured even with access doors closed.

Note : When the drain valve is manually open it is not possible to close the portable water service panel access door.

– **ACCESS PLATFORM(S) . . . . . REMOVE**

OPERATIONS IN VOLCANIC ASHES

Following procedures are given as advice to operators who fly routes that could take their aircraft through the material erupting from active volcanos.
Volcanic ash is composed of very abrasive particles, which therefore may cause serious damage to aircraft parts exposed to airflow and may significantly impair system operation.
In view of the potential adverse effects, operations from/to airports with volcanic ash deposits should be avoided if possible.
If such exposure is unavoidable, the following recommendations should be applied.

GROUND OPERATIONS ON AIRPORT COVERED WITH ASH OR DUST

Preliminary cockpit preparation

– **APU . . . . . DO NOT USE**
Restrict ground use of APU to engine starts, if required. Request ground supply for air conditioning and for electrical supply.

– **WINDSHIELD WIPERS . . . . . DO NOT USE**
Do not use windshield wipers for ash dust removal.

Exterior inspection

– **SURFACES AND EQUIPMENT . . . . . CHECK FREE OF ASH DEPOSITS**
Ground maintenance should remove ash that has settled on exposed lubricated surfaces and could penetrate seals, enter the engine gas path, air conditioning system, air data probes and other orifices on the aircraft.

– **ENGINE INLETS . . . . . CHECK FREE OF ASH DEPOSITS**
Inspect and order cleaning (as far as practical) of any volcanic ash within 25 feet of the engine inlet.

Engine start

Engines should be started with external pneumatic supply, if available (Refer to 3.04.70).

– **ENGINE . . . . . CRANK**
Before engine start, ventilate the engines by dry cranking at maximum motoring speed for two minutes. This will blow out any ash that may have entered the booster area.

Taxi

After releasing the brakes :

– **THRUST LEVERS .. ADVANCE SMOOTHLY THEN MOVE TO IDLE WHEN ROLLING**
Smoothly advance the levers to the minimum required of breakaway.
Avoid making sharp or high-speed turns.

– **ENG 1, 2 BLEED . . . . . OFF**
Keep the bleed valves closed for taxiing.

Takeoff

– **Allow ash and dust (if present) to settle on the runway before starting the takeoff roll.**

– **Use the rolling takeoff technique, if possible.**

– **Progressively adjust engine power, as is done for normal procedures.**

Landing

– **REVERSERS . . . . . AS RQRD**
If it appears that maximum reverse thrust will be needed, apply reverse thrust when the main landing gear touches down. Limit the use of reverse thrust as much as possible, because reverse flow may throw up ash and impair visibility.

Note : Because of the abrasive effect of the volcanic ash on windshields and landing lights, the visibility for approach and landing may be significantly reduced. Consider diversion to an airfield where AUTO LAND is possible.

– **BRAKE PERFORMANCE . . . . . CONSIDER PENALTY**
A layer of ash on the runway may degrade braking efficiency. Treat landing performance,
R as if it were similar to that on a wet runway (dry ash), or on slush (wet ash).

R **SECURING THE AIRCRAFT IN VOLCANIC ASH**

R ● **After switching off all bleeds, and before switching off AC power :**

R – **DITCHING pushbutton . . . . . ON**
R This closes the outflow valve, the pack valves, and the avionic ventilation inlet and
R extract valves.

R ● **After switching off the batteries :**

R – **DITCHING pushbutton . . . . . OFF**

R – **PROTECTIVE COVERS . . . . . INSTALL**
R Install protective covers and plugs to protect the aircraft and engines from snow and
R ice.

FLIGHT OPERATIONS

Flight into areas of known volcanic activity must be avoided.
If a volcanic eruption is reported while in flight, the flight should remain well clear of the affected area (volcanic dust may be spread over several hundred miles) and, if possible stay on the upwind side of the volcanic dust (typically 20 NM upwind of the erupting volcano).
In hours of darkness or in meteorological conditions when volcanic dust may not be visible, flight into ash cloud can be suspected, should one or several of the following indications be observed :

· Smoke or dust appearing in the cockpit,
· Acrid odor similar to electric smoke,
· At night, St. Elmo fire/static discharges appearing around the windshield,
· Bright white/orange glow appearing in the engine inlets,
· Landing lights casting sharp, distinct, shadows,
· Multiple engine malfunctions, such as increasing EGT, power loss, stall or flame out.

● **If the aircraft inadvertently enters a volcanic ash cloud :**

– **ESCAPE MANEUVER (terrain permitting) . . . . . INITIATE**
Since lateral dimensions of ash cloud are not known, best is to fly a 180° reversal turn.

– **ATC . . . . . NOTIFY**

– **A/THR . . . . . OFF**
This will prevent thrust variations.

– **THRUST (terrain permitting) . . . . . DECREASE**
This assists in maintaining the engine stall margin by reducing the ash ingestion and limiting the EGT, the accumulation of molten volcanic ash on turbine vanes is restricted to a minimum. Do not climb, since this increases EGT.

– **CREW OXYGEN . . . . . ON/100 %**

– **CABIN CREW . . . . . NOTIFY**

– **PAX OXYGEN . . . . . AS RQRD**
Depending on contamination.

– **ENG ANTI ICE . . . . . ON**

– **WING ANTI ICE . . . . . ON**

– **PACK FLOW . . . . . HI**
Maximum air bleed provides additional engine stall margin.

Note : It is recommended to switch off the CARGO ISOL VALVES, to prevent a cargo smoke warning from being triggered.

– **APU . . . . . START**
The APU (if available) may be started in preparation for a starter-assisted relight.

– **ENGINE PARAMETERS . . . . . MONITOR**
EGT should be particularly monitored for any exceedance tendency.

Note :
- *If the EGT increases up to the limits, an accumulation of molten volcanic ash on the turbine vanes must be suspected.*
  This accumulation may be cleared by engine shutdown, then restart.
- *If first engine restart attempt is unsuccessful, repeated successive attemps should be made immediately.*
- *A successful engine restart may not be possible until the aircraft has exited the volcanic ashcloud.*
- *Upon restart, the engine acceleration may be very low and should not be misinterpreted as a failure to start.*
- *Consider compressor and turbine blades have been eroded, avoid rapid thrust commands. An increased fuel flow and EGT may be noticed.*

– **AIRSPEED INDICATIONS . . . . . MONITOR**
Volcanic ash may clog the pitot probes. If unreliable or loss of airspeed indication is observed, refer to the abnormal procedure : "FLT WITH UNRELIABLE SPD INDICATION" (3.02.34).

Note : Communication difficulties may be experienced due to electrostatic conditions.

Reporting

- Whenever operating in areas affected by volcanic activity, flight crews should be aware of volcanic activity reporting procedures and familiar with the use of the ICAO Special Air-Report of Volcanic Activity (Model VAR).
- Should a volcanic ash cloud be encountered, flight conditions and crew duties permitting, the ATC should be notified, providing information concerning the location, altitude and drift direction of the ash cloud.

INTRODUCTION

The Less Paper Cockpit (LPC) concept consists of a complete set of software tools, designed to :

- Improve access to pilots' operational information, and simplify some of their tasks.
- Reduce the quantity of paper documents in the cockpit, and replace them with electronic ones, enabling quicker and easier updates, while improving information retrieval.

The applicable areas include Performance and Weight and Balance computations, in addition to technical operational documentation (FCOM, MEL, Operations Policy Manual..). This section addresses the procedures corresponding to the modules which are already available.

The various modules are linked via F.O.V.E. (Flight Operations Versatile Environment), which is designed to provide an interface between the various modules by enabling :

- Inter-module communication
- Software compatibility management
- Software version management
- Integrity control between data and the software versions
- Update management
- Context management

Each airline may choose to install one or several modules, each of which is able to work independently.

GENERAL

LPC PROGRAM AND REFERENCE VERSION NUMBER UPDATING

R Each pilot should check that the version of F.O.V.E., installed on their PC, corresponds to the latest updated version provided by their airline's Flight Operations.

POWER SUPPLY

Check that each available PC is electrically-supplied.

PC STOWAGE DURING TAKEOFF AND LANDING

PCs should be stowed during takeoff and landing.

LPC TAKEOFF MODULE

The takeoff module is designed to provide aircraft takeoff performance, based on actual daily environmental conditions, just prior to flight. It allows straightforward computations, and provides the best takeoff performance for the given conditions.

TAKEOFF PERFORMANCE TASKSHARING

The tasksharing policy for data computation, and introduction in the MCDU is consistent with the currently applicable policy, as per the SOP :
One pilot performs the computation, then introduces the resulting data in the MCDU.
The other pilot checks the :
– Computation by using the PC to verify that the entered data is correct.
– Data entered in the MCDU.
Data entry and computation are generally done by the PF, and checked by the PNF. These tasks can be swapped, as per company policy, or as circumstances dictate. For instance, during taxi, data entry and computation should be done by the PNF, since the PF is busy taxiing the aircraft.
The PF will then have to perform the check, by stopping the aircraft or, if a stop is not possible, by transferring command to the other pilot.

COCKPIT PREPARATION

TAKEOFF DATA COMPUTATION

R The PF checks that the version of F.O.V.E., available on the PC, is the applicable one. (The applicable version is indicated on the computerized F-PLN, or other document, as per airline policy).
The PF enters the data, then shows the screen to the PNF for data confirmation.

R ● **If the Weight and Balance module is to be used :**

– **Use the pilot's PC to compute the ZFCG and ZFW :**
The computed values will be automatically fed to the takeoff performance module.

– **Use the pilot's PC to compute takeoff data :**
Any NOTAM affecting airport data should be considered at this stage, and taken into account in the "Modify runway" frame of the pilot interface. When the computation has been performed, a summary of the results is available in the "REMINDER", which is equivalent to the MCDU PERF page. Only the values to be addressed are indicated.

FMGS DATA INSERTION (no change compared to the current SOP)

The PF enters the data, computed on the PC, into the MCDU.

GROSS WEIGHT INSERTION (INIT B page)

– **ZFCG/ZFW . . . . . INSERT**

– **BLOCK FUEL . . . . . INSERT**

TAKEOFF DATA INSERTION (PERF TO page)

– **V1, VR, V2 . . . . . INSERT**

– **FLEX TO TEMP/DERATE . . . . . INSERT**

R ● **When refuelling is completed, if the Weight and Balance module is used :**

– **Check the fuel distribution on the ECAM FUEL page.**

– **If necessary, correct the fuel distribution on the pilot PC's loading module.**
This will ensure consistency between the ECAM CG, and the CG computed by the loading module.

FMGS DATA CONFIRMATION

– **GROSS WEIGHT INSERTION . . . . . CHECK**
The PNF checks FMGS data.
· If the Aircraft Loading module is used :
– Check, on the pilot's PC, that the entered data is correct.
– Check that the computed data has been correctly introduced in the MCDU.

– **TO DATA . . . . . CALCULATE/CHECK**
The PNF checks, on the pilot's PC, that the entered data is correct.
The PNF checks that the computed data has been correctly introduced in the MCDU.

BEFORE PUSHBACK or START

– **LOADING . . . . . CHECK**

R – Check the ECAM CG versus the loadsheet CG or, if the W & B module is used, check the ECAM CG versus the CG computed on the pilot's PC.
– In case of a discrepancy, check that the ZFW and ZFCG have been correctly inserted in the MCDU, then rely on the ECAM CG.

– **TAKEOFF DATA . . . . . PREPARE and CHECK/REVISE**

Once the loading is checked :
– Check or re-enter the data entered in the takeoff performance module.
– Check or revise the takeoff data on the MCDU's INIT B and PERF pages.
Data to be crosschecked by the other pilot.

BEFORE TAKEOFF

– **PILOT PC . . . . . STOWED**

ILS (or NON PRECISION) APPROACH

● **When the landing gear is down :**

– **PILOT PC . . . . . STOWED**

R **LPC WEIGHT AND BALANCE MODULE**

R The Weight and Balance module provides a computerized loadsheet and trim sheet. This
R facilitates computation of the ZFW/ZFCG and TOW/TOCG, and enables last-minute changes
R to the passenger/cargo/fuel distribution.
R The following procedure applies to operators using only the W & B module. Operators using
R both the W & B module and the Takeoff module should refer to the LPC TAKEOFF MODULE
R section.

R **WEIGHT & BALANCE TASKSHARING**

R The tasksharing policy for data computation and introduction in the MCDU is consistent
R with the currently applicable policy, as per the SOP :
R One pilot performs the computation, then introduces the resulting data in the MCDU.
R The other pilot checks the :
R – Computation by using the PC to verify that the entered data is correct.
R – Data entered in the MCDU.
R Data entry and computation are generally done by the PF, and checked by the PNF. These
R tasks can be swapped, as per company policy, or as circumstances dictate.

COCKPIT PREPARATION

TAKEOFF DATA COMPUTATION

The PF checks that the version of F.O.V.E., available on the PC, is the applicable one. (The applicable version is indicated on the computerized F-PLN or other document, as per airline policy).
The PF enters the data, then shows the screen to the PNF for data confirmation.

– **Use the pilot's PC to compute the ZFCG and ZFW.**

– **Use RTOW to compute takeoff data.**

FMGS DATA INSERTION (no change compared to the current SOP).

The PF enters the data, computed on the PC, into the MCDU.

GROSS WEIGHT INSERTION (INIT B page)

– **ZFCG/ZFW . . . . . INSERT**

– **BLOCK FUEL . . . . . INSERT**

TAKEOFF DATA INSERTION (PERF TO page)

– **V1, VR, V2 . . . . . INSERT**

– **FLEX TO TEMP/DERATE . . . . . INSERT**

● **When refuelling is completed :**

– **Check the fuel distribution on the ECAM FUEL page.**

– **If necessary, correct the fuel distribution on the pilot PC's W & B module.**
This will ensure consistency between the ECAM CG and the CG computed by the W & B module.

FMGS DATA CONFIRMATION

– **GROSS WEIGHT INSERTION . . . . . CHECK**
The PNF checks FMGS data.
– Check, on the pilot's PC, that the entered data is correct.
– Check that the computed data has been correctly introduced in the MCDU.

– **TO DATA . . . . . CALCULATE/CHECK**

BEFORE PUSHBACK or START

– **LOADING . . . . . CHECK**
– Check the ECAM CG versus the CG computed on the pilot's PC.
– In case of a discrepancy, check that the ZFW and ZFCG have been correctly inserted in the MCDU, then rely on the ECAM CG.

– **TAKEOFF DATA . . . . . PREPARE and CHECK/REVISE**
Once the loading is checked :
– Check or recompute the takeoff speeds and the flexible temperature, using the RTOW charts.
– Check or revise the takeoff data on the MCDU's INIT B and PERF pages.
Data to be crosschecked by the other pilot.

BEFORE TAKEOFF

– **PILOT PC . . . . . STOWED**

ILS (or NON PRECISION) APPROACH

● **When the landing gear is down :**

– **PILOT PC . . . . . STOWED**

LPC MEL MODULE

TBD

05.00 CONTENTS

05.05 OPERATING DATA

– CONVERSIONS IAS. MACH – TAS. MACH – SAT. TAT 1
– INTERNATIONAL STANDARD ATMOSPHERE 2
– CONVERSIONS QNH – QFE – PRESSURE ALTITUDE 3
– CONVERSIONS QFE – hPa – in.Hg – ft 4
– WIND COMPONENTS (FOR TAKEOFF AND LANDING) 5
– ALTITUDE TEMPERATURE CORRECTION 6

05.06 THRUST RATINGS

05.10 CLIMB

– GENERAL 1
– CLIMB 250KT/300KT/M.80 2
R – DERATED CLIMB 1 7
R – DERATED CLIMB 2 11

05.15 CRUISE

– GENERAL 1
– OPTIMUM MACH NUMBER 1
– OPTIMUM AND MAXIMUM ALTITUDES 4
– WIND ALTITUDE TRADE FOR CONSTANT SPECIFIC RANGE . 7
– OPTIMUM ALTITUDE ON SHORT STAGE 10
– CRUISE AT M.80 11
– CRUISE AT M.82 15
– CRUISE AT M.84 19
– CRUISE AT LONG RANGE 23

05.20 IN CRUISE QUICK CHECK

– GENERAL 1
– CORRECTION FOR DEVIATION FROM REFERENCE WEIGHT . . 1
– EXAMPLE 2
– IN CRUISE QUICK CHECK M.80 3
R – IN CRUISE QUICK CHECK M.82 7
R – IN CRUISE QUICK CHECK M.84 11
R – IN CRUISE QUICK CHECK LONG RANGE 15

05.25 HOLDING

– GENERAL 1
– CLEAN CONFIGURATION – GREEN DOT SPEED 2
– CLEAN CONFIGURATION – 210KT 3
– CONFIGURATION 1 – S SPEED 4
– CONFIGURATION 1 – 170KT 5

R **05.30 DESCENT**
R – GENERAL 1
R – DESCENT M.80/300KT/250KT 2
R – EMERGENCY DESCENT MMO/VMO 3

05.35 GO AROUND

05.40 ALTERNATE

05.50 GROUND DISTANCE/AIR DISTANCE

R **CONVERSIONS – IAS. MACH – TAS. MACH – SAT. TAT**

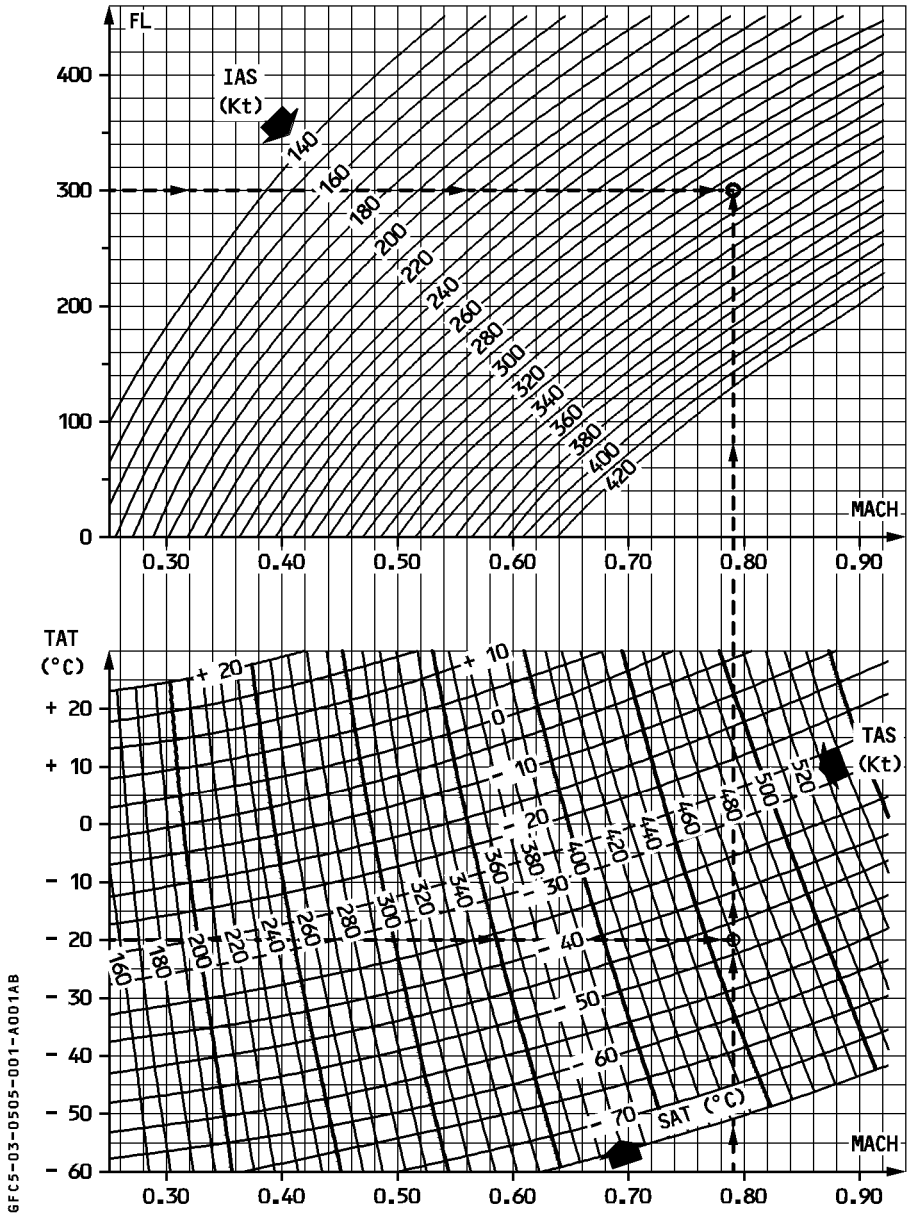

INTERNATIONAL STANDARD ATMOSPHERE (ISA)

R

ALTITUDE (Feet)	TEMP. (°C)	PRESSURE			PRESSURE RATIO $\delta = P / Po$	DENSITY $\sigma = \rho / \rho o$	SPEED of SOUND (a) kt	ALTITUDE (meters)
		hPa	P.S.I.	In Hg.				
41,000	–56.5	179	2.59	5.28	0.1764	0.2346	573	12.496
40,000	– 56.5	188	2.72	5.54	0.1851	0.2462	573	12.192
39,000	– 56.5	197	2.85	5.81	0.1942	0.2583	573	11.887
38,000	– 56.5	206	2.99	6.10	0.2038	0.2710	573	11.582
37,000	– 56.5	217	3.14	6.40	0.2138	0.2844	573	11.278
36,000	– 56.3	227	3.30	6.71	0.2243	0.2891	573	10.973
35,000	– 54.3	238	3.46	7.04	0.2353	0.3099	576	10.668
34,000	– 52.4	250	3.63	7.38	0.2467	0.3220	579	10.363
33,000	– 50.4	262	3.80	7.74	0.2586	0.3345	581	10.058
32,000	– 48.4	274	3.98	8.11	0.2709	0.3473	584	9.754
31,000	– 46.4	287	4.17	8.49	0.2837	0.3605	586	9.449
30,000	– 44.4	301	4.36	8.89	0.2970	0.3741	589	9.144
29,000	– 42.5	315	4.57	9.30	0.3107	0.3881	591	8.839
28,000	– 40.5	329	4.78	9.73	0.3250	0.4025	594	8.534
27,000	– 38.5	344	4.99	10.17	0.3398	0.4173	597	8.230
26,000	– 36.5	360	5.22	10.63	0.3552	0.4325	599	7.925
25,000	– 34.5	376	5.45	11.10	0.3711	0.4481	602	7.620
24,000	– 32.5	393	5.70	11.60	0.3876	0.4642	604	7.315
23,000	– 30.6	410	5.95	12.11	0.4046	0.4806	607	7.010
22,000	– 28.6	428	6.21	12.64	0.4223	0.4976	609	6.706
21,000	– 26.6	446	6.47	13.18	0.4406	0.5150	611	6.401
20,000	– 24.6	466	6.75	13.75	0.4595	0.5328	614	6.096
19,000	– 22.6	485	7.04	14.34	0.4791	0.5511	616	5.791
18,000	– 20.7	506	7.34	14.94	0.4994	0.5699	619	5.406
17,000	– 18.7	527	7.65	15.57	0.5203	0.5892	621	5.182
16,000	– 16.7	549	7.97	16.22	0.5420	0.6090	624	4.877
15,000	– 14.7	572	8.29	16.89	0.5643	0.6292	626	4.572
14,000	– 12.7	595	8.63	17.58	0.5875	0.6500	628	4.267
13,000	– 10.8	619	8.99	18.29	0.6113	0.6713	631	3.962
12,000	– 8.8	644	9.35	19.03	0.6360	0.6932	633	3.658
11,000	– 6.8	670	9.72	19.79	0.6614	0.7156	636	3.353
10,000	– 4.8	697	10.10	20.58	0.6877	0.7385	638	3.048
9,000	– 2.8	724	10.51	21.39	0.7148	0.7620	640	2.743
8,000	– 0.8	753	10.92	22.22	0.7428	0.7860	643	2.438
7,000	+ 1.1	782	11.34	23.09	0.7716	0.8106	645	2.134
6,000	+ 3.1	812	11.78	23.98	0.8014	0.8359	647	1.829
5,000	+ 5.1	843	12.23	24.90	0.8320	0.8617	650	1.524
4,000	+ 7.1	875	12.69	25.84	0.8637	0.8881	652	1.219
3,000	+ 9.1	908	13.17	26.82	0.8962	0.9151	654	914
2,000	+ 11.0	942	13.67	27.82	0.9298	0.9428	656	610
1,000	+ 13.0	977	14.17	28.86	0.9644	0.9711	659	305
0	+ 15.0	1013	14.70	29.92	1.0000	1.0000	661	0
– 1.000	+ 17.0	1050	15.23	31.02	1.0366	1.0295	664	– 305

CONVERSIONS – QNH – QFE – PRESSURE ALTITUDE

R

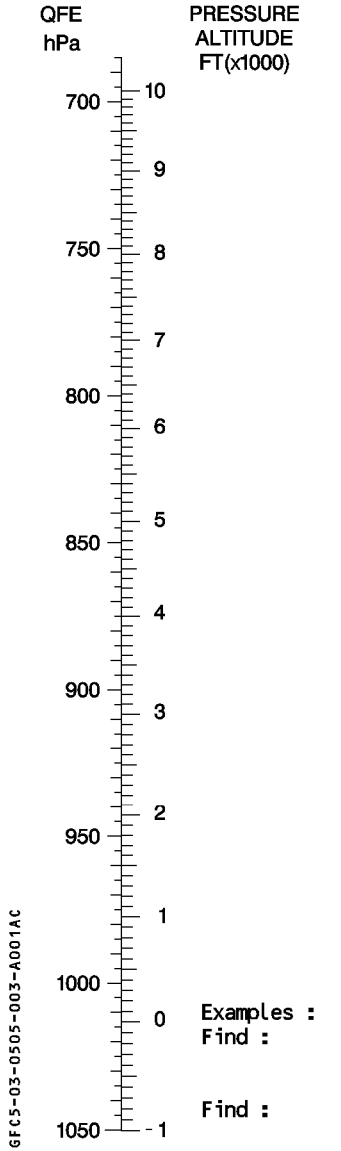

QNH (hPa)	CORRECTION (FT)	QNH (in Hg)
949 – 951	+ 1900	28.01 – 28.10
952 – 955	+ 1800	28.11 – 28.20
956 – 958	+ 1700	28.21 – 28.30
959 – 961	+ 1600	28.31 – 28.40
962 – 964	+ 1500	28.41 – 28.45
965 – 968	+ 1400	28.46 – 28.56
969 – 971	+ 1300	28.57 – 28.66
972 – 974	+ 1200	28.68 – 28.77
975 – 978	+ 1100	28.78 – 28.86
979 – 981	+ 1000	28.87 – 28.95
982 – 984	+ 900	28.96 – 29.05
985 – 988	+ 800	29.06 – 29.15
989 – 991	+ 700	29.16 – 29.25
992 – 994	+ 600	29.26 – 29.35
995 – 997	+ 500	29.36 – 29.45
998 – 1001	+ 400	29.46 – 29.54
1002 – 1004	+ 300	29.55 – 29.64
1005 – 1007	+ 200	29.65 – 29.74
1008 – 1011	+ 100	29.75 – 29.84
1012 – 1014	0	29.85 – 29.94
1015 – 1018	– 100	29.95 – 30.04
1019 – 1021	– 200	30.05 – 30.14
1022 – 1025	– 300	30.15 – 30.24
1026 – 1028	– 400	30.25 – 30.34
1029 – 1031	– 500	30.35 – 30.44
1032 – 1035	– 600	30.45 – 30.54
1036 – 1038	– 700	30.55 – 30.65
1039 – 1042	– 800	30.66 – 30.75
1043 – 1045	– 900	30.76 – 30.85
1046 – 1050	–1000	30.86 – 30.95

Examples :

1) Elevation: 2500 ft QNH = 1020 hPa
   Find : correction: – 200 ft
   Pressure altitude: 2300 ft QFE = 933 hPa
2) Elevation: 1500 ft QFE = 980 hPa
   Find : Pressure altitude: 920 ft
   Correction: – 580 ft QNH = 1032 hPa

CONVERSIONS QFE hPa – in. Hg – ft

QFE hPa	in. Hg	PRESS. ALT. ft	QFE hPa	in. Hg	PRESS. ALT. ft	QFE hPa	in. Hg	PRESS. ALT. ft
1050	31.01	– 989	960	28.35	1486	870	25.69	4157
1048	30.95	– 936	958	28.29	1543	868	25.63	4219
1046	30.89	– 883	956	28.23	1601	866	25.57	4281
1044	30.83	– 830	954	28.17	1658	864	25.51	4343
1042	30.77	– 776	952	28.11	1715	862	25.45	4405
1040	30.71	– 723	950	28.05	1773	860	25.40	4468
1038	30.65	– 669	948	27.99	1831	858	25.34	4531
1036	30.59	– 615	946	27.94	1889	856	25.28	4593
1034	30.53	– 562	944	27.88	1947	854	25.22	4656
1032	30.47	– 508	942	27.82	2005	852	25.16	4718
1030	30.42	– 454	940	27.76	2062	850	25.10	4781
1028	30.36	– 400	938	27.70	2120	848	25.04	4844
1026	30.30	– 346	936	27.64	2178	846	24.98	4907
1024	30.24	– 292	934	27.58	2236	844	24.92	4970
1022	30.18	– 238	932	27.52	2294	842	24.86	5033
1020	30.12	– 184	930	27.46	2353	840	24.81	5097
1018	30.06	– 129	928	27.40	2412	838	24.75	5161
1016	30.00	– 74	926	27.34	2471	836	24.69	5225
1014	29.94	– 20	924	27.29	2530	834	24.63	5289
1012	29.88	34	922	27.23	2589	832	24.57	5353
1010	29.83	89	920	27.17	2647	830	24.51	5417
1008	29.77	144	918	27.11	2707	828	24.45	5481
1006	29.71	199	916	27.05	2767	826	24.39	5545
1004	29.65	254	914	26.99	2826	824	24.33	5610
1002	29.59	309	912	26.93	2885	822	24.27	5675
1000	29.53	364	910	26.87	2944	820	24.21	5740
998	29.47	419	908	26.81	3004	818	24.16	5805
996	29.41	475	906	26.75	3064	816	24.10	5870
994	29.35	530	904	26.70	3124	814	24.04	5935
992	29.29	586	902	26.64	3183	812	23.98	6000
990	29.23	641	900	26.58	3243	810	23.92	6065
988	29.18	697	898	26.52	3303	808	23.86	6131
986	29.12	753	896	26.46	3363	806	23.80	6197
984	29.06	809	894	26.40	3424	804	23.74	6263
982	29.00	865	892	26.34	3484	802	23.68	6329
980	28.94	921	890	26.28	3545	800	23.62	6394
978	28.88	977	888	26.22	3606	798	23.56	6461
976	28.82	1033	886	26.16	3667	796	23.51	6528
974	28.76	1089	884	26.10	3728	794	23.45	6595
972	28.70	1145	882	26.05	3789	792	23.39	6661
970	28.64	1202	880	25.99	3850	790	23.33	6727
968	28.59	1259	878	25.93	3911	788	23.27	6794
966	28.53	1316	876	25.87	3973	786	23.21	6861
964	28.47	1373	874	25.81	4034	784	23.15	6928
962	28.41	1430	872	25.75	4096	782	23.09	6995

WIND COMPONENTS (FOR TAKEOFF AND LANDING)

MULTIPLY	BY	TO GET
kt	1.852	km/h
kt	0.5144	m/s
m/s	3.6	km/h
m/s	1.9438	kt
km/h	0.5396	kt
km/h	0.2778	m/s

GIVEN	FIND
WIND DIRECTION RELATIVE TO RUNWAY HEADING=30 DEG WIND SPEED=45 kt	CROSS WIND COMPONENT=22.5 kt HEAD WIND COMPONENT=39.0 kt

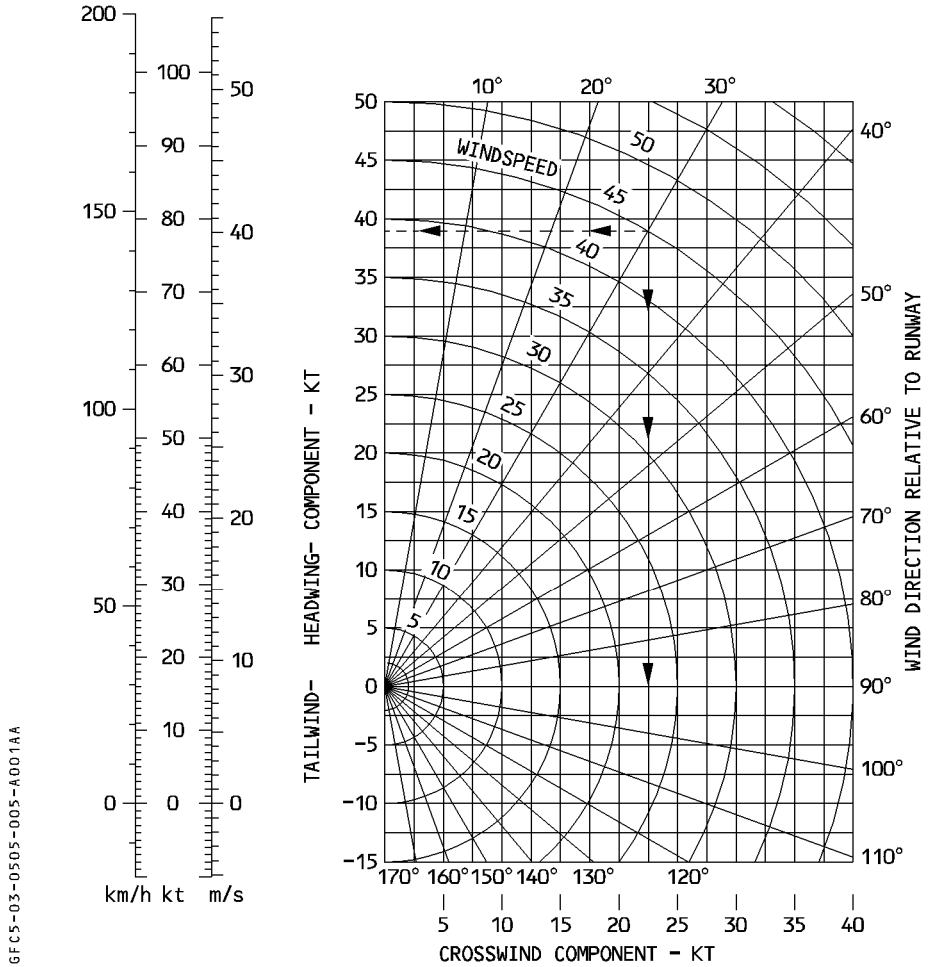

ALTITUDE TEMPERATURE CORRECTION

FOR HIGH ALTITUDE USE

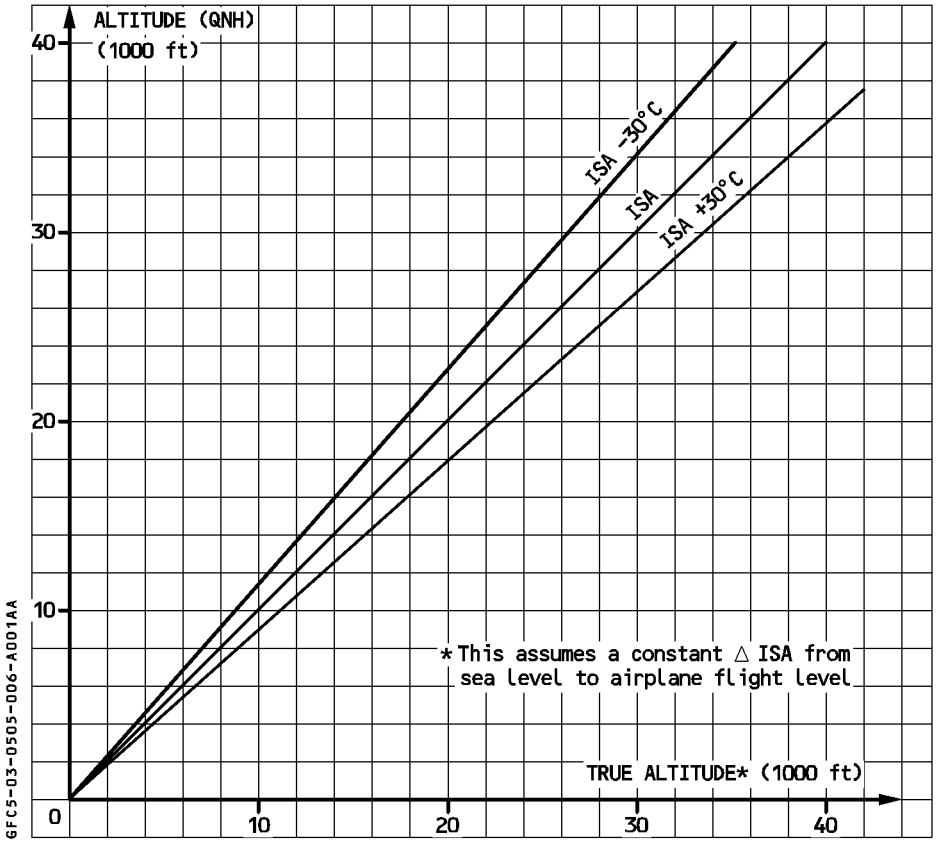

FOR LOW ALTITUDE USE

QNH ALTITUDE MINUS TERRAIN ELEVATION (ft) →		△ Z CORRECTION (ft)					
		500	1000	1500	2000	2500	3000
△ ISA	– 10 °C	– 17	– 34	– 51	– 68	– 85	– 102
	– 20 °C	– 35	– 70	– 105	– 140	– 175	– 210
	– 30 °C	– 52	– 104	– 156	– 208	– 260	– 312
	– 40 °C	– 70	– 140	– 210	– 280	– 350	– 420

TRUE ALTITUDE = QNH ALTITUDE + △ Z
Note : A constant △ ISA from ground to airplane level has been assumed.

THRUST RATINGS

The thrust rating charts have been established for :

R – **Maximum takeoff**

R It is the maximum thrust certified for takeoff and is normally limited to five minutes. This time is extended to ten minutes for engine out contingency as authorized by the approved AFM.

– **Maximum go-around**

It is the maximum permissible thrust during go-around.

R – **Flexible takeoff**

It is a reduced takeoff thrust as compared to the maximum permissible. The related N1 is calculated as a function of the flexible temperature entered in the FMGS MCDU. The flexible temperature is a function of the aircraft weight and environmental conditions. It guarantees that the regular performance requirements are met.

– **Maximum continuous**

It is the maximum thrust certified for continuous use.
This rating should be used, at the pilot's discretion, only when required to ensure safe flight (engine failure).

– **Maximum climb**

It is the maximum thrust approved for normal climb.

– **Maximum cruise**

It is the maximum thrust approved for normal cruise.
There is no thrust lever position corresponding to this thrust rating.
It is not displayed to the pilot, and the N1 limit which is displayed in cruise is the maximum climb N1.
The FMGS uses the maximum cruise N1 to compute the aircraft maximum speed.
In manual thrust setting, in cruise, the pilot should limit N1 to the maximum cruise N1 that is equal to the displayed maximum climb N1 minus 5 %.

R FLEXIBLE TAKEOFF N1

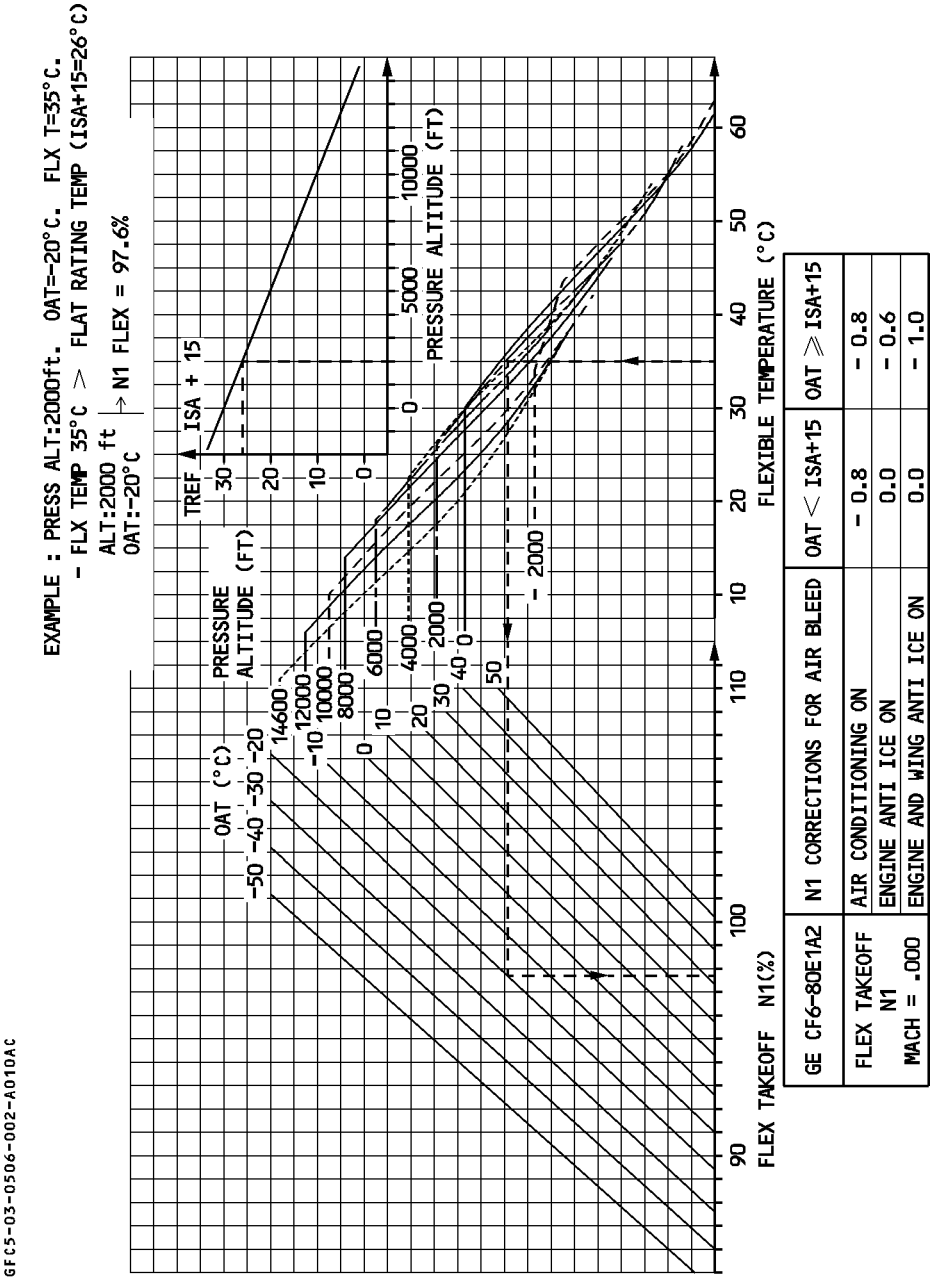

GE CF6-80E1A2	N1 CORRECTIONS FOR AIR BLEED	OAT < ISA+15	OAT ⩾ ISA+15
FLEX TAKEOFF N1 MACH = .000	AIR CONDITIONING ON	- 0.8	- 0.8
	ENGINE ANTI ICE ON	0.0	- 0.6
	ENGINE AND WING ANTI ICE ON	0.0	- 1.0

THRUST RATINGS

The thrust rating charts have been established for :

- **Maximum takeoff**
  It is the maximum thrust certified for takeoff and is normally limited to five minutes. This time is extended to ten minutes for engine out contingency as authorized by the approved AFM.

- **Derated takeoff**
  It is a reduced maximum thrust certified for takeoff (Refer to FCOM 2.02.27)

- **Maximum go-around**
  It is the maximum permissible thrust during go-around.

- **Flexible takeoff**
  It is a reduced takeoff thrust as compared to the maximum permissible. The related N1 is calculated as a function of the flexible temperature entered in the FMGS MCDU. The flexible temperature is a function of the aircraft weight and environmental conditions. It guarantees that the regular performance requirements are met.

- **Maximum continuous**
  It is the maximum thrust certified for continuous use.
  This rating should be used, at the pilot's discretion, only when required to ensure safe flight (engine failure).

- **Maximum climb**
R It is the maximum thrust approved for normal climb.

- **Maximum cruise**
R It is the maximum thrust approved for normal cruise.
  There is no thrust lever position corresponding to this thrust rating.
  It is not displayed to the pilot, and the N1 limit which is displayed in cruise is the maximum climb N1.
  The FMGS uses the maximum cruise N1 to compute the aircraft maximum speed.
  In manual thrust setting, in cruise, the pilot should limit the N1 to the maximum cruise N1 that is equal to the displayed maximum climb N1 minus 5%.

FLEXIBLE TAKEOFF

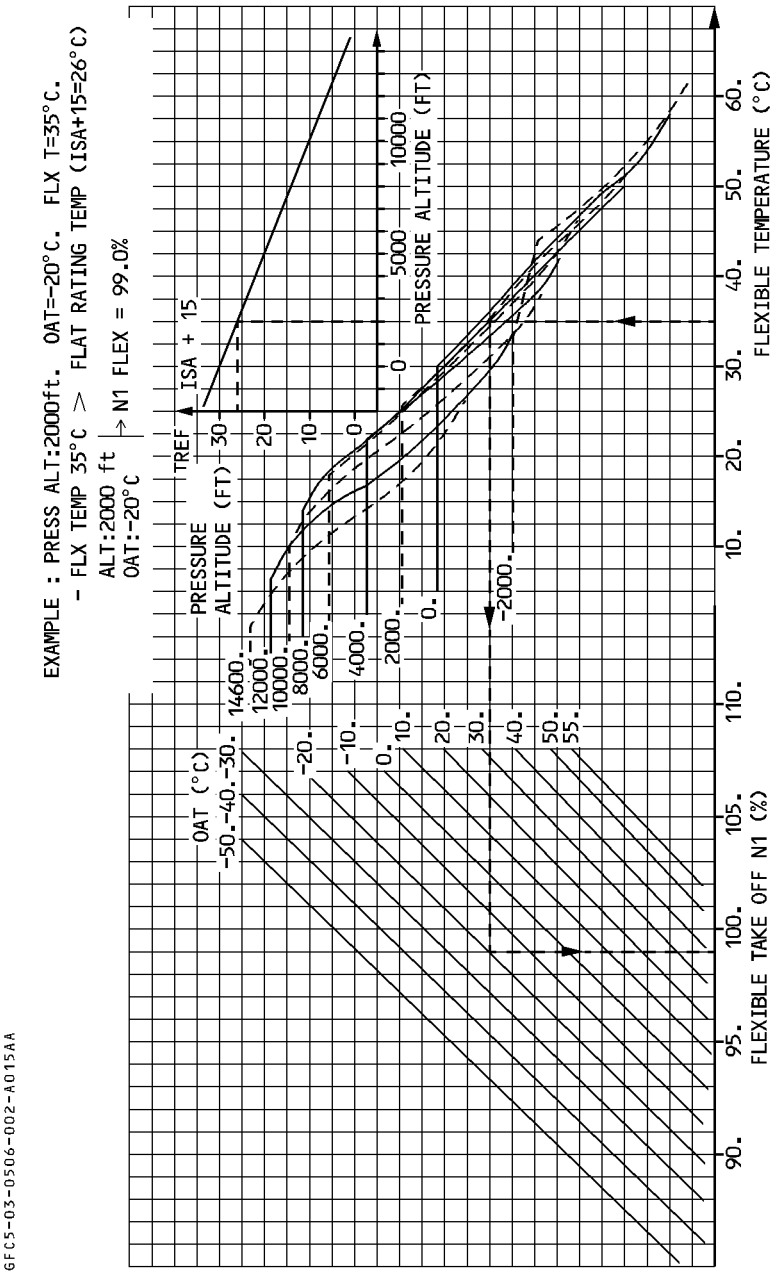

GE CF6-80E1A4	N1 CORRECTIONS FOR AIR BLEED	OAT < ISA+15	OAT ⩾ ISA+15
FLEX TAKEOFF N1 MACH = .000	AIR CONDITIONING ON	- 0.8	- 0.8
	ENGINE ANTI ICE ON	0.0	- 0.6
	ENGINE AND WING ANTI ICE ON	0.0	- 1.0

GFC5-03-0506-002-A015AA

R **TAKEOFF**

R

CF6-80E1A2 TAKEOFF N1 NO AIR BLEED MACH=.000	N1 CORRECTIONS FOR AIR BLEED	OAT < ISA + 15	OAT ≥ ISA + 15
	AIR CONDITIONING ON	-.8	-.8
	ENGINE ANTI-ICE ON	0.0	-.6
	ENGINE ANTI-ICE AND WING ANTI-ICE ON	0.0	-1.0

OAT	PRESSURE ALTITUDE (FT)									
(°C)	-2000.	-1000.	0.	1000.	2000.	3000.	4000.	5000.	6000.	7000.
-54.0	90.1	91.6	93.0	93.6	94.2	94.8	95.5	96.2	96.9	97.6
-50.0	90.9	92.4	93.8	94.4	95.0	95.6	96.3	96.9	97.7	98.3
-46.0	91.7	93.2	94.6	95.2	95.8	96.4	97.1	97.7	98.4	99.1
-42.0	92.5	93.9	95.4	96.0	96.5	97.2	97.8	98.5	99.2	99.9
-38.0	93.2	94.7	96.2	96.7	97.3	98.0	98.6	99.2	99.9	100.6
-34.0	94.0	95.5	96.9	97.5	98.1	98.7	99.3	100.0	100.7	101.4
-30.0	94.7	96.2	97.7	98.2	98.8	99.4	100.1	100.7	101.4	102.1
-26.0	95.4	97.0	98.4	99.0	99.5	100.2	100.8	101.4	102.1	102.8
-22.0	96.2	97.7	99.2	99.7	100.3	100.9	101.5	102.2	102.9	103.5
-18.0	96.9	98.4	99.9	100.5	101.0	101.6	102.2	102.9	103.6	104.2
-14.0	97.6	99.1	100.6	101.2	101.7	102.3	102.9	103.6	104.3	105.0
-10.0	98.3	99.9	101.3	101.9	102.4	103.0	103.6	104.3	105.0	105.7
-6.0	99.0	100.6	102.1	102.6	103.1	103.7	104.3	105.0	105.7	106.4
-2.0	99.7	101.3	102.8	103.3	103.8	104.5	105.1	105.7	106.4	107.1
2.0	100.4	102.0	103.5	104.0	104.6	105.2	105.8	106.4	107.1	107.8
6.0	101.1	102.7	104.2	104.7	105.3	105.9	106.5	107.1	107.8	108.5
10.0	101.8	103.4	104.9	105.4	106.0	106.6	107.2	107.8	108.6	109.2
14.0	102.5	104.1	105.6	106.1	106.7	107.3	107.9	108.5	109.3	109.9
18.0	103.2	104.7	106.2	106.8	107.3	108.0	108.6	109.2	109.9	*109.9*
22.0	103.8	105.4	106.9	107.5	108.0	108.6	109.2	*109.2*	*109.0*	*109.0*
26.0	104.5	106.1	107.6	108.2	108.7	*108.6*	*108.5*	*108.4*	*108.4*	*108.4*
30.0	105.2	106.7	*108.3*	*108.2*	*108.0*	*107.9*	*107.9*	*108.0*	*107.8*	*107.6*
34.0	*105.8*	*107.0*	*107.7*	*107.5*	*107.3*	*107.3*	*107.2*	*107.1*	*106.9*	*106.6*
38.0	*106.0*	*106.7*	*107.0*	*106.8*	*106.6*	*106.5*	*106.3*	*106.2*	*105.9*	*105.6*
42.0	*106.2*	*106.5*	*106.2*	*105.9*	*105.7*	*105.5*	*105.4*	*105.4*	*105.1*	
46.0	*105.6*	*105.3*	*105.2*	*104.9*	*104.6*	*104.6*	*104.7*			
50.0	*104.5*	*104.4*	*104.1*	*103.9*	*103.7*		OAT<ISA + 15			
54.0	*103.7*	*103.4*	*103.1*				OAT≥ISA + 15			

GO AROUND

R

CF6-80E1A2 GO AROUND N1 AIR CONDITIONING ON MACH=.225	N1 CORRECTIONS FOR AIR BLEED	OAT < ISA + 15	OAT ≥ ISA + 15
	AIR CONDITIONING OFF	.8	.8
	ENGINE ANTI-ICE ON	0.0	-.6
	ENGINE ANTI-ICE AND WING ANTI-ICE ON	0.0	-1.1

TAT	PRESSURE ALTITUDE (FT)									
(°C)	-2000.	-1000.	0.	1000.	2000.	3000.	4000.	5000.	6000.	7000.
-54.0	88.7	90.3	91.8	92.4	93.1	93.7	94.4	95.1	95.7	96.3
-50.0	89.4	91.0	92.6	93.2	93.9	94.5	95.1	95.9	96.4	97.1
-46.0	90.2	91.8	93.4	94.0	94.6	95.3	95.9	96.6	97.2	97.9
-42.0	91.0	92.6	94.2	94.8	95.4	96.1	96.7	97.4	98.0	98.6
-38.0	91.7	93.4	94.9	95.6	96.2	96.8	97.4	98.1	98.7	99.4
-34.0	92.5	94.1	95.7	96.3	96.9	97.6	98.2	98.9	99.5	100.1
-30.0	93.2	94.9	96.4	97.1	97.7	98.3	98.9	99.6	100.2	100.8
-26.0	94.0	95.6	97.2	97.8	98.4	99.0	99.6	100.3	100.9	101.6
-22.0	94.7	96.3	97.9	98.5	99.1	99.8	100.3	101.0	101.6	102.3
-18.0	95.4	97.0	98.7	99.3	99.9	100.5	101.1	101.8	102.3	103.0
-14.0	96.1	97.8	99.4	100.0	100.6	101.2	101.8	102.5	103.0	103.7
-10.0	96.8	98.5	100.1	100.7	101.3	101.9	102.5	103.2	103.7	104.4
-6.0	97.5	99.2	100.8	101.4	102.0	102.6	103.2	103.9	104.4	105.1
-2.0	98.2	99.9	101.5	102.1	102.7	103.3	103.9	104.6	105.2	105.8
2.0	98.9	100.6	102.2	102.8	103.4	104.0	104.6	105.3	105.9	106.5
6.0	99.6	101.3	102.9	103.5	104.1	104.7	105.3	106.0	106.6	107.2
10.0	100.3	102.0	103.6	104.2	104.8	105.4	106.0	106.7	107.3	107.9
14.0	101.0	102.6	104.3	104.9	105.5	106.1	106.7	107.4	108.0	108.6
18.0	101.6	103.3	105.0	105.6	106.2	106.8	107.4	108.1	108.7	109.3
22.0	102.3	104.0	105.6	106.3	106.8	107.5	108.0	108.8	*109.0*	*108.9*
26.0	102.9	104.7	106.3	106.9	107.5	108.1	*108.4*	*108.3*	*108.1*	*108.2*
30.0	103.6	105.3	107.0	107.6	*107.9*	*107.8*	*107.7*	*107.8*	*107.7*	*107.6*
34.0	104.2	106.0	*107.4*	*107.4*	*107.3*	*107.2*	*107.2*	*107.3*	*107.1*	*106.9*
38.0	*104.8*	*106.0*	*106.9*	*106.8*	*106.7*	*106.7*	*106.6*	*106.5*	*106.3*	*106.0*
42.0	*105.1*	*105.9*	*106.3*	*106.2*	*106.1*	*106.0*	*105.9*	*105.8*	*105.6*	*105.2*
46.0	*105.3*	*105.6*	*105.6*	*105.5*	*105.3*	*105.2*	*105.2*	*105.3*	*105.0*	
50.0	*104.6*	*104.7*	*104.8*	*104.6*	*104.4*	*104.5*	*104.6*			
54.0	*103.6*	*103.8*	*103.9*	*103.7*	*103.6*					
58.0	*102.8*	*102.9*	*102.9*							
62.0	*101.9*									

OAT<ISA+15

OAT≥ISA+15

TAKEOFF

CF6-80E1A4 TAKE OFF N1 NO AIR BLEED MACH=.000	N1 CORRECTIONS FOR AIR BLEED	OAT < ISA + 15	OAT ≥ ISA + 15
	AIR CONDITIONING ON	–.8	–.8
	ENGINE ANTI-ICE ON	0.0	–.6
	ENGINE ANTI-ICE AND WING ANTI-ICE ON	0.0	-1.0

OAT	PRESSURE ALTITUDE (FT)									
(°C)	-2000.	-1000.	0.	1000.	2000.	3000.	4000.	5000.	6000.	7000.
-54.0	91.4	93.0	94.6	95.4	96.1	96.9	97.7	98.6	99.4	100.0
-50.0	92.2	93.8	95.4	96.2	96.9	97.7	98.5	99.3	100.2	100.8
-46.0	93.0	94.6	96.2	97.0	97.7	98.5	99.3	100.1	101.0	101.5
-42.0	93.8	95.4	97.0	97.8	98.5	99.3	100.1	100.9	101.7	102.3
-38.0	94.5	96.2	97.8	98.5	99.3	100.0	100.8	101.6	102.5	103.1
-34.0	95.3	96.9	98.5	99.3	100.0	100.8	101.5	102.4	103.2	103.8
-30.0	96.0	97.7	99.3	100.0	100.8	101.5	102.3	103.1	103.9	104.5
-26.0	96.8	98.4	100.1	100.8	101.5	102.3	103.0	103.9	104.7	105.2
-22.0	97.5	99.2	100.8	101.5	102.2	103.0	103.7	104.6	105.4	106.0
-18.0	98.2	99.9	101.5	102.3	103.0	103.7	104.5	105.3	106.1	106.7
-14.0	99.0	100.6	102.3	103.0	103.7	104.5	105.2	106.0	106.8	107.4
-10.0	99.7	101.3	103.0	103.7	104.4	105.2	105.9	106.7	107.5	108.1
-6.0	100.4	102.1	103.7	104.4	105.1	105.9	106.6	107.4	108.2	108.8
-2.0	101.1	102.8	104.4	105.1	105.8	106.6	107.3	108.2	109.0	109.5
2.0	101.8	103.5	105.1	105.9	106.6	107.3	108.0	108.9	109.7	110.2
6.0	102.5	104.2	105.8	106.6	107.3	108.0	108.7	109.6	110.4	111.0
10.0	103.2	104.9	106.5	107.3	108.0	108.7	109.4	110.3	111.1	111.7
14.0	103.9	105.6	107.2	108.0	108.7	109.4	110.2	111.0	111.8	112.4
18.0	104.5	106.3	107.9	108.6	109.3	110.1	110.8	111.7	112.5	*112.3*
22.0	105.2	106.9	108.6	109.3	110.0	110.8	111.5	*111.4*	*111.3*	*111.3*
26.0	105.9	107.6	109.3	110.0	110.7	*110.6*	*110.4*	*110.3*	*110.3*	*110.3*
30.0	106.5	108.3	*110.0*	*109.9*	*109.6*	*109.5*	*109.5*	*109.6*	*109.4*	*109.2*
34.0	*107.2*	*108.4*	*109.1*	*109.0*	*108.7*	*108.8*	*108.7*	*108.5*	*108.3*	*108.0*
38.0	*107.4*	*108.1*	*108.4*	*108.2*	*107.9*	*107.9*	*107.7*	*107.6*	*107.3*	*107.0*
42.0	*107.6*	*107.8*	*107.5*	*107.3*	*107.1*	*106.9*	*106.7*	*106.8*	*106.5*	
46.0	*107.0*	*106.7*	*106.5*	*106.2*	*106.0*					
50.0	*105.8*	*105.6*	*105.4*	*105.2*	*104.9*					
54.0	*104.9*	*104.6*	*104.3*							

OAT < ISA + 15

OAT ≥ ISA + 15

GO AROUND

CF6-80E1A4 GO AROUND N1 AIR CONDITIONING ON MACH=.225	N1 CORRECTIONS FOR AIR BLEED	OAT < ISA + 15	OAT ≥ ISA + 15
	AIR CONDITIONING OFF	.8	.8
	ENGINE ANTI-ICE ON	0.0	–.6
	ENGINE ANTI-ICE AND WING ANTI-ICE ON	0.0	-1.1

TAT (°C)	PRESSURE ALTITUDE (FT)									
	-2000.	-1000.	0.	1000.	2000.	3000.	4000.	5000.	6000.	7000.
-54.0	91.2	92.9	94.6	95.5	96.4	97.2	97.9	98.2	98.7	99.0
-50.0	91.9	93.7	95.4	96.3	97.2	98.0	98.7	99.0	99.4	99.8
-46.0	92.7	94.5	96.2	97.1	98.0	98.8	99.5	99.8	100.2	100.5
-42.0	93.5	95.3	97.0	97.9	98.8	99.5	100.3	100.6	101.0	101.3
-38.0	94.3	96.0	97.7	98.6	99.5	100.3	101.0	101.3	101.7	102.0
-34.0	95.0	96.8	98.5	99.4	100.3	101.0	101.8	102.1	102.5	102.8
-30.0	95.8	97.5	99.3	100.2	101.0	101.8	102.5	102.8	103.2	103.5
-26.0	96.5	98.3	100.0	100.9	101.8	102.5	103.3	103.5	103.9	104.2
-22.0	97.3	99.0	100.8	101.7	102.5	103.3	104.0	104.2	104.7	105.0
-18.0	98.0	99.8	101.5	102.4	103.3	104.0	104.7	105.0	105.4	105.7
-14.0	98.7	100.5	102.2	103.1	104.0	104.7	105.4	105.7	106.1	106.4
-10.0	99.4	101.2	103.0	103.8	104.7	105.4	106.1	106.4	106.8	107.1
-6.0	100.1	101.9	103.7	104.6	105.4	106.1	106.8	107.1	107.5	107.8
-2.0	100.8	102.6	104.4	105.3	106.1	106.8	107.5	107.8	108.2	108.5
2.0	101.5	103.3	105.1	106.0	106.8	107.6	108.3	108.5	108.9	109.2
6.0	102.2	104.0	105.8	106.7	107.5	108.3	109.0	109.2	109.6	109.9
10.0	102.9	104.7	106.5	107.4	108.2	109.0	109.7	109.9	110.3	110.6
14.0	103.6	105.4	107.2	108.1	108.9	109.7	110.4	110.6	111.0	111.3
18.0	104.3	106.1	107.9	108.8	109.6	110.4	111.1	111.3	111.7	112.0
22.0	105.0	106.8	108.6	109.4	110.3	111.0	111.7	112.0	*112.1*	*111.7*
26.0	105.6	107.5	109.2	110.1	111.0	111.7	*112.0*	*111.8*	*111.5*	*110.9*
30.0	106.3	108.1	109.9	110.8	*111.3*	*111.1*	*111.1*	*111.0*	*110.4*	*109.8*
34.0	107.0	108.8	*110.2*	*110.3*	*110.1*	*110.1*	*109.9*	*109.9*	*109.2*	*108.6*
38.0	*107.5*	*108.7*	*109.4*	*109.3*	*109.1*	*109.1*	*109.0*	*108.6*	*108.3*	*107.8*
42.0	*107.5*	*108.3*	*108.7*	*108.5*	*108.5*	*108.4*	*108.2*	*108.1*	*107.7*	*107.1*
46.0	*107.6*	*107.9*	*107.9*	*107.8*	*107.7*	*107.6*	*107.6*	*107.5*	*106.9*	
50.0	*106.9*	*106.9*	*107.0*	*106.9*	*106.7*	*106.7*	*106.8*			
54.0	*105.9*	*106.0*	*106.1*	*105.9*	*105.6*					
58.0	*105.0*	*105.0*	*104.9*			OAT < ISA + 15				
62.0	*103.9*					OAT ≥ ISA + 15				

MAXIMUM CONTINUOUS

R

CF6-80E1A2 MAXIMUM CONTINUOUS N1 AIR CONDITIONING ON* IAS=230 KT	N1 CORRECTIONS FOR AIR BLEED	OAT < ISA + 10	OAT ≥ ISA + 10
	AIR CONDITIONING OFF	1.1	1.1
	ENGINE ANTI-ICE ON	0.	-.7
	ENGINE ANTI-ICE AND WING ANTI-ICE ON	0.	-1.7

TAT (°C)	PRESSURE ALTITUDE (FT)										
	-2000.	3000.	7000.	11000.	15000.	19000.	23000.	27000.	31000.	35000.	39000.
-54.0	84.5	89.0	91.4	94.2	97.1	97.6	98.1	98.0	98.2	98.1	98.0
-50.0	85.3	89.8	92.1	94.9	97.9	98.4	98.9	98.8	99.0	98.9	98.8
-46.0	86.1	90.5	92.9	95.7	98.6	99.1	99.6	99.6	99.8	99.7	99.6
-42.0	86.8	91.3	93.7	96.4	99.4	99.9	100.4	100.4	100.6	100.5	100.4
-38.0	87.5	92.0	94.4	97.2	100.1	100.6	101.1	101.2	101.4	101.3	101.2
-34.0	88.3	92.7	95.1	97.9	100.9	101.3	101.8	101.9	102.2	102.1	102.0
-30.0	89.0	93.5	95.8	98.6	101.6	102.0	102.6	102.7	102.9	102.8	102.7
-26.0	89.7	94.2	96.5	99.3	102.3	102.8	103.3	103.5	103.7	103.6	103.5
-22.0	90.4	94.9	97.2	100.0	103.1	103.4	104.0	104.2	104.4	*104.2*	104.3
-18.0	91.1	95.6	97.9	100.7	103.8	104.1	104.7	105.0	105.2	*104.5*	*103.9*
-14.0	91.8	96.3	98.6	101.4	104.4	104.8	105.4	105.7	*105.7*	*104.0*	*103.3*
-10.0	92.5	97.0	99.3	102.1	105.1	105.5	106.0	*105.9*	*105.5*	*103.2*	*102.4*
-6.0	93.2	97.7	100.0	102.8	105.7	106.2	*106.7*	*105.6*	*104.7*	*102.3*	*101.2*
-2.0	93.8	98.3	100.7	103.5	106.4	106.9	*106.1*	*104.8*	*103.8*	*101.3*	*100.3*
2.0	94.5	99.0	101.4	104.1	107.1	*106.8*	*105.3*	*103.9*	*102.9*	*100.7*	*99.5*
6.0	95.2	99.7	102.0	104.8	107.7	*105.8*	*104.4*	*103.2*	*102.2*	*100.0*	*98.9*
10.0	95.8	100.4	102.7	105.5	*107.0*	*104.8*	*103.5*	*102.5*	*101.6*	*99.4*	*98.2*
14.0	96.5	101.1	103.4	*105.9*	*106.1*	*104.1*	*103.0*	*102.0*	*101.2*		
18.0	97.1	101.7	104.1	*105.1*	*105.3*	*103.5*	*102.5*	*101.6*			
22.0	97.8	102.4	*104.2*	*104.6*	*104.7*	*103.1*	*102.0*				
26.0	98.4	103.0	*103.8*	*104.1*	*104.2*	*102.7*					
30.0	99.1	*102.9*	*103.4*	*103.7*	*103.8*	*102.3*					
34.0	99.7	*102.6*	*103.0*	*103.3*	*103.5*						
38.0	*99.7*	*102.2*	*102.6*	*103.0*							
42.0	*99.3*	*101.7*	*102.3*	*102.7*							
46.0	*98.8*	*101.2*	*102.0*								
50.0	*98.3*	*100.8*	*101.6*								
54.0	*97.7*	*100.4*									

OAT<ISA+10

OAT≥ISA + 10

* One engine inoperative – 1 pack operative on remaining engine

MAXIMUM CLIMB

CF6-80E1A2/A4 MAXIMUM CLIMB N1 AIR CONDITIONING ON 250/300/.80	N1 CORRECTIONS FOR AIR BLEED	OAT < ISA + 10	OAT ≥ ISA + 10
	AIR CONDITIONING OFF	1.0	1.0
	ENGINE ANTI-ICE ON	0.0	-.5
	ENGINE ANTI-ICE AND WING ANTI-ICE ON	0.0	-1.0

TAT (°C)	PRESSURE ALTITUDE (FT)										
	-2000.	3000.	7000.	11000.	15000.	19000.	23000.	27000.	31000.	35000.	39000.
-54.0	81.8	86.4	88.6	89.9	91.4	93.3	94.6	95.6	96.5	97.4	97.4
-50.0	82.6	87.2	89.4	90.6	92.2	94.1	95.4	96.4	97.3	98.3	98.2
-46.0	83.3	88.0	90.2	91.4	93.0	94.9	96.2	97.2	98.1	99.1	99.0
-42.0	84.0	88.7	90.9	92.2	93.7	95.7	97.0	98.0	98.9	99.9	99.8
-38.0	84.7	89.4	91.7	93.0	94.5	96.5	97.8	98.8	99.7	100.6	100.6
-34.0	85.4	90.2	92.4	93.7	95.2	97.3	98.5	99.5	100.5	101.4	101.3
-30.0	86.1	90.9	93.2	94.5	96.0	98.0	99.3	100.3	101.3	102.2	102.1
-26.0	86.8	91.6	93.9	95.2	96.7	98.8	100.1	101.0	102.0	102.9	102.9
-22.0	87.5	92.3	94.6	95.9	97.5	99.5	100.8	101.8	102.8	103.7	103.6
-18.0	88.2	93.1	95.3	96.6	98.2	100.2	101.5	102.5	103.5	104.4	104.4
-14.0	88.9	93.8	96.1	97.4	98.9	101.0	102.3	103.3	104.2	*104.8*	*103.6*
-10.0	89.6	94.5	96.8	98.1	99.6	101.7	103.0	104.0	105.0	*104.1*	*102.6*
-6.0	90.2	95.1	97.5	98.8	100.4	102.4	103.7	104.7	105.6	*103.0*	*101.8*
-2.0	90.9	95.8	98.2	99.5	101.1	103.1	104.4	105.4	*104.7*	*102.1*	*100.9*
2.0	91.5	96.5	98.8	100.2	101.8	103.8	105.1	*104.8*	*103.8*	*101.3*	*100.1*
6.0	92.2	97.2	99.5	100.9	102.5	104.5	*104.9*	*104.0*	*102.9*	*100.7*	*99.4*
10.0	92.8	97.9	100.2	101.5	103.1	*104.8*	*104.2*	*103.3*	*102.3*	*100.2*	*98.8*
14.0	93.5	98.5	100.9	102.2	103.8	*104.1*	*103.5*	*102.8*	*101.9*	*99.6*	*98.2*
18.0	94.1	99.2	101.6	102.9	*103.5*	*103.7*	*103.1*	*102.4*	*101.5*	*99.1*	
22.0	94.7	99.8	*102.1*	*103.0*	*103.1*	*103.3*	*102.7*	*102.0*	*101.0*		
26.0	95.4	100.5	*101.7*	*102.6*	*102.8*	*102.9*	*102.4*	*101.5*	*100.6*		
30.0	96.0	*100.7*	*101.4*	*102.4*	*102.4*	*102.6*	*102.0*	*101.1*			
34.0	96.6	*100.3*	*101.0*	*102.0*	*102.1*	*102.2*	*101.6*				
38.0	*97.0*	*99.8*	*100.6*	*101.5*	*101.7*	*101.8*					
42.0	*96.4*	*99.4*	*100.1*	*101.1*	*101.3*						
46.0	*95.9*	*98.9*	*99.6*	*100.7*	*100.9*						
50.0	*95.4*	*98.4*	*99.2*	*100.3*							
54.0	*94.8*	*97.9*									

OAT>ISA+10

OAT ≥ ISA + 10

MAXIMUM CONTINUOUS

R

CF6-80E1A4 MAXIMUM CONTINUOUS N1 AIR CONDITIONING ON* IAS=230 KT	N1 CORRECTIONS FOR AIR BLEED	OAT < ISA + 10	OAT ≥ ISA + 10
	AIR CONDITIONING OFF	1.1	1.1
	ENGINE ANTI-ICE ON	0.0	–.7
	ENGINE ANTI-ICE AND WING ANTI-ICE ON	0.0	-1.7

TAT	PRESSURE ALTITUDE (FT)										
(°C)	-2000.	3000.	7000.	11000.	15000.	19000.	23000.	27000.	31000.	35000.	39000.
-54.0	84.5	89.0	91.4	94.5	99.9	101.5	102.3	98.0	98.2	98.1	98.0
-50.0	85.3	89.8	92.1	95.3	100.7	102.2	103.1	98.8	99.0	98.9	98.8
-46.0	86.1	90.5	92.9	96.1	101.4	103.0	103.9	99.6	99.8	99.7	99.6
-42.0	86.8	91.3	93.7	96.8	102.2	103.8	104.6	100.4	100.6	100.5	100.4
-38.0	87.5	92.0	94.4	97.6	103.0	104.5	105.3	101.2	101.4	101.3	101.2
-34.0	88.3	92.7	95.1	98.3	103.7	105.2	106.0	101.9	102.2	102.1	102.0
-30.0	89.0	93.5	95.8	99.0	104.4	105.9	106.8	102.7	102.9	102.8	102.7
-26.0	89.7	94.2	96.5	99.7	105.2	106.6	107.5	103.5	103.7	103.6	103.5
-22.0	90.4	94.9	97.2	100.4	105.9	107.3	108.2	104.2	104.4	*104.2*	104.3
-18.0	91.1	95.6	97.9	101.1	106.6	108.0	108.9	105.0	105.2	*104.5*	*103.9*
-14.0	91.8	96.3	98.6	101.8	107.2	108.7	109.6	105.7	*105.7*	*104.0*	*103.3*
-10.0	92.5	97.0	99.3	102.5	107.9	109.4	110.2	*105.9*	*105.5*	*103.2*	*102.4*
-6.0	93.2	97.7	100.0	103.2	108.6	110.1	*110.9*	*105.6*	*104.7*	*102.3*	*101.2*
-2.0	93.8	98.3	100.7	103.9	109.2	110.8	*109.9*	*104.8*	*103.8*	*101.3*	*100.3*
2.0	94.5	99.0	101.4	104.5	109.9	*110.5*	*108.4*	*103.9*	*102.9*	*100.7*	*99.5*
6.0	95.2	99.7	102.0	105.2	110.6	*109.0*	*106.8*	*103.2*	*102.2*	*100.0*	*98.9*
10.0	95.8	100.4	102.7	105.9	*109.6*	*107.3*	*105.3*	*102.5*	*101.6*	*99.4*	*98.2*
14.0	96.5	101.1	103.4	*106.3*	*108.3*	*106.0*	*104.4*	*102.0*	*101.2*		
18.0	97.1	101.7	104.1	*105.5*	*107.0*	*105.0*	*103.7*	*101.6*			
22.0	97.8	102.4	*104.2*	*104.8*	*105.9*	*104.3*	*103.2*				
26.0	98.4	103.0	*103.8*	*104.3*	*105.3*	*103.8*					
30.0	99.1	*102.9*	*103.4*	*103.9*	*104.8*	*103.4*					
34.0	99.7	*102.6*	*103.0*	*103.4*	*104.3*						
38.0	*99.7*	*102.2*	*102.6*	*103.1*							
42.0	*99.3*	*101.7*	*102.3*	*102.8*							
46.0	*98.8*	*101.2*	*102.0*								
50.0	*98.3*	*100.8*	*101.6*								
54.0	*97.7*	*100.4*									

OAT< ISA+10

OAT ≥ ISA + 10

* One engine inoperative – 1 pack operative on remaining engine

MAXIMUM CLIMB

CF6-80E1A2/A4	N1 CORRECTIONS FOR AIR BLEED	OAT < ISA + 10	OAT ≥ ISA + 10
MAXIMUM CLIMB N1	AIR CONDITIONING OFF	1.0	1.0
AIR CONDITIONING ON	ENGINE ANTI-ICE ON	0.0	-.5
250/300/.80	ENGINE ANTI-ICE AND WING ANTI-ICE ON	0.0	-1.0

TAT	PRESSURE ALTITUDE (FT)										
(°C)	-2000.	3000.	7000.	11000.	15000.	19000.	23000.	27000.	31000.	35000.	39000.
-54.0	81.8	86.4	88.6	89.9	91.4	93.3	94.6	95.6	96.5	97.4	97.4
-50.0	82.6	87.2	89.4	90.6	92.2	94.1	95.4	96.4	97.3	98.3	98.2
-46.0	83.3	88.0	90.2	91.4	93.0	94.9	96.2	97.2	98.1	99.1	99.0
-42.0	84.0	88.7	90.9	92.2	93.7	95.7	97.0	98.0	98.9	99.9	99.8
-38.0	84.7	89.4	91.7	93.0	94.5	96.5	97.8	98.8	99.7	100.6	100.6
-34.0	85.4	90.2	92.4	93.7	95.2	97.3	98.5	99.5	100.5	101.4	101.3
-30.0	86.1	90.9	93.2	94.5	96.0	98.0	99.3	100.3	101.3	102.2	102.1
-26.0	86.8	91.6	93.9	95.2	96.7	98.8	100.1	101.0	102.0	102.9	102.9
-22.0	87.5	92.3	94.6	95.9	97.5	99.5	100.8	101.8	102.8	103.7	103.6
-18.0	88.2	93.1	95.3	96.6	98.2	100.2	101.5	102.5	103.5	104.4	104.4
-14.0	88.9	93.8	96.1	97.4	98.9	101.0	102.3	103.3	104.2	*104.8*	*103.6*
-10.0	89.6	94.5	96.8	98.1	99.6	101.7	103.0	104.0	105.0	*104.1*	*102.6*
-6.0	90.2	95.1	97.5	98.8	100.4	102.4	103.7	104.7	105.6	*103.0*	*101.8*
-2.0	90.9	95.8	98.2	99.5	101.1	103.1	104.4	105.4	*104.7*	*102.1*	*100.9*
2.0	91.5	96.5	98.8	100.2	101.8	103.8	105.1	*104.8*	*103.8*	*101.3*	*100.1*
6.0	92.2	97.2	99.5	100.9	102.5	104.5	*104.9*	*104.0*	*102.9*	*100.7*	*99.4*
10.0	92.8	97.9	100.2	101.5	103.1	*104.8*	*104.2*	*103.3*	*102.3*	*100.2*	*98.8*
14.0	93.5	98.5	100.9	102.2	103.8	*104.1*	*103.5*	*102.8*	*101.9*	*99.6*	*98.2*
18.0	94.1	99.2	101.6	102.9	*103.5*	*103.7*	*103.1*	*102.4*	*101.5*	*99.1*	
22.0	94.7	99.8	*102.1*	*103.0*	*103.1*	*103.3*	*102.7*	*102.0*	*101.0*		
26.0	95.4	100.5	*101.7*	*102.6*	*102.8*	*102.9*	*102.4*	*101.5*	*100.6*		
30.0	96.0	*100.7*	*101.4*	*102.4*	*102.4*	*102.6*	*102.0*	*101.1*			
34.0	96.6	*100.3*	*101.0*	*102.0*	*102.1*	*102.2*	*101.6*				
38.0	*97.0*	*99.8*	*100.6*	*101.5*	*101.7*	*101.8*					
42.0	*96.4*	*99.4*	*100.1*	*101.1*	*101.3*						
46.0	*95.9*	*98.9*	*99.6*	*100.7*	*100.9*						
50.0	*95.4*	*98.4*	*99.2*	*100.3*							
54.0	*94.8*	*97.9*									

OAT>ISA+10

OAT ≥ ISA + 10

MAXIMUM CRUISE

CF6-80E1A2/A4	N1 CORRECTIONS FOR AIR BLEED	OAT < ISA + 10	OAT ≥ ISA + 10
MAXIMUM CRUISE N1	AIR CONDITIONING OFF	1.0	1.0
AIR CONDITIONING ON	ENGINE ANTI-ICE ON	0.0	-.5
250/300/.82	ENGINE ANTI-ICE AND WING ANTI-ICE ON	0.0	-1.0

TAT	PRESSURE ALTITUDE (FT)										
(°C)	-2000.	3000.	7000.	11000.	15000.	19000.	23000.	27000.	31000.	35000.	39000.
-54.0	75.8	80.4	82.6	83.9	85.4	87.3	88.9	90.2	91.2	91.8	91.8
-50.0	76.6	81.2	83.4	84.6	86.2	88.1	89.7	91.0	92.0	92.7	92.6
-46.0	77.3	82.0	84.2	85.4	87.0	88.9	90.5	91.8	92.8	93.5	93.4
-42.0	78.0	82.7	84.9	86.2	87.7	89.7	91.3	92.6	93.6	94.3	94.2
-38.0	78.7	83.4	85.7	87.0	88.5	90.5	92.0	93.3	94.3	95.0	95.0
-34.0	79.4	84.2	86.4	87.7	89.2	91.3	92.8	94.1	95.1	95.8	95.7
-30.0	80.1	84.9	87.2	88.5	90.0	92.0	93.6	94.9	95.9	96.6	96.5
-26.0	80.8	85.6	87.9	89.2	90.7	92.8	94.3	95.6	96.6	97.3	97.3
-22.0	81.5	86.3	88.6	89.9	91.5	93.5	95.1	96.4	97.4	98.1	98.0
-18.0	82.2	87.1	89.3	90.6	92.2	94.2	95.8	97.1	98.1	98.8	98.7
-14.0	82.9	87.8	90.1	91.4	92.9	95.0	96.5	97.9	98.9	99.6	*98.5*
-10.0	83.6	88.5	90.8	92.1	93.6	95.7	97.3	98.6	99.6	*98.9*	*97.4*
-6.0	84.2	89.1	91.5	92.8	94.4	96.4	98.0	99.3	100.3	*98.0*	*96.6*
-2.0	84.9	89.8	92.2	93.5	95.1	97.1	98.7	100.0	*99.5*	*96.8*	*95.7*
2.0	85.5	90.5	92.8	94.2	95.8	97.8	99.4	*99.4*	*98.6*	*96.1*	*95.0*
6.0	86.2	91.2	93.5	94.9	96.5	98.5	*99.2*	*98.6*	*97.7*	*95.5*	*94.3*
10.0	86.8	91.9	94.2	95.5	97.1	*98.8*	*98.4*	*97.9*	*97.2*	*95.0*	*93.7*
14.0	87.5	92.5	94.9	96.2	97.8	*98.1*	*97.8*	*97.4*	*96.7*	*94.5*	*93.1*
18.0	88.1	93.2	95.6	96.9	*97.5*	*97.7*	*97.4*	*96.9*	*96.3*	*94.0*	*92.6*
22.0	88.7	93.8	*96.1*	*97.0*	*97.1*	*97.3*	*97.0*	*96.6*	*95.8*		
26.0	89.4	94.5	*95.7*	*96.6*	*96.8*	*96.9*	*96.6*	*96.1*	*95.4*		
30.0	90.0	*94.7*	*95.4*	*96.4*	*96.4*	*96.6*	*96.3*	*95.7*			
34.0	90.6	*94.3*	*95.0*	*96.0*	*96.1*	*96.2*	*95.8*				
38.0	*91.0*	*93.8*	*94.6*	*95.5*	*95.7*	*95.8*					
42.0	*90.4*	*93.4*	*94.1*	*95.1*	*95.3*						
46.0	*89.9*	*92.9*	*93.6*	*94.7*	*94.9*						
50.0	*89.4*	*92.4*	*93.2*	*94.3*							
54.0	*88.8*	*91.9*									

OAT<ISA + 10

OAT≥ISA + 10

LEFT INTENTIONALLY BLANK

GENERAL

R Climb tables are established at MAX CLIMB THRUST (and DERATED CLIMB 1 and 2 ◁)
R with air conditioning in normal mode, and anti ice OFF.
The climb speed profile is :
- 250 kt from 1500 feet up to FL100
- acceleration from 250 kt to 300 kt
- climb at 300 kt then M.80 up to selected altitude

All charts are established with a center of gravity of 30 %.

CLIMB - 250KT/300KT/M.80

MAX. CLIMB THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) FUEL (KG)
DISTANCE (NM) TAS (KT)

FL	WEIGHT AT BRAKE RELEASE (1000KG)													
	120		140		160		180		200		220		240	
410	14	2669	18	3232	22	3903								
	93	388	115	391	143	395								
390	13	2527	16	3040	19	3627	23	4334						
	82	380	100	383	122	386	150	390						
370	12	2397	14	2870	17	3399	20	4011	24	4753				
	73	373	88	375	106	377	128	380	155	385				
350	11	2279	13	2720	15	3208	18	3759	21	4402	25	5185	31	6248
	65	365	79	367	94	369	112	371	133	375	161	379	202	386
330	10	2170	12	2585	14	3039	16	3547	19	4126	23	4807	27	5638
	59	357	71	359	84	361	100	363	117	365	139	368	166	373
310	9	2065	11	2454	13	2880	15	3351	18	3883	20	4495	24	5218
	54	348	64	350	76	352	89	353	104	356	122	358	144	361
290	8	1930	10	2290	12	2680	14	3110	16	3590	18	4135	21	4763
	47	337	56	338	66	340	77	341	90	343	105	345	122	347
270	8	1797	9	2128	11	2487	12	2878	14	3313	16	3800	19	4353
	41	325	49	326	58	327	67	329	78	330	90	332	104	334
250	7	1670	8	1975	10	2305	11	2663	13	3058	15	3498	17	3992
	36	313	43	314	50	315	58	316	67	318	77	319	89	321
240	7	1609	8	1902	9	2218	10	2561	12	2938	14	3356	16	3825
	34	307	40	308	47	309	54	311	62	312	72	313	82	314
220	6	1490	7	1760	8	2050	9	2364	11	2708	12	3089	14	3512
	29	296	35	297	41	298	47	299	54	300	62	301	71	302
200	5	1375	6	1623	7	1889	9	2176	10	2491	11	2837	13	3221
	25	284	30	285	35	286	41	287	47	288	53	289	61	290
180	5	1264	6	1490	7	1733	8	1995	9	2282	10	2597	11	2944
	22	272	26	273	30	274	35	275	40	276	46	277	52	278
160	4	1155	5	1360	6	1581	7	1820	8	2080	9	2365	10	2679
	19	260	22	261	26	262	30	263	34	264	39	265	45	266
140	4	1048	5	1234	5	1433	6	1649	7	1884	8	2142	9	2424
	16	247	19	248	22	249	25	250	29	251	33	252	38	253
120	3	943	4	1109	5	1288	5	1482	6	1693	7	1924	8	2178
	13	232	16	234	18	235	21	236	24	237	28	238	32	239
100	3	769	3	903	4	1048	4	1205	5	1377	6	1565	6	1771
	9	206	11	207	13	208	15	210	17	211	20	213	23	214
50	2	520	2	608	2	703	3	806	3	918	4	1041	4	1173
	5	170	6	170	7	171	8	172	9	174	10	175	12	177
15	1	345	1	400	2	460	2	527	2	599	2	677	3	761
	2	122	3	121	3	121	4	122	4	124	5	126	5	128

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 1 %	△FUEL = + 3 %

10E -08F0A330–301 CF6–80E1A2 21100000C5KG300 0 018590 0 0 2 1.0 500.0 300.00 1 03250.000300.000 .800 0 FCOM-G0–03–05–10–002–010

GENERAL

R Climb tables are established at MAX CLIMB THRUST (and DERATED CLIMB 1 and 2 ◁)
R with air conditioning in normal mode, and anti ice OFF.
The climb speed profile is :
- 250 kt from 1500 feet up to FL100
- acceleration from 250 kt to 300 kt
- climb at 300 kt then M.80 up to selected altitude

All charts are established with a center of gravity of 30 %.

CLIMB - 250KT/300KT/M.80

MAX. CLIMB THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

FL	WEIGHT AT BRAKE RELEASE (1000KG)													
	120		**140**		**160**		**180**		**200**		**220**		**240**	
410	14	2636	17	3187	21	3839	27	4717						
	91	387	113	391	140	395	182	401						
390	13	2498	15	3000	19	3573	23	4258						
	81	380	99	382	120	386	147	390						
370	12	2370	14	2834	17	3352	20	3947	24	4663				
	72	372	87	374	104	377	125	380	152	384				
350	11	2254	13	2688	15	3165	18	3702	21	4325	25	5077	30	6089
	65	364	78	366	93	368	110	371	130	374	157	378	196	385
330	10	2148	12	2555	14	3000	16	3495	19	4057	22	4713	26	5509
	58	356	70	358	83	360	98	362	115	365	136	368	162	372
310	9	2045	11	2428	13	2844	15	3304	17	3820	20	4411	23	5106
	53	348	63	350	75	351	88	353	102	355	120	358	141	361
290	8	1912	10	2266	12	2649	13	3068	16	3535	18	4060	21	4664
	47	336	56	338	65	339	76	340	88	342	103	344	119	347
270	8	1781	9	2107	10	2459	12	2841	14	3263	16	3733	18	4265
	41	324	48	326	57	327	66	328	76	329	88	331	101	333
250	7	1656	8	1957	9	2280	11	2630	12	3013	14	3437	16	3911
	36	312	42	314	49	315	57	316	66	317	76	319	87	320
240	6	1596	8	1884	9	2194	10	2529	12	2895	13	3298	15	3748
	33	307	39	308	46	309	53	310	61	311	70	312	80	314
220	6	1479	7	1744	8	2029	9	2336	11	2669	12	3036	14	3442
	29	295	34	296	40	297	46	298	53	299	61	300	69	302
200	5	1365	6	1609	7	1870	8	2151	10	2456	11	2789	12	3156
	25	284	30	285	35	286	40	287	46	288	52	289	60	290
180	5	1255	6	1478	7	1716	8	1973	9	2250	10	2553	11	2886
	22	272	26	273	30	274	35	275	40	276	45	277	51	278
160	4	1147	5	1350	6	1567	7	1800	8	2052	9	2326	10	2627
	19	259	22	260	26	261	30	262	34	263	39	264	44	265
140	4	1042	5	1224	5	1421	6	1631	7	1859	8	2107	9	2378
	16	246	19	247	22	248	25	249	29	250	33	251	37	252
120	3	938	4	1102	5	1278	5	1467	6	1672	7	1894	8	2138
	13	232	16	233	18	234	21	235	24	236	27	237	31	238
100	3	765	3	897	4	1040	4	1194	5	1361	6	1542	6	1740
	9	206	11	207	13	208	15	209	17	210	19	212	22	213
50	2	519	2	605	2	700	3	802	3	912	4	1032	4	1161
	5	169	6	170	7	170	8	172	9	173	10	175	12	176
15	1	345	1	400	2	460	2	527	2	599	2	677	3	761
	2	122	3	121	3	121	4	122	4	124	5	126	5	128

PACK FLOW LO	**PACK FLOW HI OR/ AND CARGO COOL ON**	**ENGINE ANTI ICE ON**	**TOTAL ANTI ICE ON**
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 1 %	△FUEL = + 3 %

11 -08F0A330–200 CF6–80E1A4 21100000C5KG300 0 018590 0 0 2 1.0 500.0 300.00 1 03250.000300.000 .800 0 FCOM-G0–03–05–10–002–015

CLIMB - 250KT/300KT/M.80

MAX. CLIMB THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

WEIGHT AT BRAKE RELEASE (1000KG)

FL	120	140	160	180	200	220	240
410	15 2811 97 397	18 3407 120 400	22 4118 150 404				
390	13 2660 86 389	16 3203 105 391	19 3825 128 395	24 4573 158 399			
370	12 2521 76 381	15 3022 93 383	17 3582 111 386	21 4229 134 389	25 5015 163 393		
350	11 2396 69 373	13 2862 83 375	16 3378 99 377	19 3961 117 379	22 4640 140 383	26 5469 169 387	
330	10 2280 62 364	12 2718 75 366	14 3198 88 368	17 3734 104 370	20 4346 123 373	23 5065 146 376	28 5944 175 381
310	9 2168 56 356	11 2579 67 357	13 3028 80 359	16 3525 93 361	18 4086 109 363	21 4732 128 366	25 5496 151 369
290	9 2025 49 344	10 2404 59 345	12 2816 69 346	14 3269 81 348	16 3775 94 350	19 4349 110 352	22 5011 128 354
270	8 1883 43 331	9 2233 51 333	11 2611 60 334	13 3024 70 335	14 3481 81 337	17 3994 94 338	19 4576 108 340
250	7 1749 37 319	8 2071 45 320	10 2419 52 322	11 2796 61 323	13 3211 70 324	15 3674 81 325	17 4193 93 327
240	7 1685 35 313	8 1993 42 314	9 2326 49 316	11 2687 57 317	12 3084 65 318	14 3524 75 319	16 4016 86 321
220	6 1559 30 301	7 1843 36 303	8 2149 42 304	10 2480 49 305	11 2842 56 306	13 3242 65 307	14 3686 74 308
200	5 1438 26 290	6 1699 31 291	8 1979 37 292	9 2282 42 293	10 2612 49 294	11 2976 56 295	13 3378 64 296
180	5 1321 23 277	6 1559 27 279	7 1815 32 280	8 2091 37 281	9 2392 42 281	10 2722 48 283	12 3086 55 284
160	4 1206 20 265	5 1422 23 266	6 1655 27 267	7 1906 31 268	8 2179 36 269	9 2479 41 270	10 2808 47 271
140	4 1093 17 251	5 1289 20 252	5 1499 23 253	6 1726 26 254	7 1973 30 255	8 2243 35 257	9 2540 39 258
120	4 983 14 237	4 1159 16 238	5 1347 19 239	6 1550 22 240	6 1772 25 241	7 2015 29 242	8 2281 33 244
100	3 800 10 210	3 942 12 211	4 1095 14 212	4 1260 16 214	5 1440 18 215	6 1638 21 216	6 1854 23 218
50	2 540 5 173	2 633 6 173	2 733 7 174	3 842 8 175	3 960 9 177	4 1088 11 179	4 1227 12 181
15	1 357 2 124	1 415 3 123	2 479 3 123	2 549 4 124	2 625 4 126	2 707 5 128	3 795 6 130

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 2.5 %	△FUEL = + 5 %

10E -08F0A330–301 CF6–80E1A2 21100000C5KG300 0 018590 0 0 2 1.0 500.0 300.00 1 03250.000300.000 .800 10 FCOM-G0–03–05–10–003–010

CLIMB - 250KT/300KT/M.80

MAX. CLIMB THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

FL	WEIGHT AT BRAKE RELEASE (1000KG)													
	120		**140**		**160**		**180**		**200**		**220**		**240**	
410	16	2967	20	3618	25	4416								
	109	404	137	407	173	412								
390	15	2800	18	3386	22	4068	27	4916						
	96	396	118	399	145	402	182	407						
370	13	2648	16	3185	19	3792	23	4506	28	5400				
	85	388	104	390	126	393	152	396	188	402				
350	12	2512	15	3011	17	3567	21	4203	24	4959	30	5911		
	76	380	93	382	111	384	133	387	160	391	196	396		
330	11	2388	13	2854	16	3369	19	3949	22	4622	26	5430	31	6452
	69	371	83	373	99	375	117	378	139	381	167	384	204	390
310	10	2266	12	2703	15	3182	17	3718	20	4329	23	5045	28	5910
	62	362	75	364	89	366	105	368	123	370	146	373	174	377
290	9	2112	11	2513	13	2952	15	3436	18	3983	21	4611	24	5347
	54	350	65	351	77	353	90	355	106	357	123	359	145	362
270	8	1961	10	2330	12	2730	14	3170	16	3661	18	4217	21	4856
	47	337	57	339	67	340	78	341	90	343	105	345	122	347
250	8	1818	9	2157	11	2524	12	2924	14	3367	16	3865	19	4429
	41	325	49	326	58	327	67	329	78	330	90	332	103	333
240	7	1750	9	2074	10	2425	12	2807	13	3230	15	3702	18	4234
	38	319	46	320	54	321	62	322	72	324	83	325	96	327
220	7	1617	8	1915	9	2236	10	2585	12	2969	14	3395	16	3873
	33	307	40	308	46	309	54	310	62	311	71	312	82	314
200	6	1488	7	1761	8	2055	9	2373	11	2721	12	3108	14	3537
	29	295	34	296	40	297	46	298	53	299	61	300	70	301
180	5	1364	6	1613	7	1881	8	2170	10	2487	11	2836	12	3223
	25	282	29	283	34	284	40	285	46	286	52	287	60	289
160	5	1244	6	1470	6	1713	7	1976	9	2263	10	2579	11	2928
	21	269	25	271	29	272	34	273	39	274	45	275	51	276
140	4	1127	5	1331	6	1550	7	1787	8	2046	9	2331	10	2644
	18	256	21	257	25	258	29	259	33	260	38	261	43	262
120	4	1012	4	1195	5	1391	6	1603	7	1835	8	2090	9	2370
	15	241	18	242	21	243	24	244	28	245	31	247	36	248
100	3	822	3	969	4	1128	5	1300	5	1488	6	1694	7	1921
	11	214	12	215	15	216	17	218	19	219	22	220	25	222
50	2	553	2	649	3	754	3	866	3	989	4	1122	4	1266
	6	177	7	177	8	178	9	179	10	181	12	183	13	185
15	1	364	1	424	2	491	2	563	2	642	2	726	3	816
	3	127	3	126	3	127	4	128	5	129	5	131	6	133

PACK FLOW LO	**PACK FLOW HI OR/ AND CARGO COOL ON**	**ENGINE ANTI ICE ON**	**TOTAL ANTI ICE ON**
△FUEL = – 0.5 %	△FUEL = + 2 %	△FUEL = + 3 %	△FUEL = + 6 %

10E -08F0A330–301 CF6–80E1A2 21100000C5KG300 0 018590 0 0 2 1.0 500.0 300.00 1 03250.000300.000 .800 15 FCOM-G0–03–05–10–004–010

CLIMB - 250KT/300KT/M.80

MAX. CLIMB THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

FL	WEIGHT AT BRAKE RELEASE (1000KG)													
	120		**140**		**160**		**180**		**200**		**220**		**240**	
410	14	2776	18	3359	22	4051								
	96	396	118	399	147	403								
390	13	2629	16	3161	19	3767	23	4493						
	85	388	103	391	126	394	154	398						
370	12	2493	14	2984	17	3531	20	4161	24	4920				
	75	380	91	382	109	385	131	388	159	392				
350	11	2370	13	2828	15	3333	18	3900	21	4558	26	5354	31	6426
	68	372	82	374	97	376	115	379	137	382	164	386	205	393
330	10	2257	12	2687	14	3157	17	3679	19	4273	23	4965	27	5808
	61	364	74	366	87	368	102	370	120	372	142	376	170	380
310	9	2147	11	2551	13	2991	15	3476	18	4020	21	4643	24	5377
	55	355	66	357	78	358	92	360	107	362	125	365	147	368
290	9	2006	10	2379	12	2783	14	3225	16	3717	18	4270	21	4907
	49	343	58	345	68	346	80	347	93	349	107	351	125	354
270	8	1867	9	2211	11	2582	12	2985	14	3428	16	3923	19	4483
	42	331	51	332	59	333	69	335	80	336	92	338	106	340
250	7	1735	8	2052	10	2392	11	2761	13	3164	15	3609	17	4108
	37	319	44	320	52	321	60	322	69	323	79	325	90	326
240	7	1671	8	1975	9	2302	11	2654	12	3039	14	3462	16	3935
	35	313	41	314	48	315	56	316	64	317	73	319	84	320
220	6	1547	7	1827	8	2127	10	2450	11	2801	12	3185	14	3612
	30	301	36	302	42	303	48	304	55	305	63	306	72	308
200	5	1428	6	1684	7	1960	9	2255	10	2575	11	2925	13	3310
	26	289	31	290	36	291	42	292	48	293	55	294	62	295
180	5	1311	6	1546	7	1797	8	2067	9	2358	10	2676	11	3025
	23	277	27	278	31	279	36	280	41	281	47	282	53	283
160	4	1198	5	1411	6	1640	7	1885	8	2150	9	2437	10	2753
	19	264	23	265	27	266	31	267	35	268	40	269	46	270
140	4	1087	5	1279	5	1486	6	1708	7	1947	8	2207	9	2491
	16	251	19	252	23	253	26	254	30	255	34	256	39	257
120	3	977	4	1150	5	1336	5	1535	6	1750	7	1983	8	2238
	14	236	16	237	19	238	22	239	25	240	28	241	32	243
100	3	796	3	936	4	1087	4	1249	5	1424	6	1613	6	1821
	10	210	11	211	13	212	15	213	18	214	20	215	23	217
50	2	538	2	630	2	730	3	837	3	953	4	1078	4	1214
	5	172	6	173	7	174	8	175	9	176	11	178	12	180
15	1	357	1	415	2	479	2	549	2	625	2	707	3	795
	2	124	3	123	3	123	4	124	4	126	5	128	6	130

PACK FLOW LO	**PACK FLOW HI OR/ AND CARGO COOL ON**	**ENGINE ANTI ICE ON**	**TOTAL ANTI ICE ON**
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 1 %	△FUEL = + 3 %

11.0 -08F0A330–200 CF6–80E1A4 21100000C5KG300 0 018590 0 0 2 1.0 500.0 300.00 1 03250.000300.000 .800 10 FCOM-G0–03–05–10–003–015

CLIMB - 250KT/300KT/M.80

MAX. CLIMB THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

FL	WEIGHT AT BRAKE RELEASE (1000KG)													
	120		**140**		**160**		**180**		**200**		**220**		**240**	
410	16	2926	20	3560	25	4333								
	107	403	134	407	169	411								
390	14	2763	18	3336	21	3999	26	4817						
	95	395	116	398	142	402	177	406						
370	13	2615	16	3141	19	3733	23	4424	27	5283				
	84	387	102	389	123	392	149	396	183	401				
350	12	2483	14	2971	17	3514	20	4131	24	4861	29	5770		
	75	379	91	381	109	383	130	386	156	390	190	395		
330	11	2360	13	2818	16	3321	18	3885	22	4536	25	5310	30	6283
	68	371	82	373	97	375	115	377	136	380	163	384	198	389
310	10	2242	12	2670	14	3139	17	3660	20	4252	23	4939	27	5767
	61	362	74	363	87	365	103	367	121	370	142	373	169	377
290	9	2091	11	2485	13	2914	15	3386	17	3915	20	4519	23	5224
	54	349	64	351	76	352	89	354	103	356	121	358	141	361
270	8	1943	10	2305	12	2697	13	3125	16	3601	18	4135	21	4748
	47	337	56	338	66	340	76	341	89	342	103	344	119	347
250	8	1802	9	2135	10	2494	12	2884	14	3313	16	3791	18	4331
	41	324	48	326	57	327	66	328	76	329	88	331	101	333
240	7	1734	8	2054	10	2397	11	2769	13	3178	15	3631	17	4141
	38	318	45	320	53	321	61	322	71	323	81	324	93	326
220	6	1603	8	1896	9	2211	10	2551	12	2922	13	3331	15	3788
	33	306	39	308	46	309	53	310	61	311	70	312	80	313
200	6	1477	7	1745	8	2033	9	2343	11	2680	12	3050	14	3461
	28	294	34	295	40	296	46	297	52	298	60	299	68	301
180	5	1354	6	1599	7	1861	8	2144	9	2450	11	2785	12	3154
	25	282	29	283	34	284	39	285	45	286	51	287	58	288
160	5	1236	6	1458	6	1696	7	1953	8	2230	10	2533	11	2866
	21	269	25	270	29	271	34	272	38	273	44	274	50	275
140	4	1120	5	1320	6	1536	7	1767	8	2017	9	2290	10	2589
	18	255	21	257	25	257	28	258	32	259	37	260	42	261
120	4	1006	4	1185	5	1378	6	1586	7	1810	8	2054	8	2322
	15	241	18	242	20	243	24	244	27	245	31	246	35	247
100	3	817	3	962	4	1119	5	1287	5	1469	6	1667	7	1884
	10	214	12	215	14	216	17	217	19	218	22	219	25	221
50	2	551	2	647	3	750	3	861	3	982	4	1111	4	1252
	6	176	7	177	8	178	9	179	10	180	11	182	13	184
15	1	364	1	424	2	491	2	563	2	642	2	726	3	816
	3	127	3	126	3	127	4	128	5	129	5	131	6	133

PACK FLOW LO	**PACK FLOW HI OR/ AND CARGO COOL ON**	**ENGINE ANTI ICE ON**	**TOTAL ANTI ICE ON**
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 1 %	△FUEL = + 3 %

11 -08F0A330-200 CF6-80E1A4 21100000C5KG300 0 018590 0 0 2 1.0 500.0 300.00 1 03250.000300.000 .800 15 FCOM-G0-03-05-10-004-015

CLIMB - 250KT/300KT/M.80

MAX. CLIMB THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+20
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

FL	WEIGHT AT BRAKE RELEASE (1000KG)													
	120		**140**		**160**		**180**		**200**		**220**		**240**	
410	18	3170	23	3901	30	4846								
	126	412	160	416	208	422								
390	16	2979	20	3627	25	4401								
	110	403	137	407	171	411								
370	15	2808	18	3394	22	4070	27	4890						
	97	395	119	398	145	401	179	405						
350	13	2656	16	3196	19	3807	23	4520	28	5396				
	86	387	105	389	127	392	153	395	188	400				
330	12	2517	15	3019	18	3579	21	4221	25	4981	30	5926		
	77	378	94	380	112	382	134	385	161	389	197	394		
310	11	2382	14	2850	16	3368	19	3952	22	4631	27	5445	32	6468
	70	368	84	370	100	372	118	375	141	377	169	381	205	387
290	10	2213	12	2639	14	3109	17	3632	20	4229	23	4926	27	5762
	60	355	72	357	86	359	101	360	119	363	140	366	167	369
270	9	2049	11	2439	13	2865	15	3336	17	3867	20	4474	23	5184
	52	342	62	344	74	345	86	347	101	348	118	351	138	353
250	8	1894	10	2252	11	2640	13	3066	15	3542	18	4080	21	4697
	45	329	54	331	63	332	74	333	86	335	100	336	116	339
240	8	1821	9	2163	11	2534	13	2939	15	3391	17	3899	19	4478
	42	323	50	324	59	325	69	327	80	328	92	330	106	332
220	7	1679	8	1992	10	2331	11	2700	13	3108	15	3564	17	4079
	36	311	43	312	51	313	59	314	68	315	79	316	90	318
200	6	1544	7	1830	9	2139	10	2474	12	2844	13	3256	15	3717
	31	298	37	299	44	300	51	301	58	302	67	304	77	305
180	6	1414	7	1675	8	1956	9	2261	10	2596	12	2967	14	3381
	27	286	32	287	38	288	43	289	50	290	57	291	66	292
160	5	1288	6	1524	7	1779	8	2055	9	2358	11	2693	12	3065
	23	273	27	274	32	275	37	276	43	277	49	278	56	279
140	4	1165	5	1378	6	1608	7	1856	8	2129	9	2429	11	2762
	19	259	23	260	27	261	31	262	36	263	41	264	47	265
120	4	1044	5	1235	5	1440	6	1663	7	1907	8	2175	9	2472
	16	244	19	245	22	246	26	247	30	248	34	249	39	251
100	3	846	4	1000	4	1166	5	1345	6	1543	7	1759	7	1998
	11	216	13	217	16	219	18	220	21	221	24	223	28	224
50	2	569	2	669	3	778	3	896	4	1024	4	1163	5	1314
	6	179	7	179	8	180	10	181	11	183	13	185	14	186
15	1	373	2	436	2	506	2	581	2	663	3	750	3	843
	3	128	3	128	4	128	4	129	5	130	6	132	6	134

PACK FLOW LO	**PACK FLOW HI OR/ AND CARGO COOL ON**	**ENGINE ANTI ICE ON**	**TOTAL ANTI ICE ON**
△FUEL = – 0.5 %	△FUEL = + 2 %	△FUEL = + 3 %	△FUEL = + 6 %

10E -08F0A330–301 CF6–80E1A2 21100000C5KG300 0 018590 0 0 2 1.0 500.0 300.00 1 03250.000300.000 .800 20 FCOM-G0–03–05–10–005–010

CLIMB - 250KT/300KT/M.80

MAX. CLIMB THRUST — ISA+20 — **FROM BRAKE** RELEASE
NORMAL AIR CONDITIONING — CG=30.0% — **TIME (MIN)** **FUEL (KG)**
ANTI-ICING OFF — **DISTANCE (NM)** **TAS (KT)**

	WEIGHT AT BRAKE RELEASE (1000KG)													
FL	120		140		160		180		200		220		240	
410	18	3120	23	3829	29	4735								
	123	411	156	415	202	421								
390	16	2935	20	3566	24	4314	31	5289						
	108	403	134	406	166	410	213	416						
370	14	2769	18	3341	21	3997	26	4786	32	5823				
	95	394	116	397	142	400	174	404	221	411				
350	13	2621	16	3149	19	3743	23	4432	27	5271	34	6381		
	85	386	103	388	124	391	150	394	183	399	230	406		
330	12	2485	15	2977	17	3522	21	4144	24	4875	29	5774	36	6977
	76	377	92	379	110	381	131	384	157	388	191	393	239	400
310	11	2354	13	2812	16	3317	19	3884	22	4539	26	5316	31	6287
	68	368	82	370	98	371	116	374	137	377	164	380	199	386
290	10	2188	12	2607	14	3065	17	3573	19	4150	22	4817	26	5614
	59	355	71	356	84	358	99	360	116	362	137	365	162	368
270	9	2027	11	2411	13	2827	15	3285	17	3797	20	4379	23	5057
	51	342	62	343	73	344	85	346	99	348	115	350	134	353
250	8	1876	10	2227	11	2607	13	3021	15	3480	17	3995	20	4583
	45	329	53	330	62	331	73	333	84	334	97	336	113	338
240	8	1803	9	2139	11	2502	12	2897	14	3332	16	3818	19	4371
	41	323	49	324	58	325	67	326	78	327	90	329	104	331
220	7	1664	8	1972	10	2303	11	2662	13	3055	15	3492	17	3982
	36	310	43	311	50	312	58	313	67	314	77	316	88	317
200	6	1531	7	1812	9	2114	10	2441	11	2797	13	3191	15	3629
	31	298	37	299	43	300	50	301	57	302	66	303	75	304
180	6	1403	7	1659	8	1934	9	2231	10	2554	12	2909	13	3303
	27	285	32	286	37	287	43	288	49	289	56	290	64	291
160	5	1278	6	1511	7	1760	8	2029	9	2321	10	2641	12	2995
	23	272	27	273	32	274	36	275	42	276	48	277	54	278
140	4	1156	5	1366	6	1591	7	1834	8	2097	9	2384	10	2701
	19	258	23	259	27	260	31	261	35	262	40	263	46	264
120	4	1037	5	1225	5	1427	6	1644	7	1879	8	2135	9	2418
	16	243	19	244	22	245	26	246	29	247	33	248	38	250
100	3	841	4	993	4	1156	5	1332	6	1522	6	1729	7	1958
	11	216	13	217	16	218	18	219	21	220	24	222	27	223
50	2	567	2	666	3	774	3	890	4	1016	4	1151	5	1298
	6	178	7	179	8	180	10	181	11	182	12	184	14	185
15	1	373	2	436	2	506	2	581	2	663	3	750	3	843
	3	128	3	128	4	128	4	129	5	130	6	132	6	134

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 1 %	△FUEL = + 3 %

11.0 -08F0A330–200 CF6–80E1A4 21100000C5KG300 0 018590 0 0 2 1.0 500.0 300.00 1 03250.000300.000 .800 20 FCOM-G0–03–05–10–005–015

LEFT INTENTIONALLY BLANK

DERATED CLIMB 1 - 250KT/300KT/M.80

DERATED CLIMB 1 THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

WEIGHT AT BRAKE RELEASE (1000KG)

FL	120	140	160	180	200	220	240
410	16 2732 101 388	19 3312 125 391	24 4001 155 394	30 4925 200 400			
390	14 2594 91 381	17 3125 111 383	21 3735 135 386	25 4470 165 390			
370	13 2466 82 374	16 2959 99 376	19 3515 120 378	23 4160 144 381	27 4947 175 385		
350	12 2351 75 367	15 2813 90 369	17 3328 108 371	21 3916 129 374	24 4610 154 377	29 5467 187 381	36 6640 235 388
330	11 2245 68 361	14 2681 83 363	16 3163 98 364	19 3709 117 367	22 4343 138 369	27 5103 166 373	32 6065 202 378
310	11 2138 63 353	13 2548 75 355	15 3001 89 357	18 3508 106 359	21 4092 125 361	24 4779 148 364	29 5623 177 368
290	10 1996 55 342	12 2373 66 343	14 2787 78 345	16 3246 91 346	18 3767 107 348	22 4369 126 351	25 5084 149 354
270	9 1855 48 330	10 2202 57 331	12 2579 68 333	14 2996 79 334	16 3462 92 336	19 3993 107 338	22 4611 125 340
250	8 1721 42 319	9 2040 50 320	11 2386 59 321	13 2764 68 322	15 3184 79 323	17 3658 92 325	19 4201 106 327
240	7 1657 39 313	9 1962 47 314	10 2293 55 315	12 2654 64 316	14 3054 74 318	16 3502 85 319	18 4013 98 321
220	7 1532 34 302	8 1812 40 303	9 2114 47 304	11 2443 55 305	12 2806 64 306	14 3210 73 307	16 3667 84 309
200	6 1412 30 290	7 1667 35 291	8 1944 41 292	10 2244 48 293	11 2573 55 294	13 2938 63 295	15 3348 72 297
180	5 1295 25 279	6 1528 30 280	8 1780 35 281	9 2053 41 282	10 2351 47 283	11 2681 54 284	13 3049 62 285
160	5 1181 22 267	6 1392 26 268	7 1621 30 268	8 1868 35 269	9 2137 40 270	10 2435 46 271	12 2766 52 273
140	4 1069 18 253	5 1259 22 254	6 1465 25 255	7 1687 29 256	8 1929 34 257	9 2196 39 258	10 2492 44 260
120	4 959 15 239	5 1129 18 240	5 1312 21 241	6 1511 24 242	7 1727 28 243	8 1965 32 244	9 2229 36 245
100	3 777 11 212	4 914 13 213	4 1061 15 214	5 1221 17 215	5 1396 19 217	6 1587 22 218	7 1798 25 220
50	2 524 5 175	2 612 6 175	3 708 7 176	3 813 9 177	3 926 10 179	4 1050 11 181	4 1184 13 182
15	1 345 2 122	1 400 3 121	2 460 3 121	2 527 4 122	2 599 4 124	2 677 5 126	3 761 5 128

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 6 %

11.3-08F0A330-200 CF6-80E1A4 21100000C5KG300 0 018590 0 0 8 1.0 500.0 300.00 1 03250.000300.000 .800 0 FCOM-G0-03-05-10-007-215

DERATED CLIMB 1 - 250KT/300KT/M.80

DERATED CLIMB 1 THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

WEIGHT AT BRAKE RELEASE (1000KG)

FL	120	140	160	180	200	220	240
410	16 2876 106 396	20 3490 131 399	24 4220 163 403	31 5200 210 409			
390	15 2730 95 389	18 3292 116 392	22 3937 142 395	26 4715 174 399			
370	13 2594 86 382	16 3115 104 384	19 3702 125 387	23 4385 151 390	28 5218 184 394		
350	13 2471 78 375	15 2960 95 377	18 3504 113 379	21 4125 135 382	25 4859 161 385	30 5766 196 390	37 7009 247 396
330	12 2358 72 368	14 2818 87 370	17 3328 103 372	20 3904 122 374	23 4574 145 377	27 5378 174 381	33 6397 212 386
310	11 2244 66 361	13 2677 79 362	15 3155 94 364	18 3690 111 366	21 4306 131 369	25 5032 155 372	30 5924 186 376
290	10 2093 58 349	12 2491 69 350	14 2927 82 352	16 3411 96 353	19 3961 112 356	22 4595 132 358	26 5350 156 361
270	9 1944 50 337	11 2309 60 338	12 2707 71 339	15 3146 83 341	17 3637 96 342	19 4196 112 344	23 4847 131 347
250	8 1802 44 325	10 2138 52 326	11 2502 61 327	13 2900 71 329	15 3343 83 330	17 3841 96 332	20 4412 111 334
240	8 1734 41 319	9 2056 49 320	11 2404 57 321	12 2784 66 323	14 3205 77 324	16 3676 89 325	19 4214 102 327
220	7 1602 35 308	8 1897 42 309	10 2216 50 310	11 2562 57 311	13 2943 66 312	15 3368 76 313	17 3847 88 315
200	6 1475 31 296	7 1745 37 297	9 2036 43 298	10 2351 50 299	11 2697 57 300	13 3081 66 301	15 3511 75 303
180	6 1352 27 284	7 1598 31 285	8 1863 37 286	9 2150 43 287	10 2463 49 288	12 2810 56 289	13 3196 64 290
160	5 1233 23 272	6 1455 27 273	7 1695 31 274	8 1955 36 274	9 2238 42 275	10 2550 48 277	12 2897 55 278
140	4 1115 19 258	5 1315 23 259	6 1531 26 260	7 1765 31 261	8 2019 35 262	9 2299 40 263	10 2609 46 264
120	4 999 16 243	5 1178 19 244	5 1371 22 245	6 1580 25 246	7 1807 29 247	8 2056 33 249	9 2332 38 250
100	3 809 11 216	4 953 13 217	4 1108 15 218	5 1276 18 219	6 1459 20 221	6 1659 23 222	7 1881 26 224
50	2 544 6 178	2 637 7 179	3 739 8 179	3 849 9 181	3 968 10 182	4 1097 12 184	4 1238 13 186
15	1 357 2 124	1 415 3 123	2 479 3 123	2 549 4 124	2 625 4 126	2 707 5 128	3 795 6 130

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 4 %	△FUEL = + 8 %

11.3-08F0A330-200 CF6-80E1A4 21100000C5KG300 0 018590 0 0 8 1.0 500.0 300.00 1 03250.000300.000 .800 10 FCOM-G0-03-05-10-008-215

DERATED CLIMB 1 - 250KT/300KT/M.80

DERATED CLIMB 1 THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

WEIGHT AT BRAKE RELEASE (1000KG)

FL	120	140	160	180	200	220	240
410	18 3066 121 403	22 3742 150 406	28 4567 189 411				
390	16 2904 108 396	20 3518 133 399	24 4235 163 402	30 5125 202 406			
370	15 2756 97 389	18 3323 119 391	22 3970 144 394	26 4736 174 397	32 5698 215 402		
350	14 2624 89 382	17 3154 108 384	20 3752 129 387	24 4444 155 389	29 5280 188 393	35 6347 232 398	
330	13 2502 81 376	16 3001 98 377	19 3559 118 380	22 4199 141 382	26 4958 169 385	32 5893 205 390	39 7127 255 396
310	12 2382 75 368	15 2851 90 370	17 3375 107 372	20 3969 128 374	24 4667 152 377	29 5512 183 381	35 6594 225 386
290	11 2218 65 357	13 2648 79 358	16 3125 94 360	18 3660 111 362	22 4279 131 364	25 5012 156 368	30 5917 188 372
270	10 2051 57 344	12 2443 68 346	14 2874 80 347	16 3354 95 349	19 3898 111 351	22 4529 130 353	26 5282 154 356
250	9 1894 49 332	11 2252 59 333	12 2644 69 334	14 3075 81 336	17 3558 94 337	19 4110 110 339	23 4754 128 341
240	8 1819 46 326	10 2162 54 327	12 2535 64 328	14 2944 75 329	16 3402 87 331	18 3921 101 332	21 4522 118 335
220	8 1676 39 314	9 1989 47 315	10 2328 55 316	12 2699 64 317	14 3111 75 318	16 3573 86 320	19 4102 100 321
200	7 1539 34 302	8 1824 40 303	9 2133 48 304	11 2469 55 305	13 2840 64 306	14 3254 73 307	16 3723 85 309
180	6 1407 29 290	7 1666 35 291	8 1946 41 292	10 2250 47 292	11 2584 54 294	13 2955 62 295	15 3373 72 296
160	5 1279 25 277	6 1513 29 278	7 1766 35 279	9 2040 40 280	10 2341 46 281	11 2674 53 282	13 3047 61 283
140	5 1154 21 263	6 1365 25 264	7 1592 29 265	8 1838 34 266	9 2107 39 267	10 2404 44 268	11 2735 51 269
120	4 1032 17 248	5 1220 20 249	6 1422 24 250	7 1641 28 251	8 1881 32 252	9 2144 36 253	10 2438 42 255
100	3 833 12 220	4 983 14 221	4 1145 17 222	5 1321 19 224	6 1512 22 225	7 1723 25 226	8 1957 29 228
50	2 558 6 182	2 655 7 183	3 761 8 184	3 875 10 185	4 999 11 186	4 1134 13 188	5 1281 15 190
15	1 364 3 127	1 424 3 126	2 491 3 127	2 563 4 128	2 642 5 129	2 726 5 131	3 816 6 133

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 3 %	△FUEL = + 4 %	△FUEL = + 8 %

11.3-08F0A330-200 CF6-80E1A4 21100000C5KG300 0 018590 0 0 8 1.0 500.0 300.00 1 03250.000300.000 .800 15 FCOM-G0-03-05-10-009-215

DERATED CLIMB 1 - 250KT/300KT/M.80

DERATED CLIMB 1 THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+20
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

FL	WEIGHT AT BRAKE RELEASE (1000KG)													
	120		**140**		**160**		**180**		**200**		**220**		**240**	
410	20	3295	25	4056	32	5027								
	139	410	175	414	226	419								
390	18	3111	23	3794	28	4611	35	5676						
	124	403	153	406	191	410	243	415						
370	17	2945	21	3570	25	4295	30	5178	38	6348				
	111	396	136	398	167	401	205	405	260	411				
350	16	2798	19	3378	23	4042	27	4827	33	5805	41	7121		
	101	389	123	391	149	394	181	397	222	401	282	408		
330	14	2662	17	3207	21	3822	25	4540	30	5412	37	6528	46	8085
	92	382	112	384	135	386	162	389	197	393	244	398	313	405
310	14	2531	16	3042	19	3617	23	4281	28	5077	33	6073	41	7409
	84	374	102	376	123	378	147	381	177	385	217	389	273	395
290	12	2355	15	2823	18	3346	21	3943	25	4648	30	5509	36	6623
	74	363	90	365	107	367	128	369	153	372	185	376	229	382
270	11	2170	13	2594	16	3063	18	3591	22	4202	25	4926	30	5819
	64	350	77	352	92	353	108	355	128	358	153	361	184	365
250	10	1996	12	2380	14	2803	16	3272	19	3806	22	4424	26	5162
	55	337	66	339	78	340	92	342	108	343	126	346	149	349
240	9	1914	11	2280	13	2681	15	3125	18	3627	20	4203	24	4883
	51	331	61	332	72	334	85	335	99	337	116	339	136	341
220	8	1757	10	2090	12	2453	13	2852	16	3298	18	3805	21	4393
	44	319	52	320	62	321	72	322	84	323	97	325	113	327
200	7	1609	9	1911	10	2240	12	2599	14	2998	16	3448	18	3963
	38	306	45	307	53	308	61	309	71	310	82	312	95	314
180	7	1467	8	1741	9	2038	11	2361	12	2719	14	3120	16	3575
	32	294	38	295	45	296	52	296	60	298	70	299	80	300
160	6	1331	7	1578	8	1845	9	2136	11	2457	12	2814	14	3217
	27	281	32	281	38	282	44	283	51	284	59	286	67	287
140	5	1199	6	1420	7	1659	8	1919	9	2205	11	2522	12	2879
	23	266	27	267	32	268	37	269	42	270	49	271	56	273
120	4	1070	5	1266	6	1479	7	1710	8	1963	9	2244	11	2558
	19	251	22	252	26	253	30	254	35	255	40	256	46	258
100	3	860	4	1017	5	1187	6	1371	6	1573	7	1796	8	2045
	13	223	15	224	18	225	21	226	24	227	28	229	32	230
50	2	574	3	676	3	786	3	906	4	1036	4	1177	5	1331
	7	185	8	185	9	186	11	187	12	189	14	190	16	192
15	1	373	2	436	2	506	2	581	2	663	3	750	3	843
	3	128	3	128	4	128	4	129	5	130	6	132	6	134

PACK FLOW LO	**PACK FLOW HI OR/ AND CARGO COOL ON**	**ENGINE ANTI ICE ON**	**TOTAL ANTI ICE ON**
△FUEL = – 0.5 %	△FUEL = + 3 %	△FUEL = + 4 %	△FUEL = + 8 %

11.3-08F0A330-200 CF6-80E1A4 21100000C5KG300 0 018590 0 0 8 1.0 500.0 300.00 1 03250.000300.000 .800 20 FCOM-G0-03-05-10-010-215

DERATED CLIMB 2 - 250KT/300KT/M.80

DERATED CLIMB 2 THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

WEIGHT AT BRAKE RELEASE (1000KG)

FL	120		140		160		180		200		220		240	
410	16	2782	20	3376	25	4084	31	5030						
	106	387	131	390	162	394	208	400						
390	15	2645	18	3190	22	3819	27	4578						
	95	381	116	383	142	386	174	390						
370	14	2517	17	3024	20	3598	24	4268	29	5090				
	86	374	105	377	126	379	152	382	186	386				
350	13	2402	16	2878	18	3412	22	4025	26	4754	31	5661	39	6908
	79	368	96	370	115	372	137	375	164	378	200	382	253	389
330	12	2295	15	2746	17	3247	20	3818	24	4487	29	5298	35	6339
	73	362	88	364	105	366	125	368	149	371	179	375	220	380
310	11	2189	14	2614	16	3085	19	3618	22	4236	26	4975	32	5899
	67	355	81	357	96	359	114	361	135	363	161	367	196	371
290	10	2044	12	2435	15	2867	17	3350	20	3904	23	4553	28	5341
	59	344	71	346	84	347	99	349	117	351	138	354	165	358
270	9	1897	11	2255	13	2647	15	3083	18	3575	21	4142	24	4811
	52	333	62	334	73	335	86	337	100	339	117	341	138	343
250	8	1757	10	2085	12	2443	14	2837	16	3279	18	3780	21	4362
	45	321	54	322	63	324	74	325	86	326	100	328	116	330
240	8	1690	9	2004	11	2346	13	2722	15	3140	17	3614	20	4160
	42	316	50	317	59	318	69	319	80	320	92	322	107	324
220	7	1561	9	1848	10	2161	12	2502	13	2880	15	3305	18	3790
	36	304	43	305	51	307	59	308	69	309	79	310	92	312
200	6	1436	8	1699	9	1983	10	2293	12	2636	14	3018	16	3450
	32	293	38	294	44	295	51	296	59	297	68	298	78	300
180	6	1316	7	1554	8	1813	9	2094	11	2403	12	2748	14	3135
	27	282	32	283	38	283	44	284	51	285	58	287	67	288
160	5	1198	6	1414	7	1648	8	1902	9	2181	11	2490	12	2836
	23	269	28	270	32	271	37	272	43	273	49	274	56	276
140	5	1083	5	1277	6	1487	7	1715	8	1965	9	2241	11	2549
	19	256	23	257	27	258	31	259	36	260	41	261	47	262
120	4	970	5	1142	6	1329	6	1533	7	1755	8	2000	9	2274
	16	242	19	243	22	243	26	244	30	245	34	247	39	248
100	3	784	4	922	4	1071	5	1234	6	1413	6	1609	7	1827
	11	215	13	216	15	217	18	218	21	219	24	220	27	222
50	2	527	2	616	3	712	3	818	3	933	4	1058	4	1195
	6	177	7	178	8	178	9	180	10	181	12	183	14	185
15	1	345	1	400	2	460	2	527	2	599	2	677	3	761
	2	122	3	121	3	121	4	122	4	124	5	126	5	128

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 6 %

11.3-08F0A330-200 CF6-80E1A4 21100000C5KG300 0 018590 0 0 9 1.0 500.0 300.00 1 03250.000300.000 .800 0 FCOM-G0-03-05-10-011 -215

DERATED CLIMB 2 - 250KT/300KT/M.80

DERATED CLIMB 2 THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

FL	WEIGHT AT BRAKE RELEASE (1000KG)													
	120		**140**		**160**		**180**		**200**		**220**		**240**	
410	17	2929	21	3558	25	4307	32	5311						
	111	396	137	399	170	403	219	409						
390	15	2782	19	3359	23	4024	27	4828						
	100	389	122	392	149	395	182	398						
370	14	2647	17	3183	21	3790	25	4498	30	5368				
	91	383	110	385	133	387	160	390	195	394				
350	13	2524	16	3028	19	3592	23	4239	27	5010	32	5970	40	7292
	83	376	100	378	120	380	144	383	173	386	210	390	266	397
330	12	2411	15	2886	18	3416	21	4018	25	4725	30	5583	36	6685
	76	370	92	372	110	374	131	376	156	379	188	383	231	388
310	12	2297	14	2746	17	3243	19	3805	23	4458	27	5238	33	6215
	70	363	85	364	101	366	119	368	142	371	169	374	205	379
290	11	2144	13	2556	15	3011	18	3520	21	4104	24	4789	28	5620
	62	352	74	353	88	355	104	356	123	359	145	361	173	365
270	10	1987	11	2365	13	2778	16	3237	18	3755	21	4352	25	5057
	54	339	65	341	76	342	90	344	105	345	123	348	144	350
250	9	1840	10	2186	12	2563	14	2977	16	3442	19	3969	22	4581
	47	328	56	329	66	330	77	331	90	333	104	335	122	337
240	8	1769	10	2100	11	2460	13	2855	15	3295	18	3794	20	4368
	44	322	52	323	62	324	72	325	83	327	97	328	112	330
220	7	1632	9	1935	10	2264	12	2623	14	3021	16	3467	18	3976
	38	310	45	312	53	313	62	314	72	315	83	316	96	318
200	7	1501	8	1777	9	2077	11	2403	12	2763	14	3164	16	3618
	33	299	39	300	46	301	53	302	62	303	71	304	82	306
180	6	1374	7	1625	8	1897	9	2193	11	2518	12	2879	14	3285
	28	287	34	288	39	289	46	290	53	291	61	292	70	293
160	5	1250	6	1478	7	1724	8	1991	10	2283	11	2608	13	2971
	24	275	29	276	34	276	39	277	45	278	51	279	59	281
140	5	1129	6	1333	6	1554	7	1794	9	2056	10	2346	11	2669
	20	261	24	262	28	263	33	264	38	265	43	266	49	267
120	4	1010	5	1192	6	1389	6	1602	7	1836	8	2093	10	2380
	17	246	20	247	23	248	27	249	31	250	36	251	41	253
100	3	815	4	961	4	1118	5	1290	6	1477	7	1682	7	1911
	12	219	14	220	16	221	19	222	21	223	25	224	28	226
50	2	546	2	640	3	743	3	854	4	975	4	1106	4	1249
	6	180	7	181	8	182	9	183	11	184	12	186	14	188
15	1	357	1	415	2	479	2	549	2	625	2	707	3	795
	2	124	3	123	3	123	4	124	4	126	5	128	6	130

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 4 %	△FUEL = + 8 %

11.3-08F0A330-200 CF6-80E1A4 21100000C5KG300 0 018590 0 0 9 1.0 500.0 300.00 1 03250.000300.000 .800 10 FCOM-G0-03-05-10-012-215

DERATED CLIMB 2 - 250KT/300KT/M.80

DERATED CLIMB 2 THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

WEIGHT AT BRAKE RELEASE (1000KG)

FL	120		140		160		180		200		220		240	
410	19	3129	23	3823	29	4671								
	126	403	157	406	197	410								
390	17	2967	21	3600	26	4341	31	5262						
	113	396	139	398	171	402	213	406						
370	16	2819	19	3405	23	4076	28	4874	34	5883				
	103	389	125	391	152	394	185	397	229	402				
350	15	2687	18	3236	21	3858	26	4583	31	5467	38	6603		
	94	383	114	385	138	387	166	390	202	394	250	399		
330	14	2565	17	3083	20	3666	24	4339	28	5145	34	6152	42	7500
	87	377	105	379	126	381	152	383	182	387	223	391	280	397
310	13	2445	16	2934	19	3481	22	4110	26	4855	32	5772	39	6971
	80	370	97	372	116	374	139	376	166	379	201	383	250	388
290	12	2281	14	2731	17	3232	20	3801	24	4468	28	5274	34	6298
	71	359	86	361	102	363	122	365	145	368	174	371	213	376
270	11	2108	13	2516	15	2968	18	3476	21	4060	24	4748	29	5590
	62	347	74	349	88	350	104	352	123	354	145	357	174	360
250	10	1942	11	2314	13	2722	16	3175	18	3690	21	4284	25	4989
	53	335	64	336	75	337	88	339	104	341	121	343	143	345
240	9	1864	11	2218	13	2607	15	3036	17	3521	20	4077	23	4731
	49	329	59	330	70	331	82	332	95	334	111	336	131	338
220	8	1714	10	2037	11	2389	13	2776	15	3210	18	3702	20	4271
	43	317	51	318	60	319	70	320	81	322	94	323	110	325
200	7	1571	9	1864	10	2184	12	2533	13	2922	15	3360	18	3861
	37	305	44	306	51	307	60	308	69	309	80	311	93	312
180	6	1434	8	1699	9	1988	10	2303	12	2652	14	3042	16	3486
	31	293	37	294	44	295	51	296	59	297	68	298	78	299
160	6	1301	7	1541	8	1801	9	2084	11	2397	12	2745	14	3138
	27	280	32	281	37	282	43	283	50	284	57	285	66	286
140	5	1172	6	1387	7	1620	8	1873	9	2151	11	2461	12	2809
	22	266	26	267	31	268	36	269	41	270	48	271	55	273
120	4	1046	5	1237	6	1443	7	1668	8	1915	9	2189	10	2495
	18	251	22	252	25	253	30	254	34	255	39	256	45	258
100	3	840	4	992	5	1157	5	1337	6	1533	7	1750	8	1992
	13	223	15	224	17	225	20	226	23	227	27	229	31	230
50	2	561	2	659	3	765	3	881	4	1007	4	1144	5	1294
	6	185	8	185	9	186	10	187	12	189	13	191	15	193
15	1	364	1	424	2	491	2	563	2	642	2	726	3	816
	3	127	3	126	3	127	4	128	5	129	5	131	6	133

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 3 %	△FUEL = + 4 %	△FUEL = + 8 %

11.3-08F0A330-200 CF6-80E1A4 21100000C5KG300 0 018590 0 0 9 1.0 500.0 300.00 1 03250.000300.000 .800 15 FCOM-G0-03-05-10-013-215

DERATED CLIMB 2 - 250KT/300KT/M.80

DERATED CLIMB 2 THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+20
CG=30.0%

FROM BRAKE RELEASE
TIME (MIN) **FUEL (KG)**
DISTANCE (NM) **TAS (KT)**

WEIGHT AT BRAKE RELEASE (1000KG)

FL	120	140	160	180	200	220	240
410	21 3377 146 410	27 4162 184 413	34 5163 236 418				
390	19 3193 130 403	24 3900 162 406	30 4748 201 409	37 5855 257 415			
370	18 3027 118 396	22 3676 145 398	27 4434 177 401	32 5361 219 405	41 6593 278 411		
350	17 2880 108 389	20 3485 131 392	24 4181 160 394	29 5011 194 397	36 6054 240 402	45 7469 305 408	
330	15 2745 99 383	19 3313 121 385	23 3962 146 387	27 4725 176 390	33 5663 215 394	40 6880 268 399	51 8607 347 406
310	15 2614 91 376	18 3149 111 378	21 3757 134 380	25 4466 161 383	30 5329 195 386	37 6429 241 391	46 7940 307 397
290	13 2438 81 366	16 2930 98 368	19 3486 118 370	23 4129 142 372	27 4901 171 376	33 5868 209 380	41 7163 263 386
270	12 2250 71 354	14 2697 85 356	17 3198 102 358	20 3770 122 360	24 4444 145 363	29 5268 175 366	35 6328 216 371
250	11 2061 60 341	13 2464 73 342	15 2911 86 344	18 3413 102 346	21 3992 120 348	24 4677 143 350	29 5517 172 354
240	10 1972 56 335	12 2355 67 336	14 2777 79 337	17 3249 93 339	19 3789 110 341	23 4421 130 343	27 5182 154 346
220	9 1805 48 322	11 2150 57 323	12 2530 67 324	15 2950 79 326	17 3426 92 327	20 3973 108 329	23 4617 127 331
200	8 1648 41 309	9 1961 49 311	11 2303 57 312	13 2679 67 313	15 3101 78 314	17 3582 91 316	20 4140 106 317
180	7 1500 35 297	8 1782 41 298	10 2090 49 299	11 2427 57 300	13 2804 66 301	15 3229 76 302	17 3717 88 304
160	6 1357 29 284	7 1611 35 285	9 1887 41 286	10 2189 48 286	12 2524 55 288	13 2901 64 289	15 3330 74 290
140	5 1219 24 270	6 1446 29 270	8 1692 34 271	9 1961 40 272	10 2259 46 273	12 2591 53 275	13 2968 61 276
120	5 1085 20 254	6 1286 24 255	7 1504 28 256	8 1742 32 257	9 2004 37 258	10 2296 43 259	11 2627 50 261
100	4 868 14 225	4 1028 16 226	5 1201 19 227	6 1390 22 229	7 1597 26 230	8 1827 29 231	9 2086 34 233
50	2 577 7 187	3 680 8 188	3 792 10 188	4 913 11 190	4 1045 13 191	5 1189 15 193	5 1347 17 195
15	1 373 3 128	2 436 3 128	2 506 4 128	2 581 4 129	2 663 5 130	3 750 6 132	3 843 6 134

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 3 %	△FUEL = + 4 %	△FUEL = + 8 %

11.3-08F0A330-200 CF6-80E1A4 21100000C5KG300 0 018590 0 0 9 1.0 500.0 300.00 1 03250.000300.000 .800 20 FCOM-G0-03-05-10-014-215

GENERAL

Cruise tables are established :

- for ISA, ISA + 10, ISA + 15 and ISA + 20
- with normal air conditioning and anti ice OFF
- from FL290 to FL410 at M 0.80, M 0.82 and M 0.84
- from FL100 to FL410 at long range speed
- with a 30 % center of gravity below 25 000 feet and a 37 % center of gravity at higher altitudes.

OPTIMUM MACH NUMBER

Six tables give the optimum Mach number versus cost index, altitude and wind as calculated by the FMGC.

R

COST INDEX = 0 (MAXIMUM RANGE)

WEIGHT/WIND		FLIGHT LEVEL					
1000kg	kt	310	330	350	370	390	410
120	100.	.563	.590	.618	.646	.678	.707
	50.	.574	.601	.631	.659	.690	.718
	0.	.589	.615	.644	.671	.700	.728
	-50.	.617	.641	.666	.691	.716	.740
	-100.	.660	.683	.708	.729	.749	.765
140	100.	.609	.636	.666	.696	.725	.753
	50.	.621	.648	.678	.707	.735	.760
	0.	.634	.661	.689	.717	.744	.768
	-50.	.657	.681	.706	.731	.754	.776
	-100.	.698	.721	.742	.759	.774	.786
160	100.	.649	.678	.707	.737	.763	.787
	50.	.661	.690	.718	.745	.769	.789
	0.	.673	.701	.728	.755	.775	.793
	-50.	.692	.716	.740	.763	.782	.797
	-100.	.729	.749	.765	.779	.791	.801
180	100.	.686	.715	.743	.769	.791	
	50.	.698	.725	.751	.774	.793	
	0.	.708	.734	.759	.779	.796	
	-50.	.723	.746	.768	.786	.799	
	-100.	.753	.768	.782	.793	.803	
200	100.	.719	.746	.772	.793		
	50.	.729	.754	.776	.795		
	0.	.738	.762	.781	.798		
	-50.	.749	.770	.787	.801		
	-100.	.770	.783	.794	.804		
220	100.	.747	.772	.793			
	50.	.754	.776	.795			
	0.	.762	.782	.798			
	-50.	.771	.787	.800			
	-100.	.783	.794	.804			
240	100.	.770	.791				
	50.	.775	.794				
	0.	.780	.796				
	-50.	.786	.799				
	-100.	.793	.803				

COST INDEX = 100 kg/min

WEIGHT/WIND		FLIGHT LEVEL					
1000kg	kt	310	330	350	370	390	410
120	100.	.758	.770	.783	.794	.802	.809
	50.	.771	.784	.795	.803	.809	.813
	0.	.787	.797	.806	.810	.814	.818
	-50.	.802	.807	.813	.817	.821	.824
	-100.	.811	.816	.821	.824	.826	.828
140	100.	.768	.779	.790	.799	.806	.811
	50.	.779	.790	.800	.806	.811	.815
	0.	.793	.801	.808	.812	.816	.819
	-50.	.805	.810	.814	.818	.821	.824
	-100.	.813	.817	.822	.824	.826	.828
160	100.	.776	.786	.796	.804	.809	.813
	50.	.786	.795	.803	.809	.813	.816
	0.	.797	.804	.810	.814	.817	.819
	-50.	.807	.811	.815	.819	.821	.822
	-100.	.814	.818	.822	.825	.826	.825
180	100.	.784	.793	.801	.807	.812	
	50.	.791	.800	.807	.811	.815	
	0.	.801	.807	.812	.815	.817	
	-50.	.809	.813	.817	.819	.820	
	-100.	.815	.819	.822	.824	.823	
200	100.	.790	.799	.805	.811		
	50.	.797	.804	.809	.813		
	0.	.804	.809	.813	.816		
	-50.	.811	.814	.817	.819		
	-100.	.817	.820	.822	.822		
220	100.	.796	.803	.810			
	50.	.801	.807	.812			
	0.	.807	.811	.815			
	-50.	.812	.815	.817			
	-100.	.817	.820	.821			
240	100.	.801	.808				
	50.	.805	.811				
	0.	.809	.813				
	-50.	.814	.816				
	-100.	.818	.819				

R

COST INDEX = 200 kg/min								COST INDEX = 300 kg/min							
		FLIGHT LEVEL								FLIGHT LEVEL					
WEIGHT/WIND								WEIGHT/WIND							
1000kg	kt	310	330	350	370	390	410	1000kg	kt	310	330	350	370	390	410
120	100.	.810	.816	.822	.825	.827	.829	120	100.	.827	.829	.832	.834	.837	.840
	50.	.818	.824	.826	.827	.829	.832		50.	.830	.832	.835	.838	.840	.840
	0.	.825	.827	.828	.830	.833	.835		0.	.833	.836	.839	.840	.840	.840
	-50.	.828	.829	.832	.834	.837	.839		-50.	.837	.840	.840	.840	.840	.840
	-100.	.831	.833	.836	.839	.840	.840		-100.	.840	.840	.840	.840	.840	.840
140	100.	.812	.817	.822	.825	.827	.829	140	100.	.827	.829	.831	.834	.837	.838
	50.	.818	.823	.825	.827	.830	.832		50.	.830	.832	.835	.838	.840	.840
	0.	.825	.826	.828	.831	.833	.835		0.	.833	.835	.838	.840	.840	.840
	-50.	.827	.829	.832	.834	.837	.838		-50.	.837	.840	.840	.840	.840	.840
	-100.	.831	.833	.836	.839	.840	.840		-100.	.840	.840	.840	.840	.840	.840
160	100.	.813	.818	.822	.825	.826	.826	160	100.	.827	.829	.832	.834	.835	.833
	50.	.819	.823	.825	.827	.829	.828		50.	.829	.832	.835	.837	.837	.835
	0.	.824	.826	.828	.831	.832	.830		0.	.833	.835	.838	.840	.840	.837
	-50.	.827	.829	.832	.834	.835	.832		-50.	.837	.840	.840	.840	.840	.839
	-100.	.831	.833	.836	.838	.838	.835		-100.	.840	.840	.840	.840	.840	.840
180	100.	.814	.818	.822	.824	.823		180	100.	.827	.829	.832	.832	.830	
	50.	.819	.823	.825	.826	.825			50.	.829	.832	.834	.835	.831	
	0.	.824	.826	.828	.829	.828			0.	.833	.835	.837	.837	.834	
	-50.	.827	.830	.832	.833	.830			-50.	.836	.839	.840	.840	.835	
	-100.	.831	.834	.836	.836	.832			-100.	.840	.840	.840	.840	.835	
200	100.	.815	.819	.821	.821			200	100.	.827	.829	.830	.828		
	50.	.819	.823	.824	.823				50.	.830	.832	.832	.829		
	0.	.824	.826	.827	.826				0.	.833	.835	.835	.831		
	-50.	.827	.830	.831	.828				-50.	.837	.838	.838	.834		
	-100.	.832	.834	.834	.830				-100.	.840	.840	.840	.834		
220	100.	.816	.818	.820				220	100.	.826	.828	.826			
	50.	.820	.822	.822					50.	.829	.831	.828			
	0.	.824	.825	.824					0.	.833	.833	.830			
	-50.	.827	.828	.827					-50.	.836	.836	.832			
	-100.	.831	.832	.829					-100.	.840	.839	.832			
240	100.	.816	.818					240	100.	.825	.825				
	50.	.819	.821						50.	.828	.827				
	0.	.823	.823						0.	.831	.829				
	-50.	.826	.826						-50.	.834	.831				
	-100.	.830	.828						-100.	.837	.831				

GENERAL

Cruise tables are established :
- for ISA, ISA + 10, ISA + 15 and ISA + 20
- with normal air conditioning and anti ice OFF
- from FL290 to FL410 at M 0.80, M 0.82 and M 0.84
- from FL100 to FL410 at long range speed
- with a 30 % center of gravity below 25 000 feet and a 37 % center of gravity at higher altitudes.

OPTIMUM MACH NUMBER

Six tables give the optimum Mach number versus cost index, altitude and wind as calculated by the FMGC.

COST INDEX = 0 (MAXIMUM RANGE)

WEIGHT/WIND		FLIGHT LEVEL					
1000kg	kt	310	330	350	370	390	410
120	100	.574	.600	.630	.661	.692	.718
	50	.588	.616	.646	.674	.704	.730
	0	.606	.635	.665	.691	.719	.748
	–50	.634	.662	.690	.716	.743	.765
	–100	.681	.704	.728	.748	.767	.781
140	100	.620	.649	.682	.708	.735	.763
	50	.636	.663	.694	.720	.748	.773
	0	.656	.681	.708	.736	.763	.783
	–50	.681	.706	.733	.756	.777	.792
	–100	.719	.740	.760	.776	.789	.800
160	100	.663	.693	.718	.746	.775	.794
	50	.676	.705	.730	.760	.783	.798
	0	.693	.719	.747	.772	.790	.803
	–50	.717	.743	.765	.784	.797	.807
	–100	.748	.766	.781	.794	.804	.811
180	100	.700	.725	.753	.779	.797	
	50	.711	.737	.765	.786	.801	
	0	.727	.755	.776	.793	.805	
	–50	.748	.771	.787	.799	.808	
	–100	.770	.785	.796	.805	.812	
200	100	.729	.756	.781	.798		
	50	.741	.768	.788	.802		
	0	.758	.778	.794	.805		
	–50	.773	.788	.800	.809		
	–100	.786	.797	.806	.813		
220	100	.757	.781	.798			
	50	.768	.788	.802			
	0	.779	.794	.805			
	–50	.788	.800	.809			
	–100	.797	.806	.813			
240	100	.780	.797				
	50	.787	.801				
	0	.793	.805				
	–50	.800	.808				
	–100	.805	.812				

COST INDEX = 100 kg/min

WEIGHT/WIND		FLIGHT LEVEL					
1000kg	kt	310	330	350	370	390	410
120	100	.781	.792	.799	.807	.812	.817
	50	.793	.801	.807	.812	.817	.822
	0	.803	.808	.813	.818	.822	.825
	–50	.810	.816	.821	.823	.826	.829
	–100	.819	.822	.825	.828	.831	.834
140	100	.786	.797	.804	.811	.816	.820
	50	.797	.804	.811	.816	.820	.823
	0	.806	.811	.816	.820	.824	.826
	–50	.813	.818	.822	.825	.827	.829
	–100	.820	.823	.826	.829	.832	.833
160	100	.793	.802	.809	.815	.819	.822
	50	.801	.808	.814	.818	.822	.824
	0	.809	.814	.818	.822	.825	.825
	–50	.815	.819	.823	.826	.828	.827
	–100	.822	.824	.827	.830	.831	.830
180	100	.799	.807	.813	.818	.820	
	50	.806	.812	.817	.820	.822	
	0	.812	.817	.820	.823	.824	
	–50	.817	.822	.825	.826	.826	
	–100	.823	.826	.828	.829	.828	
200	100	.804	.811	.816	.819		
	50	.810	.815	.819	.821		
	0	.815	.819	.822	.823		
	–50	.819	.823	.825	.825		
	–100	.824	.827	.828	.827		
220	100	.809	.814	.818			
	50	.813	.817	.820			
	0	.817	.820	.822			
	–50	.821	.824	.824			
	–100	.825	.826	.826			
240	100	.813	.817				
	50	.816	.819				
	0	.819	.821				
	–50	.822	.823				
	–100	.825	.825				

COST INDEX = 200 kg/min							
		FLIGHT LEVEL					
WEIGHT/WIND							
1000kg	kt	310	330	350	370	390	410
120	100	.819	.822	.825	.829	.832	.835
	50	.822	.825	.829	.832	.836	.839
	0	.826	.829	.833	.837	.840	.840
	–50	.831	.834	.838	.840	.840	.840
	–100	.837	.840	.840	.840	.840	.840
140	100	.820	.823	.826	.830	.832	.834
	50	.823	.826	.830	.833	.836	.837
	0	.827	.830	.834	.837	.840	.840
	–50	.831	.835	.839	.840	.840	.840
	–100	.837	.840	.840	.840	.840	.840
160	100	.821	.824	.827	.830	.831	.830
	50	.824	.827	.831	.833	.834	.832
	0	.828	.831	.834	.837	.837	.834
	–50	.832	.836	.839	.840	.840	.837
	–100	.838	.840	.840	.840	.840	.840
180	100	.822	.825	.828	.829	.828	
	50	.825	.828	.831	.831	.829	
	0	.829	.832	.834	.834	.831	
	–50	.833	.836	.838	.838	.834	
	–100	.838	.840	.840	.840	.835	
200	100	.823	.826	.827	.826		
	50	.826	.828	.829	.828		
	0	.829	.831	.832	.830		
	–50	.833	.835	.835	.832		
	–100	.838	.840	.839	.834		
220	100	.824	.826	.825			
	50	.826	.828	.827			
	0	.829	.830	.828			
	–50	.833	.833	.830			
	–100	.837	.837	.832			
240	100	.824	.824				
	50	.826	.826				
	0	.829	.827				
	–50	.831	.829				
	–100	.835	.831				

COST INDEX = 300 kg/min							
		FLIGHT LEVEL					
WEIGHT/WIND							
1000kg	kt	310	330	350	370	390	410
120	100	.830	.834	.838	.840	.840	.840
	50	.835	.839	.840	.840	.840	.840
	0	.840	.840	.840	.840	.840	.840
	–50	.840	.840	.840	.840	.840	.840
	–100	.840	.840	.840	.840	.840	.840
140	100	.831	.835	.839	.840	.840	.840
	50	.835	.839	.840	.840	.840	.840
	0	.840	.840	.840	.840	.840	.840
	–50	.840	.840	.840	.840	.840	.840
	–100	.840	.840	.840	.840	.840	.840
160	100	.832	.835	.839	.840	.840	.837
	50	.836	.840	.840	.840	.840	.839
	0	.840	.840	.840	.840	.840	.840
	–50	.840	.840	.840	.840	.840	.840
	–100	.840	.840	.840	.840	.840	.840
180	100	.832	.836	.838	.837	.834	
	50	.836	.839	.840	.840	.835	
	0	.840	.840	.840	.840	.835	
	–50	.840	.840	.840	.840	.835	
	–100	.840	.840	.840	.840	.835	
200	100	.833	.835	.835	.831		
	50	.836	.838	.837	.833		
	0	.840	.840	.840	.834		
	–50	.840	.840	.840	.834		
	–100	.840	.840	.840	.834		
220	100	.832	.832	.830			
	50	.835	.835	.832			
	0	.839	.838	.832			
	–50	.840	.840	.832			
	–100	.840	.840	.832			
240	100	.831	.829				
	50	.833	.831				
	0	.836	.831				
	–50	.839	.831				
	–100	.840	.831				

R

COST INDEX = 400 kg/min

WEIGHT/WIND		FLIGHT LEVEL					
1000kg	kt	310	330	350	370	390	410
120	100.	.834	.837	.840	.840	.840	.840
	50.	.838	.840	.840	.840	.840	.840
	0.	.840	.840	.840	.840	.840	.840
	-50.	.840	.840	.840	.840	.840	.840
	-100.	.840	.840	.840	.840	.840	.840
140	100.	.834	.837	.840	.840	.840	.840
	50.	.837	.840	.840	.840	.840	.840
	0.	.840	.840	.840	.840	.840	.840
	-50.	.840	.840	.840	.840	.840	.840
	-100.	.840	.840	.840	.840	.840	.840
160	100.	.834	.837	.840	.840	.840	.838
	50.	.837	.840	.840	.840	.840	.839
	0.	.840	.840	.840	.840	.840	.840
	-50.	.840	.840	.840	.840	.840	.840
	-100.	.840	.840	.840	.840	.840	.840
180	100.	.834	.837	.839	.839	.835	
	50.	.837	.840	.840	.840	.835	
	0.	.840	.840	.840	.840	.835	
	-50.	.840	.840	.840	.840	.835	
	-100.	.840	.840	.840	.840	.835	
200	100.	.834	.836	.836	.832		
	50.	.837	.839	.838	.834		
	0.	.840	.840	.840	.834		
	-50.	.840	.840	.840	.834		
	-100.	.840	.840	.840	.834		
220	100.	.834	.834	.830			
	50.	.836	.836	.832			
	0.	.839	.839	.832			
	-50.	.840	.840	.832			
	-100.	.840	.840	.832			
240	100.	.832	.829				
	50.	.834	.831				
	0.	.837	.831				
	-50.	.840	.831				
	-100.	.840	.831				

COST INDEX = 500 kg/min

WEIGHT/WIND		FLIGHT LEVEL					
1000kg	kt	310	330	350	370	390	410
120	100.	.840	.840	.840	.840	.840	.840
	50.	.840	.840	.840	.840	.840	.840
	0.	.840	.840	.840	.840	.840	.840
	-50.	.840	.840	.840	.840	.840	.840
	-100.	.840	.840	.840	.840	.840	.840
140	100.	.840	.840	.840	.840	.840	.840
	50.	.840	.840	.840	.840	.840	.840
	0.	.840	.840	.840	.840	.840	.840
	-50.	.840	.840	.840	.840	.840	.840
	-100.	.840	.840	.840	.840	.840	.840
160	100.	.840	.840	.840	.840	.840	.840
	50.	.840	.840	.840	.840	.840	.840
	0.	.840	.840	.840	.840	.840	.840
	-50.	.840	.840	.840	.840	.840	.840
	-100.	.840	.840	.840	.840	.840	.840
180	100.	.840	.840	.840	.840	.835	
	50.	.840	.840	.840	.840	.835	
	0.	.840	.840	.840	.840	.835	
	-50.	.840	.840	.840	.840	.835	
	-100.	.840	.840	.840	.840	.835	
200	100.	.840	.840	.840	.834		
	50.	.840	.840	.840	.834		
	0.	.840	.840	.840	.834		
	-50.	.840	.840	.840	.834		
	-100.	.840	.840	.840	.834		
220	100.	.839	.839	.832			
	50.	.840	.840	.832			
	0.	.840	.840	.832			
	-50.	.840	.840	.832			
	-100.	.840	.840	.832			
240	100.	.836	.831				
	50.	.839	.831				
	0.	.840	.831				
	-50.	.840	.831				
	-100.	.840	.831				

OPTIMUM AND MAXIMUM ALTITUDE

DEFINITIONS

- Optimum altitude : the altitude at which the airplane covers the maximum distance per kilogram of fuel (best specific range). It depends on the actual weight and the deviation from ISA.
- Maximum altitude is defined as the lower of :
  - maximum altitude at maximum cruise thrust in level flight and
  - maximum altitude at maximum climb thrust with 300 feet/minute vertical speed.

Note : Definition of the maximum altitude in the FMGC is different (Refer to FCOM 4).

CRUISE LEVEL CHARTS

These charts have been established for a center of gravity at 37 % MAC.
Maximum and optimum altitudes are given for different temperatures at long range speed and M.80, M.82, M.84

Note : 1. Optimum and maximum altitude curves do not cover for M.80, M.82 and M.84 the whole weight range because above a given weight these Mach numbers cannot be maintained, whatever the altitude.
2. The n = 1.3 g (n = 1.4 g) curve indicates the buffet margin.

OPTIMUM WEIGHT FOR 4000 FEET STEP CLIMB

R

STEP CLIMB FROM/TO	WEIGHT (1000 kg)											
	≤ ISA + 10				ISA + 15				ISA + 20			
	LR	M.80	M.82	M.84	LR	M.80	M.82	M.84	LR	M.80	M.82	M.84
310/350	236	235	232	212	228	224	217	194	216	203	190	162
330/370	215	213	213	194	208	205	199	178	196	186	175	148
350/390	191	193	192	175	187	183	175	157	176	166	155	129
370/410	176	176	175	159	170	167	161	144	161	151	141	126

BLEED CORRECTIONS

	ENG ANTI ICE ON	TOTAL ANTI ICE ON	PACK FLOW HI AND/OR CARGO COOL ON
≤ ISA + 9	– 100 ft	– 300 ft	– 400 ft
ISA + 15	– 1100 ft	– 1300 ft	– 600 ft
ISA + 20	– 1300 ft	– 1700 ft	– 1200 ft

COST INDEX = 400 kg/min								COST INDEX = 500 kg/min							
		FLIGHT LEVEL								FLIGHT LEVEL					
WEIGHT/WIND								WEIGHT/WIND							
1000kg	kt	310	330	350	370	390	410	1000kg	kt	310	330	350	370	390	410
120	100	.840	.840	.840	.840	.840	.840	120	100	.840	.840	.840	.840	.840	.840
	50	.840	.840	.840	.840	.840	.840		50	.840	.840	.840	.840	.840	.840
	0	.840	.840	.840	.840	.840	.840		0	.840	.840	.840	.840	.840	.840
	–50	.840	.840	.840	.840	.840	.840		–50	.840	.840	.840	.840	.840	.840
	–100	.840	.840	.840	.840	.840	.840		–100	.840	.840	.840	.840	.840	.840
140	100	.840	.840	.840	.840	.840	.840	140	100	.840	.840	.840	.840	.840	.840
	50	.840	.840	.840	.840	.840	.840		50	.840	.840	.840	.840	.840	.840
	0	.840	.840	.840	.840	.840	.840		0	.840	.840	.840	.840	.840	.840
	–50	.840	.840	.840	.840	.840	.840		–50	.840	.840	.840	.840	.840	.840
	–100	.840	.840	.840	.840	.840	.840		–100	.840	.840	.840	.840	.840	.840
160	100	.840	.840	.840	.840	.840	.840	160	100	.840	.840	.840	.840	.840	.840
	50	.840	.840	.840	.840	.840	.840		50	.840	.840	.840	.840	.840	.840
	0	.840	.840	.840	.840	.840	.840		0	.840	.840	.840	.840	.840	.840
	–50	.840	.840	.840	.840	.840	.840		–50	.840	.840	.840	.840	.840	.840
	–100	.840	.840	.840	.840	.840	.840		–100	.840	.840	.840	.840	.840	.840
180	100	.840	.840	.840	.840	.835		180	100	.840	.840	.840	.840	.835	
	50	.840	.840	.840	.840	.835			50	.840	.840	.840	.840	.835	
	0	.840	.840	.840	.840	.835			0	.840	.840	.840	.840	.835	
	–50	.840	.840	.840	.840	.835			–50	.840	.840	.840	.840	.835	
	–100	.840	.840	.840	.840	.835			–100	.840	.840	.840	.840	.835	
200	100	.840	.840	.840	.834			200	100	.840	.840	.840	.834		
	50	.840	.840	.840	.834				50	.840	.840	.840	.834		
	0	.840	.840	.840	.834				0	.840	.840	.840	.834		
	–50	.840	.840	.840	.834				–50	.840	.840	.840	.834		
	–100	.840	.840	.840	.834				–100	.840	.840	.840	.834		
220	100	.840	.839	.832				220	100	.840	.840	.832			
	50	.840	.840	.832					50	.840	.840	.832			
	0	.840	.840	.832					0	.840	.840	.832			
	–50	.840	.840	.832					–50	.840	.840	.832			
	–100	.840	.840	.832					–100	.840	.840	.832			
240	100	.837	.831					240	100	.840	.831				
	50	.839	.831						50	.840	.831				
	0	.840	.831						0	.840	.831				
	–50	.840	.831						–50	.840	.831				
	–100	.840	.831						–100	.840	.831				

OPTIMUM AND MAXIMUM ALTITUDE

DEFINITIONS

- Optimum altitude : the altitude at which the airplane covers the maximum distance per kilogram of fuel (best specific range). It depends on the actual weight and the deviation from ISA.
- Maximum altitude is defined as the lower of :
  - maximum altitude at maximum cruise thrust in level flight and
  - maximum altitude at maximum climb thrust with 300 feet/minute vertical speed.

Note : Definition of the maximum altitude in the FMGC is different (Refer to FCOM 4).

CRUISE LEVEL CHARTS

These charts have been established for a center of gravity at 37 % MAC.
Maximum and optimum altitudes are given for different temperatures at long range speed and M.80, M.82, M.84

Note : 1. Optimum and maximum altitude curves do not cover for M.80, M.82 and M.84 the whole weight range because above a given weight these Mach numbers cannot be maintained, whatever the altitude.
2. The n = 1.3 g (n = 1.4 g) curve indicates the buffet margin.

OPTIMUM WEIGHT FOR 4000 FEET STEP CLIMB

R

STEP CLIMB FROM/TO	WEIGHT (1000 kg)											
	≤ ISA + 10				ISA + 15				ISA + 20			
	LR	M.80	M.82	M.84	LR	M.80	M.82	M.84	LR	M.80	M.82	M.84
310/350	236	235	232	212	228	224	217	194	216	203	190	162
330/370	215	213	213	194	208	205	199	178	196	186	175	148
350/390	191	193	192	175	187	183	175	157	176	166	155	129
370/410	176	176	175	159	170	167	161	144	161	151	141	126

BLEED CORRECTIONS

	ENG ANTI ICE ON	TOTAL ANTI ICE ON	PACK FLOW HI AND/OR CARGO COOL ON
≤ ISA + 9	– 100 ft	– 300 ft	– 400 ft
ISA + 15	– 1100 ft	– 1300 ft	– 600 ft
ISA + 20	– 1300 ft	– 1700 ft	– 1200 ft

R

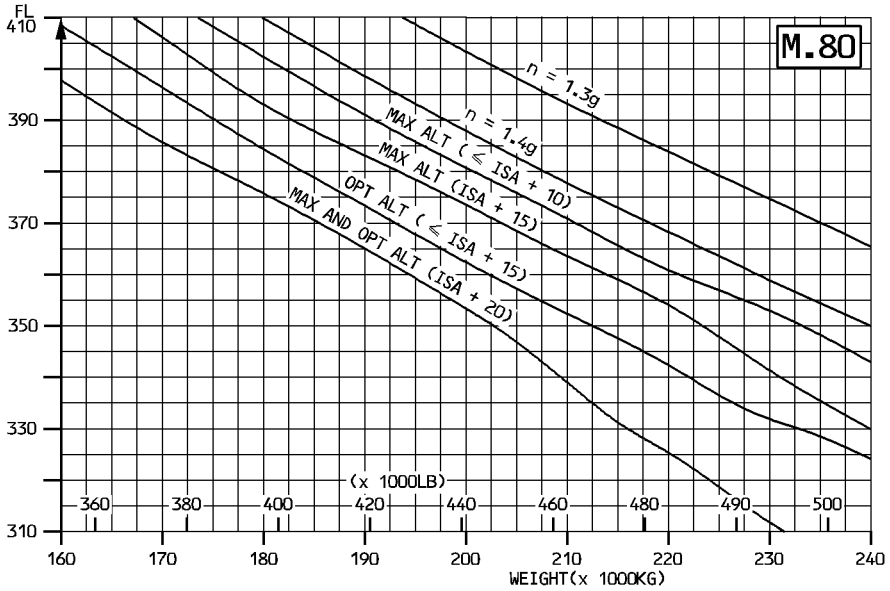

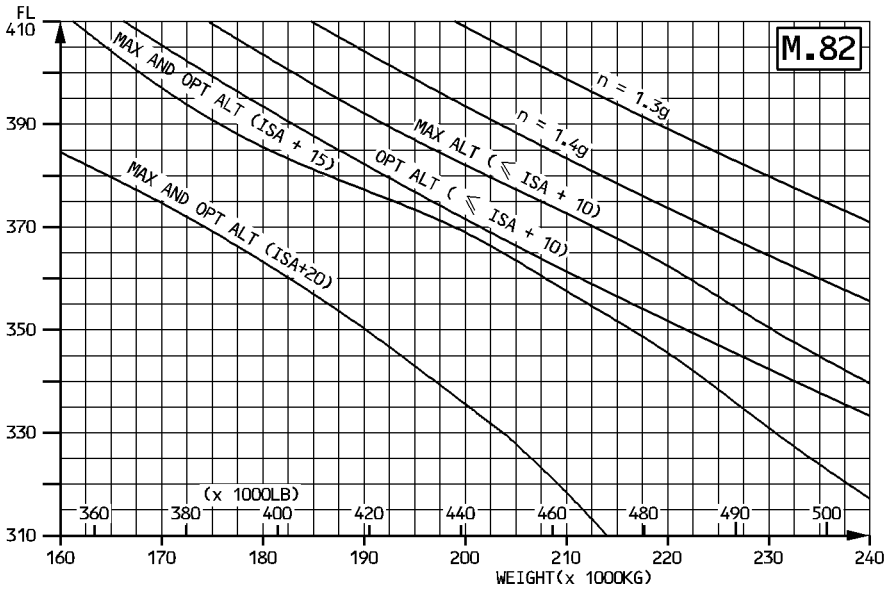

GFC5-03-0515-005-A010AD

R

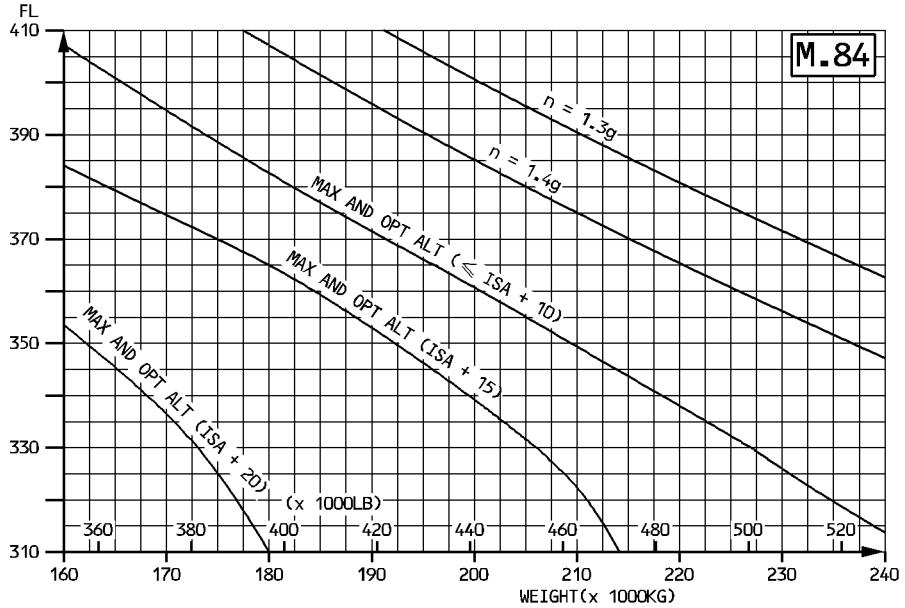
FL
410
390
370
350
330
310
M.84
n = 1.3g
n = 1.4g
MAX AND OPT ALT (≤ ISA + 10)
MAX AND OPT ALT (ISA + 15)
MAX AND OPT ALT (ISA + 20)
(x 1000LB)
360
380
400
420
440
460
480
500
520
160
170
180
190
200
210
220
230
240
WEIGHT(x 1000KG)

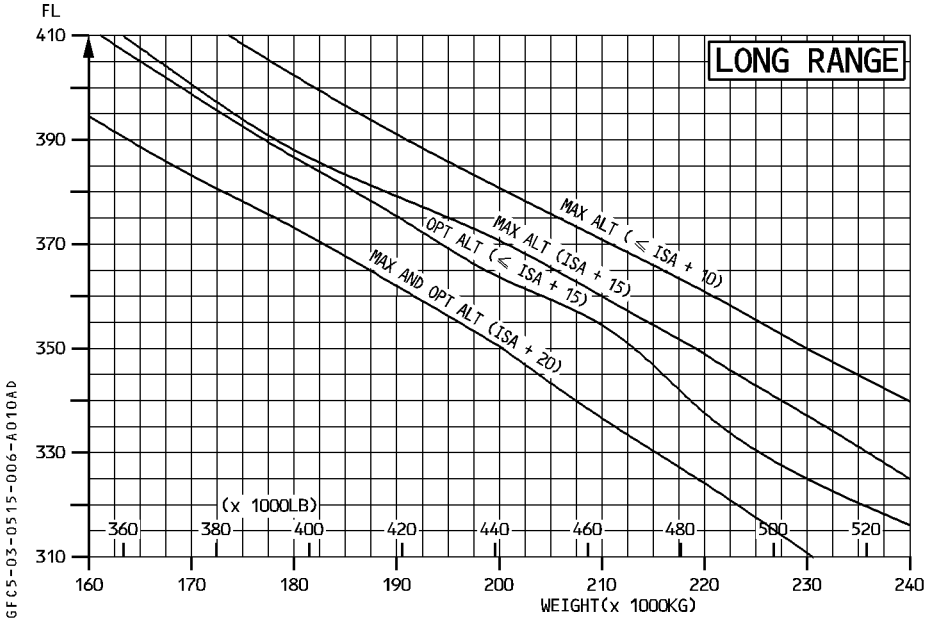
FL
410
390
370
350
330
310
LONG RANGE
MAX ALT (≤ ISA + 10)
MAX ALT (ISA + 15)
OPT ALT (≤ ISA + 15)
MAX AND OPT ALT (ISA + 20)
(x 1000LB)
360
380
400
420
440
460
480
500
520
160
170
180
190
200
210
220
230
240
WEIGHT(x 1000KG)
GFC5-03-0515-006-A010AD

WIND ALTITUDE TRADE FOR CONSTANT SPECIFIC RANGE

R

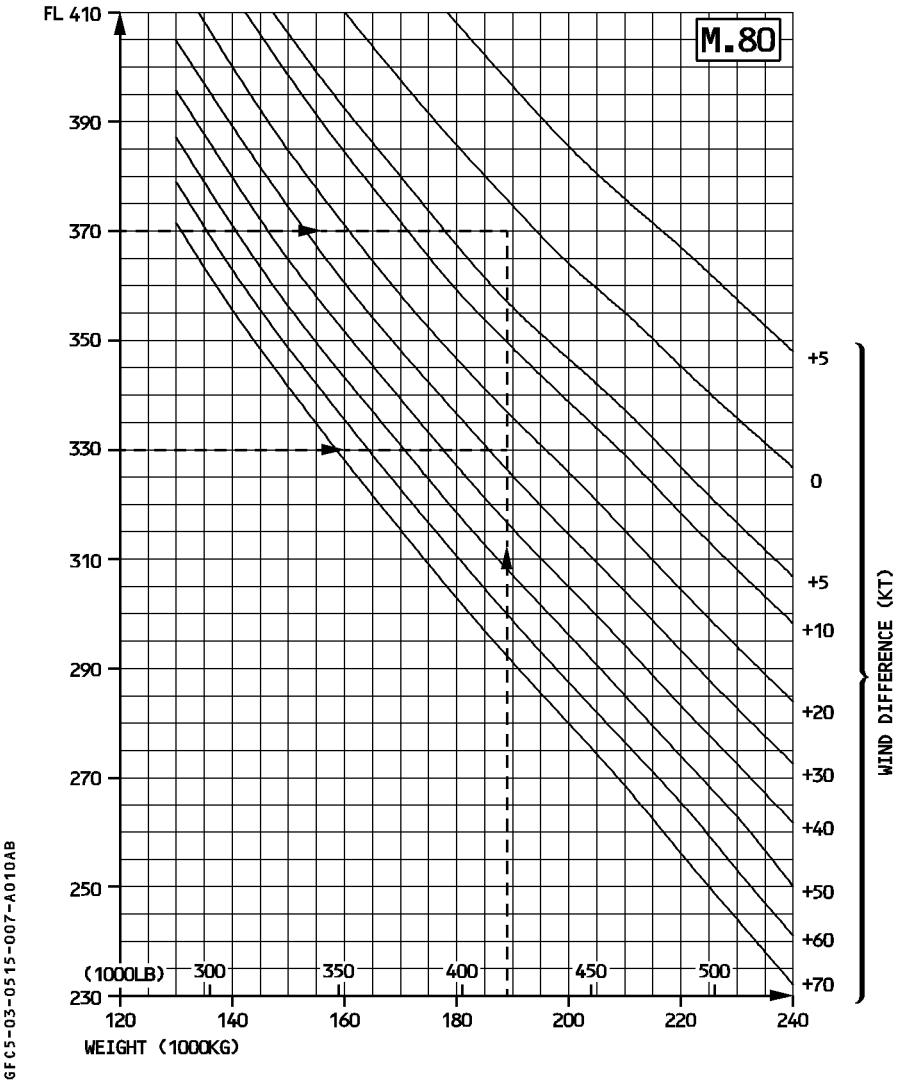

GIVEN : Weight : 188 000 kg (415 000 lb)
Wind at FL370 : 10 kt head

FIND : Minimum wind difference to descend to FL330 : (27– 2) = 25 kt

RESULTS : Descent to FL330 may be considered provided the tailwind at this altitude is more than (25 – 10) = 15 kt.

R

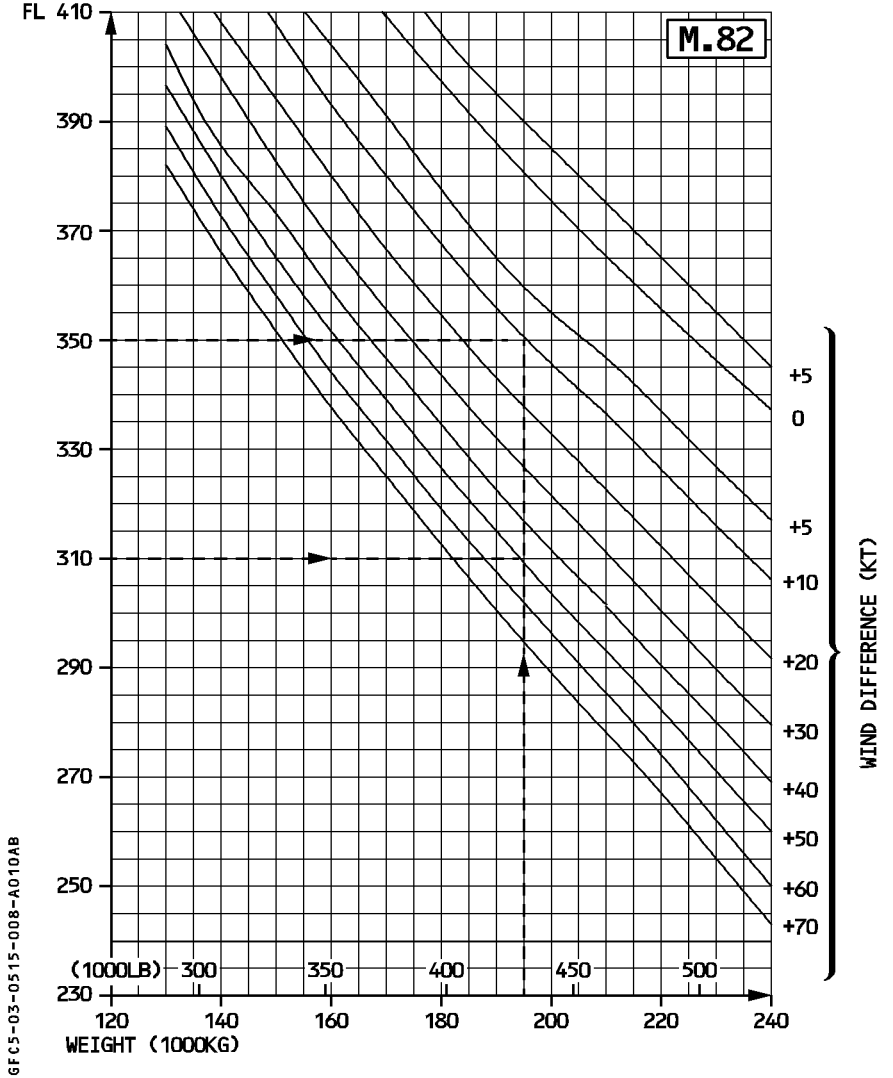

GIVEN : Weight : 195 000 kg (430 000 lb)
Wind at FL350 : 15 kt head

FIND : Minimum wind difference to descend to FL310 : (49 – 11) = 38 kt

RESULTS : Descent to FL310 may be considered provided the tailwind at this altitude is more than (38 – 15) = 23 kt.

R

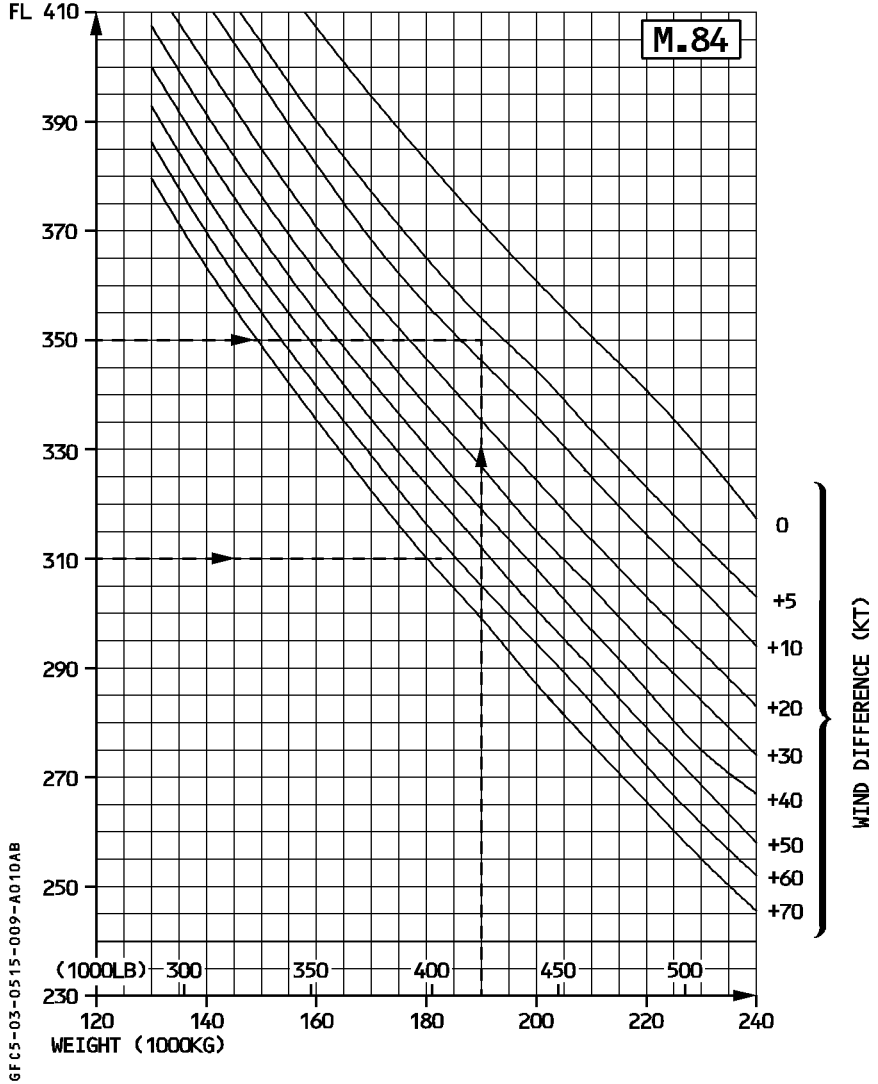

GIVEN : Weight : 190 000 kg (419 000 lb)
Wind at FL350 : 10 kt head

FIND : Minimum wind difference to descend to FL310 : (53 – 8) = 45 kt

RESULTS : Descent to FL310 may be considered provided the tailwind at this altitude is more than (45 – 10) = 35 kt.

OPTIMUM ALTITUDE ON SHORT STAGE

According to the air distance (from brake release point to landing), the cruise flight level is limited by the distance required to perform climb and descent. The graph determines the optimum altitude.

It includes the following profiles :

- Takeoff
- Climb : 250kt/300kt/M.80
- Long range cruise (during at least 5 minutes)
- Descent : M.80/300kt/250kt
- Approach and landing

and it is established for

- ISA
- CG = 37 %
- Normal air conditioning
- Anti ice OFF

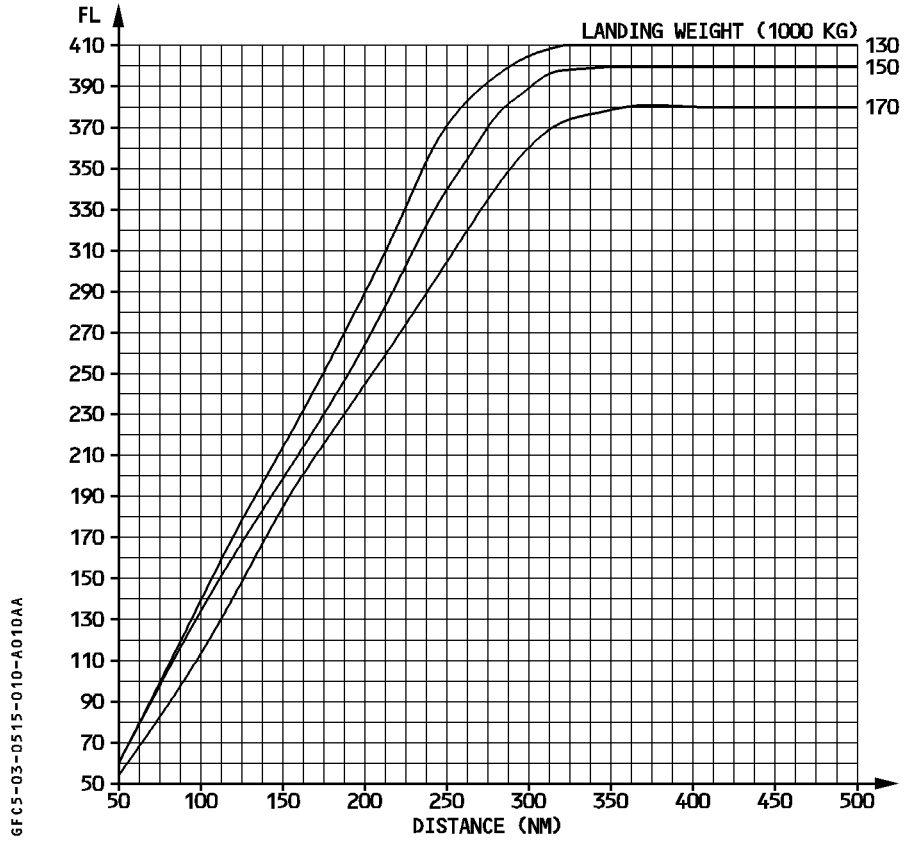

R

CRUISE - M.80

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	88.1	.800	87.9	.800	87.8	.800	87.7	.800	88.1	.800	89.2	.800	90.3	.800
	2823	311	2623	297	2443	284	2275	272	2139	260	2036	248	1949	237
	83.9	473	89.5	469	95.2	465	101.4	461	107.3	459	112.7	459	117.7	459
140	88.4	.800	88.3	.800	88.3	.800	88.3	.800	88.8	.800	90.0	.800	91.3	.800
	2867	311	2672	297	2491	284	2330	272	2203	260	2108	248	2033	237
	82.6	473	87.8	469	93.4	465	98.9	461	104.1	459	108.8	459	112.8	459
150	88.8	.800	88.8	.800	88.8	.800	88.9	.800	89.6	.800	90.9	.800	92.3	.800
	2916	311	2722	297	2546	284	2395	272	2274	260	2189	248	2127	237
	81.2	473	86.2	469	91.4	465	96.3	461	100.9	459	104.8	459	107.9	459
160	89.3	.800	89.3	.800	89.4	.800	89.6	.800	90.4	.800	91.8	.800	93.7	.800
	2968	311	2775	297	2609	284	2464	272	2351	260	2280	248	2245	237
	79.8	473	84.6	469	89.2	465	93.6	461	97.6	459	100.6	459	102.2	459
170	89.7	.800	89.8	.800	90.0	.800	90.3	.800	91.2	.800	92.9	.800	95.4	.800
	3020	311	2836	297	2678	284	2540	272	2439	260	2384	248	2392	237
	78.4	473	82.8	469	86.9	465	90.8	461	94.1	459	96.2	459	95.9	459
180	90.2	.800	90.3	.800	90.6	.800	91.1	.800	92.1	.800	94.2	.800		
	3079	311	2905	297	2753	284	2623	272	2535	260	2515	248		
	76.9	473	80.8	469	84.5	465	87.9	461	90.5	459	91.2	459		
190	90.7	.800	90.9	.800	91.3	.800	91.9	.800	93.2	.800	96.0	.800		
	3145	311	2979	297	2833	284	2716	272	2649	260	2671	248		
	75.3	473	78.8	469	82.1	465	84.9	461	86.6	459	85.9	459		
200	91.2	.800	91.5	.800	92.0	.800	92.7	.800	94.5	.800				
	3218	311	3058	297	2923	284	2817	272	2787	260				
	73.6	473	76.8	469	79.6	465	81.9	461	82.3	459				
210	91.7	.800	92.2	.800	92.8	.800	93.8	.800	96.2	.800				
	3296	311	3142	297	3020	284	2938	272	2948	260				
	71.8	473	74.7	469	77.0	465	78.5	461	77.8	459				
220	92.3	.800	92.9	.800	93.6	.800	95.0	.800						
	3379	311	3235	297	3125	284	3080	272						
	70.1	473	72.5	469	74.5	465	74.9	461						
230	93.0	.800	93.6	.800	94.5	.800	96.5	.800						
	3466	311	3336	297	3250	284	3243	272						
	68.3	473	70.3	469	71.6	465	71.1	461						
240	93.6	.800	94.3	.800	95.7	.800								
	3563	311	3444	297	3394	284								
	66.4	473	68.1	469	68.5	465								

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

10E -08F0A330–301 CF6–80E1A2 12100000C5KG370 0 018590 0 0 1 1.0 .0 .00 0 01 .800 .000 .000 0 FCOM-G0–03–05–15–011–010

R

CRUISE - M.80

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	90.0	.800	89.9	.800	89.8	.800	89.8	.800	90.2	.800	91.2	.800	92.5	.800
	2904	311	2699	297	2513	284	2339	272	2202	260	2096	248	2008	237
	83.3	484	88.9	480	94.6	476	100.8	472	106.6	469	111.9	469	116.9	469
140	90.4	.800	90.3	.800	90.3	.800	90.4	.800	90.9	.800	92.1	.800	93.4	.800
	2950	311	2749	297	2563	284	2398	272	2269	260	2170	248	2095	237
	82.0	484	87.2	480	92.8	476	98.3	472	103.4	469	108.1	469	112.0	469
150	90.8	.800	90.8	.800	90.8	.800	91.0	.800	91.7	.800	93.0	.800	94.5	.800
	3000	311	2801	297	2620	284	2464	272	2342	260	2254	248	2193	237
	80.6	484	85.6	480	90.8	476	95.7	472	100.2	469	104.1	469	107.0	469
160	91.2	.800	91.3	.800	91.4	.800	91.6	.800	92.5	.800	93.9	.800	95.9	.800
	3054	311	2857	297	2686	284	2536	272	2421	260	2348	248	2316	237
	79.2	484	84.0	480	88.5	476	93.0	472	96.9	469	99.9	469	101.3	469
170	91.7	.800	91.8	.800	92.0	.800	92.4	.800	93.3	.800	95.0	.800	97.6	.800
	3108	311	2920	297	2758	284	2615	272	2513	260	2458	248	2468	237
	77.8	484	82.1	480	86.2	476	90.2	472	93.4	469	95.5	469	95.1	469
180	92.2	.800	92.3	.800	92.7	.800	93.2	.800	94.2	.800	96.4	.800		
	3169	311	2991	297	2835	284	2701	272	2613	260	2594	248		
	76.3	484	80.2	480	83.9	476	87.3	472	89.8	469	90.5	469		
190	92.7	.800	92.9	.800	93.4	.800	94.0	.800	95.3	.800	98.2	.800		
	3238	311	3068	297	2918	284	2798	272	2732	260	2755	248		
	74.7	484	78.2	480	81.5	476	84.3	472	85.9	469	85.2	469		
200	93.2	.800	93.6	.800	94.1	.800	94.8	.800	96.7	.800				
	3314	311	3150	297	3011	284	2902	272	2876	260				
	73.0	484	76.1	480	79.0	476	81.2	472	81.6	469				
210	93.8	.800	94.2	.800	94.8	.800	95.9	.800	98.4	.800				
	3394	311	3237	297	3111	284	3029	272	3042	260				
	71.2	484	74.1	480	76.4	476	77.8	472	77.1	469				
220	94.4	.800	94.9	.800	95.7	.800	97.1	.800						
	3481	311	3334	297	3221	284	3177	272						
	69.5	484	71.9	480	73.8	476	74.2	472						
230	95.0	.800	95.6	.800	96.7	.800	98.7	.800						
	3571	311	3439	297	3351	284	3346	272						
	67.7	484	69.7	480	71.0	476	70.5	472						
240	95.6	.800	96.4	.800	97.8	.800								
	3672	311	3551	297	3501	284								
	65.9	484	67.5	480	67.9	476								

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

10E –08F0A330–301 CF6–80E1A2 12100000C5KG370 0 018590 0 0 1 1.0 .0 .00 0 01 .800 .000 .000 10 FCOM-G0–03–05–15–012–010

CRUISE - M.80

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	87.8 .800 2791 311 84.8 473	87.6 .800 2594 297 90.5 469	87.5 .800 2417 284 96.2 465	87.5 .800 2251 272 102.4 461	87.9 .800 2116 260 108.4 459	88.9 .800 2016 248 113.8 459	90.1 .800 1931 237 118.8 459
140	88.2 .800 2835 311 83.5 473	88.0 .800 2643 297 88.8 469	88.0 .800 2465 284 94.4 465	88.1 .800 2305 272 100.0 461	88.6 .800 2181 260 105.2 459	89.7 .800 2087 248 109.9 459	91.1 .800 2014 237 113.9 459
150	88.6 .800 2884 311 82.1 473	88.5 .800 2693 297 87.2 469	88.5 .800 2520 284 92.3 465	88.7 .800 2370 272 97.3 461	89.3 .800 2252 260 101.9 459	90.6 .800 2168 248 105.8 459	92.1 .800 2108 237 108.8 459
160	89.0 .800 2936 311 80.6 473	89.0 .800 2747 297 85.4 469	89.1 .800 2581 284 90.1 465	89.3 .800 2439 272 94.5 461	90.1 .800 2328 260 98.5 459	91.6 .800 2259 248 101.6 459	93.5 .800 2224 237 103.2 459
170	89.4 .800 2989 311 79.2 473	89.5 .800 2806 297 83.7 469	89.7 .800 2651 284 87.8 465	90.1 .800 2515 272 91.7 461	91.0 .800 2416 260 95.0 459	92.6 .800 2361 248 97.2 459	95.2 .800 2372 237 96.7 459
180	89.9 .800 3047 311 77.7 473	90.1 .800 2874 297 81.7 469	90.4 .800 2726 284 85.4 465	90.9 .800 2598 272 88.8 461	91.9 .800 2513 260 91.3 459	94.0 .800 2492 248 92.1 459	
190	90.4 .800 3111 311 76.1 473	90.7 .800 2948 297 79.6 469	91.1 .800 2806 284 82.9 465	91.6 .800 2691 272 85.7 461	92.9 .800 2624 260 87.4 459	95.7 .800 2649 248 86.6 459	
200	91.0 .800 3184 311 74.3 473	91.3 .800 3027 297 77.5 469	91.8 .800 2894 284 80.4 465	92.5 .800 2792 272 82.6 461	94.3 .800 2762 260 83.1 459		
210	91.5 .800 3262 311 72.6 473	91.9 .800 3111 297 75.4 469	92.6 .800 2992 284 77.8 465	93.5 .800 2910 272 79.2 461	95.9 .800 2924 260 78.5 459		
220	92.1 .800 3345 311 70.8 473	92.7 .800 3204 297 73.2 469	93.4 .800 3097 284 75.1 465	94.7 .800 3052 272 75.5 461			
230	92.7 .800 3432 311 69.0 473	93.3 .800 3305 297 71.0 469	94.3 .800 3219 284 72.3 465	96.3 .800 3217 272 71.7 461			
240	93.4 .800 3529 311 67.1 473	94.1 .800 3414 297 68.8 469	95.4 .800 3363 284 69.2 465				

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

11.0–08F0A330–200 CF6–80E1A4 12100000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .800 .000 .000 0 FCOM-G0-03-05-15-011-015

CRUISE - M.80

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	89.7	.800	89.6	.800	89.5	.800	89.5	.800	90.0	.800	91.0	.800	92.2	.800
	2871	311	2669	297	2486	284	2315	272	2179	260	2075	248	1989	237
	84.2	484	89.9	480	95.6	476	101.8	472	107.7	469	113.1	469	118.0	469
140	90.1	.800	90.0	.800	90.0	.800	90.1	.800	90.7	.800	91.8	.800	93.2	.800
	2917	311	2719	297	2536	284	2372	272	2245	260	2149	248	2076	237
	82.9	484	88.2	480	93.8	476	99.4	472	104.5	469	109.2	469	113.1	469
150	90.5	.800	90.5	.800	90.6	.800	90.7	.800	91.4	.800	92.7	.800	94.3	.800
	2967	311	2771	297	2592	284	2439	272	2318	260	2232	248	2173	237
	81.5	484	86.5	480	91.7	476	96.7	472	101.2	469	105.1	469	108.0	469
160	91.0	.800	91.0	.800	91.2	.800	91.4	.800	92.2	.800	93.7	.800	95.6	.800
	3021	311	2827	297	2657	284	2511	272	2398	260	2327	248	2294	237
	80.1	484	84.8	480	89.5	476	93.9	472	97.9	469	100.8	469	102.3	469
170	91.4	.800	91.6	.800	91.8	.800	92.1	.800	93.1	.800	94.8	.800	97.3	.800
	3075	311	2888	297	2729	284	2589	272	2489	260	2434	248	2448	237
	78.6	484	83.0	480	87.1	476	91.1	472	94.3	469	96.4	469	95.9	469
180	91.9	.800	92.1	.800	92.4	.800	92.9	.800	94.0	.800	96.1	.800		
	3136	311	2960	297	2806	284	2675	272	2589	260	2570	248		
	77.1	484	81.0	480	84.7	476	88.1	472	90.6	469	91.3	469		
190	92.4	.800	92.7	.800	93.1	.800	93.7	.800	95.1	.800	97.9	.800		
	3203	311	3036	297	2889	284	2772	272	2706	260	2733	248		
	75.5	484	79.0	480	82.3	476	85.1	472	86.7	469	85.9	469		
200	93.0	.800	93.3	.800	93.9	.800	94.6	.800	96.4	.800				
	3279	311	3118	297	2982	284	2876	272	2849	260				
	73.8	484	76.9	480	79.8	476	82.0	472	82.4	469				
210	93.5	.800	94.0	.800	94.6	.800	95.6	.800	98.1	.800				
	3359	311	3205	297	3083	284	3000	272	3017	260				
	72.0	484	74.8	480	77.1	476	78.6	472	77.8	469				
220	94.1	.800	94.7	.800	95.4	.800	96.9	.800						
	3445	311	3302	297	3191	284	3148	272						
	70.2	484	72.6	480	74.5	476	74.9	472						
230	94.8	.800	95.4	.800	96.4	.800	98.4	.800						
	3536	311	3407	297	3319	284	3318	272						
	68.4	484	70.4	480	71.6	476	71.1	472						
240	95.4	.800	96.2	.800	97.6	.800								
	3636	311	3519	297	3469	284								
	66.5	484	68.2	480	68.5	476								

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

11.0-08F0A330-200 CF6-80E1A4 12100000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .800 .000 .000 10 FCOM-G0-03-05-15-012-015

R

CRUISE - M.80

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	91.0 .800 2946 311 82.9 489	90.8 .800 2738 297 88.5 485	90.8 .800 2550 284 94.3 481	90.8 .800 2374 272 100.4 477	91.2 .800 2234 260 106.2 474	92.3 .800 2128 248 111.5 474	93.5 .800 2039 237 116.4 474
140	91.4 .800 2993 311 81.6 489	91.3 .800 2789 297 86.9 485	91.3 .800 2600 284 92.4 481	91.4 .800 2434 272 97.9 477	91.9 .800 2302 260 103.0 474	93.1 .800 2203 248 107.7 474	94.5 .800 2127 237 111.5 474
150	91.8 .800 3044 311 80.3 489	91.8 .800 2842 297 85.3 485	91.8 .800 2658 284 90.4 481	92.0 .800 2501 272 95.3 477	92.7 .800 2377 260 99.8 474	94.0 .800 2289 248 103.7 474	95.5 .800 2228 237 106.5 474
160	92.2 .800 3098 311 78.9 489	92.3 .800 2898 297 83.6 485	92.4 .800 2725 284 88.2 481	92.7 .800 2575 272 92.6 477	93.5 .800 2458 260 96.5 474	94.9 .800 2385 248 99.5 474	96.9 .800 2352 237 100.8 474
170	92.7 .800 3154 311 77.5 489	92.8 .800 2964 297 81.8 485	93.0 .800 2798 284 85.9 481	93.4 .800 2655 272 89.8 477	94.4 .800 2551 260 93.0 474	96.1 .800 2497 248 95.0 474	
180	93.2 .800 3216 311 76.0 489	93.3 .800 3036 297 79.8 485	93.7 .800 2877 284 83.5 481	94.2 .800 2743 272 86.9 477	95.3 .800 2652 260 89.4 474	97.5 .800 2635 248 90.0 474	
190	93.7 .800 3287 311 74.3 489	93.9 .800 3114 297 77.8 485	94.4 .800 2962 284 81.1 481	95.0 .800 2841 272 83.9 477	96.4 .800 2775 260 85.5 474		
200	94.2 .800 3364 311 72.6 489	94.6 .800 3197 297 75.8 485	95.1 .800 3056 284 78.6 481	95.9 .800 2948 272 80.9 477	97.7 .800 2921 260 81.2 474		
210	94.8 .800 3445 311 70.9 489	95.3 .800 3286 297 73.8 485	95.9 .800 3159 284 76.1 481	96.9 .800 3077 272 77.5 477			
220	95.4 .800 3533 311 69.2 489	95.9 .800 3385 297 71.6 485	96.7 .800 3271 284 73.5 481	98.2 .800 3227 272 73.8 477			
230	96.0 .800 3625 311 67.4 489	96.6 .800 3492 297 69.4 485	97.7 .800 3404 284 70.6 481				
240	96.6 .800 3728 311 65.5 489	97.4 .800 3606 297 67.2 485	98.8 .800 3557 284 67.6 481				

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

10E –08F0A330–301 CF6–80E1A2 12100000C5KG370 0 018590 0 0 1.1.0 .0 .00 0 01 .800 .000 .000 15 FCOM-G0–03–05–15–013–010

R

CRUISE - M.80

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+20
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	92.0 .800 2989 311 82.6 494	91.8 .800 2778 297 88.1 490	91.8 .800 2586 284 93.9 486	91.8 .800 2409 272 100.0 482	92.2 .800 2267 260 105.8 480	93.3 .800 2160 248 111.0 480	94.5 .800 2070 237 115.8 480
140	92.3 .800 3037 311 81.3 494	92.3 .800 2830 297 86.5 490	92.3 .800 2638 284 92.1 486	92.4 .800 2470 272 97.5 482	92.9 .800 2337 260 102.6 480	94.1 .800 2237 248 107.2 480	95.5 .800 2160 237 111.0 480
150	92.7 .800 3088 311 79.9 494	92.8 .800 2884 297 84.9 490	92.8 .800 2697 284 90.0 486	93.0 .800 2539 272 94.9 482	93.7 .800 2412 260 99.4 480	95.0 .800 2324 248 103.2 480	96.6 .800 2263 237 106.0 480
160	93.2 .800 3144 311 78.5 494	93.3 .800 2941 297 83.2 490	93.4 .800 2766 284 87.8 486	93.7 .800 2614 272 92.2 482	94.5 .800 2495 260 96.1 480	96.0 .800 2422 248 99.0 480	
170	93.6 .800 3200 311 77.1 494	93.8 .800 3008 297 81.4 490	94.0 .800 2840 284 85.5 486	94.4 .800 2695 272 89.4 482	95.4 .800 2590 260 92.6 480		
180	94.1 .800 3264 311 75.6 494	94.3 .800 3082 297 79.5 490	94.7 .800 2920 284 83.2 486	95.2 .800 2785 272 86.5 482	96.3 .800 2693 260 89.0 480		
190	94.6 .800 3336 311 74.0 494	94.9 .800 3161 297 77.5 490	95.4 .800 3006 284 80.8 486	96.0 .800 2885 272 83.5 482			
200	95.2 .800 3415 311 72.3 494	95.6 .800 3246 297 75.4 490	96.1 .800 3103 284 78.3 486	96.9 .800 2994 272 80.4 482			
210	95.7 .800 3498 311 70.6 494	96.3 .800 3336 297 73.4 490	96.9 .800 3207 284 75.7 486				
220	96.4 .800 3587 311 68.8 494	96.9 .800 3437 297 71.2 490					
230	97.0 .800 3681 311 67.0 494	97.6 .800 3546 297 69.1 490					
240	97.6 .800 3785 311 65.2 494						

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

10E–08F0A330–301 CF6–80E1A2 12100000C5KG370 0 018590 0 0 1 1.0 .0 .00 0 01 .800 .000 .000 20 FCOM-G0–03–05–15–014–010

CRUISE - M.80

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	90.7 .800 2912 311 83.9 489	90.6 .800 2707 297 89.5 485	90.5 .800 2522 284 95.3 481	90.5 .800 2349 272 101.5 477	91.0 .800 2211 260 107.3 474	92.0 .800 2106 248 112.6 474	93.3 .800 2019 237 117.5 474
140	91.1 .800 2959 311 82.6 489	91.0 .800 2759 297 87.8 485	91.0 .800 2573 284 93.4 481	91.1 .800 2407 272 99.0 477	91.7 .800 2279 260 104.1 474	92.9 .800 2182 248 108.7 474	94.2 .800 2107 237 112.6 474
150	91.5 .800 3010 311 81.2 489	91.5 .800 2812 297 86.2 485	91.6 .800 2630 284 91.4 481	91.8 .800 2475 272 96.3 477	92.5 .800 2353 260 100.8 474	93.8 .800 2267 248 104.7 474	95.3 .800 2206 237 107.5 474
160	92.0 .800 3065 311 79.7 489	92.0 .800 2868 297 84.5 485	92.2 .800 2696 284 89.1 481	92.4 .800 2548 272 93.5 477	93.3 .800 2434 260 97.5 474	94.7 .800 2363 248 100.4 474	96.7 .800 2330 237 101.8 474
170	92.4 .800 3120 311 78.3 489	92.6 .800 2931 297 82.7 485	92.8 .800 2769 284 86.8 481	93.2 .800 2628 272 90.7 477	94.1 .800 2527 260 93.9 474	95.8 .800 2473 248 95.9 474	
180	92.9 .800 3182 311 76.8 489	93.1 .800 3004 297 80.7 485	93.4 .800 2848 284 84.4 481	94.0 .800 2716 272 87.8 477	95.0 .800 2629 260 90.3 474	97.2 .800 2611 248 90.9 474	
190	93.4 .800 3251 311 75.2 489	93.7 .800 3081 297 78.6 485	94.1 .800 2933 284 82.0 481	94.8 .800 2814 272 84.7 477	96.1 .800 2748 260 86.3 474		
200	94.0 .800 3328 311 73.4 489	94.3 .800 3165 297 76.6 485	94.9 .800 3027 284 79.4 481	95.6 .800 2921 272 81.6 477	97.5 .800 2894 260 82.0 474		
210	94.5 .800 3410 311 71.7 489	95.0 .800 3254 297 74.5 485	95.7 .800 3129 284 76.8 481	96.7 .800 3047 272 78.2 477			
220	95.1 .800 3497 311 69.9 489	95.7 .800 3352 297 72.3 485	96.5 .800 3240 284 74.2 481	97.9 .800 3198 272 74.5 477			
230	95.8 .800 3590 311 68.1 489	96.4 .800 3459 297 70.1 485	97.4 .800 3371 284 71.3 481				
240	96.4 .800 3691 311 66.2 489	97.2 .800 3573 297 67.8 485	98.6 .800 3524 284 68.2 481				

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

11.0-08F0A330-200 CF6–80E1A4 12100000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .800 .000 .000 15 FCOM-G0-03-05-15-013-015

CRUISE - M.80

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+20
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	91.7 .800 2954 311 83.5 494	91.5 .800 2746 297 89.1 490	91.5 .800 2558 284 94.9 486	91.5 .800 2384 272 101.0 482	92.0 .800 2243 260 106.9 480	93.0 .800 2138 248 112.1 480	94.3 .800 2050 237 117.0 480
140	92.1 .800 3002 311 82.2 494	92.0 .800 2799 297 87.5 490	92.0 .800 2610 284 93.1 486	92.1 .800 2443 272 98.6 482	92.7 .800 2312 260 103.7 480	93.9 .800 2215 248 108.3 480	95.3 .800 2140 237 112.1 480
150	92.5 .800 3054 311 80.8 494	92.5 .800 2853 297 85.8 490	92.6 .800 2668 284 91.0 486	92.8 .800 2512 272 95.9 482	93.5 .800 2388 260 100.4 480	94.8 .800 2302 248 104.2 480	96.3 .800 2241 237 107.0 480
160	92.9 .800 3110 311 79.4 494	93.0 .800 2910 297 84.1 490	93.1 .800 2736 284 88.8 486	93.4 .800 2587 272 93.1 482	94.3 .800 2470 260 97.1 480	95.8 .800 2400 248 99.9 480	
170	93.4 .800 3166 311 77.9 494	93.5 .800 2975 297 82.3 490	93.8 .800 2810 284 86.4 486	94.2 .800 2668 272 90.3 482	95.2 .800 2565 260 93.5 480		
180	93.9 .800 3229 311 76.4 494	94.1 .800 3049 297 80.3 490	94.4 .800 2890 284 84.0 486	95.0 .800 2758 272 87.4 482	96.1 .800 2669 260 89.8 480		
190	94.4 .800 3300 311 74.8 494	94.7 .800 3128 297 78.3 490	95.1 .800 2977 284 81.6 486	95.8 .800 2858 272 84.3 482			
200	94.9 .800 3378 311 73.1 494	95.3 .800 3213 297 76.2 490	95.9 .800 3072 284 79.0 486	96.7 .800 2966 272 81.2 482			
210	95.5 .800 3461 311 71.3 494	96.0 .800 3303 297 74.1 490	96.7 .800 3177 284 76.4 486				
220	96.1 .800 3550 311 69.5 494	96.7 .800 3404 297 71.9 490	97.5 .800 3290 284 73.8 486				
230	96.8 .800 3645 311 67.7 494	97.4 .800 3512 297 69.7 490					
240	97.4 .800 3748 311 65.8 494						

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

11.0–08F0A330–200 CF6–80E1A4 12100000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .800 .000 .000 20 FCOM-G0-03-05-15-014-015

R

CRUISE - M.82

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	89.5	.820	89.3	.820	89.1	.820	88.9	.820	89.2	.820	90.1	.820	91.2	.820
	3034	319	2812	306	2610	292	2428	279	2272	267	2151	255	2051	243
	80.0	485	85.6	481	91.4	477	97.3	473	103.5	470	109.4	470	114.7	470
140	89.8	.820	89.7	.820	89.5	.820	89.4	.820	89.8	.820	90.8	.820	92.1	.820
	3076	319	2857	306	2661	292	2480	279	2330	267	2217	255	2135	243
	78.9	485	84.2	481	89.6	477	95.3	473	100.9	470	106.1	470	110.1	470
150	90.2	.820	90.1	.820	90.0	.820	89.9	.820	90.5	.820	91.6	.820	93.1	.820
	3121	319	2909	306	2713	292	2538	279	2394	267	2301	255	2230	243
	77.7	485	82.7	481	87.9	477	93.1	473	98.2	470	102.2	470	105.4	470
160	90.6	.820	90.5	.820	90.4	.820	90.5	.820	91.2	.820	92.5	.820	94.4	.820
	3171	319	2961	306	2771	292	2601	279	2473	267	2392	255	2343	243
	76.5	485	81.2	481	86.1	477	90.8	473	95.1	470	98.3	470	100.3	470
170	91.0	.820	90.9	.820	91.0	.820	91.2	.820	92.0	.820	93.7	.820	96.0	.820
	3225	319	3019	306	2834	292	2672	279	2562	267	2499	255	2473	243
	75.2	485	79.7	481	84.1	477	88.5	473	91.8	470	94.1	470	95.1	470
180	91.4	.820	91.4	.820	91.5	.820	91.9	.820	92.9	.820	94.9	.820		
	3283	319	3082	306	2903	292	2759	279	2660	267	2618	255		
	73.9	485	78.1	481	82.1	477	85.6	473	88.4	470	89.8	470		
190	91.8	.820	91.9	.820	92.2	.820	92.6	.820	94.0	.820	96.5	.820		
	3345	319	3150	306	2982	292	2854	279	2775	267	2760	255		
	72.5	485	76.4	481	80.0	477	82.8	473	84.7	470	85.2	470		
200	92.2	.820	92.4	.820	92.8	.820	93.5	.820	95.2	.820				
	3412	319	3223	306	3075	292	2958	279	2899	267				
	71.1	485	74.6	481	77.6	477	79.9	473	81.1	470				
210	92.7	.820	93.0	.820	93.6	.820	94.6	.820	96.7	.820				
	3484	319	3309	306	3174	292	3078	279	3047	267				
	69.6	485	72.7	481	75.1	477	76.8	473	77.2	470				
220	93.3	.820	93.7	.820	94.4	.820	95.7	.820						
	3561	319	3406	306	3283	292	3207	279						
	68.1	485	70.6	481	72.6	477	73.7	473						
230	93.8	.820	94.4	.820	95.4	.820	97.1	.820						
	3652	319	3510	306	3409	292	3356	279						
	66.4	485	68.5	481	70.0	477	70.4	473						
240	94.4	.820	95.2	.820	96.4	.820								
	3753	319	3623	306	3539	292								
	64.7	485	66.4	481	67.4	477								

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

10E –08F0A330–301 CF6–80E1A2 12100000C5KG370 0 018590 0 0 1 1.0 .0 .00 0 01 .820 .000 .000 0 FCOM-G0–03–05–15–015–010

R

CRUISE - M.82

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	91.5 .820 3123 319 79.4 496	91.3 .820 2895 306 84.9 492	91.1 .820 2687 292 90.7 488	91.0 .820 2499 279 96.7 483	91.3 .820 2340 267 102.8 481	92.2 .820 2215 255 108.6 481	93.3 .820 2114 243 113.8 481
140	91.8 .820 3167 319 78.3 496	91.7 .820 2941 306 83.6 492	91.6 .820 2740 292 89.0 488	91.5 .820 2553 279 94.7 483	91.9 .820 2400 267 100.2 481	92.9 .820 2285 255 105.3 481	94.2 .820 2202 243 109.2 481
150	92.2 .820 3214 319 77.1 496	92.1 .820 2995 306 82.1 492	92.0 .820 2794 292 87.3 488	92.0 .820 2613 279 92.5 483	92.6 .820 2467 267 97.5 481	93.8 .820 2371 255 101.4 481	95.3 .820 2301 243 104.5 481
160	92.6 .820 3266 319 75.9 496	92.5 .820 3049 306 80.6 492	92.5 .820 2854 292 85.4 488	92.6 .820 2679 279 90.2 483	93.3 .820 2549 267 94.4 481	94.7 .820 2466 255 97.5 481	96.6 .820 2419 243 99.4 481
170	93.0 .820 3322 319 74.6 496	92.9 .820 3109 306 79.1 492	93.0 .820 2919 292 83.5 488	93.3 .820 2753 279 87.8 483	94.1 .820 2642 267 91.0 481	95.8 .820 2578 255 93.3 481	98.2 .820 2553 243 94.2 481
180	93.4 .820 3381 319 73.3 496	93.4 .820 3174 306 77.4 492	93.6 .820 2990 292 81.5 488	94.0 .820 2843 279 85.0 483	95.0 .820 2744 267 87.7 481	97.1 .820 2701 255 89.1 481	
190	93.8 .820 3446 319 71.9 496	93.9 .820 3245 306 75.8 492	94.2 .820 3074 292 79.3 488	94.8 .820 2941 279 82.2 483	96.1 .820 2863 267 84.0 481	98.7 .820 2849 255 84.4 481	
200	94.3 .820 3515 319 70.5 496	94.5 .820 3321 306 74.0 492	94.9 .820 3170 292 76.9 488	95.6 .820 3050 279 79.2 483	97.4 .820 2993 267 80.4 481		
210	94.8 .820 3591 319 69.0 496	95.1 .820 3411 306 72.1 492	95.7 .820 3273 292 74.5 488	96.7 .820 3175 279 76.1 483	98.9 .820 3146 267 76.5 481		
220	95.3 .820 3670 319 67.5 496	95.8 .820 3512 306 70.0 492	96.5 .820 3387 292 72.0 488	97.8 .820 3309 279 73.0 483			
230	95.9 .820 3766 319 65.8 496	96.5 .820 3620 306 67.9 492	97.5 .820 3517 292 69.3 488	99.3 .820 3464 279 69.8 483			
240	96.5 .820 3871 319 64.0 496	97.3 .820 3738 306 65.8 492	98.6 .820 3653 292 66.7 488				

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

10E –08F0A330–301 CF6–80E1A2 12100000C5KG370 0 018590 0 0 1 1.0 .0 .00 0 01 .820 .000 .000 10 FCOM-G0–03–05–15–016–010

CRUISE - M.82

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	89.2	.820	89.0	.820	88.8	.820	88.7	.820	89.0	.820	89.9	.820	90.9	.820
	2999	319	2781	306	2581	292	2402	279	2249	267	2129	255	2029	243
	80.9	485	86.5	481	92.4	477	98.4	473	104.6	470	110.4	470	115.9	470
140	89.5	.820	89.4	.820	89.3	.820	89.2	.820	89.6	.820	90.6	.820	91.8	.820
	3041	319	2826	306	2632	292	2454	279	2307	267	2195	255	2114	243
	79.8	485	85.1	481	90.6	477	96.3	473	101.9	470	107.2	470	111.3	470
150	89.9	.820	89.8	.820	89.7	.820	89.7	.820	90.2	.820	91.4	.820	92.9	.820
	3087	319	2877	306	2684	292	2512	279	2371	267	2277	255	2208	243
	78.6	485	83.6	481	88.8	477	94.1	473	99.2	470	103.3	470	106.5	470
160	90.3	.820	90.2	.820	90.2	.820	90.3	.820	91.0	.820	92.3	.820	94.2	.820
	3137	319	2929	306	2742	292	2576	279	2447	267	2369	255	2321	243
	77.4	485	82.1	481	87.0	477	91.8	473	96.1	470	99.3	470	101.3	470
170	90.7	.820	90.7	.820	90.7	.820	90.9	.820	91.8	.820	93.4	.820	95.7	.820
	3190	319	2987	306	2806	292	2646	279	2536	267	2475	255	2451	243
	76.1	485	80.5	481	85.0	477	89.3	473	92.7	470	95.0	470	95.9	470
180	91.1	.820	91.1	.820	91.3	.820	91.7	.820	92.6	.820	94.7	.820		
	3247	319	3050	306	2874	292	2731	279	2633	267	2594	255		
	74.7	485	78.9	481	83.0	477	86.5	473	89.3	470	90.7	470		
190	91.5	.820	91.7	.820	91.9	.820	92.4	.820	93.7	.820	96.3	.820		
	3310	319	3118	306	2950	292	2825	279	2748	267	2737	255		
	73.3	485	77.1	481	80.8	477	83.6	473	85.6	470	85.9	470		
200	92.0	.820	92.2	.820	92.6	.820	93.3	.820	94.9	.820				
	3377	319	3191	306	3043	292	2928	279	2873	267				
	71.9	485	75.4	481	78.4	477	80.7	473	81.9	470				
210	92.5	.820	92.8	.820	93.3	.820	94.3	.820	96.5	.820				
	3449	319	3274	306	3143	292	3049	279	3021	267				
	70.3	485	73.5	481	75.9	477	77.5	473	77.8	470				
220	93.0	.820	93.5	.820	94.1	.820	95.4	.820						
	3526	319	3371	306	3251	292	3177	279						
	68.8	485	71.4	481	73.4	477	74.4	473						
230	93.6	.820	94.1	.820	95.1	.820	96.8	.820						
	3613	319	3475	306	3376	292	3328	279						
	67.2	485	69.2	481	70.6	477	71.0	473						
240	94.2	.820	94.9	.820	96.2	.820								
	3714	319	3586	306	3507	292								
	65.3	485	67.1	481	68.0	477								

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

11.0–08F0A330–200 CF6–80E1A4 12100000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .820 .000 .000 0 FCOM-G0-03-05-15-015-015

CRUISE - M.82

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	91.2	.820	91.0	.820	90.9	.820	90.8	.820	91.1	.820	92.0	.820	93.1	.820
	3088	319	2862	306	2657	292	2472	279	2316	267	2193	255	2092	243
	80.3	496	85.9	492	91.7	488	97.8	483	103.8	481	109.7	481	115.0	481
140	91.5	.820	91.4	.820	91.3	.820	91.2	.820	91.7	.820	92.7	.820	94.0	.820
	3131	319	2909	306	2710	292	2526	279	2376	267	2260	255	2180	243
	79.2	496	84.5	492	90.0	488	95.7	483	101.2	481	106.4	481	110.3	481
150	91.9	.820	91.8	.820	91.8	.820	91.8	.820	92.3	.820	93.5	.820	95.0	.820
	3178	319	2962	306	2764	292	2586	279	2443	267	2347	255	2278	243
	78.0	496	83.0	492	88.2	488	93.5	483	98.5	481	102.5	481	105.6	481
160	92.3	.820	92.2	.820	92.2	.820	92.4	.820	93.1	.820	94.4	.820	96.4	.820
	3230	319	3016	306	2824	292	2652	279	2522	267	2442	255	2396	243
	76.7	496	81.5	492	86.3	488	91.1	483	95.4	481	98.5	481	100.4	481
170	92.7	.820	92.7	.820	92.8	.820	93.0	.820	93.9	.820	95.6	.820	97.9	.820
	3285	319	3076	306	2890	292	2725	279	2615	267	2552	255	2531	243
	75.4	496	79.9	492	84.4	488	88.7	483	92.0	481	94.2	481	95.0	481
180	93.1	.820	93.2	.820	93.4	.820	93.7	.820	94.8	.820	96.8	.820		
	3345	319	3141	306	2961	292	2814	279	2716	267	2676	255		
	74.1	496	78.3	492	82.3	488	85.9	483	88.6	481	89.9	481		
190	93.6	.820	93.7	.820	94.0	.820	94.5	.820	95.9	.820	98.5	.820		
	3410	319	3212	306	3041	292	2912	279	2836	267	2825	255		
	72.7	496	76.5	492	80.2	488	83.0	483	84.8	481	85.2	481		
200	94.0	.820	94.3	.820	94.7	.820	95.4	.820	97.1	.820				
	3479	319	3288	306	3137	292	3019	279	2965	267				
	71.2	496	74.8	492	77.7	488	80.0	483	81.1	481				
210	94.5	.820	94.9	.820	95.4	.820	96.4	.820	98.7	.820				
	3554	319	3375	306	3240	292	3144	279	3119	267				
	69.7	496	72.8	492	75.2	488	76.9	483	77.1	481				
220	95.1	.820	95.5	.820	96.3	.820	97.6	.820						
	3634	319	3475	306	3353	292	3278	279						
	68.2	496	70.7	492	72.7	488	73.7	483						
230	95.7	.820	96.2	.820	97.3	.820	99.0	.820						
	3725	319	3583	306	3483	292	3435	279						
	66.5	496	68.6	492	70.0	488	70.4	483						
240	96.3	.820	97.0	.820	98.3	.820								
	3830	319	3700	306	3619	292								
	64.7	496	66.4	492	67.4	488								

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

11.0–08F0A330–200 CF6–80E1A4 12100000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .820 .000 .000 10 FCOM-G0-03-05-15-016-015

R

CRUISE - M.82

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	92.5	.820	92.3	.820	92.1	.820	92.0	.820	92.3	.820	93.2	.820	94.3	.820
	3169	319	2938	306	2727	292	2536	279	2375	267	2248	255	2147	243
	79.0	501	84.6	497	90.3	493	96.3	489	102.4	486	108.2	486	113.2	486
140	92.8	.820	92.7	.820	92.6	.820	92.5	.820	92.9	.820	94.0	.820	95.2	.820
	3214	319	2985	306	2781	292	2591	279	2436	267	2320	255	2237	243
	77.9	501	83.2	497	88.6	493	94.3	489	99.8	486	104.8	486	108.7	486
150	93.2	.820	93.1	.820	93.0	.820	93.0	.820	93.6	.820	94.8	.820	96.3	.820
	3262	319	3040	306	2836	292	2652	279	2504	267	2408	255	2338	243
	76.8	501	81.7	497	86.9	493	92.1	489	97.1	486	101.0	486	104.0	486
160	93.6	.820	93.5	.820	93.5	.820	93.6	.820	94.3	.820	95.7	.820	97.7	.820
	3315	319	3095	306	2897	292	2719	279	2588	267	2505	255	2458	243
	75.6	501	80.2	497	85.1	493	89.8	489	93.9	486	97.1	486	98.9	486
170	94.0	.820	93.9	.820	94.0	.820	94.3	.820	95.2	.820	96.9	.820		
	3372	319	3156	306	2963	292	2795	279	2683	267	2618	255		
	74.3	501	78.7	497	83.1	493	87.4	489	90.6	486	92.9	486		
180	94.4	.820	94.4	.820	94.6	.820	95.0	.820	96.1	.820				
	3432	319	3222	306	3036	292	2887	279	2787	267				
	73.0	501	77.1	497	81.2	493	84.6	489	87.2	486				
190	94.8	.820	95.0	.820	95.3	.820	95.8	.820	97.2	.820				
	3498	319	3294	306	3121	292	2987	279	2909	267				
	71.6	501	75.4	497	78.9	493	81.8	489	83.6	486				
200	95.3	.820	95.5	.820	96.0	.820	96.7	.820						
	3568	319	3372	306	3219	292	3098	279						
	70.2	501	73.7	497	76.5	493	78.9	489						
210	95.8	.820	96.1	.820	96.7	.820	97.8	.820						
	3645	319	3465	306	3324	292	3225	279						
	68.7	501	71.7	497	74.1	493	75.7	489						
220	96.3	.820	96.8	.820	97.6	.820								
	3726	319	3567	306	3441	292								
	67.2	501	69.6	497	71.6	493								
230	96.9	.820	97.5	.820	98.6	.820								
	3824	319	3677	306	3573	292								
	65.5	501	67.6	497	68.9	493								
240	97.5	.820	98.3	.820										
	3931	319	3797	306										
	63.7	501	65.4	497										

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

10E –08F0A330–301 CF6–80E1A2 12100000C5KG370 0 018590 0 0 1 1.0 .0 .00 0 01 .820 .000 .000 15 FCOM-G0–03–05–15–017–010

R

CRUISE - M.82

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+20
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	93.4 .820 3216 319 78.6 506	93.3 .820 2982 306 84.2 502	93.1 .820 2767 292 90.0 498	93.0 .820 2575 279 95.9 494	93.4 .820 2411 267 101.9 492	94.3 .820 2283 255 107.7 492	95.4 .820 2181 243 112.7 492
140	93.8 .820 3262 319 77.6 506	93.7 .820 3030 306 82.8 502	93.6 .820 2822 292 88.2 498	93.5 .820 2630 279 93.9 494	94.0 .820 2473 267 99.4 492	95.0 .820 2357 255 104.3 492	96.3 .820 2272 243 108.2 492
150	94.2 .820 3310 319 76.4 506	94.1 .820 3086 306 81.3 502	94.0 .820 2878 292 86.5 498	94.1 .820 2692 279 91.7 494	94.6 .820 2542 267 96.7 492	95.9 .820 2446 255 100.5 492	
160	94.6 .820 3365 319 75.2 506	94.5 .820 3142 306 79.9 502	94.5 .820 2940 292 84.7 498	94.7 .820 2761 279 89.4 494	95.4 .820 2629 267 93.5 492		
170	94.9 .820 3423 319 73.9 506	94.9 .820 3204 306 78.3 502	95.0 .820 3008 292 82.8 498	95.3 .820 2839 279 87.0 494	96.2 .820 2725 267 90.2 492		
180	95.3 .820 3484 319 72.6 506	95.4 .820 3271 306 76.7 502	95.6 .820 3082 292 80.8 498	96.0 .820 2933 279 84.2 494			
190	95.8 .820 3551 319 71.2 506	96.0 .820 3345 306 75.0 502	96.3 .820 3170 292 78.5 498	96.8 .820 3035 279 81.4 494			
200	96.3 .820 3623 319 69.8 506	96.5 .820 3423 306 73.3 502	97.0 .820 3269 292 76.1 498				
210	96.8 .820 3701 319 68.4 506	97.1 .820 3519 306 71.3 502					
220	97.3 .820 3783 319 66.9 506						
230							

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

10E –08F0A330–301 CF6–80E1A2 12100000C5KG370 0 018590 0 0 1 1.0 .0 .00 0 01 .820 .000 .000 20 FCOM-G0–03–05–15–018–010

CRUISE - M.82

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	92.2 .820 3133 319 79.9 501	92.0 .820 2905 306 85.5 497	91.9 .820 2696 292 91.4 493	91.8 .820 2508 279 97.4 489	92.1 .820 2351 267 103.4 486	93.0 .820 2226 255 109.3 486	94.1 .820 2125 243 114.5 486
140	92.5 .820 3177 319 78.8 501	92.4 .820 2952 306 84.1 497	92.3 .820 2750 292 89.6 493	92.3 .820 2564 279 95.3 489	92.7 .820 2412 267 100.8 486	93.8 .820 2295 255 106.0 486	95.0 .820 2214 243 109.8 486
150	92.9 .820 3225 319 77.6 501	92.8 .820 3006 306 82.6 497	92.8 .820 2805 292 87.8 493	92.8 .820 2625 279 93.1 489	93.4 .820 2480 267 98.1 486	94.6 .820 2383 255 102.0 486	96.1 .820 2314 243 105.1 486
160	93.3 .820 3278 319 76.4 501	93.2 .820 3062 306 81.1 497	93.3 .820 2866 292 85.9 493	93.4 .820 2692 279 90.7 489	94.1 .820 2561 267 94.9 486	95.5 .820 2480 255 98.1 486	97.4 .820 2434 243 99.9 486
170	93.7 .820 3334 319 75.1 501	93.7 .820 3123 306 79.5 497	93.8 .820 2933 292 84.0 493	94.1 .820 2766 279 88.3 489	94.9 .820 2655 267 91.6 486	96.6 .820 2593 255 93.8 486	
180	94.1 .820 3395 319 73.8 501	94.2 .820 3189 306 77.9 497	94.4 .820 3006 292 82.0 493	94.8 .820 2857 279 85.5 489	95.8 .820 2759 267 88.1 486		
190	94.6 .820 3461 319 72.4 501	94.7 .820 3261 306 76.2 497	95.0 .820 3088 292 79.8 493	95.6 .820 2957 279 82.6 489	96.9 .820 2880 267 84.4 486		
200	95.0 .820 3531 319 70.9 501	95.3 .820 3338 306 74.4 497	95.7 .820 3186 292 77.3 493	96.4 .820 3067 279 79.7 489	98.2 .820 3012 267 80.7 486		
210	95.5 .820 3608 319 69.4 501	95.9 .820 3427 306 72.5 497	96.5 .820 3291 292 74.9 493	97.5 .820 3194 279 76.5 489			
220	96.1 .820 3689 319 67.9 501	96.5 .820 3530 306 70.4 497	97.3 .820 3406 292 72.3 493				
230	96.7 .820 3783 319 66.2 501	97.2 .820 3639 306 68.3 497	98.3 .820 3539 292 69.6 493				
240	97.3 .820 3890 319 64.4 501	98.0 .820 3759 306 66.1 497					

PACK FLOW LO
△FUEL = – 0.5 %

PACK FLOW HI OR/ AND CARGO COOL ON
△FUEL = + 1.5 %

ENGINE ANTI ICE ON
△FUEL = + 3 %

TOTAL ANTI ICE ON
△FUEL = + 5 %

11.0–08F0A330–200 CF6–80E1A4 12100000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .820 .000 .000 15 FCOM-G0-03-05-15-017-015

CRUISE - M.82

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+20
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	93.2 .820 3179 319 79.6 506	93.0 .820 2948 306 85.1 502	92.9 .820 2736 292 91.0 498	92.8 .820 2547 279 96.9 494	93.1 .820 2386 267 103.0 492	94.0 .820 2260 255 108.8 492	95.1 .820 2158 243 113.9 492
140	93.5 .820 3225 319 78.4 506	93.4 .820 2996 306 83.8 502	93.3 .820 2791 292 89.2 498	93.3 .820 2603 279 94.9 494	93.7 .820 2448 267 100.4 492	94.8 .820 2331 255 105.4 492	96.1 .820 2249 243 109.3 492
150	93.9 .820 3273 319 77.3 506	93.8 .820 3052 306 82.2 502	93.8 .820 2847 292 87.4 498	93.8 .820 2665 279 92.7 494	94.4 .820 2517 267 97.6 492	95.6 .820 2421 255 101.5 492	
160	94.3 .820 3327 319 76.0 506	94.2 .820 3108 306 80.7 502	94.3 .820 2909 292 85.6 498	94.4 .820 2733 279 90.3 494	95.1 .820 2601 267 94.5 492		
170	94.7 .820 3385 319 74.7 506	94.7 .820 3170 306 79.2 502	94.8 .820 2977 292 83.6 498	95.1 .820 2808 279 87.9 494	96.0 .820 2697 267 91.1 492		
180	95.1 .820 3446 319 73.4 506	95.2 .820 3237 306 77.5 502	95.4 .820 3051 292 81.6 498	95.8 .820 2902 279 85.1 494			
190	95.5 .820 3513 319 72.0 506	95.7 .820 3311 306 75.8 502	96.0 .820 3136 292 79.4 498	96.6 .820 3004 279 82.2 494			
200	96.0 .820 3585 319 70.6 506	96.3 .820 3389 306 74.0 502	96.7 .820 3235 292 77.0 498				
210	96.5 .820 3663 319 69.1 506	96.9 .820 3481 306 72.1 502					
220	97.1 .820 3746 319 67.5 506	97.6 .820 3585 306 70.0 502					
230							
240							

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

11.0–08F0A330–200 CF6–80E1A4 12100000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .820 .000 .000 20 FCOM-G0-03-05-15-018-015

R

CRUISE - M.84

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	91.7	.840	91.4	.840	91.1	.840	90.8	.840	91.1	.840	91.9	.840	92.8	.840
	3373	328	3116	314	2882	300	2669	287	2487	274	2350	262	2229	250
	73.7	497	79.1	493	84.8	489	90.7	484	96.9	482	102.5	482	108.1	482
140	92.0	.840	91.7	.840	91.4	.840	91.3	.840	91.6	.840	92.5	.840	93.8	.840
	3413	328	3159	314	2928	300	2717	287	2547	274	2416	262	2316	250
	72.8	497	78.0	493	83.4	489	89.1	484	94.6	482	99.7	482	104.0	482
150	92.3	.840	92.0	.840	91.8	.840	91.8	.840	92.2	.840	93.3	.840	95.1	.840
	3456	328	3206	314	2977	300	2775	287	2613	274	2496	262	2430	250
	71.9	497	76.9	493	82.1	489	87.2	484	92.2	482	96.5	482	99.1	482
160	92.6	.840	92.4	.840	92.3	.840	92.3	.840	92.8	.840	94.4	.840		
	3503	328	3255	314	3032	300	2841	287	2686	274	2603	262		
	71.0	497	75.7	493	80.6	489	85.2	484	89.7	482	92.5	482		
170	92.9	.840	92.8	.840	92.8	.840	92.9	.840	93.7	.840	95.7	.840		
	3552	328	3309	314	3098	300	2913	287	2782	274	2732	262		
	70.0	497	74.5	493	78.9	489	83.1	484	86.6	482	88.2	482		
180	93.3	.840	93.2	.840	93.3	.840	93.6	.840	94.8	.840				
	3606	328	3372	314	3169	300	2996	287	2900	274				
	68.9	497	73.1	493	77.1	489	80.8	484	83.1	482				
190	93.7	.840	93.7	.840	93.9	.840	94.4	.840	96.1	.840				
	3664	328	3443	314	3248	300	3104	287	3041	274				
	67.8	497	71.6	493	75.2	489	78.0	484	79.2	482				
200	94.1	.840	94.2	.840	94.5	.840	95.5	.840						
	3733	328	3520	314	3340	300	3228	287						
	66.6	497	70.0	493	73.1	489	75.0	484						
210	94.5	.840	94.8	.840	95.4	.840	96.8	.840						
	3810	328	3603	314	3456	300	3378	287						
	65.2	497	68.4	493	70.7	489	71.7	484						
220	95.0	.840	95.4	.840	96.4	.840								
	3891	328	3702	314	3586	300								
	63.9	497	66.6	493	68.1	489								
230	95.6	.840	96.2	.840										
	3979	328	3824	314										
	62.5	497	64.5	493										
240	96.2	.840	97.2	.840										
	4082	328	3958	314										
	60.9	497	62.3	493										

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

10E –08F0A330–301 CF6–80E1A2 12100000C5KG370 0 018590 0 0 1 1.0 .0 .00 0 01 .840 .000 .000 0 FCOM-G0–03–05–15–019–010

R

CRUISE - M.84

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	93.7 .840 3476 328 73.1 508	93.4 .840 3210 314 78.4 504	93.1 .840 2970 300 84.1 499	92.9 .840 2750 287 90.0 495	93.2 .840 2564 274 96.1 493	94.0 .840 2423 262 101.7 493	95.0 .840 2300 250 107.1 493
140	94.0 .840 3517 328 72.2 508	93.7 .840 3255 314 77.4 504	93.5 .840 3018 300 82.7 499	93.4 .840 2799 287 88.4 495	93.7 .840 2626 274 93.8 493	94.7 .840 2491 262 98.9 493	96.0 .840 2391 250 103.1 493
150	94.3 .840 3561 328 71.3 508	94.1 .840 3304 314 76.2 504	93.9 .840 3068 300 81.4 499	93.9 .840 2861 287 86.5 495	94.3 .840 2695 274 91.4 493	95.5 .840 2575 262 95.7 493	97.2 .840 2510 250 98.2 493
160	94.6 .840 3610 328 70.3 508	94.4 .840 3355 314 75.1 504	94.4 .840 3127 300 79.9 499	94.4 .840 2929 287 84.5 495	95.0 .840 2771 274 88.9 493	96.6 .840 2686 262 91.7 493	
170	94.9 .840 3661 328 69.4 508	94.8 .840 3410 314 73.8 504	94.9 .840 3195 300 78.2 499	95.0 .840 3004 287 82.4 495	95.9 .840 2870 274 85.8 493	97.9 .840 2821 262 87.4 493	
180	95.3 .840 3716 328 68.3 508	95.3 .840 3477 314 72.4 504	95.4 .840 3269 300 76.4 499	95.7 .840 3091 287 80.1 495	97.0 .840 2993 274 82.3 493		
190	95.7 .840 3778 328 67.2 508	95.8 .840 3551 314 70.9 504	96.0 .840 3350 300 74.5 499	96.6 .840 3202 287 77.3 495	98.3 .840 3140 274 78.5 493		
200	96.1 .840 3851 328 65.9 508	96.3 .840 3631 314 69.4 504	96.7 .840 3446 300 72.5 499	97.6 .840 3331 287 74.3 495			
210	96.6 .840 3930 328 64.6 508	96.8 .840 3717 314 67.7 504	97.5 .840 3567 300 70.0 499	99.0 .840 3487 287 71.0 495			
220	97.1 .840 4015 328 63.2 508	97.5 .840 3820 314 65.9 504	98.5 .840 3702 300 67.4 499				
230	97.6 .840 4106 328 61.8 508	98.4 .840 3946 314 63.8 504					
240	98.3 .840 4213 328 60.3 508	99.3 .840 4087 314 61.6 504					

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

10E –08F0A330–301 CF6–80E1A2 12100000C5KG370 0 018590 0 0 1 1.0 .0 .00 0 01 .840 .000 .000 10 FCOM-G0–03–05–15–020–010

CRUISE - M.84

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	91.4	.840	91.1	.840	90.8	.840	90.6	.840	90.8	.840	91.6	.840	92.6	.840
	3335	328	3082	314	2851	300	2641	287	2461	274	2325	262	2206	250
	74.5	497	80.0	493	85.7	489	91.7	484	97.9	482	103.6	482	109.2	482
140	91.7	.840	91.4	.840	91.2	.840	91.0	.840	91.4	.840	92.3	.840	93.5	.840
	3375	328	3125	314	2897	300	2689	287	2519	274	2391	262	2293	250
	73.7	497	78.9	493	84.3	489	90.0	484	95.6	482	100.7	482	105.1	482
150	92.0	.840	91.8	.840	91.6	.840	91.5	.840	91.9	.840	93.1	.840	94.8	.840
	3418	328	3172	314	2946	300	2745	287	2585	274	2470	262	2407	250
	72.7	497	77.7	493	82.9	489	88.2	484	93.2	482	97.5	482	100.1	482
160	92.3	.840	92.1	.840	92.0	.840	92.0	.840	92.6	.840	94.1	.840	96.6	.840
	3465	328	3221	314	3000	300	2811	287	2659	274	2577	262	2566	250
	71.7	497	76.5	493	81.4	489	86.1	484	90.6	482	93.5	482	93.9	482
170	92.6	.840	92.5	.840	92.5	.840	92.6	.840	93.5	.840	95.5	.840		
	3514	328	3275	314	3064	300	2883	287	2753	274	2706	262		
	70.7	497	75.2	493	79.7	489	84.0	484	87.5	482	89.0	482		
180	93.0	.840	93.0	.840	93.0	.840	93.3	.840	94.5	.840				
	3568	328	3335	314	3136	300	2965	287	2872	274				
	69.7	497	73.9	493	77.9	489	81.6	484	83.9	482				
190	93.4	.840	93.4	.840	93.6	.840	94.2	.840	95.9	.840				
	3627	328	3406	314	3214	300	3072	287	3012	274				
	68.5	497	72.4	493	76.0	489	78.8	484	80.0	482				
200	93.8	.840	94.0	.840	94.3	.840	95.2	.840						
	3692	328	3483	314	3305	300	3197	287						
	67.3	497	70.8	493	73.9	489	75.7	484						
210	94.3	.840	94.5	.840	95.1	.840	96.5	.840						
	3769	328	3566	314	3421	300	3346	287						
	66.0	497	69.1	493	71.4	489	72.4	484						
220	94.8	.840	95.2	.840	96.1	.840								
	3850	328	3664	314	3551	300								
	64.6	497	67.3	493	68.8	489								
230	95.3	.840	96.0	.840	97.3	.840								
	3938	328	3785	314	3706	300								
	63.1	497	65.1	493	65.9	489								
240	95.9	.840	96.9	.840										
	4040	328	3920	314										
	61.5	497	62.9	493										

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

11.0–08F0A330–200 CF6–80E1A4 12100000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .840 .000 .000 0 FCOM-G0-03-05-15-019-015

CRUISE - M.84

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	93.5 .840 3437 328 73.9 508	93.1 .840 3175 314 79.3 504	92.9 .840 2938 300 85.0 499	92.7 .840 2721 287 91.0 495	92.9 .840 2536 274 97.2 493	93.8 .840 2397 262 102.8 493	94.7 .840 2276 250 108.2 493
140	93.7 .840 3477 328 73.0 508	93.5 .840 3219 314 78.2 504	93.3 .840 2986 300 83.6 499	93.1 .840 2771 287 89.4 495	93.5 .840 2598 274 94.8 493	94.4 .840 2466 262 99.9 493	95.7 .840 2367 250 104.1 493
150	94.0 .840 3522 328 72.1 508	93.8 .840 3268 314 77.1 504	93.7 .840 3036 300 82.2 499	93.6 .840 2829 287 87.5 495	94.1 .840 2666 274 92.4 493	95.2 .840 2548 262 96.7 493	97.0 .840 2485 250 99.1 493
160	94.3 .840 3571 328 71.1 508	94.2 .840 3319 314 75.9 504	94.1 .840 3093 300 80.7 499	94.2 .840 2898 287 85.4 495	94.7 .840 2743 274 89.8 493	96.3 .840 2659 262 92.7 493	98.9 .840 2651 250 93.0 493
170	94.7 .840 3622 328 70.1 508	94.6 .840 3375 314 74.6 504	94.6 .840 3160 300 79.0 499	94.8 .840 2972 287 83.3 495	95.6 .840 2841 274 86.7 493	97.6 .840 2794 262 88.2 493	
180	95.0 .840 3677 328 69.0 508	95.0 .840 3438 314 73.2 504	95.1 .840 3234 300 77.2 499	95.4 .840 3059 287 80.9 495	96.7 .840 2964 274 83.1 493		
190	95.5 .840 3739 328 67.9 508	95.5 .840 3512 314 71.7 504	95.7 .840 3316 300 75.3 499	96.3 .840 3170 287 78.1 495	98.0 .840 3110 274 79.2 493		
200	95.9 .840 3808 328 66.7 508	96.0 .840 3592 314 70.1 504	96.4 .840 3410 300 73.2 499	97.4 .840 3299 287 75.0 495			
210	96.4 .840 3888 328 65.3 508	96.6 .840 3679 314 68.5 504	97.3 .840 3531 300 70.7 499	98.7 .840 3454 287 71.7 495			
220	96.9 .840 3972 328 63.9 508	97.3 .840 3780 314 66.6 504	98.3 .840 3666 300 68.1 499				
230	97.4 .840 4064 328 62.5 508	98.1 .840 3906 314 64.5 504	99.5 .840 3827 300 65.3 499				
240	98.0 .840 4169 328 60.9 508	99.0 .840 4046 314 62.2 504					

PACK FLOW LO
△FUEL = – 0.5 %

PACK FLOW HI OR/ AND CARGO COOL ON
△FUEL = + 1 %

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3 %

11.0–08F0A330–200 CF6–80E1A4 12100000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .840 .000 .000 10 FCOM-G0-03-05-15-020-015

R

CRUISE - M.84

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	94.7 .840 3529 328 72.7 513	94.4 .840 3260 314 78.1 509	94.2 .840 3015 300 83.7 505	94.0 .840 2791 287 89.7 501	94.2 .840 2605 274 95.6 498	95.1 .840 2460 262 101.2 498	96.0 .840 2337 250 106.6 498
140	95.0 .840 3570 328 71.9 513	94.7 .840 3305 314 77.0 509	94.5 .840 3064 300 82.4 505	94.4 .840 2842 287 88.1 501	94.8 .840 2668 274 93.4 498	95.7 .840 2530 262 98.4 498	97.0 .840 2430 250 102.5 498
150	95.3 .840 3615 328 71.0 513	95.1 .840 3354 314 75.9 509	95.0 .840 3115 300 81.0 505	94.9 .840 2905 287 86.2 501	95.4 .840 2737 274 91.0 498	96.5 .840 2615 262 95.3 498	
160	95.6 .840 3665 328 70.0 513	95.5 .840 3406 314 74.7 509	95.4 .840 3175 300 79.5 505	95.4 .840 2974 287 84.1 501	96.1 .840 2815 274 88.5 498		
170	95.9 .840 3718 328 69.0 513	95.9 .840 3463 314 73.5 509	95.9 .840 3245 300 77.8 505	96.0 .840 3050 287 82.0 501	96.9 .840 2916 274 85.4 498		
180	96.3 .840 3774 328 68.0 513	96.3 .840 3532 314 72.1 509	96.4 .840 3321 300 76.0 505	96.7 .840 3139 287 79.7 501			
190	96.7 .840 3837 328 66.9 513	96.8 .840 3607 314 70.5 509	97.0 .840 3403 300 74.2 505	97.6 .840 3253 287 76.9 501			
200	97.2 .840 3912 328 65.6 513	97.3 .840 3688 314 69.0 509	97.7 .840 3501 300 72.1 505				
210	97.6 .840 3992 328 64.3 513	97.9 .840 3776 314 67.4 509					
220	98.1 .840 4078 328 62.9 513						
230							

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

10E –08F0A330–301 CF6–80E1A2 12100000C5KG370 0 018590 0 0 1 1.0 .0 .00 0 01 .840 .000 .000 15 FCOM-G0–03–05–15–021–010

R

CRUISE - M.84

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+20
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	95.7 .840 3582 328 72.3 518	95.4 .840 3309 314 77.7 514	95.2 .840 3061 300 83.3 510	95.0 .840 2834 287 89.2 506	95.3 .840 2645 274 95.2 504		
140	96.0 .840 3625 328 71.5 518	95.7 .840 3355 314 76.6 514	95.5 .840 3110 300 82.0 510	95.4 .840 2886 287 87.6 506	95.8 .840 2709 274 92.9 504		
150	96.3 .840 3670 328 70.6 518	96.1 .840 3406 314 75.5 514	96.0 .840 3163 300 80.6 510	95.9 .840 2951 287 85.7 506			
160	96.6 .840 3721 328 69.6 518	96.5 .840 3459 314 74.3 514	96.4 .840 3225 300 79.1 510	96.5 .840 3021 287 83.7 506			
170	96.9 .840 3774 328 68.7 518	96.9 .840 3517 314 73.1 514	96.9 .840 3296 300 77.4 510				
180	97.3 .840 3832 328 67.6 518	97.3 .840 3587 314 71.7 514					
190							
200							
210							

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI-ICE ON	TOTAL ANTI-ICE ON
△FUEL = –0.5 %	△FUEL = +1 %	△FUEL = +1.5 %	△FUEL = +3 %

H09F -08B1A330–301 CF6–80E1A2 12200000C5KG370 0 018590 0 0 1 1.0 .0 .00 0 01 .990 .000 .000 20 FCOM-G0–03–05–15–022–010

CRUISE - M.84

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	94.5 .840 3489 328 73.5 513	94.1 .840 3224 314 78.9 509	93.9 .840 2982 300 84.6 505	93.7 .840 2762 287 90.6 501	94.0 .840 2575 274 96.7 498	94.8 .840 2434 262 102.3 498	95.8 .840 2313 250 107.7 498
140	94.7 .840 3531 328 72.7 513	94.5 .840 3269 314 77.8 509	94.3 .840 3031 300 83.3 505	94.2 .840 2812 287 89.0 501	94.5 .840 2639 274 94.4 498	95.5 .840 2504 262 99.5 498	96.8 .840 2405 250 103.6 498
150	95.0 .840 3576 328 71.7 513	94.8 .840 3318 314 76.7 509	94.7 .840 3083 300 81.9 505	94.7 .840 2873 287 87.1 501	95.1 .840 2708 274 92.0 498	96.3 .840 2588 262 96.2 498	
160	95.3 .840 3625 328 70.8 513	95.2 .840 3370 314 75.5 509	95.1 .840 3140 300 80.4 505	95.2 .840 2942 287 85.0 501	95.8 .840 2786 274 89.4 498		
170	95.7 .840 3678 328 69.8 513	95.6 .840 3427 314 74.3 509	95.6 .840 3210 300 78.6 505	95.8 .840 3019 287 82.9 501	96.7 .840 2887 274 86.3 498		
180	96.1 .840 3734 328 68.7 513	96.1 .840 3492 314 72.9 509	96.2 .840 3285 300 76.8 505	96.5 .840 3106 287 80.6 501	97.8 .840 3012 274 82.7 498		
190	96.5 .840 3796 328 67.6 513	96.5 .840 3568 314 71.3 509	96.8 .840 3368 300 74.9 505	97.4 .840 3220 287 77.7 501			
200	96.9 .840 3868 328 66.3 513	97.1 .840 3649 314 69.7 509	97.4 .840 3465 300 72.8 505				
210	97.4 .840 3949 328 65.0 513	97.6 .840 3737 314 68.1 509	98.3 .840 3588 300 70.3 505				
220	97.9 .840 4035 328 63.6 513	98.3 .840 3841 314 66.3 509					
230							
240							

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

11.0–08F0A330–200 CF6–80E1A4 12100000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .840 .000 .000 15 FCOM-G0-03-05-15-021-015

CRUISE - M.84

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+20
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	95.4 .840 3542 328 73.2 518	95.1 .840 3273 314 78.5 514	94.9 .840 3028 300 84.2 510	94.7 .840 2804 287 90.2 506	95.0 .840 2616 274 96.2 504	95.9 .840 2473 262 101.8 504	
140	95.7 .840 3584 328 72.3 518	95.5 .840 3319 314 77.5 514	95.3 .840 3078 300 82.9 510	95.2 .840 2856 287 88.6 506	95.6 .840 2680 274 93.9 504		
150	96.0 .840 3630 328 71.4 518	95.8 .840 3370 314 76.3 514	95.7 .840 3130 300 81.5 510	95.7 .840 2918 287 86.7 506	96.2 .840 2751 274 91.5 504		
160	96.3 .840 3681 328 70.4 518	96.2 .840 3423 314 75.1 514	96.2 .840 3189 300 80.0 510	96.2 .840 2989 287 84.6 506			
170	96.7 .840 3734 328 69.4 518	96.6 .840 3480 314 73.9 514	96.7 .840 3260 300 78.2 510				
180	97.0 .840 3792 328 68.3 518	97.1 .840 3548 314 72.5 514					
190							
200							
210							
220							
230							
240							

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

11.0–08F0A330–200 CF6–80E1A4 12100000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .840 .000 .000 20 FCOM-G0-03-05-15-022-015

R

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=30.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL120		FL140		FL160		FL180		FL200		FL220		FL240	
130	65.7	.446	67.1	.460	68.7	.478	69.8	.491	71.0	.504	72.6	.525	74.2	.546	75.9	.569
	2057	246	2030	245	2016	245	1978	242	1945	239	1939	240	1931	240	1922	240
	69.1	284	71.9	292	74.6	301	77.4	306	80.3	312	83.1	322	86.2	333	89.4	344
140	67.5	.460	69.1	.478	70.2	.490	71.4	.504	72.9	.522	74.6	.545	76.2	.568	77.6	.588
	2194	254	2181	255	2138	251	2105	249	2093	248	2093	249	2084	250	2066	248
	66.9	294	69.4	303	72.0	308	74.7	314	77.3	323	80.0	335	83.0	346	86.0	355
150	69.4	.477	70.5	.489	71.6	.502	73.0	.518	74.7	.542	76.4	.564	77.8	.584	79.4	.609
	2349	264	2306	261	2264	258	2241	256	2252	258	2244	258	2224	257	2225	258
	64.8	304	67.2	310	69.7	315	72.1	323	74.5	336	77.3	347	80.0	356	82.8	368
160	70.7	.488	71.8	.500	73.1	.514	74.9	.539	76.4	.559	77.9	.580	79.5	.604	81.0	.627
	2475	270	2430	267	2397	264	2415	267	2398	266	2383	266	2383	266	2374	266
	62.9	311	65.1	317	67.4	323	69.6	336	72.2	346	74.7	356	77.2	368	79.9	379
170	71.9	.497	73.1	.510	74.8	.533	76.4	.553	78.0	.576	79.4	.597	81.0	.621	82.4	.643
	2598	275	2560	272	2568	274	2558	274	2549	274	2539	274	2531	274	2518	273
	61.1	317	63.2	323	65.2	335	67.5	345	69.9	356	72.3	367	74.7	378	77.2	389
180	73.1	.507	74.6	.525	76.3	.548	78.0	.570	79.3	.590	80.9	.614	82.3	.636	83.9	.667
	2729	281	2716	281	2717	282	2714	283	2691	281	2692	282	2676	281	2699	284
	59.4	324	61.3	333	63.3	344	65.6	356	67.8	365	70.0	377	72.4	387	74.7	403
190	74.4	.518	76.2	.543	77.8	.563	79.2	.583	80.7	.606	82.3	.628	83.6	.652	85.4	.688
	2866	287	2887	290	2874	290	2854	289	2850	289	2839	289	2833	289	2870	293
	57.7	331	59.5	344	61.6	354	63.7	364	65.8	375	68.0	386	70.2	398	72.4	416
200	75.9	.535	77.5	.555	79.1	.577	80.5	.598	82.1	.620	83.4	.641	85.1	.677	86.5	.701
	3040	296	3032	297	3024	297	3011	297	3001	296	2982	295	3026	300	3014	299
	56.1	341	58.0	352	60.0	363	62.0	373	64.0	384	66.1	394	68.1	412	70.3	424
210	77.2	.548	78.9	.570	80.2	.589	81.8	.612	83.2	.633	84.7	.661	86.4	.694	87.4	.710
	3195	304	3192	305	3167	304	3164	304	3147	303	3163	305	3193	308	3137	303
	54.7	350	56.6	361	58.5	370	60.3	382	62.3	392	64.2	406	66.2	423	68.4	429
220	78.6	.561	80.0	.582	81.5	.603	83.0	.625	84.3	.646	86.1	.682	87.4	.703	88.5	.723
	3352	311	3337	311	3327	311	3316	311	3297	309	3350	315	3324	313	3292	309
	53.5	358	55.2	369	57.0	379	58.8	390	60.6	400	62.5	419	64.5	429	66.4	437
230	79.8	.575	81.1	.593	82.6	.615	84.1	.636	85.6	.667	87.3	.697	88.2	.712	89.5	.736
	3512	319	3482	317	3477	317	3462	316	3495	320	3520	322	3456	317	3442	315
	52.2	367	53.9	376	55.6	387	57.3	397	59.1	413	60.9	428	62.8	434	64.6	445
240	80.8	.585	82.3	.605	83.8	.627	85.0	.647	86.8	.684	88.1	.705	89.2	.723	90.5	.748
	3655	325	3644	324	3629	324	3610	322	3676	328	3648	326	3604	322	3594	320
	51.1	373	52.6	384	54.3	394	55.9	404	57.6	423	59.4	433	61.2	441	62.9	452

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3.0 %	△FUEL = + 5.0 %

R

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL270		FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	78.3	.606	79.8	.630	81.3	.659	83.0	.692	84.1	.712	85.8	.741	88.2	.776	90.1	.793
	1917	240	1908	240	1911	241	1920	243	1890	239	1896	238	1935	240	1922	234
	94.3	362	97.7	373	101.2	387	104.8	402	108.5	410	112.0	425	115.0	445	118.3	455
140	80.0	.625	81.4	.650	83.3	.687	84.3	.707	85.7	.735	87.6	.768	89.6	.789	91.4	.803
	2061	249	2051	248	2078	252	2047	249	2043	248	2064	248	2060	244	2048	238
	90.6	373	93.7	385	97.0	403	100.5	411	103.7	424	106.8	441	109.8	452	112.5	461
150	81.6	.644	83.3	.680	84.5	.701	85.8	.727	87.4	.762	89.0	.784	90.8	.799	92.7	.810
	2206	257	2231	260	2204	258	2194	256	2210	258	2203	254	2184	248	2172	240
	87.1	385	90.1	402	93.4	411	96.3	423	99.3	439	102.1	450	104.9	458	106.9	464
160	83.3	.672	84.8	.699	85.9	.718	87.3	.748	88.8	.779	90.2	.795	92.0	.807	94.2	.815
	2387	268	2382	268	2345	264	2349	264	2358	264	2327	258	2312	250	2315	242
	84.0	401	86.9	414	89.8	421	92.6	435	95.2	449	97.9	456	100.1	463	101.0	468
170	84.9	.693	85.9	.711	87.3	.739	88.9	.772	89.9	.788	91.3	.803	93.3	.812	96.1	.821
	2551	278	2507	273	2506	272	2524	274	2480	267	2454	261	2445	252	2481	244
	81.1	414	83.9	421	86.5	433	89.0	449	91.6	454	93.8	460	95.2	466	94.9	471
180	86.0	.704	87.2	.728	88.8	.763	89.9	.782	91.0	.796	92.4	.808	94.8	.817		
	2676	282	2661	280	2684	282	2651	277	2604	270	2581	263	2597	254		
	78.6	420	81.0	431	83.4	448	85.8	455	88.1	459	89.8	464	90.2	468		
190	87.1	.717	88.6	.749	89.9	.775	90.9	.789	92.0	.804	93.6	.813	96.6	.821		
	2815	288	2833	289	2825	287	2776	280	2738	273	2723	264	2770	255		
	76.0	428	78.3	444	80.5	455	82.7	459	84.6	463	85.6	466	85.0	471		
200	88.4	.737	89.8	.766	90.9	.783	91.9	.797	93.0	.808	95.1	.817				
	2986	296	2993	296	2952	290	2907	283	2868	275	2881	266				
	73.6	440	75.7	453	77.8	459	79.7	464	81.2	466	81.4	469				
210	89.5	.751	90.8	.775	91.8	.789	92.9	.804	94.2	.813	96.8	.821				
	3136	302	3125	300	3079	293	3045	286	3018	277	3059	267				
	71.5	448	73.4	459	75.2	463	76.8	467	77.6	468	77.0	471				
220	90.7	.767	91.7	.782	92.8	.796	93.8	.807	95.5	.817						
	3304	309	3257	303	3214	296	3177	287	3181	278						
	69.3	458	71.1	463	72.7	467	73.9	470	74.0	471						
230	91.5	.774	92.5	.788	93.7	.803	95.0	.812	97.2	.821						
	3437	313	3385	305	3357	298	3334	289	3365	280						
	67.2	462	68.9	466	70.2	471	70.8	472	70.3	473						
240	92.3	.781	93.4	.794	94.5	.806	96.2	.816								
	3570	316	3523	308	3494	300	3501	291								
	65.3	466	66.7	470	67.7	473	67.8	474								

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3.0 %	△FUEL = + 5.0 %

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=30.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100	FL120	FL140	FL160	FL180	FL200	FL220	FL240
130	64.6 .441 1975 244 71.3 282	65.5 .449 1912 239 74.3 284	67.2 .467 1904 239 77.1 294	68.7 .483 1886 238 80.0 302	69.8 .496 1852 235 83.0 307	71.1 .511 1826 233 85.9 314	73.0 .536 1840 235 88.7 327	74.6 .557 1830 235 92.0 337
140	65.8 .449 2070 248 69.2 287	67.5 .466 2057 248 71.8 295	69.0 .483 2040 248 74.4 304	70.1 .496 2004 245 77.1 309	71.5 .510 1978 242 79.8 316	73.2 .533 1987 244 82.4 328	74.9 .554 1978 243 85.4 338	76.4 .575 1967 243 88.4 348
150	67.7 .464 2211 257 67.0 296	69.3 .481 2196 257 69.4 305	70.3 .493 2155 253 72.0 310	71.6 .508 2128 251 74.4 317	73.3 .529 2130 251 76.9 327	75.0 .551 2128 252 79.5 338	76.6 .573 2122 252 82.3 349	78.2 .595 2117 252 85.0 360
160	69.5 .479 2355 265 65.0 306	70.5 .491 2313 262 67.3 311	71.8 .505 2282 259 69.6 318	73.3 .523 2270 258 71.9 326	75.0 .546 2278 260 74.2 338	76.8 .569 2275 261 76.8 350	78.2 .589 2261 259 79.4 359	79.9 .615 2269 260 81.9 372
170	70.7 .489 2475 271 63.1 312	71.8 .502 2437 268 65.3 318	73.2 .517 2412 266 67.4 325	75.0 .542 2433 268 69.5 338	76.7 .563 2424 268 71.9 349	78.1 .583 2409 267 74.3 358	79.8 .608 2416 268 76.6 370	81.4 .632 2417 268 79.1 382
180	71.8 .499 2594 276 61.3 318	73.2 .513 2564 273 63.3 325	74.9 .535 2578 275 65.3 337	76.5 .557 2575 276 67.5 347	78.1 .578 2566 275 69.7 358	79.7 .600 2562 275 71.9 368	81.4 .624 2566 276 74.1 381	82.8 .648 2565 275 76.4 392
190	73.1 .509 2723 282 59.6 325	74.6 .527 2716 281 61.5 334	76.3 .549 2723 283 63.4 345	78.1 .572 2723 283 65.5 357	79.4 .592 2709 282 67.6 366	81.1 .616 2715 283 69.7 378	82.6 .639 2713 283 71.8 390	84.4 .674 2755 287 73.9 407
200	74.3 .519 2855 287 58.0 331	76.1 .543 2882 290 59.7 344	77.8 .564 2876 291 61.7 355	79.2 .584 2859 290 63.7 364	80.8 .607 2861 290 65.6 376	82.5 .631 2864 290 67.6 387	84.0 .659 2885 292 69.6 402	85.8 .693 2922 295 71.6 419
210	75.8 .535 3024 296 56.4 341	77.4 .556 3024 297 58.2 352	79.1 .577 3020 297 60.1 363	80.5 .598 3010 297 61.9 373	82.2 .621 3015 297 63.8 385	83.6 .644 3011 296 65.7 396	85.5 .680 3067 302 67.6 414	86.9 .703 3056 300 69.5 425
220	77.1 .547 3176 304 55.0 349	78.8 .569 3177 305 56.8 361	80.2 .588 3159 303 58.6 370	81.8 .612 3166 304 60.3 382	83.3 .634 3163 304 62.1 393	85.0 .665 3198 306 63.9 408	86.8 .696 3233 309 65.6 424	87.9 .715 3203 306 67.5 432
230	78.3 .560 3327 311 53.7 358	79.9 .580 3318 311 55.4 368	81.4 .601 3314 310 57.1 378	83.1 .625 3319 311 58.7 390	84.4 .647 3313 310 60.4 400	86.3 .684 3381 316 62.1 420	87.6 .705 3364 314 63.9 430	89.0 .732 3375 313 65.5 442
240	79.6 .573 3484 318 52.5 366	80.9 .591 3459 316 54.1 374	82.5 .613 3464 317 55.7 386	84.1 .636 3465 316 57.3 397	85.8 .668 3512 320 58.9 413	87.5 .699 3549 323 60.5 429	88.6 .717 3514 319 62.1 437	90.1 .747 3545 320 63.7 451

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

11.0–08F0A330–200 CF6–80E1A4 12200000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .990 .000 .000 0 FCOM-G0-03-05-15-023-015

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL270		FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	77.1	.592	78.9	.618	80.4	.644	82.2	.680	83.5	.703	85.4	.735	88.0	.776	89.9	.794
	1829	235	1832	235	1830	235	1854	238	1838	236	1861	237	1916	240	1909	235
	96.6	353	99.9	366	103.2	378	106.7	395	110.2	405	113.3	422	116.1	445	119.3	455
140	79.0	.613	80.6	.639	82.4	.674	83.8	.699	85.2	.728	87.4	.768	89.4	.790	91.2	.804
	1976	244	1975	243	2003	247	1993	246	1997	245	2040	248	2046	244	2031	238
	92.6	366	95.7	378	98.8	396	102.1	407	105.1	420	107.9	440	110.7	453	113.5	461
150	80.7	.633	82.4	.665	84.0	.695	85.3	.719	87.1	.759	88.8	.786	90.7	.800	92.5	.811
	2121	252	2142	254	2152	255	2140	253	2178	256	2186	254	2170	248	2155	240
	89.0	378	91.9	394	94.8	408	97.7	418	100.4	437	103.1	451	105.8	459	107.9	465
160	82.3	.654	84.2	.689	85.3	.709	86.9	.744	88.6	.780	90.0	.796	91.8	.807	93.9	.815
	2279	261	2309	264	2284	261	2311	263	2340	265	2311	258	2293	250	2293	242
	85.7	390	88.4	408	91.1	416	93.6	433	96.1	450	98.8	457	101.0	463	102.0	468
170	84.1	.681	85.3	.703	86.8	.731	88.6	.772	89.7	.790	91.1	.803	93.0	.812	95.8	.821
	2461	272	2441	270	2449	269	2499	274	2463	268	2434	261	2422	252	2460	244
	82.6	407	85.2	416	87.5	429	89.8	449	92.4	455	94.7	461	96.1	466	95.7	471
180	85.5	.698	86.6	.719	88.5	.760	89.7	.783	90.8	.798	92.2	.809	94.5	.817		
	2613	280	2591	276	2648	281	2630	278	2587	271	2561	263	2574	254		
	79.8	417	82.1	425	84.2	446	86.6	455	88.9	460	90.6	464	91.0	468		
190	86.5	.709	88.2	.744	89.7	.777	90.7	.791	91.8	.804	93.4	.813	96.4	.821		
	2742	284	2782	287	2804	288	2756	281	2716	274	2698	264	2747	255		
	77.2	423	79.2	440	81.2	456	83.4	460	85.3	464	86.4	466	85.7	471		
200	87.8	.727	89.6	.765	90.7	.784	91.8	.799	92.8	.809	94.8	.817				
	2909	292	2960	296	2929	291	2887	284	2846	275	2855	266				
	74.6	434	76.5	453	78.5	460	80.5	464	81.9	466	82.1	469				
210	89.1	.749	90.6	.777	91.6	.791	92.7	.804	93.9	.813	96.6	.821				
	3094	301	3104	301	3057	294	3019	286	2990	277	3033	267				
	72.2	447	74.0	460	75.9	464	77.5	468	78.3	469	77.6	471				
220	90.4	.766	91.5	.783	92.6	.798	93.6	.808	95.3	.817						
	3267	309	3231	303	3191	296	3154	288	3152	278						
	70.0	457	71.7	464	73.3	468	74.6	470	74.7	471						
230	91.3	.776	92.3	.789	93.5	.803	94.7	.812	96.9	.821						
	3413	313	3360	306	3330	299	3303	289	3337	280						
	67.9	463	69.5	467	70.8	471	71.5	472	70.9	473						
240	92.1	.782	93.3	.795	94.3	.807	96.0	.816								
	3542	316	3498	309	3465	300	3469	291								
	65.9	467	67.3	471	68.3	473	68.4	474								

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

11.0–08F0A330–200 CF6–80E1A4 12200000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .990 .000 .000 0 FCOM-G0-03-05-15-024-015

R

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=30.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL120		FL140		FL160		FL180		FL200		FL220		FL240	
130	66.9	.445	68.5	.460	70.1	.478	71.2	.490	72.5	.503	74.1	.524	75.8	.546	77.5	.569
	2104	246	2079	245	2064	245	2024	242	1991	239	1988	239	1982	240	1973	240
	68.8	289	71.4	297	74.1	306	77.0	312	79.8	318	82.6	328	85.6	340	88.9	351
140	68.8	.459	70.5	.477	71.6	.490	72.8	.503	74.4	.522	76.1	.544	77.8	.566	79.2	.587
	2244	254	2232	254	2191	251	2157	248	2146	248	2143	249	2134	249	2120	248
	66.5	299	69.0	308	71.6	314	74.2	320	76.8	330	79.5	341	82.5	352	85.4	362
150	70.7	.476	71.8	.488	73.0	.501	74.5	.518	76.3	.542	78.0	.564	79.4	.583	81.1	.608
	2402	263	2359	260	2320	257	2301	256	2309	258	2300	258	2276	256	2281	257
	64.4	310	66.8	315	69.2	321	71.6	330	74.1	342	76.8	353	79.6	362	82.2	375
160	72.0	.487	73.2	.499	74.5	.513	76.4	.538	78.0	.559	79.5	.579	81.2	.604	82.7	.626
	2533	270	2489	266	2453	263	2474	266	2459	266	2442	265	2445	266	2434	265
	62.5	317	64.8	322	67.0	329	69.2	342	71.7	353	74.3	363	76.7	375	79.4	386
170	73.3	.497	74.6	.510	76.3	.533	77.9	.553	79.5	.574	81.1	.597	82.8	.620	84.1	.643
	2660	275	2622	272	2631	274	2618	274	2609	274	2606	274	2599	274	2585	273
	60.7	323	62.8	329	64.9	341	67.1	352	69.5	363	71.8	374	74.2	386	76.7	397
180	74.6	.507	76.1	.526	77.8	.547	79.5	.570	80.9	.589	82.6	.613	84.1	.635	85.7	.667
	2792	281	2783	281	2785	282	2780	282	2757	281	2759	282	2746	281	2772	284
	59.0	330	60.9	339	63.0	351	65.2	362	67.4	372	69.6	384	71.9	395	74.2	412
190	75.9	.518	77.7	.542	79.3	.563	80.8	.582	82.4	.606	84.0	.628	85.3	.651	87.2	.688
	2933	287	2953	289	2943	290	2924	289	2924	289	2910	289	2901	288	2947	293
	57.4	337	59.2	350	61.3	361	63.4	371	65.4	382	67.5	393	69.7	405	71.9	424
200	77.5	.535	79.0	.554	80.7	.576	82.1	.598	83.8	.620	85.1	.641	86.9	.676	88.4	.701
	3116	297	3101	296	3094	297	3086	297	3078	296	3058	295	3103	300	3096	299
	55.8	348	57.7	358	59.7	369	61.6	380	63.6	391	65.6	402	67.7	420	69.9	433
210	78.8	.547	80.5	.570	81.8	.588	83.4	.611	84.9	.632	86.5	.661	88.3	.694	89.3	.709
	3269	304	3269	305	3240	303	3239	303	3226	303	3245	305	3278	308	3220	303
	54.4	356	56.3	368	58.1	377	60.0	388	61.9	399	63.8	414	65.8	431	68.0	438
220	80.1	.561	81.6	.581	83.1	.602	84.7	.624	86.0	.645	87.9	.681	89.2	.703	90.3	.721
	3429	311	3417	311	3409	311	3396	310	3378	309	3435	314	3411	312	3367	308
	53.1	364	54.9	375	56.6	386	58.4	397	60.3	407	62.1	427	64.1	437	66.0	445
230	81.4	.574	82.7	.592	84.3	.615	85.7	.636	87.4	.666	89.1	.696	90.0	.711	91.3	.733
	3590	318	3565	317	3564	317	3548	316	3579	319	3608	322	3538	316	3523	314
	51.9	373	53.6	382	55.2	394	57.0	404	58.7	420	60.5	436	62.4	442	64.2	452
240	82.4	.584	83.9	.605	85.5	.626	86.7	.647	88.6	.683	89.9	.703	90.9	.721	92.3	.745
	3737	324	3730	324	3719	323	3701	322	3767	328	3732	325	3685	321	3680	319
	50.8	380	52.3	390	53.9	401	55.6	412	57.2	431	59.0	441	60.8	448	62.5	460

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3.0 %	△FUEL = + 5.0 %

R

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL270	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	80.0 .606 1972 240 93.6 369	81.6 .629 1960 240 97.0 380	83.1 .657 1961 240 100.5 394	84.9 .690 1970 242 104.0 410	86.0 .711 1945 239 107.7 419	88.0 .745 1967 240 111.1 437	90.2 .774 1985 239 114.4 454	92.1 .791 1973 234 117.6 464
140	81.8 .626 2120 249 89.9 381	83.2 .650 2111 248 93.1 393	85.2 .687 2138 252 96.3 412	86.3 .706 2105 248 99.7 420	87.8 .736 2107 248 103.0 434	89.7 .769 2126 249 106.1 451	91.6 .787 2116 244 109.1 462	93.5 .802 2107 237 111.7 471
150	83.3 .644 2266 256 86.6 392	85.2 .679 2294 260 89.5 411	86.4 .701 2268 258 92.7 421	87.9 .729 2267 257 95.6 434	89.5 .763 2278 258 98.7 450	91.0 .782 2258 253 101.6 459	92.9 .798 2247 247 104.2 468	94.8 .809 2234 240 106.2 474
160	85.1 .670 2448 268 83.5 409	86.6 .697 2443 268 86.3 422	87.9 .720 2421 265 89.1 432	89.4 .752 2430 266 92.0 447	90.7 .777 2417 263 94.7 458	92.2 .793 2387 257 97.4 465	94.1 .806 2380 250 99.4 473	96.3 .815 2386 242 100.2 478
170	86.7 .692 2616 277 80.6 422	87.8 .711 2581 273 83.3 430	89.3 .741 2584 273 85.9 444	90.8 .770 2587 273 88.5 458	91.9 .787 2547 267 91.1 464	93.4 .802 2524 260 93.2 470	95.4 .811 2520 252 94.5 476	98.3 .821 2560 244 94.0 481
180	87.9 .704 2751 282 78.0 429	89.2 .729 2741 281 80.5 441	90.7 .759 2744 281 82.9 455	91.9 .780 2721 277 85.3 464	93.0 .795 2678 270 87.5 469	94.5 .808 2656 262 89.2 474	96.9 .816 2677 254 89.4 479	
190	89.0 .719 2900 288 75.5 438	90.4 .746 2897 288 77.9 451	91.8 .772 2891 286 80.0 463	92.9 .788 2848 280 82.2 468	94.1 .803 2818 273 84.0 474	95.8 .813 2806 264 84.9 477	98.8 .821 2858 255 84.2 481	
200	90.2 .735 3061 296 73.2 448	91.7 .764 3065 295 75.3 462	92.8 .781 3027 290 77.3 468	93.9 .795 2985 283 79.2 473	95.1 .808 2952 275 80.6 476	97.2 .817 2970 266 80.7 479		
210	91.3 .748 3207 301 71.0 456	92.7 .773 3205 299 72.9 467	93.8 .788 3160 292 74.7 472	94.9 .803 3132 286 76.2 477	96.3 .813 3111 277 77.0 479	99.0 .821 3157 267 76.3 481		
220	92.5 .764 3382 308 68.8 466	93.6 .781 3345 302 70.6 472	94.8 .795 3301 295 72.2 477	95.9 .806 3268 287 73.3 479	97.7 .816 3279 278 73.4 481			
230	93.4 .772 3522 312 66.8 470	94.5 .787 3478 305 68.4 476	95.7 .802 3455 298 69.6 481	97.1 .812 3435 289 70.2 483	99.3 .820 3470 280 69.7 484			
240	94.3 .779 3664 315 64.8 475	95.4 .793 3621 307 66.2 479	96.6 .805 3596 300 67.2 483	98.3 .815 3609 290 67.1 485				

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3.0 %	△FUEL = + 5.0 %

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=30.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100			FL120			FL140			FL160			FL180			FL200			FL220			FL240		
130	65.8	.440		66.7	.448		68.6	.467		70.0	.482		71.2	.495		72.6	.510		74.6	.536		76.3	.557	
	2019	243		1957	238		1951	239		1929	238		1894	235		1874	233		1890	235		1881	235	
	70.9	286		73.9	289		76.7	299		79.5	307		82.5	312		85.3	320		88.2	333		91.4	344	
140	67.1	.448		68.9	.466		70.4	.482		71.5	.495		72.9	.509		74.7	.533		76.4	.553		78.1	.575	
	2116	248		2109	248		2090	247		2052	244		2025	242		2036	243		2027	243		2020	243	
	68.8	291		71.4	301		74.0	309		76.7	315		79.3	321		81.9	334		84.9	344		87.8	355	
150	69.0	.464		70.6	.481		71.8	.493		73.1	.507		74.8	.529		76.5	.549		78.2	.572		79.9	.595	
	2261	256		2248	256		2211	253		2182	251		2185	251		2178	251		2173	251		2172	251	
	66.7	301		69.0	310		71.5	316		74.0	323		76.4	334		79.0	344		81.8	355		84.5	367	
160	70.8	.479		71.9	.491		73.2	.505		74.8	.523		76.6	.546		78.4	.568		79.8	.588		81.6	.614	
	2411	265		2368	262		2337	259		2330	259		2336	260		2331	260		2317	259		2327	260	
	64.6	311		66.9	317		69.2	323		71.4	333		73.8	345		76.4	356		78.9	366		81.4	379	
170	72.0	.489		73.3	.502		74.7	.516		76.5	.541		78.3	.563		79.8	.583		81.5	.607		83.2	.631	
	2533	271		2496	268		2470	265		2491	268		2485	268		2471	267		2480	268		2479	268	
	62.7	318		64.9	324		67.0	331		69.1	344		71.5	355		73.9	365		76.1	378		78.5	389	
180	73.3	.498		74.6	.512		76.4	.535		78.1	.556		79.7	.577		81.3	.600		83.1	.624		84.6	.648	
	2657	276		2627	273		2643	275		2635	275		2628	275		2630	275		2635	276		2633	275	
	61.0	324		62.9	331		64.9	343		67.1	353		69.3	364		71.4	376		73.7	388		75.9	400	
190	74.5	.508		76.1	.527		77.9	.549		79.6	.571		81.1	.591		82.8	.615		84.4	.639		86.2	.673	
	2786	281		2784	281		2790	282		2789	283		2776	282		2784	283		2783	282		2827	287	
	59.3	330		61.1	340		63.0	352		65.1	363		67.2	373		69.3	386		71.4	397		73.5	415	
200	75.8	.518		77.6	.543		79.4	.564		80.8	.583		82.5	.607		84.2	.630		85.8	.658		87.7	.693	
	2922	287		2948	290		2944	290		2930	289		2936	290		2936	290		2956	291		3002	295	
	57.7	337		59.4	350		61.4	361		63.3	371		65.2	383		67.2	395		69.2	409		71.2	427	
210	77.3	.535		79.0	.555		80.6	.576		82.2	.597		83.9	.621		85.3	.644		87.3	.679		88.7	.703	
	3098	296		3094	297		3090	297		3087	297		3092	297		3088	296		3146	301		3139	300	
	56.1	348		57.9	358		59.8	369		61.6	380		63.4	392		65.3	403		67.1	422		69.1	434	
220	78.6	.547		80.4	.569		81.7	.587		83.4	.611		85.0	.634		86.7	.664		88.6	.697		89.7	.714	
	3251	303		3255	305		3231	303		3241	303		3243	303		3279	306		3320	309		3284	305	
	54.7	356		56.5	368		58.2	376		59.9	388		61.7	400		63.4	416		65.2	433		67.1	441	
230	79.9	.559		81.5	.580		83.0	.601		84.7	.624		86.1	.646		88.1	.683		89.4	.704		90.8	.729	
	3404	310		3397	310		3396	310		3399	310		3395	309		3467	315		3449	313		3451	312	
	53.4	364		55.1	374		56.7	385		58.4	397		60.1	408		61.7	428		63.5	438		65.1	449	
240	81.2	.572		82.5	.590		84.2	.613		85.8	.636		87.5	.666		89.3	.697		90.4	.715		92.0	.744	
	3561	318		3541	316		3550	317		3552	316		3595	320		3637	322		3597	318		3629	319	
	52.2	372		53.8	381		55.3	393		56.9	404		58.5	421		60.1	437		61.8	444		63.2	459	

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

11.0–08F0A330–200 CF6–80E1A4 12200000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .990 .000 .000 10 FCOM-G0-03-05-15-025-015

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+10
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL270		FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	78.8	.591	80.7	.617	82.1	.642	84.1	.678	85.4	.702	87.5	.739	90.0	.775	91.9	.792
	1878	234	1882	235	1878	234	1903	238	1892	236	1927	238	1968	239	1959	234
	96.0	360	99.2	373	102.5	385	105.9	403	109.4	414	112.4	433	115.5	455	118.6	465
140	80.8	.614	82.4	.638	84.2	.673	85.7	.698	87.2	.727	89.5	.770	91.4	.789	93.3	.803
	2034	244	2031	243	2057	247	2046	245	2054	245	2108	249	2101	244	2089	238
	92.0	374	95.0	386	98.1	404	101.3	415	104.3	428	107.2	452	110.1	463	112.7	471
150	82.4	.632	84.3	.666	85.9	.695	87.3	.719	89.2	.762	90.8	.783	92.7	.800	94.6	.810
	2179	252	2206	255	2212	255	2204	253	2254	258	2240	254	2231	248	2219	240
	88.4	385	91.2	402	94.1	416	96.9	427	99.7	449	102.6	460	105.1	469	107.1	475
160	84.0	.652	86.0	.688	87.3	.711	89.1	.750	90.6	.778	92.0	.794	93.9	.807	96.1	.815
	2336	260	2371	264	2355	261	2398	265	2398	264	2370	257	2361	250	2364	242
	85.1	398	87.8	416	90.5	426	92.9	446	95.6	459	98.2	466	100.3	473	101.1	478
170	85.9	.679	87.2	.701	88.9	.735	90.6	.771	91.7	.788	93.2	.803	95.2	.812	98.0	.821
	2522	271	2505	269	2533	271	2563	273	2528	267	2503	261	2496	252	2538	244
	82.1	414	84.6	424	86.9	440	89.4	458	91.9	465	94.0	471	95.4	476	94.8	481
180	87.3	.697	88.6	.721	90.4	.757	91.7	.781	92.9	.797	94.3	.808	96.7	.817		
	2683	279	2675	277	2710	280	2697	277	2660	271	2634	263	2653	254		
	79.2	425	81.5	436	83.8	454	86.1	464	88.3	470	90.0	474	90.3	479		
190	88.4	.711	90.1	.742	91.6	.773	92.7	.789	93.9	.804	95.5	.813	98.5	.821		
	2825	285	2850	286	2866	286	2828	280	2795	273	2780	264	2834	255		
	76.6	433	78.7	449	80.8	463	82.9	469	84.8	474	85.8	477	84.9	481		
200	89.7	.727	91.4	.763	92.6	.782	93.8	.797	94.9	.809	97.0	.817				
	2989	292	3030	295	3004	290	2964	283	2930	275	2944	266				
	74.1	443	76.1	461	78.0	469	79.9	474	81.3	477	81.4	479				
210	91.0	.745	92.5	.774	93.6	.789	94.7	.804	96.1	.813	98.8	.821				
	3164	300	3181	300	3137	293	3106	286	3082	277	3130	267				
	71.8	454	73.6	468	75.4	473	76.9	478	77.7	479	76.9	481				
220	92.2	.763	93.4	.782	94.6	.796	95.7	.808	97.4	.816						
	3343	308	3318	303	3279	296	3244	287	3250	278						
	69.5	465	71.2	473	72.8	477	74.0	480	74.0	481						
230	93.2	.773	94.3	.788	95.5	.803	96.8	.812	99.1	.820						
	3493	312	3453	305	3427	298	3404	289	3442	280						
	67.4	471	69.0	476	70.2	481	70.9	483	70.2	484						
240	94.1	.780	95.2	.794	96.4	.806	98.1	.815								
	3635	315	3596	308	3568	300	3577	291								
	65.4	476	66.8	480	67.7	483	67.8	485								

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

11.0–08F0A330–200 CF6–80E1A4 12200000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .990 .000 .000 10 FCOM-G0-03-05-15-026-015

R

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=30.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL120		FL140		FL160		FL180		FL200		FL220		FL240	
130	67.6	.445	69.2	.460	70.8	.477	71.9	.490	73.2	.503	74.9	.525	76.6	.546	78.3	.569
	2127	246	2103	245	2087	245	2047	242	2014	239	2015	240	2008	240	1999	240
	68.6	292	71.2	300	73.9	309	76.8	314	79.6	321	82.4	332	85.4	343	88.6	354
140	69.5	.459	71.1	.477	72.3	.489	73.5	.503	75.1	.522	76.8	.544	78.6	.566	80.1	.587
	2271	254	2258	254	2216	251	2180	248	2171	248	2168	249	2160	249	2148	248
	66.4	301	68.8	311	71.4	317	74.0	323	76.6	333	79.3	344	82.2	355	85.2	366
150	71.4	.476	72.5	.488	73.8	.502	75.2	.518	77.0	.541	78.8	.563	80.2	.582	82.0	.608
	2429	263	2384	260	2350	257	2329	256	2336	258	2326	258	2303	256	2310	257
	64.3	312	66.6	318	69.0	324	71.4	333	73.9	345	76.6	356	79.3	365	82.0	379
160	72.7	.487	73.9	.499	75.3	.513	77.1	.538	78.8	.558	80.3	.579	82.0	.603	83.6	.626
	2561	269	2517	266	2484	264	2504	266	2489	266	2472	265	2475	266	2463	265
	62.3	319	64.6	325	66.8	332	69.0	346	71.5	356	74.0	366	76.5	379	79.1	390
170	74.0	.497	75.3	.510	77.1	.533	78.7	.552	80.3	.574	81.9	.597	83.6	.620	85.0	.642
	2690	275	2651	272	2663	274	2650	274	2640	274	2639	274	2632	274	2617	273
	60.6	326	62.6	332	64.7	344	66.9	355	69.3	366	71.6	378	74.0	389	76.5	400
180	75.3	.507	76.9	.525	78.6	.547	80.3	.569	81.7	.589	83.4	.613	84.9	.635	86.6	.667
	2823	281	2816	281	2816	281	2810	282	2791	281	2795	282	2782	281	2806	283
	58.8	332	60.8	342	62.8	354	65.0	365	67.2	375	69.4	388	71.7	399	74.0	415
190	76.6	.518	78.4	.542	80.1	.562	81.6	.582	83.2	.605	84.8	.628	86.2	.651	88.2	.688
	2968	287	2987	289	2976	290	2958	289	2957	289	2948	289	2939	288	2989	293
	57.2	340	59.0	353	61.1	364	63.2	374	65.2	386	67.3	397	69.5	409	71.7	429
200	78.2	.534	79.8	.554	81.4	.576	83.0	.597	84.6	.620	85.9	.640	87.8	.676	89.3	.700
	3149	296	3135	296	3129	297	3123	297	3115	296	3095	295	3143	300	3133	299
	55.7	351	57.5	361	59.5	372	61.4	384	63.4	395	65.4	405	67.5	424	69.6	436
210	79.5	.547	81.3	.569	82.6	.587	84.3	.611	85.8	.632	87.4	.660	89.2	.693	90.2	.709
	3306	303	3303	304	3276	303	3279	303	3267	303	3284	304	3316	308	3258	302
	54.3	359	56.1	371	58.0	380	59.8	392	61.7	403	63.6	418	65.6	435	67.7	441
220	80.8	.560	82.4	.581	83.9	.602	85.5	.623	86.9	.645	88.7	.680	90.1	.702	91.2	.719
	3468	311	3455	311	3447	311	3436	310	3420	309	3476	314	3450	312	3405	307
	53.0	368	54.7	378	56.5	389	58.2	400	60.1	411	61.9	430	63.9	441	65.8	448
230	82.1	.573	83.5	.592	85.1	.614	86.6	.635	88.2	.664	89.9	.695	90.9	.710	92.2	.732
	3630	318	3606	317	3606	317	3588	316	3617	319	3644	321	3583	316	3562	313
	51.8	376	53.4	385	55.1	397	56.8	408	58.5	423	60.3	439	62.2	446	64.0	456
240	83.1	.583	84.7	.605	86.3	.626	87.6	.646	89.4	.681	90.7	.702	91.8	.720	93.2	.744
	3780	324	3774	324	3765	324	3743	322	3803	327	3774	325	3731	320	3723	319
	50.6	383	52.2	394	53.8	405	55.4	415	57.1	434	58.8	444	60.6	452	62.2	463

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3.0 %	△FUEL = + 5.0 %

R

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL270	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	80.9 .605 1996 240 93.3 373	82.4 .628 1985 239 96.7 384	84.0 .656 1986 240 100.1 398	85.8 .689 1996 242 103.7 414	87.0 .711 1975 239 107.3 424	89.1 .746 1999 241 110.7 443	91.2 .772 2009 238 114.0 458	93.1 .790 1998 233 117.2 468
140	82.7 .626 2148 249 89.6 385	84.1 .650 2139 248 92.8 397	86.0 .685 2163 251 96.0 415	87.2 .706 2135 248 99.4 424	88.8 .738 2141 249 102.6 440	90.7 .768 2153 248 105.8 456	92.6 .786 2144 243 108.8 466	94.5 .802 2137 237 111.3 476
150	84.2 .644 2298 257 86.3 397	86.1 .680 2326 260 89.2 415	87.4 .701 2300 258 92.4 425	88.9 .730 2300 257 95.3 438	90.5 .761 2303 257 98.4 454	92.0 .782 2289 253 101.3 464	93.9 .798 2278 247 103.8 473	95.8 .808 2267 239 105.7 479
160	86.0 .670 2480 268 83.2 413	87.6 .698 2480 268 86.0 426	88.9 .721 2460 266 88.8 437	90.4 .750 2456 265 91.7 451	91.7 .775 2446 263 94.5 462	93.2 .792 2419 257 97.1 470	95.1 .806 2415 250 99.0 478	97.4 .815 2423 242 99.7 483
170	87.7 .692 2652 277 80.3 426	88.8 .711 2616 273 83.0 435	90.3 .740 2617 273 85.7 448	91.8 .769 2618 272 88.2 462	92.9 .786 2579 267 90.8 468	94.4 .802 2560 260 92.9 475	96.5 .811 2558 252 94.0 481	98.6 .763 2433 225 93.0 453
180	88.8 .704 2786 282 77.8 433	90.1 .728 2770 280 80.2 444	91.6 .758 2776 280 82.7 459	92.9 .780 2758 277 85.0 469	94.0 .794 2714 270 87.2 473	95.5 .807 2693 262 88.9 479	97.7 .810 2677 251 89.7 480	
190	89.9 .717 2933 288 75.3 442	91.3 .744 2927 287 77.6 454	92.8 .770 2925 285 79.8 467	93.9 .787 2888 280 81.9 473	95.1 .803 2860 273 83.7 478	96.8 .812 2848 264 84.6 482		
200	91.1 .733 3094 295 73.0 451	92.7 .762 3101 294 75.1 465	93.8 .780 3068 289 77.1 473	94.9 .795 3026 282 78.9 478	96.1 .807 2995 275 80.3 481	98.3 .817 3016 266 80.3 484		
210	92.2 .746 3246 300 70.8 460	93.6 .772 3245 299 72.6 471	94.8 .787 3202 292 74.4 477	96.0 .803 3177 285 75.9 482	97.4 .812 3159 277 76.6 484			
220	93.5 .763 3426 308 68.6 470	94.6 .780 3389 302 70.3 477	95.7 .794 3346 295 71.9 481	96.9 .806 3316 287 73.0 484	98.6 .813 3308 277 73.3 485			
230	94.3 .771 3568 311 66.5 475	95.5 .786 3525 305 68.1 480	96.7 .802 3505 298 69.3 486	98.1 .812 3489 289 69.9 488				
240	95.2 .778 3713 314 64.5 479	96.4 .792 3672 307 65.9 484	97.6 .805 3649 299 66.8 488	98.9 .804 3578 286 67.5 483				

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3.0 %	△FUEL = + 5.0 %

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=30.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL120		FL140		FL160		FL180		FL200		FL220		FL240	
130	66.4	.440	67.4	.448	69.3	.466	70.7	.482	71.9	.495	73.4	.511	75.3	.536	77.1	.557
	2041	243	1978	238	1972	239	1951	238	1919	235	1900	233	1915	235	1904	235
	70.7	289	73.7	292	76.5	302	79.3	309	82.2	315	85.0	323	87.9	337	91.1	347
140	67.7	.448	69.6	.466	71.1	.482	72.2	.494	73.6	.509	75.5	.533	77.2	.553	78.9	.575
	2140	248	2133	248	2113	247	2076	244	2050	242	2063	243	2054	243	2046	243
	68.6	294	71.2	304	73.8	312	76.4	317	79.1	324	81.7	337	84.6	347	87.6	358
150	69.7	.464	71.3	.481	72.5	.493	73.8	.507	75.6	.528	77.3	.549	79.0	.571	80.7	.595
	2288	256	2274	256	2237	253	2207	250	2211	251	2206	251	2198	251	2201	251
	66.5	304	68.8	313	71.3	319	73.8	326	76.2	337	78.8	348	81.5	359	84.2	371
160	71.5	.479	72.6	.491	73.9	.505	75.6	.523	77.3	.546	79.1	.567	80.6	.588	82.5	.613
	2437	265	2395	262	2364	259	2358	259	2364	260	2357	260	2345	259	2355	260
	64.4	314	66.7	320	69.0	326	71.2	336	73.6	348	76.1	359	78.7	369	81.1	382
170	72.7	.489	74.0	.501	75.4	.517	77.3	.541	79.1	.562	80.6	.582	82.4	.607	84.0	.631
	2562	270	2524	267	2502	265	2522	268	2514	268	2500	267	2510	268	2509	267
	62.6	321	64.7	327	66.8	334	68.9	348	71.3	358	73.6	368	75.9	381	78.3	393
180	74.0	.498	75.3	.512	77.2	.535	78.8	.555	80.5	.577	82.2	.600	83.9	.624	85.4	.648
	2687	276	2657	273	2674	275	2667	275	2660	275	2664	275	2666	275	2665	275
	60.8	327	62.8	334	64.7	346	66.9	357	69.1	368	71.2	379	73.4	392	75.7	403
190	75.2	.508	76.9	.527	78.6	.549	80.4	.571	81.9	.591	83.7	.615	85.2	.639	87.1	.673
	2818	281	2817	281	2822	282	2820	283	2810	282	2820	283	2819	282	2863	286
	59.1	333	60.9	343	62.9	355	65.0	366	67.0	377	69.0	389	71.1	401	73.2	419
200	76.5	.518	78.4	.542	80.1	.564	81.6	.583	83.3	.606	85.0	.630	86.6	.658	88.6	.692
	2957	287	2981	290	2979	290	2963	289	2971	290	2973	290	2994	291	3040	295
	57.5	340	59.2	353	61.2	365	63.2	374	65.0	386	67.0	398	69.0	413	70.9	431
210	78.0	.534	79.7	.555	81.4	.576	83.0	.597	84.7	.621	86.2	.643	88.1	.679	89.6	.702
	3132	296	3128	296	3126	297	3124	297	3130	297	3127	296	3185	301	3176	300
	55.9	350	57.7	361	59.6	372	61.4	384	63.2	396	65.1	407	66.9	426	68.9	438
220	79.3	.547	81.1	.569	82.5	.587	84.3	.611	85.9	.634	87.6	.664	89.5	.695	90.6	.713
	3288	303	3289	304	3267	302	3282	303	3283	303	3319	306	3356	309	3323	305
	54.6	359	56.3	370	58.1	379	59.7	392	61.5	404	63.3	420	65.0	436	66.9	444
230	80.6	.559	82.2	.580	83.8	.601	85.6	.624	87.0	.646	89.0	.682	90.3	.703	91.7	.727
	3443	310	3435	310	3435	310	3440	310	3438	309	3507	315	3488	313	3489	311
	53.3	367	54.9	377	56.6	388	58.2	400	59.9	412	61.5	432	63.3	442	64.9	453
240	81.9	.572	83.3	.590	85.0	.613	86.6	.635	88.3	.665	90.1	.696	91.3	.714	92.9	.742
	3602	317	3582	316	3593	316	3591	316	3635	319	3674	322	3641	318	3670	318
	52.1	375	53.6	384	55.2	396	56.8	408	58.3	424	59.9	440	61.5	448	63.0	463

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

11.0–08F0A330–200 CF6–80E1A4 12200000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .990 .000 .000 15 FCOM-G0-03-05-15-027-015

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+15
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL270		FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	79.6	.591	81.5	.617	83.0	.642	85.0	.679	86.4	.703	88.6	.741	91.0	.773	92.9	.791
	1901	234	1905	235	1904	234	1932	238	1921	236	1963	239	1991	239	1984	234
	95.7	364	98.9	377	102.2	389	105.5	408	109.0	419	112.0	440	115.1	458	118.2	469
140	81.7	.614	83.2	.638	85.1	.672	86.6	.697	88.3	.730	90.5	.769	92.4	.788	94.3	.803
	2060	244	2057	243	2083	246	2073	245	2094	246	2134	249	2129	244	2119	237
	91.7	378	94.7	390	97.8	407	101.0	419	103.9	435	106.9	456	109.7	467	112.3	476
150	83.3	.633	85.2	.665	86.8	.694	88.3	.720	90.2	.760	91.8	.783	93.7	.799	95.6	.810
	2210	252	2234	254	2241	255	2240	254	2277	257	2271	254	2262	248	2251	240
	88.1	390	90.9	406	93.8	420	96.6	433	99.4	453	102.2	464	104.7	474	106.6	480
160	84.9	.653	87.0	.689	88.3	.712	90.0	.747	91.5	.777	93.0	.793	94.9	.806	97.2	.815
	2369	260	2405	264	2394	262	2422	264	2426	263	2401	257	2395	250	2401	242
	84.8	402	87.5	421	90.1	432	92.7	449	95.4	463	97.9	470	99.8	478	100.6	483
170	86.7	.678	88.2	.703	89.8	.734	91.6	.769	92.7	.787	94.2	.802	96.2	.811		
	2553	271	2544	270	2565	271	2594	272	2561	267	2539	260	2534	252		
	81.8	418	84.4	429	86.7	445	89.1	462	91.6	469	93.7	476	95.0	481		
180	88.2	.697	89.5	.719	91.3	.756	92.7	.781	93.8	.796	95.3	.808	97.6	.814		
	2718	279	2700	277	2743	280	2735	277	2695	270	2672	262	2678	253		
	79.0	429	81.3	439	83.5	458	85.8	469	88.0	474	89.6	479	90.1	483		
190	89.3	.709	90.9	.740	92.6	.771	93.7	.789	94.9	.804	96.6	.812				
	2857	284	2877	285	2901	286	2868	280	2836	273	2822	264				
	76.4	437	78.5	452	80.6	467	82.6	474	84.4	479	85.4	482				
200	90.6	.725	92.4	.761	93.6	.781	94.8	.796	95.9	.808	98.0	.817				
	3021	291	3064	294	3042	290	3005	283	2974	275	2990	266				
	73.9	447	75.8	465	77.8	473	79.6	478	81.0	482	81.0	484				
210	91.9	.744	93.4	.773	94.6	.788	95.8	.803	97.1	.813	99.0	.762				
	3200	299	3218	299	3178	292	3150	286	3130	277	2965	246				
	71.5	458	73.3	472	75.1	477	76.6	483	77.4	484	76.2	452				
220	93.2	.762	94.4	.781	95.6	.795	96.7	.807	98.5	.817						
	3385	307	3362	302	3323	295	3292	287	3302	278						
	69.3	469	71.0	477	72.5	482	73.7	485	73.7	487						
230	94.1	.772	95.3	.787	96.5	.802	97.8	.812								
	3537	311	3499	305	3476	298	3456	289								
	67.2	475	68.7	481	69.9	486	70.6	488								
240	95.0	.779	96.2	.793	97.4	.806	98.8	.810								
	3684	315	3645	308	3621	300	3583	288								
	65.1	480	66.5	485	67.4	488	67.9	486								

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

11.0–08F0A330–200 CF6–80E1A4 12200000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .990 .000 .000 15 FCOM-G0-03-05-15-028-015

R

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+20
CG=30.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100	FL120	FL140	FL160	FL180	FL200	FL220	FL240
130	68.2 .445	69.8 .460	71.4 .477	72.6 .489	73.9 .503	75.7 .525	77.4 .546	79.1 .568
	2151 246	2125 245	2109 244	2070 241	2039 239	2042 240	2034 240	2022 239
	68.4 294	71.1 302	73.7 311	76.5 317	79.4 324	82.1 335	85.1 346	88.3 357
140	70.1 .459	71.8 .477	72.9 .489	74.2 .502	75.9 .521	77.6 .544	79.4 .566	80.9 .587
	2297 254	2283 254	2241 251	2204 248	2196 248	2195 248	2187 249	2176 248
	66.2 304	68.6 313	71.2 319	73.8 325	76.4 335	79.1 347	82.0 359	84.9 370
150	72.1 .476	73.2 .488	74.5 .501	76.0 .518	77.8 .541	79.5 .562	81.0 .582	82.8 .608
	2456 263	2413 260	2376 257	2357 256	2362 257	2351 257	2331 256	2341 257
	64.1 315	66.5 321	68.8 327	71.2 336	73.7 348	76.4 359	79.1 369	81.7 383
160	73.4 .486	74.6 .499	76.0 .513	77.9 .538	79.5 .558	81.1 .578	82.8 .603	84.4 .625
	2588 269	2545 266	2515 264	2533 266	2518 266	2500 265	2504 266	2494 265
	62.2 322	64.4 328	66.6 335	68.8 349	71.3 359	73.8 369	76.3 382	78.9 393
170	74.7 .496	76.0 .510	77.8 .533	79.4 .552	81.1 .574	82.7 .597	84.5 .620	85.8 .642
	2720 275	2681 272	2695 274	2681 273	2671 274	2669 274	2663 274	2648 272
	60.4 329	62.5 335	64.5 348	66.7 358	69.1 369	71.4 381	73.8 393	76.2 404
180	76.0 .507	77.6 .525	79.3 .547	81.1 .569	82.5 .589	84.3 .613	85.8 .635	87.5 .666
	2856 281	2849 280	2848 281	2843 282	2825 281	2829 282	2816 281	2838 283
	58.7 335	60.6 345	62.6 357	64.8 369	67.0 379	69.2 391	71.5 402	73.8 419
190	77.4 .518	79.2 .542	80.9 .562	82.3 .581	84.0 .605	85.6 .627	87.1 .651	89.0 .687
	3003 287	3021 289	3012 290	2990 288	2993 289	2984 288	2977 288	3023 293
	57.1 343	58.9 356	60.9 367	63.0 377	65.0 389	67.1 401	69.3 413	71.5 432
200	78.9 .534	80.5 .554	82.2 .575	83.8 .597	85.4 .619	86.8 .640	88.7 .675	90.1 .699
	3185 296	3170 296	3165 296	3160 296	3151 296	3134 295	3179 299	3168 298
	55.5 354	57.4 364	59.3 375	61.2 387	63.2 398	65.2 409	67.3 428	69.4 440
210	80.2 .547	82.0 .569	83.4 .587	85.1 .611	86.6 .632	88.2 .659	90.0 .691	91.0 .708
	3340 303	3339 304	3313 303	3319 303	3305 302	3318 304	3350 307	3299 302
	54.1 362	56.0 374	57.8 383	59.6 396	61.5 407	63.4 421	65.4 438	67.5 445
220	81.6 .560	83.1 .580	84.7 .602	86.4 .624	87.7 .644	89.5 .679	90.9 .700	92.1 .719
	3505 311	3488 310	3487 310	3479 310	3460 309	3511 313	3487 311	3448 307
	52.9 371	54.6 381	56.3 393	58.1 404	59.9 414	61.7 433	63.7 444	65.6 452
230	82.9 .573	84.3 .591	85.9 .614	87.4 .634	89.0 .663	90.8 .693	91.8 .709	93.1 .730
	3670 318	3646 317	3646 317	3628 316	3652 318	3684 320	3625 315	3604 312
	51.6 379	53.3 389	54.9 401	56.6 411	58.4 426	60.1 443	62.0 449	63.7 459
240	83.9 .583	85.5 .605	87.1 .626	88.4 .645	90.2 .680	91.6 .701	92.7 .719	94.1 .742
	3821 324	3818 324	3807 323	3780 321	3842 326	3819 324	3775 320	3767 318
	50.5 386	52.0 397	53.6 408	55.3 418	56.9 437	58.6 448	60.3 456	62.0 467

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3.0 %	△FUEL = + 5.0 %

R

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+20
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL270	FL290	FL310	FL330	FL350	FL370	FL390	FL410
130	81.7 .605 2021 240 93.0 376	83.3 .628 2010 239 96.4 387	84.9 .656 2011 240 99.8 401	86.7 .689 2024 242 103.3 418	88.0 .714 2011 240 106.9 430	90.0 .744 2020 240 110.4 446	92.2 .771 2034 238 113.7 462	94.1 .789 2024 233 116.8 473
140	83.5 .625 2175 249 89.4 389	85.0 .649 2166 248 92.5 401	86.9 .685 2190 251 95.7 419	88.2 .707 2167 249 99.1 429	89.8 .737 2169 249 102.3 444	91.6 .767 2179 248 105.5 460	93.6 .785 2172 243 108.4 471	95.5 .802 2168 237 110.8 481
150	85.1 .644 2329 257 86.0 401	87.0 .679 2356 260 88.9 419	88.3 .702 2333 258 92.1 429	89.8 .728 2325 257 95.1 442	91.4 .760 2331 257 98.1 458	93.0 .782 2321 253 100.9 469	94.9 .797 2310 247 103.4 478	96.7 .803 2276 238 105.7 481
160	86.9 .670 2512 268 82.9 417	88.6 .699 2516 268 85.7 431	89.8 .719 2485 265 88.6 440	91.3 .748 2483 264 91.5 454	92.7 .774 2476 262 94.1 466	94.2 .791 2453 257 96.7 474	96.2 .805 2451 250 98.5 483	97.6 .749 2284 220 98.3 449
170	88.6 .692 2686 277 80.1 430	89.7 .711 2650 273 82.8 439	91.2 .739 2647 272 85.4 452	92.7 .767 2648 272 87.9 466	93.9 .785 2613 266 90.4 473	95.4 .801 2597 260 92.5 480	96.9 .787 2493 244 94.7 472	
180	89.6 .702 2816 281 77.6 437	91.0 .726 2801 279 80.0 448	92.6 .757 2812 280 82.4 463	93.8 .779 2793 276 84.7 473	95.0 .793 2750 269 86.9 478	96.5 .807 2733 262 88.5 484		
190	90.8 .716 2966 287 75.1 445	92.2 .742 2960 286 77.4 458	93.7 .770 2964 285 79.5 471	94.9 .787 2928 279 81.6 478	96.1 .803 2901 273 83.3 483	97.2 .786 2769 255 85.1 471		
200	92.0 .731 3125 294 72.7 454	93.6 .761 3137 294 74.8 469	94.8 .779 3108 289 76.7 477	95.9 .795 3071 282 78.5 482	97.1 .806 3033 274 80.0 485			
210	93.1 .745 3283 300 70.5 463	94.6 .770 3285 298 72.3 475	95.7 .786 3245 292 74.1 481	97.0 .803 3226 285 75.5 487	97.6 .777 3043 263 76.9 468			
220	94.4 .762 3469 307 68.3 474	95.5 .779 3433 302 70.0 481	96.7 .793 3393 295 71.6 485	97.6 .796 3301 283 73.2 484				
230	95.3 .770 3616 311 66.2 479	96.5 .785 3573 304 67.8 484	97.7 .801 3555 298 69.0 490	98.2 .762 3311 270 69.8 462				
240	96.2 .777 3761 314 64.3 483	97.4 .791 3724 307 65.6 488	98.0 .786 3578 292 67.2 481					

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3.0 %	△FUEL = + 5.0 %

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+20
CG=30.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100			FL120			FL140			FL160			FL180			FL200			FL220			FL240		
130	67.0	.440		68.0	.447		69.9	.466		71.4	.482		72.7	.495		74.1	.511		76.1	.536		77.9	.557	
	2062	243		1998	238		1994	239		1973	238		1944	235		1922	233		1938	235		1928	235	
	70.6	291		73.5	294		76.2	304		79.1	312		82.0	319		84.8	326		87.6	340		90.8	350	
140	68.4	.448		70.2	.466		71.7	.481		72.9	.494		74.4	.509		76.3	.533		78.0	.554		79.7	.575	
	2164	247		2156	248		2135	247		2099	244		2074	241		2090	243		2081	243		2070	242	
	68.5	296		71.0	306		73.6	314		76.2	320		78.9	327		81.4	340		84.3	351		87.3	361	
150	70.4	.464		72.0	.480		73.2	.493		74.5	.507		76.3	.528		78.1	.549		79.8	.571		81.5	.595	
	2314	256		2300	256		2262	253		2231	250		2236	251		2231	251		2227	251		2230	251	
	66.3	307		68.6	316		71.1	322		73.6	328		75.9	340		78.6	351		81.3	362		83.9	374	
160	72.1	.478		73.3	.491		74.6	.505		76.3	.523		78.1	.545		79.9	.567		81.4	.587		83.3	.613	
	2463	265		2423	262		2393	259		2386	259		2390	259		2385	260		2373	259		2386	260	
	64.2	317		66.5	322		68.8	329		71.0	339		73.4	351		75.9	362		78.4	372		80.9	386	
170	73.4	.488		74.7	.501		76.2	.517		78.1	.541		79.9	.562		81.3	.581		83.2	.607		84.8	.630	
	2589	270		2552	267		2532	266		2552	268		2546	268		2528	266		2540	267		2538	267	
	62.4	323		64.5	329		66.6	337		68.7	351		71.1	362		73.4	371		75.7	384		78.1	396	
180	74.6	.498		76.0	.512		77.9	.535		79.6	.555		81.3	.576		83.0	.599		84.8	.623		86.3	.647	
	2718	276		2686	273		2706	275		2698	275		2691	275		2695	275		2698	275		2698	275	
	60.6	330		62.6	336		64.5	349		66.7	360		68.9	371		71.0	383		73.2	395		75.5	407	
190	75.9	.508		77.6	.527		79.4	.548		81.2	.570		82.7	.591		84.5	.615		86.1	.639		88.0	.673	
	2851	281		2850	281		2854	282		2853	283		2844	282		2855	283		2853	282		2898	286	
	58.9	336		60.8	346		62.7	358		64.8	370		66.8	380		68.8	393		70.9	405		73.0	423	
200	77.3	.519		79.1	.542		80.9	.563		82.4	.582		84.1	.606		85.8	.630		87.5	.658		89.5	.691	
	2992	287		3017	290		3013	290		2996	289		3006	290		3010	290		3031	291		3074	295	
	57.3	343		59.1	356		61.0	368		63.0	377		64.8	390		66.8	402		68.7	417		70.7	435	
210	78.8	.534		80.5	.554		82.2	.575		83.8	.597		85.6	.620		87.0	.643		89.0	.678		90.5	.701	
	3168	296		3164	296		3160	296		3162	297		3166	297		3165	296		3221	301		3213	299	
	55.8	353		57.6	364		59.4	376		61.2	387		63.0	399		64.9	411		66.7	430		68.7	441	
220	80.1	.546		81.9	.568		83.3	.587		85.1	.611		86.7	.633		88.4	.662		90.3	.694		91.5	.712	
	3322	303		3326	304		3305	302		3321	303		3321	303		3353	305		3392	308		3364	304	
	54.4	362		56.1	373		57.9	383		59.6	396		61.3	407		63.1	423		64.8	440		66.6	448	
230	81.4	.559		83.0	.579		84.6	.600		86.4	.624		87.8	.645		89.8	.680		91.2	.702		92.6	.726	
	3480	310		3471	310		3474	310		3481	310		3477	309		3542	314		3527	312		3532	310	
	53.1	370		54.8	380		56.4	392		58.0	404		59.7	415		61.3	435		63.1	445		64.6	457	
240	82.7	.571		84.1	.590		85.8	.612		87.4	.634		89.1	.663		91.0	.694		92.1	.713		93.7	.741	
	3642	317		3621	316		3632	316		3632	316		3670	318		3713	321		3683	317		3712	317	
	51.9	378		53.5	387		55.0	400		56.6	411		58.1	427		59.7	443		61.3	452		62.8	466	

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

11.0–08F0A330–200 CF6–80E1A4 12200000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .990 .000 .000 20 FCOM-G0-03-05-15-029-015

LONG RANGE CRUISE

MAX. CRUISE THRUST LIMITS
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA+20
CG=37.0%

N1 (%)
KG/H/ENG
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL270		FL290		FL310		FL330		FL350		FL370		FL390		FL410	
130	80.4	.590	82.3	.616	83.9	.642	85.9	.678	87.4	.703	89.6	.739	91.9	.771	93.9	.790
	1923	234	1929	235	1930	234	1958	238	1950	236	1985	238	2014	238	2010	233
	95.4	367	98.6	380	101.8	393	105.2	412	108.6	423	111.7	443	114.8	462	117.8	474
140	82.5	.613	84.1	.637	86.0	.671	87.5	.697	89.3	.731	91.4	.768	93.4	.787	95.3	.802
	2086	243	2082	243	2107	246	2103	245	2124	246	2159	248	2157	243	2150	237
	91.4	381	94.4	393	97.5	411	100.7	423	103.6	440	106.5	460	109.3	472	111.8	481
150	84.2	.632	86.0	.664	87.8	.694	89.2	.719	91.1	.759	92.8	.783	94.7	.798	96.6	.808
	2239	252	2261	254	2271	255	2267	253	2304	256	2303	253	2293	247	2277	239
	87.8	393	90.6	410	93.5	425	96.3	437	99.1	457	101.9	469	104.3	478	106.3	484
160	85.9	.653	87.9	.689	89.2	.711	90.9	.745	92.5	.775	94.0	.793	96.0	.806	97.4	.760
	2403	261	2440	264	2423	262	2448	263	2455	263	2436	257	2430	250	2283	224
	84.5	406	87.2	425	89.9	435	92.4	453	95.1	467	97.5	475	99.4	483	99.8	456
170	87.7	.679	89.1	.703	90.7	.732	92.5	.767	93.7	.786	95.2	.802	96.7	.794		
	2590	271	2578	270	2594	270	2622	272	2593	267	2575	260	2491	246		
	81.5	422	84.1	434	86.4	448	88.8	466	91.2	473	93.3	481	95.5	476		
180	89.1	.696	90.4	.718	92.3	.755	93.6	.780	94.8	.795	96.3	.807				
	2750	279	2735	276	2776	279	2772	277	2731	270	2711	262				
	78.7	433	81.1	443	83.2	462	85.4	474	87.6	479	89.3	484				
190	90.2	.708	91.8	.738	93.5	.770	94.7	.788	95.9	.803	97.1	.793				
	2888	284	2910	284	2937	285	2907	280	2877	273	2767	257				
	76.2	440	78.2	455	80.3	471	82.3	478	84.0	484	86.0	476				
200	91.5	.723	93.3	.759	94.5	.780	95.8	.796	96.9	.808						
	3053	290	3097	293	3083	289	3050	283	3017	275						
	73.7	450	75.6	468	77.5	478	79.2	483	80.6	487						
210	92.8	.742	94.3	.770	95.5	.787	96.8	.803	97.5	.785						
	3235	298	3254	298	3221	292	3198	286	3039	266						
	71.3	461	73.1	475	74.8	482	76.2	488	77.8	473						
220	94.1	.760	95.3	.780	96.5	.795	97.5	.801								
	3425	307	3405	302	3369	295	3301	285								
	69.0	473	70.7	481	72.2	486	73.7	487								
230	95.1	.770	96.3	.786	97.5	.802	98.0	.770								
	3581	311	3548	305	3526	298	3309	273								
	66.9	479	68.4	485	69.6	491	70.6	468								
240	96.0	.778	97.2	.793	98.0	.791										
	3731	314	3697	307	3577	294										
	64.9	484	66.2	489	67.7	484										

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

11.0–08F0A330–200 CF6–80E1A4 12200000C5KG370 0 018590 0 0 1 1.0 0 .00 0 01 .990 .000 .000 20 FCOM-G0-03-05-15-030-015

GENERAL

The following In Cruise Quick Check tables allow the flight crew to determine the fuel consumption and the time required to cover a given air distance from any moment in cruise to land.

These tables are established for :

- Cruise Mach number : M.80/M.82/M.84/LR
- Descent profile : Cruise Mach number/300kt/250kt
- Approach and landing : 240 kg or 530 lb – 6 minutes IMC
- ISA
- CG = 37 %
- R Normal air conditioning (Packs NORM/Cargo cooling OFF or Packs LO/Cargo cooling
- R NORM)
- Anti ice OFF

Note : 1. In the tables, a "" means that a step climb of 4000 feet has been made to reach the corresponding flight level.*

2. The flight level shown on the top of each column is the final flight level.

R *3. For each degree Celsius above ISA apply a fuel correction of*
R *0.010 (kg/°C/NM) × △ISA (°C) × Air Distance (NM)*
R *or 0.022 (lb/°C/NM) × △ISA (°C) × Air Distance (NM)*

CORRECTION FOR DEVIATION FROM REFERENCE WEIGHT

R The In Cruise Quick Check tables are based on a reference initial weight that may vary from
R page to page.
R The fuel consumption must be corrected when the actual weight is different from the
R reference initial weight.
R If it is lower (or greater) than the reference weight, subtract (or add) the value given in the
R correction part of the table per 1000 kg or 1000 lb below (or above) the reference weight.

EXAMPLE

In cruise quick check with cruise at M.82
FL390
Actual cruise weight : 200 000 kg
Remaining ground distance : 2500 NM
ISA + 10
Average wind during flight : – 50 kt (head wind)

– Evaluation of air distance to be covered
  · Using the "Ground Distance Air Distance" conversion table (see 3.05.50 p 3), the corresponding air distance is : 2796 NM ($\sim$ 2800 NM)
– Determination of fuel consumption and time for the reference initial weight in cruise.
  · Enter table on 3.05.20 p 8 with an air distance of 2800 NM and a FL390 for ISA.
  Fuel consumption : 29 762 kg
  Time needed : 6 h 07 min
– Correction due to real in cruise weight of 200 000 kg
  $\triangle$ fuel consumption : 145 kg per 1000 kg above reference weight
  $\triangle$ fuel : 145 $\times$ (200 – 190) = 1450 kg
– Temperature Correction
  $\triangle$ fuel consumption : 0.01 (kg/°C/NM) $\times$ 10°C $\times$ 2800 NM
  $\triangle$ fuel : + 280 kg

Result :
Fuel : 29 762 + 1450 + 280 = 31 492 kg
Time : 6 h 07 min

GENERAL

The following In Cruise Quick Check tables allow the flight crew to determine the fuel consumption and the time required to cover a given air distance from any moment in cruise to land.

These tables are established for :

- Cruise Mach number : M.80/M.82/M.84/LR
- Descent profile : Cruise Mach number/300kt/250kt
- Approach and landing : 240 kg or 530 lb – 6 minutes IMC
- ISA
- CG = 37 %
- R Normal air conditioning (Packs NORM/Cargo cooling OFF or Packs LO/Cargo cooling
- R NORM)
- Anti ice OFF

Note : 1. In the tables, a "" means that a step climb of 4000 feet has been made to reach the corresponding flight level.*

2. The flight level shown on the top of each column is the final flight level.

R *3. For each degree Celsius above ISA apply a fuel correction of*
R *0.010 (kg/°C/NM) × △ISA (°C) × Air Distance (NM)*
R *or 0.022 (lb/°C/NM) × △ISA (°C) × Air Distance (NM)*

CORRECTION FOR DEVIATION FROM REFERENCE WEIGHT

R The In Cruise Quick Check tables are based on a reference initial weight that may vary from
R page to page.
R The fuel consumption must be corrected when the actual weight is different from the
R reference initial weight.
R If it is lower (or greater) than the reference weight, subtract (or add) the value given in the
R correction part of the table per 1000 kg or 1000 lb below (or above) the reference weight.

EXAMPLE

In cruise quick check with cruise at M.82
FL390
Actual cruise weight : 200 000 kg
Remaining ground distance : 2500 NM
ISA + 10
Average wind during flight : – 50 kt (head wind)

– Evaluation of air distance to be covered
  · Using the "Ground Distance Air Distance" conversion table (see 3.05.50 p 3), the corresponding air distance is : 2796 NM (~ 2800 NM)
– Determination of fuel consumption and time for the reference initial weight in cruise.
  · Enter table on 3.05.20 p 8 with an air distance of 2800 NM and a FL390 for ISA.
  Fuel consumption : 29 486 kg
  Time needed : 6 h 08 min
– Correction due to real in cruise weight of 200 000 kg
  △ fuel consumption : 145 kg per 1000 kg above reference weight
R △ fuel : 143 × (200 – 190) = 1430 kg
– Temperature Correction
  △ fuel consumption : 0.01 (kg/°C/NM) × 10°C × 2800 NM
  △ fuel : + 280 kg

Result :

R Fuel : 29 486 + 1430 + 280 = 31 196 kg
Time : 6 h 08 min

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.80 - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
200	1731 0.36	1624 0.36	1526 0.36	1436 0.36	1357 0.36	1297 0.36	0	0	1
300	2939 0.49	2774 0.49	2626 0.49	2497 0.49	2394 0.49	2334 0.49	2	4	6
400	4143 1.01	3921 1.02	3723 1.02	3555 1.02	3425 1.02	3365 1.02	5	7	16
500	5345 1.14	5065 1.15	4816 1.15	4608 1.15	4452 1.15	4388 1.15	8	11	22
600	6543 1.27	6205 1.28	5906 1.28	5657 1.28	5473 1.28	5405 1.28	11	14	27
700	7738 1.40	7342 1.40	6992 1.41	6702 1.41	6490 1.41	6415 1.41	13	18	33
800	8930 1.52	8475 1.53	8074 1.54	7743 1.55	7502 1.55	7419 1.55	16	21	38
900	10119 2.05	9605 2.06	9153 2.07	8780 2.08	8511 2.08	8417 2.08	19	24	43
1000	11306 2.18	10732 2.19	10228 2.20	9813 2.21	9514 2.21	9409 2.21	21	28	48
1100	12489 2.31	11855 2.32	11300 2.33	10842 2.34	10513 2.34	10395 2.34	24	31	52
1200	13669 2.44	12975 2.45	12369 2.46	11867 2.47	11508 2.47	11374 2.47	26	34	57
1300	14846 2.56	14092 2.58	13434 2.59	12889 3.00	12499 3.00	12348 3.00	29	37	62
1400	16021 3.09	15206 3.11	14495 3.12	13906 3.13	13486 3.13	13317 3.13	31	41	66
1500	17194 3.22	16317 3.23	15554 3.25	14920 3.26	14468 3.26	14279 3.26	34	44	71
1600	18364 3.35	17425 3.36	16610 3.38	15931 3.39	15446 3.39	15236 3.39	36	47	75
1700	19531 3.47	18530 3.49	17662 3.51	16939 3.52	16421 3.52	16188 3.52	38	50	79
1800	20695 4.00	19632 4.02	18711 4.04	17944 4.05	17392 4.05	17137 4.05	41	53	83
1900	21857 4.13	20730 4.15	19758 4.17	18945 4.18	18360 4.18	18082 4.18	43	56	87
2000	23016 4.26	21826 4.28	20801 4.30	19943 4.31	19324 4.31	19021 4.31	45	59	91
2100	24172 4.38	22919 4.41	21841 4.43	20937 4.44	20284 4.44	19955 4.44	47	61	95
2200	25326 4.51	24009 4.54	22877 4.56	21929 4.57	21240 4.57	20885 4.57	49	64	98
2300	26477 5.04	25096 5.06	23911 5.09	22917 5.10	22193 5.10	21809 5.10	51	67	102
2400	27627 5.17	26180 5.19	24942 5.22	23901 5.24	23142 5.24	22729 5.24	53	70	106
2500	28774 5.29	27262 5.32	25969 5.35	24883 5.37	24088 5.37	23645 5.37	56	73	109
2600	29918 5.42	28341 5.45	26995 5.48	25861 5.50	25029 5.50	24556 5.50	58	75	112
2700	31061 5.55	29418 5.58	28017 6.01	26837 6.03	25968 6.03	25462 6.03	60	78	116

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI-ICE ON	TOTAL ANTI-ICE ON
△ FUEL = – 0.5 %	△FUEL = + 1 %	△ FUEL = + 1.5 %	△ FUEL = + 3 %

FLIP23 A330–301 CF6–80E1A2 3610 03701.300011 0250300 .8000 .000000 240 0300350170 0 220169 90179 18590 FCOM-G0–03–05–20–003–010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.80 - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 190000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
2800	33470 6.08	31969 6.11	30674 6.14	29715 6.16	29242 6.16	29414 6.16*	75	98	145
2900	34645 6.21	33089 6.24	31743 6.27	30744 6.29	30238 6.29	30399 6.29*	78	101	150
3000	35816 6.34	34204 6.37	32809 6.40	31769 6.42	31229 6.42	31378 6.42*	80	103	154
3100	36986 6.46	35317 6.50	33872 6.53	32791 6.55	32215 6.55	32351 6.55*	82	106	158
3200	38153 6.59	36426 7.03	34931 7.06	33808 7.08	33196 7.08	33318 7.08*	85	109	162
3300	39318 7.12	37533 7.16	35986 7.19	34822 7.21	34173 7.21	34279 7.21*	87	112	166
3400	40479 7.25	38637 7.28	37039 7.32	35832 7.34	35145 7.34	35235 7.34*	89	115	170
3500	41638 7.37	39738 7.41	38090 7.45	36839 7.47	36113 7.47	36185 7.47*	91	118	174
3600	42794 7.50	40836 7.54	39138 7.58	37842 8.01	37078 8.01	37132 8.01*	94	121	177
3700	43947 8.03	41931 8.07	40183 8.11	38842 8.14	38041 8.14	38074 8.14*	96	123	181
3800	45097 8.16	43023 8.20	41224 8.24	39839 8.27	39001 8.27	39011 8.27*	98	126	185
3900	46244 8.28	44112 8.33	42262 8.37	40833 8.40	39956 8.40	39944 8.40*	100	128	188
4000	47388 8.41	45198 8.46	43298 8.50	41822 8.53	40907 8.53	40871 8.53*	102	131	191
4100	48529 8.54	46281 8.59	44330 9.03	42809 9.06	41854 9.06	41793 9.06*	104	134	195
4200	49672 9.07	47361 9.11	45359 9.16	43792 9.19	42798 9.19	42711 9.19*	106	136	198
4300	50813 9.20	48439 9.24	46385 9.29	44771 9.32	43737 9.32	43624 9.32*	108	139	201
4400	51951 9.32	49513 9.37	47408 9.42	45748 9.45	44672 9.45	44532 9.45*	110	141	204
4500	53086 9.45	50585 9.50	48428 9.55	46721 9.58	45604 9.58	45435 9.58*	112	143	207
4600	54219 9.58	51654 10.03	49445 10.08	47691 10.11	46532 10.11	46334 10.11*	113	146	210
4700	55350 10.11	52720 10.16	50459 10.21	48657 10.24	47456 10.24	47229 10.24*	115	148	213
4800	56479 10.23	53783 10.29	51470 10.34	49621 10.37	48376 10.37	48119 10.37*	117	151	216
4900	57604 10.36	54845 10.42	52479 10.47	50582 10.50	49300 10.50	49011 10.50*	119	153	219
5000	58728 10.49	55903 10.54	53484 11.00	51540 11.03	50222 11.03	49898 11.03*	120	155	222
5100	59849 11.02	56959 11.07	54487 11.13	52495 11.16	51141 11.16	50782 11.16*	122	157	224
5200	60968 11.14	58011 11.20	55488 11.26	53446 11.30	52056 11.30	51661 11.30*	123	160	227
5300	62085 11.27	59062 11.33	56486 11.39	54395 11.43	52968 11.43	52537 11.43*	125	162	230

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI-ICE ON	TOTAL ANTI-ICE ON
△ FUEL = – 0.5 %	△FUEL = + 1 %	△ FUEL = + 1.5 %	△ FUEL = + 3 %

FLIP23 A330–301 CF6–80E1A2 3610 03701.000011 0250300 .8000 .000000 240 0300350190 0 220169 90179 18590 FCOM-GO–03–05–20–004–010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.80 - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
200	1699 0.36	1594 0.36	1498 0.36	1411 0.36	1332 0.36	1273 0.36	0	0	1
300	2894 0.49	2733 0.49	2588 0.49	2462 0.49	2359 0.49	2301 0.49	2	3	11
400	4087 1.02	3868 1.02	3674 1.02	3510 1.02	3381 1.02	3323 1.02	5	7	16
500	5276 1.14	5000 1.15	4757 1.15	4553 1.15	4398 1.15	4338 1.15	8	11	22
600	6462 1.27	6129 1.28	5836 1.28	5592 1.29	5410 1.29	5346 1.29	11	14	27
700	7645 1.40	7254 1.41	6911 1.41	6628 1.42	6418 1.42	6347 1.42	13	18	33
800	8826 1.53	8376 1.53	7983 1.54	7659 1.55	7421 1.55	7343 1.55	16	21	38
900	10003 2.05	9494 2.06	9052 2.07	8687 2.08	8421 2.08	8332 2.08	18	24	43
1000	11178 2.18	10609 2.19	10117 2.20	9710 2.21	9416 2.21	9316 2.21	21	28	48
1100	12349 2.31	11721 2.32	11178 2.33	10730 2.34	10407 2.34	10293 2.34	23	31	52
1200	13518 2.44	12830 2.45	12236 2.46	11746 2.47	11394 2.47	11264 2.47	26	34	57
1300	14684 2.56	13935 2.58	13291 2.59	12758 3.00	12377 3.00	12230 3.00	28	37	62
1400	15847 3.09	15037 3.11	14343 3.12	13767 3.13	13356 3.13	13190 3.13	31	40	66
1500	17008 3.22	16137 3.24	15391 3.25	14772 3.26	14330 3.26	14144 3.26	33	44	70
1600	18166 3.35	17234 3.36	16436 3.38	15773 3.39	15301 3.39	15093 3.39	36	47	75
1700	19321 3.47	18327 3.49	17479 3.51	16772 3.52	16268 3.52	16037 3.52	38	50	79
1800	20474 4.00	19418 4.02	18518 4.04	17767 4.05	17231 4.05	16977 4.05	40	53	83
1900	21624 4.13	20505 4.15	19554 4.17	18760 4.18	18191 4.18	17913 4.18	42	56	87
2000	22772 4.26	21590 4.28	20587 4.30	19749 4.31	19146 4.31	18845 4.31	45	59	91
2100	23916 4.39	22672 4.41	21616 4.43	20734 4.44	20098 4.44	19771 4.44	47	61	94
2200	25058 4.51	23750 4.54	22643 4.56	21716 4.58	21046 4.58	20692 4.58	49	64	98
2300	26198 5.04	24826 5.07	23667 5.09	22695 5.11	21991 5.11	21609 5.11	51	67	102
2400	27335 5.17	25899 5.19	24687 5.22	23671 5.24	22931 5.24	22521 5.24	53	70	105
2500	28471 5.30	26970 5.32	25705 5.35	24644 5.37	23869 5.37	23429 5.37	55	73	108
2600	29604 5.42	28040 5.45	26720 5.48	25613 5.50	24802 5.50	24332 5.50	57	75	112
2700	30734 5.55	29106 5.58	27733 6.01	26580 6.03	25733 6.03	25231 6.03	59	78	115

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8000 .00000 240 0300350170 0 250169 90179 18590 FCOM–03-05-20-003-015

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.80 - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 190000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
2800	33113 6.08	31644 6.11	30380 6.14	29447 6.16	28978 6.16	29173 6.16*	75	97	144
2900	34276 6.21	32752 6.24	31440 6.27	30467 6.29	29965 6.29	30151 6.29*	77	100	149
3000	35436 6.34	33857 6.37	32496 6.40	31484 6.42	30947 6.42	31122 6.42*	80	103	153
3100	36593 6.46	34959 6.50	33549 6.53	32496 6.55	31925 6.55	32087 6.55*	82	106	157
3200	37751 6.59	36058 7.03	34598 7.06	33505 7.08	32898 7.08	33046 7.08*	84	109	161
3300	38906 7.12	37153 7.16	35644 7.19	34510 7.21	33866 7.21	34000 7.21*	86	112	165
3400	40058 7.25	38247 7.29	36687 7.32	35511 7.35	34830 7.35	34947 7.35*	89	115	169
3500	41207 7.38	39337 7.41	37728 7.45	36509 7.48	35789 7.48	35890 7.48*	91	117	173
3600	42354 7.50	40424 7.54	38766 7.58	37503 8.01	36745 8.01	36826 8.01*	93	120	176
3700	43497 8.03	41509 8.07	39801 8.11	38495 8.14	37702 8.14	37760 8.14*	95	123	180
3800	44638 8.16	42590 8.20	40833 8.24	39484 8.27	38655 8.27	38690 8.27*	97	126	183
3900	45777 8.29	43668 8.33	41862 8.37	40468 8.40	39604 8.40	39615 8.40*	99	128	187
4000	46912 8.41	44744 8.46	42887 8.50	41450 8.53	40549 8.53	40535 8.53*	101	131	190
4100	48045 8.54	45816 8.59	43910 9.03	42428 9.06	41490 9.06	41450 9.06*	103	134	194
4200	49176 9.07	46886 9.12	44929 9.16	43402 9.19	42427 9.19	42360 9.19*	105	136	197
4300	50306 9.20	47952 9.24	45946 9.29	44374 9.32	43361 9.32	43266 9.32*	107	139	200
4400	51433 9.32	49016 9.37	46959 9.42	45341 9.45	44291 9.45	44167 9.45*	109	141	203
4500	52558 9.45	50077 9.50	47970 9.55	46306 9.58	45216 9.58	45064 9.58*	111	144	206
4600	53680 9.58	51136 10.03	48977 10.08	47268 10.11	46139 10.11	45956 10.11*	113	146	209
4700	54800 10.11	52191 10.16	49982 10.21	48226 10.24	47057 10.24	46844 10.24*	114	148	212
4800	55918 10.23	53244 10.29	50984 10.34	49182 10.37	47972 10.37	47727 10.37*	116	151	215
4900	57033 10.36	54294 10.42	51983 10.47	50135 10.50	48886 10.50	48606 10.50*	118	153	218
5000	58145 10.49	55342 10.55	52980 11.00	51084 11.04	49801 11.04	49482 11.04*	120	155	220
5100	59256 11.02	56387 11.07	53973 11.13	52031 11.17	50713 11.17	50358 11.17*	121	158	223
5200	60363 11.14	57430 11.20	54964 11.26	52975 11.30	51622 11.30	51231 11.30*	123	160	226
5300	61470 11.27	58470 11.33	55953 11.39	53916 11.43	52528 11.43	52099 11.43*	124	162	229

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8000 .00000 240 0300350190 0 250169 90179 18590 FCOM–03-05-20-004-015

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.80 - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 210000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
5400	65802 11.40	63068 11.46	60787 11.52	59192 11.56	58748 11.55*	58556 11.56*	150	202	263
5500	66945 11.53	64156 11.59	61823 12.05	60181 12.09	59698 12.08*	59491 12.09*	152	204	266
5600	68085 12.06	65240 12.12	62856 12.18	61166 12.22	60644 12.21*	60421 12.22*	154	206	270
5700	69222 12.18	66322 12.25	63885 12.31	62153 12.35	61592 12.34*	61347 12.35*	157	208	273
5800	70356 12.31	67401 12.38	64912 12.44	63137 12.48	62535 12.47*	62267 12.48*	159	210	276
5900	71488 12.44	68477 12.51	65936 12.57	64118 13.01	63474 13.00*	63183 13.01*	160	213	279
6000	72616 12.57	69550 13.04	66957 13.10	65095 13.14	64410 13.14*	64095 13.14*	162	215	282
6100	73741 13.10	70621 13.16	67975 13.23	66069 13.27	65342 13.27*	65001 13.27*	164	217	285
6200	74864 13.22	71688 13.29	68989 13.36	67041 13.40	66271 13.40*	65904 13.40*	166	219	288
6300	75987 13.35	72753 13.42	70001 13.49	68009 13.53	67196 13.53*	66802 13.53*	167	221	291
6400	77108 13.48	73814 13.55	71010 14.02	68973 14.06	68117 14.06*	67696 14.07*	169	223	293
6500	78226 14.01	74873 14.08	72016 14.15	69935 14.20	69035 14.19*	68586 14.20*	171	225	296
6600	79342 14.13	75930 14.21	73018 14.28	70893 14.33	69948 14.32*	69471 14.33*	172	227	299
6700	80455 14.26	76985 14.34	74018 14.41	71848 14.46	70859 14.45*	70352 14.46*	174	229	301
6800	81566 14.39	78037 14.47	75015 14.54	72800 14.59	71765 14.58*	71230 14.59*	176	231	303
6900	82673 14.52	79086 14.59	76012 15.07	73749 15.12	72669 15.11*	72110 15.12*	177	233	306
7000	83779 15.04	80133 15.12	77008 15.20	74695 15.25	73568 15.24*	72985 15.25*	179	235	308
7100	84882 15.17	81177 15.25	78001 15.33	75638 15.38	74465 15.37*	73856 15.38*	180	237	311
7200	85983 15.30	82218 15.38	78992 15.46	76580 15.51	75367 15.50*	74724 15.51*	182	239	313
7300	87081 15.43	83257 15.51	79979 15.59	77518 16.04	76268 16.03*	75588 16.04*	183	241	315
7400	88177 15.55	84293 16.04	80964 16.12	78453 16.17	77167 16.16*	76449 16.17*	185	243	317
7500	89271 16.08	85327 16.17	81946 16.25	79386 16.30	78062 16.29*	77306 16.30*	186	245	320
7600	90369 16.21	86359 16.30	82926 16.38	80315 16.43	78954 16.43*	78159 16.43*	188	247	322
7700	91466 16.34	87388 16.42	83903 16.51	81242 16.56	79843 16.56*	79009 16.56*	189	248	324
7800	92560 16.46	88414 16.55	84878 17.04	82166 17.09	80729 17.09*	79856 17.09*	190	250	326
7900	93652 16.59	89439 17.08	85850 17.17	83087 17.22	81613 17.22*	80699 17.22*	191	252	328

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23C A330–301 CF6–80E1A2 3610 03701.000011 0250300 .8000 .000000 240 0300350210 0 250169 90179 18590 FCOM-G0–03–05–20–005–010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.80 - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 230000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
8000	98688 17.12	94881 17.21	91807 17.31	90065 17.34*	89040 17.34*	88800 17.34*	223	298	358
8100	99798 17.25	95936 17.34	92807 17.44	91019 17.47*	89961 17.47*	89689 17.47*	225	300	360
8200	100905 17.38	96987 17.47	93804 17.57	91970 18.00*	90878 18.00*	90574 18.00*	227	302	362
8300	102010 17.51	98036 18.00	94797 18.10	92921 18.13*	91792 18.13*	91455 18.13*	229	303	364
8400	103112 18.03	99082 18.13	95788 18.23	93870 18.26*	92703 18.26*	92332 18.26*	230	305	366
8500	104211 18.16	100126 18.26	96776 18.36	94816 18.39*	93610 18.39*	93205 18.39*	232	307	369
8600	105308 18.29	101168 18.39	97761 18.49	95759 18.52*	94514 18.52*	94075 18.52*	234	309	371
8700	106402 18.42	102206 18.51	98743 19.02	96699 19.05*	95414 19.05*	94941 19.05*	235	310	373
8800	107497 18.54	103242 19.04	99723 19.15	97635 19.18*	96312 19.19*	95803 19.18*	236	312	376
8900	108588 19.07	104276 19.17	100700 19.28	98569 19.31*	97206 19.32*	96661 19.31*	238	314	378
9000	109677 19.20	105306 19.30	101675 19.40	99501 19.45*	98097 19.45*	97516 19.45*	239	316	380
9100	110764 19.33	106335 19.43	102646 19.53	100430 19.58*	98985 19.58*	98367 19.58*	241	317	382
9200	111848 19.45	107362 19.56	103615 20.06	101356 20.11*	99871 20.11*	99215 20.11*	242	319	384
9300	112930 19.58	108388 20.09	104581 20.19	102279 20.24*	100753 20.24*	100059 20.24*	244	321	386
9400	114009 20.11	109411 20.22	105544 20.32	103199 20.37*	101633 20.37*	100901 20.37*	240	322	388
9500	115086 20.24	110431 20.34	106507 20.45	104116 20.50*	102509 20.50*	101739 20.50*	241	324	389
9600		111449 20.47	107473 20.58	105031 21.03*	103382 21.03*	102575 21.03*	262	326	391
9700		112464 21.00	108437 21.11	105943 21.16*	104255 21.16*	103416 21.16*	263	327	393
9800		113477 21.13	109399 21.24	106852 21.29*	105128 21.29*	104254 21.29*	257	329	395
9900		114487 21.26	110357 21.37	107759 21.42*	105999 21.42*	105089 21.42*	259	330	396
10000		115495 21.39	111314 21.50	108663 21.55*	106866 21.55*	105921 21.55*	260	332	398
10100			112268 22.03	109566 22.08*	107731 22.08*	106750 22.08*		333	400
10200			113219 22.16	110465 22.21*	108593 22.21*	107576 22.21*		324	401
10300			114168 22.29	111362 22.34*	109453 22.34*	108399 22.34*		326	403
10400			115115 22.42	112257 22.47*	110310 22.47*	109219 22.47*		327	405
10500				113149 23.00*	111164 23.01*	110036 23.00*		356	407

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23C A330–301 CF6–80E1A2 3610 03701.000011 0250300 .8000 .000000 240 0300350230 0 250169 90179 18590 FCOM-G0–03–05–20–006–010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.80 - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 210000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
5400	65142 11.40	62476 11.46	60243 11.53	58704 11.56	58267 11.55*	58100 11.56*	150	201	262
5500	66274 11.53	63553 11.59	61267 12.06	59688 12.09	59209 12.08*	59028 12.09*	152	203	265
5600	67403 12.06	64627 12.12	62292 12.19	60668 12.22	60147 12.21*	59952 12.22*	154	205	269
5700	68529 12.19	65698 12.25	63313 12.32	61646 12.35	61081 12.35*	60871 12.35*	156	207	272
5800	69652 12.31	66767 12.38	64332 12.45	62622 12.48	62012 12.48*	61786 12.48*	158	209	275
5900	70773 12.44	67833 12.51	65347 12.58	63595 13.01	62947 13.01*	62695 13.01*	160	212	278
6000	71890 12.57	68895 13.04	66360 13.11	64564 13.14	63877 13.14*	63600 13.14*	162	214	281
6100	73005 13.10	69955 13.16	67370 13.24	65530 13.27	64805 13.27*	64500 13.27*	163	216	284
6200	74117 13.22	71012 13.29	68377 13.37	66493 13.40	65728 13.40*	65396 13.41*	165	218	287
6300	75226 13.35	72066 13.42	69380 13.50	67453 13.54	66649 13.53*	66288 13.54*	167	220	290
6400	76339 13.48	73118 13.55	70381 14.03	68409 14.07	67565 14.06*	67176 14.07*	168	223	292
6500	77450 14.01	74166 14.08	71379 14.15	69363 14.20	68479 14.19*	68059 14.20*	170	225	295
6600	78559 14.13	75212 14.21	72374 14.28	70313 14.33	69388 14.32*	68938 14.33*	172	227	297
6700	79665 14.26	76257 14.34	73366 14.41	71260 14.46	70294 14.45*	69813 14.46*	173	229	300
6800	80768 14.39	77299 14.47	74355 14.54	72204 14.59	71197 14.58*	70683 14.59*	175	231	303
6900	81869 14.52	78338 15.00	75342 15.07	73145 15.12	72096 15.11*	71549 15.12*	177	233	305
7000	82967 15.04	79375 15.12	76328 15.20	74083 15.25	72991 15.24*	72414 15.25*	178	235	307
7100	84063 15.17	80409 15.25	77313 15.33	75018 15.38	73884 15.37*	73279 15.38*	180	236	310
7200	85157 15.30	81440 15.38	78294 15.46	75951 15.51	74773 15.50*	74141 15.51*	181	238	312
7300	86249 15.43	82469 15.51	79273 15.59	76881 16.04	75658 16.03*	74999 16.04*	183	240	315
7400	87338 15.56	83496 16.04	80249 16.12	77808 16.17	76548 16.17*	75854 16.17*	184	242	317
7500	88425 16.08	84519 16.17	81222 16.25	78733 16.30	77436 16.30*	76705 16.30*	186	244	319
7600	89510 16.21	85541 16.30	82193 16.38	79654 16.43	78322 16.43*	77552 16.43*	187	246	321
7700	90596 16.34	86561 16.43	83161 16.51	80573 16.56	79204 16.56*	78396 16.56*	188	248	323
7800	91680 16.47	87577 16.55	84127 17.04	81489 17.09	80084 17.09*	79237 17.09*	189	250	326
7900	92762 16.59	88592 17.08	85090 17.17	82402 17.22	80961 17.22*	80074 17.23*	191	252	328

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8000 .00000 240 0300350210 0 250169 90179 18590 FCOM–03-05-20-005-015

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.80 - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 230000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
8000	97748 17.12	94036 17.21	91046 17.31	89340 17.34*	88331 17.34*	88147 17.34*	224	296	357
8100	98847 17.25	95081 17.34	92038 17.44	90289 17.47*	89239 17.47*	89030 17.47*	225	298	359
8200	99944 17.38	96123 17.47	93027 17.57	91235 18.00*	90152 18.00*	89909 18.00*	227	300	361
8300	101038 17.51	97163 18.00	94014 18.10	92178 18.13*	91061 18.13*	90784 18.13*	229	302	363
8400	102129 18.03	98199 18.13	94997 18.23	93118 18.26*	91968 18.26*	91656 18.26*	231	304	365
8500	103218 18.16	99234 18.26	95977 18.36	94056 18.39*	92871 18.39*	92523 18.40*	232	306	367
8600	104304 18.29	100266 18.39	96955 18.49	94992 18.53*	93770 18.53*	93387 18.53*	234	308	369
8700	105387 18.42	101295 18.52	97929 19.02	95924 19.06*	94667 19.06*	94246 19.06*	235	309	372
8800	106469 18.54	102322 19.04	98902 19.15	96853 19.19*	95560 19.19*	95103 19.19*	237	311	374
8900	107552 19.07	103346 19.17	99871 19.28	97780 19.32*	96451 19.32*	95955 19.32*	238	313	376
9000	108632 19.20	104367 19.30	100838 19.41	98703 19.45*	97338 19.45*	96804 19.45*	239	315	378
9100	109710 19.33	105386 19.43	101802 19.54	99624 19.58*	98222 19.58*	97649 19.58*	241	316	381
9200	110786 19.46	106403 19.56	102764 20.07	100543 20.11*	99103 20.11*	98491 20.11*	242	318	383
9300	111859 19.58	107419 20.09	103723 20.20	101458 20.24*	99982 20.24*	99330 20.24*	243	320	385
9400	112930 20.11	108432 20.22	104679 20.33	102371 20.37*	100858 20.37*	100165 20.37*	245	322	386
9500	113998 20.24	109443 20.35	105632 20.46	103281 20.50*	101730 20.50*	100997 20.50*	240	323	388
9600	115064 20.37	110452 20.47	106585 20.59	104189 21.03*	102600 21.03*	101826 21.03*	241	325	390
9700		111458 21.00	107541 21.12	105093 21.16*	103467 21.16*	102652 21.16*	264	326	392
9800		112461 21.13	108494 21.25	105995 21.29*	104331 21.29*	103474 21.29*	266	328	394
9900		113462 21.26	109444 21.38	106894 21.42*	105193 21.42*	104304 21.42*	260	330	395
10000		114461 21.39	110392 21.51	107791 21.55*	106054 21.55*	105132 21.55*	261	331	397
10100		115458 21.52	111338 22.04	108684 22.08*	106912 22.08*	105957 22.08*	263	333	399
10200			112281 22.17	109576 22.21*	107768 22.21*	106779 22.22*		334	400
10300			113222 22.29	110467 22.35*	108621 22.35*	107599 22.35*		326	402
10400			114160 22.42	111355 22.48*	109471 22.48*	108416 22.48*		327	404
10500			115096 22.55	112241 23.01*	110319 23.01*	109229 23.01*		329	405

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8000 .00000 240 0300350230 0 250169 90179 18590 FCOM–03-05-20-006-015

R

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.82 - DESCENT : M.82/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
200	1762 0.36	1647 0.36	1543 0.36	1453 0.36	1372 0.36	1303 0.36	0	0	0
300	3017 0.48	2836 0.48	2673 0.48	2541 0.49	2432 0.49	2352 0.49	2	3	5
400	4269 1.00	4021 1.01	3800 1.01	3624 1.01	3488 1.01	3394 1.01	4	7	10
500	5518 1.13	5203 1.13	4922 1.14	4704 1.14	4538 1.14	4431 1.14	7	10	15
600	6764 1.25	6381 1.26	6041 1.27	5780 1.27	5583 1.27	5461 1.27	9	14	27
700	8007 1.38	7557 1.39	7157 1.39	6851 1.40	6623 1.40	6485 1.40	12	17	32
800	9248 1.50	8730 1.51	8270 1.52	7918 1.52	7659 1.52	7504 1.52	14	20	36
900	10485 2.03	9900 2.04	9380 2.05	8982 2.05	8691 2.05	8518 2.05	16	23	41
1000	11719 2.15	11066 2.16	10487 2.17	10041 2.18	9718 2.18	9526 2.18	19	27	46
1100	12950 2.28	12230 2.29	11591 2.30	11096 2.31	10740 2.31	10528 2.31	21	30	50
1200	14178 2.40	13390 2.41	12691 2.43	12148 2.43	11758 2.43	11525 2.43	23	33	54
1300	15404 2.53	14548 2.54	13788 2.55	13196 2.56	12771 2.56	12517 2.56	26	36	59
1400	16627 3.05	15703 3.06	14882 3.08	14240 3.09	13780 3.09	13504 3.09	28	39	63
1500	17848 3.17	16855 3.19	15974 3.21	15280 3.22	14785 3.22	14485 3.22	30	42	67
1600	19067 3.30	18005 3.32	17062 3.33	16317 3.34	15786 3.34	15462 3.34	32	45	71
1700	20282 3.42	19152 3.44	18148 3.46	17350 3.47	16784 3.47	16435 3.47	34	47	75
1800	21495 3.55	20296 3.57	19231 3.59	18380 4.00	17779 4.00	17405 4.00	37	50	79
1900	22706 4.07	21437 4.09	20311 4.11	19406 4.12	18769 4.12	18371 4.12	39	53	83
2000	23913 4.20	22576 4.22	21388 4.24	20429 4.25	19756 4.25	19332 4.25	41	55	87
2100	25118 4.32	23712 4.34	22462 4.37	21448 4.38	20739 4.38	20289 4.38	43	58	91
2200	26321 4.45	24845 4.47	23533 4.49	22464 4.51	21718 4.51	21241 4.51	45	60	94
2300	27521 4.57	25975 5.00	24602 5.02	23477 5.03	22693 5.03	22190 5.03	47	63	98
2400	28720 5.09	27103 5.12	25667 5.15	24485 5.16	23665 5.16	23134 5.16	49	65	101
2500	29916 5.22	28229 5.25	26731 5.27	25491 5.29	24633 5.29	24074 5.29	51	68	105
2600	31110 5.34	29352 5.37	27791 5.40	26494 5.42	25597 5.42	25009 5.42	53	70	108
2700	32301 5.47	30473 5.50	28849 5.53	27494 5.54	26559 5.54	25941 5.54	55	72	112

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI-ICE ON	TOTAL ANTI-ICE ON
△ FUEL = – 0.5 %	△FUEL = + 1 %	△ FUEL = + 1.5 %	△ FUEL = + 3 %

FLIP23 A330–301 CF6–80E1A2 3610 03701.000011 0250300 .8000 .000000 240 0300350170 0 220169 90179 18590 FCOM-GO–03–05–20–006–010

R

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.82 - DESCENT: M.82/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 190000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
2800	34650 6.00	32891 6.03	31429 6.06	30378 6.07	29762 6.07	29851 6.08*	67	97	145
2900	35873 6.12	34048 6.15	32525 6.18	31432 6.20	30785 6.20	30851 6.20*	69	99	149
3000	37093 6.25	35203 6.28	33616 6.31	32481 6.33	31803 6.33	31845 6.33*	71	102	153
3100	38312 6.37	36354 6.40	34705 6.44	33527 6.46	32817 6.46	32834 6.46*	74	105	157
3200	39528 6.49	37503 6.53	35789 6.56	34569 6.58	33826 6.58	33818 6.59*	76	108	160
3300	40741 7.02	38650 7.05	36872 7.09	35607 7.11	34831 7.11	34799 7.11*	78	110	164
3400	41951 7.14	39794 7.18	37954 7.22	36641 7.24	35832 7.24	35776 7.24*	80	113	168
3500	43158 7.27	40934 7.31	39033 7.34	37673 7.37	36828 7.37	36747 7.37*	82	115	171
3600	44363 7.39	42072 7.43	40109 7.47	38701 7.49	37817 7.49	37715 7.50*	84	118	175
3700	45565 7.52	43207 7.56	41181 8.00	39726 8.02	38803 8.02	38677 8.02*	86	120	179
3800	46764 8.04	44339 8.08	42251 8.12	40747 8.15	39785 8.15	39636 8.15*	87	123	182
3900	47960 8.17	45469 8.21	43317 8.25	41764 8.28	40763 8.28	40589 8.28*	89	125	186
4000	49154 8.29	46595 8.33	44380 8.38	42778 8.40	41736 8.40	41539 8.41*	91	127	189
4100	50347 8.41	47719 8.46	45440 8.50	43789 8.53	42706 8.53	42483 8.53*	93	129	192
4200	51537 8.54	48841 8.58	46497 9.03	44796 9.06	43671 9.06	43424 9.06*	95	132	195
4300	52725 9.06	49961 9.11	47551 9.16	45800 9.19	44633 9.19	44360 9.19*	97	134	199
4400	53910 9.19	51079 9.24	48602 9.29	46800 9.31	45591 9.31	45292 9.31*	98	136	202
4500	55093 9.31	52194 9.36	49657 9.41	47797 9.44	46545 9.44	46220 9.44*	100	138	205
4600	56273 9.44	53307 9.49	50710 9.54	48791 9.57	47495 9.57	47146 9.57*	102	141	208
4700	57451 9.56	54417 10.01	51759 10.07	49782 10.09	48441 10.10	48067 10.10*	104	143	211
4800	58626 10.09	55525 10.14	52806 10.19	50770 10.22	49389 10.22	48985 10.22*	105	145	214
4900	59799 10.21	56631 10.26	53850 10.32	51755 10.35	50334 10.35	49899 10.35*	107	147	216
5000	60971 10.33	57734 10.39	54892 10.45	52737 10.48	51276 10.48	50809 10.48*	109	149	219
5100	62141 10.46	58834 10.52	55931 10.57	53715 11.00	52214 11.00	51715 11.01*	110	151	222
5200	63310 10.58	59932 11.04	56968 11.10	54691 11.13	53149 11.13	52617 11.13*	112	153	225
5300	64476 11.11	61028 11.17	58002 11.23	55664 11.26	54080 11.26	53516 11.26*	114	155	227

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI-ICE ON	TOTAL ANTI-ICE ON
△ FUEL = – 0.5 %	△FUEL = + 1 %	△ FUEL = + 1.5 %	△ FUEL = + 3 %

FLIP23 A330–301 CF6–80E1A2 3610 03701.000011 0250300 .8000 .000000 240 0300350190 0 220169 90179 18590 FCOM-G0–03–05–20–007–010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.82 - DESCENT : M.82/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
200	1729 0.36	1617 0.36	1515 0.36	1425 0.36	1346 0.36	1278 0.36	0	0	0
300	2971 0.48	2793 0.48	2634 0.49	2503 0.49	2396 0.49	2318 0.49	1	3	5
400	4210 1.01	3967 1.01	3750 1.01	3576 1.01	3441 1.01	3351 1.01	4	7	10
500	5446 1.13	5137 1.14	4862 1.14	4645 1.14	4482 1.14	4379 1.14	7	10	21
600	6679 1.26	6304 1.26	5970 1.27	5709 1.27	5517 1.27	5400 1.27	9	13	26
700	7909 1.38	7468 1.39	7076 1.39	6770 1.40	6547 1.40	6415 1.40	11	17	31
800	9136 1.50	8629 1.51	8179 1.52	7827 1.52	7573 1.52	7425 1.52	14	20	36
900	10360 2.03	9787 2.04	9278 2.05	8879 2.05	8595 2.05	8430 2.05	16	23	40
1000	11581 2.15	10942 2.16	10374 2.17	9928 2.18	9612 2.18	9429 2.18	19	26	45
1100	12800 2.28	12094 2.29	11467 2.30	10973 2.31	10625 2.31	10423 2.31	21	29	49
1200	14015 2.40	13243 2.41	12557 2.43	12014 2.43	11633 2.43	11411 2.43	23	32	54
1300	15228 2.53	14389 2.54	13644 2.55	13052 2.56	12637 2.56	12394 2.56	26	35	58
1400	16438 3.05	15532 3.07	14728 3.08	14085 3.09	13636 3.09	13372 3.09	28	38	62
1500	17646 3.18	16673 3.19	15809 3.21	15115 3.22	14632 3.22	14345 3.22	30	41	67
1600	18852 3.30	17811 3.32	16887 3.33	16141 3.34	15623 3.34	15313 3.34	32	44	71
1700	20055 3.42	18947 3.44	17963 3.46	17165 3.47	16611 3.47	16277 3.47	34	47	75
1800	21255 3.55	20079 3.57	19035 3.59	18184 4.00	17597 4.00	17239 4.00	37	49	79
1900	22452 4.07	21209 4.09	20105 4.11	19200 4.13	18578 4.13	18196 4.13	39	52	83
2000	23647 4.20	22336 4.22	21172 4.24	20213 4.25	19556 4.25	19148 4.25	41	55	86
2100	24839 4.32	23460 4.35	22236 4.37	21222 4.38	20530 4.38	20097 4.38	43	57	90
2200	26029 4.45	24582 4.47	23297 4.49	22228 4.51	21501 4.51	21041 4.51	45	60	93
2300	27217 4.57	25701 5.00	24355 5.02	23230 5.04	22467 5.04	21981 5.04	47	62	97
2400	28403 5.10	26818 5.12	25410 5.15	24229 5.16	23430 5.16	22916 5.16	49	65	101
2500	29586 5.22	27932 5.25	26463 5.27	25225 5.29	24390 5.29	23848 5.29	51	67	104
2600	30768 5.35	29043 5.37	27513 5.40	26218 5.42	25346 5.42	24775 5.42	53	69	107
2700	31947 5.47	30153 5.50	28561 5.53	27211 5.55	26298 5.55	25699 5.55	55	72	111

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8200 .00000 240 0300350170 0 250169 90179 18590 FCOM–03-05-20-007-015

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.82 - DESCENT : M.82/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 190000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
2800	34285 6.00	32562 6.03	31104 6.06	30079 6.08	29486 6.08	29566 6.08*	67	96	143
2900	35496 6.12	33708 6.15	32190 6.19	31123 6.20	30500 6.20	30558 6.20*	69	98	147
3000	36704 6.25	34852 6.28	33271 6.31	32164 6.33	31509 6.33	31544 6.33*	71	101	151
3100	37910 6.37	35992 6.40	34350 6.44	33200 6.46	32513 6.46	32525 6.46*	74	104	155
3200	39114 6.50	37130 6.53	35424 6.57	34232 6.59	33514 6.59	33501 6.59*	76	106	159
3300	40314 7.02	38266 7.06	36495 7.09	35261 7.11	34510 7.11	34471 7.11*	78	109	163
3400	41512 7.14	39399 7.18	37569 7.22	36286 7.24	35502 7.24	35438 7.24*	80	112	166
3500	42707 7.27	40529 7.31	38641 7.35	37308 7.37	36489 7.37	36402 7.37*	82	114	170
3600	43899 7.39	41657 7.43	39709 7.47	38326 7.49	37470 7.49	37361 7.49*	84	117	174
3700	45089 7.52	42781 7.56	40775 8.00	39341 8.02	38447 8.02	38317 8.02*	86	119	177
3800	46276 8.04	43903 8.08	41837 8.13	40353 8.15	39420 8.15	39267 8.15*	88	121	181
3900	47460 8.17	45021 8.21	42897 8.25	41361 8.28	40389 8.28	40213 8.28*	90	124	184
4000	48641 8.29	46137 8.33	43953 8.38	42365 8.40	41354 8.40	41155 8.40*	92	126	187
4100	49822 8.42	47251 8.46	45007 8.51	43366 8.53	42314 8.53	42093 8.53*	93	128	191
4200	51000 8.54	48361 8.59	46057 9.03	44364 9.06	43271 9.06	43025 9.06*	95	131	194
4300	52175 9.06	49470 9.11	47105 9.16	45358 9.19	44224 9.19	43954 9.19*	97	133	197
4400	53348 9.19	50577 9.24	48150 9.29	46349 9.31	45173 9.31	44879 9.31*	99	135	200
4500	54518 9.31	51681 9.36	49194 9.41	47336 9.44	46118 9.44	45799 9.44*	101	137	203
4600	55687 9.44	52783 9.49	50236 9.54	48321 9.57	47060 9.57	46715 9.57*	102	139	206
4700	56852 9.56	53882 10.01	51276 10.07	49302 10.10	47998 10.10	47629 10.10*	104	141	209
4800	58016 10.09	54978 10.14	52313 10.19	50281 10.22	48934 10.22	48539 10.22*	106	143	212
4900	59176 10.21	56073 10.27	53348 10.32	51256 10.35	49872 10.35	49445 10.35*	108	145	215
5000	60335 10.34	57165 10.39	54380 10.45	52229 10.48	50807 10.48	50347 10.48*	109	147	218
5100	61493 10.46	58254 10.52	55410 10.57	53198 11.01	51738 11.01	51246 11.01*	111	149	221
5200	62649 10.58	59341 11.04	56437 11.10	54164 11.13	52666 11.13	52140 11.13*	113	151	223
5300	63803 11.11	60425 11.17	57462 11.23	55128 11.26	53591 11.26	53032 11.26*	114	153	226

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8200 .00000 240 0300350190 0 250169 90179 18590 FCOM–03-05-20-008-015

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.82 - DESCENT : M.82/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 210000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
5400	67994 11.24	64752 11.30	62216 11.36	60427 11.39	59886 11.38*	59432 11.39*	135	201	259
5500	69187 11.36	65880 11.42	63277 11.48	61438 11.52	60863 11.51*	60387 11.52*	137	203	262
5600	70376 11.49	67004 11.55	64334 12.01	62451 12.04	61836 12.04*	61337 12.04*	139	205	265
5700	71563 12.01	68126 12.07	65388 12.14	63461 12.17	62805 12.16*	62283 12.17*	141	207	269
5800	72747 12.13	69245 12.20	66439 12.26	64467 12.30	63770 12.29*	63225 12.30*	142	210	272
5900	73929 12.26	70361 12.32	67487 12.39	65470 12.43	64732 12.42*	64163 12.43*	144	212	275
6000	75107 12.38	71475 12.45	68532 12.52	66469 12.55	65689 12.55*	65096 12.55*	146	214	278
6100	76285 12.51	72585 12.57	69574 13.04	67466 13.08	66643 13.07*	66026 13.08*	147	216	281
6200	77461 13.03	73693 13.10	70612 13.17	68459 13.21	67593 13.20*	66952 13.21*	149	218	283
6300	78633 13.16	74799 13.23	71647 13.30	69449 13.34	68539 13.33*	67874 13.34*	150	220	286
6400	79804 13.28	75902 13.35	72680 13.42	70435 13.46	69482 13.46*	68792 13.46*	152	221	289
6500	80971 13.41	77003 13.48	73709 13.55	71418 13.59	70421 13.58*	69706 13.59*	153	223	291
6600	82137 13.53	78102 14.00	74735 14.08	72398 14.12	71356 14.11*	70616 14.12*	155	225	294
6700	83299 14.05	79198 14.13	75762 14.20	73375 14.25	72292 14.24*	71522 14.25*	156	226	297
6800	84460 14.18	80292 14.25	76790 14.33	74349 14.37	73228 14.36*	72425 14.37*	158	228	299
6900	85618 14.30	81383 14.38	77815 14.46	75319 14.50	74161 14.49*	73323 14.50*	159	230	302
7000	86774 14.43	82471 14.50	78838 14.58	76289 15.03	75090 15.02*	74219 15.03*	161	231	304
7100	87928 14.55	83557 15.03	79858 15.11	77256 15.16	76016 15.15*	75110 15.16*	162	233	307
7200	89079 15.08	84641 15.16	80875 15.24	78220 15.28	76939 15.27*	75998 15.28*	163	235	309
7300	90230 15.20	85722 15.28	81889 15.36	79181 15.41	77859 15.40*	76882 15.41*	165	236	311
7400	91380 15.33	86801 15.41	82901 15.49	80139 15.54	78775 15.53*	77762 15.54*	166	238	313
7500	92528 15.45	87878 15.53	83910 16.02	81094 16.06	79689 16.06*	78640 16.07*	167	239	316
7600	93673 15.57	88952 16.06	84916 16.14	82046 16.19	80599 16.18*	79513 16.19*	169	241	318
7700	94816 16.10	90027 16.18	85921 16.27	82995 16.32	81506 16.31*	80384 16.32*	170	242	320
7800	95957 16.22	91100 16.31	86922 16.40	83941 16.45	82410 16.44*	81251 16.45*	171	244	322
7900	97095 16.35	92172 16.43	87921 16.52	84885 16.57	83312 16.57*	82114 16.57*	173	245	325

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23C A330–301 CF6-80E1A2 3610 03701.000011 0250300 .8200 .00000 240 0300350210 0 250169 90179 18590 FCOM–G0–03–05–20–009–010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.82 - DESCENT : M.82/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 230000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
8000	101770 16.48	97209 16.56	93842 17.05	91908 17.08*	90698 17.09*	90195 17.08*	205	299	355
8100	102929 17.00	98303 17.09	94865 17.18	92888 17.21*	91636 17.21*	91104 17.21*	206	301	358
8200	104086 17.12	99395 17.22	95886 17.31	93864 17.34*	92571 17.34*	92009 17.34*	207	303	360
8300	105240 17.25	100484 17.34	96904 17.43	94838 17.47*	93502 17.47*	92910 17.47*	208	305	363
8400	106392 17.37	101571 17.47	97919 17.56	95809 17.59*	94430 18.00*	93807 17.59*	209	306	365
8500	107545 17.50	102655 17.59	98931 18.09	96777 18.12*	95355 18.12*	94701 18.12*	210	308	367
8600	108695 18.02	103736 18.12	99940 18.21	97741 18.25*	96276 18.25*	95591 18.25*	211	310	370
8700	109843 18.15	104815 18.24	100947 18.34	98703 18.38*	97194 18.38*	96477 18.38*	212	312	372
8800	110989 18.27	105891 18.37	101950 18.47	99662 18.50*	98109 18.51*	97360 18.50*	213	314	374
8900	112132 18.40	106968 18.49	102951 18.59	100619 19.03*	99020 19.03*	98240 19.03*	214	316	376
9000	113273 18.52	108043 19.02	103949 19.12	101572 19.16*	99929 19.16*	99116 19.16*	215	318	378
9100	114412 19.04	109115 19.15	104944 19.25	102522 19.29*	100835 19.29*	99989 19.29*	213	320	380
9200	115548 19.17	110185 19.27	105937 19.38	103470 19.41*	101743 19.42*	100862 19.41*	214	321	382
9300		111253 19.40	106928 19.50	104415 19.54*	102650 19.54*	101731 19.54*	231	322	384
9400		112318 19.52	107919 20.03	105357 20.07*	103554 20.07*	102597 20.07*	232	324	385
9500		113381 20.05	108906 20.16	106296 20.19*	104455 20.20*	103459 20.20*	234	325	387
9600		114441 20.17	109891 20.28	107234 20.32*	105353 20.33*	104319 20.32*	227	326	389
9700		115499 20.30	110874 20.41	108169 20.45*	106249 20.45*	105176 20.45*	228	327	391
9800			111853 20.54	109101 20.58*	107141 20.58*	106029 20.58*		329	393
9900			112831 21.06	110030 21.10*	108031 21.11*	106879 21.11*		314	395
10000			113805 21.19	110957 21.23*	108917 21.23*	107727 21.23*		315	397
10100			114777 21.32	111881 21.36*	109802 21.36*	108571 21.36*		315	399
10200			115746 21.44	112802 21.49*	110683 21.49*	109412 21.49*		313	401
10300				113721 22.01*	111562 22.02*	110251 22.01*		352	403
10400				114638 22.14*	112438 22.14*	111086 22.14*		354	396
10500				115551 22.27*	113311 22.27*	111919 22.27*		356	395

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23C A330–301 CF6–80E1A2 3610 03701.000011 0250300 .8200 .000000 240 0300350230 0 250169 90179 18590 FCOM-G0–03–05–20–010–010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.82 - DESCENT : M.82/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 210000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
5400	67321 11.24	64148 11.30	61617 11.36	59872 11.39	59346 11.38*	58919 11.39*	135	200	257
5500	68501 11.36	65264 11.42	62667 11.48	60872 11.52	60314 11.51*	59867 11.52*	137	202	261
5600	69679 11.49	66378 11.55	63714 12.01	61875 12.05	61279 12.04*	60810 12.05*	139	204	264
5700	70855 12.01	67490 12.07	64758 12.14	62877 12.17	62240 12.17*	61750 12.17*	141	206	267
5800	72027 12.14	68598 12.20	65799 12.26	63875 12.30	63197 12.29*	62685 12.30*	142	208	270
5900	73197 12.26	69704 12.32	66837 12.39	64871 12.43	64150 12.42*	63616 12.43*	144	210	273
6000	74364 12.38	70807 12.45	67872 12.52	65863 12.56	65100 12.55*	64542 12.56*	146	212	276
6100	75529 12.51	71908 12.58	68904 13.04	66852 13.08	66045 13.07*	65465 13.08*	147	214	280
6200	76693 13.03	73005 13.10	69933 13.17	67838 13.21	66987 13.20*	66384 13.21*	149	215	282
6300	77854 13.16	74100 13.23	70958 13.30	68820 13.34	67925 13.33*	67299 13.34*	151	217	285
6400	79012 13.28	75193 13.35	71981 13.42	69799 13.46	68860 13.46*	68210 13.47*	152	219	288
6500	80168 13.41	76284 13.48	73000 13.55	70775 13.59	69791 13.58*	69117 13.59*	154	220	290
6600	81322 13.53	77373 14.00	74016 14.08	71748 14.12	70719 14.11*	70020 14.12*	155	222	293
6700	82473 14.06	78459 14.13	75030 14.20	72718 14.25	71643 14.24*	70919 14.25*	157	224	295
6800	83622 14.18	79543 14.25	76050 14.33	73685 14.37	72563 14.37*	71815 14.37*	158	225	298
6900	84768 14.30	80624 14.38	77072 14.46	74648 14.50	73483 14.49*	72707 14.50*	160	227	300
7000	85913 14.43	81703 14.51	78090 14.58	75609 15.03	74406 15.02*	73595 15.03*	161	229	303
7100	87055 14.55	82779 15.03	79106 15.11	76567 15.16	75325 15.15*	74479 15.16*	163	230	305
7200	88194 15.08	83853 15.16	80119 15.24	77522 15.28	76242 15.28*	75360 15.28*	164	232	308
7300	89331 15.20	84925 15.28	81130 15.37	78474 15.41	77155 15.40*	76237 15.41*	166	234	310
7400	90470 15.33	85994 15.41	82138 15.49	79423 15.54	78065 15.53*	77111 15.54*	167	235	312
7500	91606 15.45	87061 15.53	83144 16.02	80370 16.07	78973 16.06*	77981 16.07*	168	237	315
7600	92739 15.58	88126 16.06	84147 16.15	81313 16.19	79877 16.19*	78848 16.19*	169	238	317
7700	93871 16.10	89188 16.18	85148 16.27	82254 16.32	80778 16.31*	79712 16.32*	171	240	319
7800	95000 16.22	90251 16.31	86147 16.40	83191 16.45	81676 16.44*	80572 16.45*	172	241	321
7900	96127 16.35	91312 16.44	87143 16.53	84126 16.58	82571 16.57*	81429 16.58*	173	243	323

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8200 .00000 240 0300350210 0 250169 90179 18590 FCOM–03-05-20-009-015

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.82 - DESCENT : M.82/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 230000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
8000	100810 16.48	96345 16.57	92991 17.06	91093 17.09*	89933 17.09*	89455 17.09*	204	297	353
8100	101959 17.00	97430 17.09	94006 17.18	92064 17.21*	90865 17.22*	90357 17.21*	205	299	356
8200	103104 17.13	98512 17.22	95018 17.31	93033 17.34*	91793 17.34*	91256 17.34*	207	301	358
8300	104247 17.25	99592 17.34	96027 17.44	93999 17.47*	92718 17.47*	92151 17.47*	208	302	361
8400	105388 17.37	100670 17.47	97033 17.56	94961 18.00*	93639 18.00*	93042 18.00*	209	304	363
8500	106527 17.50	101745 17.59	98036 18.09	95921 18.12*	94557 18.13*	93929 18.12*	210	306	365
8600	107666 18.02	102817 18.12	99036 18.22	96877 18.25*	95472 18.25*	94813 18.25*	211	307	368
8700	108803 18.15	103887 18.24	100034 18.34	97830 18.38*	96384 18.38*	95693 18.38*	212	309	370
8800	109938 18.27	104954 18.37	101029 18.47	98781 18.51*	97292 18.51*	96569 18.51*	214	311	372
8900	111070 18.40	106019 18.50	102021 19.00	99729 19.03*	98197 19.04*	97442 19.03*	215	312	374
9000	112199 18.52	107084 19.02	103011 19.12	100674 19.16*	99099 19.16*	98312 19.16*	216	314	376
9100	113327 19.05	108147 19.15	103997 19.25	101617 19.29*	99999 19.29*	99179 19.29*	217	316	378
9200	114452 19.17	109208 19.27	104981 19.38	102556 19.42*	100895 19.42*	100043 19.42*	215	318	380
9300	115574 19.29	110267 19.40	105962 19.50	103493 19.54*	101788 19.54*	100903 19.54*	216	319	382
9400		111323 19.52	106947 20.03	104427 20.07*	102681 20.07*	101762 20.07*	233	320	384
9500		112377 20.05	107931 20.16	105358 20.20*	103575 20.20*	102619 20.20*	234	322	386
9600		113428 20.17	108914 20.28	106286 20.33*	104466 20.33*	103474 20.33*	235	323	388
9700		114477 20.30	109893 20.41	107212 20.45*	105354 20.45*	104325 20.45*	229	324	389
9800		115524 20.43	110871 20.54	108136 20.58*	106240 20.58*	105173 20.58*	230	325	391
9900			111845 21.06	109057 21.11*	107123 21.11*	106018 21.11*		326	393
10000			112818 21.19	109976 21.23*	108003 21.24*	106860 21.24*		313	395
10100			113787 21.32	110892 21.36*	108880 21.36*	107700 21.36*		314	397
10200			114755 21.44	111806 21.49*	109754 21.49*	108536 21.49*		315	399
10300			115719 21.57	112717 22.02*	110626 22.02*	109369 22.02*		313	401
10400				113625 22.14*	111495 22.15*	110200 22.14*		354	403
10500				114531 22.27*	112362 22.27*	111027 22.27*		355	397

PACK FLOW LO
△FUEL = − 0.5 %

PACK FLOW HI OR/ AND CARGO COOL ON
△FUEL = + 1 %

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3 %

FLIP23D A330−200 CF6−80E1A4 3610 03701.000011 0250300 .8200 .00000 240 0300350230 0 250169 90179 18590 FCOM−03-05-20-010-015

R

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.84 - DESCENT : M.84/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
200	1832 0.35	1708 0.35	1598 0.36	1501 0.36	1425 0.36		0	0	0
300	3175 0.47	2976 0.48	2801 0.48	2654 0.48	2556 0.48		1	3	5
400	4516 1.00	4241 1.00	4001 1.00	3801 1.00	3679 1.00		4	7	10
500	5854 1.12	5503 1.12	5196 1.13	4944 1.13	4796 1.13		6	10	31
600	7189 1.24	6761 1.24	6389 1.25	6081 1.25	5907 1.25		8	14	37
700	8522 1.36	8016 1.37	7577 1.37	7214 1.38	7012 1.38		11	17	42
800	9851 1.48	9268 1.49	8763 1.50	8344 1.50	8112 1.50		13	20	47
900	11177 2.00	10516 2.01	9944 2.02	9470 2.03	9207 2.03		15	23	52
1000	12501 2.13	11761 2.14	11122 2.15	10592 2.15	10296 2.15		17	27	56
1100	13822 2.25	13002 2.26	12297 2.27	11709 2.27	11379 2.28	11666 2.28*	19	30	73
1200	15140 2.37	14240 2.38	13468 2.39	12822 2.40	12457 2.40	12731 2.40*	22	33	78
1300	16456 2.49	15476 2.50	14636 2.52	13932 2.52	13530 2.52	13787 2.53*	24	35	83
1400	17769 3.01	16708 3.03	15801 3.04	15037 3.05	14598 3.05	14834 3.05*	26	38	88
1500	19080 3.13	17938 3.15	16963 3.16	16139 3.17	15661 3.17	15873 3.17*	28	41	92
1600	20389 3.25	19165 3.27	18123 3.29	17239 3.30	16719 3.30	16910 3.30*	30	44	97
1700	21695 3.38	20389 3.39	19279 3.41	18335 3.42	17773 3.42	17941 3.42*	32	46	101
1800	22998 3.50	21610 3.52	20431 3.53	19427 3.55	18822 3.55	18966 3.55*	34	49	105
1900	24298 4.02	22828 4.04	21581 4.06	20516 4.07	19866 4.07	19985 4.07*	35	51	107
2000	25596 4.14	24043 4.16	22728 4.18	21602 4.19	20906 4.19	20998 4.20*	37	54	111
2100	26892 4.26	25255 4.28	23871 4.31	22684 4.32	21941 4.32	22005 4.32*	39	56	115
2200	28185 4.38	26465 4.41	25012 4.43	23763 4.44	22971 4.44	23006 4.45*	41	58	119
2300	29476 4.50	27675 4.53	26149 4.55	24838 4.57	23997 4.57	24002 4.57*	43	61	123
2400	30765 5.03	28882 5.05	27284 5.08	25909 5.09	25018 5.09	24992 5.09*	44	63	126
2500	32051 5.15	30087 5.17	28416 5.20	26981 5.22	26035 5.22	25979 5.22*	46	65	130
2600	33335 5.27	31289 5.30	29545 5.32	28050 5.34	27048 5.34	26963 5.34*	48	67	134
2700	34616 5.39	32489 5.42	30672 5.45	29115 5.46	28057 5.46	27942 5.47*	49	70	137

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI-ICE ON	TOTAL ANTI-ICE ON
△ FUEL = – 0.5 %	△FUEL = + 1 %	△ FUEL = + 1.5 %	△ FUEL = + 3 %

FLIP23 A330–301 CF6–80E1A2 3610 03701.000011 0250300 .8000 .000000 240 0300350170 0 220169 90179 18590 FCOM-G0–03–05–20–009-010

R

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.84 - DESCENT : M.84/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 190000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
2800	36926 5.52	34960 5.55	33260 5.58	32119 5.59	32127 5.59*	32068 5.59*	65	108	158
2900	38237 6.04	36192 6.07	34425 6.10	33224 6.12	33197 6.11*	33131 6.12*	67	111	163
3000	39545 6.16	37421 6.19	35586 6.22	34324 6.24	34263 6.24*	34187 6.24*	69	114	168
3100	40851 6.28	38647 6.31	36744 6.35	35419 6.37	35328 6.36*	35236 6.37*	71	116	172
3200	42153 6.40	39871 6.44	37902 6.47	36510 6.49	36387 6.48*	36277 6.49*	73	119	176
3300	43453 6.52	41091 6.56	39058 6.59	37600 7.01	37442 7.01*	37311 7.02*	75	121	180
3400	44751 7.04	42308 7.08	40210 7.12	38685 7.14	38492 7.13*	38338 7.14*	76	124	184
3500	46045 7.17	43522 7.20	41358 7.24	39767 7.26	39538 7.26*	39359 7.26*	78	126	195
3600	47337 7.29	44733 7.33	42504 7.36	40844 7.39	40579 7.38*	40373 7.39*	80	128	199
3700	48626 7.41	45941 7.45	43646 7.49	41917 7.51	41615 7.51*	41380 7.51*	81	130	203
3800	49914 7.53	47146 7.57	44785 8.01	42986 8.04	42647 8.03*	42382 8.04*	83	132	207
3900	51200 8.05	48347 8.09	45921 8.14	44051 8.16	43674 8.16*	43384 8.16*	85	134	210
4000	52484 8.17	49547 8.22	47053 8.26	45111 8.28	44696 8.28*	44381 8.29*	86	136	214
4100	53765 8.29	50745 8.34	48183 8.38	46168 8.41	45714 8.40*	45372 8.41*	88	138	218
4200	55044 8.42	51940 8.46	49310 8.51	47221 8.53	46729 8.53*	46358 8.54*	89	140	221
4300	56320 8.54	53131 8.58	50436 9.03	48269 9.06	47739 9.05*	47340 9.06*	91	142	225
4400	57594 9.06	54321 9.11	51558 9.15	49323 9.18	48745 9.18*	48316 9.18*	92	144	228
4500	58866 9.18	55507 9.23	52677 9.28	50377 9.31	49747 9.30*	49288 9.31*	94	145	231
4600	60135 9.30	56691 9.35	53793 9.40	51427 9.43	50744 9.43*	50254 9.43*	95	147	234
4700	61403 9.42	57872 9.47	54907 9.53	52474 9.55	51738 9.55*	51216 9.56*	97	149	237
4800	62669 9.54	59051 10.00	56018 10.05	53517 10.08	52727 10.07*	52174 10.08*	98	150	240
4900	63933 10.07	60226 10.12	57127 10.17	54558 10.20	53713 10.20*	53126 10.21*	99	152	243
5000	65194 10.19	61403 10.24	58232 10.30	55595 10.33	54695 10.32*	54075 10.33*	100	154	246
5100	66453 10.31	62580 10.36	59335 10.42	56629 10.45	55673 10.45*	55023 10.45*	102	155	249
5200	67710 10.43	63753 10.49	60434 10.54	57660 10.58	56648 10.57*	55967 10.58*	103	156	252
5300	68965 10.55	64924 11.01	61533 11.07	58688 11.10	57618 11.10*	56907 11.10*	104	158	254

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI-ICE ON	TOTAL ANTI-ICE ON
△ FUEL = – 0.5 %	△FUEL = + 1 %	△ FUEL = + 1.5 %	△ FUEL = + 3 %

FLIP23 A330–301 CF6–80E1A2 3610 03701.000011 0250300 .8000 .000000 240 0300350190 0 220169 90179 18590 FCOM-G0–03–05–20–010-010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.84 - DESCENT : M.84/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
200	1796 0.35	1674 0.36	1567 0.36	1472 0.36	1398 0.36		0	0	0
300	3126 0.48	2929 0.48	2757 0.48	2613 0.48	2517 0.48		1	3	5
400	4453 1.00	4180 1.00	3945 1.00	3749 1.01	3630 1.01		3	7	10
500	5778 1.12	5429 1.12	5128 1.13	4880 1.13	4737 1.13		6	10	30
600	7099 1.24	6673 1.25	6308 1.25	6006 1.25	5837 1.25		8	13	36
700	8418 1.36	7915 1.37	7485 1.38	7129 1.38	6932 1.38		10	17	41
800	9734 1.48	9153 1.49	8658 1.50	8247 1.50	8022 1.50		13	20	46
900	11047 2.01	10388 2.01	9827 2.02	9362 2.03	9106 2.03		15	23	51
1000	12357 2.13	11620 2.14	10994 2.15	10473 2.15	10185 2.15	10467 2.15*	17	26	71
1100	13664 2.25	12849 2.26	12156 2.27	11579 2.28	11259 2.28	11533 2.28*	19	29	77
1200	14969 2.37	14075 2.38	13316 2.39	12681 2.40	12327 2.40	12589 2.40*	21	32	82
1300	16271 2.49	15297 2.50	14472 2.52	13780 2.53	13390 2.53	13637 2.53*	23	35	86
1400	17571 3.01	16517 3.03	15625 3.04	14874 3.05	14448 3.05	14675 3.05*	25	38	91
1500	18869 3.13	17736 3.15	16775 3.17	15965 3.17	15501 3.17	15705 3.17*	27	41	96
1600	20164 3.26	18952 3.27	17922 3.29	17054 3.30	16550 3.30	16727 3.30*	29	43	100
1700	21456 3.38	20165 3.39	19067 3.41	18140 3.42	17594 3.42	17749 3.42*	31	46	104
1800	22746 3.50	21375 3.52	20208 3.54	19223 3.55	18633 3.55	18766 3.55*	33	49	108
1900	24033 4.02	22582 4.04	21345 4.06	20302 4.07	19668 4.07	19776 4.07*	35	51	108
2000	25318 4.14	23787 4.16	22480 4.18	21377 4.20	20697 4.20	20780 4.20*	37	54	112
2100	26600 4.26	24989 4.28	23612 4.31	22449 4.32	21723 4.32	21779 4.32*	39	56	116
2200	27880 4.38	26188 4.41	24740 4.43	23518 4.44	22743 4.44	22772 4.44*	40	58	120
2300	29157 4.51	27386 4.53	25866 4.55	24583 4.57	23760 4.57	23759 4.57*	42	60	124
2400	30433 5.03	28581 5.05	26989 5.08	25645 5.09	24772 5.09	24741 5.09*	44	63	127
2500	31706 5.15	29774 5.18	28110 5.20	26705 5.22	25779 5.22	25717 5.22*	46	65	131
2600	32977 5.27	30965 5.30	29228 5.33	27763 5.34	26782 5.34	26689 5.34*	47	67	135
2700	34245 5.39	32153 5.42	30343 5.45	28819 5.47	27782 5.47	27660 5.47*	49	69	138

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8400 .00000 240 0300350170 0 250169 90179 18590 FCOM–03-05-20-011-015

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.84 - DESCENT : M.84/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 190000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
2800	36544 5.52	34583 5.55	32920 5.58	31805 5.59	31808 5.59*	31763 5.59*	64	108	157
2900	37842 6.04	35802 6.07	34074 6.10	32900 6.12	32870 6.11*	32820 6.12*	66	110	162
3000	39137 6.16	37018 6.19	35224 6.22	33990 6.24	33925 6.24*	33869 6.24*	68	113	167
3100	40430 6.28	38232 6.31	36371 6.35	35075 6.37	34975 6.36*	34910 6.37*	70	115	171
3200	41720 6.40	39443 6.44	37517 6.47	36156 6.49	36025 6.48*	35944 6.49*	72	118	176
3300	43007 6.52	40651 6.56	38660 7.00	37234 7.02	37071 7.01*	36970 7.02*	74	120	180
3400	44291 7.05	41856 7.08	39801 7.12	38310 7.14	38112 7.13*	37990 7.14*	75	123	189
3500	45573 7.17	43058 7.20	40938 7.24	39382 7.26	39149 7.26*	39003 7.26*	77	125	193
3600	46851 7.29	44256 7.33	42072 7.37	40449 7.39	40181 7.38*	40010 7.39*	79	127	198
3700	48127 7.41	45452 7.45	43202 7.49	41512 7.51	41209 7.51*	41009 7.51*	81	129	201
3800	49402 7.53	46645 7.57	44330 8.01	42571 8.04	42231 8.03*	42002 8.04*	82	132	205
3900	50675 8.05	47834 8.09	45454 8.14	43626 8.16	43250 8.15*	42988 8.16*	84	134	209
4000	51946 8.17	49022 8.22	46575 8.26	44677 8.29	44264 8.28*	43975 8.29*	85	136	213
4100	53214 8.30	50210 8.34	47693 8.38	45724 8.41	45273 8.40*	44959 8.41*	87	137	216
4200	54480 8.42	51395 8.46	48808 8.51	46767 8.53	46278 8.53*	45938 8.53*	88	139	220
4300	55743 8.54	52577 8.59	49923 9.03	47806 9.06	47279 9.05*	46912 9.06*	90	141	224
4400	57004 9.06	53756 9.11	51034 9.16	48845 9.18	48276 9.18*	47881 9.18*	91	143	227
4500	58263 9.18	54933 9.23	52143 9.28	49890 9.31	49270 9.30*	48845 9.31*	93	145	230
4600	59519 9.30	56108 9.35	53248 9.40	50932 9.43	50259 9.43*	49804 9.43*	94	146	233
4700	60773 9.42	57280 9.48	54351 9.53	51970 9.56	51244 9.55*	50759 9.56*	96	148	236
4800	62027 9.55	58449 10.00	55452 10.05	53005 10.08	52225 10.07*	51709 10.08*	97	150	239
4900	63278 10.07	59616 10.12	56549 10.17	54037 10.20	53202 10.20*	52654 10.20*	98	151	242
5000	64527 10.19	60781 10.24	57644 10.30	55066 10.33	54175 10.32*	53595 10.33*	100	153	245
5100	65774 10.31	61948 10.37	58736 10.42	56091 10.45	55145 10.45*	54532 10.45*	101	154	248
5200	67018 10.43	63112 10.49	59826 10.55	57114 10.58	56111 10.57*	55466 10.58*	102	156	251
5300	68260 10.55	64275 11.01	60913 11.07	58134 11.10	57073 11.10*	56398 11.10*	103	157	253

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8400 .00000 240 0300350190 0 250169 90179 18590 FCOM–03-05-20-012-015

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.84 - DESCENT : M.84/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 210000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
5400	72332 11.08	68697 11.14	65628 11.19	64393 11.21*	63690 11.21*	63735 11.21*	131	223	287
5500	73601 11.20	69893 11.26	66754 11.32	65453 11.33*	64712 11.34*	64725 11.33*	133	225	291
5600	74867 11.32	71087 11.38	67877 11.44	66509 11.46*	65730 11.46*	65710 11.46*	134	227	294
5700	76138 11.44	72277 11.50	68996 11.57	67562 11.58*	66744 11.58*	66690 11.58*	136	228	297
5800	77409 11.56	73464 12.03	70112 12.09	68611 12.11*	67754 12.11*	67667 12.11*	137	230	300
5900	78678 12.08	74649 12.15	71225 12.21	69656 12.23*	68759 12.23*	68644 12.23*	138	231	303
6000	79943 12.21	75831 12.27	72335 12.34	70697 12.35*	69762 12.36*	69616 12.35*	140	233	306
6100	81207 12.33	77011 12.39	73441 12.46	71734 12.48*	70761 12.48*	70584 12.48*	141	235	309
6200	82468 12.45	78189 12.52	74544 12.58	72767 13.00*	71756 13.01*	71547 13.00*	142	236	312
6300	83726 12.57	79364 13.04	75647 13.11	73802 13.13*	72747 13.13*	72506 13.13*	144	238	314
6400	84983 13.09	80535 13.16	76754 13.23	74844 13.25*	73734 13.26*	73460 13.25*	145	240	317
6500	86237 13.21	81705 13.28	77857 13.36	75881 13.38*	74717 13.38*	74411 13.38*	146	241	320
6600	87488 13.34	82871 13.41	78957 13.48	76916 13.50*	75697 13.50*	75357 13.50*	147	243	322
6700	88738 13.46	84034 13.53	80055 14.00	77948 14.02*	76672 14.03*	76298 14.03*	148	244	325
6800	89987 13.58	85196 14.05	81150 14.13	78976 14.15*	77644 14.15*	77236 14.15*	150	246	327
6900	91236 14.10	86354 14.17	82241 14.25	80001 14.27*	78612 14.28*	78170 14.27*	150	247	329
7000	92482 14.22	87510 14.30	83330 14.37	81023 14.40*	79576 14.40*	79100 14.40*	151	248	332
7100	93726 14.34	88664 14.42	84417 14.50	82042 14.52*	80537 14.53*	80025 14.52*	152	250	334
7200	94968 14.46	89816 14.54	85501 15.02	83058 15.05*	81494 15.05*	80947 15.05*	153	251	336
7300	96208 14.58	90968 15.06	86582 15.15	84071 15.17*	82448 15.17*	81867 15.17*	154	252	338
7400	97445 15.11	92117 15.19	87661 15.27	85082 15.30*	83404 15.30*	82783 15.30*	155	254	340
7500	98680 15.23	93263 15.31	88737 15.39	86089 15.42*	84366 15.42*	83696 15.42*	156	255	342
7600	99913 15.35	94408 15.43	89812 15.52	87094 15.54*	85325 15.55*	84606 15.54*	157	257	344
7700	101144 15.47	95549 15.55	90888 16.04	88104 16.07*	86281 16.07*	85512 16.07*	158	258	346
7800	102372 15.59	96688 16.08	91960 16.16	89116 16.19*	87234 16.20*	86415 16.19*	159	259	348
7900	103599 16.11	97825 16.20	93030 16.29	90126 16.32*	88185 16.32*	87314 16.32*	160	261	349

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23C A330–301 CF6–80E1A2 3610 03701.000011 0250300 .8400 .000000 240 0300350210 0 250169 90179 18590 FCOM-G0–03–05–20–013-010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.84 - DESCENT : M.84/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 230000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
8000	108031 16.24	103010 16.33*	99688 16.39*	97419 16.42*	96387 16.41*	95839 16.42*	215	320	386
8100	109273 16.36	104169 16.45*	100781 16.51*	98443 16.55*	97358 16.54*	96777 16.54*	216	321	388
8200	110512 16.48	105325 16.57*	101871 17.04*	99465 17.07*	98326 17.06*	97712 17.07*	217	322	390
8300	111748 17.00	106480 17.09*	102958 17.16*	100483 17.19*	99290 17.19*	98642 17.19*	218	324	391
8400	112982 17.12	107634 17.22*	104042 17.28*	101498 17.32*	100250 17.31*	99568 17.32*	219	325	393
8500	114213 17.25	108786 17.34*	105124 17.41*	102510 17.44*	101221 17.44*	100491 17.44*	214	326	395
8600	115442 17.37	109934 17.46*	106209 17.53*	103533 17.57*	102189 17.56*	101413 17.57*	214	327	397
8700		111080 17.58*	107291 18.06*	104555 18.09*	103153 18.08*	102333 18.09*	257	329	399
8800		112224 18.11*	108370 18.18*	105574 18.22*	104114 18.21*	103249 18.22*	259	330	400
8900		113365 18.23*	109447 18.30*	106591 18.34*	105073 18.33*	104162 18.34*	228	331	402
9000		114503 18.35*	110521 18.43*	107604 18.46*	106028 18.46*	105071 18.46*	229	332	404
9100		115638 18.47*	111592 18.55*	108615 18.59*	106980 18.58*	105976 18.59*	230	334	406
9200			112661 19.07*	109624 19.11*	107929 19.11*	106878 19.11*		335	408
9300			113727 19.20*	110630 19.24*	108875 19.23*	107777 19.24*		334	410
9400			114791 19.32*	111633 19.36*	109818 19.36*	108672 19.36*		335	412
9500			115852 19.44*	112633 19.49*	110759 19.48*	109564 19.49*		329	414
9600				113631 20.01*	111696 20.00*	110452 20.01*		349	415
9700				114626 20.13*	112631 20.13*	111337 20.13*		350	414
9800				115619 20.26*	113562 20.25*	112219 20.26*		351	410
9900					114491 20.38*	113098 20.38*			410
10000					115418 20.50*	113974 20.51*			410
10100						114846 21.03*			429
10200						115715 21.16*			429
10300									
10400									
10500									

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23C A330–012 CF6-80E1A2 3610 03701.000011 0250300 .8400 .00000 240 0300350230 0 250169 90179 18590 FCOM–GO–03–05–20–014–010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.84 - DESCENT : M.84/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 210000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
5400	71614 11.08	68003 11.14	64995 11.20	63761 11.21*	63099 11.21*	63131 11.21*	130	221	285
5500	72877 11.20	69187 11.26	66112 11.32	64811 11.34*	64113 11.34*	64115 11.34*	132	223	288
5600	74137 11.32	70368 11.38	67226 11.44	65859 11.46*	65123 11.46*	65094 11.46*	133	225	291
5700	75395 11.44	71547 11.50	68336 11.57	66902 11.58*	66129 11.59*	66068 11.58*	135	227	294
5800	76653 11.56	72722 12.03	69443 12.09	67941 12.11*	67131 12.11*	67036 12.11*	136	229	298
5900	77909 12.09	73895 12.15	70547 12.21	68977 12.23*	68128 12.24*	67999 12.23*	137	230	301
6000	79163 12.21	75064 12.27	71648 12.34	70009 12.36*	69122 12.36*	68962 12.36*	138	231	304
6100	80414 12.33	76233 12.39	72746 12.46	71037 12.48*	70111 12.48*	69923 12.48*	139	233	306
6200	81662 12.45	77399 12.52	73840 12.59	72061 13.01*	71098 13.01*	70880 13.01*	141	234	309
6300	82908 12.57	78562 13.04	74932 13.11	73082 13.13*	72082 13.13*	71832 13.13*	142	236	312
6400	84151 13.09	79723 13.16	76025 13.23	74099 13.25*	73061 13.26*	72780 13.25*	143	238	315
6500	85393 13.21	80880 13.29	77118 13.36	75120 13.38*	74036 13.38*	73724 13.38*	145	239	317
6600	86632 13.34	82035 13.41	78208 13.48	76147 13.50*	75008 13.51*	74663 13.50*	146	241	320
6700	87869 13.46	83187 13.53	79295 14.00	77171 14.03*	75976 14.03*	75598 14.03*	147	242	323
6800	89104 13.58	84337 14.05	80379 14.13	78192 14.15*	76940 14.15*	76530 14.15*	148	244	325
6900	90339 14.10	85485 14.18	81461 14.25	79210 14.28*	77900 14.28*	77457 14.28*	149	245	328
7000	91573 14.22	86630 14.30	82539 14.38	80225 14.40*	78857 14.40*	78380 14.40*	150	246	330
7100	92805 14.34	87772 14.42	83615 14.50	81236 14.52*	79810 14.53*	79299 14.53*	151	248	332
7200	94035 14.46	88911 14.54	84689 15.02	82245 15.05*	80759 15.05*	80215 15.05*	152	249	334
7300	95262 14.59	90054 15.07	85760 15.15	83251 15.17*	81705 15.18*	81126 15.17*	153	250	336
7400	96487 15.11	91197 15.19	86828 15.27	84254 15.30*	82647 15.30*	82034 15.30*	154	252	338
7500	97710 15.23	92337 15.31	87894 15.39	85255 15.42*	83586 15.42*	82940 15.42*	155	253	340
7600	98930 15.35	93476 15.43	88957 15.52	86252 15.55*	84529 15.55*	83843 15.55*	156	255	342
7700	100149 15.47	94612 15.56	90020 16.04	87247 16.07*	85478 16.07*	84742 16.07*	157	256	344
7800	101365 15.59	95745 16.08	91083 16.16	88239 16.19*	86425 16.20*	85638 16.20*	158	257	346
7900	102578 16.11	96876 16.20	92142 16.29	89235 16.32*	87368 16.32*	86531 16.32*	159	259	348

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8400 .00000 240 0300350210 0 250169 90179 18590 FCOM–03-05-20-013-015

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : M.84 - DESCENT : M.84/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 230000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
8000	106975 16.24	101896 16.33	98699 16.39*	96418 16.42*	95525 16.42*	94899 16.42*	210	318	383
8100	108209 16.36	103044 16.45	99782 16.52*	97436 16.55*	96489 16.54*	95832 16.55*	211	319	385
8200	109439 16.48	104189 16.57	100862 17.04*	98450 17.07*	97449 17.07*	96760 17.07*	212	321	387
8300	110667 17.00	105332 17.09	101940 17.16*	99461 17.20*	98405 17.19*	97685 17.20*	213	322	389
8400	111893 17.13	106472 17.22	103015 17.29*	100470 17.32*	99359 17.32*	98606 17.32*	214	323	391
8500	113116 17.25	107613 17.34	104086 17.41*	101475 17.44*	100308 17.44*	99523 17.44*	215	325	393
8600	114337 17.37	108752 17.46	105156 17.53*	102477 17.57*	101254 17.56*	100437 17.57*	211	326	395
8700	115555 17.49	109887 17.58	106222 18.06*	103476 18.09*	102210 18.09*	101346 18.09*	212	327	397
8800		111020 18.11	107292 18.18*	104481 18.22*	103165 18.21*	102255 18.22*	252	329	398
8900		112150 18.23	108359 18.31*	105490 18.34*	104117 18.34*	103161 18.34*	253	330	400
9000		113278 18.35	109424 18.43*	106495 18.47*	105065 18.46*	104065 18.47*	215	331	402
9100		114403 18.47	110486 18.55*	107498 18.59*	106011 18.59*	104965 18.59*	216	332	403
9200		115526 19.00	111545 19.08*	108499 19.11*	106954 19.11*	105861 19.12*	217	333	405
9300			112602 19.20*	109497 19.24*	107894 19.23*	106754 19.24*		335	407
9400			113656 19.32*	110492 19.36*	108831 19.36*	107643 19.36*		333	409
9500			114708 19.45*	111484 19.49*	109765 19.48*	108530 19.49*		335	411
9600			115757 19.57*	112474 20.01*	110696 20.01*	109413 20.01*		325	413
9700				113462 20.14*	111625 20.13*	110292 20.14*		340	415
9800				114447 20.26*	112550 20.26*	111168 20.26*		341	414
9900				115429 20.38*	113473 20.38*	112042 20.39*		342	406
10000					114393 20.50*	112911 20.51*			406
10100					115311 21.03*	113778 21.03*			406
10200						114641 21.16*			420
10300						115502 21.28*			420
10400									
10500									

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 1.5 %	△FUEL = + 3 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8400 .00000 240 0300350230 0 250169 90179 18590 FCOM–03-05-20-014-015

R

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : LONG RANGE - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
200	1678 0.37	1596 0.37	1515 0.36	1437 0.36	1364 0.36	1303 0.36	1	1	5
300	2829 0.51	2716 0.50	2603 0.50	2499 0.49	2408 0.49	2350 0.49	5	5	11
400	3976 1.05	3830 1.03	3686 1.03	3557 1.02	3447 1.02	3390 1.02	10	9	16
500	5118 1.19	4940 1.17	4765 1.16	4609 1.15	4480 1.15	4423 1.14	14	14	22
600	6255 1.33	6044 1.31	5839 1.29	5657 1.28	5508 1.28	5450 1.27	18	18	27
700	7387 1.48	7144 1.44	6909 1.43	6700 1.42	6530 1.41	6469 1.40	22	22	32
800	8515 2.02	8238 1.58	7973 1.56	7738 1.55	7549 1.54	7483 1.53	26	27	37
900	9637 2.16	9327 2.12	9034 2.09	8772 2.08	8562 2.07	8492 2.06	31	31	43
1000	10755 2.30	10411 2.26	10090 2.23	9800 2.21	9570 2.20	9494 2.18	35	35	48
1100	11869 2.45	11491 2.39	11141 2.36	10825 2.34	10574 2.33	10490 2.31	39	39	53
1200	12978 2.59	12566 2.53	12189 2.50	11845 2.47	11573 2.46	11481 2.44	43	43	58
1300	14083 3.13	13636 3.07	13232 3.03	12860 3.01	12567 2.59	12465 2.57	47	47	64
1400	15183 3.28	14702 3.22	14271 3.17	13871 3.14	13557 3.12	13445 3.10	51	51	69
1500	16279 3.42	15763 3.36	15306 3.30	14878 3.27	14542 3.25	14418 3.22	55	55	74
1600	17367 3.57	16821 3.50	16337 3.44	15881 3.40	15523 3.38	15387 3.35	59	59	79
1700	18452 4.11	17875 4.04	17364 3.57	16879 3.54	16500 3.51	16350 3.48	63	63	83
1800	19531 4.26	18924 4.18	18387 4.11	17873 4.07	17474 4.04	17308 4.01	67	67	88
1900	20606 4.41	19970 4.33	19407 4.24	18863 4.20	18443 4.17	18261 4.14	71	71	92
2000	21677 4.55	21011 4.47	20422 4.38	19849 4.34	19409 4.30	19209 4.27	75	75	96
2100	22743 5.10	22048 5.01	21434 4.51	20831 4.47	20370 4.43	20153 4.40	79	79	101
2200	23805 5.25	23081 5.16	22441 5.05	21809 5.01	21327 4.56	21091 4.53	83	83	105
2300	24862 5.40	24110 5.30	23445 5.18	22783 5.14	22281 5.09	22024 5.06	86	87	109
2400	25916 5.55	25135 5.45	24446 5.32	23753 5.27	23230 5.22	22953 5.18	90	91	113
2500	26965 6.09	26157 5.59	25442 5.46	24719 5.41	24176 5.35	23876 5.31	94	95	116
2600	28011 6.24	27173 6.14	26433 6.00	25682 5.54	25118 5.48	24796 5.44	98	99	120
2700	29053 6.39	28186 6.28	27416 6.13	26641 6.08	26056 6.01	25710 5.57	101	103	124

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI-ICE ON	TOTAL ANTI-ICE ON
△ FUEL = – 0.5 %	△FUEL = + 1.5 %	△ FUEL = + 3 %	△ FUEL = + 4 %

FLIP23 A330–301 CF6–80E1A2 3610 03701.000011 0250300 .8001 .000000 240 0300350170 0 220169 90179 18590 FCOM-G0–03–05–20–012-010

R

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : LONG RANGE - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 190000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
2800	32208 6.35	31340 6.23	30483 6.19	29831 6.14	29518 6.10	29622 6.10*	106	113	148
2900	33318 6.50	32424 6.36	31533 6.32	30858 6.27	30519 6.23	30615 6.22*	110	117	153
3000	34423 7.04	33504 6.50	32579 6.46	31882 6.40	31515 6.36	31602 6.35*	113	120	157
3100	35523 7.19	34580 7.04	33621 6.59	32901 6.53	32506 6.49	32582 6.48*	117	124	161
3200	36620 7.34	35652 7.17	34659 7.13	33917 7.06	33493 7.02	33557 7.01*	121	127	166
3300	37713 7.48	36720 7.31	35693 7.26	34928 7.19	34474 7.15	34526 7.14*	125	131	170
3400	38802 8.03	37778 7.45	36722 7.40	35935 7.33	35450 7.28	35490 7.27*	129	135	174
3500	39887 8.17	38832 7.58	37749 7.53	36937 7.46	36422 7.41	36447 7.40*	132	138	178
3600	40968 8.32	39882 8.12	38773 8.06	37932 7.59	37389 7.54	37400 7.53*	136	142	182
3700	42045 8.46	40928 8.26	39792 8.20	38923 8.12	38352 8.07	38349 8.05*	140	145	186
3800	43119 9.01	41971 8.40	40808 8.33	39910 8.25	39310 8.20	39296 8.18*	144	149	189
3900	44188 9.16	43009 8.54	41820 8.47	40893 8.39	40264 8.33	40237 8.31*	148	152	193
4000	45254 9.31	44044 9.08	42829 9.00	41873 8.52	41213 8.47	41173 8.44*	152	156	197
4100	46316 9.45	45074 9.22	43834 9.14	42848 9.05	42158 9.00	42105 8.57*	155	159	200
4200	47374 10.00	46101 9.36	44835 9.27	43820 9.19	43099 9.13	43031 9.10*	159	163	204
4300	48428 10.15	47125 9.50	45832 9.41	44788 9.32	44035 9.26	43953 9.23*	163	166	207
4400	49473 10.30	48144 10.04	46826 9.55	45752 9.45	44967 9.39	44871 9.36*	167	170	211
4500	50513 10.45	49155 10.19	47817 10.08	46712 9.59	45895 9.52	45784 9.49*	170	173	214
4600	51549 11.00	50158 10.34	48803 10.22	47669 10.12	46819 10.05	46692 10.02*	174	177	217
4700	52581 11.15	51157 10.49	49785 10.35	48622 10.25	47739 10.19	47596 10.15*	178	180	221
4800	53610 11.30	52152 11.04	50763 10.49	49570 10.39	48656 10.32	48495 10.27*	181	184	224
4900	54636 11.45	53144 11.19	51738 11.03	50515 10.52	49581 10.45	49391 10.40*	185	187	227
5000	55658 12.00	54132 11.34	52709 11.17	51456 11.06	50503 10.58	50281 10.53*	189	190	231
5100	56676 12.15	55117 11.49	53677 11.30	52393 11.19	51421 11.11	51167 11.06*	192	194	234
5200	57691 12.30	56098 12.05	54642 11.44	53327 11.33	52335 11.24	52048 11.19*	195	197	237
5300	58702 12.45	57075 12.20	55604 11.58	54258 11.47	53246 11.37	52926 11.32*	199	200	240

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI-ICE ON	TOTAL ANTI-ICE ON
△ FUEL = – 0.5 %	△FUEL = + 1.5 %	△ FUEL = + 3 %	△ FUEL = + 4 %

FLIP23 A330–301 CF6–80E1A2 3610 03701.000011 0250300 .8001 .000000 240 0300350190 0 220169 90179 18590 FCOM-G0–03–05–20–013-010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : LONG RANGE - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
200	1648 0.37	1570 0.37	1490 0.36	1413 0.36	1340 0.36	1280 0.36	1	0	1
300	2786 0.51	2680 0.50	2569 0.50	2466 0.49	2377 0.49	2321 0.49	5	5	7
400	3920 1.05	3786 1.03	3644 1.03	3515 1.02	3408 1.02	3355 1.02	10	9	13
500	5049 1.20	4887 1.17	4714 1.16	4560 1.15	4434 1.15	4383 1.14	14	13	18
600	6173 1.34	5984 1.30	5780 1.29	5600 1.28	5454 1.28	5404 1.27	19	18	24
700	7291 1.48	7075 1.44	6842 1.43	6635 1.41	6469 1.41	6418 1.40	23	22	29
800	8405 2.02	8160 1.58	7900 1.56	7665 1.55	7480 1.54	7425 1.53	27	26	34
900	9513 2.17	9240 2.11	8954 2.09	8691 2.08	8486 2.07	8426 2.05	32	30	39
1000	10617 2.31	10315 2.25	10004 2.22	9713 2.21	9487 2.19	9420 2.18	36	34	45
1100	11715 2.45	11385 2.39	11050 2.36	10730 2.34	10484 2.32	10407 2.31	40	38	50
1200	12809 3.00	12450 2.53	12093 2.49	11742 2.47	11476 2.45	11389 2.44	44	43	55
1300	13898 3.14	13510 3.07	13131 3.02	12750 3.00	12463 2.58	12364 2.57	49	47	60
1400	14983 3.29	14566 3.21	14166 3.16	13754 3.13	13446 3.11	13334 3.09	53	51	65
1500	16063 3.44	15617 3.35	15197 3.29	14754 3.27	14425 3.24	14298 3.22	57	55	70
1600	17138 3.58	16665 3.50	16224 3.42	15750 3.40	15399 3.37	15256 3.35	61	59	75
1700	18207 4.13	17708 4.04	17241 3.56	16742 3.53	16369 3.50	16208 3.48	65	63	80
1800	19272 4.28	18747 4.18	18255 4.09	17731 4.06	17334 4.03	17159 4.01	69	67	84
1900	20333 4.42	19782 4.32	19264 4.23	18715 4.20	18295 4.16	18105 4.14	74	71	89
2000	21389 4.57	20812 4.47	20268 4.36	19696 4.33	19252 4.29	19046 4.27	78	74	93
2100	22440 5.12	21839 5.01	21269 4.50	20672 4.46	20205 4.42	19982 4.40	82	78	97
2200	23487 5.27	22861 5.15	22265 5.04	21645 4.59	21154 4.55	20913 4.52	86	82	102
2300	24530 5.42	23879 5.30	23257 5.17	22614 5.13	22098 5.08	21839 5.05	90	86	106
2400	25569 5.57	24893 5.45	24246 5.31	23580 5.26	23039 5.21	22761 5.18	94	90	110
2500	26604 6.12	25903 5.59	25230 5.45	24542 5.39	23976 5.35	23678 5.31	98	94	114
2600	27636 6.27	26906 6.14	26210 5.58	25500 5.53	24908 5.48	24590 5.44	101	98	118
2700	28664 6.42	27906 6.28	27188 6.12	26453 6.06	25837 6.01	25498 5.57	105	102	121

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8001 .00000 240 0300350170 0 250169 90179 18590 FCOM–03-05-20-015-015

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : LONG RANGE - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 190000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
2800	31905 6.35	31093 6.21	30253 6.17	29589 6.13	29283 6.10	29404 6.10*	108	112	148
2900	33003 6.50	32165 6.35	31298 6.31	30607 6.27	30280 6.23	30391 6.23*	112	115	153
3000	34097 7.04	33234 6.48	32339 6.44	31620 6.40	31272 6.36	31372 6.36*	116	119	157
3100	35186 7.19	34298 7.02	33376 6.57	32630 6.53	32259 6.49	32348 6.49*	120	123	162
3200	36272 7.34	35358 7.15	34410 7.11	33635 7.06	33241 7.02	33319 7.02*	124	126	166
3300	37350 7.48	36415 7.29	35439 7.24	34636 7.19	34219 7.15	34285 7.14*	128	130	170
3400	38423 8.03	37462 7.43	36465 7.37	35633 7.32	35192 7.28	35245 7.27*	132	133	174
3500	39492 8.18	38505 7.57	37483 7.51	36626 7.45	36160 7.40	36200 7.40*	136	137	178
3600	40557 8.33	39544 8.11	38498 8.04	37616 7.59	37124 7.53	37149 7.53*	140	140	182
3700	41618 8.48	40579 8.25	39509 8.18	38603 8.12	38084 8.06	38094 8.06*	144	143	186
3800	42675 9.02	41610 8.39	40515 8.31	39585 8.25	39039 8.19	39034 8.19*	148	147	190
3900	43728 9.17	42637 8.53	41518 8.45	40564 8.38	39990 8.32	39969 8.32*	153	150	194
4000	44776 9.32	43660 9.07	42518 8.58	41540 8.51	40936 8.45	40899 8.45*	156	153	198
4100	45821 9.47	44679 9.22	43513 9.12	42511 9.04	41878 8.58	41824 8.57*	160	157	202
4200	46862 10.02	45694 9.36	44505 9.25	43479 9.18	42816 9.11	42744 9.10*	164	161	205
4300	47899 10.18	46706 9.50	45493 9.39	44443 9.31	43750 9.24	43659 9.23*	168	164	209
4400	48930 10.33	47713 10.04	46478 9.53	45404 9.44	44680 9.37	44572 9.36*	172	167	212
4500	49953 10.48	48717 10.19	47459 10.06	46361 9.57	45606 9.50	45479 9.49*	175	171	216
4600	50971 11.03	49714 10.33	48437 10.20	47314 10.10	46528 10.03	46383 10.02*	179	174	219
4700	51986 11.18	50708 10.48	49415 10.33	48264 10.24	47446 10.16	47282 10.15*	183	178	223
4800	52997 11.33	51699 11.03	50390 10.47	49209 10.37	48360 10.29	48176 10.28*	187	181	226
4900	54004 11.48	52685 11.18	51362 11.00	50150 10.50	49274 10.42	49067 10.41*	190	184	229
5000	55008 12.04	53668 11.33	52331 11.14	51087 11.04	50185 10.56	49953 10.54*	194	188	232
5100	56008 12.19	54648 11.48	53297 11.27	52021 11.17	51092 11.09	50835 11.07*	198	191	235
5200	57005 12.34	55625 12.03	54260 11.41	52951 11.31	51996 11.22	51713 11.20*	201	194	239
5300	57998 12.50	56598 12.18	55219 11.54	53878 11.44	52896 11.35	52587 11.33*	205	198	242

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8001 .00000 240 0300350190 0 250169 90179 18590 FCOM–03-05-20-016-015

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : LONG RANGE - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 230000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
5400	63772 12.19	62082 12.05	60622 11.57	59489 11.50	59215 11.46*	59042 11.44*	200	225	266
5500	64833 12.34	63128 12.19	61637 12.10	60472 12.03	60167 11.59*	59985 11.57*	204	228	270
5600	65891 12.50	64172 12.33	62645 12.24	61452 12.16	61115 12.12*	60923 12.10*	207	231	274
5700	66944 13.05	65211 12.46	63649 12.37	62436 12.30	62058 12.25*	61856 12.23*	210	233	277
5800	67994 13.20	66248 13.00	64650 12.51	63417 12.43	62995 12.39*	62784 12.35*	214	236	281
5900	69041 13.36	67281 13.14	65647 13.04	64393 12.56	63930 12.52*	63707 12.48*	217	239	285
6000	70083 13.51	68311 13.28	66641 13.18	65367 13.09	64859 13.05*	64626 13.01*	220	242	288
6100	71122 14.07	69338 13.41	67631 13.32	66337 13.22	65785 13.18*	65541 13.14*	223	245	291
6200	72157 14.22	70361 13.55	68618 13.45	67304 13.35	66707 13.31*	66451 13.27*	227	248	294
6300	73188 14.38	71381 14.09	69602 13.59	68267 13.48	67625 13.44*	67357 13.40*	230	250	297
6400	74216 14.54	72397 14.23	70582 14.13	69227 14.02	68539 13.58*	68257 13.53*	234	253	299
6500	75240 15.10	73411 14.37	71558 14.27	70184 14.15	69449 14.11*	69152 14.06*	238	256	302
6600	76268 15.25	74421 14.50	72532 14.40	71137 14.28	70354 14.24*	70042 14.19*	242	259	305
6700	77293 15.40	75426 15.04	73502 14.54	72087 14.41	71257 14.37*	70928 14.32*	246	262	308
6800	78315 15.55	76418 15.19	74468 15.08	73033 14.54	72172 14.50*	71810 14.45*	250	265	310
6900	79333 16.10	77407 15.33	75432 15.22	73977 15.07	73085 15.03*	72687 14.58*	253	268	313
7000	80348 16.25	78392 15.47	76393 15.35	74917 15.21	73994 15.17*	73560 15.11*	256	271	315
7100	81360 16.41	79374 16.01	77350 15.49	75849 15.34	74899 15.30*	74430 15.25*	259	274	318
7200	82368 16.56	80353 16.16	78305 16.03	76772 15.47	75801 15.43*	75295 15.38*	263	277	320
7300	83374 17.11	81328 16.30	79256 16.16	77693 16.01	76700 15.56*	76156 15.51*	266	280	322
7400	84376 17.27	82301 16.44	80205 16.30	78610 16.14	77596 16.09*	77014 16.04*	269	282	324
7500	85375 17.42	83270 16.59	81150 16.44	79524 16.28	78488 16.22*	77867 16.17*	272	285	326
7600	86372 17.57	84236 17.13	82092 16.58	80435 16.41	79378 16.35*	78717 16.30*	275	288	329
7700	87365 18.13	85200 17.27	83031 17.11	81343 16.55	80264 16.48*	79563 16.43*	278	290	331
7800	88356 18.28	86160 17.42	83968 17.25	82248 17.08	81147 17.01*	80405 16.56*	282	293	334
7900	89344 18.44	87118 17.56	84901 17.39	83150 17.22	82027 17.14*	81244 17.10*	285	296	336

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

FLIP23C A330–301 CF6-80E1A2 3610 03701.000011 0250300 .8001 .000000 240 0300350210 0 250169 90179 18590 FCOM-G0–03–05–20–017-010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : LONG RANGE - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 230000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
8000	96006 18.05	93731 17.45	91747 17.32	90497 17.26*	89668 17.21*	89456 17.18*	290	320	363
8100	97036 18.20	94740 17.59	92724 17.46	91443 17.40*	90585 17.34*	90345 17.31*	292	323	366
8200	98063 18.35	95746 18.13	93698 17.59	92386 17.53*	91498 17.47*	91229 17.44*	295	325	369
8300	99087 18.50	96748 18.26	94669 18.13	93325 18.06*	92407 18.01*	92109 17.57*	298	328	371
8400	100108 19.06	97748 18.40	95637 18.27	94261 18.20*	93313 18.14*	92985 18.10*	301	330	374
8500	101126 19.21	98744 18.54	96601 18.40	95194 18.33*	94215 18.27*	93857 18.23*	303	333	376
8600	102140 19.36	99738 19.08	97563 18.54	96123 18.46*	95114 18.40*	94724 18.36*	306	335	379
8700	103152 19.51	100729 19.22	98521 19.08	97050 18.59*	96009 18.53*	95588 18.49*	309	337	381
8800	104160 20.06	101717 19.36	99477 19.21	97973 19.13*	96901 19.06*	96448 19.03*	312	340	383
8900	105165 20.22	102702 19.49	100430 19.35	98893 19.26*	97789 19.19*	97304 19.16*	314	342	386
9000	106168 20.37	103684 20.03	101380 19.49	99811 19.39*	98674 19.33*	98156 19.29*	317	345	388
9100	107164 20.52	104663 20.17	102326 20.02	100725 19.53*	99557 19.46*	99005 19.42*	320	347	390
9200	108157 21.08	105639 20.31	103270 20.16	101636 20.06*	100436 19.59*	99859 19.55*	323	349	392
9300	109147 21.24	106609 20.45	104211 20.30	102545 20.19*	101311 20.12*	100711 20.08*	326	352	394
9400	110134 21.39	107572 20.59	105149 20.43	103450 20.33*	102184 20.25*	101560 20.21*	329	354	396
9500	111118 21.55	108531 21.14	106085 20.57	104349 20.46*	103053 20.39*	102405 20.34*	332	356	398
9600	112099 22.11	109487 21.28	107013 21.11	105242 21.00*	103919 20.52*	103248 20.47*	335	359	400
9700	113078 22.27	110441 21.42	107937 21.25	106132 21.14*	104782 21.05*	104087 21.00*	337	361	402
9800	114053 22.42	111392 21.56	108858 21.39	107018 21.27*	105642 21.19*	104922 21.13*	340	363	404
9900	115025 22.58	112340 22.11	109777 21.53	107902 21.41*	106498 21.32*	105755 21.26*	343	366	406
10000	115995 23.14	113285 22.25	110693 22.06	108783 21.55*	107352 21.45*	106584 21.39*	348	368	409
10100		114227 22.39	111606 22.20	109661 22.09*	108203 21.59*	107410 21.52*	355	370	411
10200		115167 22.54	112516 22.34	110536 22.22*	109051 22.12*	108234 22.06*	359	367	413
10300			113423 22.48	111409 22.36*	109896 22.25*	109054 22.19*		370	415
10400			114328 23.02	112278 22.50*	110738 22.39*	109871 22.32*		368	417
10500			115230 23.16	113145 23.04*	111577 22.52*	110685 22.45*		370	419

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

FLIP23C A330–301 CF6–80E1A2 3610 03701.000011 0250300 .8001 .000000 240 0300350230 0 250169 90179 18590 FCOM-G0–03–05–20–018-010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : LONG RANGE - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 210000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
5400	63170 12.21	61688 12.01	60153 11.55	59089 11.48	58805 11.46*	58631 11.43*	204	224	263
5500	64226 12.36	62722 12.15	61160 12.08	60068 12.02	59757 11.59*	59568 11.56*	207	227	267
5600	65279 12.51	63751 12.28	62166 12.22	61042 12.15	60704 12.11*	60501 12.09*	211	230	270
5700	66329 13.06	64778 12.42	63168 12.35	62015 12.28	61647 12.24*	61429 12.21*	215	233	273
5800	67374 13.21	65801 12.56	64167 12.49	62984 12.41	62586 12.37*	62352 12.34*	218	236	277
5900	68416 13.36	66821 13.10	65163 13.02	63950 12.54	63521 12.50*	63270 12.47*	222	239	280
6000	69455 13.52	67837 13.23	66156 13.16	64912 13.07	64452 13.03*	64184 13.00*	225	242	283
6100	70489 14.07	68849 13.37	67145 13.29	65871 13.21	65378 13.16*	65093 13.13*	229	245	286
6200	71521 14.23	69858 13.51	68131 13.43	66827 13.34	66302 13.30*	65998 13.26*	232	247	290
6300	72548 14.38	70864 14.05	69114 13.56	67779 13.47	67220 13.43*	66899 13.39*	236	250	293
6400	73573 14.54	71866 14.19	70093 14.10	68727 14.00	68136 13.56*	67795 13.52*	240	253	296
6500	74593 15.09	72865 14.33	71069 14.23	69673 14.13	69052 14.09*	68687 14.05*	244	255	299
6600	75608 15.25	73861 14.47	72042 14.37	70614 14.27	69964 14.22*	69575 14.18*	248	258	302
6700	76614 15.40	74854 15.01	73012 14.50	71553 14.40	70873 14.35*	70458 14.31*	252	261	305
6800	77617 15.56	75837 15.15	73978 15.04	72488 14.53	71778 14.48*	71336 14.44*	255	264	308
6900	78616 16.11	76812 15.29	74942 15.17	73420 15.06	72679 15.01*	72211 14.57*	259	266	310
7000	79612 16.27	77784 15.44	75897 15.31	74348 15.20	73578 15.14*	73081 15.10*	263	269	313
7100	80605 16.42	78753 15.58	76846 15.45	75274 15.33	74472 15.27*	73947 15.23*	267	272	316
7200	81594 16.58	79719 16.13	77792 15.58	76195 15.46	75363 15.41*	74810 15.36*	270	274	319
7300	82580 17.13	80681 16.28	78734 16.12	77112 16.00	76251 15.54*	75668 15.49*	273	277	322
7400	83562 17.29	81640 16.42	79674 16.26	78026 16.13	77136 16.07*	76523 16.02*	276	280	324
7500	84542 17.45	82596 16.57	80610 16.40	78937 16.26	78017 16.20*	77374 16.15*	280	282	327
7600	85518 18.01	83548 17.12	81544 16.53	79845 16.39	78895 16.33*	78221 16.28*	283	285	330
7700	86492 18.16	84498 17.26	82474 17.07	80750 16.53	79770 16.47*	79065 16.41*	286	288	332
7800	87462 18.32	85445 17.41	83402 17.21	81652 17.06	80641 17.00*	79905 16.54*	289	290	334
7900	88429 18.48	86389 17.56	84326 17.35	82551 17.19	81509 17.13*	80741 17.07*	293	293	337

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8001 .00000 240 0300350210 0 250169 90179 18590 FCOM–03-05-20-017-015

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING
CRUISE : LONG RANGE - DESCENT : M.80/300KT/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 230000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 37.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 310	330	350	370	390	410	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL310 FL330	FL350 FL370	FL390 FL410
8000	95301 18.00	93075 17.41	91115 17.30	89880 17.24*	89075 17.19*	88872 17.16*	288	314	358
8100	96320 18.15	94082 17.55	92087 17.43	90821 17.37*	89987 17.33*	89758 17.29*	292	317	361
8200	97336 18.30	95086 18.08	93056 17.57	91758 17.51*	90895 17.46*	90639 17.42*	295	319	363
8300	98349 18.46	96087 18.22	94023 18.10	92693 18.04*	91800 17.59*	91517 17.55*	298	322	366
8400	99360 19.01	97085 18.35	94986 18.24	93624 18.17*	92701 18.12*	92391 18.08*	301	324	369
8500	100367 19.16	98080 18.49	95945 18.37	94552 18.30*	93599 18.25*	93260 18.21*	304	327	371
8600	101371 19.31	99072 19.02	96902 18.51	95476 18.44*	94493 18.38*	94125 18.34*	307	329	374
8700	102372 19.47	100062 19.16	97856 19.04	96397 18.57*	95384 18.51*	94987 18.47*	311	331	376
8800	103370 20.02	101048 19.29	98807 19.18	97316 19.10*	96272 19.04*	95845 19.00*	314	334	379
8900	104365 20.17	102032 19.43	99755 19.31	98231 19.23*	97156 19.17*	96699 19.13*	317	336	381
9000	105356 20.33	103013 19.57	100701 19.45	99143 19.37*	98037 19.30*	97549 19.26*	320	339	383
9100	106344 20.48	103991 20.10	101643 19.58	100053 19.50*	98915 19.43*	98396 19.39*	323	341	385
9200	107320 21.04	104966 20.24	102583 20.12	100959 20.03*	99790 19.57*	99239 19.52*	326	343	388
9300	108292 21.20	105939 20.37	103519 20.25	101863 20.17*	100661 20.10*	100079 20.05*	329	346	390
9400	109261 21.36	106899 20.51	104453 20.39	102763 20.30*	101530 20.23*	100921 20.19*	333	348	392
9500	110227 21.52	107851 21.05	105384 20.53	103661 20.43*	102396 20.36*	101761 20.32*	336	350	394
9600	111190 22.08	108800 21.20	106312 21.06	104555 20.57*	103258 20.49*	102598 20.45*	340	353	396
9700	112150 22.25	109746 21.34	107233 21.20	105445 21.10*	104118 21.02*	103431 20.58*	343	355	398
9800	113107 22.41	110689 21.48	108151 21.34	106329 21.24*	104974 21.16*	104262 21.11*	347	357	400
9900	114061 22.57	111629 22.02	109066 21.48	107211 21.37*	105828 21.29*	105089 21.24*	351	359	402
10000	115013 23.13	112566 22.16	109978 22.01	108090 21.51*	106678 21.42*	105913 21.37*	354	362	404
10100	115961 23.30	113501 22.31	110887 22.15	108966 22.04*	107526 21.56*	106733 21.50*	361	364	406
10200		114433 22.45	111794 22.29	109839 22.18*	108371 22.09*	107551 22.03*	362	366	408
10300		115362 22.59	112698 22.43	110709 22.31*	109212 22.22*	108366 22.16*	366	365	411
10400			113600 22.57	111577 22.45*	110051 22.35*	109177 22.29*		366	413
10500			114498 23.10	112442 22.58*	110887 22.49*	109986 22.42*		365	415

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1.5 %	△FUEL = + 3 %	△FUEL = + 5 %

FLIP23D A330–200 CF6–80E1A4 3610 03701.000011 0250300 .8001 .00000 240 0300350230 0 250169 90179 18590 FCOM–03-05-20-018-015

LEFT INTENTIONALLY BLANK

LEFT INTENTIONALLY BLANK

GENERAL

Holding tables contain information about the engine fuel flow that allows the flight crew to plan holding and reserve fuel requirements.

They are established for flight in a race track holding pattern for two different configurations.

· Clean configuration at 210 knots and green dot speed.

· Configuration 1 at 170 knots and S speed.

Green dot speed in clean configuration and S in CONF 1 are speeds between the minimum fuel speed and the minimum drag speed.

R These charts are established with air conditioning in normal mode (Packs NORM/Cargo
R cooling OFF or Packs LO/Cargo cooling NORM) and the center of gravity at 30 %.

R

RACE TRACK HOLDING PATTERN - GREEN DOT SPEED

MAX. CRUISE THRUST LIMITS
CLEAN CONFIGURATION
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=30.0%

N1 (%)
FF (KG/H/ENG)

WEIGHT (1000KG)	FL 15	FL 50	FL100	FL120	FL140	FL160	FL180	FL200	FL250
130	53.3 1800	56.3 1760	61.0 1729	62.6 1721	64.5 1714	66.2 1711	67.9 1709	69.6 1705	73.8 1694
140	55.3 1918	58.5 1884	62.9 1858	64.7 1850	66.4 1846	68.1 1844	69.8 1842	71.4 1833	75.7 1825
150	57.3 2038	60.5 2013	64.8 1988	66.6 1983	68.3 1980	70.0 1980	71.5 1970	73.2 1963	77.6 1959
160	59.3 2164	62.4 2140	66.7 2122	68.3 2118	70.0 2118	71.6 2109	73.3 2101	74.9 2094	79.2 2099
170	61.0 2293	64.0 2272	68.3 2256	70.0 2256	71.6 2250	73.2 2241	74.9 2232	76.5 2226	80.9 2242
180	62.7 2421	65.6 2404	69.9 2394	71.5 2391	73.1 2381	74.8 2373	76.4 2365	78.1 2361	82.5 2388
190	64.2 2553	67.2 2538	71.4 2534	72.9 2522	74.6 2514	76.2 2506	77.8 2500	79.5 2500	83.9 2541
200	65.7 2687	68.6 2675	72.7 2665	74.3 2655	75.9 2647	77.5 2640	79.3 2637	80.9 2644	85.3 2691
210	67.2 2821	70.0 2814	74.0 2798	75.6 2789	77.2 2781	78.9 2776	80.6 2780	82.3 2790	86.6 2841
220	68.5 2960	71.4 2955	75.3 2933	76.9 2924	78.5 2917	80.2 2916	81.9 2925	83.7 2939	87.9 2997
230	69.8 3099	72.6 3095	76.5 3068	78.1 3060	79.8 3055	81.4 3061	83.2 3073	84.9 3094	89.1 3157
240	71.0 3241	73.7 3229	77.7 3204	79.3 3198	81.0 3198	82.6 3208	84.4 3224	86.0 3250	90.3 3319

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
△FF = – 0.4 %	△FF = + 1.5 %	△FF = + 3 %	△FF = + 6 %	△FF = + 0.3 %

Note : Correction for straight line holding : – 4 %

GENERAL

Holding tables contain information about the engine fuel flow that allows the flight crew to plan holding and reserve fuel requirements.

They are established for flight in a race track holding pattern for two different configurations.

· Clean configuration at 210 knots and green dot speed.

· Configuration 1 at 170 knots and S speed.

Green dot speed in clean configuration and S in CONF 1 are speeds between the minimum fuel speed and the minimum drag speed.

R These charts are established with air conditioning in normal mode (Packs NORM/Cargo
R cooling OFF or Packs LO/Cargo cooling NORM) and the center of gravity at 30 %.

R

RACE TRACK HOLDING PATTERN - GREEN DOT SPEED

MAX. CRUISE THRUST LIMITS
CLEAN CONFIGURATION
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 30.0%

N1 (%)
FF (KG/H/ENG)

WEIGHT (1000KG)	FL 15	FL 50	FL100	FL120	FL140	FL160	FL180	FL200	FL250
130	52.0 1725	54.9 1684	59.5 1646	61.3 1635	63.0 1628	64.8 1623	66.5 1621	68.2 1619	72.7 1620
140	53.9 1837	57.0 1797	61.5 1765	63.2 1758	65.0 1752	66.7 1749	68.5 1749	70.1 1745	74.6 1748
150	55.8 1949	59.0 1918	63.4 1889	65.2 1882	66.8 1879	68.6 1879	70.2 1875	71.9 1873	76.5 1880
160	57.8 2065	60.9 2037	65.2 2013	66.9 2010	68.6 2009	70.3 2006	71.9 2003	73.7 2002	78.2 2018
170	59.5 2185	62.6 2158	66.9 2141	68.5 2139	70.3 2138	71.9 2134	73.6 2133	75.3 2133	79.9 2161
180	61.2 2305	64.1 2283	68.4 2271	70.1 2270	71.7 2266	73.5 2265	75.2 2264	76.9 2266	81.6 2307
190	62.8 2426	65.7 2409	69.9 2403	71.6 2399	73.2 2396	75.0 2396	76.7 2397	78.5 2402	83.1 2460
200	64.2 2551	67.2 2537	71.3 2532	72.9 2529	74.7 2529	76.4 2529	78.2 2532	79.9 2545	84.5 2611
210	65.6 2678	68.6 2668	72.6 2662	74.3 2661	76.0 2661	77.7 2663	79.6 2672	81.3 2691	85.9 2763
220	67.0 2806	69.8 2801	73.9 2794	75.6 2794	77.3 2795	79.1 2800	80.8 2816	82.7 2840	87.2 2917
230	68.3 2937	71.1 2933	75.2 2928	76.9 2928	78.6 2931	80.4 2942	82.1 2964	84.0 2993	88.5 3080
240	69.5 3069	72.3 3065	76.4 3062	78.1 3064	79.9 3070	81.6 3089	83.4 3115	85.2 3151	89.7 3246

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
△FF = – 0.4 %	△FF = + 1.5 %	△FF = + 3 %	△FF = + 6 %	△FF = + 0.3 %

Note : Correction for straight line holding : – 4 %

R

RACE TRACK HOLDING PATTERN - 210KT

MAX. CRUISE THRUST LIMITS
CLEAN CONFIGURATION
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=30.0%

N1 (%)
FF (KG/H/ENG)

WEIGHT (1000KG)	FL 15	FL 50	FL100	FL120	FL140	FL160	FL180	FL200	FL250
130	55.1 1909	58.2 1866	62.5 1830	64.2 1822	65.9 1813	67.5 1802	69.1 1794	70.7 1786	74.8 1769
140	56.5 1993	59.6 1955	63.9 1924	65.7 1919	67.3 1910	68.9 1901	70.5 1893	72.1 1885	76.3 1870
150	58.0 2083	61.1 2051	65.4 2026	67.1 2024	68.7 2016	70.3 2007	71.9 1998	73.5 1990	77.8 1980
160	59.5 2184	62.6 2157	66.9 2139	68.5 2137	70.2 2130	71.7 2121	73.4 2113	75.0 2104	79.3 2104
170	61.1 2295	64.0 2274	68.3 2259	70.0 2258	71.6 2251	73.2 2242	74.9 2233	76.5 2227	80.9 2235
180	62.7 2416	65.6 2400	69.8 2388	71.5 2389	73.1 2382	74.8 2374	76.4 2367	78.2 2363	82.5 2385
190	64.3 2557	67.3 2543	71.5 2533	73.1 2534	74.8 2529	76.4 2520	78.1 2515	79.8 2518	84.2 2552
200	65.9 2707	68.8 2692	73.0 2686	74.7 2688	76.3 2682	78.0 2674	79.7 2676	81.4 2683	86.0 2727
210	67.6 2868	70.4 2852	74.6 2850	76.3 2852	78.0 2846	79.7 2843	81.4 2852	83.2 2863	87.7 2921
220	69.2 3037	72.2 3025	76.3 3025	77.9 3026	79.7 3022	81.3 3028	83.2 3040	84.9 3061	89.6 3130
230	70.8 3215	73.7 3207	77.9 3208	79.6 3209	81.3 3215	83.0 3223	84.8 3243	86.6 3266	90.7 3272
240	72.5 3401	75.3 3397	79.5 3398	81.3 3407	82.9 3415	84.7 3430	86.1 3406	87.7 3402	91.9 3433

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
ΔFF = – 0.3 %	ΔFF = + 1.5 %	ΔFF = + 3 %	ΔFF = + 5.5 %	ΔFF = + 0.3 %

Note : Correction for straight line holding : – 3 %

R

RACE TRACK HOLDING PATTERN - S SPEED

MAX. CRUISE THRUST LIMITS
CONFIGURATION 1
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 30.0%

N1 (%)
FF (KG/H/ENG)

WEIGHT (1000KG)	FL 15	FL 50	FL100	FL120	FL140	FL150	FL160	FL180	FL200
130	56.4 1972	59.6 1939	64.1 1933	66.0 1936	67.8 1934	68.8 1933	69.6 1931	71.4 1937	73.3 1945
140	58.8 2111	61.9 2093	66.4 2097	68.2 2097	70.0 2093	70.9 2096	71.8 2099	73.7 2107	75.3 2106
150	60.9 2260	63.9 2255	68.5 2260	70.3 2257	72.0 2261	72.9 2265	73.9 2270	75.5 2268	77.3 2266
160	62.8 2418	66.0 2420	70.4 2421	72.1 2424	74.0 2433	74.8 2432	75.6 2431	77.4 2428	79.1 2430
170	64.7 2582	67.8 2587	72.2 2587	74.0 2596	75.7 2593	76.5 2592	77.4 2591	79.1 2590	80.9 2596
180	66.5 2749	69.5 2753	73.9 2759	75.6 2756	77.3 2754	78.1 2752	79.0 2751	80.7 2756	82.6 2763
190	68.2 2919	71.3 2916	75.5 2919	77.1 2917	78.8 2914	79.7 2914	80.5 2916	82.3 2923	84.0 2938
200	69.8 3088	72.8 3084	76.9 3077	78.5 3074	80.3 3073	81.1 3076	82.0 3080	83.7 3089	85.5 3108
210	71.3 3255	74.2 3248	78.2 3239	80.0 3236	81.6 3240	82.5 3244	83.4 3245	85.1 3261	86.9 3280
220	72.8 3424	75.5 3410	79.6 3402	81.3 3402	83.0 3407	83.9 3408	84.7 3416	86.4 3436	88.2 3456
230	74.0 3585	76.9 3577	81.0 3568	82.6 3572	84.3 3575	85.1 3584	86.0 3594	87.7 3614	89.5 3636
240	75.3 3753	78.1 3748	82.2 3740	83.8 3741	85.5 3753	86.3 3765	87.2 3775	89.0 3793	90.7 3818

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
△FF = – 0.3 %	△FF = + 1 %	△FF = + 3 %	△FF = + 5 %	△FF = + 0.3 %

Note : Correction for straight line holding : – 3 %

R

RACE TRACK HOLDING PATTERN - 210KT

MAX. CRUISE THRUST LIMITS
CLEAN CONFIGURATION
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=30.0%

N1 (%)
FF (KG/H/ENG)

WEIGHT (1000KG)	FL 15	FL 50	FL100	FL120	FL140	FL160	FL180	FL200	FL250
130	53.9 1840	56.8 1795	61.3 1755	63.0 1744	64.7 1734	66.4 1726	68.0 1720	69.6 1716	73.9 1708
140	55.2 1913	58.2 1870	62.6 1835	64.3 1826	66.0 1820	67.7 1813	69.3 1809	70.9 1805	75.3 1800
150	56.5 1993	59.6 1956	63.9 1925	65.7 1920	67.3 1914	69.0 1909	70.6 1906	72.3 1903	76.7 1902
160	58.0 2082	61.1 2050	65.4 2026	67.1 2024	68.8 2020	70.4 2016	72.0 2013	73.8 2011	78.3 2022
170	59.5 2187	62.6 2160	66.9 2143	68.6 2141	70.3 2139	71.9 2135	73.6 2134	75.3 2133	79.9 2156
180	61.1 2301	64.1 2280	68.4 2266	70.1 2267	71.7 2264	73.5 2263	75.2 2263	77.0 2266	81.7 2303
190	62.8 2428	65.7 2414	70.0 2403	71.7 2404	73.3 2404	75.1 2404	76.8 2406	78.7 2414	83.4 2472
200	64.4 2571	67.4 2557	71.6 2549	73.2 2551	75.0 2552	76.7 2553	78.6 2559	80.3 2577	85.2 2649
210	66.0 2722	69.0 2708	73.1 2703	74.9 2706	76.6 2707	78.4 2711	80.2 2727	82.1 2748	87.0 2836
220	67.8 2882	70.6 2868	74.8 2866	76.5 2868	78.2 2870	80.0 2882	81.9 2905	83.8 2934	88.6 3025
230	69.3 3048	72.3 3036	76.4 3037	78.1 3039	79.9 3045	81.7 3066	83.6 3093	85.5 3131	90.0 3192
240	70.9 3222	73.8 3215	77.9 3216	79.7 3218	81.5 3235	83.3 3258	84.9 3256	86.6 3273	91.3 3361
PACK FLOW LO ΔFF = – 0.3 %		**PACK FLOW HI OR/ AND CARGO COOL ON** ΔFF = + 1.5 %		**ENGINE ANTI ICE ON** ΔFF = + 3 %		**TOTAL ANTI ICE ON** ΔFF = + 5.5 %		**per 1° above ISA** ΔFF = + 0.3 %	

Note : Correction for straight line holding : – 3 %

R

RACE TRACK HOLDING PATTERN - S SPEED

MAX. CRUISE THRUST LIMITS
CONFIGURATION 1
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 30.0%

N1 (%)
FF (KG/H/ENG)

WEIGHT (1000KG)	FL 15	FL 50	FL100	FL120	FL140	FL150	FL160	FL180	FL200
130	55.4 1914	58.6 1877	63.1 1867	65.1 1870	66.9 1871	67.8 1870	68.7 1870	70.5 1873	72.4 1881
140	57.7 2047	60.9 2023	65.5 2027	67.2 2029	69.1 2028	70.0 2028	70.9 2031	72.7 2039	74.4 2038
150	59.8 2189	63.0 2179	67.5 2187	69.4 2185	71.1 2188	72.0 2192	72.9 2197	74.6 2195	76.4 2193
160	61.9 2336	64.9 2338	69.5 2343	71.2 2345	73.0 2354	73.9 2352	74.8 2351	76.4 2349	78.3 2349
170	63.7 2494	66.9 2501	71.3 2502	73.0 2511	74.8 2508	75.6 2507	76.4 2506	78.2 2504	79.9 2510
180	65.4 2654	68.6 2662	73.0 2668	74.7 2664	76.3 2662	77.2 2661	78.1 2660	79.8 2663	81.6 2671
190	67.2 2817	70.2 2819	74.5 2821	76.2 2818	77.8 2816	78.8 2815	79.6 2817	81.3 2824	83.1 2832
200	68.7 2981	71.8 2978	75.9 2970	77.5 2968	79.3 2966	80.1 2968	81.0 2971	82.7 2976	84.5 2994
210	70.2 3138	73.2 3131	77.2 3122	78.9 3120	80.6 3121	81.5 3125	82.3 3126	84.1 3135	85.8 3156
220	71.6 3297	74.4 3281	78.5 3274	80.3 3271	81.9 3275	82.7 3276	83.6 3279	85.3 3298	87.1 3316
230	72.9 3445	75.7 3434	79.8 3428	81.4 3427	83.1 3429	84.0 3432	84.8 3441	86.5 3462	88.3 3479
240	74.1 3598	76.9 3592	81.0 3583	82.6 3583	84.3 3589	85.2 3598	86.0 3610	87.8 3626	89.5 3650

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
ΔFF = – 0.3 %	ΔFF = + 1 %	ΔFF = + 3 %	ΔFF = + 5 %	ΔFF = + 0.3 %

Note : Correction for straight line holding : – 3 %

R

RACE TRACK HOLDING PATTERN - 170KT

MAX. CRUISE THRUST LIMITS
CONFIGURATION 1
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 30.0%

N1 (%)
FF (KG/H/ENG)

WEIGHT (1000KG)	FL 15	FL 50	FL100	FL120	FL140	FL150	FL160	FL180	FL200
130	57.1 2016	60.3 1985	64.8 1981	66.6 1978	68.4 1975	69.2 1971	70.0 1967	71.7 1963	73.4 1961
140	59.0 2131	62.1 2116	66.7 2117	68.4 2113	70.2 2111	71.0 2109	71.8 2107	73.6 2104	75.2 2101
150	60.9 2266	64.0 2262	68.5 2263	70.3 2260	72.0 2264	72.9 2263	73.8 2261	75.4 2259	77.2 2256
160	62.8 2418	66.0 2420	70.5 2421	72.1 2425	74.0 2433	74.8 2434	75.7 2432	77.4 2430	79.1 2432
170	64.8 2590	67.9 2596	72.3 2601	74.2 2609	76.0 2621	76.8 2621	77.7 2620	79.4 2622	81.2 2627
180	66.8 2776	69.9 2781	74.4 2799	76.2 2812	78.0 2827	78.9 2829	79.8 2832	81.5 2837	83.4 2850
190	68.9 2984	72.0 2986	76.4 3018	78.3 3036	80.2 3061	81.0 3065	81.9 3068	83.8 3080	85.6 3102
200	70.9 3203	74.0 3217	78.6 3264	80.5 3289	82.4 3319	83.3 3325	84.2 3333	86.0 3353	88.0 3379
210	73.1 3445	76.2 3470	80.7 3528	82.6 3556	84.6 3593	85.5 3604	86.4 3615	88.3 3640	90.3 3677
220	75.0 3703	78.2 3735	82.8 3809	84.8 3845	86.8 3896	87.7 3911	88.7 3926	90.7 3963	92.9 4014
230	77.2 3985	80.3 4030	85.1 4121	87.0 4173	89.1 4235	90.1 4253	91.1 4275	93.3 4327	95.8 4393
240	79.2 4288	82.4 4343	87.2 4455	89.3 4516	91.4 4592	92.5 4621	93.6 4649	96.0 4716	99.3 4845

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
ΔFF = – 0.3 %	ΔFF = + 1 %	ΔFF = + 3 %	ΔFF = + 5 %	ΔFF = + 0.3 %

Note : Correction for straight line holding : – 3 %

R

RACE TRACK HOLDING PATTERN - 170KT

MAX. CRUISE THRUST LIMITS
CONFIGURATION 1
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 30.0%

N1 (%)
FF (KG/H/ENG)

WEIGHT (1000KG)	FL 15	FL 50	FL100	FL120	FL140	FL150	FL160	FL180	FL200
130	55.8 1938	58.9 1900	63.4 1890	65.3 1889	67.1 1887	67.9 1883	68.8 1879	70.4 1874	72.2 1871
140	57.7 2051	60.9 2026	65.5 2028	67.2 2026	69.1 2027	69.9 2023	70.7 2020	72.4 2017	74.1 2016
150	59.8 2185	62.9 2176	67.4 2180	69.3 2179	71.0 2182	71.8 2181	72.7 2179	74.4 2177	76.1 2174
160	61.9 2337	64.9 2339	69.5 2345	71.3 2347	73.1 2356	74.0 2355	74.8 2354	76.5 2352	78.3 2352
170	63.9 2515	67.1 2522	71.6 2526	73.3 2535	75.2 2546	76.0 2546	76.9 2546	78.7 2546	80.4 2552
180	66.0 2705	69.1 2710	73.6 2727	75.5 2738	77.3 2753	78.2 2754	79.1 2756	80.8 2761	82.6 2770
190	68.2 2912	71.3 2915	75.8 2942	77.5 2960	79.5 2982	80.4 2986	81.2 2989	83.0 2998	84.9 3019
200	70.2 3129	73.3 3140	77.8 3183	79.8 3205	81.6 3233	82.6 3238	83.5 3244	85.3 3262	87.2 3285
210	72.4 3363	75.4 3382	80.0 3433	81.8 3460	83.8 3492	84.7 3501	85.6 3512	87.5 3535	89.5 3567
220	74.3 3607	77.5 3636	82.1 3704	84.0 3736	86.0 3784	86.9 3798	87.9 3811	89.8 3844	91.9 3890
230	76.4 3877	79.5 3918	84.2 4001	86.2 4046	88.2 4102	89.2 4119	90.2 4136	92.2 4182	94.6 4238
240	78.4 4162	81.6 4209	86.3 4307	88.3 4362	90.4 4428	91.4 4452	92.4 4477	94.7 4534	97.6 4623

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
ΔFF = – 0.3 %	ΔFF = + 1 %	ΔFF = + 3 %	ΔFF = + 5 %	ΔFF = + 0.3 %

Note : Correction for straight line holding : – 3 %

GENERAL

Descent tables are established for normal descent speed M.80/300kt/250kt and emergency descent at MMO/VMO with airbrakes extended down to 1500 feet with:

R · Normal air conditioning (Packs NORM/Cargo cooling OFF or Packs LO/Cargo cooling
R NORM).

· CG = 30 %

· Anti ice OFF

For normal descent cabin vertical speed is limited to 350 feet/minute.

3

DESCENT - M.80/300KT/250KT

IDLE THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=30.0%

MAXIMUM CABIN RATE OF DESCENT 350 FT/MIN

WEIGHT (1000KG)	150				200				
FL	TIME (MIN)	FUEL (KG)	DIST. (NM)	N1	TIME (MIN)	FUEL (KG)	DIST. (NM)	N1	IAS (KT)
410	20.3	359	125	IDLE					237
390	19.3	345	118	IDLE	22.3	397	137	IDLE	248
370	18.5	332	112	IDLE	21.4	384	130	IDLE	260
350	17.7	320	106	IDLE	20.6	372	124	IDLE	272
330	17.0	310	100	IDLE	19.8	360	118	IDLE	284
310	16.3	301	95	IDLE	19.1	349	112	IDLE	297
290	15.5	289	89	IDLE	18.1	335	104	IDLE	300
270	14.7	275	83	IDLE	17.1	319	97	IDLE	300
250	13.8	262	76	IDLE	16.0	303	89	IDLE	300
240	13.4	255	73	IDLE	15.5	295	85	IDLE	300
220	12.5	241	67	IDLE	14.4	278	78	IDLE	300
200	11.6	225	61	IDLE	13.3	260	71	IDLE	300
180	10.6	210	55	IDLE	12.2	241	63	IDLE	300
160	9.7	193	49	IDLE	11.1	221	56	IDLE	300
140	8.7	176	43	IDLE	10.0	201	49	IDLE	300
120	7.8	159	37	IDLE	8.8	179	42	IDLE	300
100	6.8	140	31	IDLE	7.6	157	35	IDLE	300
50	2.5	54	11	IDLE	2.8	60	12	IDLE	250
15	.0	0	0	IDLE	.0	0	0	IDLE	250

CORRECTIONS	PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI-ICE ON	TOTAL ANTI-ICE ON	△ISA per 1° above ISA
TIME	–	–	+10 %	+10 %	–
FUEL	–2 %	+4.5 %	+60 %	+70 %	+0.4 %
DISTANCE	–	+1 %	+13 %	+13 %	+0.4 %

H09F -08B1 A330–301 CF6–80E1A2 23100000C5KG300 0 018590 0 0–1 .0 .0 .00 0 03 .800300.000250 .000 0 FCOM-G0–03–05–30–002–010

GENERAL

Descent tables are established for normal descent speed M.80/300kt/250kt and emergency descent at MMO/VMO with airbrakes extended down to 1500 feet with:

R · Normal air conditioning (Packs NORM/Cargo cooling OFF or Packs LO/Cargo cooling
R NORM).

· CG = 30 %

· Anti ice OFF

For normal descent cabin vertical speed is limited to 350 feet/minute.

3

DESCENT - M.80/300KT/250KT

IDLE THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=30.0%

MAXIMUM CABIN RATE OF DESCENT 350FT/MIN

WEIGHT (1000KG)	150				200				
FL	TIME (MIN)	FUEL (KG)	DIST. (NM)	N1	TIME (MIN)	FUEL (KG)	DIST. (NM)	N1	IAS (KT)
410	20.7	367	128	IDLE					237
390	19.8	354	121	IDLE	23.0	410	141	IDLE	248
370	18.9	341	114	IDLE	22.1	396	134	IDLE	260
350	18.1	329	108	IDLE	21.2	384	127	IDLE	272
330	17.4	318	103	IDLE	20.4	372	121	IDLE	284
310	16.8	309	98	IDLE	19.7	361	115	IDLE	297
290	16.0	297	91	IDLE	18.7	346	108	IDLE	300
270	15.1	283	85	IDLE	17.7	331	100	IDLE	300
250	14.2	269	78	IDLE	16.6	314	92	IDLE	300
240	13.7	262	75	IDLE	16.1	306	88	IDLE	300
220	12.8	248	69	IDLE	15.0	288	81	IDLE	300
200	11.9	232	63	IDLE	13.9	270	73	IDLE	300
180	11.0	216	56	IDLE	12.7	251	66	IDLE	300
160	10.0	200	50	IDLE	11.6	231	58	IDLE	300
140	9.0	182	44	IDLE	10.4	210	51	IDLE	300
120	8.1	164	38	IDLE	9.2	188	44	IDLE	300
100	7.1	146	33	IDLE	8.0	165	37	IDLE	300
50	2.6	56	11	IDLE	2.9	64	13	IDLE	250
15	.0	0	0	IDLE	.0	0	0	IDLE	250

CORRECTIONS	PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
TIME	–	–	+ 10 %	+ 10 %	-
FUEL	– 2 %	+ 4.5 %	+ 60 %	+ 70 %	+ 0.4 %
DISTANCE	–	+ 1 %	+ 13 %	+ 13 %	+ 0.4 %

11.0-08F0A330-200 CF6-80E1A4 23100000C5KG300 0 018590 0 0-1-350 .0 .15 .0 00 0 03 .800300.000250 .000 0 FCOM-G0-03-05-30-002-015

EMERGENCY DESCENT - M.86/330KT

IDLE THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=30.0%

AIRBRAKES EXTENDED

WEIGHT (1000KG)	150				200				
FL	TIME (MIN)	FUEL (KG)	DIST. (NM)	N1	TIME (MIN)	FUEL (KG)	DIST. (NM)	N1	IAS (KT)
410	5.6	96	39	IDLE					257
390	5.3	92	37	IDLE	6.9	119	48	IDLE	269
370	5.1	88	35	IDLE	6.6	115	46	IDLE	282
350	4.8	85	33	IDLE	6.3	111	44	IDLE	295
330	4.6	82	32	IDLE	6.0	107	42	IDLE	308
310	4.5	80	30	IDLE	5.8	104	40	IDLE	322
290	4.3	77	29	IDLE	5.6	100	38	IDLE	330
270	4.0	73	27	IDLE	5.2	95	35	IDLE	330
250	3.7	69	24	IDLE	4.8	89	32	IDLE	330
240	3.6	67	23	IDLE	4.7	87	30	IDLE	330
220	3.3	62	21	IDLE	4.3	81	28	IDLE	330
200	3.0	57	19	IDLE	3.9	74	25	IDLE	330
180	2.7	52	17	IDLE	3.5	68	22	IDLE	330
160	2.4	47	15	IDLE	3.1	61	19	IDLE	330
140	2.1	41	13	IDLE	2.7	54	17	IDLE	330
120	1.8	36	11	IDLE	2.3	46	14	IDLE	330
100	1.5	30	9	IDLE	1.9	38	11	IDLE	330
50	.6	13	3	IDLE	.8	17	5	IDLE	330
15	.0	0	0	IDLE	.0	0	0	IDLE	330

H09F -08B1 A330-301 CF6-80E1A2 23300000C5KG300 0 018590 0 0-1 .0 .0 .00 0 02 .860330.000 .000 0 FCOM-G0-03-05-30-003-010

EMERGENCY DESCENT - M.86/330KT

IDLE THRUST
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG=30.0%

AIRBRAKES EXTENDED

WEIGHT (1000KG)	150				200				
FL	TIME (MIN)	FUEL (KG)	DIST. (NM)	N1	TIME (MIN)	FUEL (KG)	DIST. (NM)	N1	IAS (KT)
410	5.6	97	40	IDLE					257
390	5.4	93	38	IDLE	7.0	121	49	IDLE	269
370	5.1	89	35	IDLE	6.7	116	46	IDLE	282
350	4.9	86	34	IDLE	6.4	112	44	IDLE	295
330	4.7	83	32	IDLE	6.1	108	42	IDLE	308
310	4.5	81	31	IDLE	5.9	105	40	IDLE	322
290	4.3	78	29	IDLE	5.6	102	38	IDLE	330
270	4.1	74	27	IDLE	5.3	97	35	IDLE	330
250	3.8	70	25	IDLE	4.9	91	32	IDLE	330
240	3.6	67	24	IDLE	4.7	88	31	IDLE	330
220	3.3	63	21	IDLE	4.4	82	28	IDLE	330
200	3.1	58	19	IDLE	4.0	76	25	IDLE	330
180	2.8	53	17	IDLE	3.6	69	22	IDLE	330
160	2.4	48	15	IDLE	3.2	62	20	IDLE	330
140	2.1	42	13	IDLE	2.8	55	17	IDLE	330
120	1.8	36	11	IDLE	2.4	47	14	IDLE	330
100	1.5	30	9	IDLE	1.9	39	11	IDLE	330
50	.6	13	4	IDLE	.8	17	5	IDLE	330
15	.0	0	0	IDLE	.0	0	0	IDLE	330

11.0-08F0A330-200 CF6-80E1A4 23310000C5KG300 0 018590 0 0-1 .0 .0 .00 0 02 .860330.000 .000 0 FCOM-G0-03-05-30-003-015

GENERAL

In the go around configuration corresponding to the all engine procedure, the minimum steady gradient one engine inoperative required by the regulations is 2.1 % at a speed not exceeding 1.4 Vs. This requirement is also called approach climb performance by regulations.
The following tables allow to determine the go around limiting weight which satisfies the required gradient with the certified go around configurations 3 and 2.
The required gradient of 2.1 % is considered at the airport reference altitude. The power setting is "GO AROUND" thrust with the air conditioning ON. The speed is 1.23 Vs of the specified configuration. For the occasional cases where approach climb performance is found restrictive, a correction is given for an increased speed up to 1.4 Vs.

Note : Landing climb performance (2 engines running) is never limiting.

PROCEDURE

According to airport pressure altitude and temperature determine if the slats/flaps setting must be restricted as a function of the landing weight, in order to meet the go around gradient requirement of 2.1 %.
Establish the final approach configuration with one more step of flaps. If the approach is interrupted, retract the flaps by one step during the go-around.
In case of category II approach, JAR-OPS requires a regulatory approach climb gradient of 2.5 % to be maintained.
Use the tables for CAT II approach to determine the maximum approach climb limiting weight according to airport pressure altitude and temperature.

Note : 1. If circumstances dictate, landing may be made at a weight corresponding to the maximum structural takeoff weight. (Refer to overweight landing procedure 3.02).

2. When icing conditions are predicted during the flight and TAT is less than 10° C and there is evidence of significant ice accretion, to take into account ice formation on the non heated structure :

- *decrease the approach climb limiting weight by 5 %.*
- *increase approach and landing speeds by 5 knots and multiply landing distance by 1.1.*

R *3. In the following tables corrections for anti-ice are only valid for OAT lower than*
R *10°C.*

APPROACH CLIMB LIMITING WEIGHT (1000 KG) ONE ENGINE OUT ONE ENGINE AT GO AROUND THRUST	Gradient : 2.1% High Air Conditioning Anti Ice OFF V = 1.23 Vs	CONF 2

PRESSURE ALTITUDE (FT)												
OAT (°C)	–2000	0	200	400	600	800	1000	1500	2000	5000	10000	14600
≤ 10	228.6	230.8	229.7	228.7	227.6	226.5	225.4	222.7	220.0	204.1	174.9	142.9
20	227.8	230.1	229.0	228.0	226.9	225.9	224.8	222.1	219.4	203.7	165.2	134.6
22	227.7	230.0	228.9	227.9	226.8	225.7	224.7	222.0	219.3	200.9	162.5	133.4
24	227.5	229.9	228.8	227.7	226.7	225.6	224.6	221.9	219.2	198.1	159.6	132.2
26	227.4	229.7	228.7	227.6	226.6	225.5	224.5	221.8	219.1	195.5	156.9	
28	227.3	229.6	228.5	227.5	226.4	225.4	224.3	220.2	216.2	193.3	154.3	
30	227.1	229.4	227.8	226.2	224.6	223.0	221.3	217.3	213.2	191.2	151.6	
32	227.0	226.4	224.8	223.2	221.6	219.9	218.3	214.2	210.1	188.2	148.9	
34	226.8	223.1	221.5	219.9	218.3	216.6	215.0	210.9	206.8	184.8	146.1	
36	225.6	219.9	218.3	216.7	215.0	213.4	211.8	207.7	203.6	181.5		
38	224.4	216.7	215.1	213.5	211.9	210.2	208.6	204.5	200.5	178.3		
40	223.2	213.5	211.8	210.1	208.4	206.8	205.1	201.2	197.2	175.1		
42	222.1	209.7	208.1	206.5	204.8	203.2	201.6	197.7	193.6	172.3		
44	220.9	205.9	204.2	202.6	201.0	199.4	197.7	193.6	189.6	169.6		
46	216.1	201.7	200.0	198.4	196.8	195.1	193.5	189.5	185.5			
48	211.1	197.3	195.7	194.1	192.5	190.9	189.3	185.4	181.6			
50	206.3	192.9	191.3	189.7	188.2	186.6	185.1	181.4	177.7			
52	201.8	188.5	187.0	185.5	184.0	182.5	181.0	177.3				
54	197.4	184.2	182.7	181.2								
55	195.3	182.0										

AIR CONDITIONING OFF ADD 3500 kg	ENGINE ANTI ICE ON SUBTRACT 4000 kg	TOTAL ANTI ICE ON SUBTRACT 9500 kg	SPEED INCREASE PER 0.01 Vs ADD 300 kg

GENERAL

In the go around configuration corresponding to the all engine procedure, the minimum steady gradient one engine inoperative required by the regulations is 2.1 % at a speed not exceeding 1.4 Vs. This requirement is also called approach climb performance by regulations.
The following tables allow to determine the go around limiting weight which satisfies the required gradient with the certified go around configurations 3 and 2.
The required gradient of 2.1 % is considered at the airport reference altitude. The power setting is "GO AROUND" thrust with the air conditioning ON. The speed is 1.23 Vs of the specified configuration. For the occasional cases where approach climb performance is found restrictive, a correction is given for an increased speed up to 1.4 Vs.

Note : Landing climb performance (2 engines running) is never limiting.

PROCEDURE

According to airport pressure altitude and temperature determine if the slats/flaps setting must be restricted as a function of the landing weight, in order to meet the go around gradient requirement of 2.1 %.
Establish the final approach configuration with one more step of flaps. If the approach is interrupted, retract the flaps by one step during the go-around.
In case of category II approach, JAR-OPS requires a regulatory approach climb gradient of 2.5 % to be maintained.
Use the tables for CAT II approach to determine the maximum approach climb limiting weight according to airport pressure altitude and temperature.

Note : 1. If circumstances dictate, landing may be made at a weight corresponding to the maximum structural takeoff weight. (Refer to overweight landing procedure 3.02).

2. When icing conditions are predicted during the flight and TAT is less than 10° C and there is evidence of significant ice accretion, to take into account ice formation on the non heated structure :

- *decrease the approach climb limiting weight by 5 %.*
- *increase approach and landing speeds by 5 knots and multiply landing distance by 1.1.*

R *3. In the following tables corrections for anti-ice are only valid for OAT lower than*
R *10°C.*

APPROACH CLIMB LIMITING WEIGHT (1000 KG) ONE ENGINE OUT ONE ENGINE AT GO AROUND THRUST	Gradient : 2.1% High Air Conditioning Anti Ice OFF V = 1.23 Vs	CONF 2

PRESSURE ALTITUDE (FT)												
OAT	–2000	0	200	400	600	800	1000	1500	2000	5000	10000	14600
≤ 10	249.3	249.8	248.8	247.8	246.8	245.8	244.7	241.8	238.9	219.0	184.4	150.1
20	248.5	249.0	248.0	247.0	246.0	245.0	244.0	241.1	238.2	218.5	174.5	138.8
22	248.4	248.9	247.9	246.9	245.9	244.9	243.9	241.0	238.1	216.6	171.6	136.9
24	248.2	248.7	247.8	246.8	245.8	244.8	243.7	240.9	238.0	214.7	168.3	135.2
26	248.1	248.6	247.6	246.7	245.7	244.7	243.6	240.7	237.9	212.3	165.1	133.6
28	247.9	248.5	247.5	246.5	245.5	244.5	243.4	239.1	234.7	209.2	162.3	
30	247.7	248.3	246.7	245.0	243.3	241.6	239.8	235.4	230.8	205.8	159.4	
32	247.6	244.8	243.1	241.4	239.7	237.9	236.1	231.6	227.1	202.2	156.5	
34	247.4	241.2	239.4	237.7	235.9	234.2	232.4	227.9	223.3	198.1	153.5	
36	245.4	237.5	235.7	234.0	232.3	230.5	228.7	224.1	219.4	194.7		
38	243.5	234.0	232.2	230.5	228.6	226.8	225.0	220.7	216.6	192.1		
40	241.7	230.4	228.5	226.7	225.0	223.2	221.6	217.5	213.5	189.3		
42	240.1	226.3	224.6	222.9	221.2	219.5	217.9	214.0	209.7	185.8		
44	238.4	222.1	220.4	218.8	217.1	215.5	213.8	209.6	205.3	182.3		
46	233.3	217.7	216.0	214.4	212.7	211.0	209.3	205.1	200.9			
48	228.1	213.3	211.7	210.0	208.3	206.7	205.0	200.6	196.2			
50	223.2	209.0	207.2	205.4	203.6	201.9	200.1	195.8	191.6			
52	218.8	203.9	202.2	200.4	198.7	197.0	195.3	191.1				
54	214.2	198.8	197.0	195.4								
55	211.6	196.2										

AIR CONDITIONING OFF ADD 3700 kg	ENGINE ANTI ICE ON SUBTRACT 2100 kg	TOTAL ANTI ICE ON SUBTRACT 6700 kg	SPEED INCREASE PER 0.01 Vs ADD 300 kg

OCTO 13.0.1 AB202A01

APPROACH CLIMB LIMITING WEIGHT (1000 KG)	Gradient : 2.1%	CONF 3
ONE ENGINE OUT	High Air Conditioning Anti Ice OFF	
ONE ENGINE AT GO AROUND THRUST	V = 1.23 Vs	

R

PRESSURE ALTITUDE (FT)												
OAT (°C)	–2000	0	200	400	600	800	1000	1500	2000	5000	10000	14600
≤ 10	215.5	217.3	216.3	215.3	214.2	213.2	212.2	209.6	207.0	192.0	164.4	138.2
20	214.8	216.6	215.6	214.6	213.6	212.6	211.6	209.1	206.5	191.6	155.4	129.7
22	214.6	216.5	215.5	214.5	213.5	212.5	211.5	209.0	206.4	189.0	152.9	128.1
24	214.5	216.4	215.4	214.4	213.4	212.4	211.4	208.8	206.3	186.4	150.2	126.5
26	214.4	216.3	215.3	214.3	213.3	212.3	211.3	208.8	206.2	183.9	147.6	
28	214.2	216.2	215.2	214.2	213.2	212.2	211.1	207.3	203.4	181.9	145.7	
30	214.1	216.0	214.5	213.0	211.4	209.9	208.3	204.5	200.6	179.8	144.1	
32	214.0	213.2	211.6	210.1	208.6	207.0	205.5	201.6	197.7	177.0	142.3	
34	213.8	210.1	208.6	207.0	205.5	203.9	202.4	198.5	194.7	173.9	140.4	
36	212.6	207.0	205.5	204.0	202.4	200.9	199.4	195.5	191.6	170.8		
38	211.5	204.0	202.5	201.0	199.4	197.9	196.3	192.4	188.7	167.7		
40	210.4	201.0	199.4	197.8	196.2	194.6	193.1	189.3	185.6	164.7		
42	209.3	197.4	195.9	194.3	192.8	191.2	189.7	186.0	182.1	162.1		
44	208.2	193.8	192.2	190.7	189.2	187.6	186.0	182.2	178.4	159.5		
46	203.6	189.8	188.3	186.7	185.2	183.6	182.1	178.3	174.5			
48	198.9	185.7	184.2	182.7	181.1	179.6	178.1	174.4	170.8			
50	194.4	181.6	180.1	178.6	177.1	175.6	174.2	170.6	167.2			
52	190.3	177.5	176.0	174.6	173.1	171.7	170.3	166.9				
54	186.2	173.4	172.0	170.6								
55	184.1	171.4										

AIR CONDITIONING OFF ADD 2600 kg	ENGINE ANTI ICE SUBTRACT 3800 kg	TOTAL ANTI ICE ON SUBTRACT 8900 kg	SPEED INCREASE PER 0.01 Vs ADD 300 kg

LEFT INTENTIONALLY BLANK

APPROACH CLIMB LIMITING WEIGHT (1000 KG)	Gradient : 2.1%	CONF 3
ONE ENGINE OUT	High Air Conditioning Anti Ice OFF	
ONE ENGINE AT GO AROUND THRUST	V = 1.23 Vs	

PRESSURE ALTITUDE (FT)												
OAT	–2000	0	200	400	600	800	1000	1500	2000	5000	10000	14600
≤ 10	235.8	236.0	235.0	234.0	233.0	232.0	230.9	228.1	225.3	206.3	173.7	141.5
20	235.0	235.2	234.3	233.3	232.3	231.3	230.3	227.5	224.7	205.9	164.5	131.3
22	234.9	235.1	234.1	233.2	232.2	231.2	230.1	227.4	224.6	204.1	161.7	129.9
24	234.7	235.0	234.0	233.0	232.1	231.1	230.0	227.3	224.5	202.3	158.7	128.7
26	234.6	234.8	233.9	232.9	232.0	231.0	229.9	227.2	224.4	200.1	155.7	127.6
28	234.4	234.7	233.7	232.8	231.8	230.8	229.8	225.6	221.3	197.3	153.0	
30	234.2	234.5	232.9	231.3	229.7	228.0	226.3	222.1	217.7	194.0	150.3	
32	234.1	231.2	229.5	227.9	226.2	224.5	222.8	218.4	214.1	190.6	147.5	
34	233.9	227.6	226.0	224.3	222.6	220.9	219.2	214.9	210.5	186.8	144.7	
36	232.0	224.1	222.5	220.8	219.1	217.4	215.6	211.2	206.8	183.5		
38	230.2	220.8	219.1	217.4	215.6	213.9	212.1	208.0	204.2	181.1		
40	228.4	217.3	215.5	213.8	212.1	210.5	208.9	205.0	201.3	178.4		
42	226.9	213.4	211.8	210.1	208.5	207.0	205.4	201.7	197.7	175.2		
44	225.2	209.4	207.8	206.3	204.7	203.2	201.6	197.6	193.6	172.0		
46	220.4	205.3	203.7	202.2	200.6	199.0	197.4	193.4	189.4			
48	215.4	201.2	199.6	198.1	196.5	194.9	193.3	189.2	185.1			
50	210.7	197.2	195.5	193.8	192.1	190.4	188.8	184.7	180.8			
52	206.6	192.4	190.8	189.1	187.5	185.9	184.3	180.4				
54	202.4	187.6	186.0	184.4								
55	200.0	185.2										

AIR CONDITIONING OFF ADD 3000 kg	ENGINE ANTI ICE ON SUBTRACT 2000 kg	TOTAL ANTI ICE ON SUBTRACT 6300 kg	SPEED INCREASE PER 0.01 Vs ADD 200 kg

OCTO 13.0.1 AB202A01

LEFT INTENTIONALLY BLANK

APPROACH CLIMB LIMITING WEIGHT (1000 KG)	**Gradient : 2.5%**	**CAT II**
ONE ENGINE OUT	**High Air Conditioning**	
ONE ENGINE AT GO AROUND THRUST	**Anti ice OFF**	**CONF 2**

PRESSURE ALTITUDE (FT)												
OAT	**-1000**	**0**	**200**	**400**	**600**	**800**	**1000**	**1500**	**2000**	**5000**	**8000**	**9200**
≤ 10	222.3	222.9	221.9	220.9	219.9	218.8	217.8	215.2	212.6	197.4	181.5	174.2
20	221.6	222.3	221.2	220.2	219.2	218.2	217.2	214.6	212.0	196.9	175.3	166.1
22	221.5	222.1	221.1	220.1	219.1	218.1	217.1	214.5	211.9	194.4	173.1	163.9
24	221.4	222.0	221.0	220.0	219.0	218.0	216.9	214.4	211.8	191.7	170.7	161.3
26	221.3	221.9	220.9	219.9	218.9	217.9	216.9	214.3	211.7	189.1	168.3	158.6
28	221.1	221.8	220.8	219.7	218.7	217.7	216.7	212.8	208.9	187.1	165.7	155.9
30	221.0	221.6	220.1	218.5	217.0	215.4	213.9	210.0	206.1	185.0	162.9	153.1
32	220.8	218.7	217.2	215.6	214.1	212.5	211.0	207.1	203.1	182.2	159.6	150.3
34	218.6	215.6	214.0	212.5	211.0	209.4	207.8	203.9	200.0	179.0	156.3	147.5
36	216.4	212.5	211.0	209.4	207.9	206.3	204.8	200.9	196.9	175.8	153.2	144.7
38	214.3	209.5	207.9	206.4	204.8	203.3	201.7	197.8	194.0	172.8	150.2	
40	212.1	206.4	204.8	203.2	201.6	200.0	198.4	194.6	190.9	169.6		
42	210.0	202.8	201.2	199.7	198.1	196.6	195.0	191.3	187.4	167.0		
44	206.0	199.1	197.6	196.0	194.5	192.9	191.3	187.4	183.5	164.4		
46	201.8	195.1	193.6	192.0	190.4	188.9	187.3	183.5	179.7			
48	197.5	191.0	189.4	187.9	186.3	184.8	183.3	179.5	175.9			
50	193.2	186.7	185.2	183.7	182.2	180.8	179.3	175.7	172.2			
52	189.0	182.6	181.1	179.7	178.2	176.8	175.4	171.9				
54	184.9	178.4	177.0	175.6								
55	182.8	176.4										

AIR CONDITIONING OFF **ADD** 3800 kg	**ENGINE ANTI ICE ON** **SUBTRACT** 300 kg	**TOTAL ANTI ICE ON** **SUBTRACT** 4000 kg

OCTO 12.0.5 AB301A05

APPROACH CLIMB LIMITING WEIGHT (1000 KG)	Gradient : 2.5%	CAT II
ONE ENGINE OUT	High Air Conditioning	
ONE ENGINE AT GO AROUND THRUST	Anti ice OFF	CONF 3

PRESSURE ALTITUDE (FT)												
OAT	-1000	0	200	400	600	800	1000	1500	2000	5000	8000	9200
≤ 10	210.9	211.4	210.4	209.4	208.4	207.5	206.5	204.0	201.5	187.0	172.0	165.0
20	210.3	210.7	209.8	208.8	207.8	206.9	205.9	203.4	201.0	186.6	166.1	157.3
22	210.1	210.6	209.7	208.7	207.7	206.8	205.8	203.3	200.9	184.2	163.9	155.3
24	210.0	210.5	209.5	208.6	207.6	206.6	205.7	203.2	200.8	181.6	161.7	152.8
26	209.9	210.4	209.5	208.5	207.5	206.6	205.6	203.2	200.7	179.2	159.4	150.3
28	209.8	210.3	209.3	208.4	207.4	206.4	205.5	201.8	198.0	177.3	157.0	147.7
30	209.6	210.2	208.7	207.2	205.7	204.2	202.8	199.0	195.3	175.3	154.3	145.5
32	209.5	207.4	205.9	204.5	203.0	201.5	200.0	196.3	192.5	172.6	151.2	143.4
34	207.4	204.4	203.0	201.5	200.0	198.5	197.0	193.3	189.6	169.6	148.0	141.2
36	205.3	201.5	200.0	198.6	197.1	195.6	194.1	190.4	186.7	166.6	145.6	139.0
38	203.3	198.6	197.1	195.7	194.2	192.7	191.2	187.5	183.8	163.6	143.3	
40	201.2	195.7	194.1	192.6	191.1	189.6	188.1	184.4	180.9	160.7		
42	199.2	192.3	190.8	189.3	187.8	186.3	184.8	181.3	177.5	158.2		
44	195.4	188.7	187.3	185.8	184.3	182.8	181.3	177.6	173.9	155.7		
46	191.3	185.0	183.5	182.0	180.5	179.0	177.5	173.8	170.2			
48	187.3	181.0	179.5	178.0	176.6	175.1	173.6	170.1	166.7			
50	183.3	177.0	175.5	174.1	172.7	171.3	169.9	166.5	163.1			
52	179.3	173.0	171.6	170.3	168.9	167.5	166.2	162.8				
54	175.4	169.1	167.8	166.4								
55	173.4	167.2										

AIR CONDITIONING OFF ADD 3400 kg	ENGINE ANTI ICE ON SUBTRACT 300 kg	TOTAL ANTI ICE ON SUBTRACT 3700 kg

OCTO 12.0.5 AB301A05

APPROACH CLIMB LIMITING WEIGHT (1000 KG)	Gradient : 2.5%	CAT II
ONE ENGINE OUT	Normal Air Conditioning	
ONE ENGINE AT GO AROUND THRUST	Anti ice OFF	CONF 2

PRESSURE ALTITUDE (FT)												
OAT	–1000	0	200	400	600	800	1000	1500	2000	5000	8000	9200
≤ 10	242.2	241.7	240.7	239.7	238.7	237.7	236.7	233.9	231.1	212.1	192.1	184.2
20	241.4	240.9	240.0	239.0	238.0	237.0	236.0	233.3	230.5	211.6	186.1	176.0
22	241.3	240.8	239.8	238.9	237.9	236.9	235.9	233.1	230.4	209.8	183.9	173.8
24	241.1	240.6	239.7	238.7	237.8	236.8	235.8	233.0	230.3	208.0	181.5	170.8
26	241.0	240.5	239.6	238.6	237.6	236.7	235.6	232.9	230.2	205.7	178.6	167.7
28	240.8	240.4	239.4	238.5	237.5	236.5	235.5	231.3	227.1	202.8	175.5	164.6
30	240.7	240.2	238.6	237.0	235.4	233.7	232.0	227.8	223.4	199.5	172.3	161.9
32	240.5	236.9	235.2	233.6	231.9	230.2	228.5	224.2	219.9	196.1	169.4	159.0
34	237.7	233.3	231.7	230.0	228.3	226.7	225.0	220.7	216.3	192.2	166.4	156.1
36	234.9	229.8	228.2	226.5	224.8	223.1	221.4	217.0	212.5	188.9	163.4	153.2
38	232.3	226.5	224.8	223.1	221.4	219.6	217.8	213.7	209.8	186.4	160.4	
40	229.6	223.0	221.3	219.5	217.8	216.2	214.6	210.7	206.9	183.7		
42	227.0	219.1	217.5	215.9	214.2	212.6	211.1	207.3	203.3	180.4		
44	222.6	215.1	213.5	211.9	210.4	208.8	207.2	203.2	199.1	177.1		
46	218.1	210.9	209.3	207.7	206.2	204.6	203.0	198.9	194.9			
48	213.6	206.7	205.2	203.6	202.0	200.4	198.8	194.5	190.4			
50	209.4	202.7	200.9	199.2	197.5	195.8	194.1	190.0	186.0			
52	205.3	197.8	196.1	194.4	192.8	191.1	189.5	185.5				
54	200.4	192.9	191.2	189.6								
55	197.9	190.4										

AIR CONDITIONING OFF ADD 3800 kg	ENGINE ANTI ICE ON SUBTRACT 400 kg	TOTAL ANTI ICE ON SUBTRACT 4100 kg

OCTO 13.0.1 AB202A01

APPROACH CLIMB LIMITING WEIGHT (1000 KG)	Gradient : 2.5%	CAT II
ONE ENGINE OUT	High Air Conditioning	
ONE ENGINE AT GO AROUND THRUST	Anti ice OFF	CONF 3

PRESSURE ALTITUDE (FT)												
OAT	–1000	0	200	400	600	800	1000	1500	2000	5000	8000	9200
≤ 10	231.1	230.5	229.6	228.6	227.7	226.7	225.7	222.9	220.2	201.9	182.7	175.2
20	230.4	229.8	228.9	227.9	227.0	226.1	225.0	222.3	219.6	201.4	177.2	167.5
22	230.2	229.7	228.8	227.8	226.9	225.9	224.9	222.2	219.5	199.8	175.0	165.4
24	230.1	229.6	228.6	227.7	226.8	225.8	224.8	222.1	219.4	198.0	172.7	162.5
26	230.0	229.4	228.5	227.6	226.7	225.7	224.7	222.0	219.3	195.8	169.9	159.6
28	229.8	229.3	228.4	227.4	226.5	225.6	224.5	220.5	216.3	193.1	167.0	156.7
30	229.7	229.1	227.6	226.0	224.4	222.8	221.2	217.0	212.8	190.0	164.0	154.0
32	229.5	225.9	224.3	222.7	221.1	219.4	217.8	213.5	209.4	186.7	161.2	151.2
34	226.8	222.5	220.8	219.2	217.6	216.0	214.3	210.1	205.9	183.0	158.3	148.4
36	224.1	219.0	217.4	215.8	214.2	212.5	210.8	206.6	202.3	179.8	155.4	145.7
38	221.6	215.8	214.2	212.5	210.8	209.1	207.4	203.5	199.8	177.4	152.6	
40	219.0	212.5	210.7	209.1	207.5	205.9	204.4	200.6	197.0	174.8		
42	216.4	208.7	207.1	205.6	204.0	202.5	201.0	197.5	193.6	171.7		
44	212.1	204.9	203.4	201.9	200.4	198.8	197.3	193.5	189.6	168.6		
46	207.8	200.9	199.4	197.9	196.4	194.8	193.3	189.4	185.5			
48	203.6	196.9	195.4	193.9	192.4	190.8	189.3	185.3	181.3			
50	199.6	193.0	191.4	189.7	188.1	186.5	184.9	181.0	177.1			
52	195.7	188.4	186.8	185.2	183.6	182.1	180.5	176.7				
54	191.0	183.8	182.2	180.7								
55	188.7	181.4										

AIR CONDITIONING OFF ADD 3600 kg	ENGINE ANTI ICE ON SUBTRACT 300 kg	TOTAL ANTI ICE ON SUBTRACT 3900 kg

OCTO 13.0.1 AB202A01

GENERAL

The alternate planning tables allow the flight crew to determine the fuel consumption and time required to cover a given air distance from go-around at destination airport to landing at alternate airport.
These tables are established for :

- Go around : 500 kg or 1100 lb
- Climb profile : 250kt/300kt/M.80
- R Long range cruise
- Descent profile : M.80/300kt/250kt
- Approach and landing at alternate airport : 160 kg or 350 lb (4 min)
- ISA
- CG = 30%
- Normal air conditioning (Packs NORM/Cargo cooling OFF or Packs LO/cargo cooling NORM)
- Anti ice OFF

Note : 1. In the tables, a "" means that a step climb of 4000 feet has been made to reach the corresponding flight level.*
2. The flight level shown on the top of each column is the final flight level.
3. For each degree Celsius above ISA temperature apply a fuel correction of
0.01 (kg/°C/NM) × △ISA (°C) × Air Distance (NM)
or 0.022 (lb/°C/NM) × △ISA (°C) × Air Distance (NM)

CORRECTION FOR DEVIATION FROM REFERENCE WEIGHT

The alternate planning tables are based on a reference landing weight at destination.
The fuel consumption must be corrected when the actual weight is different from the reference landing weight.
If it is lower (or greater) than the reference weight, subtract (or add) the value given in the correction part of the table per 1000 kg or 1000 lb below (or above) the reference weight.

R

ALTERNATE PLANNING FROM DESTINATION TO ALTERNATE AIRPORT
GO-AROUND : 500 KG - CLIMB : 250/300KT/M.80 - CRUISE : LONG RANGE
DESCENT : M.80/300/250KT - VMC PROCEDURE : 160 KG (4MIN)

REF. LDG WT AT DEST. = 140000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 30.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 100	120	140	160	180	200	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL100 FL120	FL140 FL160	FL180 FL200
50	1549 0.14	1547 0.14					3		
100	2300 0.24	2272 0.24	2268 0.24	2271 0.23	2280 0.23	2294 0.23	5	5	5
150	3054 0.34	2999 0.34	2969 0.34	2947 0.33	2934 0.32	2926 0.32	8	8	8
200	3810 0.45	3727 0.44	3671 0.43	3625 0.43	3590 0.42	3559 0.41	10	10	10
250	4567 0.55	4458 0.54	4375 0.53	4305 0.52	4247 0.51	4194 0.49	12	12	12
300	5326 1.05	5190 1.04	5080 1.03	4986 1.02	4906 1.00	4830 0.58	15	15	15
350	6087 1.15	5923 1.14	5787 1.13	5669 1.11	5566 1.09	5467 1.07	17	17	17
400	6850 1.25	6658 1.24	6496 1.22	6353 1.21	6228 1.18	6105 1.16	20	20	19
450	7615 1.35	7396 1.33	7207 1.32	7038 1.30	6892 1.27	6745 1.25	22	22	22
500	8381 1.45	8134 1.43	7919 1.41	7726 1.40	7557 1.37	7386 1.34	25	25	24
550	9150 1.55	8875 1.53	8633 1.51	8415 1.49	8224 1.46	8028 1.43	27	27	26
600	9920 2.05	9617 2.03	9349 2.01	9105 1.59	8892 1.55	8672 1.52	30	30	29
650	10692 2.15	10361 2.12	10066 2.10	9797 2.08	9562 2.04	9317 2.01	32	32	31
700	11467 2.25	11107 2.22	10785 2.20	10491 2.17	10234 2.13	9964 2.09	35	35	33
750	12243 2.34	11855 2.32	11506 2.29	11186 2.27	10907 2.22	10611 2.18	37	37	36
800	13021 2.44	12604 2.42	12228 2.39	11883 2.36	11582 2.31	11261 2.27	40	40	38
850	13800 2.54	13355 2.51	12952 2.49	12582 2.46	12259 2.40	11911 2.36	42	42	40
900	14582 3.04	14108 3.01	13678 2.58	13282 2.55	12938 2.48	12563 2.44	44	45	43
950	15364 3.14	14862 3.11	14406 3.08	13984 3.04	13618 2.57	13217 2.53	47	47	45
1000	16149 3.23	15617 3.20	15135 3.17	14687 3.14	14299 3.06	13871 3.02	49	50	47
1050	16936 3.33	16375 3.30	15866 3.26	15393 3.23	14979 3.15	14528 3.11	52	52	50
1100	17724 3.43	17134 3.40	16598 3.36	16100 3.32	15661 3.24	15186 3.19	54	55	52
1150	18515 3.53	17895 3.49	17333 3.45	16808 3.41	16345 3.33	15846 3.28	57	57	54
1200	19307 4.02	18657 3.59	18069 3.55	17519 3.51	17030 3.42	16507 3.36	59	60	57

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 2.5	△FUEL = + 4 %

GENERAL

The alternate planning tables allow the flight crew to determine the fuel consumption and time required to cover a given air distance from go-around at destination airport to landing at alternate airport.
These tables are established for :
- Go around : 500 kg or 1100 lb
- Climb profile : 250kt/300kt/M.80
- R Long range cruise
- Descent profile : M.80/300kt/250kt
- Approach and landing at alternate airport : 160 kg or 350 lb (4 min)
- ISA
- CG = 30%
- Normal air conditioning (Packs NORM/Cargo cooling OFF or Packs LO/cargo cooling NORM)
- Anti ice OFF

Note : 1. In the tables, a "" means that a step climb of 4000 feet has been made to reach the corresponding flight level.*
2. The flight level shown on the top of each column is the final flight level.
3. For each degree Celsius above ISA temperature apply a fuel correction of
0.01 (kg/°C/NM) × △ISA (°C) × Air Distance (NM)
or 0.022 (lb/°C/NM) × △ISA (°C) × Air Distance (NM)

CORRECTION FOR DEVIATION FROM REFERENCE WEIGHT

The alternate planning tables are based on a reference landing weight at destination.
The fuel consumption must be corrected when the actual weight is different from the reference landing weight.
If it is lower (or greater) than the reference weight, subtract (or add) the value given in the correction part of the table per 1000 kg or 1000 lb below (or above) the reference weight.

R

ALTERNATE PLANNING FROM DESTINATION TO ALTERNATE AIRPORT
GO-AROUND : 500 KG - CLIMB : 250/300KT/M.80 - CRUISE : LONG RANGE
DESCENT : M.80/300/250KT - VMC PROCEDURE : 160 KG (4MIN)

REF. LDG WT AT DEST. = 140000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 30.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 100	120	140	160	180	200	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL100 FL120	FL140 FL160	FL180 FL200
50	1529 0.14						3		
100	2256 0.25	2230 0.25	2230 0.24	2236 0.24	2248 0.23	2266 0.23	5	5	5
150	2984 0.35	2933 0.35	2908 0.34	2890 0.33	2881 0.33	2879 0.32	7	7	8
200	3713 0.46	3637 0.45	3588 0.44	3546 0.43	3516 0.42	3494 0.41	10	10	10
250	4445 0.56	4344 0.55	4269 0.54	4204 0.53	4152 0.52	4110 0.50	12	12	12
300	5178 1.06	5051 1.05	4952 1.04	4863 1.02	4790 1.01	4727 0.59	14	14	15
350	5913 1.17	5761 1.15	5636 1.13	5524 1.12	5429 1.11	5346 1.08	17	17	17
400	6650 1.27	6472 1.25	6322 1.23	6186 1.22	6070 1.20	5966 1.17	19	19	19
450	7388 1.37	7184 1.35	7009 1.33	6850 1.31	6712 1.29	6588 1.26	21	21	22
500	8129 1.48	7899 1.45	7698 1.43	7515 1.41	7356 1.39	7210 1.35	24	24	24
550	8871 1.58	8614 1.55	8388 1.53	8182 1.51	8001 1.48	7835 1.44	26	26	27
600	9614 2.08	9332 2.05	9080 2.02	8850 2.00	8647 1.57	8460 1.53	29	29	29
650	10360 2.18	10051 2.15	9774 2.12	9520 2.10	9296 2.07	9087 2.02	31	31	31
700	11107 2.29	10772 2.25	10469 2.22	10192 2.19	9945 2.16	9716 2.11	33	33	34
750	11856 2.39	11495 2.35	11165 2.32	10865 2.29	10597 2.25	10345 2.20	36	36	36
800	12607 2.49	12219 2.44	11863 2.41	11539 2.38	11250 2.35	10977 2.29	38	38	39
850	13360 2.59	12945 2.54	12563 2.51	12216 2.48	11904 2.44	11609 2.38	41	41	41
900	14114 3.09	13673 3.04	13264 3.01	12894 2.57	12560 2.53	12243 2.47	43	43	43
950	14870 3.19	14402 3.14	13967 3.10	13573 3.07	13217 3.02	12879 2.56	46	46	46
1000	15628 3.29	15133 3.24	14672 3.20	14254 3.16	13877 3.11	13516 3.05	48	48	48
1050	16387 3.39	15866 3.33	15378 3.30	14936 3.26	14537 3.21	14154 3.14	50	50	50
1100	17149 3.49	16600 3.43	16086 3.39	15620 3.35	15199 3.30	14792 3.23	53	53	53
1150	17912 3.59	17336 3.53	16795 3.49	16306 3.45	15863 3.39	15432 3.31	55	55	55
1200	18677 4.09	18074 4.03	17506 3.59	16993 3.54	16528 3.48	16073 3.40	58	58	57

PACK FLOW LO	**PACK FLOW HI OR/ AND CARGO COOL ON**	**ENGINE ANTI ICE ON**	**TOTAL ANTI ICE ON**
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 3 %	△FUEL = + 4 %

R

ALTERNATE PLANNING FROM DESTINATION TO ALTERNATE AIRPORT
GO-AROUND : 500 KG - CLIMB : 250/300KT/M.80 - CRUISE : LONG RANGE
DESCENT : M.80/300/250KT - VMC PROCEDURE : 160 KG (4MIN)

REF. LDG WT AT DEST. = 140000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 30.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 230	270	310	350	390	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL230 FL270	FL310 FL350	FL390
150	2927 0.31	2954 0.30				8		
200	3526 0.39	3515 0.38	3533 0.36	3555 0.36		10	11	
250	4127 0.48	4076 0.46	4058 0.44	4046 0.43	4053 0.42	12	13	14
300	4730 0.56	4639 0.54	4584 0.51	4538 0.50	4519 0.49	15	15	16
350	5334 1.05	5203 1.02	5111 0.59	5032 0.57	4986 0.55	17	18	19
400	5939 1.13	5768 1.10	5639 1.06	5526 1.04	5454 1.02	19	20	21
450	6545 1.22	6334 1.18	6168 1.13	6021 1.11	5922 1.09	21	22	23
500	7153 1.30	6902 1.26	6698 1.21	6518 1.18	6392 1.15	24	24	25
550	7762 1.39	7470 1.34	7230 1.28	7015 1.25	6863 1.22	26	26	27
600	8373 1.47	8040 1.42	7762 1.36	7514 1.32	7335 1.29	28	28	30
650	8985 1.56	8611 1.50	8295 1.43	8014 1.39	7808 1.35	31	31	32
700	9598 2.04	9183 1.58	8830 1.50	8515 1.46	8282 1.42	33	33	34
750	10213 2.12	9756 2.06	9365 1.58	9016 1.53	8757 1.48	35	35	36
800	10829 2.21	10331 2.13	9902 2.05	9519 2.00	9233 1.55	37	37	39
850	11447 2.29	10907 2.21	10440 2.12	10023 2.07	9710 2.02	40	39	41
900	12066 2.38	11483 2.29	10978 2.20	10528 2.14	10188 2.08	42	42	43
950	12687 2.46	12062 2.37	11518 2.27	11035 2.21	10667 2.15	44	44	46
1000	13309 2.54	12641 2.45	12059 2.34	11542 2.28	11147 2.22	47	46	48
1050	13932 3.02	13222 2.53	12601 2.42	12050 2.35	11629 2.28	49	48	50
1100	14557 3.11	13803 3.01	13145 2.49	12560 2.42	12111 2.35	51	50	53
1150	15183 3.19	14386 3.09	13689 2.56	13071 2.49	12594 2.41	54	53	55
1200	15810 3.27	14971 3.16	14234 3.04	13583 2.56	13079 2.48	56	55	57

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = –0.5 %	△FUEL = + 1 %	△FUEL = + 2.5	△FUEL = + 4 %

R

ALTERNATE PLANNING FROM DESTINATION TO ALTERNATE AIRPORT
GO-AROUND : 500 KG - CLIMB : 250/300KT/M.80 - CRUISE : LONG RANGE
DESCENT : M.80/300/250KT - VMC PROCEDURE : 160 KG (4MIN)

REF. LDG WT AT DEST. = 140000 KG
NORMAL AIR CONDITIONING
ANTI-ICING OFF

ISA
CG = 30.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 230	270	310	350	390	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL230 FL270	FL310 FL350	FL390
150	2885 0.31	2919 0.30				8		
200	3468 0.40	3465 0.38	3490 0.36	3515 0.36		10	11	
250	4053 0.48	4013 0.46	4005 0.44	4000 0.43	4008 0.42	12	13	14
300	4638 0.57	4562 0.54	4520 0.52	4486 0.50	4470 0.49	14	15	16
350	5225 1.06	5112 1.02	5037 0.59	4972 0.57	4932 0.55	17	18	18
400	5814 1.14	5664 1.11	5554 1.07	5460 1.04	5395 1.02	19	20	20
450	6403 1.23	6216 1.19	6073 1.14	5949 1.11	5859 1.09	21	22	23
500	6994 1.32	6770 1.27	6593 1.22	6439 1.19	6324 1.15	23	24	25
550	7586 1.40	7325 1.35	7113 1.29	6930 1.26	6790 1.22	26	27	27
600	8180 1.49	7881 1.43	7635 1.37	7422 1.33	7257 1.29	28	29	29
650	8775 1.58	8438 1.51	8159 1.44	7915 1.40	7725 1.35	30	31	32
700	9371 2.06	8997 1.59	8683 1.52	8409 1.47	8194 1.42	33	33	34
750	9968 2.15	9557 2.07	9208 1.59	8905 1.54	8663 1.48	35	36	36
800	10567 2.23	10118 2.15	9735 2.07	9401 2.01	9134 1.55	37	38	38
850	11167 2.32	10680 2.23	10262 2.14	9899 2.08	9606 2.02	39	40	41
900	11768 2.40	11244 2.31	10791 2.21	10397 2.15	10078 2.08	42	42	43
950	12371 2.49	11808 2.39	11321 2.29	10897 2.22	10551 2.15	44	44	45
1000	12975 2.58	12374 2.47	11852 2.36	11398 2.29	11026 2.21	47	47	48
1050	13580 3.06	12942 2.55	12384 2.44	11900 2.36	11501 2.28	49	49	50
1100	14187 3.14	13510 3.03	12917 2.51	12403 2.43	11978 2.35	51	51	52
1150	14795 3.23	14080 3.11	13452 2.58	12907 2.50	12455 2.41	54	53	55
1200	15404 3.31	14651 3.19	13987 3.06	13413 2.56	12934 2.48	56	56	57

PACK FLOW LO	PACK FLOW HI OR/ AND CARGO COOL ON	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
△FUEL = – 0.5 %	△FUEL = + 1 %	△FUEL = + 3 %	△FUEL = + 4 %

GENERAL

The ground distance/air distance conversion tables are used to calculate the air distance for a given ground distance due to the influence of the wind.
Tables are given for :

- M.80
- M.82
- M.84
- LONG RANGE SPEED
  up to FL250
  above FL250

M.80

GROUND DIST. (NM)	AIR DISTANCE (NM)						
	TAIL WIND			WIND COMPONENTS (KT)			HEAD WIND
	+150	+100	+ 50	0	-50	-100	-150
10	8	8	9	10	11	13	15
20	15	16	18	20	22	26	30
30	23	25	27	30	34	38	44
40	30	33	36	40	45	51	59
50	38	41	45	50	56	64	74
100	75	82	90	100	112	128	148
200	151	164	180	200	224	255	296
300	226	247	271	300	336	383	445
400	302	329	361	400	449	511	593
500	377	411	451	500	561	638	741
1000	755	822	902	1000	1122	1277	1482
1500	1132	1233	1353	1500	1682	1915	2223
2000	1509	1644	1804	2000	2243	2554	2964
2500	1886	2054	2255	2500	2804	3192	3705
3000	2264	2465	2707	3000	3365	3831	4446
3500	2641	2876	3158	3500	3926	4469	5187
4000	3018	3287	3609	4000	4486	5108	5928
4500	3395	3698	4060	4500	5047	5746	6669
5000	3773	4109	4511	5000	5608	6385	7411
5500	4150	4520	4962	5500	6169	7023	8152
6000	4527	4931	5413	6000	6730	7661	8893
6500	4905	5342	5864	6500	7290	8300	9634
7000	5282	5753	6315	7000	7851	8938	10375
7500	5659	6163	6766	7500	8412	9577	11116
8000	6036	6574	7217	8000	8973	10215	11857
8500	6414	6985	7669	8500	9534	10854	12598
9000	6791	7396	8120	9000	10095	11492	13339
9500	7168	7807	8571	9500	10655	12131	14080
10000	7546	8218	9022	10000	11216	12769	14821

M.82

GROUND DIST (NM)	AIR DISTANCE (NM)						
	TAIL WIND			WIND COMPONENTS (KT)			HEAD WIND
	+150	+100	+ 50	0	-50	-100	-150
10	8	8	9	10	11	13	15
20	15	17	18	20	22	25	29
30	23	25	27	30	34	38	44
40	30	33	36	40	45	51	59
50	38	41	45	50	56	63	73
100	76	83	90	100	112	127	146
200	152	165	181	200	224	254	293
300	228	248	271	300	335	381	439
400	304	330	362	400	447	507	586
500	380	413	452	500	559	634	732
1000	759	825	904	1000	1118	1268	1465
1500	1139	1238	1357	1500	1677	1903	2197
2000	1518	1651	1809	2000	2237	2537	2930
2500	1898	2063	2261	2500	2796	3171	3662
3000	2277	2476	2713	3000	3355	3805	4395
3500	2657	2889	3165	3500	3914	4439	5127
4000	3036	3302	3617	4000	4473	5073	5860
4500	3416	3714	4070	4500	5032	5708	6592
5000	3795	4127	4522	5000	5591	6342	7324
5500	4175	4540	4974	5500	6151	6976	8057
6000	4555	4952	5426	6000	6710	7610	8789
6500	4934	5365	5878	6500	7269	8244	9522
7000	5314	5778	6330	7000	7828	8878	10254
7500	5693	6190	6783	7500	8387	9513	10987
8000	6073	6603	7235	8000	8946	10147	11719
8500	6452	7016	7687	8500	9506	10781	12451
9000	6832	7428	8139	9000	10065	11415	13184
9500	7211	7841	8591	9500	10624	12049	13916
10000	7591	8254	9043	10000	11183	12683	14649

M.84

GROUND DIST (NM)	AIR DISTANCE (NM)						
	TAIL WIND		WIND COMPONENTS (KT)				HEAD WIND
	+150	+100	+ 50	0	-50	-100	-150
10	8	8	9	10	11	13	14
20	15	17	18	20	22	25	29
30	23	25	27	30	33	38	43
40	31	33	36	40	45	50	58
50	38	41	45	50	56	63	72
100	76	83	91	100	112	126	145
200	153	166	181	200	223	252	290
300	229	249	272	300	335	378	435
400	305	332	363	400	446	504	580
500	382	414	453	500	558	630	724
1000	763	829	906	1000	1115	1260	1449
1500	1145	1243	1360	1500	1673	1890	2173
2000	1527	1658	1813	2000	2230	2521	2898
2500	1909	2072	2266	2500	2788	3151	3622
3000	2290	2486	2719	3000	3345	3781	4347
3500	2672	2901	3172	3500	3903	4411	5071
4000	3054	3315	3626	4000	4461	5041	5795
4500	3436	3730	4079	4500	5018	5671	6520
5000	3817	4144	4532	5000	5576	6301	7244
5500	4199	4559	4985	5500	6133	6932	7969
6000	4581	4973	5438	6000	6691	7562	8693
6500	4963	5387	5892	6500	7249	8192	9417
7000	5344	5802	6345	7000	7806	8822	10142
7500	5726	6216	6798	7500	8364	9452	10866
8000	6108	6631	7251	8000	8921	10082	11591
8500	6490	7045	7704	8500	9479	10712	12315
9000	6871	7459	8158	9000	10036	11343	13040
9500	7253	7874	8611	9500	10594	11973	13764
10000	7635	8288	9064	10000	11152	12603	14488

LONG RANGE SPEED UP TO FL250

GROUND DIST. (NM)	AIR DISTANCE (NM)						
	TAIL WIND			WIND COMPONENTS (KT)			HEAD WIND
	+150	+100	+ 50	0	-50	-100	-150
10	7	8	9	10	12	14	17
20	14	16	18	20	23	27	33
30	22	24	27	30	35	41	50
40	29	32	35	40	46	54	66
50	36	40	44	50	58	68	83
100	72	79	88	100	115	136	165
200	143	158	177	200	230	271	330
300	215	238	265	300	345	407	495
400	287	317	354	400	461	543	660
500	359	396	442	500	576	678	825
1000	717	792	884	1000	1151	1357	1651
1500	1076	1188	1326	1500	1727	2035	2476
2000	1434	1584	1768	2000	2303	2713	3302
2500	1793	1980	2210	2500	2878	3391	4127
3000	2152	2376	2652	3000	3454	4070	4953
3500	2510	2772	3093	3500	4030	4748	5778
4000	2869	3167	3535	4000	4605	5426	6604
4500	3227	3563	3977	4500	5181	6105	7429
5000	3586	3959	4419	5000	5757	6783	8254
5500	3945	4355	4861	5500	6332	7461	9080
6000	4303	4751	5303	6000	6908	8139	9905
6500	4662	5147	5745	6500	7484	8818	10731
7000	5021	5543	6187	7000	8059	9496	11556
7500	5379	5939	6629	7500	8635	10174	12382
8000	5738	6335	7071	8000	9210	10853	13207
8500	6096	6731	7513	8500	9786	11531	14033
9000	6455	7127	7955	9000	10362	12209	14858
9500	6814	7523	8397	9500	10937	12887	15684
10000	7172	7919	8838	10000	11513	13566	16509

LONG RANGE SPEED ABOVE FL250

GROUND DIST. (NM)	AIR DISTANCE (NM)						
	TAIL WIND			WIND COMPONENTS (KT)			HEAD WIND
	+150	+100	+ 50	0	-50	-100	-150
10	8	8	9	10	11	13	15
20	15	16	18	20	22	25	29
30	23	25	27	30	34	38	44
40	30	33	36	40	45	51	59
50	38	41	45	50	56	64	74
100	76	82	90	100	112	127	147
200	151	165	181	200	224	254	295
300	227	247	271	300	336	382	442
400	303	330	361	400	448	509	589
500	379	412	452	500	560	636	736
1000	757	824	903	1000	1120	1272	1473
1500	1136	1236	1355	1500	1680	1908	2209
2000	1514	1648	1807	2000	2240	2544	2945
2500	1893	2059	2258	2500	2799	3180	3681
3000	2271	2471	2710	3000	3359	3817	4418
3500	2650	2883	3162	3500	3919	4453	5154
4000	3028	3295	3613	4000	4479	5089	5890
4500	3407	3707	4065	4500	5039	5725	6627
5000	3785	4119	4517	5000	5599	6361	7363
5500	4164	4531	4968	5500	6159	6997	8099
6000	4542	4943	5420	6000	6719	7633	8836
6500	4921	5354	5872	6500	7279	8269	9572
7000	5299	5766	6324	7000	7839	8905	10308
7500	5678	6178	6775	7500	8398	9541	11044
8000	6056	6590	7227	8000	8958	10177	11781
8500	6435	7002	7679	8500	9518	10814	12517
9000	6813	7414	8130	9000	10078	11450	13253
9500	7192	7826	8582	9500	10638	12086	13990
10000	7570	8238	9034	10000	11198	12722	14726

06.00 CONTENTS

06.10 GENERAL
– INTRODUCTION 1
– FLIGHT PREPARATION 1
– STRATEGY 1

06.20 CEILINGS

06.30 STANDARD STRATEGY
– PROCEDURE 1
– EXAMPLE 2
– DESCENT M.82/300KT 3
– LONG RANGE CRUISE 4
R – IN CRUISE QUICK CHECK AT LONG RANGE SPEED 12

06.40 OBSTACLE STRATEGY
– PROCEDURE 1
– EXAMPLE 2
– GROSS FLIGHT PATH DESCENT AT GREEN DOT SPEED 3

06.50 FIXED SPEED STRATEGIES
– PROCEDURE 1
– EXAMPLE 2
– DESCENT M.82/330KT MCT 3
– DESCENT M.82/310KT MCT 4
– CRUISE MCT/330 KT 5
– CRUISE MCT/310 KT 9
– IN CRUISE QUICK CHECK AT FIXED SPEEDS 13
– IN CRUISE QUICK CHECK 330 KT 14
– IN CRUISE QUICK CHECK 310KT 15

06.55 HOLDING

06.60 DESCENT TO LANDING

06.70 GROUND DISTANCE/AIR DISTANCE
– GENERAL 1
– LONG RANGE SPEED 2
– FIXED SPEEDS 3

INTRODUCTION

This chapter provides the single engine performance data to be used for the conduct and monitoring of the flight following an engine failure.
The diversion strategy (descent and cruise speed schedules) shall be selected, and specified in the operator's routes specifications, as a function of the prevailing operational factors (e.g. obstacles clearance requirements and/or ETOPS operation).

FLIGHT PREPARATION

In readiness for a possible engine failure occurring during the flight, any flight shall be planned so as to comply with any of the following requirements, as applicable :
· obstacle clearance,
· oxygen,
· maximum diversion distance (ETOPS operation).
The following FCOM sections provide flight preparation and fuel planning information :
· 2.05.10 thru 2.05.60, for Standard Fuel Planning,
· 2.04.40, for Extended Range Operation (ETOPS) and associated fuel requirements.

STRATEGY

Depending on the prevailing operational constraints, the most appropriate diversion strategy shall be selected, out of the following options :

R

	STANDARD STRATEGY	OBSTACLE STRATEGY	FIXED SPEED STRATEGIES	
			310KT	VMO
DESCENT TO CEILING	. M.82/300KT . MCT	. Green Dot Speed . MCT	. M.82/310KT . MCT	. M.82/330KT . MCT
CRUISE	LR ceiling LR speed	– Obstacle not cleared: Maintain Green Dot Speed at MCT – Obstacle cleared : Revert to standard strategy	FL per 2.04.40 MCT/310KT	FL per 2.04.40 MCT/330KT
DESCENT TO LANDING	IDLE/M.82/300KT/250KT			
Approx. increase in fuel consumption compared with both engines operative	+ 30 %			

For ETOPS operations, any of the above diversion strategies can be used provided that the selected strategy and speed schedule is used in :

- establishing the area of operation (maximum diversion distance), as described in Section 2.04.40,
- calculating the diversion fuel requirements for the single engine ETOPS critical scenario, as provided in section 2.04.40,
- demonstrating the applicable obstacle clearance requirements (net flight path and net ceiling).

During the diversion, the flight crew is expected to use the planned speed schedule. However, based on the evaluation of the actual situation, the pilot in command has the authority to deviate from this planned one engine inoperative speed.

GROSS CEILINGS AT LONG RANGE AND GREEN DOT SPEEDS

R

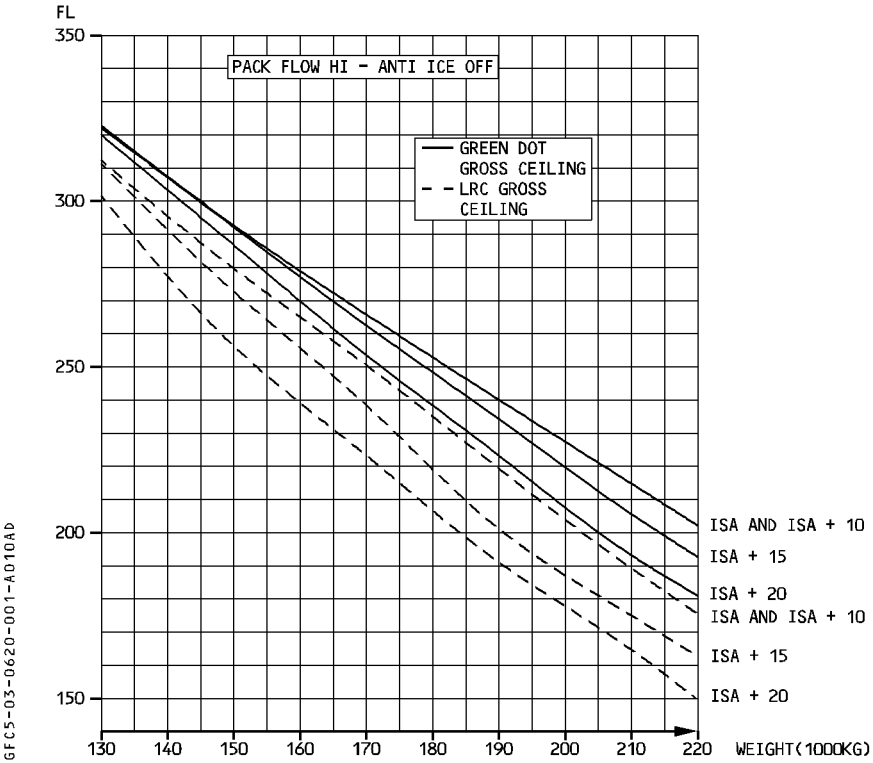

Note : If severe icing conditions are encountered, ice formation may build up on non heated structure and therefore the ceiling will be reduced by 2500 feet.

	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
LONG RANGE	– 700 FT	– 1800 FT
GREEN DOT	– 400 FT	– 1400 FT

NET CEILING AT GREEN DOT SPEED

To obtain the net ceiling at green dot speed, apply the following corrections to the gross ceiling at green dot speed :

	WEIGHT (1000 KG)				
	130	**150**	**170**	**190**	**210**
≤ ISA + 10	– 5400 FT	– 5400 FT	– 5800 FT	– 5900 FT	– 6200 FT
ISA + 20	– 5800 FT	– 6300 FT	– 6500 FT	– 6500 FT	– 7500 FT

GROSS CEILINGS AT LONG RANGE AND GREEN DOT SPEEDS

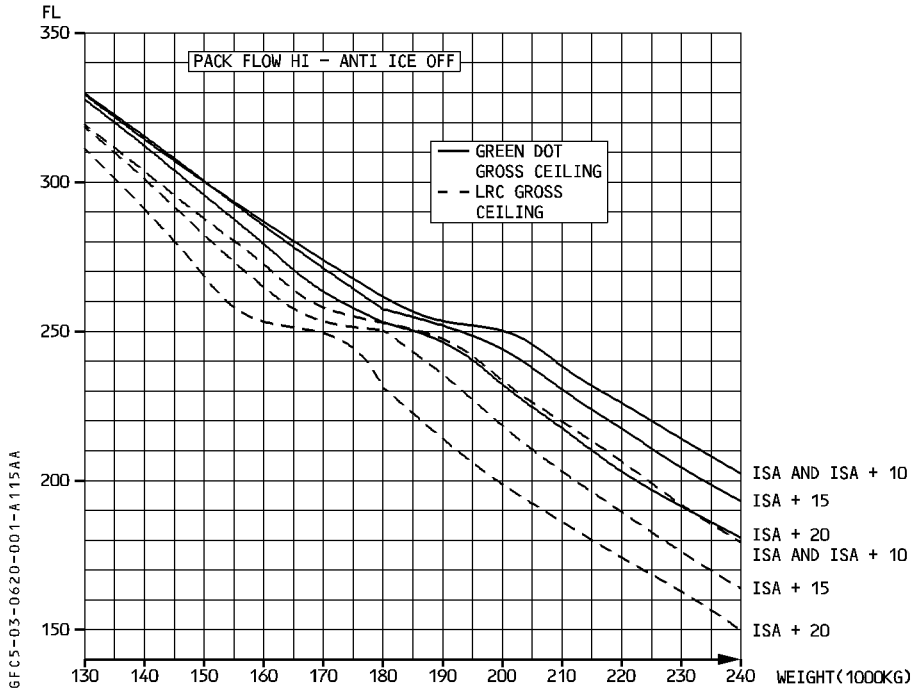

Note : If severe icing conditions are encountered, ice formation may build up on non heated structure and therefore the ceiling will be reduced by 2500 feet.

	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON
LONG RANGE	– 700 FT	– 1800 FT
GREEN DOT	– 400 FT	– 1500 FT

NET CEILING AT GREEN DOT SPEED

To obtain the net ceiling at green dot speed, apply the following corrections to the gross ceiling at green dot speed :

	WEIGHT (1000 KG)					
	130	**150**	**170**	**190**	**210**	**230**
≤ ISA + 10	– 4900 FT	– 4700 FT	– 4400 FT	– 5300 FT	– 6200 FT	– 6400 FT
ISA + 20	– 5500 FT	– 5000 FT	– 5600 FT	– 6800 FT	– 7100 FT	– 9200 FT

PROCEDURE

Unless a specific procedure has been established before dispatch (ETOPS, mountainous areas) the recommended procedure is as follows :

R

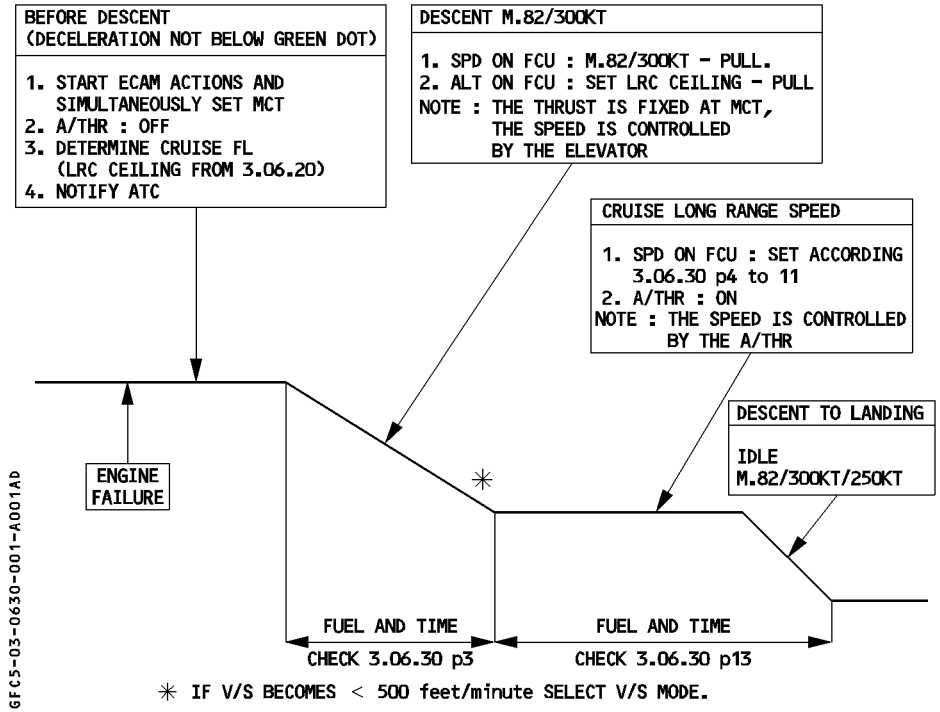

EXAMPLE

Given :

GW at engine failure	= 200 000 kg
FL at engine failure	= 350
Temperature	= ISA
Distance to diversion airport	= 450 NM

No wind

Find :

LRC ceiling : (see 3.06.20 page 1)	FL200
Descent to cruise level : (FL200) (see 3.06.30 page 3)	Distance = 294 – 124 = 170 NM Fuel = 3545 – 1626 = 1919 kg Time = 43.2 – 20.0 = 23.2 min

Cruise at long range speed (FL200) to landing.
(Weight = 200 000 – 1919 = 198 081 kg : Distance = 450 – 170 = 280 NM)

R Determine on (3.06.30 p 13) time and fuel consumption at ISA conditions for a reference weight of 170 000 kg. Interpolate the remaining air distance of 280 NM at FL200.
Fuel : 3557 kg
Time : 0 h 57 min
Correction due to actual in cruise weight
△Fuel = + 12 kg per 1000 kg above reference weight
△Fuel = + 12 kg × (198 – 170) ∼ 336 kg

Result :

Total Fuel = 1919 + 3557 + 336 = 5812 kg
Time = 0 h 57 min + 23 min = 1 h 20 min

PROCEDURE

Unless a specific procedure has been established before dispatch (ETOPS, mountainous areas) the recommended procedure is as follows :

R

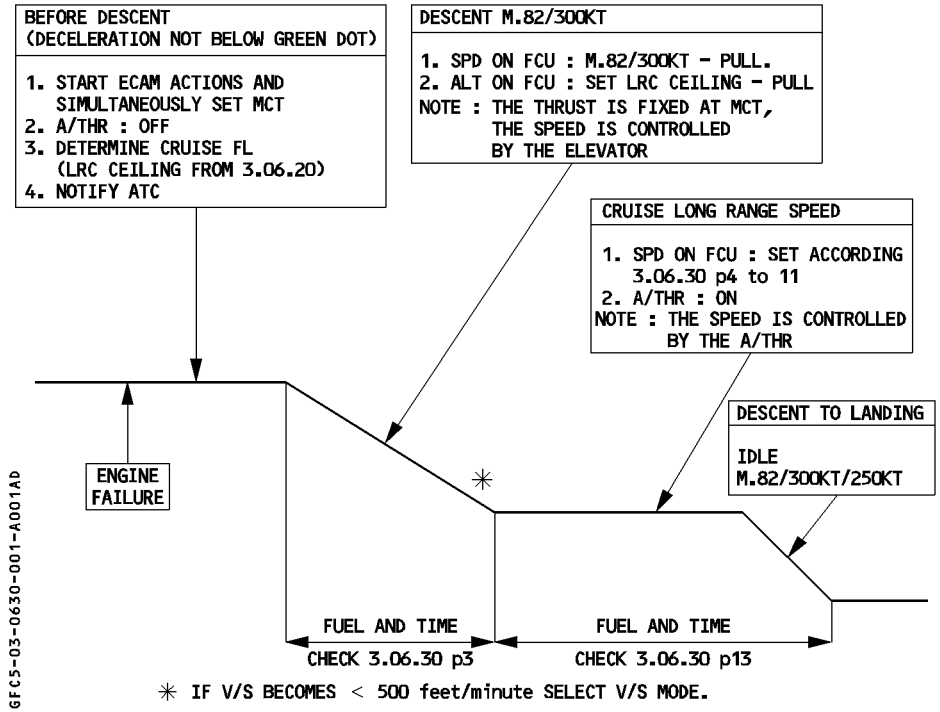

EXAMPLE

Given :

GW at engine failure = 200 000 kg
FL at engine failure = 350
Temperature = ISA
Distance to diversion airport = 450 NM
No wind

Find :

LRC ceiling : (see 3.06.20 page 1) FL230
Descent to cruise level : (FL230) Distance = 297 – 165 = 132 NM
(see 3.06.30 page 3) Fuel = 3514 – 2081 = 1433 kg
Time = 43.6 – 26 = 17.6 min

Cruise at long range speed (FL230) to landing.
(Weight = 200 000 – 1433 = 198 567 kg : Distance = 450 – 132 = 318 NM)
Determine on (3.06.30 p 13) time and fuel consumption at ISA conditions for a reference weight of 170 000 kg. Interpolate the remaining air distance of 318 NM at FL230.
Fuel : 3771 kg
Time : 1 h 01 min
Correction due to actual in cruise weight
$\triangle$Fuel = + 13 kg per 1000 kg above reference weight
$\triangle$Fuel = + 13 kg × (198.6 – 170) ~ 372 kg

Result :

Total Fuel = 1433 + 3771 + 372 = 5576 kg
Time = 1 h 01 min + 18 min = 1 h 19 min

R

DESCENT - M.82/300KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

MINIMUM RATE OF DESCENT 500FT/MIN

WEIGHT (1000KG)	150				200				
FL	TIME (MIN)	FUEL (KG)	DIST. (NM)	MODE	TIME (MIN)	FUEL (KG)	DIST. (NM)	MODE	IAS (KT)
410	49.3	3804	341	MCT					243
390	47.6	3717	328	MCT	46.3	3727	318	MCT	255
370	45.8	3619	314	MCT	44.8	3642	306	MCT	267
350	44.1	3513	301	MCT	43.2	3545	294	MCT	279
330	42.5	3405	288	MCT	41.6	3441	281	MCT	292
310	40.6	3263	273	MCT	39.7	3296	266	MCT	300
290	37.7	3036	250	MCT	37.1	3089	246	MCT	300
270	34.0	2725	222	V/S	33.9	2818	221	MCT	300
250	30.0	2391	193	V/S	30.0	2483	193	V/S	300
240	28.0	2226	179	V/S	28.0	2308	179	V/S	300
220	24.0	1899	151	V/S	24.0	1964	151	V/S	300
200	20.0	1576	124	V/S	20.0	1626	124	V/S	300
180	16.0	1256	98	V/S	16.0	1294	98	V/S	300
160	12.0	939	72	V/S	12.0	966	72	V/S	300
140	8.0	624	47	V/S	8.0	641	47	V/S	300
120	4.0	311	23	V/S	4.0	319	23	V/S	300
100	.0	0	0	V/S	.0	0	0	V/S	300

CORRECTIONS	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
TIME	-	-	-
FUEL	+ 1.5 %	+ 3.5 %	+ 0.25 %
DISTANCE -		-	+ 0.20 %

10B -08F0A330-301 CF6-80E1A2 23200010C6KG300 0 018590 0 0 3 .0 .0 500.00 0 02 .820300.000 .000 0 FCOM-G0-03-06-30-003-010

R

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA
CG = 30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL120		FL140		FL160		FL180		FL200	
130	82.8	.427	83.9	.437	85.1	.449	87.0	.467	88.6	.486	90.2	.503
	3837	236	3765	232	3722	230	3745	230	3761	230	3757	229
	71.1	273	73.5	277	75.8	282	77.9	292	80.0	301	82.2	309
140	84.4	.437	85.5	.448	87.4	.467	89.0	.485	90.6	.501	91.9	.514
	4073	241	4017	238	4051	239	4064	239	4058	238	4019	234
	68.5	279	70.6	284	72.5	294	74.4	302	76.4	310	78.5	316
150	85.9	.446	87.7	.465	89.2	.482	90.8	.498	92.2	.512	93.8	.527
	4314	246	4346	247	4357	247	4357	246	4326	243	4318	241
	66.0	285	67.7	294	69.6	303	71.4	311	73.3	317	75.0	324
160	87.8	.461	89.5	.479	91.0	.495	92.4	.509	93.9	.523	95.7	.541
	4639	255	4660	255	4656	254	4634	252	4614	249	4633	247
	63.5	295	65.2	304	66.9	311	68.6	318	70.2	324	71.7	332
170	89.6	.475	91.0	.491	92.6	.507	93.9	.519	95.6	.535	97.6	.555
	4958	263	4959	262	4946	260	4903	256	4913	254	4971	254
	61.2	304	62.8	311	64.4	319	66.0	324	67.4	331	68.5	341
180	91.0	.487	92.6	.502	93.9	.514	95.6	.530	97.3	.547	99.9	.576
	5255	269	5249	268	5207	264	5213	262	5243	260	5405	264
	59.1	311	60.6	318	62.1	324	63.4	331	64.6	339	65.5	354
190	92.5	.497	93.9	.511	95.4	.525	97.2	.542	99.4	.568	102.0	.593
	5555	275	5525	273	5512	270	5545	268	5676	271	5810	272
	57.2	318	58.6	324	59.9	330	61.0	338	61.9	352	62.7	364
200	93.9	.507	95.2	.519	96.9	.534	98.7	.553	101.3	.581	104.0	.605
	5849	281	5802	277	5819	275	5877	274	6055	277	6182	278
	55.3	324	56.6	329	57.8	336	58.7	345	59.4	360	60.1	372
210	95.1	.514	96.6	.529	98.4	.545	100.8	.574	103.4	.599	104.5	.586
	6117	285	6123	282	6153	280	6345	284	6509	286	6185	269
	53.6	328	54.7	335	55.7	343	56.4	358	57.0	371	58.2	360
220	96.3	.522	98.0	.538	100.0	.559	102.4	.583	104.6	.598	104.8	.539
	6417	289	6443	287	6543	288	6694	289	6706	286	6063	247
	52.0	333	52.9	341	53.7	352	54.4	364	55.2	370	54.7	331
230	97.6	.531	99.4	.547	101.8	.576	104.5	.602	104.8	.573		
	6730	294	6778	292	6998	297	7189	299	6650	273		
	50.3	339	51.2	347	51.8	362	52.3	376	53.4	355		
240	98.9	.540	101.0	.563	103.3	.585	104.7	.587	105.3	.526		
	7064	299	7208	301	7357	302	7173	291	6549	250		
	48.8	345	49.5	357	50.0	368	51.1	366	49.7	326		

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

DESCENT - M.82/300KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

MINIMUM RATE OF DESCENT 500FT/MIN

WEIGHT (1000KG)	150				200				
FL	TIME (MIN)	FUEL (KG)	DIST. (NM)	MODE	TIME (MIN)	FUEL (KG)	DIST. (NM)	MODE	IAS (KT)
410	49.9	3789	346	MCT					243
390	48.1	3701	332	MCT	46.7	3699	321	MCT	255
370	46.3	3599	318	MCT	45.2	3613	309	MCT	267
350	44.5	3490	304	MCT	43.6	3514	297	MCT	279
330	42.9	3377	291	MCT	42.0	3407	284	MCT	292
310	40.9	3230	275	MCT	40.0	3258	269	MCT	300
290	37.9	2991	251	MCT	37.3	3044	247	MCT	300
270	34.0	2670	222	V/S	33.9	2762	222	MCT	300
250	30.0	2343	193	V/S	30.0	2420	193	V/S	300
240	28.0	2181	179	V/S	28.0	2249	179	V/S	300
220	24.0	1861	151	V/S	24.0	1913	151	V/S	300
200	20.0	1544	124	V/S	20.0	1582	124	V/S	300
180	16.0	1230	98	V/S	16.0	1258	98	V/S	300
160	12.0	920	72	V/S	12.0	938	72	V/S	300
140	8.0	611	47	V/S	8.0	622	47	V/S	300
120	4.0	305	23	V/S	4.0	310	23	V/S	300
100	.0	0	0	V/S	.0	0	0	V/S	300

CORRECTIONS	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
TIME	–	–	–
FUEL	+ 1.5	+ 3.5	+ 0.25
DISTANCE	–	–	+ 0.3 %

11.0–08F0A330–200 CF6–80E1A4 23200010C6KG300 0 018590 0 0 3 .0 .0 500.00 0 02 .820300.000 .000 0 FCOM-G0–03–06–30–003–015

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

N1 (%)
KG/H
NM/1000KG
MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL120		FL140		FL160		FL180		FL200	
130	81.1	.418	82.7	.433	83.6	.440	85.0	.453	86.8	.472	88.6	.492
	3620	231	3598	230	3511	225	3487	223	3512	224	3546	224
	73.8	267	76.3	274	78.8	277	81.1	283	83.2	292	85.3	302
140	83.1	.432	84.1	.440	85.5	.453	87.3	.472	89.0	.491	90.7	.507
	3886	239	3802	234	3770	232	3802	233	3831	233	3828	231
	71.0	276	73.4	279	75.5	285	77.5	295	79.4	304	81.4	312
150	84.5	.440	85.7	.450	87.7	.471	89.3	.488	90.9	.505	92.3	.517
	4097	243	4043	240	4090	241	4109	241	4115	240	4078	236
	68.5	281	70.6	285	72.3	296	74.1	305	76.0	313	77.9	318
160	85.9	.448	87.8	.467	89.4	.485	91.0	.501	92.5	.514	94.1	.529
	4319	247	4365	249	4386	249	4397	248	4368	244	4365	241
	66.2	286	67.8	296	69.5	305	71.2	313	72.9	318	74.4	325
170	87.8	.463	89.5	.481	91.1	.497	92.6	.511	94.1	.525	95.9	.540
	4637	256	4671	256	4675	255	4661	253	4649	250	4660	247
	63.7	295	65.3	305	66.8	313	68.5	319	69.9	325	71.2	332
180	89.5	.477	91.0	.493	92.7	.508	94.0	.520	95.7	.535	97.8	.554
	4951	264	4960	263	4961	261	4920	257	4929	254	4998	254
	61.5	304	62.9	312	64.4	320	65.9	324	67.1	331	68.1	341
190	90.9	.487	92.5	.503	93.9	.515	95.6	.530	97.3	.545	100.0	.575
	5234	270	5242	268	5211	265	5213	262	5238	259	5428	264
	59.4	311	60.8	319	62.2	324	63.4	330	64.4	338	65.1	353
200	92.4	.498	93.9	.511	95.3	.524	97.1	.540	99.4	.566	102.2	.593
	5527	275	5512	273	5495	269	5515	267	5671	270	5843	272
	57.5	318	58.8	324	60.0	330	61.0	337	61.8	350	62.3	364
210	93.8	.507	95.1	.518	96.7	.533	98.6	.549	101.3	.579	104.2	.604
	5817	281	5769	276	5783	274	5831	272	6053	276	6206	277
	55.7	324	56.9	328	57.9	335	58.8	343	59.3	359	59.8	371
220	94.9	.514	96.4	.527	98.1	.542	100.6	.571	103.4	.597	106.4	.615
	6077	285	6073	281	6097	279	6305	283	6503	285	6601	282
	54.0	328	55.0	334	55.9	341	56.5	356	56.9	370	57.2	378
230	96.0	.520	97.7	.535	99.6	.552	102.2	.580	105.2	.605	107.6	.604
	6347	288	6365	286	6431	284	6656	288	6838	289	6747	277
	52.3	332	53.2	339	53.9	347	54.4	362	54.8	375	55.0	371
240	97.3	.529	99.0	.543	101.5	.572	104.4	.600	107.2	.616	108.2	.565
	6653	293	6687	290	6920	295	7155	298	7248	294	6657	259
	50.7	337	51.5	344	52.0	360	52.3	374	52.6	381	52.2	347

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

11.0-08F0A330-200 CF6-80E1A4 12200010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01 .990 .000 .000 0 FCOM-G0-03-06-30-004-015

R

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA
CG = 30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL210		FL220		FL230		FL240		FL250		FL260	
130	90.9 3738 83.3	.509 227 312	91.6 3720 84.4	.516 226 314	92.5 3725 85.4	.524 225 318	93.3 3721 86.4	.532 224 321	94.3 3741 87.2	.542 223 326	95.3 3747 88.1	.551 222 330
140	92.8 4017 79.5	.522 233 319	93.6 4015 80.4	.529 232 323	94.6 4029 81.2	.539 232 327	95.5 4036 82.0	.547 230 331	96.9 4120 82.6	.565 233 340	98.2 4158 83.2	.577 233 346
150	94.7 4316 75.8	.535 239 327	95.6 4333 76.5	.544 239 332	96.7 4366 77.2	.555 239 337	98.1 4449 77.7	.572 241 346	99.4 4492 78.3	.584 242 352	101.1 4576 78.8	.601 244 361
160	96.6 4639 72.3	.548 246 336	98.0 4739 72.9	.567 249 345	99.3 4783 73.3	.578 249 351	100.8 4867 73.8	.594 251 359	102.0 4873 74.4	.603 250 363	103.4 4876 74.9	.609 247 365
170	99.0 5078 69.0	.572 257 350	100.2 5106 69.5	.582 256 355	101.8 5217 69.8	.600 259 364	102.9 5179 70.5	.604 255 365	104.6 5239 70.6	.615 255 370	104.4 4921 71.4	.586 237 351
180	101.2 5463 65.9	.588 264 360	102.6 5532 66.3	.602 265 367	103.8 5507 66.8	.606 262 368	104.7 5421 67.4	.604 256 365	104.7 5092 67.1	.568 234 342		
190	103.3 5853 63.1	.604 271 369	104.5 5828 63.5	.608 268 370	104.7 5580 64.2	.590 255 358	104.7 5189 62.3	.535 225 323				
200	104.5 6012 60.8	.598 269 366	104.7 5734 61.1	.575 253 350								
210	104.7 5891 57.8	.556 249 340										
220												
230												
240												

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

R

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA+10
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL120		FL140		FL160		FL180		FL200	
130	84.4	.427	85.5	.436	86.8	.448	88.7	.467	90.3	.485	92.0	.502
	3927	236	3851	232	3810	229	3840	230	3847	230	3847	229
	70.7	278	73.1	282	75.3	287	77.4	297	79.5	306	81.7	314
140	86.0	.436	87.2	.447	89.2	.467	90.7	.483	92.3	.499	93.7	.512
	4166	241	4116	238	4151	239	4150	238	4150	237	4113	234
	68.1	284	70.2	289	72.1	299	74.0	307	76.0	315	78.0	321
150	87.5	.446	89.4	.464	90.9	.481	92.6	.497	94.0	.511	95.7	.526
	4416	246	4450	247	4454	246	4459	245	4428	242	4425	240
	65.6	290	67.3	300	69.1	308	70.9	316	72.8	322	74.4	329
160	89.5	.460	91.1	.477	92.7	.494	94.2	.508	95.8	.522	97.6	.539
	4741	254	4758	254	4767	253	4746	251	4729	248	4747	246
	63.1	299	64.8	308	66.4	317	68.1	323	69.7	330	71.1	338
170	91.2	.474	92.8	.490	94.4	.505	95.7	.518	97.5	.533	99.4	.551
	5065	262	5073	261	5064	259	5028	256	5042	254	5083	252
	60.8	308	62.4	316	63.9	324	65.5	329	66.8	337	67.9	345
180	92.7	.486	94.3	.501	95.7	.513	97.4	.529	99.2	.545	101.7	.573
	5378	269	5377	267	5332	264	5347	261	5373	259	5537	262
	58.7	316	60.1	323	61.7	329	62.9	336	64.0	344	64.8	359
190	94.2	.496	95.7	.510	97.2	.524	99.0	.540	101.3	.565	103.9	.590
	5686	275	5664	272	5654	269	5681	267	5816	269	5970	271
	56.7	323	58.1	329	59.4	336	60.5	344	61.3	357	62.0	370
200	95.6	.506	97.0	.518	98.7	.533	100.5	.550	103.1	.578	106.0	.604
	5989	280	5953	276	5973	274	6013	272	6202	275	6371	277
	54.9	329	56.2	334	57.2	342	58.1	350	58.8	365	59.4	378
210	96.8	.513	98.4	.528	100.2	.543	102.6	.571	105.5	.599	106.4	.583
	6267	284	6282	282	6313	280	6503	283	6713	286	6352	267
	53.2	333	54.2	341	55.2	348	55.8	363	56.3	378	57.5	365
220	98.1	.521	99.8	.536	101.8	.556	104.3	.582	106.5	.596	106.7	.535
	6584	289	6605	286	6699	286	6885	288	6886	284	6223	244
	51.5	339	52.4	346	53.2	356	53.7	370	54.6	376	53.8	335
230	99.4	.530	101.1	.545	103.6	.574	106.4	.600	106.7	.570		
	6913	294	6945	291	7177	296	7381	298	6827	271		
	49.8	345	50.7	352	51.2	368	51.7	382	52.7	360		
240	100.7	.538	102.8	.560	105.3	.585	106.6	.585	107.2	.520		
	7248	298	7389	300	7583	301	7364	290	6720	247		
	48.3	350	48.9	362	49.4	375	50.5	372	48.9	329		

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA
CG = 30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL210		FL220		FL230		FL240		FL250		FL260	
130	89.5	.501	90.3	.509	91.0	.515	91.9	.523	92.7	.530	93.7	.539
	3553	224	3544	223	3526	221	3528	220	3522	218	3530	217
	86.3	307	87.5	310	88.6	312	89.6	316	90.6	319	91.5	323
140	91.3	.513	92.1	.520	93.0	.528	93.9	.536	94.9	.544	96.3	.561
	3806	229	3799	228	3801	227	3804	225	3817	224	3889	227
	82.4	314	83.4	317	84.3	320	85.1	324	85.9	328	86.4	336
150	93.2	.525	94.0	.532	95.0	.540	95.9	.549	97.6	.569	98.9	.581
	4083	235	4078	233	4087	232	4103	231	4214	235	4262	235
	78.7	321	79.5	324	80.2	328	80.8	332	81.3	342	81.7	348
160	95.0	.536	95.9	.544	97.3	.560	98.7	.574	100.3	.591	101.7	.602
	4363	240	4377	239	4455	241	4525	242	4620	245	4654	244
	75.2	328	75.8	332	76.3	340	76.7	347	77.0	356	77.5	361
170	96.8	.548	98.4	.568	99.7	.579	101.5	.599	102.5	.601	104.3	.611
	4676	246	4800	250	4841	249	4975	253	4935	249	4987	248
	71.8	336	72.2	346	72.5	351	72.8	362	73.3	362	73.4	366
180	99.3	.573	100.6	.585	102.3	.601	103.4	.603	105.2	.612	104.5	.566
	5117	257	5179	257	5286	260	5242	255	5309	254	4871	229
	68.5	350	68.8	356	69.0	365	69.5	364	69.4	369	69.6	339
190	101.5	.589	103.0	.602	104.3	.608	106.1	.613	108.4	.621		
	5516	265	5580	265	5592	262	5625	259	5722	258		
	65.4	361	65.7	367	66.0	369	65.9	371	65.4	374		
200	103.6	.602	105.1	.611	106.7	.613	108.4	.611	108.9	.573		
	5889	271	5932	269	5937	265	5911	259	5587	237		
	62.6	369	62.8	372	62.7	372	62.5	369	61.7	345		
210	105.8	.613	107.4	.615	108.4	.600						
	6268	276	6271	271	6103	259						
	59.9	375	59.7	375	59.7	364						
220	107.7	.612	108.3	.588								
	6545	275	6281	259								
	57.2	374	57.1	359								
230	108.2	.577										
	6466	259										
	54.6	353										
240												

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

11.0--08F0A330--200 CF6--80E1A4 12200010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01 .990 .000 .000 0 FCOM-G0--03--06--30--005--015

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA+10
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL120		FL140		FL160		FL180		FL200	
130	82.7	.418	84.3	.432	85.2	.439	86.7	.453	88.7	.473	90.5	.492
	3702	231	3679	230	3589	225	3574	223	3613	224	3637	224
	73.4	272	75.8	279	78.4	281	80.6	288	82.7	299	84.8	308
140	84.8	.432	85.7	.439	87.1	.452	89.1	.472	90.7	.489	92.5	.506
	3978	239	3888	234	3856	231	3896	232	3915	232	3918	231
	70.6	281	73.0	284	75.1	289	77.0	300	78.9	309	80.9	317
150	86.1	.439	87.4	.450	89.4	.470	90.9	.486	92.7	.503	94.1	.515
	4191	243	4141	239	4188	241	4197	240	4207	239	4174	235
	68.1	286	70.1	290	71.9	301	73.7	309	75.5	318	77.4	323
160	87.6	.447	89.5	.467	91.1	.483	92.8	.500	94.3	.513	95.9	.527
	4422	247	4470	248	4481	248	4498	247	4470	243	4466	241
	65.7	291	67.4	301	69.1	309	70.7	318	72.4	324	73.9	330
170	89.5	.462	91.1	.479	92.8	.496	94.4	.510	95.9	.523	97.7	.538
	4740	255	4766	255	4786	254	4774	252	4761	249	4770	246
	63.3	300	64.9	309	66.4	318	68.0	324	69.4	330	70.7	337
180	91.2	.475	92.7	.491	94.4	.507	95.8	.519	97.5	.533	99.5	.550
	5053	263	5071	262	5076	260	5045	256	5051	253	5099	251
	61.1	309	62.5	317	64.0	325	65.4	330	66.6	336	67.5	344
190	92.6	.485	94.3	.502	95.7	.514	97.4	.528	99.2	.543	101.8	.571
	5349	269	5370	268	5335	264	5343	261	5371	258	5549	262
	59.0	316	60.3	324	61.7	329	62.9	336	63.9	343	64.5	358
200	94.1	.496	95.6	.510	97.1	.523	98.9	.537	101.2	.562	104.1	.590
	5657	275	5649	272	5631	269	5649	266	5796	268	5998	270
	57.0	323	58.3	329	59.5	335	60.5	342	61.2	355	61.6	370
210	95.5	.506	96.8	.517	98.5	.531	100.4	.547	103.1	.575	106.2	.602
	5954	280	5916	276	5927	273	5973	271	6187	274	6395	276
	55.2	329	56.4	334	57.4	340	58.2	348	58.7	363	59.0	377
220	96.6	.512	98.2	.526	99.9	.540	102.4	.567	105.4	.597	108.4	.613
	6222	284	6226	281	6252	278	6448	281	6701	285	6798	282
	53.5	333	54.5	339	55.4	346	55.9	361	56.2	377	56.5	384
230	97.8	.519	99.4	.532	101.3	.549	104.1	.578	107.2	.604	109.6	.601
	6506	288	6518	284	6582	282	6833	287	7045	288	6936	276
	51.9	337	52.7	344	53.4	352	53.8	368	54.1	381	54.3	377
240	99.1	.527	100.8	.541	103.3	.569	106.4	.599	109.3	.614	110.2	.560
	6820	292	6850	289	7086	293	7379	298	7470	294	6836	256
	50.2	343	51.0	349	51.4	365	51.7	381	51.9	388	51.3	351

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

11.0-08F0A330-200 CF6-80E1A4 12200010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01 .990 .000 .000 10 FCOM-G0-03-06-30-006-015

R

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA+10
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL210		FL220		FL230		FL240		FL250		FL260	
130	92.7 3830 82.8	.508 227 317	93.4 3816 83.9	.515 225 320	94.3 3822 84.8	.524 225 324	95.2 3814 85.8	.530 223 327	96.2 3828 86.6	.540 222 332	97.1 3832 87.5	.548 221 335
140	94.6 4117 78.9	.521 233 325	95.5 4120 79.8	.529 232 329	96.5 4136 80.6	.538 231 333	97.4 4138 81.3	.546 230 337	98.8 4220 81.9	.563 232 346	100.1 4262 82.5	.574 232 352
150	96.5 4423 75.2	.533 239 333	97.5 4440 75.9	.542 238 337	98.6 4471 76.6	.553 238 342	100.0 4562 77.0	.570 240 351	101.4 4611 77.5	.582 241 358	103.0 4698 78.0	.598 243 366
160	98.4 4748 71.8	.546 245 341	99.8 4847 72.2	.563 247 350	101.1 4896 72.7	.575 248 356	102.6 4979 73.1	.590 249 364	104.0 5014 73.6	.600 249 369	105.6 5051 73.9	.610 247 373
170	100.9 5198 68.4	.569 255 355	102.0 5222 68.8	.578 254 359	103.8 5358 69.1	.597 258 370	104.9 5338 69.6	.602 255 372	106.6 5394 69.8	.612 254 376	106.4 5060 70.4	.582 236 356
180	103.0 5596 65.2	.585 263 365	104.7 5706 65.5	.601 265 374	105.8 5679 66.0	.605 261 375	106.7 5574 66.6	.601 254 371	106.6 5224 66.1	.562 232 345		
190	105.4 6038 62.3	.603 271 376	106.5 5994 62.8	.605 267 376	106.6 5729 63.4	.586 253 363	106.6 5315 61.1	.527 221 325				
200	106.5 6177 60.1	.595 267 371	106.6 5885 60.2	.570 250 354								
210	106.6 6044 56.9	.551 247 344										
220												
230												
240												

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

R

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA+15
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL120		FL140		FL160		FL180		FL200	
130	85.2	.427	86.3	.436	87.6	.448	89.5	.467	91.2	.484	92.9	.501
	3969	236	3893	232	3853	229	3883	230	3894	230	3895	228
	70.5	280	72.9	284	75.1	289	77.2	300	79.3	309	81.4	317
140	86.8	.436	88.1	.447	90.0	.466	91.5	.482	93.2	.499	94.6	.512
	4213	241	4162	238	4192	239	4194	238	4197	237	4165	234
	67.9	286	70.0	291	71.9	301	73.8	309	75.7	318	77.7	324
150	88.3	.445	90.2	.463	91.7	.480	93.4	.496	94.9	.510	96.6	.525
	4465	246	4497	247	4501	246	4511	245	4480	242	4479	240
	65.4	292	67.1	302	68.9	310	70.7	319	72.5	325	74.2	332
160	90.3	.459	91.9	.477	93.6	.493	95.1	.508	96.7	.522	98.4	.537
	4792	254	4810	254	4824	253	4802	251	4789	248	4802	246
	62.9	301	64.5	310	66.1	319	67.9	326	69.4	332	70.8	340
170	92.0	.473	93.6	.489	95.2	.505	96.6	.517	98.4	.532	100.3	.549
	5114	261	5133	261	5126	259	5094	256	5103	253	5139	251
	60.6	310	62.1	319	63.7	326	65.2	332	66.5	339	67.6	347
180	93.6	.485	95.2	.500	96.6	.513	98.3	.528	100.1	.544	102.6	.571
	5441	268	5439	267	5400	263	5419	261	5440	259	5603	262
	58.5	318	59.9	326	61.4	331	62.6	339	63.7	347	64.5	361
190	95.1	.496	96.6	.509	98.1	.523	99.9	.539	102.2	.564	104.9	.590
	5757	274	5733	272	5727	269	5753	267	5890	269	6064	271
	56.5	325	57.9	332	59.1	338	60.2	346	61.0	359	61.6	374
200	96.5	.505	97.9	.518	99.6	.532	101.4	.548	104.1	.577	105.1	.569
	6065	280	6032	276	6047	274	6086	271	6289	275	6025	260
	54.6	331	55.9	337	56.9	344	57.9	352	58.5	368	59.7	360
210	97.7	.512	99.3	.527	101.1	.542	103.5	.570	105.3	.579	105.4	.532
	6345	284	6365	281	6393	279	6589	282	6532	276	5961	243
	52.9	336	54.0	343	54.9	351	55.5	366	56.5	369	56.5	337
220	99.0	.521	100.7	.536	102.7	.555	105.3	.581	105.6	.555		
	6669	289	6692	286	6792	286	6987	288	6493	264		
	51.2	342	52.1	349	52.9	359	53.4	373	54.4	354		
230	100.3	.529	102.0	.544	104.6	.573	105.8	.570	105.9	.517		
	7003	293	7038	291	7281	295	7049	283	6436	246		
	49.6	347	50.4	355	50.9	371	52.0	366	51.2	329		
240	101.6	.538	103.7	.559	105.2	.567	106.0	.545				
	7347	298	7485	299	7399	292	7017	270				
	48.0	353	48.7	364	49.5	366	49.9	350				

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA+10
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL210		FL220		FL230		FL240		FL250		FL260	
130	91.3	.500	92.1	.508	92.8	.513	93.7	.521	94.5	.528	95.5	.536
	3637	223	3628	222	3608	220	3610	219	3603	217	3610	216
	85.9	312	87.0	316	88.1	318	89.1	322	90.0	324	90.9	328
140	93.2	.512	94.0	.519	94.9	.527	95.7	.534	96.7	.542	98.0	.555
	3899	229	3897	227	3898	226	3893	224	3905	223	3959	224
	81.9	319	82.8	323	83.7	326	84.5	329	85.2	333	85.8	340
150	95.0	.524	95.9	.530	96.8	.539	97.9	.547	99.4	.566	100.8	.577
	4182	234	4178	232	4194	232	4210	230	4313	234	4361	234
	78.1	327	78.9	330	79.6	334	80.2	338	80.6	348	81.0	353
160	96.8	.534	97.8	.542	99.1	.556	100.5	.571	102.1	.587	103.7	.599
	4466	239	4484	238	4555	239	4637	241	4730	243	4782	243
	74.6	333	75.2	337	75.6	345	76.0	352	76.3	361	76.6	366
170	98.6	.546	100.2	.564	101.4	.574	103.2	.594	104.5	.599	106.3	.608
	4783	244	4901	248	4947	247	5083	251	5082	248	5129	247
	71.2	341	71.5	351	71.9	356	72.1	366	72.5	368	72.5	372
180	101.1	.568	102.3	.578	104.2	.598	105.5	.602	107.3	.611		
	5227	255	5275	254	5426	258	5410	255	5474	253		
	67.8	355	68.2	360	68.3	370	68.6	371	68.5	375		
190	103.3	.585	105.0	.600	106.4	.607	108.1	.611	110.4	.619		
	5642	263	5752	264	5774	262	5795	258	5887	257		
	64.7	365	64.9	373	65.1	376	65.0	377	64.6	380		
200	105.6	.602	107.2	.611	108.9	.612	110.4	.608	110.8	.567		
	6073	271	6130	269	6129	264	6080	257	5737	234		
	61.8	375	61.9	380	61.8	379	61.7	375	60.7	348		
210	107.9	.613	109.6	.615	110.4	.597						
	6472	276	6486	271	6271	257						
	59.1	382	58.9	382	58.9	370						
220	109.7	.609	110.3	.584								
	6731	274	6452	257								
	56.5	380	56.3	363								
230	110.2	.572										
	6641	257										
	53.8	357										
240												

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

11.0-08F0A330-200 CF6-80E1A4 12200010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01 .990 .000 .000 10 FCOM-G0-03-06-30-007-015

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA+15
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL120		FL140		FL160		FL180		FL200	
130	83.4	.417	85.1	.432	86.0	.439	87.6	.453	89.6	.473	91.3	.491
	3741	230	3718	230	3629	225	3621	223	3657	224	3677	224
	73.2	274	75.6	281	78.2	284	80.4	291	82.5	302	84.5	311
140	85.6	.432	86.5	.439	87.9	.451	89.9	.471	91.6	.489	93.4	.505
	4023	239	3930	234	3900	231	3937	232	3961	232	3966	230
	70.4	283	72.8	286	74.8	292	76.8	302	78.7	312	80.6	320
150	86.9	.439	88.2	.449	90.2	.469	91.8	.485	93.5	.502	95.0	.515
	4237	243	4186	239	4227	240	4239	239	4254	238	4228	235
	68.0	288	69.9	293	71.7	303	73.5	312	75.3	320	77.1	326
160	88.3	.447	90.3	.466	91.9	.482	93.6	.499	95.1	.512	96.8	.526
	4469	247	4514	248	4527	247	4549	246	4522	243	4520	240
	65.6	293	67.2	303	68.8	312	70.4	320	72.1	326	73.6	333
170	90.2	.461	92.0	.478	93.7	.495	95.2	.509	96.8	.522	98.6	.537
	4786	255	4817	255	4843	254	4830	252	4816	248	4825	245
	63.1	302	64.6	311	66.1	320	67.7	327	69.1	333	70.4	339
180	91.9	.473	93.6	.490	95.3	.506	96.7	.518	98.4	.531	100.4	.548
	5102	262	5130	261	5138	260	5108	256	5108	253	5159	251
	60.9	311	62.3	319	63.7	327	65.1	333	66.3	339	67.2	347
190	93.4	.485	95.1	.501	96.6	.513	98.3	.527	100.1	.542	102.7	.569
	5407	268	5432	267	5401	264	5411	261	5437	258	5610	261
	58.8	318	60.1	326	61.4	332	62.6	339	63.6	346	64.2	360
200	94.9	.496	96.5	.510	98.0	.522	99.8	.537	102.1	.560	105.1	.590
	5725	274	5717	272	5701	268	5723	265	5865	267	6088	270
	56.8	325	58.1	332	59.2	338	60.2	345	60.9	357	61.3	373
210	96.3	.505	97.7	.516	99.4	.530	101.3	.545	104.0	.574	107.2	.602
	6027	280	5990	276	5999	272	6048	270	6273	274	6490	276
	55.0	331	56.1	336	57.1	343	57.9	350	58.3	366	58.7	381
220	97.5	.512	99.1	.525	100.8	.539	103.3	.566	106.4	.597	107.9	.587
	6299	283	6306	280	6330	277	6530	280	6804	285	6544	269
	53.3	336	54.2	342	55.1	349	55.6	363	55.9	380	56.7	371
230	98.7	.518	100.3	.532	102.2	.548	105.1	.577	107.9	.599	108.4	.552
	6587	287	6601	284	6669	282	6927	286	7085	286	6490	253
	51.6	340	52.5	346	53.1	354	53.5	370	53.9	382	53.8	349
240	99.9	.526	101.7	.541	104.2	.568	107.4	.599	108.2	.578		
	6903	292	6943	289	7181	293	7491	298	7055	275		
	50.0	345	50.7	352	51.2	367	51.4	385	52.2	368		

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

11.0–08F0A330–200 CF6–80E1A4 12200010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01 .990 .000 .000 15 FCOM-G0–03–06–30–008–015

R

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA+15
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL210		FL220		FL230		FL240		FL250		FL260	
130	93.6 3877 82.5	.508 227 320	94.3 3862 83.6	.514 225 323	95.3 3868 84.5	.523 224 327	96.1 3862 85.5	.530 223 330	97.1 3874 86.3	.539 222 334	98.0 3880 87.1	.547 221 338
140	95.5 4172 78.6	.520 233 328	96.4 4175 79.4	.528 232 332	97.4 4186 80.2	.537 231 336	98.3 4186 81.0	.544 229 339	99.7 4266 81.6	.561 231 348	101.0 4310 82.1	.573 231 354
150	97.5 4482 74.9	.533 238 336	98.4 4498 75.6	.542 238 340	99.5 4532 76.2	.552 237 345	101.0 4625 76.7	.569 240 355	102.3 4664 77.1	.580 240 360	104.0 4772 77.5	.598 242 370
160	99.3 4808 71.4	.545 244 343	100.7 4907 71.9	.562 247 353	102.0 4953 72.3	.573 247 358	103.6 5052 72.7	.589 249 367	105.0 5096 73.1	.600 249 373	105.5 4940 74.0	.592 240 366
170	101.7 5255 68.0	.567 254 357	102.9 5285 68.4	.576 253 362	104.8 5443 68.6	.597 258 374	105.6 5358 69.4	.597 252 372	105.8 5135 70.0	.580 240 360	106.0 4839 68.8	.539 217 333
180	104.0 5675 64.8	.584 262 368	105.3 5722 65.3	.596 262 374	105.6 5511 66.2	.583 251 365	105.8 5275 66.1	.559 236 349				
190	105.2 5875 62.6	.583 262 368	105.5 5662 63.0	.568 250 356	105.9 5411 62.0	.536 230 335						
200	105.5 5810 59.6	.549 246 346										
210												
220												
230												
240												

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

R

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA+20
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL120		FL140		FL160		FL180		FL200	
130	85.9	.426	87.1	.435	88.4	.447	90.4	.466	92.0	.484	93.8	.501
	4010	235	3934	232	3896	229	3926	230	3940	229	3941	228
	70.3	282	72.7	286	74.9	292	76.9	302	79.0	311	81.1	320
140	87.6	.435	88.8	.446	90.7	.465	92.3	.481	94.1	.498	95.5	.512
	4255	241	4203	237	4232	238	4240	237	4250	236	4221	233
	67.7	288	69.8	293	71.6	303	73.5	312	75.4	321	77.4	327
150	89.1	.444	91.0	.462	92.5	.479	94.3	.496	95.8	.509	97.5	.525
	4509	246	4541	246	4548	245	4561	245	4533	242	4540	240
	65.2	294	66.9	304	68.7	312	70.4	321	72.2	327	73.8	335
160	91.1	.459	92.7	.476	94.4	.493	96.0	.507	97.6	.521	99.4	.537
	4840	254	4863	253	4880	253	4860	250	4850	248	4865	245
	62.7	303	64.3	313	65.9	322	67.6	328	69.1	335	70.5	343
170	92.8	.472	94.4	.489	96.1	.504	97.5	.517	99.3	.532	101.2	.548
	5171	261	5193	261	5190	259	5159	255	5169	253	5202	251
	60.4	312	61.9	321	63.4	329	64.9	335	66.2	342	67.3	350
180	94.4	.484	96.0	.500	97.5	.512	99.2	.528	101.0	.543	103.5	.570
	5504	268	5505	266	5471	263	5491	261	5509	258	5671	261
	58.2	320	59.6	328	61.1	334	62.3	342	63.4	349	64.2	364
190	95.9	.495	97.4	.509	99.0	.523	100.8	.538	103.1	.562	104.1	.556
	5827	274	5802	271	5804	269	5828	266	5962	268	5738	254
	56.2	328	57.6	334	58.8	341	59.9	349	60.7	362	61.8	355
200	97.4	.505	98.8	.517	100.5	.532	102.3	.548	104.5	.568	104.3	.520
	6142	280	6109	276	6124	273	6172	271	6257	271	5663	237
	54.4	334	55.6	340	56.6	347	57.5	355	58.4	365	58.7	332
210	98.6	.512	100.2	.527	102.0	.542	104.5	.570	104.6	.543		
	6427	283	6450	281	6475	279	6683	282	6201	258		
	52.7	339	53.7	346	54.6	353	55.2	369	56.3	349		
220	99.9	.520	101.6	.535	103.6	.555	105.0	.559	104.8	.502		
	6758	288	6785	286	6883	285	6765	277	6121	238		
	50.9	344	51.9	352	52.6	362	53.6	362	52.7	323		
230	101.2	.529	103.0	.545	104.6	.557	105.2	.534				
	7093	293	7146	291	7127	287	6712	264				
	49.3	350	50.1	358	51.0	364	51.5	346				
240	102.5	.538	104.2	.552	104.7	.536						
	7449	298	7477	295	7074	275						
	47.8	356	48.5	363	49.4	350						

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA+15
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL210		FL220		FL230		FL240		FL250		FL260	
130	92.2	.500	93.0	.507	93.7	.512	94.6	.520	95.5	.527	96.4	.535
	3678	223	3669	222	3649	220	3651	219	3645	217	3652	216
	85.6	315	86.7	318	87.8	320	88.8	324	89.7	327	90.5	331
140	94.1	.511	94.9	.518	95.8	.525	96.6	.532	97.6	.540	98.9	.553
	3947	228	3943	227	3941	226	3939	224	3951	223	3998	223
	81.6	322	82.5	325	83.4	329	84.2	332	84.9	335	85.5	342
150	95.9	.523	96.8	.530	97.8	.538	98.8	.546	100.3	.564	101.6	.574
	4237	234	4231	232	4243	231	4261	230	4358	233	4398	232
	77.8	330	78.6	332	79.3	336	79.8	340	80.3	350	80.7	355
160	97.7	.533	98.7	.542	100.0	.555	101.4	.569	103.0	.585	104.7	.598
	4525	239	4543	238	4612	239	4689	240	4784	242	4854	242
	74.3	336	74.8	340	75.3	347	75.6	355	75.9	363	76.1	370
170	99.5	.544	101.1	.562	102.4	.573	104.2	.593	105.6	.599	105.6	.579
	4840	244	4959	247	5007	247	5159	251	5165	248	4917	234
	70.9	343	71.2	353	71.5	358	71.7	370	72.0	372	72.8	358
180	101.9	.565	103.2	.576	105.2	.598	106.5	.602	108.3	.610		
	5278	254	5338	254	5510	258	5499	255	5557	253		
	67.5	356	67.8	362	67.9	374	68.2	375	68.1	378		
190	104.2	.583	106.0	.600	107.5	.607	108.8	.606	109.4	.583		
	5712	262	5837	264	5863	262	5827	256	5589	241		
	64.4	368	64.5	376	64.7	379	64.8	377	64.7	362		
200	106.6	.601	108.2	.610	108.8	.594	109.4	.565				
	6163	270	6215	269	5999	256	5749	238				
	61.5	379	61.6	383	61.9	372	61.3	352				
210	108.1	.599	108.7	.581	109.4	.544						
	6384	269	6164	256	5902	234						
	59.1	377	59.2	365	57.6	340						
220	108.5	.567										
	6328	255										
	56.5	358										
230												
240												

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

11.0-08F0A330-200 CF6-80E1A4 12200010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01 .990 .000 .000 15 FCOM-G0-03-06-30-009-015

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA+20
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL120		FL140		FL160		FL180		FL200	
130	84.2	.417	85.9	.431	86.9	.439	88.5	.453	90.4	.472	92.2	.490
	3779	230	3759	229	3672	225	3665	223	3692	224	3717	223
	73.0	276	75.4	283	77.9	286	80.1	294	82.2	304	84.3	313
140	86.3	.431	87.3	.438	88.7	.451	90.7	.470	92.5	.488	94.2	.505
	4065	238	3970	233	3942	231	3980	232	4008	232	4013	230
	70.2	286	72.6	288	74.6	294	76.5	305	78.4	314	80.3	322
150	87.7	.438	89.0	.448	90.9	.467	92.6	.484	94.4	.502	95.9	.515
	4279	242	4225	239	4266	239	4286	239	4307	238	4282	235
	67.8	290	69.7	295	71.5	305	73.2	314	75.0	323	76.7	329
160	89.1	.446	91.1	.464	92.7	.481	94.5	.498	96.0	.511	97.7	.526
	4511	246	4557	247	4573	247	4600	246	4575	243	4580	240
	65.4	295	67.0	305	68.6	314	70.2	323	71.9	329	73.3	336
170	91.0	.460	92.7	.477	94.5	.495	96.1	.508	97.7	.522	99.5	.536
	4834	254	4867	254	4899	254	4887	251	4875	248	4888	245
	62.9	304	64.4	314	65.9	323	67.4	329	68.8	336	70.0	342
180	92.7	.472	94.4	.490	96.1	.505	97.6	.517	99.3	.530	101.3	.547
	5155	261	5190	261	5199	259	5172	256	5169	252	5222	250
	60.6	313	62.0	322	63.4	330	64.8	335	66.0	341	66.9	349
190	94.2	.484	96.0	.500	97.4	.513	99.1	.527	101.0	.541	103.6	.567
	5465	268	5498	267	5470	263	5477	260	5503	257	5676	260
	58.5	320	59.8	329	61.2	335	62.3	341	63.2	348	63.8	362
200	95.8	.495	97.3	.509	98.9	.522	100.7	.536	103.0	.559	106.1	.589
	5792	274	5784	271	5775	268	5797	265	5933	266	6174	270
	56.5	328	57.8	334	58.9	340	59.9	347	60.6	359	60.9	376
210	97.2	.505	98.6	.516	100.3	.529	102.2	.545	105.0	.573	106.3	.567
	6102	279	6065	275	6076	272	6129	270	6358	273	6138	260
	54.7	334	55.9	339	56.8	345	57.6	353	58.0	369	59.0	362
220	98.4	.511	100.0	.524	101.7	.538	104.3	.565	106.5	.581	106.5	.532
	6379	283	6383	280	6413	277	6623	280	6676	277	6070	243
	53.0	338	54.0	345	54.8	351	55.3	366	55.9	373	56.0	340
230	99.5	.518	101.2	.531	103.2	.547	106.0	.576	106.7	.557		
	6674	287	6687	284	6762	282	7024	286	6636	265		
	51.3	343	52.2	349	52.8	357	53.2	374	54.0	359		
240	100.8	.525	102.6	.541	105.2	.567	107.0	.574	107.0	.523		
	6987	291	7044	289	7278	292	7218	285	6575	249		
	49.7	348	50.4	355	50.9	370	51.6	372	51.2	337		

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

11.0-08F0A330-200 CF6-80E1A4 12200010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01 .990 .000 .000 20 FCOM-G0-03-06-30-010-015

R

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA+20
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL210		FL220		FL230		FL240		FL250		FL260	
130	94.5 3922 82.2	.507 226 322	95.2 3909 83.3	.513 225 325	96.2 3916 84.2	.522 224 330	97.0 3910 85.1	.529 222 333	98.0 3919 85.9	.538 221 337	99.0 3930 86.7	.546 220 341
140	96.4 4226 78.3	.520 232 331	97.3 4228 79.1	.528 231 334	98.3 4237 79.9	.536 230 338	99.2 4237 80.6	.543 229 342	100.6 4313 81.2	.559 231 350	101.8 4353 81.7	.570 230 356
150	98.4 4543 74.6	.532 238 339	99.3 4557 75.2	.541 237 343	100.4 4578 75.8	.550 236 347	101.8 4674 76.3	.567 239 357	103.2 4723 76.7	.578 239 362	104.3 4728 77.5	.587 238 366
160	100.3 4872 71.1	.544 244 346	101.7 4969 71.5	.561 246 355	102.9 5019 71.9	.572 246 361	104.4 5087 72.4	.585 247 368	104.5 4893 73.5	.574 237 360	104.7 4687 73.5	.552 223 345
170	102.6 5320 67.7	.566 254 360	103.9 5366 68.0	.576 253 365	104.4 5245 68.9	.573 247 362	104.6 5046 69.5	.557 235 350	104.9 4832 68.7	.530 218 332		
180	104.2 5596 64.8	.570 256 363	104.4 5394 65.5	.557 245 353	104.6 5190 65.4	.538 231 340						
190	104.4 5535 62.1	.540 242 344	104.7 5322 61.3	.515 225 326								
200												
210												
220												
230												
240												

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

IN CRUISE QUICK CHECK AT LONG RANGE SPEED

The following in cruise quick check tables allow the flight crew to determine the fuel consumption and the time required to cover a given air distance from any moment in cruise to landing with one engine inoperative.

These tables are established for :

- Cruise Mach number : long range
- Descent profile : M.82/300kt/250kt
- R Approach and landing : 240 kg or 530 lb – 6 minute IMC
- ISA
- CG = 30 %
- Pack flow HI
- Anti ice OFF

Note : 1. In the tables, a "" means that a step climb of 4000 feet has been made to reach the corresponding flight level.*

2. The flight level shown on the top of each column is the final flight level.

3. For each degree Celsius above ISA apply a fuel correction of
0.015 (kg/°C/NM) × △ISA (°C) × Air Distance (NM)
or 0.033 (lb/°C/NM) × △ISA (°C) × Air Distance (NM)

CORRECTION FOR DEVIATION FROM REFERENCE WEIGHT

R The in cruise quick check tables are based on a reference initial weight that may vary from page to page.

The fuel consumption must be corrected when the actual weight is different from the reference initial weight.

If it is lower (or greater) than the reference weight, subtract (or add) the value given in the correction part of the table per 1000 kg or 1000 lb below (or above) the reference weight

R (see example 3.06.30).

LONG RANGE CRUISE - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA+20
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL210		FL220		FL230		FL240		FL250		FL260	
130	93.1 3719 85.3	.499 223 317	93.9 3711 86.4	.506 221 321	94.6 3691 87.5	.511 219 323	95.5 3695 88.4	.519 218 327	96.4 3692 89.3	.526 217 330	97.4 3701 90.2	.534 215 334
140	94.9 3994 81.3	.510 228 325	95.8 3989 82.2	.517 227 328	96.6 3987 83.1	.524 225 331	97.5 3983 83.9	.531 223 334	98.5 3996 84.5	.539 222 338	99.8 4043 85.1	.551 222 344
150	96.8 4289 77.5	.523 234 332	97.7 4283 78.2	.529 232 335	98.7 4295 78.9	.537 230 339	99.7 4313 79.5	.545 229 343	101.2 4403 79.9	.561 232 352	102.5 4438 80.3	.571 231 356
160	98.6 4584 73.9	.533 238 339	99.6 4602 74.5	.541 237 343	100.9 4662 74.9	.553 238 349	102.3 4738 75.2	.567 239 357	103.9 4836 75.5	.583 241 365	104.5 4719 76.4	.578 234 361
170	100.5 4906 70.5	.544 244 346	102.0 5020 70.8	.561 246 355	103.3 5069 71.1	.571 246 361	105.3 5241 71.2	.593 251 373	106.6 5245 71.6	.599 248 375	104.8 4660 71.9	.537 217 335
180	102.8 5344 67.2	.564 253 359	104.2 5416 67.4	.576 253 365	106.2 5593 67.4	.597 258 377	106.7 5434 68.2	.589 249 371	107.1 5224 68.4	.570 236 357		
190	105.2 5795 64.0	.583 262 371	106.4 5816 64.4	.591 260 375	106.8 5605 65.0	.577 249 364	107.2 5390 64.6	.554 233 348				
200	106.4 5985 61.7	.581 261 369	106.7 5769 61.9	.563 247 357	107.3 5546 61.0	.536 230 338						
210	106.7 5925 58.9	.548 246 349										
220												
230												
240												

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

11.0-08F0A330-200 CF6-80E1A4 12200010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01 .990 .000 .000 20 FCOM-G0-03-06-30-011-015

IN CRUISE QUICK CHECK AT LONG RANGE SPEED

The following in cruise quick check tables allow the flight crew to determine the fuel consumption and the time required to cover a given air distance from any moment in cruise to landing with one engine inoperative.

These tables are established for :

- Cruise Mach number : long range
- Descent profile : M.82/300kt/250kt
- R Approach and landing : 240 kg or 530 lb – 6 minute IMC
- ISA
- CG = 30 %
- Pack flow HI
- Anti ice OFF

Note : 1. In the tables, a "" means that a step climb of 4000 feet has been made to reach the corresponding flight level.*

2. The flight level shown on the top of each column is the final flight level.

3. For each degree Celsius above ISA apply a fuel correction of
0.015 (kg/°C/NM) × △ISA (°C) × Air Distance (NM)
or 0.033 (lb/°C/NM) × △ISA (°C) × Air Distance (NM)

CORRECTION FOR DEVIATION FROM REFERENCE WEIGHT

R The in cruise quick check tables are based on a reference initial weight that may vary from page to page.

The fuel consumption must be corrected when the actual weight is different from the reference initial weight.

If it is lower (or greater) than the reference weight, subtract (or add) the value given in the correction part of the table per 1000 kg or 1000 lb below (or above) the reference weight

R (see example 3.06.30).

R

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING - ONE ENGINE FAILURE
CRUISE : LONG RANGE - DESCENT : M.82/300/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
PACK FLOW HI
ANTI-ICING OFF

ISA
CG = 30.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 100	150	200	220	240	260	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL100 FL150	FL200 FL220	FL240 FL260
200	3167 0.45	2700 0.44	2398 0.42	2294 0.41	2190 0.40	2093 0.41	8	6	5
250	3974 0.56	3459 0.54	3121 0.51	3007 0.50	2894 0.49	2790 0.49	11	10	9
300	4779 1.06	4216 1.03	3841 1.00	3718 0.58	3596 0.57	3483 0.58	14	13	12
350	5582 1.16	4971 1.13	4559 1.09	4426 1.07	4296 1.05	4173 1.06	16	16	15
400	6382 1.26	5724 1.22	5275 1.18	5132 1.15	4994 1.13	4861 1.14	19	20	19
450	7180 1.36	6474 1.32	5989 1.27	5835 1.24	5690 1.22	5545 1.22	22	23	22
500	7976 1.46	7223 1.41	6700 1.36	6536 1.33	6383 1.30	6227 1.31	25	26	26
550	8769 1.56	7969 1.51	7409 1.45	7235 1.41	7075 1.38	6910 1.39	28	29	29
600	9560 2.06	8713 2.00	8116 1.54	7932 1.50	7764 1.46	7590 1.47	31	33	32
650	10349 2.17	9455 2.10	8820 2.03	8626 1.59	8452 1.55	8269 1.55	33	36	35
700	11135 2.27	10195 2.19	9523 2.12	9318 2.07	9137 2.03	8945 2.03	36	39	39
750	11919 2.37	10933 2.29	10223 2.21	10008 2.16	9820 2.11	9619 2.12	39	42	42
800	12701 2.47	11669 2.38	10921 2.30	10696 2.25	10502 2.20	10292 2.20	42	45	45
850	13481 2.58	12403 2.48	11617 2.39	11382 2.33	11181 2.28	10962 2.28	44	48	48
900	14258 3.08	13135 2.58	12311 2.49	12065 2.42	11858 2.36	11630 2.36	47	51	51
950	15034 3.18	13865 3.07	13003 2.58	12747 2.51	12533 2.45	12297 2.44	50	54	55
1000	15807 3.29	14593 3.17	13693 3.07	13426 3.00	13207 2.53	12961 2.52	53	57	58
1050	16578 3.39	15319 3.26	14381 3.16	14103 3.08	13878 3.01	13624 3.00	55	60	61
1100	17346 3.50	16043 3.36	15067 3.25	14778 3.17	14548 3.10	14284 3.08	58	63	64
1150	18112 4.00	16765 3.46	15750 3.34	15451 3.26	15216 3.18	14943 3.16	61	66	67
1200	18876 4.11	17485 3.56	16431 3.43	16122 3.35	15882 3.26	15600 3.24	64	69	70
1250	19638 4.21	18203 4.05	17109 3.53	16789 3.44	16541 3.35	16253 3.32	66	72	73
1300	20397 4.32	18919 4.15	17784 4.02	17454 3.53	17197 3.43	16899 3.40	69	75	76
1350	21155 4.42	19633 4.25	18458 4.11	18117 4.02	17851 3.52	17543 3.49	72	78	79
1400	21910 4.53	20346 4.35	19129 4.21	18778 4.11	18502 4.01	18184 3.57	75	81	82

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING - ONE ENGINE FAILURE
CRUISE : LONG RANGE - DESCENT : M.82/300/250KT
IMC PROCEDURE : 240 KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
PACK FLOW HI
ANTI ICING OFF

ISA
CG = 30.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 100	150	200	220	240	260	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL100 FL150	FL200 FL220	FL240 FL260
200	3051 0.46	2603 0.45	2305 0.43	2206 0.42	2111 0.41	2018 0.40	8	6	5
250	3827 0.57	3336 0.54	3001 0.52	2895 0.50	2793 0.49	2695 0.48	10	9	9
300	4602 1.07	4067 1.04	3696 1.01	3580 0.59	3473 0.57	3369 0.56	13	12	12
350	5374 1.17	4797 1.13	4388 1.10	4264 1.08	4150 1.06	4039 1.05	16	15	15
400	6144 1.28	5524 1.23	5079 1.19	4945 1.17	4824 1.14	4707 1.13	19	18	18
450	6912 1.38	6249 1.32	5767 1.28	5623 1.26	5496 1.23	5373 1.21	22	21	21
500	7678 1.48	6972 1.42	6452 1.38	6299 1.34	6165 1.31	6035 1.30	24	25	25
550	8442 1.59	7694 1.52	7136 1.47	6973 1.43	6832 1.40	6696 1.38	27	28	28
600	9203 2.09	8413 2.01	7818 1.56	7645 1.52	7497 1.48	7353 1.46	30	31	31
650	9963 2.20	9131 2.11	8498 2.05	8314 2.02	8159 1.57	8009 1.55	33	34	34
700	10720 2.30	9846 2.21	9176 2.14	8981 2.11	8819 2.06	8661 2.03	35	37	38
750	11475 2.41	10560 2.30	9851 2.24	9646 2.20	9477 2.14	9312 2.11	38	40	41
800	12228 2.51	11271 2.40	10525 2.33	10308 2.29	10133 2.23	9960 2.20	41	43	44
850	12978 3.02	11981 2.50	11197 2.42	10969 2.38	10786 2.32	10605 2.28	43	46	47
900	13727 3.12	12688 3.00	11866 2.52	11627 2.47	11437 2.41	11248 2.37	46	49	50
950	14473 3.23	13394 3.09	12534 3.01	12283 2.57	12086 2.49	11889 2.45	49	51	54
1000	15217 3.34	14097 3.19	13200 3.10	12938 3.06	12734 2.58	12531 2.53	51	54	57
1050	15959 3.44	14799 3.29	13865 3.20	13591 3.15	13380 3.07	13171 3.02	54	57	60
1100	16699 3.55	15499 3.39	14527 3.29	14241 3.24	14024 3.16	13808 3.10	57	60	63
1150	17437 4.06	16196 3.49	15187 3.38	14890 3.33	14665 3.24	14444 3.18	59	63	67
1200	18173 4.17	16892 3.59	15846 3.47	15537 3.42	15305 3.33	15078 3.27	62	66	70
1250	18908 4.27	17587 4.08	16503 3.57	16181 3.51	15943 3.42	15710 3.35	64	69	73
1300	19640 4.38	18279 4.18	17157 4.06	16824 4.01	16579 3.51	16340 3.44	67	72	76
1350	20370 4.49	18969 4.28	17811 4.16	17465 4.10	17213 3.59	16968 3.52	69	75	80
1400	21098 5.00	19658 4.38	18462 4.25	18104 4.19	17845 4.08	17595 4.00	72	77	83

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

FLIP23D A330–200 CF6–80E1A4 3610 03001.001011 0250300 .5831 .00100 240 0300350170 0 230180100168 18590 FCOM-GO–03–06–30–013–015

PROCEDURE

In order to maintain the highest possible level, the drift down procedure must be adopted. This requires maximum continuous thrust on the remaining engine at green dot speed.

- If, having reached drift down ceiling altitude, an obstacle problem remains the drift down procedure must be maintained so as to fly an ascending cruise profile.
- If, after drift down, no obstacle problem remains, the speed should be allowed to increase to long range speed and maintained. The subsequent cruise should be made using either the long range speed by adjusting it as a function of aircraft weight or by maintaining the initial cruise speed.

Note : Due to the fact that the long range speed is higher than the green dot speed, the cruise will be made at an altitude lower than the drift down ceiling.

R

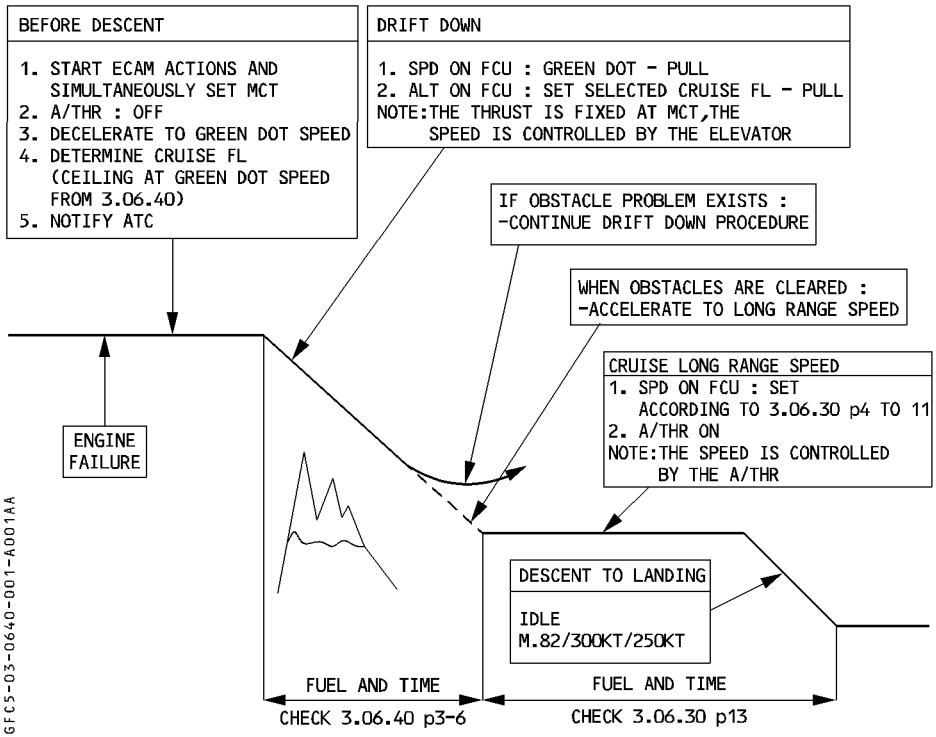

EXAMPLE

Given :

GW at engine failure = 190 000 kg
FL at engine failure = 390
Temperature = ISA
Distance to destination airport = 1500 NM
No wind

Find :

Level off (drift down ceiling) : 24 800 ft
(see 3.06.40 p3)
Distance : 425 NM
Fuel : 5700 kg
Time : 77 min
LRC ceiling : (see 3.06.20 p1) FL220
Cruise at long range speed (FL220) to landing
(weight = 190 000 – 5700 = 184 300 kg : Distance = 1500 – 425 = 1075 NM)

R Determine on (3.06.30 p13) time and fuel consumption at ISA conditions for a reference weight of 170 000 kg. Interpolate the remaining air distance of 1075 NM at FL220.
Fuel : 14 443 kg
Time : 3 h 13 min
Correction due to actual in-cruise weight
△Fuel = + 62 kg per 1000 kg above reference weight
△Fuel = + 62 kg × (184.3 – 170) ∼ 887 kg

Result :

Total Fuel = 5700 + 14 443 + 887 = 21 030 kg
Time = 3 h 13 min + 77 min = 4 h 30 min

PROCEDURE

In order to maintain the highest possible level, the drift down procedure must be adopted. This requires maximum continuous thrust on the remaining engine at green dot speed.

- If, having reached drift down ceiling altitude, an obstacle problem remains the drift down procedure must be maintained so as to fly an ascending cruise profile.
- If, after drift down, no obstacle problem remains, the speed should be allowed to increase to long range speed and maintained. The subsequent cruise should be made using either the long range speed by adjusting it as a function of aircraft weight or by maintaining the initial cruise speed.

Note : Due to the fact that the long range speed is higher than the green dot speed, the cruise will be made at an altitude lower than the drift down ceiling.

R

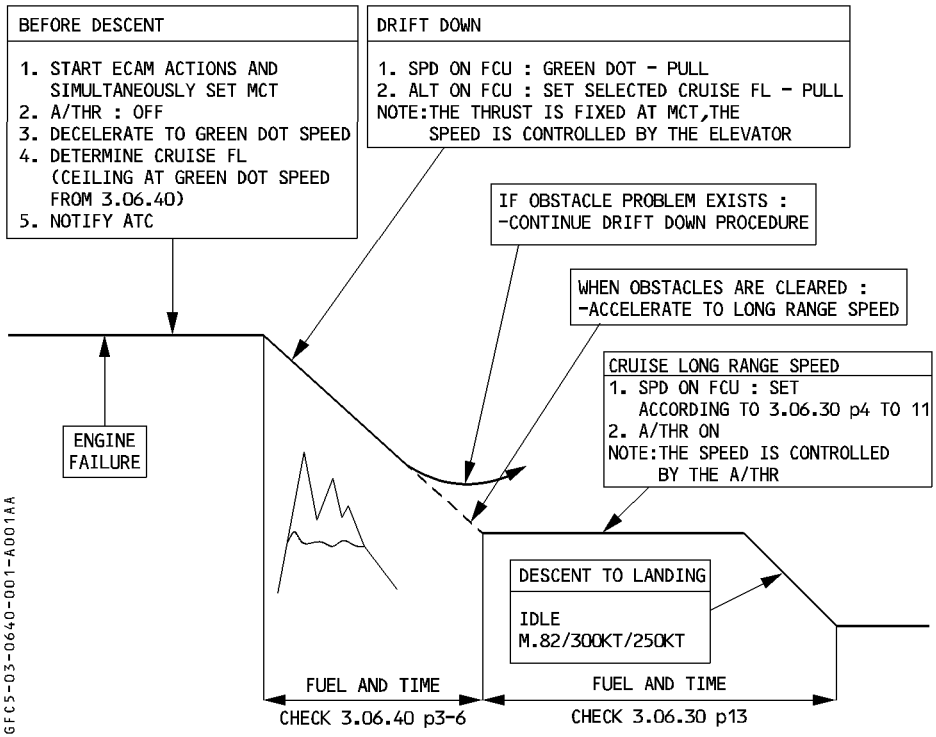

EXAMPLE

Given :

GW at engine failure = 190 000 kg
FL at engine failure = 390
Temperature = ISA
Distance to destination airport = 1500 NM
No wind

Find :

Level off (drift down ceiling) : 25 700 ft
(see 3.06.40 p3)
Distance : 422 NM
Fuel : 5500 kg
Time : 75 min
LRC ceiling : (see 3.06.20 p1) FL240
Cruise at long range speed (FL240) to landing
(weight = 190 000 – 5500 = 184 500 kg : Distance = 1500 – 422 = 1078 NM)
Determine on (3.06.30 p13) time and fuel consumption at ISA conditions for a reference weight of 170 000 kg. Interpolate the remaining air distance of 1078 NM at FL240.
Fuel : 13 740 kg
Time : 3 h 12 min
Correction due to actual in-cruise weight
$\triangle$Fuel = + 62 kg per 1000 kg above reference weight
$\triangle$Fuel = + 62 kg $\times$ (184.5 – 170) $\sim$ 899 kg

Result :

Total Fuel = 5500 + 13 740 + 899 = 20 139 kg
Time = 3 h 12 min + 75 min = 4 h 27 min

R

GROSS FLIGHT PATH DESCENT AT GREEN DOT SPEED

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

DISTANCE (NM) **TIME (MIN)**
INITIAL SPEED(KT) **FUEL(1000KG)**
LEVEL OFF (FT)

INIT. GW (1000KG)	INITIAL FLIGHT LEVEL 250	270	290	310	330	350	370	390	410
130					150 29 188 1.6 32500	250 47 190 2.6 32600	298 56 192 3.0 32700	334 62 194 3.3 32700	361 66 196 3.5 32800
140				74 14 192 .9 30800	234 44 194 2.7 31100	288 54 196 3.2 31200	324 60 198 3.5 31200	353 65 200 3.7 31300	379 69 202 3.9 31300
150				207 40 198 2.6 29600	270 51 200 3.2 29800	312 59 202 3.6 29800	342 64 204 3.9 29800	368 68 206 4.1 29900	391 71 208 4.2 29900
160			171 33 202 2.3 28200	256 49 204 3.3 28400	302 57 206 3.8 28400	333 62 208 4.1 28500	360 67 210 4.3 28500	384 70 212 4.5 28500	404 73 214 4.6 28500
170		102 20 206 1.5 26800	235 45 208 3.3 27000	289 55 210 3.9 27100	324 61 212 4.3 27100	353 66 214 4.6 27200	376 69 216 4.7 27200	398 73 218 4.9 27200	417 75 220 5.0 27200
180		206 39 212 3.1 25700	273 52 214 4.0 25800	313 59 216 4.4 25900	344 64 218 4.7 25900	369 68 220 5.0 25900	390 71 222 5.2 26000	411 74 224 5.3 26000	428 77 226 5.4 26000
190	163 31 216 2.6 24400	257 49 218 4.0 24500	303 57 220 4.6 24600	337 63 222 5.0 24700	364 67 224 5.2 24700	387 71 226 5.4 24700	407 74 228 5.6 24800	425 77 230 5.7 24800	443 79 232 5.9 24800
200	232 44 222 3.8 23200	291 55 224 4.7 23300	331 62 226 5.2 23400	360 67 228 5.5 23400	384 71 230 5.8 23500	405 74 232 5.9 23500	424 77 234 6.1 23500	442 79 236 6.2 23500	
210	274 52 228 4.7 22100	318 60 230 5.3 22100	351 65 232 5.7 22200	377 69 234 6.0 22200	400 73 236 6.2 22300	420 76 238 6.4 22300	438 79 240 6.5 22300	454 81 242 6.6 22300	
220	303 57 234 5.3 20900	339 63 236 5.8 21000	369 68 238 6.2 21000	391 72 240 6.4 21100	413 75 242 6.6 21100	434 78 244 6.8 21100	450 80 246 6.9 21100		

CORRECTIONS	DISTANCE	TIME	FUEL	LEVEL OFF
ENGINE ANTI ICE ON	+ 4 %	+ 2 %	+ 4 %	– 400 ft
TOTAL ANTI ICE ON	+ 10 %	+ 10 %	+ 10 %	– 1400 ft

10E -08F0A330-301 CF6-80E1A2 23500010C6KG300 0 018590 0 0 3 .0 .0 .00 0 02 0 02 1.000 1.000 .000 0 FCOM-G0-03-06-40-003-010

R

GROSS FLIGHT PATH DESCENT AT GREEN DOT SPEED

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA+10
CG=30.0%

DISTANCE (NM) **TIME (MIN)**
INITIAL SPEED(KT) **FUEL(1000KG)**
LEVEL OFF (FT)

INIT. GW (1000KG)	INITIAL FLIGHT LEVEL 250	270	290	310	330	350	370	390	410
130					157 29 188 1.7 32400	259 48 190 2.7 32600	310 57 192 3.2 32700	344 62 194 3.4 32700	373 67 196 3.7 32700
140				93 18 192 1.1 30800	240 45 194 2.8 31100	297 55 196 3.3 31100	335 61 198 3.7 31200	364 66 200 3.9 31200	390 70 202 4.1 31300
150				215 40 198 2.7 29600	280 52 200 3.4 29700	321 59 202 3.8 29800	354 64 204 4.1 29800	379 68 206 4.3 29800	403 72 208 4.4 29800
160			180 34 202 2.4 28200	265 49 204 3.5 28300	311 57 206 4.0 28400	343 63 208 4.3 28400	372 67 210 4.5 28500	396 71 212 4.7 28500	418 74 214 4.8 28500
170		97 18 206 1.4 26700	243 46 208 3.4 27000	297 55 210 4.1 27100	332 61 212 4.4 27100	363 66 214 4.7 27100	386 70 216 4.9 27200	411 73 218 5.1 27200	430 76 220 5.2 27200
180		212 40 212 3.2 25700	280 52 214 4.1 25800	322 59 216 4.6 25800	354 65 218 4.9 25900	380 69 220 5.2 25900	401 72 222 5.3 25900	422 75 224 5.5 26000	441 77 226 5.6 26000
190	169 32 216 2.7 24300	263 49 218 4.1 24500	313 58 220 4.8 24600	347 64 222 5.2 24600	375 68 224 5.5 24700	399 72 226 5.7 24700	419 75 228 5.8 24700	439 77 230 6.0 24700	457 80 232 6.1 24800
200	239 45 222 4.0 23200	299 55 224 4.9 23300	340 62 226 5.4 23400	370 67 228 5.7 23400	395 71 230 6.0 23400	418 75 232 6.2 23500	436 77 234 6.3 23500	456 80 236 6.5 23500	
210	282 52 228 4.9 22000	329 60 230 5.5 22100	362 66 232 5.9 22200	389 70 234 6.2 22200	412 74 236 6.5 22200	433 77 238 6.7 22200	450 79 240 6.8 22300	470 82 242 6.9 22300	
220	313 58 234 5.5 20900	351 64 236 6.1 20900	380 69 238 6.4 21000	406 73 240 6.7 21000	425 76 242 6.9 21000	447 79 244 7.1 21100	465 81 246 7.3 21100		

CORRECTIONS	DISTANCE	TIME	FUEL	LEVEL OFF
ENGINE ANTI ICE ON	+ 4 %	+ 2 %	+ 4 %	– 400 ft
TOTAL ANTI ICE ON	+ 10 %	+ 10 %	+ 10 %	– 1400 ft

10E -08F0A330--301 CF6--80E1A2 23500010C6KG300 0 018590 0 0 3 .0 .0 .00 0 02 0 02 1.000 1.000 .000 10 FCOM-G0--03--06--40--004--010

GROSS FLIGHT PATH DESCENT AT GREEN DOT SPEED

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

DISTANCE (NM) **TIME (MIN)**
INITIAL SPEED(KT) **FUEL(1000KG)**
LEVEL OFF (FT)

INIT. GW (1000KG)	INITIAL FLIGHT LEVEL 250	270	290	310	330	350	370	390	410
130						228 42 190 2.3 33400	290 54 192 2.8 33500	329 60 194 3.1 33500	358 65 196 3.3 33500
140					202 38 194 2.2 31900	276 51 196 2.9 32000	318 58 198 3.3 32000	349 64 200 3.5 32100	375 68 202 3.7 32100
150				160 30 198 1.9 30400	258 48 200 3.0 30500	306 57 202 3.4 30600	339 62 204 3.7 30600	366 66 206 3.9 30700	388 70 208 4.0 30700
160			68 13 202 .9 28900	236 44 204 2.9 29200	291 54 206 3.5 29200	329 61 208 3.9 29300	356 65 210 4.1 29300	382 69 212 4.3 29300	402 72 214 4.4 29400
170			204 38 208 2.7 27800	276 51 210 3.6 27900	318 59 212 4.0 28000	348 64 214 4.3 28000	373 68 216 4.5 28100	396 71 218 4.7 28100	416 74 220 4.8 28100
180		151 29 212 2.2 26500	256 48 214 3.6 26700	304 56 216 4.1 26700	339 62 218 4.5 26800	366 67 220 4.7 26800	389 70 222 4.9 26800	409 73 224 5.1 26900	428 76 226 5.2 26900
190		211 39 218 3.1 25400	288 53 220 4.2 25500	327 60 222 4.6 25600	357 65 224 4.9 25600	380 69 226 5.1 25600	401 72 228 5.3 25700	422 75 230 5.5 25700	437 77 232 5.5 25700
200		149 27 224 2.3 25100	197 36 226 2.9 25100	231 41 228 3.3 25100	261 46 230 3.6 25100	284 50 232 3.8 25100	304 53 234 4.0 25100	324 56 236 4.2 25100	
210	178 33 228 3.0 24300	237 43 230 3.9 24400	271 49 232 4.3 24400	298 53 234 4.6 24500	321 57 236 4.8 24500	340 59 238 5.0 24500	357 62 240 5.1 24500	374 64 242 5.2 24500	
220	245 44 234 4.3 23200	291 52 236 4.9 23300	321 57 238 5.3 23300	348 62 240 5.6 23300	368 65 242 5.8 23400	389 68 244 6.0 23400	406 70 246 6.1 23400		
230	285 51 240 5.1 22100	322 58 242 5.6 22100	351 62 244 6.0 22200	375 66 246 6.2 22200	396 69 248 6.4 22200	414 72 250 6.6 22200	431 74 252 6.7 22300		
240	315 56 246 5.8 21000	349 62 248 6.3 21000	374 66 250 6.6 21100	396 69 252 6.8 21100	413 72 254 7.0 21100	433 75 256 7.1 21100			

CORRECTIONS	DISTANCE	TIME	FUEL	LEVEL OFF
ENGINE ANTI ICE ON	+ 4 %	–	+ 4 %	– 100 FT
TOTAL ANTI ICE ON	+ 5 %	+ 5 %	+ 5 %	– 400 FT

11.0–08F0A330–200 CF6–80E1A4 23500010C6KG300 0 018590 0 0 3 .0 .0 .00 0 02 1.000 1.000 .000 0 FCOM-G0–03–06–40–003–015

GROSS FLIGHT PATH DESCENT AT GREEN DOT SPEED

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA+10
CG=30.0%

DISTANCE (NM) **TIME (MIN)**
INITIAL SPEED(KT) **FUEL(1000KG)**
LEVEL OFF (FT)

INIT. GW (1000KG)	INITIAL FLIGHT LEVEL 250	270	290	310	330	350	370	390	410
130						236 43 190 2.4 33300	299 54 192 3.0 33400	339 61 194 3.3 33500	370 65 196 3.5 33500
140					211 39 194 2.3 31800	284 52 196 3.1 31900	328 59 198 3.4 32000	361 64 200 3.7 32000	387 68 202 3.9 32000
150				170 32 198 2.1 30300	265 49 200 3.1 30500	314 57 202 3.6 30600	350 63 204 3.9 30600	377 67 206 4.1 30600	401 71 208 4.2 30600
160			76 14 202 1.0 28800	244 45 204 3.1 29100	301 55 206 3.7 29200	339 61 208 4.0 29300	368 66 210 4.3 29300	393 69 212 4.5 29300	416 73 214 4.6 29300
170			209 39 208 2.8 27800	284 52 210 3.7 27900	328 59 212 4.2 28000	358 64 214 4.5 28000	385 68 216 4.7 28000	407 72 218 4.9 28100	428 75 220 5.0 28100
180		159 29 212 2.3 26500	261 48 214 3.7 26600	312 57 216 4.3 26700	347 62 218 4.6 26700	376 67 220 4.9 26800	401 71 222 5.1 26800	421 74 224 5.3 26800	442 76 226 5.4 26800
190		205 38 218 3.1 25400	296 54 220 4.3 25500	337 61 222 4.8 25500	367 66 224 5.1 25600	392 69 226 5.3 25600	412 72 228 5.5 25600	433 75 230 5.7 25600	453 78 232 5.8 25700
200		153 28 224 2.4 25100	202 36 226 3.0 25100	238 42 228 3.4 25100	267 46 230 3.8 25100	291 50 232 4.0 25100	313 53 234 4.2 25100	334 56 236 4.3 25100	
210	183 33 228 3.2 24200	245 44 230 4.1 24300	280 49 232 4.5 24400	309 54 234 4.8 24400	332 57 236 5.0 24500	351 60 238 5.2 24500	371 63 240 5.3 24500	388 65 242 5.5 24500	
220	251 45 234 4.4 23100	300 53 236 5.1 23200	332 58 238 5.5 23300	358 62 240 5.8 23300	381 66 242 6.0 23300	400 68 244 6.2 23400	419 71 246 6.4 23400		
230	294 52 240 5.3 22000	333 58 242 5.9 22100	363 63 244 6.2 22100	386 67 246 6.5 22200	407 70 248 6.7 22200	426 72 250 6.9 22200	443 75 252 7.0 22200		
240	325 57 246 6.1 20900	359 63 248 6.5 21000	385 67 250 6.8 21000	408 70 252 7.1 21100	428 73 254 7.3 21100	446 75 256 7.4 21100			

CORRECTIONS	DISTANCE	TIME	FUEL	LEVEL OFF
ENGINE ANTI ICE ON	+ 4 %	+ 2 %	+ 4 %	– 300 FT
TOTAL ANTI ICE ON	+ 10 %	+ 10 %	+ 10 %	– 1100 FT

11.0–08F0A330–200 CF6–80E1A4 23500010C6KG300 0 018590 0 0 3 .0 .0 .00 0 02 1.000 1.000 .000 10 FCOM-G0–03–06–40–004–015

R

GROSS FLIGHT PATH DESCENT AT GREEN DOT SPEED

MAX. CONTINUOUS THRUST — ISA+15 — **DISTANCE (NM)** **TIME (MIN)**
PACK FLOW HI — CG=30.0% — **INITIAL SPEED(KT)** **FUEL(1000KG)**
ANTI-ICING OFF — **LEVEL OFF (FT)**

INIT. GW (1000KG)	INITIAL FLIGHT LEVEL 250	270	290	310	330	350	370	390	410
130					152 28 188 1.7 32500	257 47 190 2.7 32600	306 55 192 3.2 32700	342 61 194 3.4 32800	372 66 196 3.7 32800
140				69 13 192 .8 30900	238 44 194 2.8 31200	295 54 196 3.3 31200	333 60 198 3.7 31300	363 65 200 3.9 31300	389 69 202 4.1 31400
150				225 42 198 2.8 29600	293 54 200 3.6 29700	336 61 202 4.0 29800	366 66 204 4.2 29800	393 70 206 4.5 29900	415 73 208 4.6 29900
160			194 36 202 2.6 28000	279 52 204 3.7 28200	328 60 206 4.2 28300	360 65 208 4.5 28300	389 70 210 4.7 28400	413 73 212 4.9 28400	435 77 214 5.1 28400
170		149 28 206 2.2 26500	259 48 208 3.6 26700	313 58 210 4.3 26800	349 64 212 4.7 26900	381 69 214 5.0 26900	405 72 216 5.2 26900	428 76 218 5.3 27000	448 79 220 5.5 27000
180	38 7 210 .6 24900	234 44 212 3.5 25300	297 55 214 4.3 25400	337 62 216 4.8 25500	369 67 218 5.1 25500	395 71 220 5.4 25600	417 74 222 5.6 25600	438 77 224 5.7 25600	458 80 226 5.8 25600
190	209 39 216 3.4 23900	284 53 218 4.4 24000	329 61 220 5.0 24100	363 66 222 5.4 24200	391 71 224 5.7 24200	414 74 226 5.9 24200	436 77 228 6.1 24300	454 80 230 6.2 24300	
200	269 50 222 4.5 22600	322 60 224 5.2 22700	361 66 226 5.7 22700	391 71 228 6.0 22800	415 75 230 6.3 22800	438 78 232 6.5 22900	458 81 234 6.6 22900	477 84 236 6.8 22900	
210	314 59 228 5.4 21300	355 66 230 5.9 21300	386 71 232 6.3 21400	412 75 234 6.6 21400	437 79 236 6.8 21500	458 82 238 7.0 21500	476 84 240 7.2 21500		
220	345 64 234 6.1 19900	381 70 236 6.6 20000	410 75 238 6.9 20100	434 78 240 7.2 20100	456 82 242 7.4 20100	476 84 244 7.6 20200	493 87 246 7.7 20200		

CORRECTIONS	**DISTANCE**	**TIME**	**FUEL**	**LEVEL OFF**
ENGINE ANTI ICE ON	+ 4 %	+ 2 %	+ 4 %	– 400 ft
TOTAL ANTI ICE ON	+ 10 %	+ 10 %	+ 10 %	– 1400 ft

10E -08F0A330-301 CF6-80E1A2 23500010C6KG300 0 018590 0 0 3 .0 .0 .00 0 02 0 02 1.000 1.000 .000 15 FCOM-G0-03-06-40-005-010

R

GROSS FLIGHT PATH DESCENT AT GREEN DOT SPEED

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA+20
CG=30.0%

DISTANCE (NM) **TIME (MIN)**
INITIAL SPEED(KT) **FUEL(1000KG)**
LEVEL OFF (FT)

INIT. GW (1000KG)	INITIAL FLIGHT LEVEL 250	270	290	310	330	350	370	390	410
130					175 32 188 1.9 32300	271 49 190 2.9 32400	318 57 192 3.3 32500	353 63 194 3.6 32600	380 67 196 3.7 32600
140				137 25 192 1.6 30600	256 47 194 3.0 30900	308 56 196 3.5 30900	343 62 198 3.8 31000	373 66 200 4.0 31000	397 70 202 4.1 31100
150			93 17 196 1.2 28800	251 47 198 3.1 29200	313 57 200 3.8 29300	352 64 202 4.2 29300	383 69 204 4.4 29400	408 73 206 4.6 29400	430 76 208 4.7 29400
160		13 2 200 .2 26900	235 44 202 3.2 27400	306 57 204 4.0 27600	349 64 206 4.5 27700	382 69 208 4.8 27700	408 73 210 5.0 27800	430 77 212 5.1 27800	451 80 214 5.3 27800
170		215 41 206 3.1 25800	292 55 208 4.1 26000	342 63 210 4.7 26000	376 69 212 5.0 26100	406 74 214 5.3 26100	429 77 216 5.5 26200	450 80 218 5.6 26200	470 83 220 5.7 26200
180	179 34 210 2.8 24300	269 51 212 4.0 24500	321 60 214 4.7 24600	358 66 216 5.1 24600	387 71 218 5.4 24700	412 74 220 5.6 24700	433 77 222 5.7 24700	453 80 224 5.9 24800	471 83 226 6.0 24800
190	262 50 216 4.2 22900	318 60 218 4.9 23000	359 67 220 5.4 23100	390 72 222 5.8 23200	417 76 224 6.0 23200	440 79 226 6.2 23200	459 82 228 6.4 23300	479 85 230 6.5 23300	
200	316 60 222 5.2 21500	359 67 224 5.8 21600	390 72 226 6.1 21600	419 77 228 6.4 21700	444 81 230 6.7 21700	465 84 232 6.9 21700	485 87 234 7.0 21800		
210	357 67 228 6.1 20000	393 73 230 6.6 20100	422 78 232 6.9 20100	447 82 234 7.1 20200	470 85 236 7.4 20200	490 88 238 7.5 20200	508 91 240 7.7 20200		
220	348 65 234 6.1 18800	380 70 236 6.5 18800	405 74 238 6.8 18900	431 78 240 7.1 18900	452 81 242 7.2 18900	472 84 244 7.4 18900			

CORRECTIONS	DISTANCE	TIME	FUEL	LEVEL OFF
ENGINE ANTI ICE ON	+ 4 %	+ 2 %	+ 4 %	– 400 ft
TOTAL ANTI ICE ON	+ 10 %	+ 10 %	+ 10 %	– 1400 ft

10E -08F0A330-301 CF6-80E1A2 23500010C6KG300 0 018590 0 0 3 .0 .0 .00 0 02 0 02 1.000 1.000 .000 20 FCOM-G0-03-06-40-006-010

GROSS FLIGHT PATH DESCENT AT GREEN DOT SPEED

MAX. CONTINUOUS THRUST — ISA+15 — **DISTANCE (NM)** — **TIME (MIN)**
PACK FLOW HI — CG=30.0% — **INITIAL SPEED(KT)** — **FUEL(1000KG)**
ANTI-ICING OFF — **LEVEL OFF (FT)**

INIT. GW (1000KG)	INITIAL FLIGHT LEVEL 250	270	290	310	330	350	370	390	410
130						233 42 190 2.4 33300	297 53 192 3.0 33400	338 60 194 3.3 33500	368 64 196 3.5 33500
140					206 37 194 2.3 31900	281 51 196 3.1 32000	325 58 198 3.4 32000	356 63 200 3.7 32100	385 67 202 3.9 32100
150				171 31 198 2.1 30400	271 49 200 3.2 30600	320 57 202 3.7 30700	354 63 204 4.0 30700	382 67 206 4.2 30700	406 71 208 4.3 30800
160			106 20 202 1.4 28800	257 47 204 3.3 29100	316 57 206 3.9 29200	353 63 208 4.2 29200	385 68 210 4.5 29300	410 72 212 4.7 29300	432 75 214 4.8 29300
170			228 42 208 3.1 27600	300 54 210 4.0 27700	344 62 212 4.4 27800	376 67 214 4.7 27800	403 71 216 5.0 27900	426 74 218 5.1 27900	447 77 220 5.3 27900
180		190 35 212 2.8 26100	280 51 214 3.9 26300	331 60 216 4.5 26400	366 66 218 4.9 26400	395 70 220 5.2 26500	418 73 222 5.4 26500	440 77 224 5.5 26500	459 79 226 5.6 26500
190		168 31 218 2.5 25200	235 42 220 3.4 25300	280 50 222 3.9 25300	315 56 224 4.3 25300	344 60 226 4.6 25300	367 63 228 4.8 25300	391 67 230 5.0 25300	
200	127 23 222 2.1 24700	195 35 224 3.1 24800	229 40 226 3.5 24900	255 45 228 3.7 24900	275 48 230 3.9 24900	293 50 232 4.0 24900	307 52 234 4.0 24900	325 54 236 4.2 25000	
210	230 41 228 3.9 23600	283 50 230 4.7 23700	319 56 232 5.1 23700	348 61 234 5.4 23800	371 64 236 5.6 23800	392 67 238 5.8 23800	411 70 240 6.0 23800		
220	284 51 234 4.9 22400	324 57 236 5.5 22500	357 63 238 5.9 22500	383 67 240 6.2 22500	406 70 242 6.4 22600	424 72 244 6.5 22600	444 75 246 6.7 22600		
230	322 57 240 5.8 21200	357 63 242 6.2 21200	384 67 244 6.5 21300	409 71 246 6.8 21300	430 74 248 7.0 21400	448 76 250 7.2 21400			
240	353 62 246 6.5 20000	383 67 248 6.9 20000	409 71 250 7.2 20100	431 74 252 7.4 20100	451 77 254 7.6 20100	469 80 256 7.7 20200			

CORRECTIONS	DISTANCE	TIME	FUEL	LEVEL OFF
ENGINE ANTI ICE ON	+ 4 %	+ 4 %	+ 4 %	– 400 FT
TOTAL ANTI ICE ON	+ 10 %	+ 10 %	+ 10 %	– 1400 FT

11.0–08F0A330–200 CF6–80E1A4 23500010C6KG300 0 018590 0 0 3 .0 .0 .00 0 02 1.000 1.000 .000 15 FCOM-G0–03–06–40–005–015

GROSS FLIGHT PATH DESCENT AT GREEN DOT SPEED

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA+20
CG=30.0%

DISTANCE (NM) **TIME (MIN)**
INITIAL SPEED(KT) **FUEL(1000KG)**
LEVEL OFF (FT)

INIT. GW (1000KG)	INITIAL FLIGHT LEVEL 250	270	290	310	330	350	370	390	410
130					59 11 188 .6 32900	245 44 190 2.5 33200	305 54 192 3.0 33300	343 60 194 3.3 33300	372 65 196 3.5 33400
140					226 41 194 2.5 31600	294 53 196 3.2 31700	336 60 198 3.6 31800	367 64 200 3.8 31800	393 68 202 3.9 31900
150				207 38 198 2.5 30000	292 53 200 3.4 30200	339 60 202 3.9 30300	371 66 204 4.1 30300	397 70 206 4.3 30300	419 73 208 4.4 30400
160			176 32 202 2.3 28300	282 51 204 3.6 28500	336 61 206 4.1 28600	372 66 208 4.5 28700	401 71 210 4.7 28700	424 74 212 4.8 28800	445 77 214 5.0 28800
170		132 25 206 1.8 26700	265 49 208 3.6 26900	326 59 210 4.3 27100	364 65 212 4.7 27100	396 70 214 4.9 27200	422 74 216 5.2 27200	444 78 218 5.3 27200	464 80 220 5.4 27200
180		208 38 212 3.0 25400	312 57 214 4.3 25500	356 64 216 4.8 25600	392 70 218 5.2 25600	418 74 220 5.4 25600	440 78 222 5.6 25700	460 80 224 5.7 25700	481 83 226 5.9 25700
190	88 16 216 1.4 24800	161 29 218 2.4 25000	213 38 220 3.0 25000	251 44 222 3.5 25000	281 49 224 3.8 25000	305 53 226 4.0 25000	327 56 228 4.1 25000	348 59 230 4.3 25000	
200	221 40 222 3.6 23700	276 50 224 4.3 23800	313 56 226 4.7 23900	343 61 228 5.1 23900	368 65 230 5.3 24000	390 68 232 5.5 24000	410 71 234 5.6 24000	427 73 236 5.7 24000	
210	284 51 228 4.7 22400	326 59 230 5.3 22500	358 64 232 5.6 22600	385 68 234 5.9 22600	408 71 236 6.1 22700	428 74 238 6.3 22700	448 77 240 6.5 22700		
220	329 59 234 5.6 21100	365 65 236 6.1 21200	394 70 238 6.4 21200	417 73 240 6.6 21300	439 77 242 6.8 21300	457 79 244 7.0 21300	475 81 246 7.1 21300		
230	358 64 240 6.3 19800	392 70 242 6.7 19900	420 74 244 7.1 19900	446 78 246 7.3 19900	466 81 248 7.5 20000	487 84 250 7.7 20000			
240	356 63 246 6.4 18800	385 68 248 6.7 18800	407 71 250 7.0 18800	431 75 252 7.2 18800	451 78 254 7.4 18900	469 80 256 7.6 18900			

CORRECTIONS	DISTANCE	TIME	FUEL	LEVEL OFF
ENGINE ANTI ICE ON	+ 5 %	+ 5 %	+ 5 %	– 500 FT
TOTAL ANTI ICE ON	+ 15 %	+ 15 %	+ 15 %	– 1500 FT

11.0–08F0A330–200 CF6–80E1A4 23500010C6KG300 0 018590 0 0 3 .0 .0 .00 0 02 1.000 1.000 .000 20 FCOM-G0–03–06–40–006–015

– For LONG RANGE CRUISE table. (Refer 3.06.30 p 4 to 11)
– For IN CRUISE QUICK CHECK table. (Refer to 3.06.30 p 13)

PROCEDURE

This section provides single engine performance data for two fixed speed diversion strategies (fixed descent and cruise speed schedules) recommended for ETOPS operation, provided that the requirements set forth in section 3.06.10, GENERAL, are complied with.

R

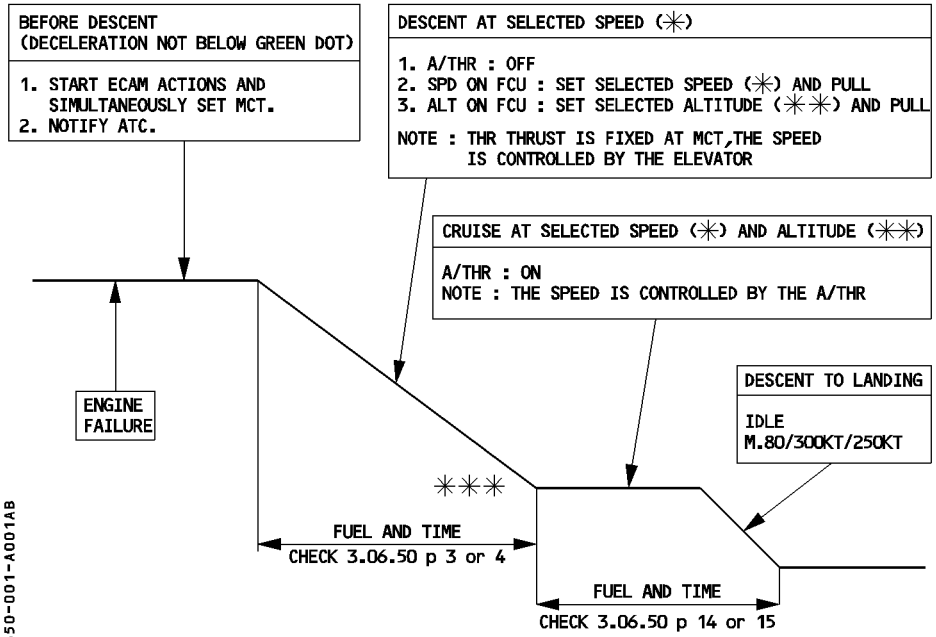

✳ USE M.82/330KT OR M.82/310KT AS ESTABLISHED BEFORE DISPATCH.

✳✳ SET 17000 feet OR VALUE ESTABLISHED BEFORE DISPATCH.

✳✳✳ IF V/S BECOMES < 500 feet/minute SELECT V/S MODE.

R **EXAMPLE**

Given :

GW at engine failure	=	175 000 kg
FL at engine failure	=	370
Temperature	=	ISA
Distance to diversion airport	=	500 NM
Speed selected before dispatch	=	330 kt
Cruise level for diversion selected before dispatch	=	FL180

Find :

Descent to cruise level :
R (see 3.06.50 p 3)

Distance = 282 – 107 = 175 NM
Fuel = 3632 – 1585 = 2047 kg
Time = 38.8 – 16 = 22.8 min

Cruise
Weight = 175 000 – 2047 = 172 953 kg
Distance = 500 – 175 = 325 NM
R Determine (3.06.50 p 14) time and fuel consumption at ISA conditions for a reference
R weight of 170 000 kg.
R Interpolate the remaining distance of 325 NM at FL180.
Fuel = 4879 kg
Time = 57 min
R Correction due to actual in cruise weight
R △Fuel = 1 kg per 1000 kg above reference weight
R △Fuel = 1 kg × (172.9 – 170) ~ 3 kg

Result

R Total Fuel = 2047 + 4879 + 3 = 6929 kg
R Time = 0 h 23 min + 57 = 1 h 20 min

PROCEDURE

This section provides single engine performance data for two fixed speed diversion strategies (fixed descent and cruise speed schedules) recommended for ETOPS operation, provided that the requirements set forth in section 3.06.10, GENERAL, are complied with.

R

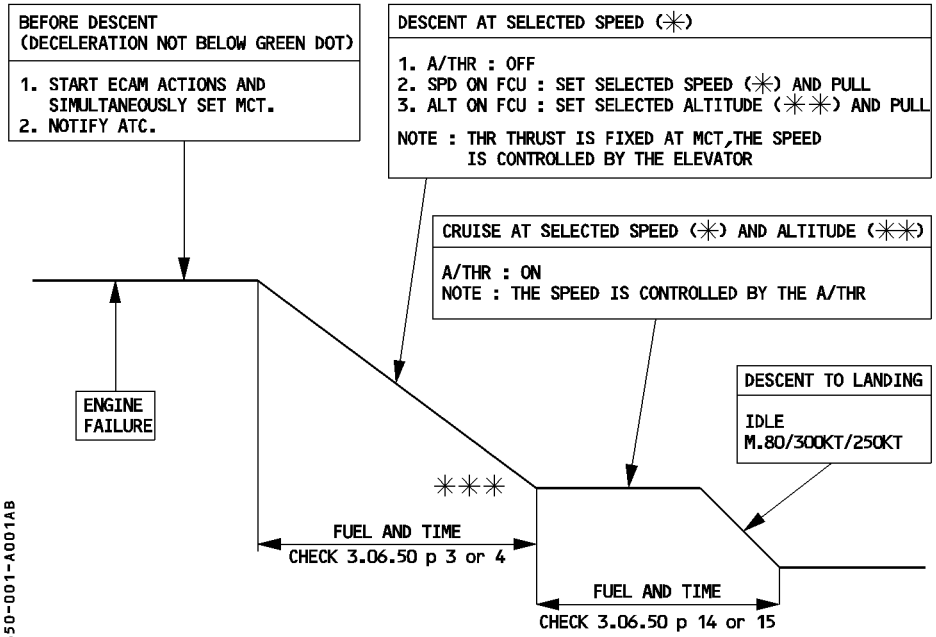

✳ USE M.82/330KT OR M.82/310KT AS ESTABLISHED BEFORE DISPATCH.

✳✳ SET 17000 feet OR VALUE ESTABLISHED BEFORE DISPATCH.

✳✳✳ IF V/S BECOMES < 500 feet/minute SELECT V/S MODE.

EXAMPLE

Given :

GW at engine failure	=	175 000 kg
FL at engine failure	=	370
Temperature	=	ISA
Distance to diversion airport	=	500 NM
Speed selected before dispatch	=	330 kt
Cruise level for diversion selected before dispatch	=	FL180

Find :

Descent to cruise level : (see 3.06.50 p 3)
Distance = 294 – 107 = 187 NM
Fuel = 3760 – 1552 = 2208 kg
Time = 40.3 – 16 = 24.3 min

Cruise
Weight = 175 000 – 2208 = 172 798 kg
Distance = 500 – 187 = 313 NM
Determine (3.06.50 p 14) time and fuel consumption at ISA conditions for a reference weight of 170 000 kg.
Interpolate the remaining distance of 313 NM at FL180.
Fuel = 4800 kg
Time = 54 min
Correction due to actual in cruise weight
△Fuel = 0 kg per 1000 kg above reference weight
△Fuel = 0 kg × (172.8 – 170) ∼ 0 kg

Result

Total Fuel = 2208 + 4800 + 0 = 7008 kg
Time = 0 h 24 min + 54 = 1 h 18 min

DESCENT - M.82/330KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

MINIMUM RATE OF DESCENT 500FT/MIN

WEIGHT (1000KG)	150				200				
FL	TIME (MIN)	FUEL (KG)	DIST. (NM)	MODE	TIME (MIN)	FUEL (KG)	DIST. (NM)	MODE	IAS (KT)
410	42.3	3808	309	MCT					243
390	40.6	3722	296	MCT	40.2	3725	293	MCT	255
370	38.8	3623	282	MCT	38.6	3641	281	MCT	267
350	37.1	3517	269	MCT	37.1	3544	269	MCT	279
330	35.5	3410	256	MCT	35.5	3440	257	MCT	292
310	33.9	3295	244	MCT	34.0	3324	244	MCT	306
290	32.4	3177	232	MCT	32.5	3203	232	MCT	319
270	30.9	3046	219	MCT	30.9	3064	219	MCT	330
250	28.7	2843	201	MCT	28.5	2853	200	MCT	330
240	27.3	2715	191	MCT	27.1	2724	189	MCT	330
220	24.0	2387	165	MCT	23.9	2405	165	MCT	330
200	20.0	1982	136	V/S	20.0	2003	136	V/S	330
180	16.0	1578	107	V/S	16.0	1593	107	V/S	330
160	12.0	1179	79	V/S	12.0	1188	79	V/S	330
140	8.0	783	52	V/S	8.0	788	52	V/S	330
120	4.0	391	26	V/S	4.0	392	26	V/S	330
100	.0	0	0	V/S	.0	0	0	V/S	330

CORRECTIONS	**ENGINE ANTI ICE ON**	**TOTAL ANTI ICE ON**	**per 1° above ISA**
TIME	–	–	–
FUEL	+ 1.5 %	+ 3.5 %	+ 0.25 %
DISTANCE	–	–	+ 0.20 %

10B -08F0A330-301 CF6-80E1A2 23200010C6KG300 0 018590 0 0 3 .0 .0 500.00 0 02 .820330.000 .000 0 FCOM-G0-03-05-06-003-010

DESCENT - M.82/310KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

MINIMUM RATE OF DESCENT 500FT/MIN

WEIGHT (1000KG)	150				200				
FL	TIME (MIN)	FUEL (KG)	DIST. (NM)	MODE	TIME (MIN)	FUEL (KG)	DIST. (NM)	MODE	IAS (KT)
410	47.1	3842	332	MCT					243
390	45.4	3756	319	MCT	44.4	3755	311	MCT	255
370	43.6	3657	305	MCT	42.8	3670	299	MCT	267
350	41.9	3551	292	MCT	41.3	3574	287	MCT	279
330	40.3	3444	279	MCT	39.7	3469	275	MCT	292
310	38.7	3329	267	MCT	38.2	3354	263	MCT	306
290	36.7	3163	250	MCT	36.1	3187	246	MCT	310
270	33.7	2917	227	MCT	33.3	2952	224	MCT	310
250	30.0	2586	199	V/S	30.0	2653	199	MCT	310
240	28.0	2407	185	V/S	28.0	2472	185	V/S	310
220	24.0	2053	156	V/S	24.0	2103	156	V/S	310
200	20.0	1703	128	V/S	20.0	1741	128	V/S	310
180	16.0	1357	101	V/S	16.0	1384	101	V/S	310
160	12.0	1014	75	V/S	12.0	1033	75	V/S	310
140	8.0	674	49	V/S	8.0	686	49	V/S	310
120	4.0	336	24	V/S	4.0	342	24	V/S	310
100	.0	0	0	V/S	.0	0	0	V/S	310

CORRECTIONS	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
TIME	–	–	–
FUEL	+ 1.5 %	+ 3.5 %	+ 0.25 %
DISTANCE	–	–	+ 0.20 %

10B -08F0A330-301 CF6-80E1A2 23200010C6KG300 0 018590 0 0 3 .0 .0 500.00 0 02 .820330.000 .000 0 FCOM-G0-03-05-06-004-010

DESCENT - M.82/330KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

MINIMUM RATE OF DESCENT 500FT/MIN

WEIGHT (1000KG)	150				200				
FL	TIME (MIN)	FUEL (KG)	DIST. (NM)	MODE	TIME (MIN)	FUEL (KG)	DIST. (NM)	MODE	IAS (KT)
410	44.0	3946	323	MCT					243
390	42.2	3857	309	MCT	41.7	3852	305	MCT	255
370	40.4	3755	295	MCT	40.1	3765	292	MCT	267
350	38.6	3646	281	MCT	38.5	3667	280	MCT	279
330	37.0	3534	268	MCT	36.9	3560	267	MCT	292
310	35.3	3415	255	MCT	35.3	3441	255	MCT	306
290	33.8	3292	242	MCT	33.8	3316	242	MCT	319
270	32.2	3155	229	MCT	32.1	3173	229	MCT	330
250	29.8	2935	210	MCT	29.6	2947	209	MCT	330
240	28.0	2750	196	MCT	27.9	2775	196	MCT	330
220	24.0	2343	166	V/S	24.0	2366	166	V/S	330
200	20.0	1944	136	V/S	20.0	1958	136	V/S	330
180	16.0	1548	107	V/S	16.0	1556	107	V/S	330
160	12.0	1157	79	V/S	12.0	1161	79	V/S	330
140	8.0	769	52	V/S	8.0	770	52	V/S	330
120	4.0	383	26	V/S	4.0	383	26	V/S	330
100	.0	0	0	V/S	.0	0	0	V/S	330

CORRECTIONS	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
TIME	–	–	–
FUEL	+ 1.5 %	+ 3.5 %	+ 0.3 %
DISTANCE	–	–	+ 0.25 %

11.0–08F0A330–200 CF6–80E1A4 23200010C6KG300 0 018590 0 0 3 .0 .0 500.00 0 02 .820330.000 .000 0 FCOM-G0–03–06–50–003–015

DESCENT - M.82/310KT - 1 ENGINE OUT									
MAX. CONTINUOUS THRUST LIMITS PACK FLOW HI ANTI-ICING OFF			ISA CG=30.0%		MINIMUM RATE OF DESCENT 500FT/MIN				
WEIGHT (1000KG)	150				200				
FL	TIME (MIN)	FUEL (KG)	DIST. (NM)	MODE	TIME (MIN)	FUEL (KG)	DIST. (NM)	MODE	IAS (KT)
410	47.7	3842	338	MCT					243
390	46.0	3753	324	MCT	44.9	3738	316	MCT	255
370	44.2	3652	310	MCT	43.4	3652	303	MCT	267
350	42.4	3543	296	MCT	41.8	3553	291	MCT	279
330	40.7	3430	283	MCT	40.2	3446	278	MCT	292
310	39.1	3311	270	MCT	38.6	3327	266	MCT	306
290	37.0	3138	252	MCT	36.4	3155	248	MCT	310
270	33.9	2878	229	MCT	33.5	2911	226	MCT	310
250	30.0	2537	199	V/S	30.0	2593	199	V/S	310
240	28.0	2361	185	V/S	28.0	2409	185	V/S	310
220	24.0	2014	156	V/S	24.0	2049	156	V/S	310
200	20.0	1670	128	V/S	20.0	1695	128	V/S	310
180	16.0	1331	101	V/S	16.0	1348	101	V/S	310
160	12.0	995	75	V/S	12.0	1005	75	V/S	310
140	8.0	661	49	V/S	8.0	667	49	V/S	310
120	4.0	329	24	V/S	4.0	332	24	V/S	310
100	.0	0	0	V/S	.0	0	0	V/S	310

CORRECTIONS	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
TIME	–	–	–
FUEL	+ 1.5 %	+ 3.5 %	+ 0.3 %
DISTANCE	–	–	+ 0.25 %

11.0-08F0A330-200 CF6-80E1A4 23200010C6KG300 0 018590 0 0 3 .0 .0 500.00 0 02 .820310.000 .000 0 FCOM-G0-03-06-50-004-015

R

CRUISE - MCT/330KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100			FL130			FL140			FL150			FL160			FL170			FL180			FL190		
130	98.0	.594		100.4	.627		101.2	.638		102.3	.650		103.3	.662		103.6	.667		103.6	.668		103.5	.668	
	6969	330		7062	330		7093	330		7146	330		7201	330		7051	326		6801	320		6557	314	
	54.4	379		56.0	396		56.6	401		57.0	407		57.4	413		58.8	415		60.8	413		62.8	412	
140	98.2	.594		100.6	.627		101.5	.638		102.6	.650		103.6	.662		103.7	.664		103.6	.664		103.5	.664	
	7024	330		7120	330		7151	330		7216	330		7264	330		7046	325		6795	318		6550	312	
	54.0	379		55.6	396		56.1	401		56.4	407		56.9	413		58.6	413		60.5	411		62.5	409	
150	98.4	.594		100.9	.627		101.8	.638		102.9	.650		103.8	.660		103.7	.660		103.7	.659		103.6	.658	
	7088	330		7187	330		7220	330		7299	330		7291	329		7038	323		6788	316		6541	309	
	53.5	379		55.1	396		55.6	401		55.8	407		56.5	412		58.3	410		60.1	408		62.1	406	
160	98.7	.594		101.2	.627		102.2	.638		103.4	.650		103.8	.656		103.8	.655		103.8	.654		103.7	.652	
	7168	330		7270	330		7315	330		7400	330		7281	327		7030	320		6779	313		6531	306	
	52.9	379		54.4	396		54.9	401		55.0	407		56.2	409		57.9	407		59.7	405		61.6	402	
170	99.1	.594		101.6	.627		102.7	.638		103.7	.648		103.9	.650		103.9	.649		103.8	.648		103.8	.645	
	7257	330		7364	330		7425	330		7461	329		7270	324		7021	317		6770	310		6522	303	
	52.2	379		53.7	396		54.1	401		54.4	406		55.8	406		57.5	404		59.2	401		61.0	398	
180	99.4	.594		102.0	.627		103.2	.638		103.8	.643		104.0	.645		104.0	.644		103.9	.641		103.9	.638	
	7355	330		7465	330		7545	330		7451	326		7260	321		7013	314		6762	307		6513	300	
	51.5	379		53.0	396		53.2	401		54.1	403		55.4	402		57.0	400		58.7	397		60.4	394	
190	99.8	.594		102.5	.627		103.6	.636		103.8	.638		104.0	.639		104.1	.637		104.0	.634		104.0	.629	
	7460	330		7588	330		7622	329		7439	323		7248	318		7005	311		6753	303		6503	295	
	50.8	379		52.1	396		52.5	400		53.7	399		55.0	399		56.5	396		58.1	392		59.7	388	
200	100.3	.594		103.1	.627		103.6	.630		103.9	.631		104.1	.632		104.2	.629		104.2	.625		104.2	.618	
	7577	330		7728	330		7609	326		7426	320		7237	314		6996	307		6743	299		6487	289	
	50.0	379		51.2	396		52.1	396		53.2	395		54.5	394		55.9	391		57.4	387		58.7	381	
210	100.7	.594		103.4	.623		103.7	.624		103.9	.624		104.2	.624		104.3	.620		104.3	.613		104.4	.604	
	7702	330		7768	328		7594	322		7412	316		7223	310		6985	302		6727	293		6469	283	
	49.2	379		50.6	393		51.6	392		52.8	391		53.9	389		55.2	385		56.4	380		57.5	372	
220	101.2	.594		103.4	.616		103.7	.616		104.0	.615		104.3	.614		104.5	.609		104.6	.598		104.6	.579	
	7829	330		7750	324		7576	318		7395	312		7206	305		6972	297		6707	286		6412	271	
	48.4	379		50.2	389		51.1	387		52.1	385		53.2	383		54.3	378		55.2	370		55.7	357	

ENGINE ANTI-ICE ON
△FUEL = + 1.5 %

TOTAL ANTI-ICE ON
△FUEL = + 3.5 %

10B -08F0A330-301 CF6-80E1A2 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 0 FCOM-G0-03-06-50-006-010

R

CRUISE - MCT/330KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA+10
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL130		FL140		FL150		FL160		FL170		FL180		FL190	
130	99.9	.594	102.4	.627	103.2	.638	104.3	.650	105.4	.662	105.6	.665	105.5	.666	105.4	.666
	7183	330	7287	330	7320	330	7383	330	7436	330	7243	325	6987	319	6737	313
	53.8	386	55.3	403	55.9	409	56.2	415	56.6	421	58.2	422	60.2	420	62.2	419
140	100.1	.594	102.6	.627	103.5	.638	104.6	.650	105.7	.662	105.6	.662	105.5	.662	105.5	.662
	7239	330	7346	330	7380	330	7455	330	7496	330	7237	324	6981	318	6729	311
	53.3	386	54.9	403	55.4	409	55.7	415	56.2	421	58.0	420	59.9	418	61.8	416
150	100.3	.594	102.9	.627	103.8	.638	105.0	.650	105.7	.658	105.7	.658	105.6	.657	105.5	.656
	7306	330	7415	330	7453	330	7541	330	7487	328	7230	322	6972	315	6721	309
	52.9	386	54.4	403	54.9	409	55.0	415	55.9	419	57.7	417	59.5	415	61.4	413
160	100.6	.594	103.2	.627	104.2	.638	105.5	.650	105.7	.654	105.7	.653	105.7	.652	105.6	.650
	7388	330	7501	330	7555	330	7644	330	7477	326	7221	319	6963	312	6711	306
	52.3	386	53.7	403	54.1	409	54.3	415	55.6	416	57.3	414	59.1	412	61.0	409
170	101.0	.594	103.6	.627	104.7	.638	105.6	.647	105.8	.649	105.8	.648	105.8	.646	105.7	.644
	7481	330	7597	330	7669	330	7660	328	7466	323	7212	316	6955	309	6702	302
	51.6	386	53.1	403	53.3	409	53.9	413	55.3	413	56.9	411	58.6	408	60.4	405
180	101.3	.594	104.0	.627	105.2	.638	105.6	.642	105.9	.643	105.9	.642	105.9	.639	105.8	.637
	7581	330	7702	330	7792	330	7649	326	7456	320	7204	313	6946	306	6694	299
	50.9	386	52.3	403	52.5	409	53.6	410	54.9	409	56.5	407	58.1	404	59.8	400
190	101.8	.594	104.5	.627	105.4	.634	105.7	.636	105.9	.637	106.0	.635	106.0	.632	106.0	.627
	7690	330	7834	330	7823	328	7637	323	7445	317	7195	310	6938	302	6682	294
	50.2	386	51.5	403	52.0	407	53.2	406	54.4	405	55.9	403	57.5	399	59.0	394
200	102.2	.594	105.1	.627	105.5	.628	105.8	.630	106.0	.630	106.1	.627	106.1	.623	106.1	.616
	7811	330	7977	330	7808	325	7624	319	7433	314	7185	306	6927	298	6666	288
	49.4	386	50.5	403	51.6	403	52.7	402	54.0	401	55.3	398	56.8	393	58.1	387
210	102.7	.594	105.2	.621	105.5	.622	105.8	.622	106.1	.622	106.2	.618	106.3	.611	106.4	.601
	7939	330	7967	327	7794	321	7610	315	7417	309	7174	301	6911	292	6647	281
	48.6	386	50.1	399	51.1	398	52.2	397	53.3	396	54.6	392	55.8	386	56.9	378
220	103.1	.594	105.3	.614	105.6	.614	105.9	.613	106.2	.612	106.4	.607	106.5	.596	106.6	.576
	8069	330	7950	323	7776	317	7593	311	7401	304	7160	295	6886	284	6585	269
	47.9	386	49.6	395	50.6	393	51.6	392	52.6	389	53.7	384	54.6	376	55.0	362

ENGINE ANTI-ICE ON
△FUEL = + 1.5 %

TOTAL ANTI-ICE ON
△FUEL = + 3.5 %

10B -08F0A330--301 CF6--80E1A2 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 10 FCOM-G0--03--06--50--007--010

CRUISE - MCT/330KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100			FL150			FL160			FL170			FL180			FL190			FL200			FL210		
130	97.6	.594		101.7	.650		102.8	.662		103.8	.674		104.8	.687		105.8	.696		105.7	.696		106.0	.699	
	6879	330		7023	330		7080	330		7112	330		7148	330		7114	328		6858	322		6677	317	
	55.1	379		58.0	407		58.4	413		58.9	419		59.5	425		60.3	429		62.3	428		64.0	428	
140	97.8	.594		102.0	.650		103.1	.662		104.1	.674		105.2	.687		105.8	.693		105.8	.692		106.1	.694	
	6914	330		7083	330		7140	330		7172	330		7217	330		7110	326		6853	320		6670	314	
	54.8	379		57.5	407		57.9	413		58.5	419		58.9	425		60.1	427		62.0	425		63.7	425	
150	98.0	.594		102.3	.650		103.4	.662		104.4	.674		105.7	.687		105.9	.688		105.9	.687		106.2	.689	
	6967	330		7162	330		7220	330		7250	330		7309	330		7104	324		6846	317		6662	312	
	54.4	379		56.9	407		57.2	413		57.8	419		58.2	425		59.8	425		61.7	422		63.3	421	
160	98.3	.594		102.8	.650		103.8	.662		104.9	.674		106.0	.685		106.0	.684		106.0	.682		106.3	.683	
	7044	330		7264	330		7310	330		7344	330		7358	329		7098	322		6839	315		6653	309	
	53.8	379		56.1	407		56.5	413		57.1	419		57.6	424		59.4	422		61.2	419		62.8	418	
170	98.6	.594		103.3	.650		104.3	.662		105.4	.674		106.1	.680		106.1	.678		106.1	.676		106.5	.676	
	7129	330		7372	330		7407	330		7450	330		7352	326		7091	319		6832	312		6643	306	
	53.2	379		55.2	407		55.8	413		56.3	419		57.2	421		59.0	418		60.8	415		62.3	414	
180	98.9	.594		103.8	.650		104.8	.662		106.0	.674		106.2	.674		106.3	.672		106.3	.669		106.6	.668	
	7221	330		7485	330		7511	330		7573	330		7345	324		7084	316		6824	308		6631	302	
	52.5	379		54.4	407		55.0	413		55.4	419		56.8	417		58.5	414		60.2	411		61.6	409	
190	99.3	.594		104.3	.650		105.3	.662		106.3	.670		106.3	.668		106.4	.665		106.4	.661		106.8	.658	
	7320	330		7594	330		7624	330		7605	328		7338	320		7076	313		6815	305		6615	297	
	51.8	379		53.6	407		54.2	413		54.8	417		56.3	413		57.9	410		59.5	406		60.9	403	
200	99.7	.594		104.8	.650		106.0	.662		106.4	.664		106.5	.661		106.6	.657		106.6	.651		107.0	.646	
	7425	330		7709	330		7761	330		7598	325		7331	317		7067	309		6805	300		6597	292	
	51.1	379		52.8	407		53.2	413		54.3	413		55.8	409		57.3	405		58.8	400		59.9	395	
210	100.1	.594		105.3	.650		106.5	.660		106.6	.657		106.7	.653		106.8	.647		106.9	.640		107.3	.632	
	7538	330		7832	330		7861	329		7590	321		7323	313		7058	304		6791	294		6576	285	
	50.3	379		52.0	407		52.4	412		53.8	408		55.2	404		56.6	399		57.9	393		58.8	387	
220	100.6	.594		106.0	.650		106.6	.653		106.7	.649		106.9	.643		107.0	.636		107.2	.625		107.7	.612	
	7661	330		7975	330		7850	325		7582	317		7314	308		7046	299		6772	287		6545	275	
	49.5	379		51.1	407		51.9	407		53.2	403		54.5	398		55.7	392		56.7	384		57.2	374	
230	101.1	.594		106.4	.645		106.8	.644		106.9	.639		107.1	.632		107.3	.621		107.6	.604		108.2	.577	
	7793	330		8033	328		7838	321		7574	312		7304	303		7028	291		6747	277		6466	259	
	48.7	379		50.3	404		51.3	402		52.5	397		53.6	392		54.5	383		55.0	371		54.6	353	
240	101.6	.594		106.5	.637		107.0	.635		107.2	.629		107.4	.618		107.8	.600		108.2	.565				
	7933	330		8020	323		7827	316		7565	307		7288	295		7003	281		6657	259				
	47.8	379		49.8	399		50.6	396		51.7	391		52.5	382		52.8	370		52.2	347				

ENGINE ANTI ICE ON
△FUEL = + 1 %

TOTAL ANTI ICE ON
△FUEL = + 3 %

11.0-08F0A330-200 CF6-80E1A4 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 0 FCOM-G0-03-06-50-005-015

CRUISE - MCT/330KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA+10
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL150		FL160		FL170		FL180		FL190		FL200		FL210	
130	99.5	.594	103.7	.650	104.8	.662	105.8	.674	107.0	.687	107.7	.694	107.7	.694	108.0	.697
	7086	330	7257	330	7314	330	7347	330	7388	330	7311	327	7049	321	6865	316
	54.5	386	57.2	415	57.6	421	58.2	427	58.7	434	59.7	437	61.7	435	63.4	435
140	99.7	.594	104.0	.650	105.1	.662	106.1	.674	107.3	.687	107.8	.691	107.8	.690	108.1	.692
	7124	330	7318	330	7377	330	7408	330	7461	330	7306	326	7044	319	6858	314
	54.2	386	56.7	415	57.1	421	57.7	427	58.1	434	59.5	435	61.4	433	63.0	432
150	99.9	.594	104.4	.650	105.5	.662	106.5	.674	107.8	.687	107.9	.687	107.9	.685	108.2	.687
	7181	330	7400	330	7455	330	7488	330	7556	330	7300	323	7037	317	6850	311
	53.8	386	56.1	415	56.5	421	57.1	427	57.4	434	59.2	432	61.0	429	62.6	429
160	100.2	.594	104.8	.650	105.9	.662	107.0	.674	107.9	.683	108.0	.682	108.0	.680	108.3	.681
	7260	330	7505	330	7548	330	7585	330	7560	328	7294	321	7030	314	6841	308
	53.2	386	55.3	415	55.8	421	56.3	427	57.0	431	58.8	429	60.6	426	62.1	425
170	100.5	.594	105.3	.650	106.3	.662	107.5	.674	108.0	.678	108.1	.676	108.1	.674	108.4	.674
	7348	330	7616	330	7647	330	7700	330	7554	325	7287	318	7023	311	6831	305
	52.5	386	54.5	415	55.1	421	55.5	427	56.7	428	58.4	425	60.1	422	61.6	421
180	100.8	.594	105.8	.650	106.8	.662	108.1	.674	108.2	.672	108.2	.670	108.2	.667	108.6	.666
	7444	330	7725	330	7755	330	7820	330	7547	323	7279	315	7015	308	6818	301
	51.9	386	53.7	415	54.3	421	54.6	427	56.2	424	57.9	421	59.6	418	61.0	416
190	101.2	.594	106.3	.650	107.4	.662	108.2	.668	108.3	.666	108.4	.663	108.4	.659	108.8	.656
	7546	330	7837	330	7874	330	7813	327	7539	319	7271	312	7006	304	6802	296
	51.2	386	53.0	415	53.5	421	54.2	424	55.8	420	57.3	417	58.9	413	60.2	409
200	101.6	.594	106.8	.650	108.1	.662	108.4	.662	108.4	.659	108.5	.655	108.6	.649	109.0	.644
	7654	330	7956	330	8017	330	7806	324	7531	316	7262	308	6997	299	6784	291
	50.4	386	52.2	415	52.5	421	53.8	420	55.2	416	56.7	412	58.2	407	59.3	402
210	102.0	.594	107.4	.650	108.4	.658	108.5	.655	108.6	.650	108.7	.645	108.9	.638	109.3	.630
	7771	330	8082	330	8073	328	7797	320	7523	312	7253	303	6981	293	6762	284
	49.7	386	51.3	415	51.9	419	53.2	415	54.6	411	55.9	406	57.2	399	58.1	393
220	102.5	.594	108.1	.650	108.6	.651	108.7	.647	108.8	.641	109.0	.634	109.2	.622	109.7	.609
	7897	330	8235	330	8062	324	7789	316	7514	307	7241	297	6962	286	6731	274
	48.9	386	50.4	415	51.4	414	52.6	410	53.9	405	55.1	399	56.0	390	56.5	380
230	103.0	.594	108.3	.644	108.7	.643	108.9	.637	109.0	.630	109.3	.619	109.6	.601	110.2	.572
	8032	330	8248	327	8051	320	7781	311	7504	302	7222	290	6936	276	6641	257
	48.1	386	49.8	411	50.8	409	51.9	404	53.0	398	53.9	389	54.3	377	53.8	357
240	103.5	.594	108.4	.635	108.9	.633	109.1	.626	109.4	.615	109.7	.597	110.2	.560		
	8177	330	8234	322	8039	315	7771	306	7486	294	7191	279	6836	256		
	47.2	386	49.2	405	50.1	403	51.1	397	51.9	388	52.2	375	51.3	351		

ENGINE ANTI ICE ON
△FUEL = + 1 %

TOTAL ANTI ICE ON
△FUEL = + 3 %

11.0-08F0A330-200 CF6-80E1A4 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 10 FCOM-G0-03-06-50-006-015

R

CRUISE - MCT/330KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA+15
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100			FL130			FL140			FL150			FL160			FL170			FL180			FL190		
130	100.8	.594		103.3	.627		104.2	.638		104.9	.647		105.0	.649		104.9	.648		104.7	.647		104.6	.646	
	7294	330		7399	330		7434	330		7393	328		7195	323		6919	316		6663	310		6414	304	
	53.4	390		55.0	407		55.5	413		56.3	417		57.9	417		59.9	414		61.9	413		64.0	410	
140	101.0	.594		103.6	.627		104.5	.638		104.9	.644		105.1	.646		104.9	.644		104.8	.643		104.7	.641	
	7351	330		7459	330		7494	330		7387	327		7188	321		6911	315		6654	308		6404	301	
	53.0	390		54.5	407		55.1	413		56.2	415		57.7	415		59.6	412		61.6	410		63.6	407	
150	101.3	.594		103.8	.627		104.8	.638		104.9	.640		105.1	.642		104.9	.640		104.8	.638		104.7	.635	
	7418	330		7529	330		7571	330		7378	325		7179	319		6901	312		6643	305		6392	298	
	52.5	390		54.0	407		54.5	413		55.9	413		57.4	412		59.3	409		61.2	406		63.1	403	
160	101.6	.594		104.2	.627		104.8	.634		105.0	.636		105.1	.637		105.0	.634		104.9	.631		104.8	.628	
	7501	330		7616	330		7562	328		7367	322		7168	317		6889	309		6630	302		6377	295	
	51.9	390		53.4	407		54.3	410		55.6	410		57.0	409		58.9	406		60.7	402		62.6	399	
170	101.9	.594		104.6	.627		104.8	.630		105.0	.631		105.2	.631		105.0	.628		104.9	.624		104.8	.621	
	7594	330		7713	330		7550	325		7355	320		7156	314		6876	306		6616	299		6363	291	
	51.3	390		52.7	407		53.9	407		55.3	406		56.6	405		58.4	402		60.1	398		62.0	394	
180	102.3	.594		104.6	.623		104.9	.624		105.1	.625		105.2	.625		105.1	.621		105.0	.617		104.9	.611	
	7695	330		7723	328		7537	323		7342	317		7142	311		6861	303		6600	295		6344	286	
	50.6	390		52.4	404		53.6	404		54.8	403		56.2	401		57.9	397		59.5	393		61.2	388	
190	102.7	.594		104.7	.618		104.9	.618		105.1	.618		105.3	.618		105.2	.612		105.1	.606		105.0	.599	
	7806	330		7710	325		7521	319		7326	313		7127	307		6845	298		6581	290		6322	281	
	49.9	390		52.0	401		53.2	400		54.4	398		55.6	397		57.2	392		58.7	387		60.2	381	
200	103.1	.594		104.7	.611		104.9	.611		105.2	.611		105.4	.609		105.3	.602		105.2	.594		105.1	.585	
	7928	330		7693	321		7504	316		7310	309		7109	302		6825	293		6559	284		6295	273	
	49.1	390		51.6	397		52.7	395		53.8	394		55.0	391		56.4	385		57.8	379		59.0	371	
210	103.6	.594		104.8	.604		105.0	.603		105.2	.601		105.5	.598		105.4	.590		105.3	.579		105.3	.562	
	8059	330		7676	318		7486	311		7290	304		7089	297		6805	287		6532	276		6256	262	
	48.3	390		51.1	392		52.1	390		53.2	388		54.2	384		55.5	377		56.5	369		57.0	357	
220	104.1	.594		104.8	.595		105.1	.593		105.3	.590		105.6	.587		105.5	.574		105.6	.555		105.7	.524	
	8190	330		7651	313		7462	306		7268	299		7072	291		6780	279		6494	264		6194	244	
	47.6	390		50.5	386		51.4	384		52.3	380		53.3	377		54.2	367		54.4	354		53.7	333	

ENGINE ANTI-ICE ON
△FUEL = + 1.5 %

TOTAL ANTI-ICE ON
△FUEL = + 3.5 %

10B -08F0A330-301 CF6-80E1A2 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 15 FCOM-G0-03-06-50-008-010

R

CRUISE - MCT/330KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF
ISA+20
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL130		FL140		FL150		FL160		FL170		FL180		FL190	
130	101.7	.594	104.2	.626	104.4	.630	104.5	.633	104.6	.635	104.4	.635	104.2	.633	104.0	.631
	7403	330	7485	330	7309	325	7125	321	6936	316	6666	310	6407	303	6156	296
	53.1	393	54.8	410	56.2	411	57.7	411	59.4	412	61.5	410	63.6	407	65.7	405
140	102.0	.594	104.2	.623	104.4	.627	104.5	.630	104.6	.632	104.4	.630	104.2	.628	104.1	.625
	7461	330	7479	328	7303	324	7118	319	6929	314	6656	307	6395	300	6143	293
	52.7	393	54.6	408	56.0	409	57.5	409	59.1	409	61.1	407	63.2	404	65.3	401
150	102.2	.594	104.2	.620	104.4	.623	104.5	.626	104.7	.627	104.5	.625	104.3	.622	104.1	.619
	7528	330	7472	326	7295	322	7110	317	6919	312	6644	305	6382	297	6128	290
	52.2	393	54.4	406	55.8	407	57.2	407	58.8	407	60.7	403	62.7	400	64.7	396
160	102.5	.594	104.2	.616	104.4	.619	104.6	.621	104.7	.622	104.5	.619	104.3	.615	104.2	.611
	7612	330	7463	324	7285	320	7100	315	6907	309	6631	302	6367	294	6111	286
	51.6	393	54.1	404	55.4	404	56.9	404	58.4	403	60.2	399	62.1	396	64.0	391
170	102.9	.594	104.3	.612	104.4	.614	104.6	.615	104.7	.616	104.5	.611	104.4	.607	104.2	.601
	7706	330	7453	322	7274	317	7088	312	6894	306	6615	298	6351	290	6092	282
	51.0	393	53.8	401	55.1	401	56.4	400	57.9	399	59.7	395	61.5	391	63.3	385
180	103.2	.594	104.3	.607	104.5	.608	104.6	.609	104.8	.609	104.6	.604	104.4	.597	104.3	.589
	7810	330	7441	319	7261	314	7075	308	6878	302	6599	294	6327	285	6060	275
	50.3	393	53.4	397	54.6	397	56.0	396	57.3	394	59.0	390	60.7	384	62.3	377
190	103.6	.594	104.3	.600	104.5	.601	104.7	.602	104.8	.600	104.6	.593	104.5	.584	104.3	.573
	7922	330	7427	316	7247	310	7060	305	6862	298	6573	289	6295	279	6022	268
	49.6	393	52.9	393	54.2	392	55.5	392	56.7	389	58.2	383	59.7	376	61.0	367
200	103.8	.591	104.3	.594	104.5	.594	104.7	.593	104.9	.590	104.7	.580	104.5	.568	104.4	.549
	7964	328	7407	312	7226	306	7037	300	6834	293	6541	282	6256	271	5965	256
	49.1	391	52.5	389	53.6	388	54.8	385	55.9	382	57.3	375	58.4	365	58.9	352
210	103.8	.585	104.4	.585	104.6	.584	104.8	.581	104.9	.577	104.8	.563	104.6	.543	104.5	.512
	7944	325	7380	307	7199	301	7006	294	6804	286	6502	274	6201	258	5889	238
	48.7	387	51.9	383	52.9	381	54.0	378	54.9	374	55.9	364	56.3	349	55.7	328
220	103.8	.578	104.4	.574	104.6	.572	104.8	.568	105.0	.559	104.9	.537	104.8	.507		
	7920	321	7349	302	7168	295	6971	287	6764	277	6447	261	6130	241		
	48.3	382	51.2	376	52.1	374	53.0	369	53.6	362	53.8	347	53.2	326		

ENGINE ANTI-ICE ON
△FUEL = + 1.5 %

TOTAL ANTI-ICE ON
△FUEL = + 3.5 %

10B -08F0A330--301 CF6--80E1A2 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 20 FCOM-G0--03--06--50--009--010

CRUISE - MCT/330KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA+15
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100			FL150			FL160			FL170			FL180			FL190			FL200			FL210		
130	100.4	.594		104.8	.650		105.8	.662		106.9	.674		106.8	.676		106.8	.676		106.7	.676		106.9	.677	
	7194	330		7374	330		7432	330		7464	330		7215	324		6954	318		6696	312		6507	306	
	54.2	390		56.8	419		57.2	425		57.8	431		59.7	431		61.7	429		63.8	427		65.6	427	
140	100.6	.594		105.0	.650		106.1	.662		107.0	.672		106.9	.672		106.8	.672		106.7	.671		107.0	.672	
	7234	330		7435	330		7495	330		7478	329		7209	323		6946	316		6686	309		6497	304	
	53.9	390		56.3	419		56.7	425		57.5	430		59.4	429		61.4	427		63.5	424		65.2	423	
150	100.8	.594		105.4	.650		106.5	.662		107.0	.669		107.0	.668		106.9	.667		106.8	.665		107.0	.666	
	7292	330		7518	330		7572	330		7471	327		7200	320		6937	314		6676	307		6485	301	
	53.4	390		55.7	419		56.1	425		57.3	428		59.1	426		61.0	423		63.0	421		64.7	420	
160	101.1	.594		105.9	.650		106.9	.662		107.1	.664		107.0	.663		107.0	.661		106.9	.659		107.2	.659	
	7372	330		7625	330		7666	330		7462	325		7190	318		6927	311		6662	304		6472	298	
	52.8	390		54.9	419		55.4	425		56.9	425		58.8	422		60.6	420		62.5	417		64.1	415	
170	101.4	.594		106.3	.650		107.3	.661		107.2	.659		107.1	.657		107.0	.655		107.0	.651		107.3	.651	
	7461	330		7737	330		7742	329		7452	322		7180	315		6914	308		6647	300		6459	294	
	52.2	390		54.1	419		54.8	424		56.6	422		58.3	419		60.1	416		62.0	412		63.5	410	
180	101.8	.594		106.8	.650		107.3	.656		107.2	.653		107.2	.651		107.1	.648		107.1	.643		107.4	.642	
	7557	330		7845	330		7732	327		7440	319		7167	312		6900	304		6634	296		6445	290	
	51.6	390		53.4	419		54.5	421		56.2	418		57.9	415		59.6	411		61.4	407		62.7	404	
190	102.2	.594		107.2	.648		107.4	.650		107.3	.647		107.3	.644		107.3	.640		107.2	.634		107.6	.631	
	7660	330		7918	329		7720	324		7429	316		7157	309		6887	300		6619	292		6429	284	
	50.9	390		52.8	418		54.1	417		55.7	414		57.4	411		59.0	406		60.6	401		61.8	398	
200	102.6	.594		107.2	.643		107.5	.644		107.4	.640		107.4	.636		107.4	.630		107.4	.622		107.8	.618	
	7770	330		7908	326		7711	321		7420	313		7144	304		6871	295		6601	286		6410	278	
	50.1	390		52.4	414		53.6	414		55.2	410		56.7	405		58.2	400		59.6	394		60.7	389	
210	103.0	.594		107.3	.637		107.6	.637		107.5	.632		107.5	.626		107.6	.618		107.6	.608		108.1	.599	
	7888	330		7897	323		7701	317		7407	309		7128	299		6852	290		6578	279		6384	269	
	49.4	390		52.0	410		53.1	409		54.6	405		56.0	399		57.3	393		58.4	384		59.1	377	
220	103.5	.594		107.4	.630		107.7	.629		107.7	.623		107.7	.615		107.8	.603		107.9	.587		108.5	.567	
	8016	330		7884	319		7689	313		7392	304		7109	294		6829	283		6544	269		6328	255	
	48.6	390		51.5	406		52.6	404		53.9	398		55.1	392		56.1	383		56.7	371		56.5	358	
230	103.9	.594		107.5	.621		107.8	.620		107.8	.611		107.9	.599		108.1	.582		108.4	.552				
	8153	330		7870	315		7675	308		7373	298		7085	286		6796	272		6490	253				
	47.8	390		50.9	400		51.9	398		53.0	391		53.9	382		54.4	370		53.8	349				
240	104.3	.591		107.6	.612		108.0	.609		108.1	.596		108.2	.578		108.6	.548							
	8230	328		7855	310		7656	302		7351	290		7055	275		6745	255							
	47.1	388		50.2	394		51.0	391		51.9	381		52.2	368		51.5	348							

ENGINE ANTI ICE ON
△FUEL = + 1 %

TOTAL ANTI ICE ON
△FUEL = + 3 %

11.0-08F0A330-200 CF6-80E1A4 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 15 FCOM-G0-03-06-50-007-015

CRUISE - MCT/330KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF
ISA+20
CG=30.0%
N1 (%)
KG/H
NM/1000KG
MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL150		FL160		FL170		FL180		FL190		FL200		FL210	
130	101.4	.594	105.8	.650	106.2	.656	106.0	.655	105.9	.654	105.7	.653	105.6	.652	105.7	.653
	7304	330	7490	330	7371	327	7086	320	6820	314	6560	307	6305	300	6113	295
	53.8	393	56.4	423	57.6	425	59.7	423	61.7	421	63.8	419	66.0	416	68.0	415
140	101.5	.594	106.0	.650	106.2	.653	106.0	.651	105.9	.650	105.8	.648	105.6	.646	105.7	.647
	7343	330	7552	330	7364	325	7077	318	6809	311	6549	304	6294	298	6101	292
	53.5	393	56.0	423	57.4	423	59.4	420	61.4	418	63.4	415	65.6	413	67.5	412
150	101.7	.594	106.1	.647	106.3	.649	106.1	.647	105.9	.645	105.8	.643	105.7	.640	105.8	.641
	7401	330	7559	329	7355	323	7068	316	6799	309	6538	302	6281	295	6089	289
	53.1	393	55.7	421	57.2	420	59.1	418	61.0	415	63.0	412	65.1	409	66.9	408
160	102.0	.594	106.1	.643	106.3	.644	106.1	.642	106.0	.639	105.9	.637	105.7	.634	105.9	.633
	7482	330	7550	326	7346	321	7058	313	6787	306	6525	299	6268	291	6076	285
	52.5	393	55.4	418	56.8	418	58.7	414	60.6	411	62.5	408	64.5	405	66.3	403
170	102.4	.594	106.2	.639	106.3	.639	106.2	.636	106.1	.633	105.9	.630	105.8	.626	106.0	.624
	7571	330	7540	324	7336	318	7047	311	6775	303	6512	295	6252	288	6060	281
	51.9	393	55.1	415	56.5	414	58.3	411	60.1	407	62.0	404	63.9	400	65.5	397
180	102.7	.594	106.2	.634	106.4	.634	106.2	.630	106.1	.626	106.0	.622	105.9	.616	106.1	.613
	7669	330	7528	321	7325	315	7034	307	6761	300	6496	291	6234	283	6041	276
	51.2	393	54.7	412	56.1	411	57.8	407	59.6	403	61.3	398	63.1	393	64.6	390
190	103.1	.594	106.3	.628	106.5	.628	106.3	.623	106.2	.618	106.1	.612	106.0	.604	106.2	.600
	7773	330	7516	318	7313	312	7021	304	6745	295	6477	287	6213	277	6019	270
	50.6	393	54.3	408	55.6	407	57.3	402	58.9	397	60.5	392	62.1	386	63.4	382
200	103.5	.594	106.3	.621	106.5	.620	106.4	.614	106.3	.608	106.2	.600	106.1	.589	106.4	.581
	7885	330	7503	315	7299	308	7005	299	6727	290	6456	281	6182	270	5985	261
	49.8	393	53.8	404	55.1	402	56.6	397	58.1	391	59.6	385	60.9	376	61.7	369
210	103.8	.593	106.4	.614	106.6	.612	106.5	.604	106.4	.596	106.3	.585	106.3	.567	106.7	.548
	7969	329	7486	311	7283	304	6986	294	6705	285	6426	274	6138	260	5925	246
	49.2	392	53.3	399	54.4	396	55.9	390	57.2	384	58.3	375	59.0	362	58.9	349
220	103.8	.586	106.5	.605	106.7	.602	106.6	.593	106.5	.581	106.5	.562	106.5	.532		
	7948	326	7469	306	7266	299	6965	288	6676	277	6383	262	6070	243		
	48.8	388	52.6	393	53.7	390	54.9	383	55.9	373	56.4	360	56.0	340		
230	103.8	.579	106.6	.594	106.8	.590	106.7	.577	106.7	.557	106.8	.527				
	7925	322	7447	301	7245	293	6937	280	6636	265	6317	246				
	48.4	383	51.9	386	52.8	382	53.7	372	54.0	359	53.5	338				
240	103.8	.571	106.7	.581	107.0	.574	107.0	.554	107.0	.523						
	7898	317	7421	294	7218	285	6899	269	6575	249						
	47.8	378	50.9	378	51.6	372	51.8	358	51.2	337						

ENGINE ANTI ICE ON
△FUEL = + 1 %

TOTAL ANTI ICE ON
△FUEL = + 3 %

11.0-08F0A330-200 CF6-80E1A4 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 20 FCOM-G0-03-06-50-008-015

R

CRUISE - MCT/310KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100			FL150			FL160			FL170			FL180			FL190			FL200			FL210		
130	94.8	.559		98.7	.612		99.6	.623		100.5	.635		101.6	.647		102.7	.659		103.4	.668		103.5	.670	
	6125	310		6219	310		6247	310		6273	310		6335	310		6378	310		6314	308		6134	303	
	58.2	357		61.7	383		62.3	389		62.9	395		63.2	401		63.8	407		65.0	410		66.8	410	
140	95.1	.559		99.1	.612		100.0	.623		100.9	.635		102.1	.647		103.2	.659		103.5	.663		103.6	.664	
	6194	310		6298	310		6327	310		6359	310		6433	310		6465	310		6306	305		6122	300	
	57.6	357		60.9	383		61.5	389		62.1	395		62.3	401		62.9	407		64.5	407		66.4	406	
150	95.4	.559		99.5	.612		100.4	.623		101.4	.635		102.7	.647		103.6	.658		103.5	.657		103.7	.657	
	6274	310		6388	310		6418	310		6467	310		6538	310		6541	309		6297	303		6108	297	
	56.8	357		60.0	383		60.6	389		61.1	395		61.3	401		62.1	406		64.1	403		65.8	402	
160	95.8	.559		99.9	.612		100.8	.623		102.0	.635		103.2	.647		103.7	.652		103.6	.650		103.8	.649	
	6363	310		6487	310		6517	310		6587	310		6643	310		6531	306		6287	299		6093	293	
	56.0	357		59.1	383		59.7	389		59.9	395		60.3	401		61.6	402		63.5	399		65.2	397	
170	96.2	.559		100.4	.612		101.4	.623		102.7	.635		103.8	.647		103.8	.645		103.8	.642		103.9	.641	
	6460	310		6596	310		6641	310		6717	310		6757	310		6522	303		6277	296		6080	289	
	55.2	357		58.1	383		58.6	389		58.8	395		59.3	401		61.0	398		62.9	395		64.5	392	
180	96.6	.559		100.9	.612		102.1	.623		103.3	.635		103.9	.641		103.9	.638		103.9	.633		104.1	.630	
	6566	310		6714	310		6780	310		6843	310		6762	307		6513	300		6266	291		6064	284	
	54.3	357		57.1	383		57.4	389		57.7	395		58.7	397		60.4	394		62.1	389		63.6	385	
190	97.1	.559		101.6	.612		102.8	.623		103.9	.635		104.0	.634		104.0	.629		104.1	.622		104.3	.616	
	6680	310		6849	310		6924	310		6970	310		6753	303		6503	295		6252	286		6044	278	
	53.4	357		56.0	383		56.2	389		56.6	395		58.1	392		59.7	388		61.2	382		62.4	377	
200	97.6	.559		102.2	.612		103.5	.623		104.2	.629		104.2	.625		104.2	.618		104.3	.609		104.5	.598	
	6802	310		6997	310		7064	310		6996	307		6743	299		6487	289		6234	279		6012	269	
	52.4	357		54.8	383		55.1	389		55.9	391		57.4	387		58.7	381		60.0	374		60.8	366	
210	98.2	.559		103.0	.612		104.2	.623		104.3	.620		104.3	.613		104.4	.604		104.5	.586		104.7	.556	
	6940	310		7168	310		7218	310		6985	302		6727	293		6469	283		6185	269		5891	249	
	51.4	357		53.5	383		53.9	389		55.2	385		56.4	380		57.5	372		58.2	360		57.8	340	
220	98.8	.559		103.8	.612		104.3	.614		104.5	.609		104.6	.598		104.6	.579		104.8	.539				
	7087	310		7333	310		7206	305		6972	297		6707	286		6412	271		6062	247				
	50.3	357		52.3	383		53.2	383		54.3	378		55.2	370		55.7	357		54.7	331				

ENGINE ANTI-ICE ON
△FUEL = + 1.5 %

TOTAL ANTI-ICE ON
△FUEL = + 3.5 %

10B -08F0A330-301 CF6-80E1A2 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 0 FCOM-G0-03-06-50-010-010

R

CRUISE - MCT/310KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA+10
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL150		FL160		FL170		FL180		FL190		FL200		FL210	
130	96.6	.559	100.7	.612	101.6	.623	102.5	.635	103.7	.647	104.8	.659	105.3	.666	105.5	.668
	6303	310	6414	310	6446	310	6477	310	6550	310	6590	310	6490	307	6307	302
	57.6	363	60.9	391	61.5	397	62.1	403	62.4	409	62.9	415	64.3	417	66.1	417
140	96.9	.559	101.0	.612	101.9	.623	102.9	.635	104.2	.647	105.3	.659	105.4	.661	105.6	.662
	6375	310	6496	310	6529	310	6572	310	6651	310	6680	310	6482	305	6294	299
	57.0	363	60.2	391	60.7	397	61.2	403	61.4	409	62.1	415	63.9	414	65.7	413
150	97.3	.559	101.5	.612	102.4	.623	103.5	.635	104.7	.647	105.5	.656	105.5	.655	105.7	.655
	6458	310	6590	310	6623	310	6684	310	6753	310	6721	309	6472	302	6280	296
	56.2	363	59.3	391	59.9	397	60.2	403	60.5	409	61.4	413	63.4	410	65.1	409
160	97.6	.559	101.9	.612	102.8	.623	104.1	.635	105.3	.647	105.6	.650	105.6	.648	105.8	.647
	6550	310	6692	310	6727	310	6806	310	6860	310	6711	306	6462	298	6266	292
	55.5	363	58.4	391	59.0	397	59.1	403	59.6	409	61.0	409	62.8	406	64.5	404
170	98.1	.559	102.4	.612	103.4	.623	104.7	.635	105.8	.646	105.7	.644	105.7	.641	105.9	.639
	6650	310	6805	310	6859	310	6937	310	6955	309	6702	302	6453	295	6252	288
	54.6	363	57.4	391	57.8	397	58.0	403	58.6	408	60.4	405	62.2	401	63.8	399
180	98.5	.559	102.9	.612	104.1	.623	105.3	.635	105.9	.639	105.8	.637	105.8	.632	106.0	.628
	6760	310	6928	310	7003	310	7065	310	6946	306	6694	299	6441	290	6235	283
	53.7	363	56.4	391	56.6	397	57.0	403	58.1	404	59.8	400	61.4	396	62.9	392
190	99.0	.559	103.6	.612	104.8	.623	106.0	.635	106.0	.632	106.0	.627	106.0	.620	106.2	.614
	6878	310	7071	310	7151	310	7195	310	6938	302	6682	294	6426	285	6214	277
	52.8	363	55.3	391	55.5	397	55.9	403	57.5	399	59.0	394	60.5	389	61.7	383
200	99.5	.559	104.3	.612	105.5	.623	106.1	.627	106.1	.623	106.1	.616	106.2	.606	106.5	.595
	7006	310	7223	310	7290	310	7185	306	6927	298	6666	288	6408	278	6177	267
	51.8	363	54.1	391	54.4	397	55.3	398	56.8	393	58.1	387	59.3	380	60.1	371
210	100.1	.559	105.1	.612	106.1	.622	106.2	.618	106.3	.611	106.4	.601	106.4	.583	106.6	.551
	7149	310	7400	310	7417	309	7174	301	6911	292	6647	281	6352	267	6044	247
	50.8	363	52.8	391	53.3	396	54.6	392	55.8	386	56.9	378	57.5	365	56.9	344
220	100.7	.559	105.8	.612	106.2	.612	106.4	.607	106.5	.596	106.6	.576	106.7	.535		
	7302	310	7565	310	7401	304	7160	295	6886	284	6585	269	6223	244		
	49.7	363	51.7	391	52.6	389	53.7	384	54.6	376	55.0	362	53.8	335		

ENGINE ANTI-ICE ON
△FUEL = + 1.5 %

TOTAL ANTI-ICE ON
△FUEL = + 3.5 %

10B -08F0A330--301 CF6--80E1A2 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 10 FCOM-G0--03--06--50--011--010

CRUISE - MCT/310KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL170		FL180		FL190		FL200		FL210		FL220		FL230	
130	94.3	.559	100.0	.635	101.0	.647	102.2	.659	103.2	.672	104.5	.685	106.0	.698	106.6	.702
	6029	310	6173	310	6217	310	6274	310	6300	310	6351	310	6424	310	6299	306
	59.2	357	64.0	395	64.5	401	64.8	407	65.5	413	66.0	419	66.2	425	67.6	426
140	94.6	.559	100.4	.635	101.5	.647	102.6	.659	103.7	.672	105.1	.685	106.4	.696	106.7	.696
	6089	310	6254	310	6316	310	6364	310	6392	310	6456	310	6483	309	6289	303
	58.6	357	63.1	395	63.4	401	63.9	407	64.6	413	64.9	419	65.4	424	67.2	422
150	94.9	.559	100.8	.635	102.1	.647	103.1	.659	104.3	.672	105.8	.685	106.5	.690	106.8	.689
	6164	310	6344	310	6422	310	6458	310	6497	310	6570	310	6472	306	6274	300
	57.9	357	62.2	395	62.4	401	63.0	407	63.5	413	63.8	419	64.9	420	66.7	418
160	95.3	.559	101.4	.635	102.6	.647	103.7	.659	105.0	.672	106.3	.683	106.7	.683	107.0	.681
	6248	310	6458	310	6534	310	6562	310	6618	310	6653	309	6459	303	6257	296
	57.1	357	61.1	395	61.3	401	62.0	407	62.4	413	62.8	418	64.4	416	66.1	413
170	95.7	.559	102.0	.635	103.2	.647	104.3	.659	105.8	.672	106.5	.676	106.8	.674	107.1	.672
	6337	310	6581	310	6642	310	6676	310	6751	310	6643	306	6443	299	6238	292
	56.3	357	60.0	395	60.3	401	60.9	407	61.1	413	62.3	414	63.8	411	65.3	408
180	96.1	.559	102.6	.635	103.8	.647	105.1	.659	106.3	.669	106.6	.668	107.0	.665	107.3	.660
	6432	310	6713	310	6758	310	6814	310	6824	308	6631	302	6426	294	6215	286
	55.4	357	58.8	395	59.3	401	59.7	407	60.2	411	61.6	409	63.0	405	64.5	401
190	96.5	.559	103.3	.635	104.4	.647	105.9	.659	106.4	.661	106.8	.658	107.2	.653	107.6	.646
	6535	310	6838	310	6882	310	6963	310	6815	305	6615	297	6406	289	6189	280
	54.6	357	57.7	395	58.2	401	58.4	407	59.5	406	60.9	403	62.1	398	63.4	392
200	97.0	.559	103.9	.635	105.3	.647	106.6	.657	106.6	.651	107.0	.646	107.5	.639	107.9	.628
	6648	310	6972	310	7040	310	7067	309	6805	300	6597	292	6381	283	6154	272
	53.6	357	56.6	395	56.9	401	57.3	405	58.8	400	59.9	395	61.0	390	62.0	381
210	97.5	.559	104.7	.635	106.2	.647	106.8	.647	106.9	.640	107.3	.632	107.8	.620	108.4	.600
	6770	310	7118	310	7211	310	7058	304	6791	294	6576	285	6348	274	6103	259
	52.7	357	55.5	395	55.6	401	56.6	399	57.9	393	58.8	387	59.5	378	59.7	364
220	98.1	.559	105.6	.635	106.9	.643	107.0	.636	107.2	.625	107.7	.612	108.3	.588		
	6906	310	7299	310	7314	308	7046	299	6772	287	6545	275	6281	259		
	51.6	357	54.1	395	54.5	398	55.7	392	56.7	384	57.2	374	57.1	359		
230	98.6	.559	106.6	.635	107.1	.632	107.3	.621	107.6	.604	108.2	.577				
	7050	310	7489	310	7304	303	7028	291	6747	277	6466	259				
	50.6	357	52.7	395	53.6	392	54.5	383	55.0	371	54.6	353				
240	99.2	.559	107.2	.629	107.4	.618	107.8	.600	108.2	.565						
	7201	310	7565	307	7288	295	7003	281	6657	259						
	49.5	357	51.7	391	52.5	382	52.8	370	52.2	347						

ENGINE ANTI ICE ON
△FUEL = + 1 %

TOTAL ANTI ICE ON
△FUEL = + 3 %

11.0-08F0A330-200 CF6-80E1A4 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 0 FCOM-G0-03-06-50-009-015

CRUISE - MCT/310KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF
ISA+10
CG=30.0%
N1 (%)
KG/H
NM/1000KG
MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL170		FL180		FL190		FL200		FL210		FL220		FL230	
130	96.2	.559	102.0	.635	103.1	.647	104.2	.659	105.3	.672	106.6	.685	108.2	.698	108.6	.700
	6203	310	6373	310	6428	310	6485	310	6512	310	6569	310	6646	310	6482	305
	58.6	363	63.2	403	63.6	409	64.0	415	64.6	421	65.1	427	65.3	434	66.9	434
140	96.5	.559	102.4	.635	103.6	.647	104.7	.659	105.8	.672	107.2	.685	108.4	.694	108.7	.694
	6266	310	6457	310	6530	310	6575	310	6606	310	6678	310	6668	308	6470	302
	58.0	363	62.3	403	62.6	409	63.1	415	63.7	421	64.0	427	64.7	431	66.5	430
150	96.8	.559	102.9	.635	104.1	.647	105.2	.659	106.4	.672	107.9	.685	108.5	.688	108.8	.687
	6344	310	6556	310	6639	310	6672	310	6719	310	6796	310	6656	305	6455	299
	57.3	363	61.4	403	61.5	409	62.2	415	62.7	421	62.9	427	64.3	428	65.9	426
160	97.1	.559	103.4	.635	104.7	.647	105.8	.659	107.1	.672	108.3	.681	108.6	.681	109.0	.679
	6430	310	6674	310	6749	310	6779	310	6844	310	6841	308	6643	302	6438	295
	56.5	363	60.3	403	60.5	409	61.2	415	61.5	421	62.1	425	63.7	423	65.3	421
170	97.5	.559	104.0	.635	105.3	.647	106.4	.659	107.9	.672	108.4	.674	108.8	.673	109.1	.670
	6522	310	6801	310	6860	310	6902	310	6980	310	6831	305	6627	298	6418	291
	55.7	363	59.2	403	59.6	409	60.1	415	60.3	421	61.6	421	63.1	418	64.6	415
180	97.9	.559	104.7	.635	105.9	.647	107.2	.659	108.2	.667	108.6	.666	109.0	.663	109.3	.658
	6621	310	6933	310	6979	310	7044	310	7015	308	6818	301	6609	293	6395	285
	54.9	363	58.1	403	58.5	409	58.9	415	59.6	418	61.0	416	62.3	412	63.7	408
190	98.4	.559	105.3	.635	106.5	.647	108.0	.659	108.4	.659	108.8	.656	109.2	.651	109.6	.644
	6728	310	7060	310	7112	310	7197	310	7006	304	6802	296	6589	288	6368	279
	54.0	363	57.0	403	57.5	409	57.6	415	58.9	413	60.2	409	61.4	405	62.7	399
200	98.9	.559	106.0	.635	107.4	.647	108.5	.655	108.6	.649	109.0	.644	109.4	.637	109.9	.626
	6845	310	7198	310	7275	310	7262	308	6997	299	6784	291	6564	282	6331	271
	53.1	363	55.9	403	56.2	409	56.7	412	58.2	407	59.3	402	60.3	396	61.2	388
210	99.4	.559	106.7	.635	108.3	.647	108.7	.645	108.9	.638	109.3	.630	109.8	.618	110.4	.597
	6973	310	7353	310	7451	310	7253	303	6981	293	6762	284	6530	273	6271	257
	52.1	363	54.7	403	54.8	409	55.9	406	57.2	399	58.1	393	58.8	384	58.9	370
220	100.0	.559	107.7	.635	108.8	.641	109.0	.634	109.2	.622	109.7	.609	110.3	.584		
	7114	310	7539	310	7514	307	7241	297	6962	286	6731	274	6452	257		
	51.1	363	53.4	403	53.9	405	55.1	399	56.0	390	56.5	380	56.3	363		
230	100.5	.559	108.7	.635	109.0	.630	109.3	.619	109.6	.601	110.2	.572				
	7263	310	7735	310	7504	302	7222	290	6936	276	6641	257				
	50.0	363	52.0	403	53.0	398	53.9	389	54.3	377	53.8	357				
240	101.1	.559	109.1	.626	109.4	.615	109.7	.597	110.2	.560						
	7420	310	7771	306	7486	294	7191	279	6836	256						
	49.0	363	51.1	397	51.9	388	52.2	375	51.3	351						

ENGINE ANTI ICE ON
△FUEL = + 1 %

TOTAL ANTI ICE ON
△FUEL = + 3 %

11.0-08F0A330-200 CF6-80E1A4 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 10 FCOM-G0-03-06-50-010-015

R

CRUISE - MCT/310KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA+15
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL150		FL160		FL170		FL180		FL190		FL200		FL210	
130	97.5	.559	101.7	.612	102.6	.623	103.5	.635	104.7	.647	104.6	.646	104.5	.645	104.6	.646
	6395	310	6514	310	6547	310	6579	310	6656	310	6414	304	6168	297	5986	292
	57.3	366	60.5	394	61.1	400	61.8	406	62.0	412	64.0	410	66.1	408	68.0	407
140	97.8	.559	102.0	.612	102.9	.623	103.9	.635	104.8	.643	104.7	.641	104.5	.639	104.7	.640
	6467	310	6597	310	6631	310	6678	310	6654	308	6404	301	6156	294	5975	289
	56.7	366	59.8	394	60.4	400	60.8	406	61.6	410	63.6	407	65.7	404	67.5	403
150	98.2	.559	102.4	.612	103.3	.623	104.5	.635	104.8	.638	104.7	.635	104.6	.633	104.8	.633
	6552	310	6692	310	6727	310	6791	310	6643	305	6392	298	6143	291	5962	285
	55.9	366	58.9	394	59.5	400	59.8	406	61.2	406	63.1	403	65.1	400	66.9	399
160	98.6	.559	102.9	.612	103.8	.623	105.0	.634	104.9	.631	104.8	.628	104.7	.625	104.8	.625
	6645	310	6797	310	6835	310	6889	309	6630	302	6377	295	6128	287	5948	282
	55.1	366	58.0	394	58.6	400	58.9	406	60.7	402	62.6	399	64.5	395	66.2	394
170	99.0	.559	103.4	.612	104.5	.623	105.0	.628	104.9	.624	104.8	.621	104.7	.616	104.9	.614
	6748	310	6911	310	6969	310	6876	306	6616	299	6363	291	6112	283	5931	277
	54.3	366	57.1	394	57.4	400	58.4	402	60.1	398	62.0	394	63.8	390	65.3	387
180	99.4	.559	103.9	.612	105.1	.623	105.1	.621	105.0	.617	104.9	.611	104.8	.605	105.1	.601
	6859	310	7035	310	7114	310	6861	303	6600	295	6344	286	6091	278	5910	270
	53.4	366	56.1	394	56.3	400	57.9	397	59.5	393	61.2	388	62.8	382	64.1	379
190	99.9	.559	104.6	.612	105.3	.618	105.2	.612	105.1	.606	105.0	.599	104.9	.590	105.2	.583
	6979	310	7183	310	7127	307	6845	298	6581	290	6322	281	6065	271	5875	262
	52.5	366	54.9	394	55.6	397	57.2	392	58.7	387	60.2	381	61.6	374	62.6	368
200	100.5	.559	105.2	.611	105.4	.609	105.3	.602	105.2	.594	105.1	.585	105.1	.569	105.5	.549
	7110	310	7310	309	7109	302	6825	293	6559	284	6295	273	6025	260	5810	246
	51.5	366	53.8	394	55.0	391	56.4	385	57.8	379	59.0	371	59.7	360	59.6	346
210	101.0	.559	105.2	.601	105.5	.598	105.4	.590	105.3	.579	105.3	.562	105.4	.532	105.9	.500
	7257	310	7290	304	7089	297	6805	287	6532	276	6256	262	5961	243	5714	223
	50.5	366	53.2	388	54.2	384	55.5	377	56.5	369	57.0	357	56.5	337	55.1	315
220	101.6	.559	105.3	.590	105.6	.587	105.5	.574	105.6	.555	105.7	.524				
	7410	310	7268	299	7072	291	6780	279	6494	264	6194	244				
	49.5	366	52.3	380	53.3	377	54.2	367	54.4	354	53.7	333				

ENGINE ANTI-ICE ON
△FUEL = + 1.5 %

TOTAL ANTI-ICE ON
△FUEL = + 3.5 %

10B -08F0A330-301 CF6-80E1A2 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 15 FCOM-G0-03-06-50-012-010

R

CRUISE - MCT/310KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF
ISA+20
CG=30.0%
N1 (%)
KG/H
NM/1000KG
MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL150		FL160		FL170		FL180		FL190		FL200		FL210	
130	98.4	.559	102.6	.612	103.5	.623	104.4	.635	104.2	.633	104.0	.631	103.9	.629	103.9	.629
	6488	310	6614	310	6647	310	6666	310	6407	303	6156	296	5910	289	5720	283
	57.0	370	60.2	398	60.8	404	61.5	410	63.6	407	65.7	405	68.0	402	69.9	400
140	98.7	.559	103.0	.612	103.9	.623	104.4	.630	104.2	.628	104.1	.625	103.9	.622	104.0	.621
	6562	310	6698	310	6733	310	6656	307	6395	300	6143	293	5895	286	5705	280
	56.3	370	59.4	398	60.0	404	61.1	407	63.2	404	65.3	401	67.4	397	69.3	395
150	99.1	.559	103.4	.612	104.3	.623	104.5	.625	104.3	.622	104.1	.619	103.9	.615	104.0	.613
	6648	310	6794	310	6830	310	6644	305	6382	297	6128	290	5879	282	5688	276
	55.6	370	58.6	398	59.1	404	60.7	403	62.7	400	64.7	396	66.8	392	68.6	390
160	99.5	.559	103.8	.612	104.7	.622	104.5	.619	104.3	.615	104.2	.611	104.0	.606	104.1	.602
	6743	310	6900	310	6907	309	6631	302	6367	294	6111	286	5860	278	5667	271
	54.8	370	57.7	398	58.4	403	60.2	399	62.1	396	64.0	391	66.0	387	67.6	383
170	99.9	.559	104.3	.612	104.7	.616	104.5	.611	104.4	.607	104.2	.601	104.0	.594	104.1	.589
	6847	310	7016	310	6894	306	6615	298	6351	290	6092	282	5832	272	5636	264
	54.0	370	56.7	398	57.9	399	59.7	395	61.5	391	63.3	385	65.0	379	66.4	374
	100.4	.559	104.6	.609	104.8	.609	104.6	.604	104.4	.597	104.3	.589	104.1	.579	104.2	.570
180	6961	310	7075	308	6878	302	6599	294	6327	285	6060	275	5793	265	5596	256
	53.1	370	56.0	396	57.3	394	59.0	390	60.7	384	62.3	377	63.8	369	64.8	363
190	100.9	.559	104.7	.602	104.8	.600	104.6	.593	104.5	.584	104.3	.573	104.1	.556	104.4	.540
	7083	310	7060	305	6862	298	6573	289	6295	279	6022	268	5738	254	5535	242
	52.2	370	55.5	392	56.7	389	58.2	383	59.7	376	61.0	367	61.8	355	62.1	344
200	101.4	.559	104.7	.593	104.9	.590	104.7	.580	104.5	.568	104.4	.549	104.3	.520	104.6	.496
	7216	310	7037	300	6834	293	6541	282	6256	271	5965	256	5663	237	5456	221
	51.2	370	54.8	385	55.9	382	57.3	375	58.4	365	58.9	352	58.7	332	57.8	315
210	102.0	.559	104.8	.581	104.9	.577	104.8	.563	104.6	.543	104.5	.512				
	7362	310	7006	294	6804	286	6502	274	6201	258	5889	238				
	50.2	370	54.0	378	54.9	374	55.9	364	56.3	349	55.7	328				
220	102.6	.559	104.8	.568	105.0	.559	104.9	.537	104.8	.507						
	7518	310	6971	287	6764	277	6447	261	6130	241						
	49.2	370	53.0	369	53.6	362	53.8	347	53.2	326						

ENGINE ANTI-ICE ON
△FUEL = + 1.5 %

TOTAL ANTI-ICE ON
△FUEL = + 3.5 %

10B -08F0A330--301 CF6--80E1A2 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 20 FCOM-G0--03--06--50--013--010

CRUISE - MCT/310KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA+15
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100			FL170			FL180			FL190			FL200			FL210			FL220			FL230		
130	97.1	.559		103.0	.635		104.1	.647		105.3	.659		106.3	.672		106.9	.677		107.1	.678		107.3	.679	
	6292	310		6473	310		6532	310		6588	310		6617	310		6507	306		6312	301		6115	295	
	58.2	366		62.8	406		63.1	412		63.5	419		64.2	425		65.6	427		67.5	426		69.4	425	
140	97.4	.559		103.4	.635		104.6	.647		105.7	.659		106.7	.671		107.0	.672		107.2	.673		107.4	.673	
	6357	310		6558	310		6636	310		6680	310		6686	309		6497	304		6302	298		6106	292	
	57.6	366		62.0	406		62.2	412		62.7	419		63.5	424		65.2	423		67.0	422		68.9	421	
150	97.7	.559		103.9	.635		105.2	.647		106.2	.659		106.8	.665		107.0	.666		107.3	.666		107.5	.665	
	6436	310		6662	310		6746	310		6778	310		6676	307		6485	301		6292	295		6095	289	
	56.9	366		61.0	406		61.1	412		61.8	419		63.0	421		64.7	420		66.4	418		68.3	416	
160	98.1	.559		104.4	.635		105.7	.647		106.8	.659		106.9	.659		107.2	.659		107.4	.658		107.6	.657	
	6524	310		6782	310		6855	310		6887	310		6662	304		6472	298		6280	291		6084	285	
	56.2	366		59.9	406		60.2	412		60.8	419		62.5	417		64.1	415		65.8	413		67.5	411	
170	98.5	.559		105.1	.635		106.3	.647		107.0	.655		107.0	.651		107.3	.651		107.5	.649		107.8	.647	
	6618	310		6910	310		6968	310		6914	308		6647	300		6459	294		6266	287		6072	280	
	55.4	366		58.8	406		59.2	412		60.1	416		62.0	412		63.5	410		65.1	408		66.6	405	
180	98.9	.559		105.7	.635		106.9	.647		107.1	.648		107.1	.643		107.4	.642		107.7	.639		108.0	.635	
	6718	310		7042	310		7088	310		6900	304		6634	296		6445	290		6253	282		6058	275	
	54.6	366		57.7	406		58.2	412		59.6	411		61.4	407		62.7	404		64.2	401		65.6	397	
190	99.3	.559		106.3	.635		107.3	.644		107.3	.640		107.2	.634		107.6	.631		107.9	.626		108.3	.619	
	6827	310		7170	310		7157	309		6887	300		6619	292		6429	284		6236	277		6037	268	
	53.7	366		56.7	406		57.4	411		59.0	406		60.6	401		61.8	398		63.1	393		64.1	387	
200	99.8	.559		107.0	.635		107.4	.636		107.4	.630		107.4	.622		107.8	.618		108.2	.610		108.8	.594	
	6946	310		7310	310		7144	304		6871	295		6601	286		6410	278		6215	269		5999	256	
	52.8	366		55.6	406		56.7	405		58.2	400		59.6	394		60.7	389		61.6	383		61.9	372	
210	100.3	.559		107.5	.632		107.5	.626		107.6	.618		107.6	.608		108.1	.599		108.7	.581		109.4	.544	
	7077	310		7407	309		7128	299		6852	290		6578	279		6384	269		6164	256		5902	234	
	51.8	366		54.6	405		56.0	399		57.3	393		58.4	384		59.1	377		59.2	365		57.6	340	
220	100.9	.559		107.7	.623		107.7	.615		107.8	.603		107.9	.587		108.5	.567							
	7221	310		7392	304		7109	294		6829	283		6544	269		6328	255							
	50.8	366		53.9	398		55.1	392		56.1	383		56.7	371		56.5	358							
230	101.5	.559		107.8	.611		107.9	.599		108.1	.582		108.4	.552										
	7371	310		7373	298		7085	286		6796	272		6490	253										
	49.7	366		53.0	391		53.9	382		54.4	370		53.8	349										
240	102.1	.559		108.1	.596		108.2	.578		108.6	.548													
	7529	310		7351	290		7055	275		6745	255													
	48.7	366		51.9	381		52.2	368		51.5	348													

ENGINE ANTI ICE ON
△FUEL = + 1 %

TOTAL ANTI ICE ON
△FUEL = + 3 %

11.0-08F0A330-200 CF6-80E1A4 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 15 FCOM-G0-03-06-50-011-015

CRUISE - MCT/310KT - 1 ENGINE OUT

MAX. CONTINUOUS THRUST
PACK FLOW HI
ANTI-ICING OFF
ISA+20
CG=30.0%

N1 (%)
KG/H
NM/1000KG

MACH
IAS (KT)
TAS (KT)

WEIGHT (1000KG)	FL100		FL170		FL180		FL190		FL200		FL210		FL220		FL230	
130	98.0	.559	104.0	.635	105.1	.647	105.7	.653	105.6	.652	105.7	.653	105.8	.654	105.8	.654
	6384	310	6573	310	6637	310	6560	307	6305	300	6113	295	5916	289	5718	283
	57.9	370	62.4	410	62.7	416	63.8	419	66.0	416	68.0	415	70.0	414	72.2	413
140	98.3	.559	104.4	.635	105.6	.647	105.8	.648	105.6	.646	105.7	.647	105.8	.647	105.9	.647
	6450	310	6660	310	6741	310	6549	304	6294	298	6101	292	5904	286	5707	280
	57.3	370	61.6	410	61.7	416	63.4	415	65.6	413	67.5	412	69.5	410	71.5	408
150	98.6	.559	104.9	.635	105.9	.645	105.8	.643	105.7	.640	105.8	.641	105.9	.640	106.0	.639
	6530	310	6767	310	6799	309	6538	302	6281	295	6089	289	5893	283	5696	277
	56.6	370	60.6	410	61.0	415	63.0	412	65.1	409	66.9	408	68.8	406	70.8	403
160	99.0	.559	105.4	.635	106.0	.639	105.9	.637	105.7	.634	105.9	.633	106.0	.632	106.1	.629
	6619	310	6889	310	6787	306	6525	299	6268	291	6076	285	5879	279	5682	272
	55.9	370	59.5	410	60.6	411	62.5	408	64.5	405	66.3	403	68.1	400	69.9	397
170	99.4	.559	106.1	.635	106.1	.633	105.9	.630	105.8	.626	106.0	.624	106.1	.621	106.3	.617
	6715	310	7019	310	6775	303	6512	295	6252	288	6060	281	5863	274	5664	267
	55.1	370	58.4	410	60.1	407	62.0	404	63.9	400	65.5	397	67.2	394	68.8	389
180	99.8	.559	106.2	.630	106.1	.626	106.0	.622	105.9	.616	106.1	.613	106.3	.609	106.5	.601
	6817	310	7034	307	6761	300	6496	291	6234	283	6041	276	5845	268	5641	259
	54.2	370	57.8	407	59.6	403	61.3	398	63.1	393	64.6	390	66.0	386	67.3	379
190	100.2	.559	106.3	.623	106.2	.618	106.1	.612	106.0	.604	106.2	.600	106.4	.591	106.8	.577
	6928	310	7021	304	6745	295	6477	287	6213	277	6019	270	5816	260	5605	249
	53.4	370	57.3	402	58.9	397	60.5	392	62.1	386	63.4	382	64.4	375	65.0	364
200	100.7	.559	106.4	.614	106.3	.608	106.2	.600	106.1	.589	106.4	.581	106.7	.563	107.3	.536
	7049	310	7005	299	6727	290	6456	281	6182	270	5985	261	5769	247	5546	230
	52.4	370	56.6	397	58.1	391	59.6	385	60.9	376	61.7	369	61.9	357	61.0	338
210	101.3	.559	106.5	.604	106.4	.596	106.3	.585	106.3	.567	106.7	.548				
	7183	310	6986	294	6705	285	6426	274	6138	260	5925	246				
	51.5	370	55.9	390	57.2	384	58.3	375	59.0	362	58.9	349				
220	101.8	.559	106.6	.593	106.5	.581	106.5	.562	106.5	.532						
	7326	310	6965	288	6676	277	6383	262	6070	243						
	50.5	370	54.9	383	55.9	373	56.4	360	56.0	340						
230	102.4	.559	106.7	.577	106.7	.557	106.8	.527								
	7478	310	6937	280	6636	265	6317	246								
	49.4	370	53.7	372	54.0	359	53.5	338								
240	103.0	.559	107.0	.554	107.0	.523										
	7639	310	6899	269	6575	249										
	48.4	370	51.8	358	51.2	337										

ENGINE ANTI ICE ON
△FUEL = + 1 %

TOTAL ANTI ICE ON
△FUEL = + 3 %

11.0-08F0A330-200 CF6-80E1A4 12300010C6KG300 0 018590 0 0 3 1.0 .0 .00 0 01100.000 .000 .000 20 FCOM-G0-03-06-50-012-015

IN CRUISE QUICK CHECK AT FIXED SPEEDS

The following in cruise quick check tables allow the flight crew to determine the fuel consumption and the time required to cover a given air distance from any moment in cruise to landing with one engine inoperative.
These tables are established for :
- Cruise speed MCT/330kt, MCT/310kt.
- Descent profile : M.80/300kt/250kt
- Approach and landing : 240 kg or 530 lb – 6 minutes IMC
- ISA
- CG = 30 %
- Pack flow HI
- Anti ice OFF

Note : 1. In the tables, a "" means that a step climb of 4000 feet has been made to reach the corresponding flight level.*
2. The flight level shown on the top of each column is the final flight level.
3. For each degree Celsius above ISA apply a fuel correction of
0.010 (kg/°C/NM) × △ISA (°C) × Air Distance (NM)
or 0.022 (lb/°C/NM) × △ISA (°C) × Air Distance (NM)

CORRECTION FOR DEVIATION FROM REFERENCE WEIGHT

The in cruise quick check tables are based on a reference initial weight that may vary from page to page.
The fuel consumption must be corrected when the actual weight is different from the reference initial weight.
If it is lower (or greater) than the reference weight, subtract (or add) the value given in the correction part of the table per 1000 kg or 1000 lb below (or above) the reference weight (see example 3.06.50).

R

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING - ONE ENGINE FAILURE
CRUISE : MCT/330 KT - DESCENT : M.80/300/250KT
IMC PROCEDURE : 240KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
PACK FLOW HI
ANTI-ICING OFF

ISA
CG = 30.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 100	150	160	170	180	190	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL100 FL150	FL160 FL170	FL180 FL190
200	3567 0.39	3133 0.38	3012 0.38	2888 0.38	2768 0.38	2652 0.39	1	0	0
250	4521 0.47	4054 0.45	3908 0.45	3758 0.46	3612 0.46	3472 0.46	2	0	0
300	5474 0.55	4974 0.53	4804 0.53	4628 0.53	4456 0.53	4291 0.54	3	0	1
350	6426 1.03	5894 1.00	5700 1.00	5497 1.00	5299 1.01	5110 1.01	4	1	1
400	7377 1.11	6814 1.08	6594 1.08	6365 1.08	6142 1.08	5928 1.09	5	1	2
450	8326 1.19	7733 1.15	7489 1.15	7233 1.15	6984 1.16	6745 1.16	7	2	3
500	9274 1.27	8639 1.22	8382 1.22	8101 1.23	7826 1.23	7562 1.24	8	2	3
550	10222 1.35	9553 1.30	9276 1.30	8968 1.30	8667 1.30	8378 1.31	9	3	4
600	11168 1.43	10465 1.37	10168 1.37	9834 1.37	9507 1.38	9194 1.38	10	4	5
650	12113 1.51	11376 1.44	11061 1.44	10700 1.45	10347 1.45	10008 1.46	11	4	5
700	13057 1.59	12286 1.52	11952 1.52	11565 1.52	11186 1.53	10823 1.53	12	5	6
750	14000 2.06	13194 1.59	12844 1.59	12430 1.59	12025 2.00	11636 2.01	13	5	6
800	14943 2.14	14101 2.06	13735 2.06	13295 2.07	12864 2.07	12450 2.08	14	6	7
850	15884 2.22	15007 2.14	14626 2.13	14159 2.14	13702 2.15	13263 2.16	15	6	8
900	16824 2.30	15911 2.21	15516 2.21	15022 2.21	14539 2.22	14075 2.23	17	7	8
950	17763 2.38	16815 2.28	16406 2.28	15885 2.29	15377 2.30	14887 2.31	18	7	9
1000	18702 2.46	17717 2.36	17295 2.35	16748 2.36	16213 2.37	15698 2.38	19	8	9
1050	19639 2.54	18618 2.43	18184 2.43	17610 2.43	17049 2.44	16509 2.45	20	8	10
1100	20575 3.02	19518 2.51	19072 2.50	18472 2.51	17885 2.52	17319 2.53	21	9	11
1150	21510 3.10	20416 2.58	19960 2.57	19333 2.58	18720 2.59	18128 3.00	22	9	11
1200	22445 3.18	21314 3.05	20847 3.04	20193 3.05	19554 3.06	18937 3.08	24	9	12
1250	23378 3.25	22211 3.13	21734 3.12	21054 3.13	20388 3.14	19745 3.15	25	10	12
1300	24311 3.33	23108 3.20	22621 3.19	21914 3.20	21221 3.21	20553 3.22	26	10	13
1350	25242 3.41	24002 3.27	23507 3.26	22773 3.27	22055 3.28	21361 3.30	27	11	13
1400	26173 3.49	24896 3.35	24393 3.34	23632 3.35	22887 3.36	22168 3.37	29	11	14

ENGINE ANTI-ICE ON
△FUEL = + 1.5 %

TOTAL ANTI-ICE ON
△FUEL = + 3.5 %

1FLIP23 A330–301 CF6–80E1A2 3611 03001.001011 0250300 .8000 .000100 240 0300350170 0 217169100179 18590 2FCOM-G0–03–06–50–014–010

IN CRUISE QUICK CHECK AT FIXED SPEEDS

The following in cruise quick check tables allow the flight crew to determine the fuel consumption and the time required to cover a given air distance from any moment in cruise to landing with one engine inoperative.
These tables are established for :
- Cruise speed MCT/330kt, MCT/310kt.
- Descent profile : M.80/300kt/250kt
- Approach and landing : 240 kg or 530 lb – 6 minutes IMC
- ISA
- CG = 30 %
- Pack flow HI
- Anti ice OFF

Note : 1. In the tables, a "" means that a step climb of 4000 feet has been made to reach the corresponding flight level.*
2. The flight level shown on the top of each column is the final flight level.
3. For each degree Celsius above ISA apply a fuel correction of
0.010 (kg/°C/NM) × △ISA (°C) × Air Distance (NM)
or 0.022 (lb/°C/NM) × △ISA (°C) × Air Distance (NM)

CORRECTION FOR DEVIATION FROM REFERENCE WEIGHT

The in cruise quick check tables are based on a reference initial weight that may vary from page to page.
The fuel consumption must be corrected when the actual weight is different from the reference initial weight.
If it is lower (or greater) than the reference weight, subtract (or add) the value given in the correction part of the table per 1000 kg or 1000 lb below (or above) the reference weight (see example 3.06.50).

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING - ONE ENGINE FAILURE
CRUISE : MCT/330KT - DESCENT : M.80/300/250KT
IMC PROCEDURE : 240KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
PACK FLOW HI
ANTI ICING OFF

ISA
CG = 30.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 100	140	180	190	200	210	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL100 FL140	FL180 FL190	FL200 FL210
200	3564 0.38	3117 0.38	2824 0.38	2704 0.38	2589 0.38	2490 0.38	2	0	0
250	4502 0.46	4023 0.46	3698 0.45	3553 0.45	3414 0.45	3295 0.45	3	0	0
300	5438 0.54	4927 0.53	4573 0.52	4402 0.52	4237 0.52	4098 0.52	4	0	0
350	6374 1.02	5830 1.01	5447 0.59	5250 0.59	5060 0.59	4902 1.00	5	0	1
400	7309 1.10	6733 1.08	6320 1.06	6098 1.06	5883 1.07	5704 1.07	6	1	1
450	8242 1.18	7634 1.16	7193 1.13	6945 1.13	6704 1.14	6506 1.14	7	1	2
500	9175 1.26	8534 1.23	8065 1.20	7791 1.21	7526 1.21	7307 1.21	9	2	2
550	10106 1.34	9432 1.31	8937 1.27	8637 1.28	8346 1.28	8108 1.28	10	2	3
600	11036 1.42	10330 1.38	9808 1.34	9483 1.35	9167 1.35	8909 1.36	11	3	4
650	11966 1.49	11227 1.46	10679 1.41	10328 1.42	9986 1.42	9708 1.43	12	3	4
700	12894 1.57	12123 1.53	11549 1.48	11172 1.49	10805 1.50	10507 1.50	13	4	5
750	13822 2.05	13018 2.01	12419 1.55	12016 1.56	11624 1.57	11306 1.57	14	5	5
800	14749 2.13	13913 2.08	13289 2.03	12860 2.03	12442 2.04	12104 2.04	15	5	6
850	15674 2.21	14807 2.15	14159 2.10	13704 2.10	13260 2.11	12902 2.11	16	6	7
900	16599 2.29	15699 2.23	15027 2.17	14547 2.17	14078 2.18	13699 2.19	17	7	7
950	17523 2.37	16591 2.30	15896 2.24	15389 2.24	14895 2.25	14496 2.26	18	7	8
1000	18446 2.45	17482 2.38	16764 2.31	16231 2.31	15711 2.32	15293 2.33	19	8	8
1050	19368 2.53	18372 2.45	17631 2.38	17073 2.39	16527 2.40	16088 2.40	20	9	9
1100	20288 3.01	19261 2.53	18499 2.45	17914 2.46	17343 2.47	16884 2.47	21	9	9
1150	21209 3.09	20148 3.00	19365 2.52	18754 2.53	18158 2.54	17678 2.54	21	10	10
1200	22128 3.16	21035 3.08	20231 2.59	19594 3.00	18972 3.01	18473 3.01	22	11	10
1250	23046 3.24	21922 3.15	21097 3.06	20434 3.07	19787 3.08	19266 3.08	23	11	11
1300	23964 3.32	22807 3.23	21963 3.13	21273 3.14	20600 3.15	20060 3.16	24	12	11
1350	24880 3.40	23691 3.30	22829 3.20	22112 3.21	21413 3.22	20852 3.23	25	13	12
1400	25796 3.48	24574 3.38	23694 3.27	22951 3.28	22226 3.29	21645 3.30	26	14	12

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

FLIP23D A330-200 CF6-80E1A4 3611 03001.001011 0250300 .8000 .00100 240 0300 350 170 0 230 180 100 168 18590 FCOM-GO-03-06-50-014-015

R

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING - ONE ENGINE FAILURE
CRUISE : MCT/310KT - DESCENT : M.80/300/250KT
IMC PROCEDURE : 240KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
PACK FLOW HI
ANTI-ICING OFF

ISA
CG = 30.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 100	140	180	190	200	210	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL100 FL140	FL180 FL190	FL200 FL210
200	3393 0.41	3023 0.40	2763 0.38	2652 0.39	2542 0.39	2445 0.39	3	0	0
250	4295 0.50	3889 0.48	3605 0.46	3472 0.46	3338 0.46	3220 0.46	4	1	0
300	5196 0.58	4754 0.56	4445 0.53	4291 0.54	4133 0.54	3996 0.54	6	2	1
350	6095 1.06	5618 1.04	5284 1.01	5110 1.01	4928 1.01	4770 1.02	7	3	2
400	6994 1.15	6480 1.11	6122 1.08	5928 1.09	5722 1.09	5544 1.09	8	4	3
450	7891 1.23	7341 1.19	6959 1.16	6745 1.16	6515 1.17	6318 1.17	10	5	4
500	8787 1.32	8201 1.27	7795 1.23	7562 1.24	7308 1.24	7090 1.24	11	6	4
550	9681 1.40	9060 1.35	8629 1.31	8378 1.31	8100 1.32	7863 1.32	12	7	5
600	10575 1.48	9917 1.43	9462 1.38	9194 1.38	8891 1.39	8634 1.40	14	8	6
650	11467 1.57	10773 1.51	10294 1.46	10008 1.46	9682 1.47	9405 1.47	15	9	7
700	12358 2.05	11628 1.59	11125 1.53	10823 1.53	10471 1.54	10175 1.55	16	10	7
750	13249 2.14	12482 2.07	11955 2.01	11636 2.01	11261 2.02	10945 2.02	18	11	8
800	14138 2.22	13335 2.15	12784 2.08	12450 2.08	12050 2.09	11714 2.10	19	12	9
850	15026 2.30	14187 2.23	13612 2.16	13263 2.16	12838 2.17	12483 2.17	20	13	10
900	15913 2.39	15038 2.31	14438 2.23	14075 2.23	13626 2.24	13251 2.25	21	14	10
950	16798 2.47	15888 2.39	15264 2.31	14887 2.31	14413 2.32	14018 2.32	23	15	11
1000	17683 2.56	16736 2.47	16088 2.38	15698 2.38	15200 2.39	14785 2.40	24	16	12
1050	18566 3.04	17583 2.55	16912 2.46	16509 2.45	15987 2.47	15551 2.47	25	17	12
1100	19449 3.12	18430 3.03	17734 2.53	17319 2.53	16772 2.54	16317 2.55	26	18	13
1150	20330 3.21	19275 3.10	18555 3.01	18128 3.00	17557 3.01	17082 3.02	27	19	14
1200	21210 3.29	20119 3.18	19375 3.08	18937 3.08	18342 3.09	17846 3.10	29	19	14
1250	22089 3.38	20962 3.26	20194 3.16	19745 3.15	19125 3.16	18610 3.17	30	20	15
1300	22967 3.46	21804 3.34	21012 3.23	20553 3.22	19909 3.24	19373 3.25	31	21	16
1350	23844 3.54	22644 3.42	21829 3.30	21361 3.30	20691 3.31	20136 3.32	32	22	16
1400	24720 4.03	23484 3.50	22645 3.38	22168 3.37	21474 3.39	20898 3.40	33	22	17

ENGINE ANTI-ICE ON
△FUEL = + 1.5 %

TOTAL ANTI-ICE ON
△FUEL = + 3.5 %

1FLIP23 A330-301 CF6-80E1A2 3611 03001.001011 0250300 .8000 .000100 240 0300350170 0 217169100179 18590 2FCOM-GO-03-06-50-015-010

IN CRUISE QUICK CHECK FROM ANY MOMENT IN CRUISE TO LANDING - ONE ENGINE FAILURE
CRUISE : MCT/310KT - DESCENT : M.80/300/250KT
IMC PROCEDURE : 240KG (6MIN)

REF. INITIAL WEIGHT = 170000 KG
PACK FLOW HI
ANTI ICING OFF

ISA
CG = 30.0 %

FUEL CONSUMED (KG)

TIME (H.MIN)

AIR DIST. (NM)	FLIGHT LEVEL 100	150	200	210	220	230	CORRECTION ON FUEL CONSUMPTION (KG/1000KG) FL100 FL150	FL200 FL210	FL220 FL230
200	3384 0.40	2882 0.39	2573 0.38	2490 0.38	2395 0.38	2303 0.38	2	0	0
250	4270 0.48	3725 0.47	3389 0.45	3295 0.45	3180 0.45	3069 0.45	3	1	0
300	5154 0.57	4566 0.55	4205 0.52	4098 0.52	3964 0.53	3835 0.53	5	2	0
350	6037 1.05	5407 1.03	5018 1.00	4902 1.00	4748 1.00	4599 1.00	6	3	1
400	6920 1.14	6246 1.11	5831 1.07	5704 1.07	5531 1.07	5363 1.07	7	4	2
450	7801 1.22	7084 1.19	6642 1.14	6506 1.14	6314 1.14	6127 1.15	8	5	3
500	8681 1.30	7921 1.26	7452 1.22	7307 1.21	7096 1.22	6890 1.22	10	7	3
550	9560 1.39	8757 1.34	8261 1.29	8108 1.28	7877 1.29	7652 1.29	11	8	4
600	10438 1.47	9592 1.42	9068 1.36	8909 1.36	8658 1.36	8413 1.37	12	9	5
650	11314 1.56	10426 1.50	9874 1.43	9708 1.43	9438 1.43	9174 1.44	13	10	6
700	12190 2.04	11259 1.58	10679 1.51	10507 1.50	10217 1.50	9934 1.51	15	11	6
750	13065 2.13	12091 2.05	11482 1.58	11306 1.57	10996 1.58	10694 1.58	16	13	7
800	13939 2.21	12921 2.13	12285 2.05	12105 2.04	11774 2.05	11453 2.06	17	14	8
850	14811 2.29	13751 2.21	13086 2.12	12904 2.11	12552 2.12	12211 2.13	18	15	8
900	15683 2.38	14580 2.29	13886 2.20	13704 2.19	13330 2.19	12969 2.20	19	16	9
950	16554 2.46	15408 2.37	14685 2.27	14503 2.26	14107 2.26	13727 2.27	21	18	10
1000	17423 2.55	16234 2.45	15482 2.34	15301 2.33	14884 2.34	14484 2.34	22	19	10
1050	18292 3.03	17060 2.52	16279 2.41	16100 2.40	15660 2.41	15241 2.42	23	20	11
1100	19159 3.11	17884 3.00	17074 2.49	16898 2.47	16435 2.48	15997 2.49	24	21	12
1150	20026 3.20	18708 3.08	17868 2.56	17696 2.54	17210 2.55	16752 2.56	25	23	12
1200	20891 3.28	19530 3.16	18661 3.03	18493 3.02	17984 3.02	17507 3.03	26	24	13
1250	21756 3.37	20352 3.24	19452 3.10	19290 3.09	18758 3.09	18261 3.10	27	25	13
1300	22619 3.45	21172 3.31	20242 3.18	20087 3.16	19532 3.16	19015 3.18	28	26	14
1350	23482 3.53	21992 3.39	21032 3.25	20883 3.23	20304 3.24	19768 3.25	30	28	15
1400	24343 4.02	22810 3.47	21820 3.32	21680 3.30	21077 3.31	20520 3.32	31	29	15

ENGINE ANTI ICE ON
△FUEL = + 1.5 %

TOTAL ANTI ICE ON
△FUEL = + 3.5 %

FLIP23D A330-200 CF6-80E1A4 3611 03001.001011 0250300 .8000 .00100 240 0300 350 170 0 230 180 100 168 18590 FCOM-GO-03-06-50-015-015

HOLDING

R

RACE TRACK HOLDING PATTERN - GREEN DOT SPEED - 1 ENGINE OUT

MAX. CONTINUOUS THRUST LIMITS
CLEAN CONFIGURATION
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

N1 (%)
FF (KG/H)

WEIGHT (1000KG)	FL 15	FL 50	FL100	FL120	FL140	FL160	FL180	FL200
130	71.4 3273	74.4 3274	78.8 3311	80.7 3325	82.4 3333	84.2 3343	86.0 3365	88.0 3390
140	73.6 3532	76.7 3554	81.2 3596	82.9 3602	84.7 3612	86.4 3635	88.3 3660	90.3 3694
150	75.7 3809	78.8 3841	83.2 3870	85.0 3878	86.7 3903	88.6 3928	90.5 3965	92.5 4001
160	77.7 4095	80.8 4128	85.1 4146	86.8 4169	88.7 4196	90.5 4233	92.6 4271	94.7 4321
170	79.6 4383	82.7 4405	86.9 4435	88.7 4463	90.5 4498	92.5 4539	94.6 4589	96.9 4655
180	81.4 4672	84.3 4679	88.6 4728	90.5 4762	92.3 4805	94.4 4853	96.6 4916	99.3 5014
190	83.1 4942	85.9 4953	90.3 5023	92.1 5069	94.1 5114	96.2 5177	98.7 5260	101.9 5409
200	84.5 5215	87.5 5235	91.9 5329	93.8 5377	95.8 5437	98.1 5515	100.9 5636	104.8 5838
210	86.0 5490	88.9 5530	93.4 5637	95.4 5691	97.5 5766	100.0 5866	103.4 6045	107.6 6276
220	87.4 5766	90.4 5826	94.9 5948	96.9 6019	99.2 6112	102.1 6248	105.9 6477	110.7 6748

ENGINE ANTI-ICE ON	**TOTAL ANTI-ICE ON**	**per 1° above ISA**
△FUEL = + 2 %	△FUEL = + 4 %	△FUEL = + 0.3 %

Note : Correction for straight line holding : – 5 %

HOLDING

R

RACE TRACK HOLDING PATTERN - GREEN DOT SPEED - 1 ENGINE OUT								
MAX. CONTINUOUS THRUST LIMITS CLEAN CONFIGURATION PACK FLOW HI ANTI-ICING OFF					ISA CG=30.0%		**N1 (%)** **FF (KG/H)**	
WEIGHT (1000KG)	**FL 15**	**FL 50**	**FL100**	**FL120**	**FL140**	**FL160**	**FL180**	**FL200**
130	69.9 3114	73.0 3111	77.4 3141	79.2 3154	80.9 3158	82.7 3163	84.5 3181	86.4 3202
140	72.2 3364	75.2 3373	79.7 3410	81.4 3413	83.1 3418	84.9 3435	86.7 3458	88.6 3487
150	74.2 3618	77.3 3642	81.7 3667	83.4 3673	85.2 3687	87.0 3712	88.9 3742	90.9 3784
160	76.2 3884	79.3 3914	83.5 3927	85.3 3938	87.1 3965	89.0 3993	90.9 4036	93.1 4092
170	78.1 4155	81.1 4176	85.4 4189	87.1 4216	89.0 4244	90.8 4286	92.9 4340	95.2 4414
180	79.9 4429	82.8 4431	87.0 4465	88.8 4496	90.7 4534	92.7 4588	94.9 4660	97.5 4751
190	81.5 4685	84.3 4691	88.7 4745	90.5 4780	92.4 4834	94.6 4903	96.9 4992	99.9 5117
200	83.0 4939	85.9 4952	90.3 5026	92.1 5078	94.2 5142	96.4 5228	99.0 5336	102.6 5528
210	84.4 5197	87.4 5218	91.8 5319	93.7 5383	95.9 5465	98.2 5568	101.3 5718	105.4 5968
220	85.8 5458	88.7 5498	93.3 5621	95.3 5696	97.5 5796	100.1 5919	103.8 6140	108.4 6422
230	87.1 5722	90.1 5781	94.7 5932	96.9 6025	99.2 6139	102.2 6306	106.4 6586	111.6 6914
240	88.5 5993	91.4 6067	96.2 6251	98.4 6361	101.0 6494	104.5 6735	109.1 7047	114.9 7444
ENGINE ANTI-ICE ON △FUEL = + 2 %			**TOTAL ANTI-ICE ON** △FUEL = + 4 %			**per 1° above ISA** △FUEL = + 0.3 %		

Note : Correction for straight line holding : – 5 %

DESCENT TO LANDING

DESCENT - M.82/300KT/250KT - 1 ENGINE OUT

IDLE THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

WEIGHT (1000KG)	150				200				
FL	TIME (MIN)	FUEL (KG)	DIST. (NM)	N1	TIME (MIN)	FUEL (KG)	DIST. (NM)	N1	IAS (KT)
410	19.3	269	120	IDLE					243
390	18.5	258	113	IDLE	21.6	300	132	IDLE	255
370	17.8	248	107	IDLE	20.7	289	126	IDLE	267
350	17.1	240	102	IDLE	20.0	280	120	IDLE	279
330	16.5	232	97	IDLE	19.3	271	114	IDLE	292
310	15.9	224	92	IDLE	18.5	261	108	IDLE	300
290	15.0	214	86	IDLE	17.6	249	101	IDLE	300
270	14.2	203	80	IDLE	16.6	236	93	IDLE	300
250	13.4	192	74	IDLE	15.6	223	86	IDLE	300
240	13.0	187	71	IDLE	15.1	217	83	IDLE	300
220	12.1	176	65	IDLE	14.1	203	76	IDLE	300
200	11.3	164	59	IDLE	13.0	190	69	IDLE	300
180	10.4	153	53	IDLE	12.0	176	62	IDLE	300
160	9.5	141	48	IDLE	10.9	161	55	IDLE	300
140	8.6	129	42	IDLE	9.8	146	48	IDLE	300
120	7.7	116	37	IDLE	8.7	131	42	IDLE	300
100	6.8	103	31	IDLE	7.6	115	35	IDLE	300
50	2.5	39	11	IDLE	2.8	44	12	IDLE	250
15	.0	0	0	IDLE	.0	0	0	IDLE	250

CORRECTIONS	ENGINE ANTI-ICE ON	TOTAL ANTI-ICE ON	△ISA (per 1° above ISA)
TIME	-	+10 %	+0.2 %
FUEL	+5 %	+60 %	+0.4 %
DISTANCE	-	+10 %	+0.4 %

H09F -08B1 A330-301 CF6-80E1A2 23100010C6KG300 0 0185590 0 0-1 .0 .0 .00 0 03 .820300.000250.000 0 FCOM-G0-03-06-60-001-010

DESCENT TO LANDING

DESCENT - M.82/300KT/250KT - 1 ENGINE OUT

IDLE THRUST
PACK FLOW HI
ANTI-ICING OFF

ISA
CG=30.0%

WEIGHT (1000KG)	150				200				
FL	TIME (MIN)	FUEL (KG)	DIST. (NM)	N1	TIME (MIN)	FUEL (KG)	DIST. (NM)	N1	IAS (KT)
410	19.8	275	122	IDLE					243
390	19.0	264	116	IDLE	22.2	308	136	IDLE	255
370	18.2	255	110	IDLE	21.4	298	129	IDLE	267
350	17.5	246	104	IDLE	20.6	288	123	IDLE	279
330	16.9	238	100	IDLE	19.9	280	118	IDLE	292
310	16.3	230	94	IDLE	19.1	270	111	IDLE	300
290	15.4	220	88	IDLE	18.1	257	104	IDLE	300
270	14.6	209	82	IDLE	17.1	244	96	IDLE	300
250	13.8	198	76	IDLE	16.1	231	89	IDLE	300
240	13.3	192	72	IDLE	15.6	224	85	IDLE	300
220	12.5	181	66	IDLE	14.6	211	78	IDLE	300
200	11.6	169	61	IDLE	13.5	197	71	IDLE	300
180	10.7	158	55	IDLE	12.5	183	64	IDLE	300
160	9.8	145	49	IDLE	11.4	168	57	IDLE	300
140	8.9	133	43	IDLE	10.3	153	50	IDLE	300
120	8.0	120	38	IDLE	9.2	137	44	IDLE	300
100	7.1	106	33	IDLE	8.0	121	37	IDLE	300
50	2.6	41	11	IDLE	3.0	46	13	IDLE	250
15	.0	0	0	IDLE	.0	0	0	IDLE	250

CORRECTIONS	ENGINE ANTI ICE ON	TOTAL ANTI ICE ON	per 1° above ISA
TIME	–	+ 10 %	–
FUEL	+ 5 %	+ 60 %	+ 0.5 %
DISTANCE	–	+ 10 %	+ 0.5 %

11.0-08F0A330-200 CF6-80E1A4 23100010C6KG300 0 018590 0 0-1 .0 .0 .00 0 03 .820300.000250.000 0 FCOM-G0-03-06-60-001-015

GENERAL

The ground distance/air distance conversion tables are used to calculate the air distance for a given ground distance due to the influence of the wind.
Tables are given for :
– LONG RANGE SPEED
– FIXED SPEEDS

LONG RANGE SPEED

GROUND DIST. (NM)	AIR DISTANCE (NM)						
	TAIL WIND			WIND COMPONENTS (KT)			HEAD WIND
	+150	+100	+ 50	0	-50	-100	-150
10	7	8	9	10	12	14	17
20	14	16	18	20	23	28	35
30	21	23	26	30	35	42	52
40	28	31	35	40	47	56	69
50	35	39	44	50	58	70	87
60	42	47	53	60	70	84	104
70	49	55	61	70	81	98	121
80	56	62	70	80	93	111	139
90	63	70	79	90	105	125	156
100	70	78	88	100	116	139	173
200	141	156	175	200	233	279	347
300	211	234	263	300	349	418	520
400	281	312	351	400	466	557	694
500	351	390	438	500	582	697	867
600	422	468	526	600	699	836	1040
700	492	546	613	700	815	975	1214
800	562	624	701	800	931	1114	1387
900	632	702	789	900	1048	1254	1561
1000	703	780	876	1000	1164	1393	1734
1100	773	858	964	1100	1281	1532	1907
1200	843	936	1052	1200	1397	1672	2081
1300	913	1014	1139	1300	1514	1811	2254
1400	984	1092	1227	1400	1630	1950	2428
1500	1054	1170	1315	1500	1746	2090	2601
1600	1124	1248	1402	1600	1863	2229	2774
1700	1194	1326	1490	1700	1979	2368	2948
1800	1265	1404	1577	1800	2096	2508	3121
1900	1335	1482	1665	1900	2212	2647	3294
2000	1405	1560	1753	2000	2329	2786	3468

FIXED SPEEDS

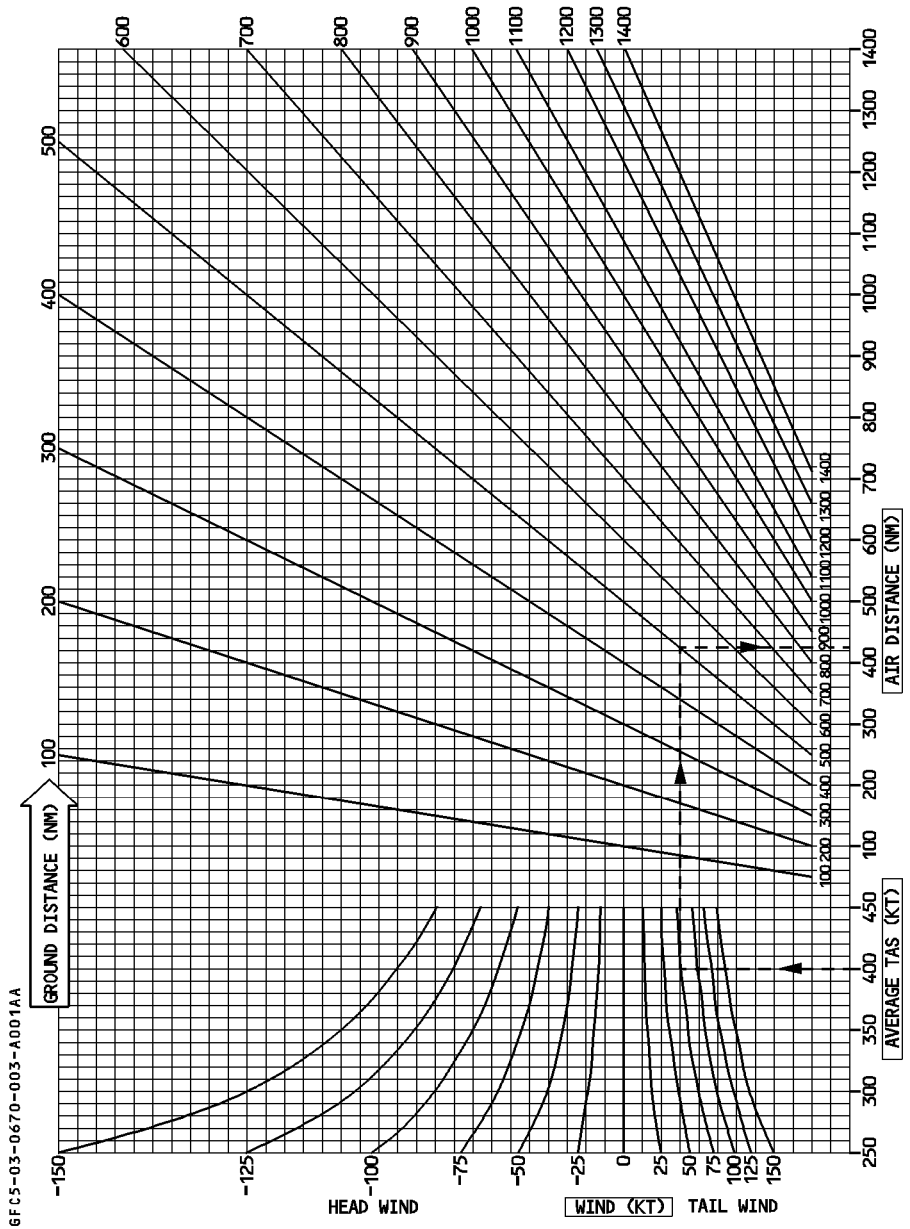

N°	TITLE
"To be filled by the operator, if needed"	

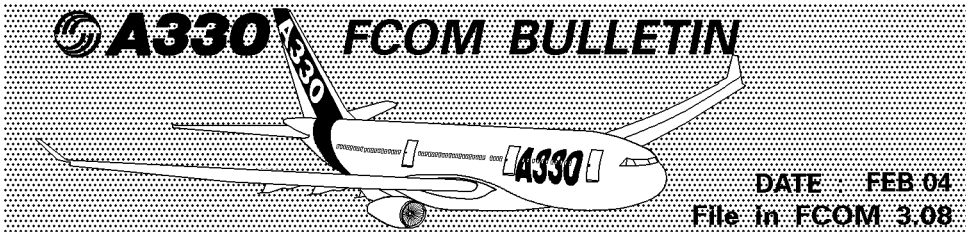

INTRODUCTION

R FCOM Bulletins were created to provide complementary technical/operational explanations
R related to the information included in the Flight Crew Operating Manuals (FCOMs).

R The objective of FCOM Bulletins differs from that of Operations Engineering Bulletins (OEBs).
R OEBs are issued to rapidly address specific problems that have an operational impact. They
R are created, as needed, in order to quickly transmit technical and procedural information, and
R are normally issued in response to a detected irregularity or an abnormal aircraft/system
R behavior.

R FCOM Bulletins are periodically issued to address one or several subjects and include
R supplementary explanations concerning procedures, system descriptions, performance, and
R regulations.

R They are updated as the need arises, and are filed in Section 8 of the FCOM Volume 3.

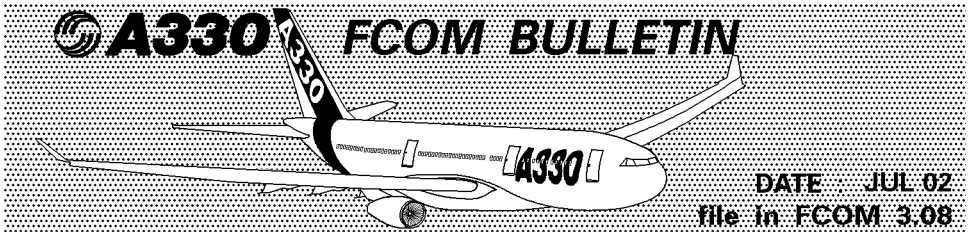

LIST OF EFFECTIVE FCOM BULLETINS

	BULLETIN N°	SUBJECT
	01	AVOID DISORDER IN THE COCKPIT
	02	HIGH BRAKE TEMPERATURE
	03	ELECTRONIC INTERFERENCE FROM PORTABLE EQUIPMENT CARRIED ON BY PASSENGERS
	04	PREVENTING UNNECESSARY IN-FLIGHT SHUTDOWNS
	05/4	AVOIDING TAILSTRIKES AT TAKEOFF
	06	MMEL AND MEL USE
	07/1	PUBLICATION OF ONE ATTENDANT INFORMATION BULLETIN
	08/2	EGPWS DATABASE
	09	ERRONEOUS AIRSPEED/ALTITUDE INDICATIONS
	10/2	USE OF FINAL APP MODE AND NAV DATABASE VALIDATION
	11	IDLE FACTOR
R	12/2	AIRCRAFT HANDLING IN FINAL APPROACH
R	13/1	USE OF RUDDER ON TRANSPORT CATEGORY AIRPLANES

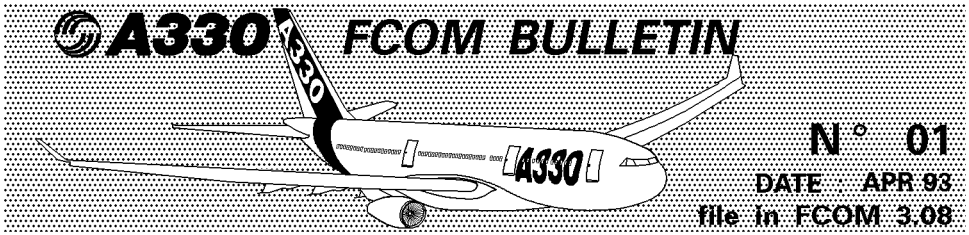

AVOID DISORDER IN THE COCKPIT

1. REASON FOR ISSUE

The purpose of this FCOM Bulletin topic is to remind pilots of the importance of maintaining an orderly cockpit environment and highlight the hazards caused by misplaced objects.

2. BACKGROUND INFORMATION

Many hazards are caused by placing objects in improper places in the cockpit. The most common being the following.

- Coffee cups placed on the glareshield or pedestal, unexpected turbulence or unintentional knocking by the crew may cause fluid to be spilled onto the cockpit control panels causing damage to the equipment which may have an immediate effect on the flight or at best lead to an early and expensive overhaul of the equipment.
- Books placed on the glareshield. These may fall off and operate some switches/pushbuttons or even damage equipment.
- Books placed on the pedestal. These may cause switches or pushbuttons to be activated, especially if they have to be pushed around while operating other controls. At worst the rudder trim might be activated or even a fuel lever pushed off, at best a radio selection could be deselected.

3. RECOMMENDATIONS

It is highly recommended that all objects are placed and stored at their designated place in the cockpit.
Cups should be placed in the cupholders provided.
Books should be kept in the library space provided and put back as soon as you have finished using them.
A rubbish sack should be provided behind the crew seating and used for all rubbish.
Meal trays should be collected by flight attendants as soon as possible, or be placed on the floor behind the crew when finished.

A330 FCOM BULLETIN

N° 02
DATE : APR 93
file in FCOM 3.08

HIGH BRAKE TEMPERATURE

1. REASON FOR ISSUE

The purpose of this FCOM Bulletin topic is to provide background information to flight crews on the consequences of HIGH BRAKE TEMPERATURES which may lead to a fire.

2. BACKGROUND INFORMATION

A small number of cases of permanent braking application at one brake position have occured. This may be due to either improper maintenance action, or brake system failure. With permanent braking application the brake temperature will quickly increase and will continue to increase while the aircraft is moving. If the brake temperature becomes excessive, as well as causing possible tyre deflation, it may cause a fire hazard, particularly if there are any hydraulic leaks in the area of the brakes.

3. RECOMMENDATIONS

If a BRAKE HOT warning occurs, monitor the BRAKE TEMPERATURES carefully. BRAKE FANS should be switched ON if fitted.
If the difference between brake temperatures on one gear is greater than 150° and any one brake temperature is greater than TEMP LIMIT 600° this is a clear sign of brake binding/permanent brake application.
In this case the aircraft should be stopped to avoid a possible fire, taxi back should not be done as long as the BRAKE OVERHEAT warning is present. Maintenance action is due.
Note : The BRAKE HI TEMP procedure in the FCOM has been updated to reflect these limits.

A330 FCOM BULLETIN

N° 03
DATE JUN 93
file in FCOM 3.08

SUBJECT : ELECTRONIC INTERFERENCE FROM PORTABLE EQUIPMENT CARRIED ON BY PASSENGERS

- Airlines often wonder whether they should allow passengers to operate electronic devices in the cabin without any limit.

  Federal Aviation Regulation (FAR) section 91.19 allows passengers to operate :

  " – Portable voice recorders
  – Hearing aids
  – Heart pacemakers
  – Electric shavers
  – Any other portable electronic device that the operator of the aircraft has determined will not cause interference with the navigation or communication system of the aircraft on which it is to be used."

  It is obvious that the myriad portable devices that now exists or that may be available in the future cannot be tested.

- As far as aircraft specific electrical flight controls and engine control computers on Airbus aircraft are concerned, there is no chance of their operation being affected by passenger-operated electronic devices, due to the high level of protection applied to these systems.

- Nevertheless, this question arises for navigation and communication receivers and is applicable to any aircraft.
  A study has been conducted by an RTCA (Radio Technical Commission for Aeronautics) special commitee.

- The conclusion is that the probability of a passenger-operated device interfering with the ILS localizer during a typical flight is about one in a million.
  Airbus Industrie recommendations is that no portable device should be used during take-off and landing.

- Concerning radio phones Airbus Industrie recommends to prohibit the use of those devices.

A330 FCOM BULLETIN

N° 04
DATE MAR 94
file in FCOM 3.08

SUBJECT : PREVENTING UNNECESSARY IN-FLIGHT SHUTDOWNS

1 – GENERAL

The concept of ETOPS is closely linked to the continued demonstration of an acceptable level of **operational reliability**, and particularly to the demonstration of an **IFSD rate** being and remaining compatible with the ETOPS objectives.

Managing the IFSD rate related to each individual operator's engine fleet or to the overall engine fleet is therefore **vital in maintaining the ETOPS approval** for a particular operator and for the overall fleet.

Reducing and/or maintaining the IFSD rate of a given engine model is a continuous industry effort involving :

– the engine and airframe manufacturers,

– the operator's engineering, maintenance and flight operations departments, as well as flight crews.

However, managing the IFSD rate should not be an effort specific to ETOPS or non-ETOPS twins operators but should be equally considered by A340 operators.

As far as flight operations and flight crews are concerned, the concept of **preventing unnecessary in-flight shutdowns** has been actively promoted by Airbus over the past years. This FCOM Bulletin summarizes the guidelines and recommendations developed to support this concept.

2 – CREATING THE REQUIRED INDUSTRY MINDSET

With the above considerations in mind, the decision-making process in deciding a precautionary engine shutdown has been re-evaluated to consider the particular aspects of ETOPS flights as compared to four-engine, three-engine or non-ETOPS twin-engine operations.

However, before proceeding any further, it should be emphasized that the concept of preventing unnecessary precautionary in-flight shutdowns is **not** intended to :

– encourage flight crews to deviate from the published operational procedures, recommendations and guidelines,

– restrict, in any manner, the flight crew's authority to take a precautionary decision, depending on the prevailing circumstances and/or available clues.

Creating the required industry mindset was achieved and supported by :

– providing airlines management and flight crews with an **enhanced understanding** of **normal** and **abnormal engine operation,**

– providing flight crews with an **enhanced awareness** and **understanding** of engine-related indications and their relation to engine malfunctions,

– providing flight crews with **amplified guidelines** for **fault validation** through cross-checking and/or monitoring of other engine parameters,

– providing flight crews with **enhanced procedures** to **maximize the engine recovery or restart ability**, as applicable.

The above material has been released through various revisions to the FCOM, through FCOM Bulletins and through various symposium presentations and briefings, for the A300, A310 and A300-600.

Preventing unnecessary in-flight shutdowns has been a leading design aim when developing the ECAM and FCOM procedures for the newer A320/A321/A330 and A340 models.

3 – UNDERSTANDING THE ENGINE-RELATED ABNORMAL PROCEDURES

All flight crews involved in ETOPS should make sure to maintain an updated understanding of the engine normal and abnormal operations and associated procedures.

Particularly, the differences and hierarchy between the following concepts should be fully understood :

– warning and caution messages :
  · associated with a procedure : emergency and abnormal procedures,
  or
  · not associated with a procedure : crew awareness messages,

– system advisories.

The fault conditions requiring specific crew action(s) are covered by the published **ECAM** and/or **QRH emergency** and **abnormal** procedures.

The procedures calling for a **positive** or **conditional engine shutdown** should be clearly individually understood.

Whenever envisaged by the procedure and deemed eligible, based on the prevailing circumstances and available clues, the following options should be carefully considered :

– **continued engine operation at idle,**

– **engine restart.**

It is worth recalling the main features of the **Advisory** concept :

– the advisory concept is meant as an **attention-getter,**

– the activation of an advisory condition **only** calls for **crew monitoring** of the affected parameter/system,

– the guidelines associated with **advisory conditions** are meant to **assist rather than direct** the crew in its monitoring and possible decision-making and action.

Conversely, a **crew awareness message** is intended to inform the flight crew regarding system faults not requiring a specific action or monitoring, but which may affect the further conduct of the flight.

4 – FLIGHT CREW TRAINING

So as to be fully efficient, the concept of preventing unnecessary precautionary in-flight shutdowns (and the various associated operational procedures, recommendations and guidelines) should be **highlighted to flight crews at all the stages of their training** :

– transition training,

– line training,

– recurrent training/proficiency checks,

and, particularly,

– ETOPS training.

This concept has been fully adopted and integrated by the Airbus training department – Aeroformation – in the various training syllabuses.

All operators are encouraged to incorporate this concept into their company training syllabus, along with the following suggestions offered for consideration :

– the existing Simulator Drill Briefing Notes (or equivalent document) could be expanded to address and comment on additional scenarios related to abnormal engine conditions,

– the simulator instructor's and training captain's briefings could be expanded to address and comment on the overall concept of preventing unnecessary in-flight shutdowns (while confirming the flight crew authority to take a conservative precautionary decision, should the prevailing circumstances and/or available clues so dictate),

– in addition to the above suggestions, a particular emphasis could be placed on the management of the advisory conditions.

5 – SPREADING THE WORD TO ALL FLIGHT CREWS

The following summarizes the various tools used by several ETOPS operators to spread the message to all flight crews and provide periodic updating and/or refresher information :

- monthly company newsletters or bulletins,
- recurrent training bulletins,
- briefings to ground school instructors and check airmen,
- flight safety meetings,
- adjustments to the transition and recurrent training simulator syllabus (e.g. simulator training based on real scenarios experienced during the airline's own operation).

All Fleet Captains, Training Captains as well as individual flight crews involved in ETOPS flights should consider and promote the concept of preventing unnecessary in-flight shutdowns by thoroughly reviewing all the published engine-related operational procedures, recommendations and guidelines, in the light of the considerations addressed in this Bulletin.

SUBJECT : AVOIDING TAILSTRIKES

Note : This FCOM Bulletin supersedes Bulletin N° 05/4 dated March 1998. It has been revised for harmonization with the A320 and A340 FCOM bulletins.

Tailstrikes are infrequent events, but they can cause expensive structural damage. They most often occur in such adverse conditions as crosswind, turbulence, windshear, etc.

The objective of this Bulletin is to provide information on the factors that may reduce tail clearance during takeoff and landing, and to provide guidance on the way in which tailstrikes may be avoided.

A/C GEOMETRY LIMITS

Two limits need to be considered :

– The geometry limit, corresponding to the main gear oleo, (fully-extended).
– The geometry limit, corresponding to the main gear oleo, (fully-compressed).

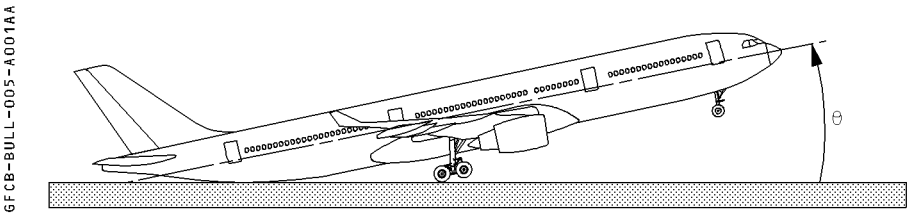

GFCB-BULL-005-A001AA

	Pitch attitude θ		
Main Gear Oleo Position	A330-300 GE	A330-300 RR/PW	A330-200
Fully extended	14.2°	14.4°	16.0°
Fully compressed	10.1°	10.1°	11.5°

CLEARANCE AT TOUCHDOWN

The following table provides the ground clearance in degrees for the A330-200 and A330-300 (all numbers are mean values).

Aircraft	Geometry limit at touchdown	Pitch attitude at VAPP (VREF + 5) (1)	Pitch attitude at touchdown	Clearance (2)
A330-200	16.0°	4.5°	6.8°	9.2°
A330-300	14.2°	4.3°	6.6°	7.6°

Note : (1) Flight path in approach = −3°
(2) Clearance = Geometry limit − Pitch attitude at touchdown

TAILSTRIKE FACTORS AT TAKEOFF

An excessive rotation rate, and a early rotation, are two factors that significantly increase the risk of tailstrike at takeoff. The thrust-to-weight ratio also has an influence, with an increased risk at low thrust/weight ratios : A condition which typically occurs with high Flex Temp settings, or during a continued takeoff with one engine failed.

1) ROTATION RATE

A fast rotation rate increases the risk of tailstrike, but a slow rate increases the takeoff distance. The recommended rate is between 2 and 3 degrees per second, which reflects the average rates achieved during flight tests, and is also the rate upon which performance calculations are based.

2) EARLY ROTATION

Early rotation occurs, when the rotation is initiated below the scheduled VR. The potential reasons for this are :

- The calculated VR is incorrect for the aircraft weight or flap configuration.
- The rotation occurs below VR due to gusts, windshear, or an obstacle on the runway.

Whatever the cause of the early rotation, the result will be an increased pitch attitude at lift-off and, consequently, a reduced, tail-clearance.

3) ROTATION TECHNIQUE

The A330 has a large inertia, and the rotation rate produced by a given sidestick input takes time to build up. But, once it has developed, it remains relatively constant for a given sidestick position. Therefore, it is important to initiate the rotation with a positive backward stick input (typically 2/3 backstick). Subsequent changes to the commanded rate should be made smoothly. Rapid variations in stick position will cause sharp changes in the rate of cockpit movement.

R A small or slow movement of the sidestick will give a sluggish rotation. If, to increase the
R rotation rate, a further aft movement of the sidestick is made around the time of lift-off, the
R possibility of tailstrike increases significantly.
R
R Recommendation : At VR, initiate a prompt and positive rotation to achieve the desired
R rotation rate. Avoid making further rearward sidestick inputs around the
R point of lift-off.
R
R Rotation should be continued towards a typical all-engine attitude of about 15°. After lift-off,
R follow the SRS command bar.
R
R *Note : The SRS command bar does not give orders to obtain the correct pitch rate during the*
R *rotation on ground, but to reach and maintain the SRS speed after lift-off. Therefore,*
R *do not attempt to follow the SRS pitch order during the rotation phase before the*
R *lift-off. Pitch targets are given only as an initial objective, particularly in the event of*
R *the loss of the FDs. Pilots should adjust the pitch attitude to achieve the desired*
R *speed.*
R When airborne, and as the attitude changes and stabilizes, the pitch flight control laws is
R gradually phase in allowing the sidestick to be released to the neutral position to maintain 1 g
R at the chosen attitude. Pitch trim begins to work at 50 feet.
R
R **4) CONFIGURATION AND SPEED**
R
R For a given aircraft weight and configuration, a variety of takeoff speeds are possible,
R depending on such factors as runway length and obstacles. In general, the higher the VR, the
R greater the tailstrike margin. The minimum VR is determined by the VMU. So, when the VMU
R appears as the influence in the computed takeoff speeds, it can also be taken as an indication
R of reduced tailstrike margin.
R Similarly, for certain conditions (aircraft weight and runway length), a variety of flap
R configurations are possible. The tailstrike margin benefit of selecting a higher flap setting can
R be lessened by the effect of the computed takeoff speed. But, in general, the highest flap
R configuration gives the greatest tailstrike margin (i.e. Conf 3 gives a greater margin than
R Conf 1 + F).

5) TAKEOFF TRIM SETTING

The main purpose of the pitch trim setting for takeoff is to provide consistent rotation characteristics. The pitch trim setting is automatic for A330 Enhanced (with specific aircraft definition). It is manually set on other A330 models.

Flight tests have demonstrated that whatever the aircraft CG position, as long as the trim setting lies within the certified limits (green band of the trim wheel), the aircraft can perform a safe takeoff.

Nevertheless, it is a fact that a wrong pitch trim setting (for the takeoff CG) will change the feel of the aircraft during the rotation :

- With a forward CG, and the pitch trim set to the nose-down limit, pilots will feel a "heavy to rotate" aircraft, and aircraft rotation will be very slow, in responding to the normal takeoff stick displacement.
- With an aft CG, and the pitch trim set to the nose-up limit, pilots will feel a "light to rotate" aircraft, or may even experience an early autorotation.

In either case, pilots may have to modify the normal control input, in order to achieve the desired rotation rate. However, they should be cautious not to overreact.

Note 1 : On A330s equipped with at least the FWC K7 Standard the "PITCH TRIM/MCDU/CG DISAGREE" warning is triggered when there is a difference of more than 1.5° degrees between the theoretical pitch trim value (based on the CG value determined by the FCMC), and the real pitch trim position. On aircraft additionally equipped with a specific FMS 2P2 Standard, the warning is triggered when there is a disagreement between any of the following : The real pitch trim position, the theoretical pitch trim value (based on the CG value determined by the FCMC), the pitch trim value entered in the MCDU.

6) CROSSWIND TAKEOFF

For crosswind takeoffs, routine use of into-wind aileron is not recommended. In strong crosswind conditions, some lateral control may be used, but care should be taken to avoid using large deflection, resulting in excessive spoiler deployment which increases the tendency to turn into wind, reduces lift, and increases drag. Spoiler deflection starts to become significant with more than half sidestick deflection. As the aircraft lifts off, any lateral control applied will result in a roll rate demand. A direct effect of the reduction in lift, due to the extension of the spoilers on one wing, will be a reduction in tail-clearance and an increased risk of tailstrike.

7) OLEO INFLATION

The correct extension of the main landing gear shock absorber (and thus the nominal increase in tail-clearance during the rotation) relies on the correct inflation of the oleos. An under-inflated oleo will delay the start of the bogie rotation and reduce tail-clearances.

TAILSTRIKE AT LANDING

Although most tailstrikes at landing are due to deviations from normal landing techniques, some are associated with such external conditions as turbulence and wind gradient.

1) DEVIATION FROM NORMAL LANDING TECHNIQUES

Deviations from normal landing techniques are the most common causes of tailstrike. The main reasons for this are due to :

a) Allowing the speed to decrease well-below the Vapp before flare.

Flying at a too low speed means high a AOA and a high pitch attitude, thus reducing ground clearance. When reaching the flare height, the pilot will have to significantly increase pitch to reduce the sink rate. This may cause the pitch to go beyond the critical angle.

b) Prolonged hold-off for a smooth touchdown

As the pitch attitude increases, the pilot needs to focus further ahead to assess the aircraft's position in relation to the ground. The attitude and distance relationship can lead to a pitch attitude increase beyond the critical angle.

c) Too-high flare

A high flare can result in a combined decrease in airspeed and a long float. Since both lead to an increase in pitch attitude, the result is reduced tail-clearance.

d) Too high a sink rate, just prior to reaching the flare height.

In case of a too-high sink rate close to the ground, the pilot may attempt to avoid a firm touchdown by commanding a high-pitch rate.
This action will significantly increase the pitch attitude and, as the resulting lift increase may be insufficient to significantly reduce the sink rate, a firm touchdown may occur. In addition, the high-pitch rate may be difficult to control after touchdown, particularly in case of bounce.

e) Bouncing at touchdown

In case of bouncing at touchdown, the pilot may be tempted to increase the pitch attitude to ensure a smooth second touchdown. If the bounce results from a firm touchdown, associated with a high pitch rate, it is important to control the pitch so that it does not further increase beyond the critical angle.

2) APPROACH AND LANDING TECHNIQUES

A stabilized approach is essential for achieving successful landings. It is imperative that the flare height be reached at the appropriate airspeed and flight path angle. A/THR and FPV are effective aids to the pilot.

The Vapp should be determined with the wind corrections, (provided in the FCOM/QRH), by using FMGS functions.

As a reminder, when the aircraft is close to the ground, the wind intensity tends to decrease and the wind direction to turn (direction in degrees decreasing in northern latitudes).

Both effects may reduce the headwind component close to the ground, and the wind correction to Vapp is there to compensate for this effect.

R When the aircraft is close to the ground, high sink rates should be avoided, even in an attempt to maintain a close tracking of the glideslope. Priority should be given to the attitude and sink rate. If a normal touchdown distance is not possible, a go-around should be performed.

If the aircraft has reached the flare height at Vapp, with a stabilized flight path angle, the normal SOP landing technique will lead to repetitive touchdown attitude and airspeed.

During flare, the pilot should not concentrate on the airspeed, but only on the attitude with external cues.

Note : Airspeed indication during flare is influenced by the static error, due to the ground effect.

Specific PNF callouts have been reinforced for excessive pitch attitude at landing.

After touchdown, the pilot must "fly" the nosewheel smoothly, but without delay, on to the runway, and must be ready to counteract any residual pitch up effect of the ground spoilers.

Note : The main part of the spoilers' pitch up effect is compensated by flight control laws.

3) BOUNCING AT TOUCHDOWN

In case of light bounce, maintain the pitch attitude and complete the landing, while keeping thrust at idle.

Do not allow the pitch attitude to increase, particularly following a firm touchdown with a high pitch rate.

In case of a high bounce, maintain the pitch attitude and initiate a go-around.
Do not try to avoid a second touchdown during the go-around. Should it happen, it would be soft enough to prevent damage to the aircraft, if pitch attitude is maintained.
Only when safely established in the go-around, retract flaps one step and the landing gear.
A landing should not be attempted immediately after a high bounce, as thrust may be required to soften the second touchdown, and the remaining runway length may be insufficient to stop the aircraft.

CUMULATIVE EFFECTS

No single factor should result in a tailstrike, but accumulation of several can significantly reduce the margins.

ACTION IN CASE OF TAILSTRIKE

If a tailstrike occurs at takeoff, flight at altitudes requiring a pressurized cabin must be avoided, and a return to the originating airport should be immediately performed for damage assessement.

A330 FCOM BULLETIN

N° 06

DATE APR 96

file in FCOM 3.08

MMEL AND MEL USE

REASON FOR ISSUE

To provide Airbus operators with a simple explanation of the relationship between the MMEL and MELs, and how to use an MEL.

PURPOSE OF THE MMEL

The main purpose of the MMEL is to **permit the dispatch** of an airplane with pieces of equipment or functions inoperative, when a failure has been detected in the previous flight or in transit, and to avoid as much as possible delays and cancellations.
The MMEL is issued by Airbus Industrie and approved by JAA for non US operators and issued and approved by FAA for US operators.

FROM THE MMEL TO AN MEL

Regulation requires that each operator prepares and keeps current an MEL using the MMEL as a guide line. **The MMEL cannot in any case be used as an MEL.**
A MEL cannot be less restrictive than the MMEL and should **cover all the items depending on National Regulations.** In particular, conditions indicated "as required by regulations" in the MMEL should be fully identified in the MEL.
The MEL is agreed/approved by National Authorities.

CONTENTS OF THE MEL

An airline's MEL should contain the four following sections :

- The list, agreed/approved by National Authorities of all pieces of equipment or functions which may be inoperative for dispatch.
  This list is established using the JAA approved section 01 of the MMEL.
- The operational procedures extracted from the MMEL Section 02
- The maintenance procedures extracted from the AMM. (Aircraft Maintenance Manual), or the ADPM (Aircraft Deactivation Procedures Manual).
- The list of the ECAM warnings, associated with the corresponding dispatch conditions, extracted from the MMEL Section 03.

HOW TO USE AN MEL

When a failure is detected and identified, the crew must enter in the airline's MEL **to determine if a subsequent dispatch is allowed and under which conditions.**

– The agreed/approved section of the MEL indicates the conditions which must be fulfilled for dispatch.
All items are listed following ATA (Air Transport Association) classification (see below).
All items not listed in this section are NO-GO (dispatch prohibited) except equipment or functions which are obviously not affecting airworthiness or flight safety.

– If a (o) is associated with the item, an operational procedure must be applied.

Either on ground or/and in flight, crew actions are required and described in the operational procedures section of the MEL.

– If a (m) is associated with the item, a maintenance procedure must be applied.

On ground, before dispatch, maintenance people actions are required and described in the maintenance procedures section of the MEL or in the AMM or in the ADPM.
If approved by National Authorities, other personnel may be qualified and authorized to perform certain functions. Procedures requiring specialized knowledge or skill, or requiring the use of tools or test equipment should be accomplished by maintenance personnel.

ATA 100 BREAKDOWN

The ATA (Air Transport Association) breakdown represents the official reference for the classification of airplanes systems and / or functions.

This is achieved using 6 digits (ex : 21-23-00 LAVATORY/GALLEY VENTILATION).

The two first digits for the ATA chapter (ex : 21 – AIR CONDITIONING), and remaining digits for system and function classification in the ATA chapter.

The four first digits are used in the A320, A330 and A340 MMEL, while only the two first digits are used in the A300, A300-600 and A310 MMEL.

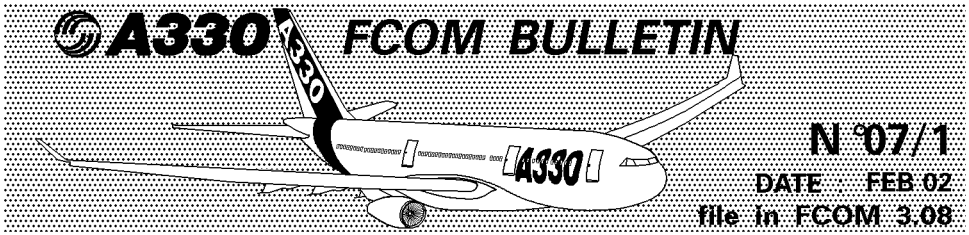

N °07/1
DATE : FEB 02
file in FCOM 3.08

R **SUBJECT : PUBLICATION OF ONE ATTENDANT INFORMATION BULLETIN**

R **REASON FOR REVISION**

R This FCOM Bulletin has been revised to cancel the second part of the previous issue referring
R to a Cabin Attendant Information Bulletin entitled : "Passenger Oxygen Mask Deployment".
R This Cabin Attendant Information Bulletin was issued to provide Operators with interim
R operational recommendations before accomplishing the required actions of AOT 35-04
R (issued in October 95).

R This AOT requested affected Operators (last affected A/C delivered in mid 95) to perform a
R cabin check within the following 500 flight hours, and to apply corrective actions (if
R necessary) within the following 18 months.

DELIBERATE INHIBITION OF AMBIENT LAVATORY SMOKE DETECTORS

REASON FOR ISSUE :

There have been reports of tampering with ambient lavatory smoke detectors on some aircraft.

EXPLANATION :

This tampering involved the removal of the smoke detector grill, and the packing of foreign objects (such as tissue paper and plastic bags) around the detector (see graphics overleaf). This seriously affects the detection capabilities of the lavatory smoke detection system. In this condition, the detector cannot "sample" air from the lavatory.

PROCEDURE

It is recommended that, prior to each flight, the cabin crew inspect the lavatory smoke detectors for similar types of tampering. If foreign bodies, or signs of tampering are found, line maintenance should be informed.

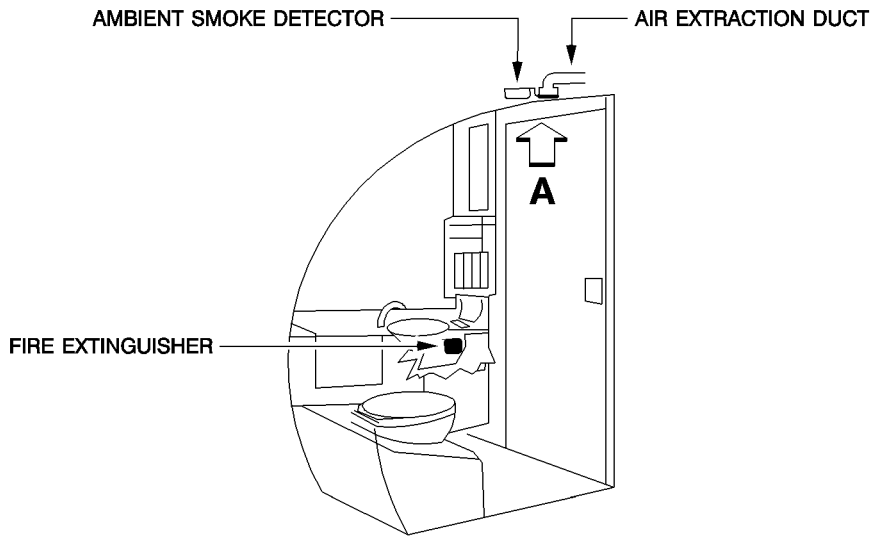

A

AIR INTAKE SCREEN (GRILL)

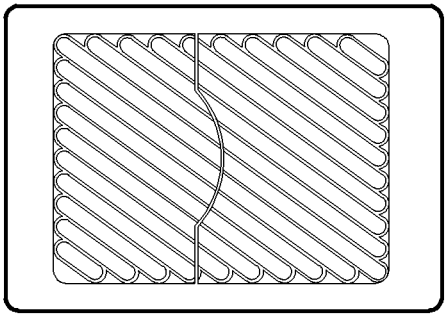

GFCB-BULL-007-A001AA

This grill is a cover for the ambient smoke detector and the air extraction duct. The view shows how the grill would appear when looked at from below.
This grill can be removed. Foreign objects (tissues, plastic bags) have been found packed around the ambient smoke detector.

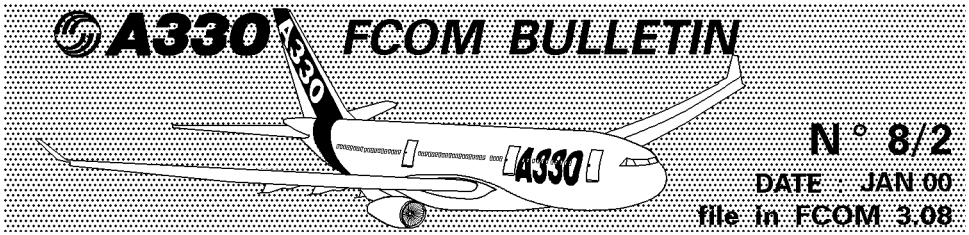

SUBJECT : EGPWS DATABASE

Purpose

Airbus Industrie has received some reports of EGPWS warnings that were unduly triggered due to airport data missing from the database.
It is the Airlines responsibility to identify the airport(s) where the terrain data is missing from the database. During operation around such airports, the enhanced function must be switched off (TERR pushbutton OFF on overhead panel) when the aircraft position is less than 15NM from the runway.

The purpose of this bulletin is to provide the operators and the flight crews with additional information regarding the EGPWS database and the EGPWS system reaction when the airport/terrain data is not included in the database.
The FCOM 3.01.34 and the Aircraft Flight Manual (AFM) refer, providing limitations of the system.

1. The Enhanced GPWS functions

The purpose of the Enhanced Ground Proximity Warning System (EGPWS) is to alert the crew of potential hazardous conditions with regards to Controlled Flight into Terrain (CFIT).

Two enhanced functions have been added to the basic modes of the GPWS. These functions are the following :

– Terrain Awareness and Display (TAD)
– Terrain clearance Floor (TCF)

- The Terrain Awareness and Display (TAD) function compares the aircraft FMS position with the local terrain in the database. It also computes two envelope boundaries ahead of the aircraft. When terrain data conflicts with one of these envelopes, specific aural and visual alerts are triggered.
  This function also provides terrain data display on the Navigation Display (ND)

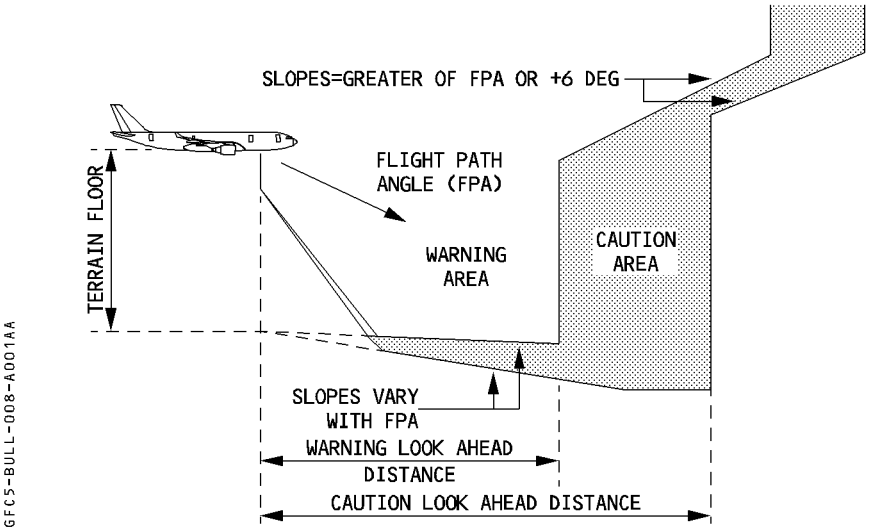

- The Terrain Clearance Floor (TCF) function computes a terrain clearance envelope around the airport runway. It is based on current aircraft location, nearest runway center point position included in the database and radio height. When the aircraft enters this envelope, an alert "TOO LOW TERRAIN" is produced even if the aircraft is in landing configuration. This alert protects against an attempt to land where there is no airfield. This can be the case for example when descending by mistake on a wrong vertical path during a non-precision approach. This function operates during any flight phase.

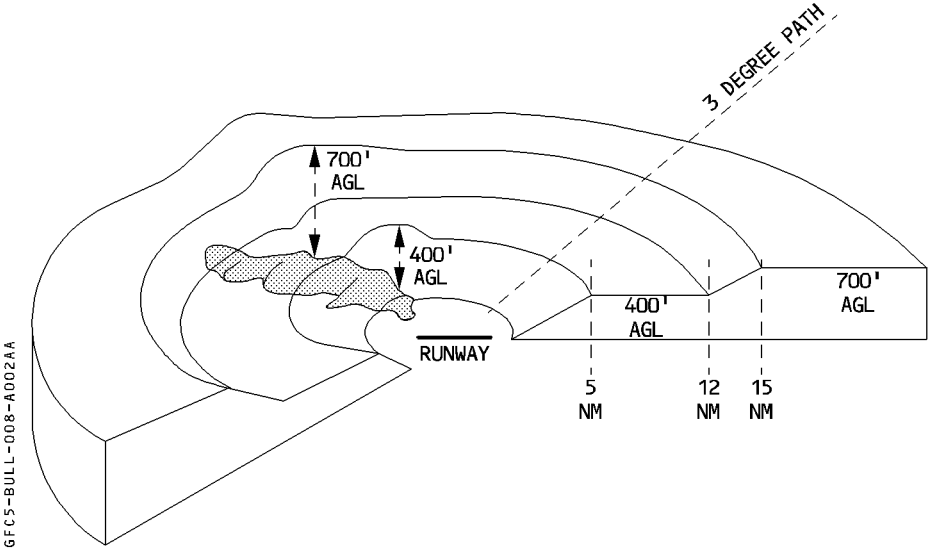

2. The EGPWS database

The terrain database divides the Earth surface into grid cells. These cells are recorded upon the WGS-84 geographic coordinate system for longitude and latitude data. Each cell records the highest terrain altitude in the respective terrain area.
The resolution of the grid varies upon the geographic location ranging from :

- 0.25 NM x 0.25 NM
- 0.5 NM x 0.5 NM
- 1 NM x 1 NM
- 2 NM x 2 NM
- 5 NM x 5 NM

The highest resolution (0.25NMx0.25NM) is used around the airports. This is to avoid producing alerts during normal procedures (the terrain database has to reflect as closely as possible the actual terrain). The lowest resolution (5NMx5NM) is used outside airports where such a coarse terrain database cannot interfere with normal en-route trajectories. The database also contains the position of the airport runway center point. This concerns all hard surface runways whatever the surface type is longer than or equal to 3500 ft.

Additionally, the database gives the possibility of incorporating data regarding man-made obstacles in the vicinity of the major airports.

3. EGPWS reaction when airport data is missing from the database.

When an airport/terrain data is not yet covered by the database, the TCF envelope cannot be defined. The system uses the lowest map resolution (5NMx5NM) as no airport is detected. Therefore, early and unexpected TAD cautions and warnings are triggered. The red EGPWS legend of the GPWS/G/S pushbutton comes on, the aural warnings "TERRAIN AHEAD" and "TERRAIN AHEAD, PULL-UP" sound and the terrain image pops up on the Navigation Display. When within 15NM, it is recommended to switch off the enhanced functions (EGPWS TERR pushbutton switched to OFF on overhead panel) for operations from/to runways not incorporated in the database (FCOM 3.01.34 refers).

4. The EGPWS database update

The database update is under the responsibility of the vendor.
The vendor may use one or more sources of data for a particular airport :

1) Data from in-country government and/or regulatory agencies.
2) Data from airlines that have surveyed an airport while establishing layout, approach/departure procedures, etc.
3) Data from commercial vendors who also produce data sets for FMS and other navigational systems.
4) Data from commercial and military surveying agencies that make such information publicly available.
5) Airport layout and physical properties from high-resolution maps and/or digitized data sources.
6) Airport layout and physical properties from imagery.

Some difficulties may be encountered in some areas to compile and validate airport data.

For an official indication of the latest EGPWS database, as weel as a list of covered airports, please review the manufacturer document EGPWS Terrain Database Airport Coverage list. This document can be acquired by contacting :

Christine STAHL, Database Manager,
Allied Signal – 1500 NE 36th Street
REDMOND WA USA 98073
Telephone : (1)(425) 885-8847
Fax : (1)(425) 885-2994
Email : christine.stahl@allied.signal.com
Internet : www . egpws . com

5. Conclusion

The enhanced functions of the EGPWS are not reliable when operating around airports which are not included in the database. In this case, these functions must be switched off (TERR pushbutton off on the overhead panel).
It is the airlines responsibility to identify with the database manufacturer the airports where terrain data is missing.

Airbus Industrie strongly recommends to the airline to report to the database manufacturer and to their local airworthiness authorities any EGPWS warning occurence due to airport data missing from the database. It is also recommended that airlines request that their national authorities publish the necessary data in order that the database manufacturer can extend the database coverage to all operated airports.

A330 FCOM BULLETIN

N° 09

DATE : DEC 99

file in FCOM 3.08

ERRONEOUS AIRSPEED/ALTITUDE INDICATIONS

BACKGROUND

Two recent fatal accidents on non-Airbus aircraft and several reported incidents attributed to unreliable speed and/or altitude indications have prompted the need to improve flight crew awareness to identify and tackle the failures described in this bulletin.

Most failure modes of the airspeed/altitude system are detected by the ADIRS and lead to the loss of the corresponding cockpit indications and the triggering of the associated ECAM drills.

However, there may be some cases where the airspeed or altitude output is erroneous without being recognized as such by the ADIRS. In these cases, the cockpit indications appear normal, but are false, and pilots must rely on their basic flying skills to identify the faulty source and take the required corrective actions. When only one source provides erroneous data, the straightforward crosscheck of the parameters provided by the 3 ADRs allows the faulty system to be identified. This identification becomes more difficult in extreme situations when two, or even all three, sources provide erroneous information.

This FCOM Bulletin provides the following information :

1 – Recall of pitot/static system layout ;

2 – Situations which may lead to erroneous, airspeed/altitude indications ;

3 – Consequences of various failure cases ;

4 – Recall of AI recommended operational procedures.

DISPLAY ARCHITECTURE

The CAPT side pitot and static probes supply the ADIRU 1 which is normally used for display on the CAPT PFD.

The F/O side pitot and static probes supply the ADIRU 2 which is normally used for display on the F/O PFD.

The STBY pitot and static probes supply the ADIRU 3, which can be used for display on either PFD in case of failure. They also directly supply the standby instruments.

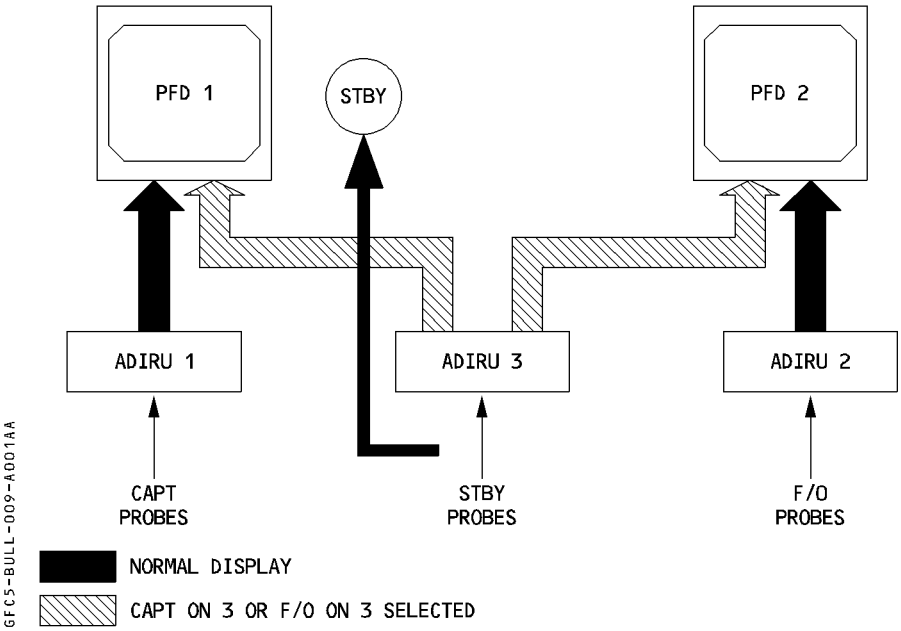

MAIN REASONS FOR ERRONEOUS AIRSPEED-ALTITUDE DATA

The most probable reason for erroneous airspeed and altitude information is obstructed pitot tubes or static sources. Depending on the level of obstruction, the symptoms visible to the flight crew will be different. However, in all cases, the data provided by the obstructed probe will be false. Since it is highly unlikely that the aircraft probes be obstructed at the same time, by the same amount, and in the same way, the first indication of erroneous airspeed-altitude data available to flight crews, will most probably be a discrepancy between the various sources.

CONSEQUENCES OF OBSTRUCTED PITOT TUBES OR STATIC PORTS

All aircraft systems using anemometric data have built-in fault accommodation logics. The fault accommodation logics are not the same for the various systems ; but, all rely on voting principles whereby when one source diverges from the average value, it is automatically rejected and the system continues to operate normally with the remaining two sources. This principle applies to flight controls and flight guidance systems.

Normal situation

Each PRIM receives the speed information from all ADIRUs.
It compares the 3 values.
Pressure altitude information is not used by the PRIM.

Each FE (Flight Envelope computer) receives the speed and pressure information from all ADIRUs.
For each of these two parameters, it compares the 3 values.

If one ADR output is erroneous and the two remaining ADRs are correct :

The PRIM and the FE eliminate it without any cockpit effect (no caution ; normal operation is continued), except that one display is wrong and CATIII dual can no longer be available on the FMA.

If two ADR outputs are erroneous, but different, and the remaining ADR is correct, or if all three are erroneous, but different :

The autopilot and the autothrust are disconnected by the FE (whichever autopilot is engaged).

If the disagree lasts for more than 10 seconds, the PRIM triggers the ADR DISAGREE ECAM caution.
It reverts to Alternate 2 law (without high and low speed protection).
On both PFD, "SPD LIM" flag is shown, no V_{LS} and no V_{SW} is displayed.

This situation is latched, until a PRIM reset is performed on the ground without any hydraulic pressure.
However, if the anomaly was only transient, the autopilot and the autothrust can be re-engaged when the disagree has disappeared.

If one ADR is correct but the other two ADRs provide the same erroneous output or if all three ADRs provide consistent and erroneous data :

The systems will reject the "good" ADR and will continue to operate normally using the two "bad" ADRs. This condition can be met when, for example, two or all three pitot tubes are obstructed at the same time, by the same amount, and in the same way. (Flight through cloud of volcanic ash, takeoff with two pitots obstructed by foreign matter (mud, insects)).

Human beings (the pilot) tend to use the same type of "fault accommodation" principles to detect an erroneous IAS/altitude indication. Flight crews will tend to reject the outlier information, if the other two outputs are consistent. This choice is, in the great majority of cases, correct ; but, all flight crews should be aware of very extreme and unlikely situations where two (or even three) speed/altitude indications can be consistent and wrong.

BEWARE OF INSTINCTIVELY REJECTING AN OUTLIER ADR

The following chart provides a non-exhaustive list of the consequences of various cases of partially or totally obstructed pitot tubes and static ports on airspeed and altitude indications. It should be noted that the cases described below cover extreme situations (e.g. totally obsctructed or unobstructed drain holes) and that there could be multiple intermediate configurations with similar, but not identical, consequences.

FAILURE CASE	CONSEQUENCES
Water accumulated due to heavy rain Drain holes unobstructed	Transient speed drop until water drains IIAS fluctuations IAS step drop and gradual return to normal
Water accumulated due to heavy rain Drain holes obstructed	Permanent speed drop
Ice accretion due to pitot heat failure or transient pitot blocked due to severe icing Unobstructed drain holes	Total pressure leaks towards static pressure IAS drop until obstruction cleared/fluctuation if transient erratic ATHR if transient
Ice accretion due to pitot heat failure or pitot obstruction due to foreign objects Obstructed drain holes	Total presure blocked Constant IAS in level flt until obstruction cleared In climb IAS increases In descent IAS decreases Abnormal AP/FD/ATHR behavior : a) AP/FD pitch up in OPN CLB to hold target IAS b) AP/FD ptich down in OPN DES to hold target IAS
Total obstruction of static ports on ground	Static pressure blocked at airfield level Normal indications during T/O roll After list-off altitude remains constant IAS decreases after lift-off IAS decreases when aircraft climbs IAS increases when aircraft descends

Based on the information given in the preceding chart, it is clear that no single rule can be given to conclusively identify all possible cases of erroneous airspeed/altitude indications. However, any case of erroneous speed/altitude indications will always be associated to one (or more) of the following cues :

a) Fluctuations of airspeed indications.
b) Abnormal correlation of the basic flight parameters (IAS, pitch, attitude, thrust, climb rate) :
   – IAS increasing with large nose-up pitch attitude ;
   – IAS decreasing with large nose down pitch attitude ;
   – IAS decreasing with nose down pitch attitude and aircraft descending ;

c) Abnormal AP/FD/ATHR behavior ;
d) Undue stall warning or overspeed warnings ;
d) Reduction of aerodynamic noise with increasing IAS ;
e) Increase of aerodynamic noise with decreasing IAS.

RECOMMENDED PROCEDURES

GENERAL REMARKS

The procedures described below are intended to provide flight crews with general guidelines to be applied in case of suspected erroneous airspeed/altitude indications.

FOLLOW ECAM ACTIONS
If failure undetected :
CROSSCHECK ALL IAS/ALTITUDE SOURCES :
ADR1, ADR2, ADR3 AND STANDBY INSTRUMENTS

If it is obvious that the outlier is wrong, select the corresponding ADR OFF and reconfigure the PFD indications accordingly, by applying the ECAM drill which will be automatically displayed.

Flgith crews should, however, be aware that in very extreme circumstances, it may happen that two, or even all three ADRs may provide identical and erroneous data. Therefore, the suspect ADR should only be switched OFF, if it is positively confirmed that the two other ADR's are correct. If in doubt :

DISCONNECT AP, FD AND ATHR
FLY TARGET PITCH ATTITUDE AND THRUST SETTING

The initial pitch attitude and thrust values given in the QRH should be considered as "Memory Items", since they allow "safe flight conditions" to be rapidly established in all flgiht phases (takeoff, climb, cruise) and aircraft configurations (Weight and slat/flaps).
Once the target pitch attitude and thrust values have been stabilized, the expanded data of the QRH (Flight with Unreliable Speed Indication) should be followed to determine the precise pitch attitude and power setting required, as a function of the aircraft's weight, configuration and desired speed.

After applying the QRH procedure, and when the aircraft is stable, the flight crew should try to identify the faulty ADR (one or more). Once the discrepant ADR has (or have) been positively identified, it (they) should be switched OFF. This will trigger the corresponding ECAM warnings and the associated drills which should be followed to address all the consequences on the various aircraft systems.

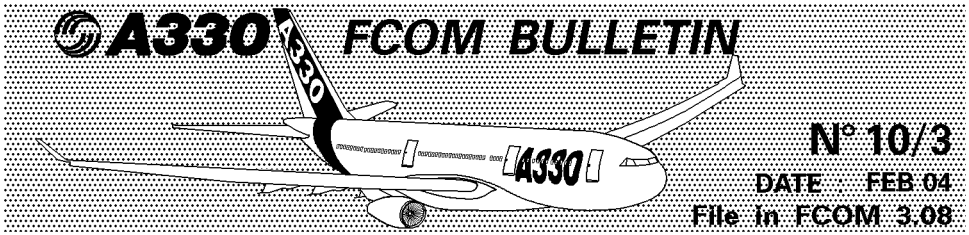

R This FCOM BULLETIN supersedes bulletin N° 10/2 dated JUL 01.

R SUBJECT : USE OF MANAGED GUIDANCE IN APPROACH AND NAV DATABASE VALIDATION

1. BACKGROUND

R The purpose of this FCOM Bulletin is to highlight SOP recommendations on the use of
R managed guidance in approach.

The current body of published Instrument Approach Procedures, (IAP) includes "old style" procedures, in overlay to radio navaid-based procedures, which cannot always be coded in the navigation database, in a suitable manner for satisfactory FMGS guidance in approach.

Note : RNAV procedures are usually designed and coded for optimum FMGS guidance in FINAL APP mode.

Validation of the navigation database should ensure that the IAP is of an eligible type, and is correctly coded, so that the aircraft in FINAL APP mode will fly a constant flight path angle from the FAF to the runway with the required obstacle margins.

Different methods or processes can be used to validate the IAP that is coded in the navigation
R database.

R One method is to fly each approach in a simulator (or equivalent device), or with the aircraft
R when weather conditions are good. An IAP that is regularly and correctly flown in FINAL APP mode can be considered as validated.
R
R Another method is to use a dedicated software to read the navigation database diskette. The
R listing or display of the coded IAP is then assessed by comparing it with the approach chart.
R The airline should keep an up-to-date record of the IAPs that are approved for the use of
R FINAL APP mode.

R All RNAV (GPS) IAP should be validated, even if they are not flown in FINAL APP mode, but
R in NAV/FPA for example, since no navaid raw data is available for monitoring.

2. IAP AND CODING REQUIREMENTS

R A number of FMGC coding guidance requirements have been identified, and must be
R considered, when performing navigation database validation for the use of managed guidance
R in approach. As an example, the following drawings show the coding of an IAP (with the MAP before the runway), and the associated MCDU display.

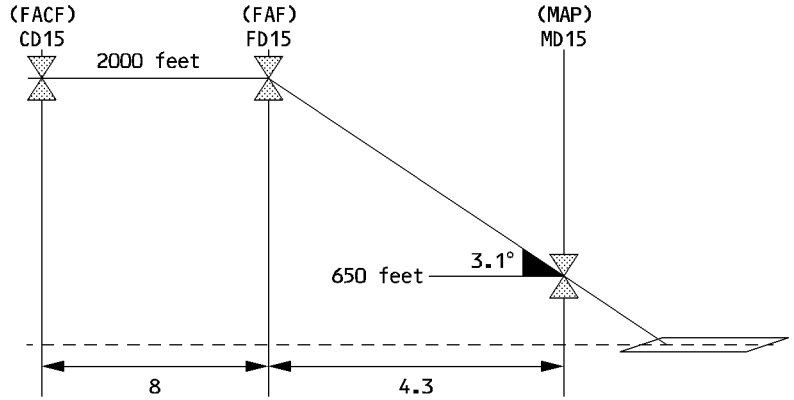

FACF = Final Approach Course Fix FAF = Final Approach Fix
MAP = Missed Approach Point

= Waypoints with associated altitude constraints

GFC5-BULL-010-A001AA

	UTC	SPD / ALT
-----	----	---- ----
C144°		
CD15L	----	---- * 2000
C144°	TRK144°	8
MD15L	----	---- * 2000
C144°		4 -3.1°
MD15L	----	---- 650

The final approach consists of a sequence of at least two waypoints. However, it more often consists of 3, or 4, waypoints.
In the above example, the 3 waypoints are the FACF, the FAF, and the MAP. Sometimes, the MAP is located at, or after, the runway threshold. We will see that it is important for the crew to identify the MAP position. Sometimes, a Step Down Fix (SDF) is added on the approach final descent, between the FAF and the MAP.
The SDF is not necessarily identical to the waypoints published on the approach chart. The identification of the waypoints shown on the MCDU often differs from the identification shown on the approach chart.

R **The lateral F-PLN coding requirements**

The FACF and the FAF must be aligned with the approach course.
If the FACF and the FAF are collocated, the course change at the FAF should be small. A sharp turn would prevent the aircraft from overflying the FAF, and the final descent would start
R before the FAF, without the aircraft being established on the final approach course.

Approach procedures, including a PI-CF leg (PROC T displayed between 2 approach waypoints of the MCDU F-PLN page), are not permitted with AP or FD managed guidance.
R These approaches must be flown in selected guidance, using published approach chart and
R navaid raw data.

R **The vertical F-PLN coding requirements**

R An altitude constraint must be coded at each approach waypoint.
R Any waypoint of the approach should not be common to a STAR or a VIA waypoint with
R different altitude constraints. Combining altitude constraints may lead to erroneous vertical
R flight path guidance.
An AT or ABOVE constraint can be used for an SDF.
When the **MAP is located at, or before, the runway threshold, an FPA (≠0°) must be**
R **coded at the MAP, or at the runway threshold (RW). This FPA will appear on the MCDU,**
R **between the MAP and the FAF, or any previous SDF in the final approach.**
Note : The MAP of RNAV approaches must be located at the runway threshold.

When the **MAP is located after the runway threshold, an FPA=0° must be coded at the MAP.**
R For these "old style IAP", with the MAP after the runway threshold, and depending on the
R position of the approach axis relative to the runway, FMGC guidance may start the final
R approach descent slightly before the FAF. In most cases, the crossing altitude difference at
R the FAF is not significant (less than 50 feet). But sometimes, this difference may be higher.
R Therefore, as it is not acceptable for the use of FINAL APP mode, we recommend validating
R the IAP with a MAP after the runway threshold, either in a simulator (or equivalent device),
R or with the aircraft when weather conditions are good.
An FPA (≠0°) must be coded for each SDF that is on the final approach descent.
R **The MAP of an RNAV IAP must be located at the runway threshold.**
R *Note : The MAP of a GPS IAP can be located before the runway threshold.*

3. FLIGHT CREW PROCEDURES

R The SOP (FCOM 3.03.19) for Non Precision and RNAV approaches are applicable. The following recommendations are provided to highlight specific vertical navigation aspects, when the FINAL APP mode is used.
As applicable, the crew should first check that the Airline has approved the approach for
R FINAL APP mode use.

3.1 Approach F-PLN verification

Before starting the approach, the crew must check the FMS F-PLN (on the MCDU, and on the ND in PLAN mode with the CSTR displayed), starting from the beginning of the STAR down to the runway and the missed approach procedure, and verify the profile against the published IAP chart.

For the final approach procedure, the crew should check the :

- Approach course
- Waypoints and associated altitude constraints
- Distance from the FAF to RW, or FAF to MAP
- Approach angle (shown on the MCDU line above the related waypoints) :
  - **If MAP after runway threshold : FPA=0° at MAP**
  - **If MAP before or at runway threshold : FPA≠0° at MAP**
  - **For each Step Down Fix, an FPA≠0° must be defined**
- IAP does not include a PI-CF (PROC T displayed on the MCDU).

R - **IAP does not include a PI-CF leg (PROC T displayed on the MCDU)**

R - **MAP of an RNAV IAP must be located at the runway threshold.**

R *Note : The MAP of a GPS IAP can be located before the runway threshold.*

- Altitude at the MAP, or at the runway threshold
  - If the crossing altitude at MAP is not shown on the approach chart, crosscheck consistency with the distance to the runway and the approach angle

3.2 Limitations to approach F-PLN modifications

When performing an IAP, using NAV and FINAL APP modes, the active F-PLN, extracted from the navigation database, can be modified, provided the following limitations are observed :

1. F-PLN modifications :

   - No lateral modification of the F-PLN from FACF (inclusive) to RW or to MAP.
     A modification is permitted before FACF, provided the resulting change in flight path course will not be so large that it prevents the aircraft from being laterally-stabilized on the final approach course before reaching the FAF.
   - No altitude constraint modification from FACF to MAP. Even in case of a very low OAT, no altitude correction can be entered in this way. This may require that a minimum OAT be defined, so that the vertical flight path will clear obstacles with the required margin. This minimum OAT should be given to the crew, when appropriate. In the future, for RNAV approaches, the minimum OAT will be published on the approach chart itself.
   - When the FAF is the TO waypoint, the FROM waypoint must not be cleared in an attempt to perform a DIR TO/INTERCEPT.
   - To benefit from managed speed, and have a correct location of the DECEL point, it is recommended to enter Vapp as a SPD CSTR at FAF.

2. DIR TO...

- DIR TO FACF is permitted, provided the resulting change in flight path course at FACF is not so large that it prevents the aircraft from being laterally-stabilized on the final approach course before reaching the FAF.
- DIR TO FAF is permitted, provided the resulting change in flight path course at FAF is small.
- DIR TO/INTERCEPT TO FAF is permitted, provided the RADIAL IN corresponding to the final approach course (approach course + 180°) is selected, and that the interception angle is not so large that it prevents the aircraft from being laterally-stabilized on the final approach course at the FAF.

3. Lateral F-PLN interception in HDG/TRK :

- F-PLN must be intercepted before FACF, and the interception angle should not be so large that it prevents the aircraft from being laterally-stabilized on the final approach course before reaching the FAF, or
- Before the FAF, at the latest, provided the interception angle is small.

CAUTION

– Before arming NAV, check that the correct "TO" waypoint is displayed on the ND.
– The intercept path in HDG/TRK must not cause premature sequencing of the FAF. The FAF should be sequenced in NAV mode, when established on the final approach course.

4. Vertical F-PLN interception :

- The crew should manage the descent, so that the vertical F-PLN is intercepted before the FAF, at the latest.

3.3 Approach monitoring

Except for RNAV IAP, approach navaids should be tuned and the associated raw data should be displayed and actively-monitored. This active monitoring should include vertical navigation, using altimeter readings versus DME distances or the equivalent.
For RNAV IAP, vertical navigation can be monitored by using the distance to the RW, or to the MAP displayed on ND and the altimeter reading.
After passing the FAF, when stabilized on the final descent, the crew should check that the X-TRK and V-DEV are correct, and that the FPV is consistent with the approach angle.

When APPR is selected on the FCU, the crew must verify the :

- Correct FMA display (APP NAV green, FINAL blue)
- Correct TO waypoint on the ND
- Blue descent arrow at FAF and the correct F-PLN
- Correct Vertical Flight Path deviation indication

When passing the FAF, the crew must verify :

- Correct altitude indication
- Correct FMA display (FINAL APP green)
- Correct TO waypoint on the ND
- Correct blue track on the ND, armed for Missed Approach
- That the aircraft starts the descent, and follows the correct lateral and vertical flight path.

If HIGH ACCUR is lost during the approach, but active radio navaid monitoring confirms correct navigation, the approach can be continued in FINAL APP mode. Otherwise, the crew should revert to TRK/FPA mode to fly the aircraft with navaids raw data.

The IAP must be discontinued, when one of the following warnings occurs :

- GPS PRIMARY LOST, if GPS accuracy is required.
- NAV ACCUR DOWNGRAD, during an RNAV approach.
- FM/GPS POS DISAGREE, if GPS is installed and is not deselected, and if no navaid raw data is available to revert to selected modes.
- FM1/FM2 POS DIFF, unless navaid raw data is available to revert to selected modes.

3.4 Crew Reporting

The crew must be report any lateral or vertical NAV guidance anomaly to their Flight Operations. The report must be fully-documented to enable further investigation and corrective actions. It should, therefore, include the following information :

- Approach designation and airport
- Aircraft type, MSN, GW, wind/temperature
- Navigation database cycle
- Pilot selections, FMA, ND, MCDU displays
- Description of anomaly, flight path
- DFDR/QAR reading

A330 FCOM BULLETIN

N° 11
DATE OCT 00
file in FCOM 3.08

IDLE FACTOR

1. REASON FOR ISSUE

The purpose of this FCOM bulletin is to provide airlines with a detailed description of the IDLE factor. This will assist them in optimizing the use of this parameter.

2. DEFINITION

The IDLE factor is used to adjust the idle thrust level (used to compute the descent path) and guide the aircraft along the descent path. It is inserted as a percentage of the basic idle thrust.

The IDLE factor is displayed in the IDLE/PERF factor field on the A/C STATUS MCDU page. Its range is from – 9.9 to + 9.9.
The value is displayed in cyan or green (see paragraph 5) :

– In small font, when it comes from the airline policy file of the navigation database ; it is displayed as the default value.
– In large font, when the pilot has entered it.

Whenever an IDLE factor is entered, this value is used for all descent computations until it is overwritten or cleared by the pilot.
When cleared, it returns to the IDLE factor value of the navigation database.

3. IMPACT OF THE IDLE FACTOR ON THE DESCENT PATH

The FMGS computes a descent profile on which the aircraft is guided when DES (managed descent mode) is active. This profile computation considers :

- Lateral and vertical flight planning (altitude, speed and time constraints),
- The aircraft descent speed profile (speed limit and constraint, ECON speed or selected auto speed),
- The inserted weather data

Basically the descent profile is divided into 2 sets of segments (3 sets when a repressurization segment is necessary) :

– An idle segment
– A geometric segment.

In most cases, the idle segment runs from the Top Of Descent (TOD) down to the first constrained waypoint.

The idle segment is computed assuming that the aircraft will fly at a given speed (as on PERF DES MCDU page), with a given thrust : IDLE + DELTA.

This slight additional thrust value DELTA is internal to the computer. It has been defined to give some flight guidance flexibility and maintain the aircraft on the descent path, should outside weather conditions (such as wind...) vary or should engine anti-ice be selected.

The IDLE factor is used to adjust the value of the DELTA, in order to cope with the airline policy or with the ATC requirement regarding the steepness of the descent profile.

* If the IDLE factor is positive, the idle segment part of the descent profile will be shallower than with IDLE factor 0 ; thus the TOD will be earlier.
* If the IDLE factor is negative, the idle segment part of the descent profile will be steeper than with IDLE factor 0 ; thus the TOD will be later.

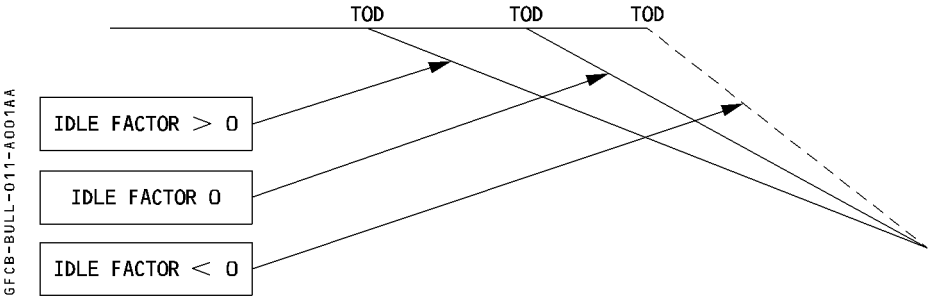

4. GUIDANCE DURING MANAGED DESCENT

Once all required data are inserted in (and for a given IDLE factor), the descent profile is computed. It always includes an idle segment.
Once the descent is initiated along the F-PLN (NAV/DES modes are engaged), and suppose the aircraft is on the path, on the idle segment, the ATHR will command (Idle + DELTA) and THR DES is displayed on FMA

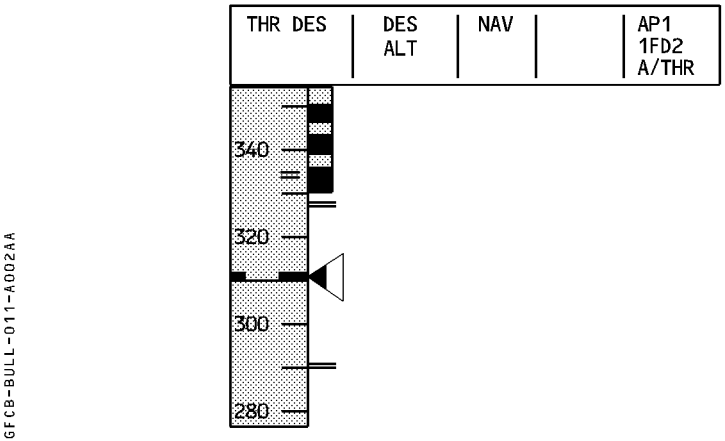

If for any reason the aircraft tends to deviate above the path, the IAS will increase with regards to the target within the speed target range so as to keep VDEV=0.

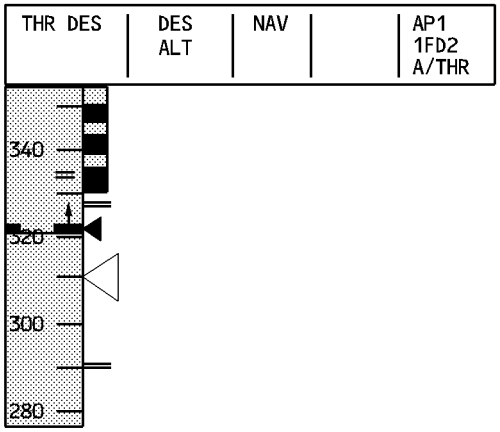

GFCB-BULL-011-A003AA

If the aircraft still tends to deviate above the path and the IAS gets close from the upper limit of the speed target range, the ATHR commands idle thrust so as to keep VDEV=0. THR IDLE is then displayed on the FMA.

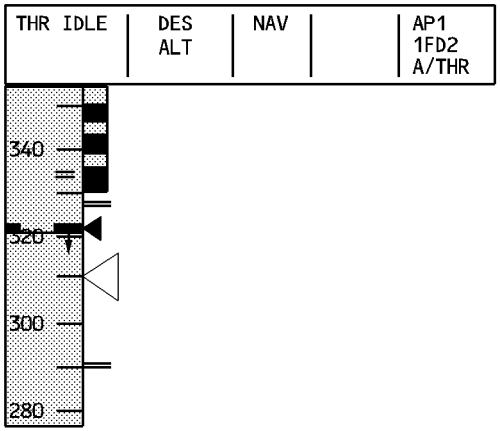

GFCB-BULL-011-A004AA

Consequently, when in managed descent and on idle segment, the flight guidance has 2 parameters to adjust in order to keep the aircraft on path : the IAS, which may vary within the speed target range and, the thrust which may vary between Idle and Idle + DELTA, while the ATHR is in thrust mode.
This gives a great guidance flexibility.
The higher the DELTA, the better the guidance capability, but the earlier the TOD, the longer the descent path.

Note : When a DIRTO is exercized, the FMGC recomputes a descent profile ; an idle segment is computed from the turning point to the TO waypoint.

Effect of IDLE factor on descent length :

A330/GE

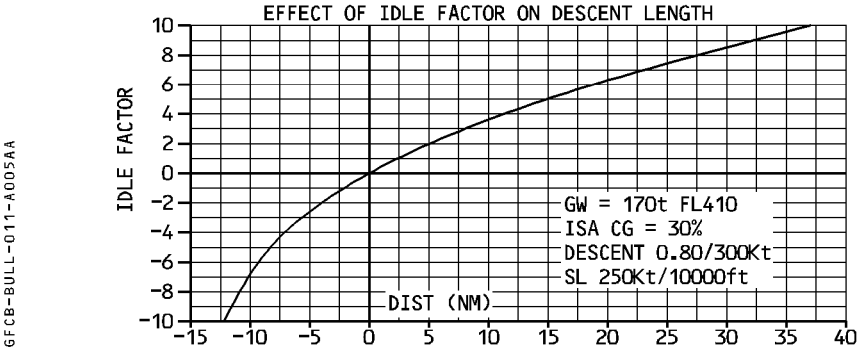

IDLE factor +4 increases the computed descent by 12NM.

A330/PW

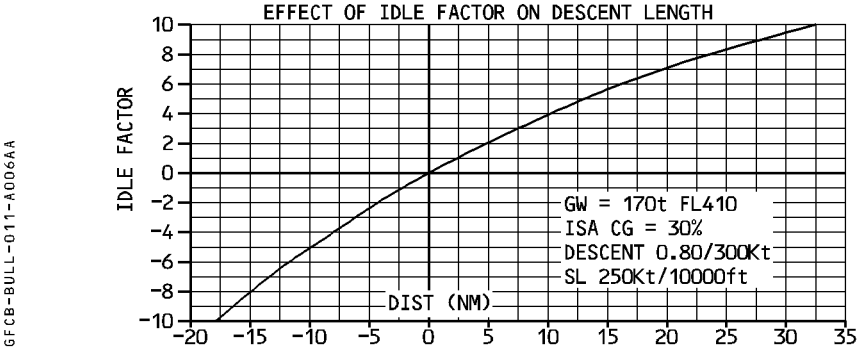

IDLE factor +4 increases the computed descent by 10NM.

A330/RR

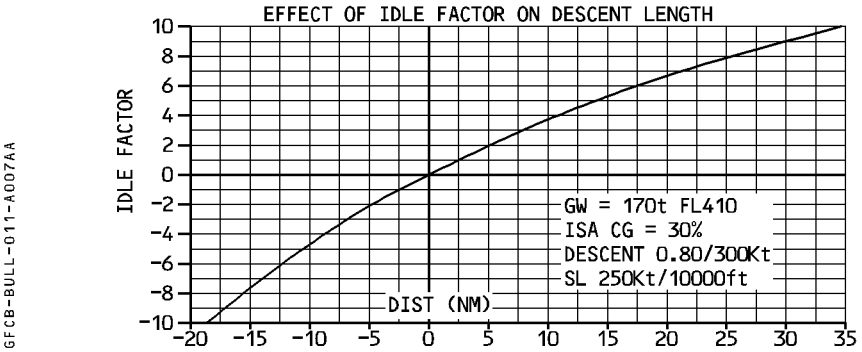

IDLE factor +4 increases the computed descent by 11NM.

5. IDLE FACTOR INSERTION

It can be done only on the ground by dedicated people according to airline policy.
It must not be changed by an individual crew at flight initiation.

Procedure :

On the A/C STATUS page :

Enter the performance adjustment code on the CHG CODE line (IDLE factor is displayed in cyan)
Write the new IDLE factor (the font goes from cyan to large green).

Note : The default performance adjustment code is ARM, until it is changed in the navigation database, upon airline request.

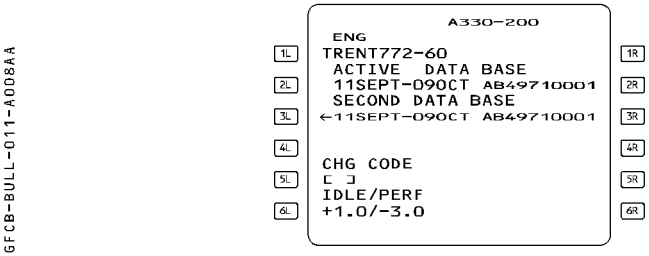

GFCB-BULL-011-A008AA

A330 FCOM BULLETIN

N° 12/3

DATE : FEB 04

File in FCOM 3.08

SUBJECT : AIRCRAFT HANDLING IN FINAL APPROACH

General

The purpose of this FCOM Bulletin is to highlight certain aspects of aircraft handling during final approach, and to illustrate that the feedback received from in-service experience merits further attention.

Although approach in turbulence is part of this discussion, windshear in approach is not addressed here. For more details on the subjects of "Windshear in Approach" and "Operations in Windshear or Downburst Conditions", refer to the FCOM 3.04.91.

Approach Stabilization Criteria

The prerequisite for a successful final approach and landing is to stabilize the aircraft on the
R final approach trajectory in pitch, thrust, airspeed, and bank angle.

This signifies that the :

- Aircraft is established on the :

R – Final approach trajectory, and only minor heading corrections are necessary (except for
R indirect or curve approaches) to correct the effect of external conditions, acting on the roll axis ;

– Final approach vertical flight path, and only minor pitch corrections are necessary to correct the effect of external conditions ;

R • The target speed is maintained on the desired descent path, with the appropriate thrust
R (not stabilized at idle).

R Airbus policy requires that stabilized conditions be reached at 1,000 feet Height Above
R Threshold in IMC, and 500 feet in VMC, and that they be kept down to the flare height.

In turbulent conditions, there may be heading, pitch, and thrust corrections of such a magnitude that it could be difficult to determine when to consider the approach stabilization criteria as being lost. Thrust corrections, in particular with the A/THR ON, could lead engines
R to temporarily reduce thrust to idle, which may not be desirable close to the ground, if the
R aircraft level of energy is low.

The PNF callout for excessive deviation is certainly an indication for the PF to decide/determine if the approach becomes destabilized. However, the answer to this question is generally a matter of pilot judgement. The pilot must assess whether or not it is possible to return to nominal conditions early enough : That is, at the latest before flare initiation. If the pilot judges that it will not be possible to start the flare at the correct height with the correct attitude, sink rate, and thrust, or if the pilot starts to feel "out of the loop", then it is time to perform a go-around.

PNF Callout

In approach, the PNF is expected to monitor the PFD and to make a callout, when some parameters are exceeded.

The Airbus Standard Operating Procedures (FCOM 3.03.18 and 3.03.19) state that a callout should be made, if :

- Speed becomes lower than the speed target – 5 knots, or greater than the speed target + 10 knots.
- Pitch attitude becomes lower than 0 degrees, or greater than 10 degrees nose up.
- Bank angle becomes greater than 7 degrees.
- Descent rate becomes greater than 1000 feet/minute.
- Excessive LOC or GLIDE deviation occurs (3.03.18 only).

The suitable PF response would be to immediately take appropriate actions to control the exceeded parameter and evaluate whether stabilized conditions will be recovered early enough. Otherwise, a go-around must be initiated. The PF should acknowledge the PNF callout so that crew coordination remains effective.

Aircraft Handling on the Longitudinal Axis

The pilot's objective, with respect to the longitudinal axis, is to control the airspeed and vertical flight path. For thrust and speed control, it is recommended to use FMGS managed speed, in order to benefit from the minimum GS function.

R The A/THR is, in particular, best suited to tracking a moving target speed, when flying in
R managed speed mode. Statistically, the A/THR provides the best protection against airspeed
R excursions and its use is, therefore, recommended even in turbulent conditions, unless thrust
R variations become excessive.

R A/THR response to airspeed variations is the result of a design compromise between
R performance and comfort, and it is optimized when the AP is engaged. Therefore, in turbulent
R conditions and when flying manually, the pilot may sometimes find it to be too slow or
R lagging. If conditions are such that a large speed decrease with engines at idle is anticipated,
R the pilot may, above 100 feet RA, move the thrust levers slightly above the CL detent to
R reduce the A/THR response time. This will temporarily deactivate and arm the A/THR. As
R soon as positive acceleration is achieved, and before the thrust becomes too high, the pilot
R should move the thrust levers back to the CL detent to resume A/THR operations.

R *Note : 1. Above 100 feet, this possibility should be used in exceptional circumstances, and*
R *should not become a routine flying technique.*
R *2. Below 100 feet, moving the thrust levers above the CL detent, will result in A/THR*
R *disconnection (Refer to the FCOM, 1.22.30, Page 59).*
R *3. In an OEI situation, moving the thrust lever(s) above the MCT detent(s) should be*
R *done carefully, so as not to trigger the GA mode.*

R If conditions are such that a large speed decrease with engines at idle is anticipated, then
R the PF may take over thrust manually to recover the speed target and continue the approach
R in manual thrust.

R It is not recommended to use the speedbrakes in the final approach. In final approach, the
R drag with the Landing Gear down is normally sufficient to cope with all kinds of situations,
R including a tailwind landing.

The pilot's objective, with respect to vertical navigation, is to maintain a constant flight path angle down to the runway threshold, using the vertical deviation indication of an ILS, the FMGS VDEV indication, the indication of an external lighting system, or visual cues. However,
R when approaching flare height, the pilot's primary objective will progressively shift from
R vertical flight path control to safe pitch attitude and vertical speed, to start the flare in good
R conditions. The PF will primarily control the attitude and the vertical speed to perform a safe
R flare.

R If the vertical speed is too high, prior to starting the flare, the vertical deceleration that can
R be achieved during flare may be insufficient to avoid a hard landing. The aircraft may touch
R down with an excessive residual vertical speed and pitch rate, which may lead to bouncing
R and exposure to tailstrike.

The pilot should also consider that the flare height might vary slightly from one aircraft type to another, depending on aircraft inertia. In the event of turbulence and wind gradient, pitch monitoring is of primary importance when close to the ground. The pilot should react promptly to any uncommanded pitch down tendency, to avoid ducking under, with a risk of premature touchdown.

If vertical speed and pitch attitude become the primary objectives, the touchdown point might occur slightly further ahead on the runway, thereby reducing the available stopping distance. In the large majority of landings, and based on the pilot's judgement, this effect should be acceptable. However, in case of doubt, it is always best to perform a go-around.

Aircraft Handling on the Lateral Axis

Generally speaking, lateral handling of fly-by-wire aircraft is conventional. But, in very gusty conditions, it is necessary to recall the principle of the flight control law in roll. With the sidestick, the pilot can order a roll rate up to a maximum of 15 degrees/second. However, the aerodynamic capacity of the roll surfaces, when fully deflected, is much higher : That is, up to about 40 degrees/second. This means that, if the aircraft is flying through turbulence that produces a roll rate of 25 degrees/second to the right, the aircraft still has the capacity to roll to the left at a rate of 15 degrees/second, with full sidestick command. This is more than what is necessary in the worst conditions.

The sidestick's ergonomical design is such that the stop at full deflection is easily reached. This may give the pilot the impression that the aircraft is limited in roll authority, because there is a time delay before the pilot feels the result of his/her action. On conventional aircraft, due to the control wheel inertia, the pilot needs considerably more time to reach the flight control stop.

R The flight control system of Airbus fly-by-wire aircraft partially counteracts roll movements
R induced by the effect of gust, even with the sidestick in the neutral position. The PF must
R ensure that the overall corrective orders maintain the desired aircraft lateral axis. He/she will
R minimize lateral inputs and will resist applying sidestick order from one stop to the other.

Every sidestick input is a roll rate demand, superimposed on the roll corrections already initiated by the fly-by-wire system. The pilot should only apply "longer-term" corrections as needed.

Before flare height, heading corrections should only be made with roll. As small bank angles are possible and acceptable close to the ground, only small heading changes can be envisaged. Otherwise, a go-around should be initiated.

Use of rudder, combined with roll inputs, should be avoided, since this may significantly increase the pilot's lateral handling tasks. Rudder use should be limited to the "de-crab" maneuver in case of crosswind, while maintaining the wings level, with the sidestick in the roll axis. (Refer to the FCOM's SOP, for Crosswind Landing Techniques).

Summary

In summary, the following are the main points addressed by this Bulletin :

- Strictly observe the approach stabilization criteria to decide whether to land, or to perform a go-around.
- Promptly react to any pitch down at low height, to avoid ducking under.
- Reach the flare height with the correct pitch attitude and sink rate.
- R R In turbulent conditions, it is recommended to use the A/THR, unless the PF is not satisfied by the A/THR response.
- Refrain from excessive sidestick roll activity. Order "longer-term" roll corrections.
- Restrict rudder use to "de-crabbing" in crosswind.

A330 FCOM BULLETIN

N° 13
DATE JUN 02
file in FCOM 3.08

SUBJECT : USE OF RUDDER ON TRANSPORT CATEGORY AIRPLANES

REASON FOR ISSUE

On February 8th, 2002, the National Transportation Safety Board (NTSB), in cooperation with the French "Bureau Enquetes Accidents (BEA)", issued recommendations that aircraft manufacturers re-emphasize the structural certification requirements for the rudder and vertical stabilizer, showing how some maneuvers can result in exceeding design limits and even lead to structural failure.

The purpose of this FCOM Bulletin is to re-emphasize proper operational use of the rudder, highlighting certification requirements and rudder control design characteristics.

YAW CONTROL

General

In flight, yaw control is provided by the rudder, and directional stability is provided by the vertical stabilizer.

The rudder and vertical stabilizer are sized to meet the two following objectives :

- Provide sufficient lateral control of the aircraft during crosswind takeoffs and landings, within the published crosswind limits (refer to FCOM's Operating Limitations chapter 3.01.20) ;
- Provide positive aircraft control under conditions of engine failure and maximum asymmetric thrust, at any speed above Vmcg (minimum control speed on ground).

The vertical stabilizer and the rudder must be capable of generating sufficient yawing moments to maintain directional control of the aircraft.

The rudder deflection, necessary to achieve these yawing moments, and the resulting sideslip angles can place significant aerodynamic loads on the rudder and on the vertical stabilizer.

Both vertical stabilizer and rudder are designed to sustain loads as prescribed in the JAR / FAR 25 certification requirements which define several lateral loading conditions (maneuver, gust loads and asymmetrical loads due to engine failure) leading to a required level of structural strength.

Certification requirements

For certification in accordance with JAR / FAR 25.351, loads on the stabilizer and the rudder are defined, considering yawing maneuvers as shown below, for a range of speeds from VMC (minimum control speed) to VD/MD (maximum design speed), from sea level up to maximum altitude, and over the full range of aircraft weights and Center of Gravity limits :

1 - With the aircraft in unaccelerated and stabilized straight flight, the rudder pedal is suddenly displaced to the maximum available deflection at the current aircraft speed.

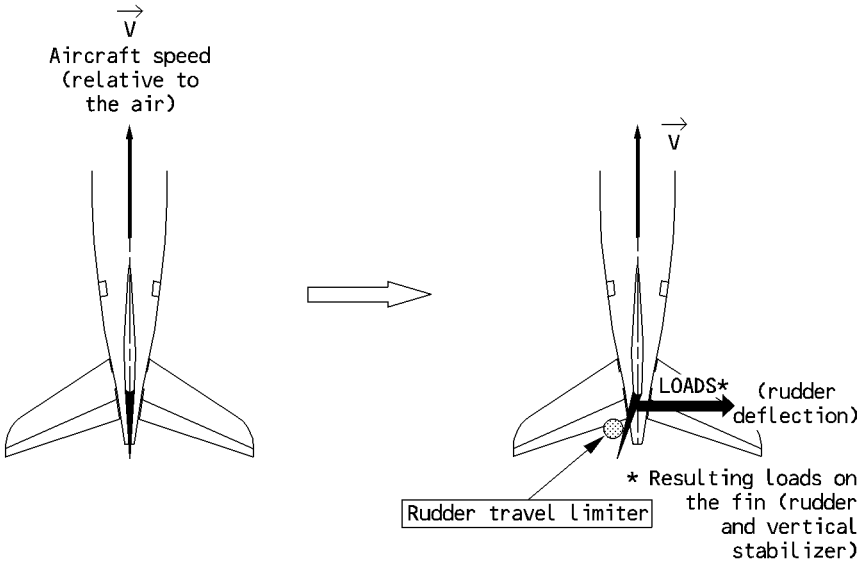

GFCB-BULL-013-A001AA

2 - With the rudder deflected as shown above, the aircraft yaws to the resulting overswing sideslip angle, and then stabilizes at a somewhat smaller steady-state slideslip angle.

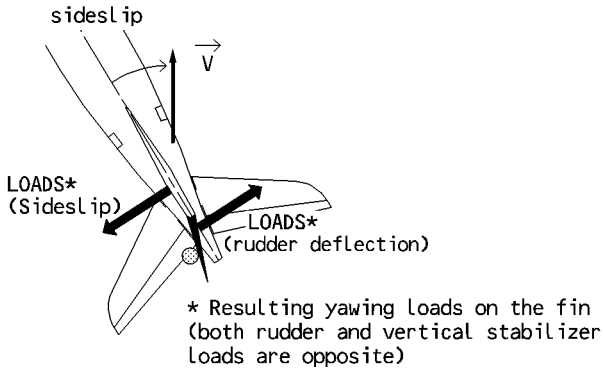

GFCB-BULL-013-002AA

3 - With the airplane yawed to the steady-state (static) sideslip angle corresponding to the above rudder deflection, the certification regulations assume that the rudder pedal is released to neutral.

Note : Since the aircraft has natural yaw stability, returning the rudder pedal to neutral will also result in returning the sideslip angle to neutral

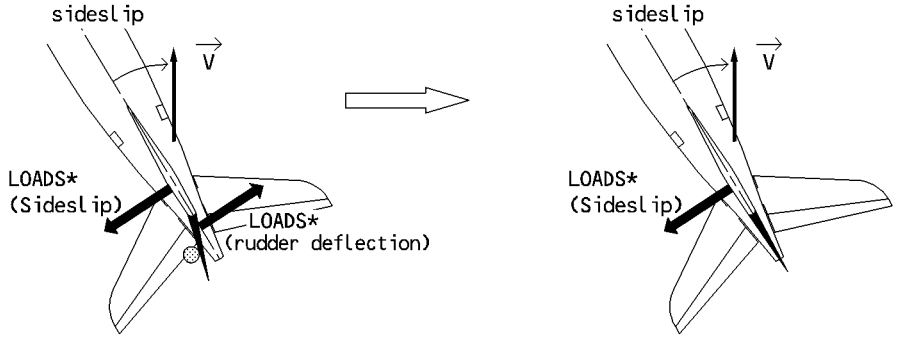

GFCB-BULL-013-003AA

* Resulting loads on the fin (both rudder and vertical stabilizer loads are opposite)

* Resulting loads on the fin

Certification yawing maneuver design

JAR/FAR 25 requires the above yawing maneuver to be analyzed over the full range of specified conditions. The most severe loads imposed on the vertical stabilizer and rudder are identified.

The same analysis is performed for lateral gusts, rolling maneuvers and asymmetrical engine failure conditions. The most severe of all these cases and associated loads provides the design basis for the vertical stabilizer and rudder.

The above loads define the limit loads according to JAR / FAR 25 requirements. These loads correspond to the maximum loads that may be expected in service.

According to JAR / FAR 25 requirements, the ultimate loads are defined as the limit loads multiplied by a prescribed safety factor of 1.5 unless otherwise specified.

The aircraft structure must be able to sustain limit loads without detrimental permanent deformation and ultimate loads without failure for at least 3 seconds.

Higher loads could lead to structural failure.

CAUTION

Sudden commanded full, or nearly full, opposite rudder movement against a sideslip can generate loads that exceed the limit loads and possibly the ultimate loads and can result in structural failure.

This is true even at speeds below the maximum design maneuvering speed, VA.

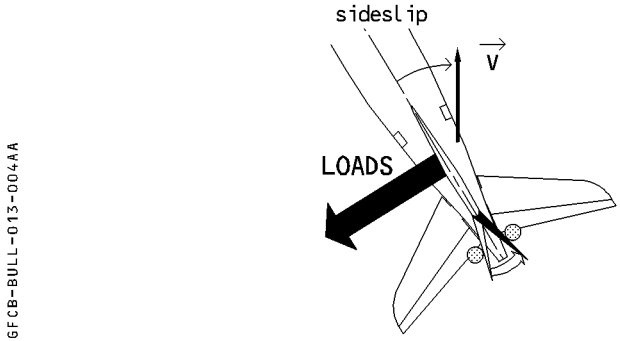

Certification regulations do not consider the loads imposed on the structure when there is a sudden full, or nearly full, rudder movement that is opposite to the sideslip.

Rudder control

The rudder surface is controlled by 3 actuators, commanded by a cable run from the rudder pedals, to which lateral law inputs (including yaw damping and turn coordination functions) are added by the flight control computer (normally PRIM 1).

The rudder travel limiter, controlled by the SECs, is designed to progressively reduce the available total rudder travel depending on aircraft speed.
This provides sufficient yaw control within the entire flight envelope, including engine failure and maximum asymmetric thrust, limiting the lateral loads on the stabilizer and rudder so that they remain within the certification limits.

Rudder travel is limited as a function of the aircraft speed, as shown below :

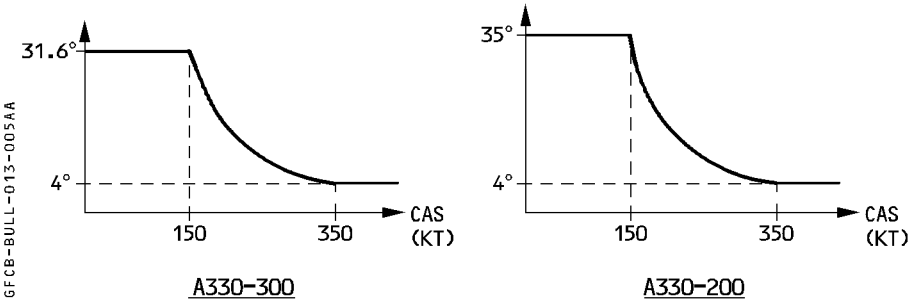

- At low speeds, the rudder deflection required to maneuver the aircraft in yaw is large, and so are the resulting pedal displacement and forces ;
- At high speeds, the rudder authority is limited but the gearing between the pedals and the rudder does not change. Therefore, less force will be required to achieve maximum available rudder deflection.

As speed increases, the rudder deflection required by any yaw maneuver (eg, engine failure and maximum asymmetric thrust) decreases, and consequently, so do rudder pedal displacement and associated forces.
Rudder pedal displacement is almost linearly proportional to rudder deflection.

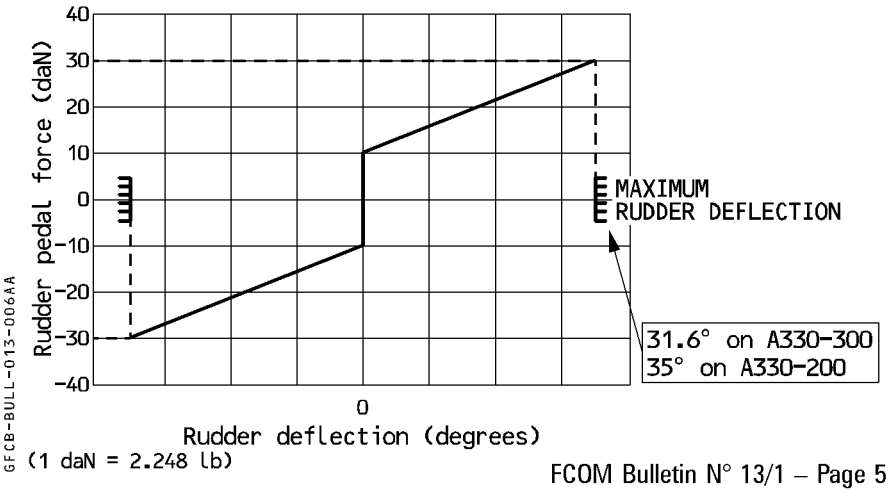

Thus, to explain the two preceding graphs :

The rudder pedal displacement and the resulting pedal forces required to achieve a given rudder deflection are independent from aircraft speed.

- To start moving the rudder pedals from the neutral position, a minimum force of +/-10 daN must be applied ("breakout force").
- At low speeds, i.e. up to 150 kt, maximum available rudder deflection (31.6 or 35 degrees) is obtained by moving the rudder pedals to their maximum travel which represents a 30 daN force applied on the pedals.
- At higher speeds, for example at 350 kt, the maximum available rudder deflection is reduced to approximately 4 degrees. It is consequently obtained with less rudder pedal displacement which represents approximately a 12 daN force applied on the pedals (40 % of the maximum force to reach full pedal travel).

Operational recommendations

In order to avoid exceeding structural loads on the rudder and vertical stabilizer, the following recommendations must be observed.

1. THE RUDDER IS DESIGNED TO CONTROL THE AIRCRAFT, IN THE FOLLOWING CIRCUMSTANCES :

1.1 In normal operations, for lateral control :

– During the takeoff roll, when on ground, especially in crosswind conditions ;
– During landing flare with crosswind, for decrab purposes.
– During the landing roll, when on ground.

In these circumstances, large and even rapid rudder inputs may be necessary to maintain control of the aircraft.
Rudder corrections should always be applied as necessary to obtain the appropriate aircraft response.

On Airbus aircraft, the rudder control system includes a turn coordination function to achieve acceptable turn coordination.

1.2 To counteract thrust asymmetry :

Full rudder authority can be used to compensate for the yawing moment of asymmetric thrust.

Note : At high speed (i.e. slats retracted), thrust asymmetry (eg. due to an engine failure) has relatively small effect on yaw control of the aircraft.
The amount of rudder required to counter an engine failure and center the sideslip is small.

1.3 In some other abnormal situations :

The rudder may also be used in such abnormal situations as :

– Loss of both yaw damper systems. The rudder may be used as deemed necessary, for turn coordination to prevent excessive sideslip.

– Rudder trim runaway. The rudder may be used to return the rudder to neutral.

– Landing with abnormal landing gear position. The rudder can be used for directional control on ground.

In all of the above mentioned normal or abnormal circumstances, proper rudder maneuvers will not affect the aircraft's structural integrity.

Note : In the event of a rudder travel limit system failure, refer to the relevant RUDDER TRAVEL LIMIT FAULT procedure.

2. THE RUDDER SHOULD NOT BE USED :

– To induce roll, or
– To counter roll, induced by any type of turbulence.

Whatever the airborne flight condition may be, aggressive, full or nearly full, opposite rudder pedal inputs must not be applied. Such inputs can lead to loads higher than the limit, and can result in structural damage or failure.

The rudder travel limiter system is not designed to prevent structural damage or failure in the event of such rudder system inputs.

Note : Rudder pedal reversals must never be incorporated into airline policy, including so-called "aircraft defensive maneuvers" to disable or incapacitate hijackers.

As far as dutch roll is concerned, yaw damper action and natural aircraft damping are sufficient to adequately dampen dutch roll oscillations. The rudder should not be used to complement the yaw damper.

Note : Even if both yaw damper systems are lost, the rudder should not be used to dampen the dutch roll. Refer to the YAW DAMPER FAULT procedure.

3. SPECIAL CASES

Recovery techniques from upset situations

Proper use of the rudder, particularly during maneuvers intended to address upset recovery, are emphasized in the Airbus Training Program, supported by the industry-produced 1998 "UPSET RECOVERY TRAINING AID".