


CHANGE OF RUNWAY

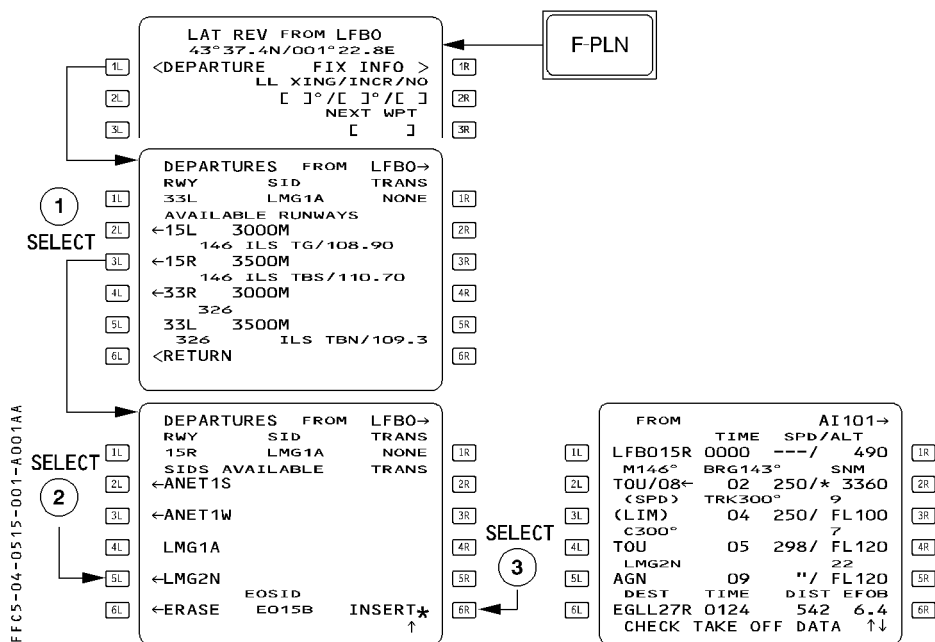

Procedure

- PRESS the F-PLN key on the MCDU.
- SELECT the LAT REV at origin.
- SELECT the DEPARTURE prompt [1L].
- SELECT the new RWY in use.
- SELECT the appropriate SID and TRANS.
- CHECK the resulting temporary F-PLN and INSERT it.

CHECK TAKE OFF DATA comes up in the scratchpad, if the PERF TO page was filled in.

 FLIGHT PHASE RELATED PROCEDURES	4.05.15 P 2	
	BEFORE PUSH BACK OR START	SEQ 100 REV 12

- ENTER the new V1, VR, V2, FLEX TEMP (or derated level) or CONF as appropriate

Note : • *If the previously selected SID is compatible with the new runway, it automatically appears in the temporary flight plan. Any revision the pilot may have made to the previous SID will not be transferred.
If the pilot still wants it, he has to reenter it.*

TAKEOFF FROM INTERSECTION

- Use RTOW or FCOM to revise takeoff parameters
- PRESS the [PERF] key on MCDU
- ENTER the takeoff shift
- ENTER the new V1, VR, V2, FLX TEMP (or derated level), or CONF, as appropriate

Note : *The insertion of the shift in takeoff position permits the system to make an accurate revision to its navigation data at takeoff.*