


	LIGHTS		1.33.40	P 1
	SIGNS		SEQ 001	REV 12

CONTROLS AND INDICATORS

OVERHEAD PANEL

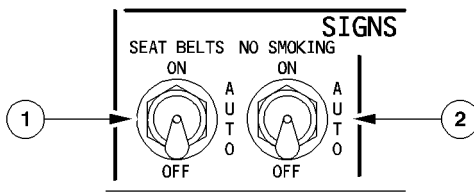

① SEAT BELTS sw

- ON : FASTEN SEAT BELT signs (in cabin) and RETURN TO YOUR SEAT signs (in lavatories) come on associated with low tone chime.
- AUTO : FASTEN SEAT BELT and RETURN TO YOUR SEAT signs come on associated with low tone chime (depending on CIDS/CAM programming) when slats are extended (position 1, 2, 3 or FULL) or when main landing gear is extended.
- OFF : Signs are off. Low tone chime sounds (depending on CIDS/CAM programming).

② NO SMOKING sel


- ON : NO SMOKING and EXIT signs in cabin come on associated with low tone chime.
- AUTO : NO SMOKING and EXIT signs in cabin come on when landing gear is extended and go off when landing gear is retracted. Low tone chime sounds (depending on CIDS/CAM programming) each time the signs go on or off.
- OFF : Signs are off. Low tone chime sounds (depending on CIDS/CAM programming).

Note : In the event of excessive cabin altitude (if cabin altitude equals EXCESS CAB ALT limit + 1750 feet ; max 14350 feet), the cabin lights come on (depending on CIDS/CAM programming) and the NO SMOKING, FASTEN SEAT BELT, EXIT signs come on regardless of SEAT BELTS and NO SMOKING selector switches.

MEMO DISPLAY

SEAT BELTS and NO SMOKING messages are displayed in green when the corresponding sign is on.

OVERHEAD PANEL

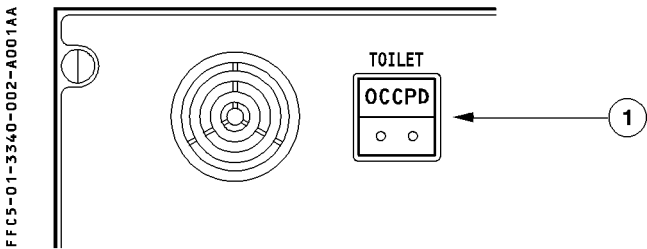

①TOILET OCCPD light

Illuminates when lavatory located near the forward exit is occupied.

CABIN CONTROLS

NOT APPLICABLE