


ECAM DOOR / OXY PAGE

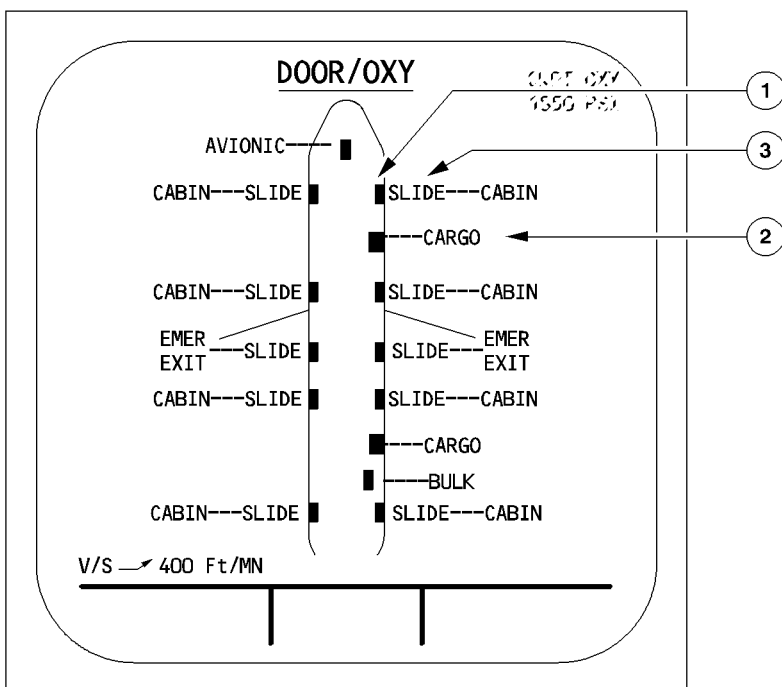

① DOOR symbol

Green (symbol outline) : The door is closed and locked.
 Amber (filled symbol) : The door is not locked.

② DOOR indication


It is amber when the door is not locked.
 It is white when the information is not valid.
 It is suppressed when the door is closed.

③ SLIDE indication

It is white when the slide is armed.
 - - - is in amber when the slide is disarmed and the door is open.
 Both are suppressed when the slide is disarmed and the door is closed.

FFCS-01-5220-001-A100AA

WARNINGS AND CAUTIONS

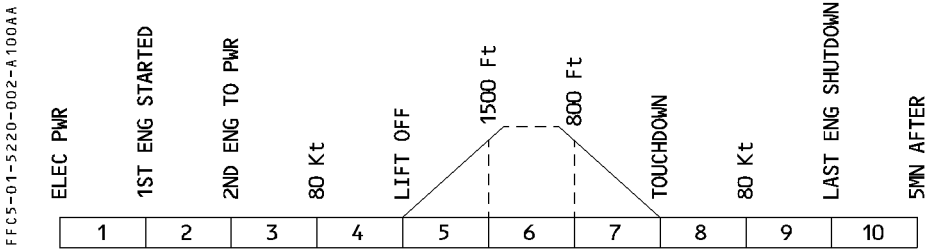

EWD : FAILURE TITLE conditions	AURAL WARNING	MASTER LIGHT	SD PAGE CALLED	LOCAL WARNING	FLT PHASE INHIB
1L(R) CABIN 2L(R) CABIN 3L(R) CABIN 4L(R) CABIN L (R) EMER EXIT FWD (AFT) (BULK) CARGO AVIONIC	SINGLE CHIME	MASTER CAUT	DOOR	NIL	1, 4, 5, 7, 8, 10
POS DET 1 (2) (1+2) PSCU failure					3, 4, 5, 7, 8